

# **ZTE-C S185**

## **cdma 1X Digital Mobile Phone**

### **Quick Start Guide**

ZTE CORPORATION  
NO. 55, Hi-tech Road South, ShenZhen, P.R.China  
Postcode: 518057  
Tel: +86-755-26779999  
URL: <http://www.zte.com.cn>  
E-mail: [mobile@zte.com.cn](mailto:mobile@zte.com.cn)

## **LEGAL INFORMATION**

Copyright © 2011 ZTE CORPORATION.

All rights reserved.

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

 
The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice.

Version No.: 1.0

Edition Time: 03-31-2011

Manual No.: 07958450XXXX

# Phone Overview

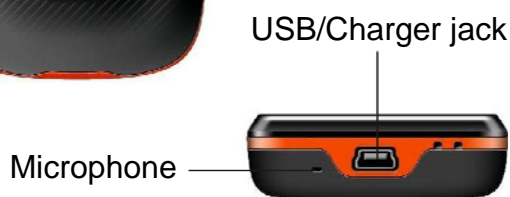


## Key Functions

Key	Function Description
<b>Call key</b>	<ul style="list-style-type: none"> <li>• Make or answer a call.</li> <li>• Press the <b>Call key</b> in the standby mode to enter All Calls list.</li> </ul>
<b>End key</b>	<ul style="list-style-type: none"> <li>• End an active call or reject a call.</li> <li>• Hold to Power on/off the phone.</li> </ul>
<b>Left soft key</b>	<ul style="list-style-type: none"> <li>• Enter the main menu in the standby mode.</li> <li>• Switch to the options at lower left of the LCD.</li> </ul>
<b>Right soft key</b>	<ul style="list-style-type: none"> <li>• Enter the list of all the contacts in the standby mode.</li> <li>• Switch to the options at lower right of the LCD.</li> </ul>
<b>Navigation keys</b>	<ul style="list-style-type: none"> <li>• Move the cursor up, down, left and right.</li> <li>• In the standby mode, Used as hot keys to enter the designated functions.</li> <li>• In the standby mode, hold the <b>Up key</b> to open/close the LED.</li> <li>• In the contacts list, press the <b>Left key</b> or <b>Right key</b> to switch groups.</li> <li>• Press the <b>Left key</b> or <b>Right key</b> to adjust volume in conversation.</li> <li>• Used as direction key in games.</li> </ul>
<b>OK key</b>	<ul style="list-style-type: none"> <li>• Confirm the commands and options selected.</li> <li>• Confirm the character chosen while character inputting.</li> <li>• In the standby mode, press the <b>OK key</b> to browse the <b>T WORLD</b> website.</li> </ul>
<b>Number keys</b>	<ul style="list-style-type: none"> <li>• Key in numbers or characters.</li> <li>• Hold the <b>0 key</b> to input + in the standby mode.</li> <li>• Hold to <b>make</b> a speed dial call (1~9) in the standby mode.(The <b>1-5 key</b> is preset as the service call.)</li> <li>• Press to enter corresponding submenu.</li> </ul>
<b># key</b>	<ul style="list-style-type: none"> <li>• Hold the <b># key</b> in the standby mode to enable/disable vibration.</li> <li>• Press the <b># key</b> to change the text mode while editing text.</li> </ul>
<b>* key</b>	<ul style="list-style-type: none"> <li>• Hold the <b>* key</b> in the standby mode to lock the keypad.</li> <li>• Press the <b>* key</b> to enter symbols in the text input mode.</li> </ul>


# Open the Back Cover

 Remove the back cover as follows.

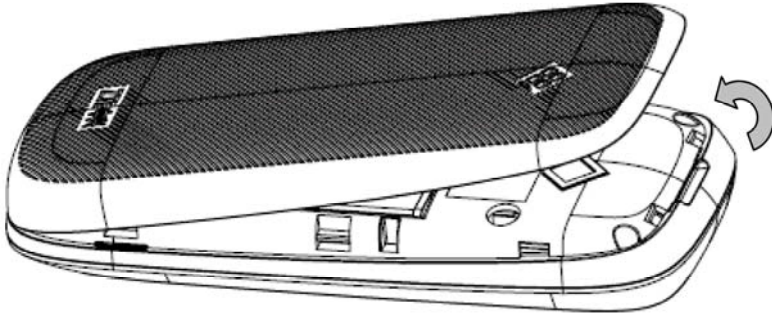


# Installing the Battery

 Install the battery as follows.

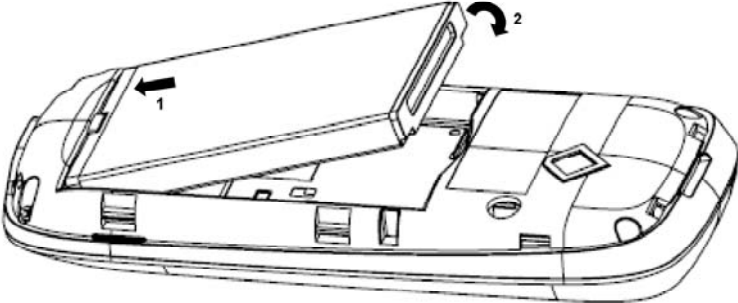

# Inserting the UIM Card

 Insert the UIM card as follows.

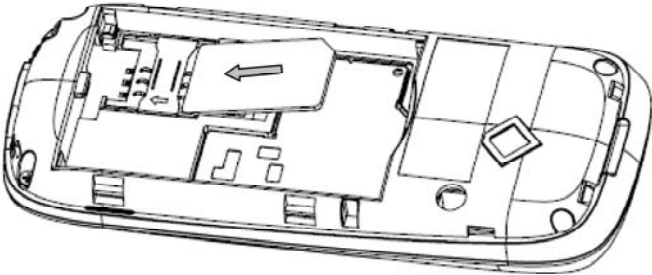

## Charging Your Phone

1. Insert the lead from the charger to the socket, and connect the charger to a standard wall AC socket.











2. After the completion of charging, disconnect the charger from the phone and AC socket.



## Switching On/Off

1. Hold the **End key** to switch on/off your phone.
2. The phone will automatically search for available networks.

# Indicators and Icons

Icons	Description	Icons	Description
	CDMA 1X signal strength		New SMS
	Ring + Vibration mode		Vibration mode
	In the call		Silence mode
	Battery indicator		Alarm enabled

## Keypad Lock

If you activate **Auto Keypad Lock**, the keypad will be locked automatically according to your settings.

Hold the **\* key** to lock the keypad in the standby mode.

Press the **Right soft key** and then press the **\* key** to unlock the keypad.



### Notes:

If the call is coming when the keypad is locked, you can press the **Call key** to answer.

When the keypad is locked, calls may be possible to the official emergency number programmed into your device.

## Phone Code

The phone code could protect your phone from illegal use. The default phone code is 0000. Please change it to your own as soon as possible.



Notes:

Please remember the code, otherwise some service expense may happen.

# PIN and PUK

## PIN Code

PIN code could protect your UIM card from illegal use. When PIN lock is on, you should enter the PIN code when powering on the phone. The network provider offers you PIN code. You should change PIN code as soon as possible for security.

## PUK Code

Consecutive inputting wrong PIN code for three times will cause locking of UIM card. To unlock, you need PUK code.



### Notes:

PIN code and PUK code may be offered together with the UIM card. If not, please contact your network service provider. Please change default PIN code to your own as soon as possible.

## Text

Your phone offers text input modes: abc, Abc, ABC, 123, eZi, Indic and Symbols.

Operation	Method
Change input mode	Press the <b># key</b> to select another text mode, press the <b>* key</b> to enter the symbols mode.
Input letters	In the <b>abc/Abc/ABC</b> mode, press corresponding letter key till the letter appears.
Input words	In the <b>eZi</b> and Indic mode, you can press the keys to key in word. Predictive text input is based on a built-in dictionary. When you have finished writing the word and it is correct, confirm it by pressing the <b>OK key</b> . If the word is incorrect, press the <b>Up key</b> or <b>Down key</b> to view other matching words found in the dictionary.
Input digits	In the <b>123</b> mode, press digit key once.
Input symbol	Press the <b>Navigation keys</b> to switch symbols and press corresponding digit key. Or press the <b>1 key</b> till the symbol (common symbols) appears except the <b>123</b> mode.
Input space	Press the <b>0 key</b> , except the <b>123</b> mode.
Erase character	Press the <b>Right soft key</b> .
Move cursor	Press the <b>Navigation keys</b> .

## Basic Function

Hereinafter are the basic functions of the phone.

### Contacts

- **Add Name:** Add a new contact to your phone or UIM card.
- **All List:** View all contacts in all list, press the **Left key** or **Right key** to view different groups. In all list, you can search a contact by entering the character matching with the contact name's first character, press the **OK key** to view the details. Select **Option** to do more operations.
- **Groups:** View/edit/create groups and set the group ringer.
- **Speed Dials:** View the speed dial list and set speed dial. In the standby mode, hold the number key to dial the corresponding call.
- **Memory Status:** View the number of entries saved and maximum number of entries in phone and UIM card.

### Messages

- **New Message:** Create a new text message. The message could be sent to multi-receivers. See **Text** chapter for more instructions of writing text and character. Select **Option** to insert contact details and message templates when you edit a message.
- **Inbox/Voice Mail/Drafts/Outbox/Sent:** Read the messages in Inbox/Drafts/Outbox/Sent and check the voice mail.
- **Message Settings:** Change the general /SMS settings and edit the SMS reject template.
- **Message Template:** Some common used messages preformatted in the phone. You can view, edit, delete or send them, besides you can create new templates.
- **Delete Message:** You can choose to delete the messages in the inbox, drafts, outbox, sent or delete them together.
- **Memory Status:** Check the storage status of the phone/UIM card.

### Call History

- **Call History:** View call's log. Select **Option** to perform more operations accordingly.
- **Call Duration:** Check the call duration and clear the corresponding time.

### Settings

- **Profile:** Select or edit the profile.
- **Display Settings:** You can change the settings of screen/ banner/roaming reminder/keypad light.
- **Phone Settings:** Set the language/auto keypad lock/power save/auto power on/off of the phone and view the version information.
- **Call Settings:** Set the call/answer/call information reminder/voice privacy/international dial settings.
- **Time & Date Settings:** Set time and date format of your phone.
- **Security Settings:** Change the settings about the phone code, PIN code, restore factory settings and clear user data.

## Other Functions

Hereinafter are the other functions of the phone.

### ***Voice Recorder***

1. Select **Menu > Magic Box > Voice Recorder**.
2. Select **Option > Settings** to set the volume.
3. Go back to the voice recorder interface, and press the **OK key** to start recording your voice memo.
4. Press the **Left soft key [Pause]** to pause, press the **Left soft key [Continue]** to resume recording.
5. Press the **Right soft key [Stop]** to stop recording, and then the voice memo will be saved automatically.

Press the **OK key** to play it.

Select **Option** to perform more actions to the recorded memo.



## Other Facility

- **TATA Zone:** It contains some network services and applications, contact your network provider for the detailed information.
- **Scheduler:** View calendar and create tasks.
- **Games:** Select one game and play it.
- **File Manager:** Organize your files in folders.
- **Alarm:** Set alarm alert time.
- **Calculator:** Execute basic math calculation.
- **World Time:** View times of the other cities in the world and perform corresponding operations.
- **Stopwatch:** Select the normal/lap/split timing mode to count time.

# Safety Information

## General Care

Your handset contains delicate electronic circuitry, magnets and battery systems. You should treat it with care and give particular attention to the following points:

- Do not allow the handset, battery or accessories to come into contact with liquids or moisture at any time. Do not immerse the handset in any liquid.
- Do not place the handset alongside computer disks, credit cards, travel cards and other magnetic media. The information contained on disks or cards may be affected by the handset.
- Do not paint the handset.
- Do not leave the handset or the battery in places where the temperature could exceed 60 °C, e.g. on a car dashboard or a windowsill, behind glass in direct sunlight, etc.
- Do not remove the handset's battery while the handset is switched on.
- Take care not to allow metal objects, such as coins or key rings to contact or short-circuit the battery terminals.
- Do not dispose of battery in a fire. The handset's Li-ION batteries may be safely disposed of at a Li-ION recycling point. Follow local requirements for recycling.
- Do not put the handset's battery in your mouth, as battery electrolytes may be poisonous if swallowed.
- Do not attempt to dismantle the handset or any of its accessories.
- Do not put a battery into a microwave oven, dryer, or high-pressure container.
- Do not contact battery directly to an electric outlet or cigarette lighter charger. Use only approved charger units.
- Do not pierce battery with a sharp object such as a needle.
- Do not disassemble or modify the battery.
- Do not use a damaged or deformed battery.
- Do not drop, throw, or subject the handset to rough treatment.
- Do not solder the battery directly.
- Stop using the battery if abnormal heat, odor, discoloration, deformation, or abnormal condition is detected during use, charge, or storage.
- Remove the battery whose life cycle has expired from equipment immediately.
- This equipment is fitted with an internal battery. Take it to a qualified service engineer when the replacement of the battery is required.
- The earpiece may become warm during normal use. Also, the handset itself may become warm while the battery is being charged.
- When a handset is in vibration mode, the vibration can sometimes cause the handset to move.
- Be careful not to place the handset near heat sources (such as a heater) or too close to the edge of the table.
- Power off your phone before you clean it. Use a damp or anti-static cloth to clean the handset. Do not use an ordinary dry cloth or electrostatic cloth. Do not use chemical or abrasive cleaners as these could damage the casing.
- Remember to make backup copies of all important data on your handset.
- Remember to recycle: the cardboard packing supplied with this handset is ideal for recycling.

**Warning:**

In the unlikely event of a battery leak, take care to keep the battery discharge away from your eyes or skin. If the leakage does come into contact with the eyes or skin, please flush thoroughly in clean water and consult with a doctor.

**General Guidelines**

- In some countries, national law prohibits private copying of copyrighted material. Please check the national legislation of the applicable country concerning the use of such material.
- Many jurisdictions have laws and regulations about taking pictures in public or private areas and regarding the processing and further use of such pictures. The manufacturer encourages its customers to obey all laws and to respect the personal rights of others.
- Please check roaming agreement availability with your service provider.
- The use of mobile phones is not allowed in some radiation sensitive areas, such as hospitals, research centers and airplanes. The user is responsible to power-off the device. If there is any uncertainty, you should remove the battery from the handset.
- Observe any signs that indicate powering off handsets, such as those near gas stations, or explosives, and power off the handset immediately.
- If you have a heart condition, be careful with the settings of call vibration or tone volume.
- Do not allow children to play with the handset, charger or batteries.
- Do not use the handset where blasting is in progress.
- Do not try to make a call or conversation while the temperature of charging battery is above 50°C.
- Take care not to put your handset in the back pocket of your trousers or skirt and then sit on it. Also, do not put your phone at the bottom of bag where it may subject to excessive weight or pressure. Doing so may damage the LCD and camera lens and cause them malfunction.
- The operation of some medical electronic devices, such as hearing aids and pacemakers, may be affected if a handset is used next to them. Observe any caution signs and the manufacturer's recommendations.
- Do not leave the handset discharged or without a battery for a long time, otherwise some data may be erased.
- Your phone contains metal, which may cause you an itch, a rash or eczema depending on your physical condition.

**Road Safety**

- You must exercise proper control of your vehicle at all times. Give your full attention to driving.
- Observe all of the recommendations contained in your local traffic safety documentation.
- Pull off the road and park before making or answering a call, if driving conditions require so. Check if local laws and/or regulations restrict the use of handsets while driving
- You must not stop on the hard shoulder of a motorway to answer or make a call, except in an emergency.
- Power off your handset at a refueling point, such as a gas station, even if you are not refueling your own car.
- Do not store or carry flammable or explosive materials in the same compartment as the handset.
- Electronic systems in vehicle, such as anti-lock brakes, speed control and fuel injection systems are not normally affected by radio transmissions. The manufacturer of such equipment can advise if it is adequately shielded from radio transmissions. If you suspect vehicle problems caused by radio transmissions, consult your dealer and do not power on the handset until it has been checked by a qualified technician.

## **Hospital Safety**

- Power off your phone and remove the battery in areas where the use of handsets is prohibited.
- Follow the instructions given by the respective medical facility regarding the use of handsets on their premises.

## **Emergency Service**

To make an emergency call in any country:

1. Ensure that your handset is on and in service.
2. Press the **End key** as many times as needed to clear the display and ready the device for calls.
3. Enter the official emergency number for your present location.
4. Press the **Call key** to dial the number. Follow instructions received and do not end the call until told to do so.

When the UIM card is not inserted or when the phone/PIN code is on, Press **SOS** and then enter the official emergency number for your present location. Press the **Call key** to dial the number.



### **Notes:**

- Tell the operator which service you require: Police, Ambulance, Fire Brigade, Coastguard or Mountain Rescue Service. Tell them where you are and remain stationary to maintain contact if possible.
- Due to the nature of the cellular system, the connection of emergency calls cannot be guaranteed. You should never rely solely on any wireless device for essential communications like medical emergencies.

## **Third Party Equipment**

The use of third party equipment, cables or accessories, not made or authorized by ZTE, may invalidate the warranty of your handset and also adversely affect the phone's safety/operation.

## **Vehicles Equipped with an Airbag**

An airbag inflates with great force. Do not place objects, including either installed or portable wireless equipment, in the area over the airbag or in the airbag deployment area. If in-vehicle wireless equipment is improperly installed and the airbag inflates, serious injury could result.

## **Aircraft Safety**

- Power off your phone before the airplane takes off. In order to protect airplane's communication system from interference, it is prohibited to use mobile phone in flight. If you want to use mobile phone before the airplane takes off, you should get aircrew's permission according to safety regulations.
- If the mobile phone has the function of automatic timing power-on, please check your alarm setting to ensure that your phone will not be automatically powered on during the flight.

## **Copyright Notice**

The audio recordings you make/download are protected by copyright laws. They are for personal use only and must not be otherwise used without the permission of the copyright owner.

## Radio Frequency (RF) Energy

This model phone meets the government's requirements for exposure to radio waves.

This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government: The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. \*Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output. The highest SAR value for the model phone as reported to the FCC when tested for use at the ear is **1.47 W/kg** and when worn on the body, as described in this user guide, is **0.899 W/kg** (Body-worn measurements differ among phone models, depending upon available enhancements and FCC requirements.)

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/ea/fccid/> after searching on FCC ID: Q78-ZTECS185.

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and the positions the handset a minimum of 1.5 cm from the body. Use of other enhancements may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the phone at the ear, position the handset a minimum of 1.5 cm from your body when the phone is switched on.

## FCC Compliance

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Warranty Terms

The warranty does not apply to defects or errors in the product caused by:

- Reasonable abrasion.
- Misuse including mishandling, physical damage, improper installation, unauthorized disassembly of the product.
- Water or any other liquid damage.
- Any unauthorized repair or modification.
- Power surges, lightning damage, fire, flood or other events outside ZTE's reasonable control.
- Use of the product with any unauthorized third party products such as generic chargers.
- Any other cause beyond the range of normal usage for products.

End User shall have no right to reject, return, or receive a refund for any product from ZTE under the above-mentioned situations.

This warranty is end user's sole remedy and ZTE's sole liability for defective or nonconforming items, and is in lieu of all other warranties, expressed, implied or statutory, including but not limited to the implied warranties of merchantability and fitness for a particular purpose, unless otherwise required under the mandatory provisions of the law.

## **Limitation of Liability**

ZTE shall not be liable for any loss of profits or indirect, special, incidental or consequential damages resulting from or arising out of or in connection with using this product, whether or not ZTE has been advised, knew or should have known the possibility of such damages. Refer to the enclosed warranty card for full warranty and service information.