

ZTE-C S268

CDMA 1X Digital Mobile Phone

User Manual

ZTE CORPORATION
NO. 55, Hi-tech Road South, ShenZhen, P.R.China
Postcode: 518057
Tel: (86) 755 26779999
URL: <http://www.zte.com.cn>
E-mail: mobile@zte.com.cn

LEGAL INFORMATION

Copyright © 2010 ZTE CORPORATION.

All rights reserved.

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice.

Version No. : R1.0

Edition Time :

Manual No. :

Contents

Getting started	1
Phone overview	1
Keys and parts	1
Indicators and icons	3
Starting up	3
Inserting UIM card	3
Removing UIM card	4
Installing battery	4
Removing battery	5
Inserting memory card	5
Removing memory card	6
Connecting accessories	6
Power on/off	7
Charging	7
Keypad lock	8
Basic operation	8
Menu	8
Navigating your phone	9
Getting help	10
Text input	11
Text mode	11
Multitap mode	11
Numbers mode	11
eHiText mode	11
Symbols mode	12
Calls	13
Voice calls	13
Making a call	13
Making a call from contacts	13
Making a call from call history	13
Making a one-key-call	13
Receiving calls	14
Setting ring for coming call	14
Call options	14
Call history	14
Viewing recent call history	14
Deleting call history	15
Call time	15
Messages	16
Setting message	16
Editing template	16

 
Text messages	16
Sending a new SMS	17
Receiving SMS	17
Replying SMS	17
Calling back	17
Use number	17
Deleting SMS	18
Multimedia message	18
Sending a new MMS	18
Receiving MMS	19
Deleting MMS	19
Message management	19
Message boxes	19
Push messages	20
Contacts	21
Adding a contact	21
Editing contact	21
Deleting contact	21
Find contact	21
Adding a group	21
Editing group	22
Deleting group	22
Others about contacts	22
Viewing memory info	22
Photos and videos	23
Camera	23
Setting Camera mode	23
Taking a photo	23
Viewing photos	23
Video	23
Setting video mode	23
Recording a video	24
Playing a video	24
Recorder	24
Recording	24
Playing a sound file	24
Internet	25
Surfing Internet	25
Options for browser	25
Entertainment	26
Pictures	26
Viewing pictures	26
Music	26
Setting music mode	26
Managing playlist	26
Playing a music	27
Video	27
Playing videos	27


 


 
 

 

 
Radio	27
Starting Radio	28
Channels.....	28
Other Radio options	28
Games.....	28
Magic Box.....	29
Alarm	29
Scheduler.....	29
Reader	29
Calculator.....	29
Unit conversion.....	30
World time	30
Stopwatch.....	30
Notepad.....	30
Personalize your phone	31
Display Settings	31
Phone Settings.....	31
Call settings.....	31
Starting call forwarding	31
Starting call waiting	32
Starting fire proof.....	32
Other call settings	32
Profiles	33
Selecting current profile.....	33
Editing a profile	33
Connect settings	33
Time & Day settings	33
Phone Security	34
Phone password.....	34
PIN code.....	34
Restoring factory settings.....	34
Clear User Data.....	35
File manager.....	36
Viewing a file.....	36
Deleting a file.....	36
Managing folders	36
Space management.....	37
General information	38
Security	38
Safety Warnings.....	38
Limit Warranty.....	40
Limitation of Liability.....	40
Troubleshooting	42
Specifications	43
Declaration of RoHs compliance	44


Getting started

Phone overview

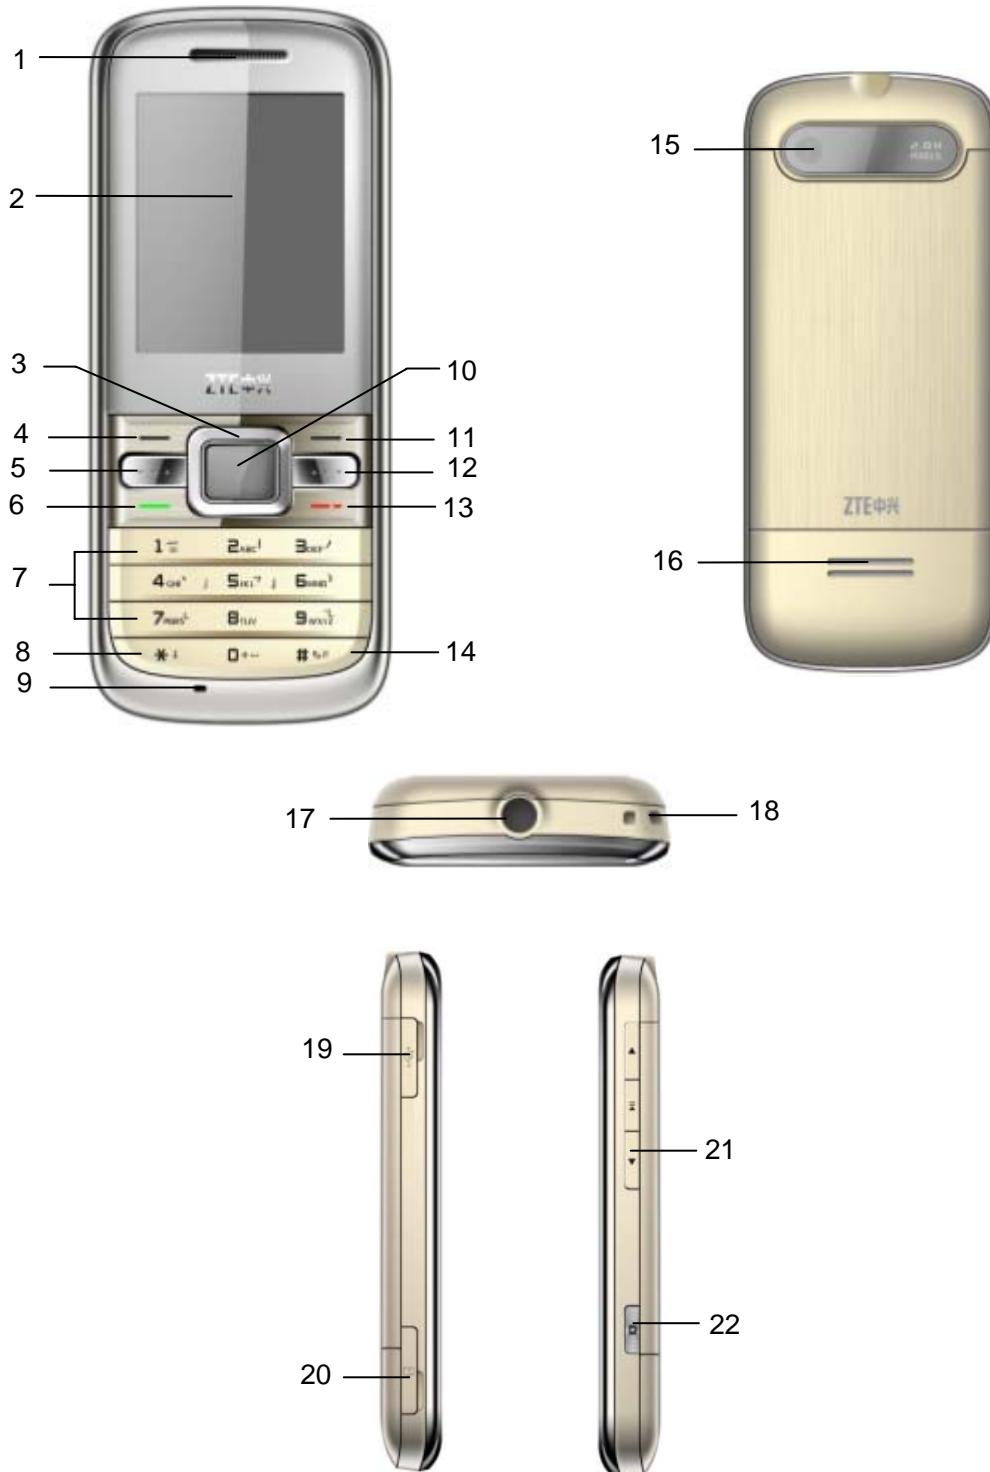









 
 

 


Keys and parts



Serial Number	Key	Description
1		Earpiece
2		LCD screen
3		<p>Navigation Keys (Up/Down/Left/Right Key)</p> <ul style="list-style-type: none"> • In standby mode: Used as hot keys to enter the designated functions. Press Up Key to enter Profile. Press Down Key to write New Message. Press Left Key to enter Select folder. Press Right Key to enter MobileShop. • To designate the functions accessed by the navigation keys. • In lists, messages and menus: scroll up, down, left and right.
4		<p>Left Soft Key</p> <ul style="list-style-type: none"> • The current function of the key is shown in the bottom line of the display. • In standby mode: Press to enter main menu in standby mode.
5		Function key – Services offered by the supplier.
6		<p>Call Key</p> <ul style="list-style-type: none"> • Press to send or answer calls. • In standby mode: Press to show all calls.
7		<p>Number Keys</p> <ul style="list-style-type: none"> • Press to enter numbers. • Press and hold the number key to start speed dial.
8		<p>* Key</p> <ul style="list-style-type: none"> • Press to enter "*". • In an editing screen: Press to input punctuation and symbols. • Hold to lock the keypad in standby mode.
9		Microphone
10		<p>OK Key</p> <ul style="list-style-type: none"> • In standby mode: Press to open the Browser. • In lists and menus: Start an application/function.
11		<p>Right Soft Key</p> <ul style="list-style-type: none"> • The current function of the key is shown in the bottom line of the display. • In standby mode: Press to enter Contact.
12		Music Key - Press to open the Music Player.
13		End Key

		<ul style="list-style-type: none"> • Press and hold to turn the phone on/off. • Press to end a call. • Press to reject an incoming call. • Press to cancel dialing. • Press to return to standby mode.
14		# Key <ul style="list-style-type: none"> • Press to enter "#". • In an editing screen: Press to change the input method. • In standby mode: Press and hold to activate/deactivate vibration mode.
15		Camera
16		Speaker
17		Headset port
18		Handset charm
19		Charger/USB connection jack
20		TFlash card slot
21		Volume keys
22		Camera Key - Press to make a shot.

Indicators and icons

	Signal Strength		Roaming
	New message		Clock
	Ringer with vibration		Battery indicator
	Vibrate mode		CDMA 2000 1X
	Silence mode		Headset mode
	TFlash card		In calling
	Bluetooth		MMS
	Privacy		Push message

Starting up

Inserting UIM card

 
You can obtain an UIM card from your service provider when you sign on as a subscriber.



Caution:

- Do not bend or scratch your UIM card. Keep the card away from electricity and magnetism.
- Don't touch the metal surface of the UIM card in case that information in the card may be lost or destroyed.
- Make sure to disconnect the charger and other accessories from your phone and remove the battery before inserting and removing your UIM card.

1. Press and hold the **End Key** to power off the phone.
2. Slide down the battery cover and remove the battery.
3. Insert the UIM card into the card holder, with the metal contacts facing downward and the cut corner in the right direction. Make sure it is pushed all the way to the end as shown below.

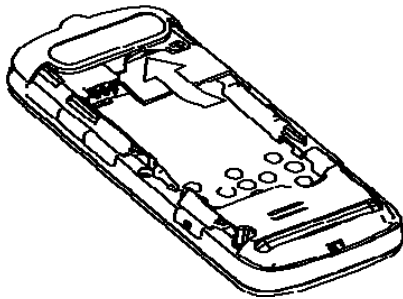

4. Push the battery until it clicks into position.
5. Place the battery cover onto the back of your phone.



Notes:

- ▶ The charger and other accessories should be disconnected from your phone before you insert or remove the UIM card.
- ▶ When inserting the UIM card, make sure that the metal contacts face downward and the cut corner is at the top left.

Removing UIM card

1. Press and hold the **End Key** to power off the phone.
2. Slide down the cover.
3. Remove the battery. See **Removing battery**.
4. Remove UIM card gently from the card holder.

 
Installing battery



Notes:

- The phone automatically switches off if the battery voltage is too low.
- When not using the battery for a long period, remove it from the phone and store it in a cool dry place.

1. Press and hold **End Key** to turn off the phone.
2. Slide down the cover.

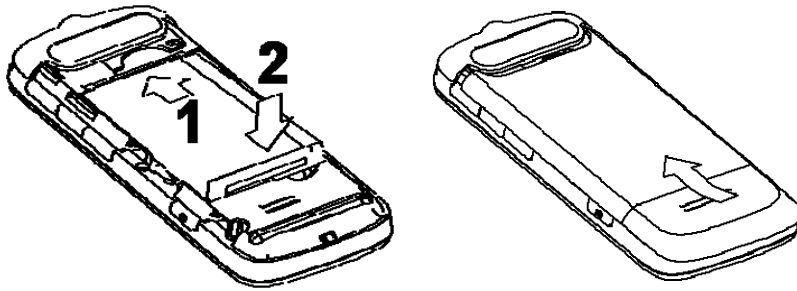

3. Insert the battery carefully with the contacts located against the gold springs.
4. Push down the battery until it clicks into place.
5. Place the battery cover onto the back of your phone.

 


Caution:

Do NOT force the cover down by pressing on it. This will damage the cover.

Removing battery

1. Power off your phone.
2. Slide down the cover.
3. Lift the battery away from the phone.

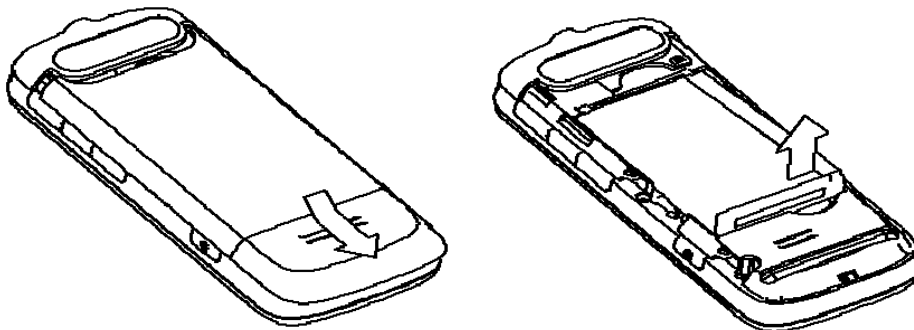

Inserting memory card

 
The TFlash card gives your phone a very large memory capacity. This allows you to save multimedia data, including images, photos, MP3 audio files, and ring tones. You can also use this memory card to store any other files.



Tips:

Your phone can support a TFlash card with capacity up to 4GB.

1. Open the TFlash card slot rubber.
2. Firmly insert the TFlash card into the slot until it clicks into place.
3. Close the TFlash card slot rubber.

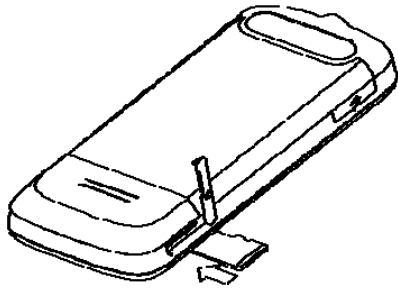

Caution:

Only use ZTE approved memory cards for this device. Any use of unapproved memory cards may cause loss of data or damage to your phone.

Removing memory card

1. Open the TFlash card slot rubber.
2. Push the TFlash card to release it from the slot.
3. Pull the TFlash card completely out of the TFlash slot on the phone.
4. Close the TFlash card slot rubber.



Tips:

- Do not remove the memory card while reading or writing to the card. Doing so may cause data corruption on the card or phone. If possible, insert and remove the memory card while the phone is powered off.
- You'd better use your phone to format your TFlash card. If you want to format it on your PC, please select FAT Formatting type. Otherwise it might cause the memory card not identified by your phone.

Connecting accessories

You can connect your headset to your phone to answer the call and listen to the music. You can also tie a wrist strap with your phone.

Connect the headset to your phone

Insert the headset to the **Headset port**.

Connect the data cable to your phone

Plug the smaller end of the cable into the **USB connection jack** at one side of the phone, and the bigger end into the USB port of the computer.

Tie a wrist strap with your phone

Thread a strap and tighten it.

Power on/off



Notes:

Do not power on your phone if wireless phone use is unapproved, or when it may cause interference or danger.

1. Press and hold **End Key** to turn the phone on



Tips:

 
- ▶ When being asked, enter your PIN (Personal Identification Number) code or phone code and press the **OK Key** to confirm.
- ▶ The PIN code is the password provided by your network service provider. You need this password to use the UIM card.
- ▶ When the entered PIN code or phone code is accepted, the phone will automatically search for the designated network. After a few seconds, your phone will show the standby mode.

2. To power off the phone, press and hold the **End Key** from the standby mode.

Charging

Your phone is powered by a rechargeable battery. The battery is not fully charged when first unpacked, but there may be enough power to power your phone on. You should use it up completely before charging the battery for the first time. Charge the battery with the procedure indicated below.

1. Push down the USB port cover.
2. Insert the charger's USB adapter into the USB port.
3. Connect the charger to a standard AC wall outlet.

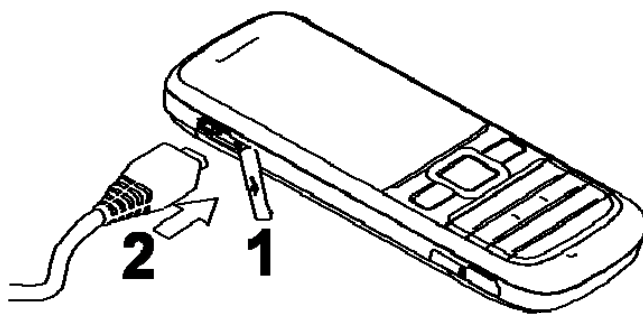

4. Remove the charger from both the wall outlet and the phone once the charging completed.



Notes:

- Make sure that the adapter is inserted into the correct position. Do not force the connector into the port.
- The battery will be fully charged for 3~4 hours.
- Use the charger provided by the original provider. Using unapproved charger may cause danger and violate the authorization and warranty rules of the phone.
- If the phone is over-used in shortage of battery or not used for a long time, the screen may not display the charge indicator until it is continues charged for 10 to 40 minutes.
- For maximum battery performance, it is recommended that you completely charge the battery before using the phone for the first time. A new battery's full performance is achieved only after three complete charge and discharge cycles.
- Once the charging is complete, remove the charger from both the power outlet and the phone.
- To charge the battery, you can use the provided charger or the USB data cable.
- Charging is only possible within a temperature range of -5°C to +45°C.

Keypad lock

Use the keypad lock to prevent the keys from being accidentally pressed.

In standby mode, you can select **Left Soft Key [Menu] > Settings > Phone Settings > Auto Keypad Lock** and set the keypad locking automatically. Or cancel the keypad locking automatically.

If you want to unlock the keypad, press **Right Soft Key [Unlock]** firstly and then press *** Key** to unlock.



Tips:

- When the keypad is locked, **Unlock** is shown in the bottom right hand of the screen.
- If the call is coming when the keypad is locked, you can press **Call Key** to answer. After ending or rejecting the call, the keypad will be locked automatically.
- When the keypad lock is on, calls may be possible to the official emergency number programmed into your device.

Basic operation

Menu

In standby mode, press **Left soft key [Menu]** to enter main menu.

Magic Box

The **Magic Box** includes **Alarm, Calendar, Reader, Calculator, Unit Convert, World Time, Stopwatch, Notepad** and so on.

Messages

SMS (Short Messaging Service) allows you to send text messages and manage the messages that you sent

and received.

You can also send and receive MMS (Multimedia Message Service) messages. MMS enables you to send messages with images, sounds and texts. Consult your service provider whether this service is available. You may need to register separately for this service.

Call History

You can check the phone numbers of missed, received, and dialed voice calls.

QQ

You can log on the Mobile QQ of Tencent.

Web (UTK)

You can get the latest information from the Internet through your phone.

Internet access may require registration with the service provider.

The browser is activated with the preset option as soon as you call up the function. Browser settings may be specified/pre-assigned by the service provider.

i Music

Select **Left Soft Key [Menu] > esurfing > i Music**

You can listen to the music on line.

Surfing (Best Tone/Downloads/Vnet)

This function allows you to browse, purchase and download applications online. You can consult your service provider for more information about this function.

Contacts

You can store contacts with a variety of phone and fax numbers as well as additional address details.

The phone can store up to 500 entries. The capacity of a phone book on your UIM card depends on the type of UIM card provided by your network operator.

Settings

You can set or personalize your phone.

Multimedia

You can take photos or videos through camera, record audios, and so on.

Games

You can play games.

Navigating your phone

The phone features, various functions and settings organized in menus and submenus. To select a function from menus:

1. In standby mode, press **Left soft key [Menu]** to open main menu.

2. Use **Navigation keys** to scroll up, down, right or left to select menu.

For example, scroll to **Settings**.

3. Press **Left soft key** or **OK key** to enter the menu.

4. Press **Up key** or **Down key** to scroll to a submenu, for example **Display Settings**.

5. Press **Left soft Key [Select]** to confirm selection.

6. Press **Up key** or **Down key** to scroll to the desired option, for example, Screen **Settings > Backlight Time**.

7. Press **Up key** or **Down key** to scroll to the desired option, for example, **20 seconds**.

8. Press **Left soft key [Select]** to confirm selection.



Tips:

- If a number is shown before an option in menu list, you can access the option quickly by pressing the corresponding number key.
- In this user manual, the steps needed to reach a menu are shown in a condensed form, for example: **Settings > Display Settings > Backlight Time > 20 seconds**.

Getting help

When you use your phone, you can obtain the help information from the following options.

Obtain the help through your phone

Your phone has been preloaded the help information about some application programs. Please read these information, you can obtain the help about these applications.

Obtain the help from the user manual

Please read the user manual for keys and parts information and instructions for setting up the device for use.

Obtain the help from ZTE web site

If you want to obtain more help information, please visit <http://www.zte.com.cn/main/mobile>.

Text input

Text mode

Your phone offers text input modes: Multitap mode (**abc/Abc/ABC**), Numbers mode (**123**), eHiText mode (**eng**). Text mode includes capital letter and lowercase mode.

When you are in a field that allows characters to be entered, you will notice the text input mode indicator in the upper right corner of the display.

You can key in letters, digits, characters and symbols when writing text or editing contact record information, following the common instruction in hereinafter table.

Operation	Method
Input Letters	Multitap mode —“ abc/ Abc/ABC ”, press corresponding letter key till the letter appears.
Input Words	eHiText mode — “ eng ”, press any key once to key in any word.
Input Digits	Numbers mode — “ 123 ”, press digit key once. Or press Call key to switch between current mode and numbers mode.
Input Symbols	Symbols mode — Press * key to enter the symbols mode and press corresponding digit key. Or press 1 key till the symbol (common symbols) appears except for numbers mode.
Input Space	Press 0 key , except for being in numbers mode.
Erase Character	Press Right soft key .
Move cursor	Press Navigation keys .
Change input mode	Press # key to select another text mode.

Multitap mode

1. Press a number key (**2 ~ 9**) repeatedly until the desired character appears on the screen. Press once to input the first letter on the keypad, press twice quickly to input the second letter, and so on.
2. Press **0 key** to add a space.

Numbers mode

When the input method icon is shown as "**123**", input numbers directly with number keys.



Tips:

While using numbers mode, you need to switch to other text input mode in order to insert a space by pressing **0 key**.

eHiText mode

The eHiText mode is based on a built-in dictionary and generates words from the combination of letters pressed.

1. Press each key associated with the letter you want to enter only once. The letters you have entered appear on the display. The candidate words change with each key you press.
2. When the candidate word is displayed, press **Left key** or **Right key** to highlight the desired candidate

words and press **OK key [Select]** to confirm.

3. Press number key **0** to insert space.
4. Press **Right soft key [Delete]** to delete the letter left of the cursor. Press and hold **Right soft key** to delete all entered text.

Symbols mode

1. Press *** key**.
2. Use **Navigation keys** to page up or down.
3. Press digit key to enter corresponding symbol.



Notes:

Press **1 key** to input till the symbol appears except for numbers mode. Most common punctuation marks and special characters are available.

Calls

Voice calls

You can call the numbers of the other party directly or you can make a voice call through contacts, calls log, speed dial numbers.

Making a call

1. If required press and hold **0 key** for the international prefix “+”.
 2. Enter the number, and press **Call key** to make a call.
- When the call is connected, you can press **OK Key** for **handfree** mode.
 - Press **End Key** to end the call.

Making a call from contacts

1. In standby mode, Select **Left soft key [Menu] > Contact > All Calls**.
Or press **Right soft key [Contact]** directly in standby mode.
2. Press **Navigation keys** to select a contact.
3. Press **Call key** to make a voice call.
4. Press **End key** to end the call.

Making a call from call history

1. Press **Call key** in standby mode to display all calls.
2. Press **Up key** or **Down key** to select a number.
3. Press **Call key** for a voice call.

Press **End key** to end the call.

Making a one-key-call

In standby mode, press and hold the corresponding number key (**1 ~ 9**) in the speed dial list to make the call.

Press **End Key** to end the call.

Setting one-key-call

1. In standby mode, Select **Left soft key [Menu] > Contact > Speed Dials**.
2. Press **Up key** or **Down key** to select a **Not Set** slot, and select **Edit > Contact**.
3. Press **Navigation keys** to select a contact in the phone and press **OK key** to view it.
4. Press **Up key** or **Down key** to select a number, and press **Left soft key [Select]**.
5. Press **Left soft key [Save]** to complete the setting.

Receiving calls

When a voice call is coming, your phone will ring or vibrate (Please see **Personalize your phone > Profile**).

1. Press **Call key** to answer the call.



Tips:

You can press the button on the headset to answer the call when you connect the headset to your phone.

2. Or press **End key** to reject the call.

- When the call is connected you can press **OK key** for **handfree** mode.
- Press **End key** to end the call.

Setting ring for coming call

1. In standby mode, press **Left soft key [Menu]** and select **Settings > Profile**.
2. Press **Up key** or **Down key** to select the profile.
3. Select **Left soft key [Select] > Profile Setting** to edit the selected profile.
4. Select **Ring Tone**.
5. Select the audio and press **Left soft key [Select]** to save the setting.

Call options

1. Before you answer the call:
 - ▶ Press **Right soft key [Mute]** to block the current ring tone of the call.
2. After you answer the call:
 - ▶ Press **Right soft key [Mute]** to block your voice.
 - ▶ Press **OK key** to activate **handfree** mode.
 - ▶ Press **Volume keys** or **Left/Right key** to adjust the volume of earpiece.
 - ▶ Press the **Left soft key [Option]** during a voice call for more options.
 - **Names**: Switch to Names interface during a call.
 - **Messages**: Switch to Messages interface during a call.
 - **Record**: Switch to Voice Memo interface. Press **Left soft key [Start]** to record the current call, press **left soft key [Stop]** to stop recording. Press **Left soft key [OK]** to save it.

Call history

In standby mode, select **Left soft key [Menu] > Call History** to check the calls log and calls duration.

Viewing recent call history

1. Select **All Calls** to view all calls' log.

2. Select **Missed Calls** to view the missed calls' log.
3. Select **Answered Calls** to view the received calls' log.
4. Select **Dialed Calls** to view the dialed calls' log.

Deleting call history

1. Press **Left key** or **Right key** to select the type of calls log.
2. Press **Up key** or **Down key** to select the call log you want to delete.
3. Select **Option > Delete** to delete.
4. Press **Left soft key [Yes]** to confirm to delete.

Or

1. Select **Call History > Clear List**.
2. Press **Left soft key [Select]** to delete all in the log.
3. Press **Left soft key [Yes]** to confirm to delete.

Call time

You can check the call duration.

1. Select **Call History > Call Duration**.
2. Select an option from the list and press **Left soft key [Select]** or **OK key** to check the call duration.
 - ▶ **Dialed Calls:** Indicate the talk time of all dialed calls.
 - ▶ **Answered Calls:** Indicate the talk time of all received calls.
 - ▶ **All Calls:** Indicate the talk time of all dialed and received calls.
3. Press **Left soft key [Clear]** to reset the time.

Messages

Setting message

1. In standby mode, press **Left soft key [Menu]** to enter main menu.
2. Select **Messages > Settings > Message Settings**, and press **Left soft key [Select]** or **OK key**.
3. Press **Up key** or **Down key** to select options:
 - ◆ **General Settings**
 - ▶ **Auto Delete the Read...:** Set erasing the read message in Inbox automatically when Inbox is full.
 - ▶ **Auto Save the Sent...:** save automatically the sent message.
 - ▶ **Auto Add Signature:** Input character to write your signature.
 - ◆ **SMS Settings**
 - ▶ **Delivery ACK:** Select **On** or **Off** for your phone can or can not automatically receive message from network informing you whether you have sent message successfully.
 - ▶ **Priority:** The priority of sending message.
 - ▶ **Validity Period:** You can configure the validity period of outgoing message. Your network will save your message in this specified period of time.
 - ▶ **New Message Save to:** Set the save position of messages: Phone, or UIM Card.
 - ▶ **Callback Settings:** Set callback number.
 - ◆ **MMS Settings**
 - ▶ **Receive Delivery ACK:** Select **On** or **Off** for your phone can or can not automatically receive message from network informing you whether the receiver has receive message successfully.
 - ▶ **Send Delivery ACK:** Select **On** or **Off** for your phone can or can not automatically receive message from network informing you whether you have sent message successfully.
 - ▶ **Priority:** The priority of sending message.
 - ▶ **Validity Period:** You can configure the validity period of outgoing MMS message. Your network will save your MMS message in this specified period of time.
 - ▶ **MMS Download:** Download MMS message in automatic/manual way.
 - ▶ **Server Settings:** Se access server.
4. Press **Left soft key [Save]** to save and exit.

Editing template



Notes:

The predefined template in your phone will be replaced after you modify the template.

1. Select **Messages > Messages > Messages Template**.
2. Press **Up key** or **Down key** to select desired template.
3. Press **Left soft key [Edit]** or **OK key** to edit the selected template.
4. Press **Left soft key [Save]** to save.

Text messages

SMS (Short Messaging Service) allows you to send text messages and manage the messages that you sent

and received.

Sending a new SMS

1. Select **Left soft key [Menu] > Messages > New Message > SMS**.
2. Enter the recipient(s) party's number. (Or select **Left soft key [Option]/OK key > Contacts** to choose the recipient(s).)
3. Press **Down key** to the text field.
4. Edit the message, press **Left soft key [Option]**:
 - ▶ Select **Insert Text content** to insert contact's information or text templates.
 - ▶ Select **SMS Send Setting** to set message delivery report and priority.
5. Press **OK key [Send]** to send your message.

Receiving SMS

1. The envelope icon will appear on the information bar to indicate new incoming SMS. The message alert tone and vibrate activate depending on the current profile setting. Press **Left soft key [View]** or **OK key** to view the message.
2. For the old messages:
 - i. Select **Messages > Messages > Inbox**.
 - ii. Press **Up key** or **Down key** to select the desired SMS.
 - iii. Press **OK key** to view the SMS.

Replying SMS

1. Select **Left soft key [Menu] > Messages > Inbox**.
2. Press **Up key** or **Down key** to select the desired messages.
3. Select **Left soft key [Option] > Reply** to reply to the selected message sender.

Or in the message list interface, select desired message:

 - i. Press **OK key** to view the message
 - ii. Select **Left soft key [Option] > Reply** to reply to the selected message sender.

Calling back

1. Select **Left soft key [Menu] > Messages > Inbox**.
2. Press **Up key** or **Down key** to select the desired messages.
3. Press **OK key** to view the message.
4. Select **Left Soft key [Option] > Use Callback > Voice Call** to call the message sender.

Or select **Left Soft key [Option] > Use Highlight Object > Voice Call** to call the message sender.

Use number

1. Select **Left soft key [Menu] > Messages > Inbox**.

2. Press **Up key** or **Down key** to select the desired messages.
3. Press **OK key** to view the message.
4. Select **Left Soft key [Option] > Use Callback > Save** to save the message sender.
Or select **Left Soft key [Option] > Use Highlight Object > Save** to save the message sender.

Deleting SMS

1. Select **Left soft key [Menu] > Messages > Inbox**.
2. Press **Up key** or **Down key** to select the desired messages.
3. Select **Left soft key [Option] > Delete/Delete all** to delete the selected message or all list messages.

Multimedia message

MMS enables you to send or receive messages with images, sounds and text. Consult your service provider whether this service is available.

Sending a new MMS

1. Select **Left soft key [Menu] > Messages > New Message > MMS**.
2. Enter the recipient(s) party's number. (Or select **Left soft key [Option] /OK key > Contacts** to choose the recipient(s).)
3. Press **Down key** to the title field.
4. Enter the title of your MMS message.
5. Press **Down key** to the text field.
6. Edit your message and press **Left soft key [Option]** for more options, and the options vary depending on the current situation.
 - ▶ **Insert Objects:** Insert the Image, Audio, Video files etc. from your phone or TFlash Card to your MMS message.
 - ▶ **Preview:** Preview the MMS message.
 - ▶ **Save:** Save the MMS message to Drafts.
 - ▶ **Slide:** Add a new page to your MMS message, or delete the current page from your MMS message, and set the slide timing.
 - ▶ **Go To:** Go back to title or recipient field.
 - ▶ **Insert Text Content:** Insert contact's information or text templates.
 - ▶ **Delete Selected Object:** Delete the item of your MMS message selected.
 - ▶ **Delete Other Objects:** Delete the item of your other MMS message.
 - ▶ **MMS Send Setting:** Set message delivery report and priority.
 - ▶ **Cc/Bcc:** Add the Cc field and Bcc field.
7. Press **OK key [Send]** to send your MMS message.



Notes:

- ▶ For the unfinished message, select **Left Soft key [Option] > Save** to save it to the **Drafts**.
- ▶ From the **Outbox/Drafts** you can complete and resend the message.

Receiving MMS

1. The envelope icon will appear on the information bar to indicate new incoming MMS. The message alert tone and vibrate activate depending on the current profile setting. Press **Left soft key [View]** or **OK key** to view the message.
2. For the old MMS:
 - i. Select **Messages > Inbox**.
 - ii. Press **Up key** or **Down key** to select the desired MMS.
 - iii. Press **OK key** to view the MMS.

Deleting MMS

1. Select **Left soft key [Menu] > Messages > Inbox**.
2. Press **Up key** or **Down key** to select the desired messages.
3. Select **Left Soft key [Option] > Delete/Delete all** to delete the selected message or all list messages.

Message management

In standby mode, select **Left soft key [Menu] > Messages** to enter message interface. It includes **New Message, Inbox, Outbox, Drafts, Sent, Message Template, Delete Message, Message Settings, and Memory Status**.

Message boxes

The **Inbox** folder contains all of your received messages. From this folder you can view your received messages, reply or forward messages to another recipient.

The **Outbox** folder contains all messages that were unsuccessfully sent during the last attempt. From this folder you can edit or resend your messages.

The **Drafts** folder contains drafts and unfinished messages. From this folder you can complete or resend your messages.

The **Sent** folder contains messages that were sent successfully. From this folder you can edit or forward messages to another recipient.

You can check the amount of memory available for messages through **Memory Info** folder.



Notes:

- You can not receive new messages if memory for messages is full.
- Total amount of messages decided by the space of phone and UIM card.

Push messages

Push messages is a formatted SMS that displays a message to the user, giving the option of connecting directly to a particular URL via the mobile's wap browser.


- Use the browser to view push messages
- Set **Reject** to disable push messages.

Contacts

Adding a contact

You can store contacts with a variety of phone and fax numbers as well as additional address details.

The phone can store up to 1000 items. The capacity of a phone book in your UIM card depends on the type of UIM card provided by your service provider. The saved location can be identified by the icon before the contacts.

The icon  shows the contacts that are stored in your UIM card.

1. Select **Left soft key [Menu] > Contact > Add Name >Phone/RUIM**.
2. Select save location.
3. Enter the information of contact, such as name, number, and so on.
4. Press **Left soft key [Save]** to save the new contact.

Editing contact

1. Select **Left soft key [Menu] > Contact > All List**.
2. Press **Up key** or **Down Key** to select the desired contact.
3. Select **Left soft key [Select]** to modify the contact.
4. Edit the contact.
5. Press **Left soft key [Save]** to save and exit.

Deleting contact

You can delete one contact or all contacts from your phone or UIM card.

1. Select **Left soft key [Menu] > Contact > All List**.
2. Select the desired contact.
3. Select **Left soft key [Option] > Delete/ Delete All** to delete one contact or all contacts.

Find contact

1. Select **Left soft key [Menu] > Contact > All List..**
2. Input the name or number you want to find, or select the group you want to find and press **OK key**.
3. Press **Up key** or **Down key** to scroll though the corresponding name(s) and record(s) in the list. Scroll to the name you want, and press **OK key** to view the details.



Notes:

All the Names will be list by the letter of the name. If no contact could be found or not exist in the list, “**No Contact**” will be displayed.

Adding a group

Assign group for the contacts

1. Select **Left soft key [Menu] > Contact > Groups**.
2. Select the desired group.

3. Select **Left Soft Key [Option] > Add Name**.
4. Press **Left soft key [Save]** to save the settings.

Editing group

Set incoming ringtone and image for your contacts group.

1. Select **Left soft key [Menu] > Contact > Groups > Option > Edit**.
2. Select desired group from the default group list and edit.

Deleting group

Once add group for one contact, you can only edit the groups and can not delete them.

Others about contacts

1. Select **Left soft key [Menu] > Contact > All List**.
2. Press **Left soft key [Option]** to enter the submenu list, and you can do following operations:

Options		Function
Add Name		Add a new contact.
View		View the contact information.
Edit		Edit the contact information.
Message		Send message to the contact's default number.
Call		Dial the contact's default number.
Delete		Delete current selected contact.
Delete All		Delete all contacts.
Send Name		Send the information of this contact via SMS.
Batch Operation	Copy to Phone	Copy all contacts in UIM card to the phone's memory.
	Copy to RUIM	Copy all contacts of the phone's memory to UIM card.
	Move to Phone	Move all contacts in UIM card to the phone's memory.
	Move to RUIM	Move all contacts of the phone's memory to UIM card.

Viewing memory info

You can check the total amount of contacts that has already been stored and the space which is available in UIM card and phone.

1. In standby mode, press **Left soft key [Menu]** to enter main menu.
2. Select **Contact > Memory Status**, and press **Left soft key [Select]** or **OK key**. The capacity used and the total capacity of the phonebook in the phone and the UIM card will be showed.

Photos and videos

This phone provides following functions for you: camera, video camera, voice recorder and so on. You can take photos, shoot video clips, record a voice memo and so on.

Camera

There is an integrated digital camera in your phone, and this function enables you to take a still picture.

Setting Camera mode

1. Select **Left soft key [Menu] > Multimedia > Camera**.
2. In camera mode, select **Left soft key [Option] > Settings** for more options.
 - **Resolution:** Set the size of your photo.
 - **Quality:** Set the quality standard of your photo.
 - **Effect:** Set the effect of your photo.
 - **White Balance:** White balance of your photo.
 - **Shutter Sound:** Select the sound when the shutter is pressed.
 - **Night Mode:** Set the mode of night.
 - **Frame:** Choose the frame of the photo.
 - **Store Location:** You can select TFlash card or phone memory for photos to store.
 - **Continuous Capture Num:** Choose continuous number of the shot.
 - **Selfshot Time:** Set the self-timer.

Taking a photo

1. Select **Left soft key [Menu] > Multimedia > Camera**.
2. Aim the camera lens at the place/object.
3. Press the **OK key** or press the camera shot key on side of the phone to take a photo.
 - Press the **OK key [Save]** to save the photo just taken in **Photo**. The file will be in *.jpg format.
 - Press the **Right soft key [Cancel]** to discard the photo just taken.
 - Press the **Left soft key [MMS]** to send the photo via MMS.

Viewing photos

1. Select **Left soft key [Menu] > Multimedia > Camera > Option > View**.
2. Select your desired photo and press **OK key** to view. Press **OK key** to full-screen display.

Video

You can active **Video Recording** to record a video clip.

Setting video mode

While in video mode, press the **Left soft key [Option] > Settings** for more options.

- **Resolution:** Set the size of video.
- **Quality:** Set the quality standard of video.

- **White Balance:** White balance of video.
- **Store Location:** You can select TFlash card or phone memory for photos to store.
- **Recording Time:** Set the recording time. The length of the video recording is restricted by the available memory space.

Recording a video

1. Select **Left soft key [Menu] > Multimedia > Camera > Video Recording**.
2. Press **Up key** or **Down key** to set the video parameters.
3. Press **OK key** to start recording.
4. Press **Left soft key [Stop]** to stop recording and the video will be saved automatically.
 - ▶ The file will be in *.mp4 format.
 - ▶ Press **OK key [Play]** to play the video just taken.
 - ▶ Select **Browse** to view the video, select **Delete** to discard the video.

Playing a video

1. Select **Left soft key [Menu] > Multimedia > Camera > Video Recording > Option > Browser**.
2. Select your desired video and press **OK key** to play.

Additional features when playing videos.

Key	Function
Left soft key	Full Screen
Volume keys, Up key or Down key	Volume up and down

Recorder

Recording

1. Select **Left soft key [Menu] > Multimedia > Voice Recorder**.
2. Press **OK key [Start]** to start recording your voice memo.
3. Press **Left soft key [Pause]** to pause, press **Left soft key [Continue]** to resume recording, and press **Right soft key [Stop]** to stop recording.

Playing a sound file

1. Select **Left soft key [Menu] > Multimedia > Voice Recorder**.
2. Press **Option > Record List** to open the folder.
3. Select your desired audio file and press **OK key** to play.

Internet

Surfing Internet

1. In standby mode, press **Left soft key [Menu]** to enter main menu.
2. Select **esurfing** to access the preset home page.

Or press **Ok key [Open]** to enter a new URL [**Go To URL**] address manually, and press **OK key** to link.

Options for browser

In standby mode, select **Menu > esurfing > Option** to do more operations.

- **Homepage:** Access the home page.
- **Google Search:** Login google search.
- **Go To URL:** Check the website.
- **Bookmark:** Open bookmarks, or add a new bookmark.
- **Browser Operate:** Refresh the website or offline browse.
- **History:** View the history links.
- **Save Page:** Save image, background image and music.
- **Save to Bookmark:** Save website.
- **Save Operate:** Save the current website page.
- **Setting:** Set the browser.
- **Property View:** View Website details and the browser version
- **Close Browser:** Exit the browser.

Entertainment

Pictures

Your phone has picture management function. The operation for pictures in phone memory or storage card includes: browsing, transmitting, setting as wall paper, adding to slide, move, rename, copy, delete, and so on.



Caution:

The preset pictures in phone can not be transmitted or deleted.

Viewing pictures

You can use following two methods to view the pictures.

- Open **Data Folder** to view the photos.
 - i. In standby mode, select **Menu > Data Folder > Image**.
 - ii. Select your desired pictures, press **OK key** to view the picture.
- Also you can active **Camera** to view the picture, detailed please refer to the chapter: *Photos and videos > Camera > Viewing photos*.

Music

When you have some audio files stored in your phone, you can create a playlist to play your audio files in the preferred order.

Setting music mode

You can use following two methods to enjoy the music.

- Open **Data Folder** to enjoy the music.
 - i. In standby mode, select **Menu > Data Folder > Music**.
 - ii. Select your desired music, press **OK key** to listen to the music.
- Also you can active **Camera** to view the picture, detailed please refer to the chapter: *Photos and videos > Camera > Playing a sound file*.

1. In standby mode, press **Left soft key [Menu]** to enter main menu.
2. Select **Multimedia > Media Player > Option**.
 - ▶ **Recycle**: Select **Close**, **Single Recycle** or **All Recycle** to set repeat one files, all files or not repeat play.
 - ▶ **Random**: Select **Close** or **Open** to open or close random.
 - ▶ **Effect**: Select **Default**, **Club**, **Rock** or **Soft** to set as sound effect.
 - ▶ **Speaker**: Select **Close** or **Open** to open or close the speaker.

Managing playlist

1. In standby mode, press **Left soft key [Menu]** to enter main menu.
2. Select **Multimedia > Media Player > Option > Select List > Option > Add**.

3. If there is no playlist, press **OK key [Add]** to create a new playlist.
 - i. Enter the playlist name, and press **Left soft key [OK]** to save it.
 - ii. Select an audio file folder in phone or TFlash card.
 - iv. Press **OK key** to mark it, press **Left soft key [OK]** to save the audio files to the playlist.
 - v. Press **Right soft key [Back]** to exit.

When you create a playlist, press **Left soft key [Option]** for more options.

Playing a music

You can use following three methods to play a sound file.

- Open **Data Folder** to play a sound file.
 - i. In standby mode, select **Menu > Data Folder > Music**.
 - ii. Select your desired audio file, press **OK key** to play the audio file.
- Active **Multimedia >Voice Recorder** to play the sound file, detailed please refer to the chapter: *Photos and videos > Camera > Playing a sound file*.
- Active **Menu > Multimedia >Music Player** to play the sound file.
 - i. In standby mode, select **Menu > Multimedia > Music Player** to active media player.
 - ii. Select **Left Soft Key [Option] > Current List**.
 - iii. Select playlist to play audio files.

Video

Your phone support video file recording, storage and play functions.

Playing videos

You can use following three methods to play a video.

- Open **Data Folder** to play a video.
 - i. In standby mode, select **Menu > > Multimedia > Data Folder > Video**.
 - ii. Select your desired videos, press **OK key** to play the video.
- Active **Multimedia > Camera >Video Recording** to play a video, detailed please refer to the chapter: *Photos and videos > Camera > Playing a video*.
- Active **Multimedia >Video Player** to view the picture.
 - i. In standby mode, select **Menu > Multimedia > Video Player** to active media player.
 - ii. Select **Left Soft Key [Option] > Open > Phone > Video**.
 - iii. Select playlist to play video files.

Radio

You can listen to radio by the phone.

The radio has auto-search and locking channel function.

Compatible earphone or component is necessary for the radio usage.



Tips:

Please select suitable volume in listening.

Continuous high volume may be harmful for your ears.

Starting Radio

1. Insert the ear phone compatible with your phone.
2. In standby mode, select **Menu > Multimedia > Radio**, the radio will be started.

Channels

You can search channels automatically or manually.

1. In standby mode, select **Menu > Multimedia > Radio > Left soft key [Options]**.
2. Select **Auto Search** to search channels automatically.
3. Select **Manual Search** to search channels manually..

Or Select **Save Channel** or **Enter Frequency** to input the frequency to set channel manually.

Other Radio options

In standby mode, select playing radio program, press **Left soft key [Options]** to display more options as below:

Close Radio, Resume Play, Channel List, Clear Station List, etc.

Games

Your phone offers Java games.

1. Select **Menu > Games**.
2. Press **Up key** or **Down key** to select your desired Java game.
3. Press **Left soft key [Select]** or **OK key** to start running.
4. Press **End key** to exit to standby mode.

Magic Box


Alarm

You can set the alarm to ring if required.

- In standby mode, select **Left soft key [Menu] > Magic Box > Alarm**.
- Select **No Set** to add a new alarm, and press **Left soft key [Save]** to save it.
- Select **Edit** to view the alarm settings.
- Select snooze mode, such as snooze type, time and tone, etc.
- Select **Noose Setting** to set the alarm duration.
- Select **Disable All Alarms** to disable all alarms.



Notes:

If you turn the alarm on, the icon  will be displayed in standby mode. The alarm will ring at the set time, even when the phone is powered off.

Scheduler

You can conveniently access and modify your agenda:

- In standby mode, select **Left soft key [Menu] > Magic Box > Calendar**.
- Press **Navigation keys** to scroll to different date.
- Select **Left soft key [Options] > New Task** to add **Subject, Start Time, End Time, Remind, or Remind Interval**. Press **Left soft key [Saves]** to Save.
- Press **Left soft key [Options]** to display more options.
 - ▶ **View By day**: View the schedule lists of the current day.
 - ▶ **View All Tasks**: View all schedule lists.
 - ▶ **Go To Today**: Go to the calendar window indicating today.
 - ▶ **Go To Date**: Input the date, your phone go to the calendar window indicating the date you input.
 - ▶ **Delete Before Date**: Input the date, your phone deletes all the schedule lists earlier than the date.
 - ▶ **Delete All Tasks**: Delete all schedule lists.

Reader

You can read text saved in the memory card (TFlash card).

- In standby mode, select **Left soft key [Menu] > Magic Box > Reader**.
- Enter **Memory card** to enjoy reading your text saved.

Calculator

The phone provides simple calculating functions, such as addition, subtraction, multiplication and division.

- In standby mode, select **Left soft key [Menu] > Magic Box > Calculator**.
- Press key “1 ~ 9” to enter numbers.

- Press *** key** to enter the decimal point.
- Press **Up key**, **Down key**, **Left key**, or **Right key** to choose +, -, ×, /.
- Press **Right soft key [Delete]** to clear the last digit you input or the results.
- Press **OK key** to view the result.

Unit conversion

- In standby mode, select **Left soft key [Menu] > Magic Box > Unit Convert**.
- Choose any unit to convert.
- Press **Up key** or **Down key** to switch between original unit ‘from’ and equals unit ‘to’. Press **Left key** or **Right key** to select the original unit which is “from” and equals “to”.
- Key in numbers the original unit which is from to get the result which equals to.

World time

You can check the current local time and date for major cities around the world.

- In standby mode, Select **Left soft key [Menu] > Magic Box > World Time**.
- Press **Navigation keys** on the navigation screen of World Time to view the time of desired city.
- Select **Left soft key [Option]** to select the local city and check the aim city time.



Notes:

Time and date should be set to ensure the World Time function work correctly.

Stopwatch

You can measure time and take split times or lap times, for example, in different sports.

- In standby mode, Select **Left soft key [Menu] > Magic Box > Stopwatch**.
- Select **Normal timing**, **Lap timing**, **Split timing**, press the **Left soft key [Start]** to start timing.
- Press **Left soft key [Split/Lap]** to complete a period of time/lap.
- Press **Left soft key [Continue]** to continue timing.
- Press **Right soft key [Reset]** to reset.

Notepad

- In standby mode, select **Left soft key [Menu] > Magic Box > Notepad**.
- Select **New** to add a new memo.
- Press **Left soft key [Option]** to **Edit**, **Select record**, **Delete** alarm in memo list.

Personalize your phone

Display Settings

In standby mode, select **Left soft key [Menu] > Settings > Display Settings**.

- ▶ Select **Screen Settings**.
- ▶ Select **Wallpaper Settings**, use the picture saved in **Phone** or **TFlash card** as wallpaper, displayed in standby mode.
- ▶ Select **Backlight Time** to adjust backlight duration time.
- ▶ Select **Keypad Light** to adjust keypad light time.
- ▶ Select **Brightness** to adjust the screen brightness.
- ▶ Select **Idle Display Content** to select idle mode.
- ▶ Select **Theme Style** to select theme style.
- ▶ Select **Banner** to input the idle greet words.
- ▶ Select **Roaming Reminder** to active remind for roaming.
- ▶ Select **Keypad Light Settings** to select keypad light mode.

Phone Settings

In standby mode, select **Left soft key [Menu] > Settings > Phone Settings**.

- ▶ Select **Language** to select the language available.
- ▶ Select **Shortcut** to assign the navigation key as shortcuts to important functions..
- ▶ Select **Auto Keypad Lock** to set phone keypad auto lock time or disable keypad auto lock.
- ▶ Select **Power Save** to activate power-saving mode.
- ▶ Select **Auto Power On/Off** to set the time of powering on/off the handset automatically.
- ▶ Select **Version Info.** to view the present PRL (Preferred Roaming List) version, software and hardware version of phone.

Call settings

Starting call forwarding

Call Forwarding allows you to divert your incoming calls to another phone number. For details, contact your service provider.

1. In standby mode, press **Left soft key [Menu]** to enter main menu.
2. Select **Settings > Call Settings > Call Settings > Call Forwarding** for more options.
 - ▶ **Default:** Set call forwarding default number.
 - ▶ **All:** All is diverted immediately in all conditions.
 - ▶ **Busy:** Divert incoming calls when the line is busy.
 - ▶ **No Answer:** Divert incoming calls when there is no answer.
 - ▶ **Busy/No Answer:** Divert incoming calls when the line is busy or there is no answer.
 - ▶ **Cancel All:** Cancel call forwarding.
3. Select one option, activate to register the corresponding service and enter phone number you want to divert.

4. Or press **OK key [Contact]** to select one contact as the number you want to divert to.
5. Press **Left soft key [OK]** to confirm and select which service you want to divert.

You can select **Call Forwarding > Cancel All** to cancel call forwarding.

Starting call waiting

If there is an incoming call while you are on another call, the phone notifies you with a call waiting tone. It shows the number/name of the waiting call. For details, contact your service provider.

1. In standby mode, select **Left soft key [Menu] > Settings > Call Settings > Call Settings > Call Waiting**.
2. Select **On/Off** and press **Left soft key** or **OK key** to register the corresponding service.

Starting fire proof

You can set Incoming calls bar in **Black List**.

1. In standby mode, Select **Settings > Call Settings > Call Settings > Black List** for following options:
 - ▶ **Add Number:** Add an incoming call bar.
 - ▶ **Contacts:** Select bar number listed in Contact.
 - ▶ **Recent Contacts:** Select bar number listed in recent calls list.
 - ▶ **Delete:** Cancel the incoming calls bar
2. Select one option, press **Left soft key [Select]** or **OK key** to register the corresponding service.

Other call settings

Settings > Call Settings

- **Voice Privacy:** Set voice encryption in **On** or **Off**.
- **International Dial:** Activate automatic/manual international prefix “+” function instead of keying in international prefix. This function needs network support.
- **Connection Reminder:** When select “**On**”, the phone prompts alert tone when a call is connected successfully.
- **IP Dial:** Add a new IP dialing prefix and view IP dialing prefix list.

Settings > Call Settings > Answer Settings

- **Anykey Answer:** When select “**On**”, an incoming call can be answered by pressing any key except for **End key, Left soft key** and **Right soft key**.
- **Headset Auto Answer:** When select “**On**”, an incoming call can be answered via headset.

Settings > Call Settings > Call Information Reminder

- **Minute Reminder:** Remind every minute.
- **Missed Calls Reminder:** Remind when miss a call.

Profiles

Selecting current profile

1. In standby mode, select **Left soft key [Menu] > Settings > Profile > Silent /Vibrate/General/Meeting/Outdoor/ Flight/Headset** according to your current surrounding.
2. Press **Left soft key [Select]** or **OK key** (or select option) to activate this mode.

Editing a profile

1. In standby mode, select **Left soft key [Menu] > Settings > Profile**.
2. Select desired profile and select **Left soft key [Select] > Profile Setting**.
 - i. Select **Incoming Call Alert** to set ring type.
 - ii. Select **Ringling Tone** to set voice call ring tone.
 - iii. Select **Ringling Volume** to set ring volume.
 - iv. Select **Earpiece Volume** to adjust earpiece volume.
 - v. Select **Keypad Tone** to adjust keybeep volume.
 - vi. Select **Message Alert Tone** to set message ring.
 - vii. Select **Message Reminder** to set message remind mode.
 - viii. Select **Reminder Interval** to set message remind time.

Connect settings

In standby mode, select **Left soft key [Menu] > Settings > Connect Settings**.

- ▶ Select **USB Disk Mode** to set the TFlash card of the phone as a disk.
- ▶ Select **Bluetooth** to activate and set Bluetooth function.
- ▶ Select **BREW/JAVA** to view access point and select proxy server.

Time & Day settings

In standby mode, select **Left soft key [Menu] > Settings > Time & Day Settings**.

- ▶ Select **Time Format** to select display format of time in standby mode.
- ▶ Select **Date Format** to select display mode of date in standby mode.
- ▶ Select **Time Display** to select display mode of time in standby mode.

Phone Security

Phone password

Phone password can protect your phone efficiently and avoid illegal usage. If phone password protection is activated, you should input the correct password in phone start-up.

- For a new bought phone, the protection function is not activated and the default password is 0000.
- In standby mode, select **Menu > Settings > Security Settings > Use Phone Code** to activate or deactivate password protection.
- In standby mode, select **Menu > Settings > Security Settings > Change Phone Code** to change phone password. It is suggested to change the password according to your requirement.



Notes:

Please remember the password you set, otherwise your phone can not be used normally, need to contact ZTE after-sale service center.

PIN code

PIN code is the personal identification code of UIM card, used to avoid illegal usage for your UIM card. Once PIN code is started, the correct PIN code should be inputted in phone start up, otherwise the phone can only execute emergency call.

- For a new bought card, the default code is supplied by the service provider.
- In standby mode, select **Menu > Settings > Security Settings > Use PIN Code** to activate or deactivate PIN code.
- In standby mode, select **Menu > Settings > Security Settings > Change PIN Code** to change PIN code.
- If input wrong PIN code continuously for three times, the phone will lock the UIM card and prompt you to input PUK code to unlock.



Notes:

If you change PIN code, please remember it clearly.

PUK code is the specified unlock code for UIM card, when UIM card is locked, input the correct PUK code and then input the new set PIN code, UIM card then can be used normally.

- PUK code may be supplied with the new bought card, the detail can refer to the service provider.
- PUK code can only be inputted continuously for 10 times, if input wrong PIN code for 10 times, UIM card will be locked indefinitely.



Notes:

If PUK code is supplied with the new bought card, please keep it safely.

Restoring factory settings

Restoring factory settings can recover all the items in **Setting** menu to the default values.

1. In standby mode, Select **Left soft key [Menu] > Settings > Security Settings > Restore factory Settings**.
2. Press **Left soft key [Yes]** to restore factory settings.



Notes:

Restoring the phone does not influence PIN code.

Or press **Right soft key [No]** to cancel restore.

Clear User Data

Clearing user data can recover all the items in Data Folder the default values.

1. In standby mode, Select **Left soft key [Menu] > Settings > Security Settings > Clear User Data.**
2. Press **Left soft key [Yes]** to restore factory settings.



Notes:

Restoring the phone does not influence PIN code.

Or press **Right soft key [No]** to cancel restore.

File manager

Viewing a file

1. In standby mode, select **Left soft key [Menu]** > **Data folder**.
2. Press **Up key** or **Down key** to select your desired file directory.
3. Press **Up key** or **Down key** to select your desired file.
4. Press **OK key** to view the file.

Deleting a file

Deleting no useful files can save memory space.

1. In standby mode, select **Left soft key [Menu]** > **Data folder**.
2. Press **Up key** or **Down key** to select your desired file directory.
3. Press **Up key** or **Down key** to select your desired file.
4. Select **Left soft key [Option]** > **Delete**.
5. Press **Left soft key [Yes]** to delete file, or press **Right soft key [No]** to give up.

Managing folders

You can create a new folder, rename folder, check folder attribute and delete unnecessary folder.

1. Order folder
 - i. In standby mode, select **Left soft key [Menu]** > **Data folder**.
 - ii. Select your desired folder.
 - iii. Select **Left soft key [Option]** > **Order**.
 - iv. Enter folder name and press **Left soft key [Confirm]** or **OK key** to finish.
2. Rename folder
 - i. In standby mode, select **Left soft key [Menu]** > **Data folder**.
 - ii. Select your desired folder.
 - iii. Select **Left soft key [Option]** > **Rename**.
 - iv. Enter new name and press **Left soft key [Confirm]** or **OK key** to finish.
3. Check folder information
 - i. In standby mode, select **Left soft key [Menu]** > **Data folder**.
 - ii. Select your desired folder.
 - iii. Select **Left soft key [Option]** > **Properties**.
 - iv. After checking, then press **Right soft key [Back]** to exit.
4. Delete folder

- i. In standby mode, select **Left soft key [Menu] > Data folder**.
- ii. Select your desired folder.
- iii. Select **Left soft key [Option] > Delete**.
- iv. In the popup screen press **Left soft key [Yes]** to confirm. Or press **Right soft key [No]** to cancel.

Space management

1. In standby mode, select **Left soft key [Menu] > Data folder**.
2. Select your desired folder.
3. Select **Left soft key [Option] > Memory Info** to check the space information.

General information

Security

If your mobile phone is lost or stolen, please report to your service provider or agencies of banning the use of your lost phone, which will protect you from economic losses resulted from unauthorized use. You need to provide the phone's MEID number labeled. You can see MEID number after removing the battery. Please keep MEID number for future use.

- To protect your mobile phone from illegal use, please take the phone with you as you can.

Safety Warnings

To the Owner

- Some electronic devices are susceptible to electromagnetic interference sent by mobile phone if inadequately shielded, such as electronic system of vehicles. Please consult the manufacturer of the device before using the phone if necessary.
- Operating of mobile phone may interfere with medical devices like hearing aid and pacemaker. Please always keep the mobile phone more than 20 centimeters away from such medical devices when the phone is powered on. Do not carry the mobile phone in the breast pocket. Power the mobile phone off if necessary. Consult a physician or the manufacturer of the medical device before using the phone.
- Be aware of the usage limitation when using a mobile phone at places such as oil warehouses or chemical factories, where there are explosive gases or explosive products being processed, because even if your phone is in standby mode, it still transmits radio frequency (RF) energy. Therefore, power off your phone if required.
- Pay attention to traffic safety. Do not use your mobile phone while driving. Park before making or answering a call.
- Store the phone out of the reach of little children. The phone may cause injury if used as a toy.

Mobile Phone

- Please use original accessories or accessories that are authorized by the manufacturer. Using any unauthorized accessories may affect your mobile phone's performance, and violate related national regulations about telecom terminals, or even endanger your body.
- If you want to clean your phone, please use clean fabric that is a bit wet or anti-static. Do not use harsh chemical cleaning solvents or strong detergents to clean it. Turn off your phone before you clean it.
- As your mobile phone can produce electromagnetic field, do not place it near magnetic items such as computer disks.
- Using the phone near electrical appliances such as TV, telephone, radio and personal computer can cause interference, which affects the function of the phone.
- Do not expose your mobile phone to direct sunlight or store it in hot areas. High temperatures can shorten the life of electronic devices.
- Prevent liquid from leaking into your phone.
- Do not drop, knock or harshly treat your phone. Rough handling can break internal circuit boards.
- Do not connect the phone with other unauthorized peripheral equipments.
- Do not attempt to disassemble the mobile phone and battery by yourself. Non-expert handling of the devices may damage them.
- Do not charge the mobile phone without battery.
- On occasion of emergent calling, keep your phone in status of power on and in area of service. On the condition of standby, press the key to enter emergency phone number, and then press **Call key** to make

a phone call.

- The user is cautioned that changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.
- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference, and
 - (2) this device must accept any interference received, including interference that may cause undesired operation.
- Some electronic devices are susceptible to electromagnetic interference sent by phone if inadequately shielded. Please use phone at least 20cm or as far as you can from TV set, radio and other automated office equipment so as to avoid interference.
- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/ TV technician for help.

Battery Using

- Do not short-circuit the battery, as this can cause excessive heat and fire.
- Do not store battery in hot areas or dispose of it in a fire to avoid explosion.
- Never use any charger or battery damaged or worn out.
- Return the wear-out battery to the provider or put it in the appointed recycle place. Do not put it in familial rubbish.



Warning:

If the battery is broken, keep away from content. If it taints your skin, wash your skin with abundant fresh water and ask doctor help if necessary.

Radio Frequency (RF) Energy

This device meets the government's requirements for exposure to radio waves.

This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard for wireless device employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. *Tests for SAR are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The highest SAR value for the device as reported to the FCC when tested for use on lefthand, cheek, as described in this user guide, is 0.80W/kg for CDMA 850 band.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this device with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this device is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID: Q78-ZTECS268.

For body operation, this device has been tested and meets the FCC RF exposure guidelines for use the positions the device a minimum of 1.5cm from the body. Use of other enhancements may not ensure compliance with FCC RF exposure guidelines.

Safety and General Using in Vehicles

- Before making or answering a call, you should pay attention to the local laws about using wireless mobile phones and take them into account in practical use.
- Safety airbag, brake, speed control system and oil eject system shouldn't be affected by wireless transmitting. If you do meet problems above, please contact your automobile provider.
- Please power off your mobile phone when refueling your automobile, and so do the place where duplex wireless equipments are banned. Don't put your phone together with flammable or explosive items, as inner spark may cause fire.

In Aircraft

- Follow the restrictions in aircraft. Wireless devices can cause interference in aircraft.
- Please power off your mobile phone before taking on till landing. In order to protect airplane's communication system from interference, it is never allowed to use mobile phone when it is in flight. Using mobile phone before the plane taking off should get aircrew's permission according to safety regulations.

Limit Warranty

The warranty does not apply to defects or errors in the product caused by:

1. Reasonable abrasion.
2. Misuse including mishandling, physical damage, improper installation, unauthorized disassembly of the product.
3. Water or any other liquid damage.
4. Any unauthorized repair or modification.
5. Power surges, lightning damage, fire, flood or other events outside ZTE's reasonable control.
6. Use of the product with any unauthorized third party products such as generic chargers.
7. Any other cause beyond the range of normal usage for products.

End User shall have no right to reject, return, or receive a refund for any product from ZTE under the above-mentioned situations.

This warranty is end user's sole remedy and ZTE's sole liability for defective or nonconforming items, and is in lieu of all other warranties, expressed, implied or statutory, including but not limited to the implied warranties of merchantability and fitness for a particular purpose, unless otherwise required under the mandatory provisions of the law.

Limitation of Liability

ZTE shall not be liable for any loss of profits or indirect, special, incidental or consequential damages resulting from or arising out of or in connection with using this product, whether or not ZTE had been

advised, knew or should have known the possibility of such damages.

Troubleshooting

If your phone appears following phenomenon in the process of application, please read following relative information at first. If the problems still can not be solved, please contact with the distributor or service provider.

Problem	Check Point
No key beep on pressing keys.	Please check the setting of Key Beep in Settings .
When there is an incoming call, the prompt ringer not rings.	Please check the setting of sound Alert Type and ringer Volume in Settings .
No prompt tone at alarm time.	Please check relative sound setting (see setting in Set alarm in Alarm clock in Magic Box).
Messages cannot be sent.	Please check the signal of network.

Specifications

Phone specifications are shown in the following table. display:

Phone Standards	CDMA 800MHz Cellular (UL824~849, DL869~894)
Dimensions (H×W×D)	108.6mm×45.5mm×14mm
Weight	About 75g (with 900 mAh battery)
Display	176*220 pixels, 262 K TFT, Color QCIF+ Screen, 2.0 inch
Camera	2.0 M pixel camera
Extended memory	4G microSD card
Battery	1000 mAh Lithium ion (Li-ion)
Performance	GIF/JPEG/PNG/BMP image; 3GP/MP4 video; MP3/AMR/WAV/MIDI audio; Capture Image: up to 1200x1600, 24b; Capture Video: up to 144 x 176 ; USB 2.0; JAVA MIDP 2.0; MMS Video and Picture, Calendar, Speakerphone, Voice Recorder, FM
Continuous idle time *	220 ~ 240 hours
Continuous talk time *	About 300 minutes
Charge time	Approximately 3 hours

* The phone's talk and idle time are based on ideal working environments. The use of extended backlighting, browser, and network conditions can reduce battery life and talk/idle time.

Declaration of RoHs compliance

To minimize the environmental impact and take more responsibility to the earth we live in, this document shall serve as formal declaration that the F600 manufactured by **ZTE CORPORATION** is in compliance with the Directive 2002/95/EC of the European Parliament - RoHS (Restriction of Hazardous Substances) with respect to the following substances:

1. Lead (Pb)
2. Mercury (Hg)
3. Cadmium (Cd)
4. Hexavalent Chromium (Cr (VI))
5. Polybrominated biphenyls (PBB's)
6. Polybrominated diphenyl ethers (PBDE's)

The F600 manufactured by **ZTE CORPORATION**, meets the requirements of EU 2002/95/EC.