



ZTE-C S300

批注 [z1]: DALACOM_S300_RNTL42FV0
. 1. 0B02

CDMA 1X Digital Mobile Phone

User Guide

Copyright © 2010 by ZTE Corporation

All rights reserved.

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice. The information on the package is only for your reference. Images are for your reference only. Please check the product model before purchasing.

ZTE中兴 ZTE Corporation

NO. 55, Hi-tech Road South, ShenZhen, P.R.China

Postcode: 518057

Http://www.zte.com.cn

E-mail: mobile@zte.com.cn

 
Service Hotline: +86-755-26779999

Manual No.: 07958450xxxx

Contents

<i>Know your Phone</i>	2
<i>Key Instruction</i>	2
<i>Key Instruction</i>	3
<i>Interface Icons</i>	4
<i>Insert and Extract UIM Card</i>	4
<i>Remove and Install the Battery</i>	4
<i>Charge the Battery</i>	5
<i>Power on/ off Your Phone</i>	5
<i>Make and Answer a Call</i>	6
<i>Menu Tree</i>	6
<i>Voice Mail</i>	错误! 未定义书签。
<i>Text Input</i>	7
<i>Message</i>	7
<i>Menu Functions</i>	8
<i>Phone Lock</i>	10
<i>PIN Code and PUK Code</i>	10
<i>Warning and Maintenance</i>	10
<i>Warranty Terms</i>	11
<i>Limitation of Liability</i>	11



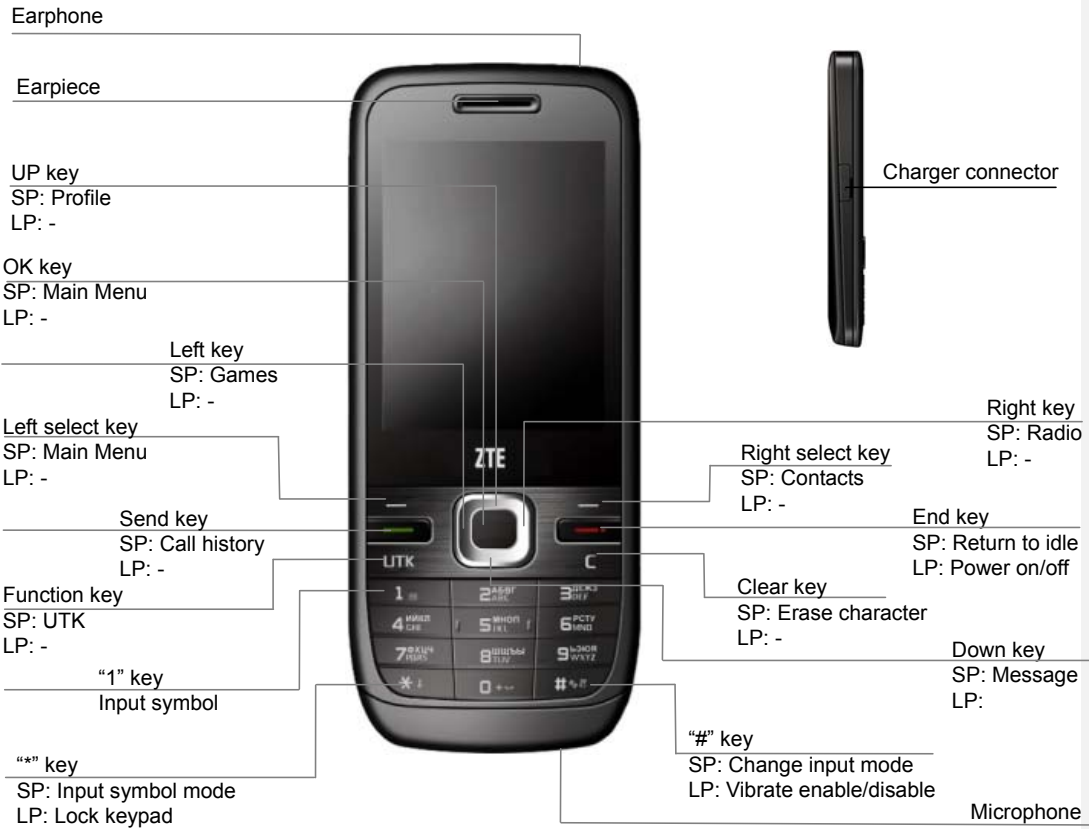









Know your Phone












SP: To "press" the key and release it.

LP: To "hold" the key (keep pressing the key for two second or more).

Key Instruction

Key	Function Description
	<p>Send key:</p> <ul style="list-style-type: none"> ◆ Make or answer a call. ◆ Press Send key in standby mode to enter all recent calls list.
	<p>End key:</p> <ul style="list-style-type: none"> ◆ End an active call or reject a call. ◆ Long press to Power on/Power off. ◆ Exit from any interface to standby mode.
	<p>Left select key:</p> <ul style="list-style-type: none"> ◆ Enter Main menu in standby mode. ◆ Switch to the options of left bottom submenu.
	<p>Right select key:</p> <ul style="list-style-type: none"> ◆ Enter Contacts in standby mode. ◆ Switch to the options of right bottom submenu. ◆ Cancel operation, exit to previous window.
	<p>Clear key:</p> <ul style="list-style-type: none"> ◆ Erase character(s) while editing text.
	<p>OK key:</p> <ul style="list-style-type: none"> ◆ Enter Main menu in standby mode. ◆ Press OK key to confirm the commands and options selected. ◆ Confirm the character chosen while character inputting.
	<p>Up/Down key:</p> <ul style="list-style-type: none"> ◆ Scroll the cursor up and down. ◆ Used as selection key up and down for keying in commands and selecting options shown on the display. ◆ In standby mode, press Down key to write message (default). ◆ In standby mode, press Up key to enter Profile menu (default). ◆ Or press the scroll key to utilize the function set in Settings. ◆ Used as direction key in games.
	<p>Left/Right key:</p> <ul style="list-style-type: none"> ◆ Scroll the cursor left and right. ◆ Used as selection key to scroll cursor left and right for keying in commands and selecting options shown on the display. ◆ In standby mode, press Left key to enter Games menu(default). ◆ Press Right key to listen to the radio(default). ◆ Or press the scroll key to utilize the function set in Settings. ◆ Adjust volume in conversation. ◆ Used as direction key in games.
	<p>0~9 key:</p> <ul style="list-style-type: none"> ◆ Key in numbers or characters. ◆ Make a Speed Dial call. ◆ Hold 0 key to input + in standby mode.
	
	<p># key:</p> <ul style="list-style-type: none"> ◆ Hold # key in standby mode to enable/disable vibration. ◆ Press # key to select text mode when edit text.
	<p>* key:</p> <ul style="list-style-type: none"> ◆ Hold * key in standby mode to lock phone's keypad. ◆ Press * key once to enter Symbols mode in text input mode.

Interface Icons

Icon	Indication
	Signal strength
	Roaming
	New message
	Vibration
	Silence all
	Vibrate+Ring
	Alarm
	Earphone
	Power indicator

Insert and Extract UIM Card

 
- ◆ Power off the phone, remove the battery and other external power.
- ◆ Insert UIM card into UIM card slot in the phone, or remove UIM card out of slot, as shown in picture hereinafter.




Remove and Install the Battery

The attached Li-ion battery along with the phone can be used after unpacking. For the first three times, please use up the power and charge it fully for a new battery to perform well.

Remove: (1) Press and push the back-cover of the phone down to release and remove it off the phone. (2) Put finger on the side/top/bottom finger grips, and then lift up the battery from the finger grips to remove the battery.

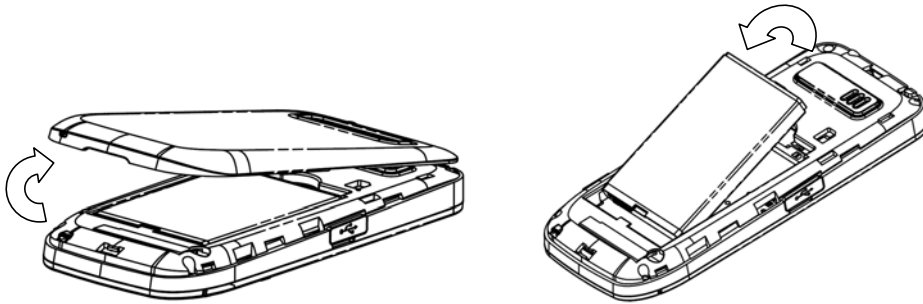

 Install: (1) Replace the battery into the battery slot, to be noted that the lower end of the battery firstly inserted. (2) Put the back-cover of the phone flatly upon the body of phone. Direct the back cover towards the locking catches on the top/sides of the phone and slide the back cover as shown below.

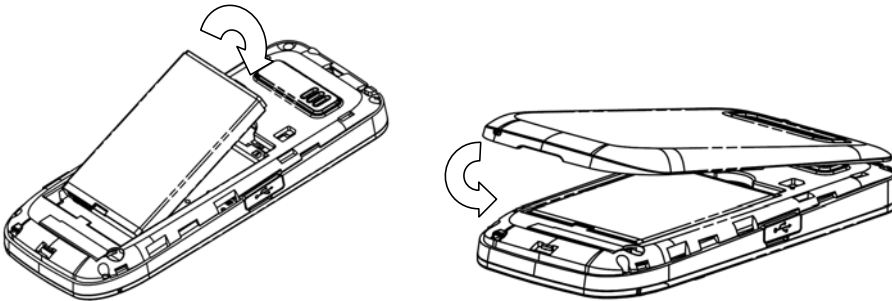

Charge the Battery

- ◆ Plug out rubber away from the jack on the bottom of the handset and connect the lead from the charger to the socket on the bottom of the phone. (Note: The side with arrow should be upright while connecting).
- ◆ Connect the charger to a standard wall AC socket.
- ◆ When the charging animation on the screen stops, the charging is completed. The charging takes usually up to 2~3 hours. During charging, it is a normal phenomenon that the battery, phone and charger may get hot.
- ◆ After the completion of charging, disconnect the charger from the phone and AC socket.



Power on/ off Your Phone

Please hold End key to power on/off the phone. The phone will automatically search for the network.

Besides sending and receiving calls in standby mode, you can also do:

- Press Left select key/OK key to enter Main menu.
- Press Right select key to enter **Contacts**.
- Press Up key to enter **Profile** menu.
- Press Down key to enter write message.
- Press Left key to enter **Games** menu.
- Press Right key to listen to the radio.
- Press Send key to enter all **recent** calls list.

- Hold # key to enable/disable vibration.
- Hold * key to lock the keypad in manual way.

Note: To “press” key in this manual means to press the key and release it. To “hold” key means to keep pressing the key for two seconds or more.

Make and Answer a Call

➤ *Make a call*

- Enter the phone number
- Press Send key to make the call.
- Press End key to end the call.

➤ *Answer a call*

- Press Send key to answer the call.
- Press End key to end the **call**.

Menu Tree

1. Contacts

- 1.1 Add Name
- 1.2 All List
- 1.3 Groups
- 1.4 Speed Dials
- 1.5 Memory Status

2. Messages

- 2.1 New Message
- 2.2 Inbox
- 2.3 Drafts
- 2.4 Outbox I
- 2.5 Sent
- 2.6 Message Settings
- 2.7 Message Template
- 2.8 Delete Message
- 2.9 Memory Status

3. Call History

3.1 Call History

3.2 Call Duration

4. Settings

- 4.1 Display Settings
- 4.2 Phone Settings
- 4.3 Call Settings
- 4.4 Time & Date Settings
- 4.5 Security Settings

5. Profile

- 5.1 Silent
- 5.2 Vibrate
- 5.3 General
- 5.4 Outdoor
- 5.5 Meeting
- 5.6 Headset
- 5.7 Flight

6. Magic Box

- 6.1 Alarm
- 6.2 Calendar
- 6.3 Calculator
- 6.4 Voice Recorder
- 6.5 Unit Converter
- 6.6 World Time
- 6.7 Stopwatch
- 6.8 Notepad

7. Games

- 7.1 Crazydiver
- 7.2 ClusterFruits

8. UTK

9. Radio

Text Input

Your phone offers text input modes: Multitap Input (**Abc/abc/ABC**), eHiText Input(**eng**), Numbers Input (**123**) and Symbol Input (**Symbols**).

Operation	Method
Input Letters	Multitap Input—"Abc/abc/ABC" press corresponding letter key till the letter appears.
Input Words	eHiText Input—"eng", press any key once to key in any word.
Input Digits	Numbers Input—"123", press digit key once.
Input Symbol	Symbols Input —Press * key to enter the symbols mode and press corresponding digit key. Or press "1" key till the symbol (common symbols) appears except for Numbers Input mode.
Input Space	Press "0" key, except for being in numbers mode.
Erase	Press Right select key.
Character	
Move cursor left or right	Press Left/Right key.
Move cursor up or down	Press Up/Down key.
Change input mode	Press # key to select another text mode.
Capitalization	Press # key to switch between capitalization and lowercase as "abc/ABC".

Message

1. Select **Messages** in main menu.
2. Select **New Message** or press Down key in standby mode to write and edit message text.
3. Input receiver's phone number in number field. Press right key to input ";", you can input the multi-receivers' phone number, or select phone number directly from **Contacts**. Press OK key to send the message.
4. Or press Left select key to select **Option**, then select **Send** message.
 - Select **Inbox** to view messages received.
 - Select **Outbox** to view the **unsent** messages.
 - Select **Drafts** to view the messages saved as drafts.
 - Select **Sent** to view the sent messages.
 - Select default common templates of words and sentences to edit or send directly in **Message Templates**.
 - Select **Message Settings** to set the messages' functions.

Menu Functions

Hereinafter are brief instructions on menu functions of the phone.

Function	Selection	Description
View all records	Menu→Contacts→All List	View the corresponding records in all lists. Press left/right key to view different group.
View details	Menu→Contacts→All List→Option→View(OK key)	View the details information of the record in the contacts.
Find contact	Menu→Contacts	Input first character(s) and press OK key to search for a phonebook entry.
Add contact	Menu→Contacts→Add Name	Add a new entry in contacts.
Edit	Menu→Contacts→All List→Option→Edit	Modify the contents of record.
Delete	Menu→Contacts→All List→Option→Delete	Delete a record in Contacts.
Delete all	Menu→Contacts→All List→Option→Delete All	Delete all records in phone (no group, family, friend, and colleague, etc.).
Send message to specific number	Menu→Contacts→All List→Option→Send Message	Send the message to the number of the record.
Make a call to specific number	Menu→Contacts→All List→Option→Call	Make a call to the number of the record.
Send name-card to specific number	Menu→Contacts→All List→Option→Send Name Card	Send name-card information the number of the record.
Edit group	Menu→Contacts→Groups	Rename the group name and select the ringer for the group.
Speed dial list	Menu→Contacts→Speed Dials	View the speed dial list. In standby mode, hold the number key to dial the corresponding call.
Memory status	Menu→Contacts→Memory Status	Number of entries saved and maximum number of entries capacity in phone.
Write and send new message	Menu→Messages→New Message	Write and send new SMS to other mobile phones. The message could be sent to multi-receivers.
Read message	Menu→Messages→Inbox/Outbox/Draft/Sent	Read, save, reply, forward, delete the messages in inbox/outbox/draft/Sent.
Message settings	Menu→Messages→Message Settings	SMS setting options (SMS save position, auto delete, bar setting, signature, delivery ack, message priority, etc.).
Templates message	Menu→Messages→Message Templates	Some common used messages preformatted in phone.
Call history	Menu→Call History→Call History→All Calls/Missed /Answered Calls/Received/ Dialed Calls	View and dial recent calls.
Call timer	Menu→Call History→Call Duration	View and reset call duration of Calls.
Delete all	Menu→Call History→Call History→Option→Clear List	Delete all lists in call history.
Tone/volume	Menu→Profile→Vibrate/Silent/General/Outdoor/Meeting/Headset→Profile	Set phone's ring/SMS/earpiece/key beep/alert/power on/power off etc. tone and volume

	Settings	
Wall paper set	Menu→Settings→Display Settings→Screen Settings→Wallpaper Settings	Set wall papers as background in idle state.
Backlight	Menu→Settings→Display Settings→Screen Settings→Backlight Time	Set backlight duration.
Brightness	Menu→Settings→Display Settings→Screen Settings→Brightness	Adjust Brightness.
Keypad light	Menu→Settings→Display Settings→Keypad Light Settings	Set keypad and time.
Banner	Menu→Settings→Display Settings→Banner	Set greeting banner.
Idle format	Menu→Settings→Display Settings→Theme Settings	Set the main menu type.
Call forwarding	Menu→Settings→Call Settings→Call Settings→Call Forwarding	Forward an incoming call to a designated number.
Call waiting	Menu→Settings→Call Settings→Call Settings→Call Waiting	Answer the second call, hold the first call.
Any key answer	Menu→Settings→Call Settings→Answer Settings→Any Key	Press any key to answer a call except for End key, Left /Right select key.
Auto answer	Menu→Settings→Call Settings→Answer Settings→Headset Auto Answer	Auto answer via earpiece. Answer incoming call automatically when connecting with an earphone.
Voice privacy	Menu→Settings→Call Settings→Voice Privacy	Set voice encryption.
Call connect alert	Menu→Settings→Call Settings→Call Settings→Call Connection Reminder	The phone alert when a call is connected.
Remind alert	Menu→Settings→Call Settings →Call Information Reminder	Set if the phone alert for reminding minute, missed call.
Fire Proof	Menu→Settings→Call Settings→Black List	Restrict calls in list.
Language	Menu→Settings→Phone Settings→Language	Select language available.
Shortcut	Menu→Settings→Phone Settings→Shortcut	Set default function for the scroll key.
Auto key guard	Menu→Settings→Phone Settings→Auto Keypad Lock	Set phone's auto key lock and time.
Auto power on/off	Menu→Settings→Phone Settings→Auto power on/off	Set auto power on/off.
Version	Menu→Settings→Phone Settings→Version Info.	View present preferred roaming list, software and hardware version.
Time format	Menu→Settings→Time & Date Settings→Time Format	Set format of time.
Date format	Menu→Settings→Time & Date Settings→Date Format	Set format of date.
PIN lock	Menu→Settings→Security Settings→Use/Change PIN Code	Set or change the PIN lock.

Handset lock	Menu→Settings→Security→Use/Change Phone Code	Set or change the handset lock.
Menu lock	Menu→Settings→Security Settings→Use/Change Menu Lock(Code)	Set or change the menu lock.
Delete names	Menu→Settings→Security Settings→Reset→Clear All Names	Delete all the record in Names.
Restore settings	Menu→Settings→Security Settings→Restore Factory Settings	Restore factory default (ring tone, backlight, language, settings, etc. except for SMS, names, call history).
Clear data	Menu→Settings→Security Settings→Clear User Data	Restore factory default and delete all the records of user data.
Alarm clock	Menu→Magic Box→Alarm	Set alarm alert time.
Calendar	Menu→Calendar	View calendar.
Calculator	Menu→Magic Box→Calculator	Execute basic math calculation.
Voice memo	Menu→Magic Box→Voice Recorder	Make a voice record
Unit convert	Menu→Organizer→Unit Conversion	Unit convert
Stopwatch	Menu→Magic Box→Stopwatch	Stopwatch timing.
World time	Menu→Magic Box→World time	Check the world time.
Notepad	Menu→Magic Box→Notepad	Write and edit note.
Radio	Menu→Radio	Set and utilize radio Functions
Games	Menu→Games	Play games
UTK menu	Menu→UTK	Enjoy services which are available to the subscribers.

Phone & Menu Lock

Phone and menu lock could prevent your phone from illegal use. The default phone code is 0000, and the default menu code is 000000. Please change it to your own as soon as possible.

Note: Please remember the code; otherwise some service expense may happen.

PIN Code and PUK Code

PIN Code: PIN code could prevent your UIM card from illegal use. When PIN lock is on, you should enter the PIN code when opening the handset again.

PUK Code: Consecutive inputting wrong PIN code for specific times can cause locking of UIM card. To unlock, you need PUK code.

Note:

PIN code and PUK code may be offered together with the UIM card. If not, please contact with network operator.

The limitation times for consecutive wrong code may vary with different UIM card.

Please change default PIN code to your own as soon as possible.

Warning and Maintenance

- Keep the phone out of the reach of little children. The phone may cause injury if used as a toy.
- Please use original accessories or accessories that are authorized by the manufacturer.
- Please keep the phone dry and store in shady and cool place.
- Do not expose your mobile phone to direct sunlight or store it in hot areas. High temperatures can shorten the life of electronic devices.
- Prevent liquid from seeping into your phone.
- Do not drop or harshly treat the phone. Rough handling can break internal circuit boards.
- Do not connect the phone with other unauthorized peripheral equipments.
- Do not attempt to dismantle the mobile phone and battery by yourself.

- Power off your phone before you clean the phone. Please use clean fabric that is anti-static to clean your phone.
- As your mobile phone can produce electromagnetic field, do not use the phone near electrical appliances.
- Do not charge the mobile phone without battery.
- Beware of the usage limitation when using a mobile phone at places such as oil warehouses or chemical factories.
- The user is cautioned that changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Warranty Terms

The warranty does not apply to defects or errors in the product caused by:

- (a) Reasonable abrasion.
- (b) Misuse including mishandling, physical damage, improper installation, unauthorized disassembly of the product.
- (c) Water or any other liquid damage.
- (d) Any unauthorized repair or modification.
- (e) Power surges, lightning damage, fire, flood or other events outside ZTE's reasonable control.
- (f) Use of the product with any unauthorized third party products such as generic chargers.
- (g) Any other cause beyond the range of normal usage for products.

End User shall have no right to reject, return, or receive a refund for any product from ZTE under the above-mentioned situations.

This warranty is end user's sole remedy and ZTE's sole liability for defective or nonconforming items, and is in lieu of all other warranties, expressed, implied or statutory, including but not limited to the implied warranties of merchantability and fitness for a particular purpose, unless otherwise required under the mandatory provisions of the law.

Limitation of Liability

ZTE shall not be liable for any loss of profits or indirect, special, incidental or consequential damages resulting from or arising out of or in connection with using this product, whether or not ZTE had been advised, knew or should have known the possibility of such damages.

Radio Frequency (RF) Energy

- This model device meets the government's requirements for exposure to radio waves.
- This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.
- The exposure standard for wireless devices employs a unit of measurement known as the Specific Absorption Rate or SAR. The SAR limit set by the FCC is 1.6W/kg.

*Tests for SAR are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

- The highest SAR value for the model device as reported to the FCC when worn on the body, as described in this

user guide, is 1.44W/kg. (Body-worn measurements differ among device models, depending upon available enhancements and FCC requirements.)

- While there may be differences between the SAR levels of various devices and at various positions, they all meet the government requirement.
- The FCC has granted an Equipment Authorization for this model device with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model device is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on:
- FCC ID: Q78-ZTECS300.
- For body worn operation, this modem has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and positions the handset a minimum of 1.5 cm from the body. Use of other enhancements may not ensure compliance with FCC RF exposure guidelines.

FCC Compliance

- This device complies with part 15 of the FCC rules. Operation is subject to the condition that this device does not cause harmful interference.
- This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - ▶ Reorient or relocate the receiving antenna.
 - ▶ Increase the separation between the equipment and receiver.
 - ▶ Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
 - ▶ Consult the dealer or an experienced radio/TV technician for help.

- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.