 


Main Display



1. Network Signal
2. Battery Level Indication
3. Icons Indicating Related Functions
4. Icons Indicating Related Functions
5. Time
6. Date

Navigation Up key	Standby Mode: Press to enter main menu Operating: Press to move cursor up
Navigation Down key	Standby Mode: Press to enter phonebook Operating: Press to move cursor down
# key	Standby Mode: Long press to call set phone number directly, short press to type in # Editing mode, Press to switch typing method
* key	Standby Mode: Long press to call the set number directly, Short press to type in *, P, + Msg Editing Mode: Press to use normal symbol
Aid Volume Key	Press to add up volume directly at what you set level during calling and in handsfree mode
Volume Key	Press volume key + to increase volume and press volume key - to decrease sound (It is available to use during calling, radio and volume adjusting.)
FM Key	Push up to open FM; Push down to close it
Torch Key	Push up to open torch; Push down to close it
Keypad Lock	Push up to unlock keypad and push down to lock keypad
Emergency Call	Emergency Call is on: Long press SOS button to dial emergency call out. Emergency Call is off: Long press SOS button, it will prompt out a message Reopened? Then press answer key to set it on, press end key to keep it off.

Make a Call

- To press * key for twice and sign"+ "will come out, then enter country code, area code and phone number or fixed line, and press answer key to make a call.
- To type in a P symbol between telephone exchange number and extension number, this phone will dial the extension number automatically.
- To short press * key for three times, then it will display a P symbol on screen.
- To press Send key to receive incoming call or press end key to reject incoming call or end a call.
- To long press number key 2 to 9 and #,* key to speed dial set numbers out under standby mode if you already set the speed dial numbers, Long pressing number key 1 is to dial to voice mailbox if you already set the mailbox number.
- This phone supports conference call function and supports 3parties (three parties on two connection path). This function requires network support.
- To press volume key+,- to adjust volume during the call. You also can use Aid Volume Key to set volume level as you like.

Message

- on screen means there is a new message and on screen means mail box is full.
- To press "# " key to switch or press answer key to enter option menu to switch input method.
- To select SMS New message to type a new message, then press answer key to save it or send it out or clear it.
- To press answer key to read message directly. To press end key to exit if you want to read it later.
- Inbox shows all your messages got, outbox shows all your messages sent out if you saved, draft box shows all your messages saved, Templates shows 5 pre-edited messages and you may edit them, and voice mail is a kind of network service. you must apply for the service before using it.
- Emergency message: Please edit this message depends on yourself. it will be send out automatically at status of emergency calling.
- Delete Message: You can delete MSG with this function, including messages of inbox, outbox, draft, all msgs.

- To select Settings Settings Disp Contrast to adjust the brightness of the screen. Press navigation key up for high contrast while down for low contrast.
- To select Settings Settings Language to set language for phone.
- To select Settings Settings Date&Time setting to set the time, date and date format.
- To select Settings Network setting to set call waiting, call transfer, call restrict or network select etc.

PIN: this phone supports PIN code function.

Birthday reminder

- To select Settings Birthday reminder to set or check some birthday reminder date.
- To select Settings Settings Ringtone type Birthday reminder to set the ringtone for birthday reminder.

Calculator

- To select Settings Calculator to the screen of calculator.
- To press navigation key up/down to choose the operation symbol like +,-, x, ÷, = and press answer key to confirm it.
- To press end key to clear all input information during using calculator and to exit calculator function while "0" shows in the display.

Alarm

- To select Settings Alarm to set alarm on or off. If set it on, you can input alarm time first and press answer key to confirm it. You may choose to press navigation key up/down or to input numeral directly to input alarm time.
- To select Settings Settings Ringtone type Alarm ring to set the ringtone for alarm.

Reset factory

- To select Settings Reset factory Reset all to clear all personal information and reset your phone to default factory setting.
- To select Settings Reset factory Reset setting to reset your phone setting to default factory setting.

Icons on Screen

▲ Icons might be displayed on screen.

	Battery status		Keypad Lock
	Signal status		Headset
	Alarm		Lock keypad
	Unread message		New msg indication at keypad lock mode
	Message Full		Missed call indication at keypad lock mode
	Call transfer		Missed call
	Missed call		New msg and missed call indication at keypad lock mode
	Silent mode		
	Roaming		

Key Functions

Key	Functions
Answer Key (Green key)	Press to call out Press to pick up phone when there is an incoming call Standby Mode: Press to enter call list Operating: Press to confirm the function you choose
End Key (Red Key)	Phone Off: Long press to switch on Phone On: Long press to switch off Operating: Press to go back to previous menu, long press to go back to standby screen Long press it at emergency call status to go back to standby screen

Aid Volume Key

To long press this key to increase the volume at your set volume level during calling or FM listening status.

How to set the aid volume level:

1. To press navigation up key Main menu Settings Settings Volume adjust Aid volume to set the aid volume level.
2. To press up key or volume key + to increase volume and press down key or volume key - to decrease volume.
3. To press answer key to save the set volume.

Voice Dial

Dial out: Enter area code and phone number and press answer key to dial out. Use End key to delete if there is wrong input. To press and hold End key to clear all characters.

Emergency Dial

- To select Phone Book Emergency number Status to set emergency dialing status as ON or OFF.
- When emergency call is set OFF: To press SOS button at phone back side, it will prompt a message on phone screen: Reopened? then press answer key to set it on.
- When emergency call is set ON: To long press SOS button at phone back side to dial the emergency number if you already set it. Phone will send a message to your emergency contacts first and call them one by one. If previous number is failed to connect, it will call next number automatically. There will be 3 calling cycles.
- Phone will send out alerting sound when it is sending message and calling to set emergency numbers.
- Phone will be in emergency mode within one hour if all your emergency persons don't get your call after 3 calling cycles. In this case, phone will pick up the first incoming call and activate handsfree mode automatically. After that, phone will return to normal status.
- Phone will call to local emergency number such as 112 if you don't set the emergency number in advance or SIM card isn't inserted.
- Long pressing SOS button at any condition will let phone return to standby mode automatically. Long pressing the button will not activate the emergency call during Keypad lock mode.

Call History

● To push answer key to check call history under standby state. Dialed call shows all your calls out, Received call shows all your incoming calls and Missed call shows all your incoming calls didn't pick up. 20 numbers could be shows for each call history.

Phone Book

- You can save the name and phone number of contact to the phone memory and SIM card. Means the number saves in phone memory and in SIM card.
- New contacts: To select Phone Book New contact to add new phone number record, To select Phone book Settings Store path to choose saving position, and To press #key to switch typing methods during adding record.
- To select Phone book Search to scan all contacts and to select Phone book search contact to search by typing the name or the first/last three numbers of phone number you want.
- Emergency number: 4 emergency phone numbers maximally can be added by selecting phone book Emergency number new.
- To select Phone book Spd. Dial to set speed dials for 2 to 9, *, #. Long press 2 to 9, *, # under standby state to dial the related number directly.
- To select menu Phone Book Delete contact delete or delete all to delete the contact information in phone or SIM card.
- To Select Phone Book Copy contact To phone or SIM directly to copy the contact you want to phone memory or SIM card.

Settings

- To select Settings Silent mode to set your phone as silent mode or not. You can define the duration of silent mode (unit per hour). The silent mode will switch automatically to normal mode if time duration is expire. ("0" is for permanent silent mode).
- To select Settings Settings Ringtone type to set desired ring tone for Incoming call, Power on/off, Message alert tone and Key tone etc..
- To select Settings Settings Volume adjust to adjust volume for Call, Incoming call and Aid and press navigation key up or volume key "+" is for increasing volume while down or volume key "-" for decreasing.

Radio

- To push the FM key up on the left of phone to turn radio on and to push FM key down to turn it off under standby mode, to press answer key to start to enjoy radio and press end key to stop enjoy radio.
- To press navigation up/down or input channel number directly to set the channel, then press answer key to move cursor or confirm the channel to start to enjoy radio.
- To press "" key during radio page to start to auto search, to press answer key to continue searching and to press end key to exit from auto search and enjoy the channel just searched.
- To long press "#" key to lock pad and long press it again to unlock.
- To press volume key "+" or "-" to adjust radio volume.
- To long press volume "+" key to listen to FM from outside and long press volume "-" key to listen from earphone while earphone plugged in.

Input Method

- To press "#" to switch the input methods between Multitap, Smart English, Numeral input methods.
- Multitap Input Method: To press number key 2 to 9 to input the corresponding letter. Press the key continuously to choose the correct letter you want.
- Smart English input method: To press number key 2 to 9 to input corresponding letter according to character order of the word you want, some words based on the character orders come up automatically and press navigation key up/down to choose the correct word you want, To press "" key to switch capital letter and small letter under smart English input mode.
- You cannot input a blank by pressing 0 key under smart English input method mode.
- Numeral input method: To press the main numeral key to input the numeral you want.
- Punctuation input method: To press * to enter into punctuation selection list under any input method mode. To press by numeral key 2,8,4 and 6 to move the cursor up/down/left/right, To press numeral key 5 or answer key to get the selected punctuation.