

# **MF613 3G Wireless Router**

## **Fixed Wireless Adapter**

### **User Manual**

ZTE CORPORATION  
ZTE Plaza, Keji Road South,  
Hi-Tech Industrial Park,  
Nanshan District, Shenzhen,  
P. R. China  
518057  
Tel: (86) 755 26779999  
URL: <http://www.zte.com.cn>  
E-mail: [mobile@zte.com.cn](mailto:mobile@zte.com.cn)

## **LEGAL INFORMATION**

Copyright © 2008 ZTE CORPORATION.

All rights reserved.

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice.

Version No. : R1.3

Edition Time : 090619

Manual No. :

# WELCOME

Thank you for choosing the ZTE MF613 Wireless Router (hereinafter referred to as "router"). The Wireless Router comprises two parts, one is a MF613 Fixed Wireless Adapter, and the other is a USB modem. The router supports Voice and Internet service, and offers you the connection to the Internet with LAN or WLAN.



## Notes:

**When you only buy the MF613 Fixed Wireless Adapter, if you want to enjoy the Voice and Internet service, you must prepare a USB modem which supports voice and internet service.**

To get the most from your router and to keep it in the best condition please read this manual carefully.

The pictures, symbols and contents in this manual are for reference only. They might not be completely identical with your router. ZTE operates a policy of continuous development. We reserve the right to update the technical specifications in this document at any time without prior notice.



# Glossary

- AC: Alternating Current
- APN: Access Point Name
- DC: Direct Current
- DHCP: Dynamic Host Control Protocol
- DNS: Domain Name System (or Service or Server)
- DoS: Denial of Service
- EDGE: Enhanced Data GSM Evolution
- ESSID: Expanded Service Set Identifier
- Ethernet: A frame-based computer networking technology for local area networks (LANs)
- GSM: Global System for Mobile Communications
- GPRS: General Packet Radio Service
- HSDPA: High Speed Downlink Packet Access
- HSUPA: High Speed Uplink Packet Access
- IP: Internet Protocol
- LAN: Local Area Network
- LED: Light - emitting Diode
- MHz: Megahertz
- MTU: Maximum Transmission Unit
- PDP: Packet Data Protocol
- PIN: Personal Identification Number
- PPP: Point to Point Protocol
- PSTN: Public Switched Telephony Network
- PUK: PIN Unlocking Key
- RSSI: Radio Signal Strength Indicator
- RF: Radio Frequency
- SIP: Session Initiated Protocol
- UPnP: Universal Plug and Play
- (U)SIM: Subscriber Identification Module
- VOIP: Voice over Internet Protocol
- WCDMA: Wideband CDMA (Code-Division Multiple Access)
- WEP: Wired Equivalent Privacy
- WLAN: Wireless LAN

- WPA-PSK: Wi-Fi Protected Access–PreShared Key

# Contents

WELCOME .....	3
Glossary .....	5
Contents .....	7
General Information .....	8
Safety Precautions .....	8
Cleaning and Maintaining .....	8
Limited Warranty .....	8
Limitation of Liability .....	9
Emergency Call .....	9
Getting started .....	10
Parts Supplied .....	10
Appearance .....	10
LED Indicator .....	10
Interface Description .....	11
Installation .....	12
Inserting the (U)SIM Card .....	12
Inserting the modem .....	12
Connecting phone .....	13
Connecting computer .....	13
Connecting the external power .....	13
Switching on your device .....	13
Power supply .....	14
About (U)SIM card .....	14
Notes on Service and Coverage .....	14
Voice Calls .....	15
Making a Call .....	15
Answering the Call .....	15
Internet Access .....	16
Preparation .....	16
Settings .....	16
Login .....	16
Quick Setup .....	17
WAN Connection .....	20
3G Settings .....	20
Router .....	22
Wi-Fi Settings .....	23
Firewall .....	29
Advanced .....	32
Logout .....	35
Disconnecting from the Internet .....	35
Troubleshooting .....	37
Technical Parameters .....	38

# Chapter 1

## General Information

### Safety Precautions

- Some electronic devices may be susceptible to electromagnetic interference. Locate the router away from TV set, radio and other electronic equipment to avoid electromagnetic interference.
- The router may interfere with medical devices like hearing aides and pacemakers. Consult a physician or the manufacturer of the medical device before using the router.
- Do not use your router in dangerous environments such as oil terminals or chemical factories where there are explosive gases or explosive products being processed.
- Please use original accessories or accessories that are authorized by ZTE. Unauthorized accessories may affect the router performance, damage the router or cause danger to you.
- Do not attempt to dismantle the router. There are no user serviceable parts.
- Do not allow the router or accessories to come into contact with liquid or moisture at any time. Do not immerse the router in any liquid.
- Do not place objects on top of the router. This may lead to overheating of the device.
- The device must be placed in ventilation environment for use.
- Do not expose the router to direct sunlight or store it in hot areas. High temperature can shorten the life of electronic devices.
- Do not allow children to play with the router or charger.
- Keep the length of the cable between the router and the phone less than 10 meters.
- The router is for indoor use only. Do not use the router outside. Do not connect telephone extensions which run outside of the building. These can result in lightning damage to your unit.

### Cleaning and Maintaining

- Use an antistatic cloth to clean the router. Do not use chemical or abrasive cleanser as these could damage the plastic case. Turn off your router before you clean it.
- Use the router within the temperature range of  $-10^{\circ}\text{C} \sim +55^{\circ}\text{C}$ , and the storage temperature range is  $-20^{\circ}\text{C} \sim +65^{\circ}\text{C}$ . The humidity range is 5%~95%.
- Do not use your router during a thunderstorm. Remove the mains power pack from the wall socket.
- Do not take out your (U)SIM card unnecessarily. The (U)SIM card may be easily lost or it can be damaged by static electricity.

### Limited Warranty

- This warranty does not apply to defects or errors in the Product caused by:
  - i. Reasonable Router Appearance Disfiguration.



- ii. End User's failure to follow ZTE's installation, operation or maintenance instructions or procedures.
  - iii. End User's mishandling, misuse, negligence, or improper installation, disassemble, storage, servicing or operation of the Product.
  - iv. Modifications or repairs not made by ZTE or a ZTE-certified individual.
  - v. Power failures, surges, fire, flood, accident, actions of third parties or other events outside ZTE's reasonable control.
  - vi. Usage of products of third Parties, or usage in conjunction with third party products provided that such defects is due to the combined usage.
  - vii. Any other cause beyond the range of normal usage for Products. End User shall have no right to reject, return, or receive a refund for any Product from ZTE under the above-mentioned situations.
- This warranty is end user's sole remedy and ZTE's sole liability for defective or nonconforming items, and is in lieu of all other warranties, expressed, implied or statutory, including but not limited to the implied warranties of merchantability and fitness for a particular purpose, unless otherwise required under the mandatory provisions of the law.

## Limitation of Liability

ZTE shall not be liable for any loss of profits or indirect, special, incidental or consequential damages resulting from or arising out of or in connection with using of this product, whether or not ZTE had been advised, knew or should have known of the possibility of such damages, including, but not limited to lost profits, interruption of business, cost of capital, cost of substitute facilities or product, or any downtime cost.

## Emergency Call

Do not rely on the 3G Wireless Router to provide emergency call in all situations.

Your 3G Wireless Router only supports emergency dialing when there is power and connection to the mobile network. If the power fails, the router can not work. If you have no network coverage you will not be able to make emergency calls. The 3G Wireless Router does not include a lifeline facility (wired access to the PSTN).

# Chapter 2

## Getting started


The router operates on the HSUPA/HSDPA/UMTS network and GSM/GPRS/ EDGE network and supports voice and data service.

### Parts Supplied

Parts	Quantity
3G Wireless Router	1
*USB Modem	1
External power adapter	1
User manual	1
Certificate of quality	1

\*In this manual, the USB Modem is produced by ZTE.


### Appearance

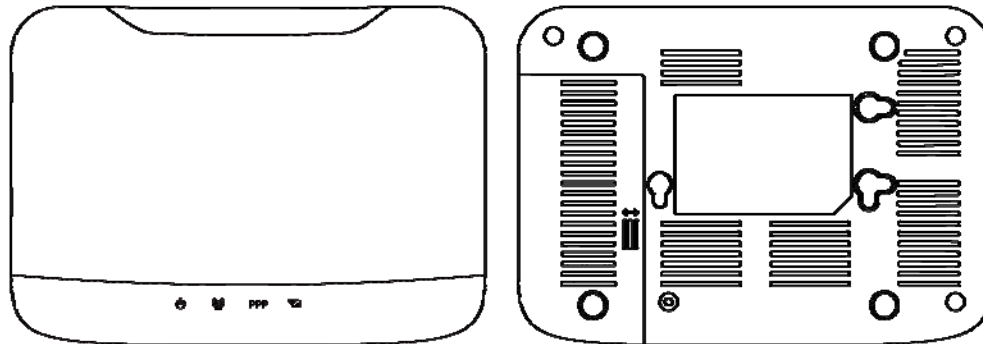

Top View

Bottom View

### LED Indicator

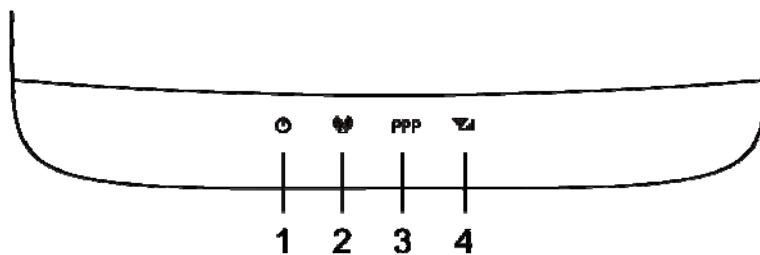

LED Indicators

Indicator	State	Description
1. PWR	ON	External power supply works normally.
	OFF	External power supply is disconnected or power off.
2. Wi-Fi	ON	Wi-Fi works normally.
	Blinking	Data transmission
	OFF	Wi-Fi works abnormally.
3. PPP	ON	Internet connected
	Blinking	The router attempts to connect Internet.
	OFF	Internet disconnected and not attempt to connect.
4. RSSI	ON	RF signal is normal. Different color indicates different network. Red: GSM/GPRS/EDGE Yellow: UMTS Green: HSDPA/HSUPA
	Blinking	RF signal is poor.
	OFF	RF signal is not available.


NOTE

**Notes:**

The indicators (including PPP and RSSI) are all blinking in green when:

- The (U)SIM card has not been installed.
- The PIN code or PUK code is required.
- The router can not work normally.

## Interface Description

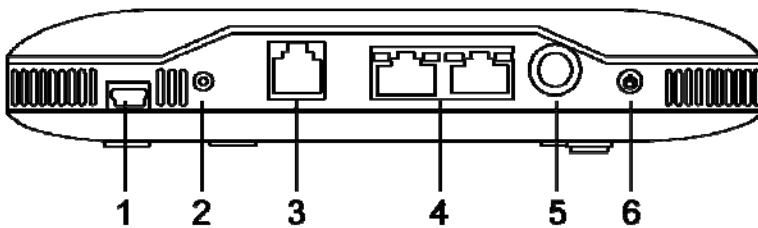

**Rear View of Router**

1. **USB:** Test and diagnostic interface for factory use only.
2. **WPS:** WPS button is used to start Wi-Fi Protected Setup authentication process.
3. **PHONE:** Standard RJ11 connector for Telephone.
4. **LAN 1~ LAN 2:** Ethernet connections to computer.
5. **POWER Socket:** Connection to the external power supply.

6. **POWER Switch:** Turn the router ON or OFF. Hold on for several seconds to restore the factory default settings.

## Installation

This section will show you how to install the hardware.

### Inserting the (U)SIM Card

Insert the (U)SIM card into the modem(supplied by ZTE).

1. Take down the modem cap, and then the USB connector is visible.
2. Pull the plastic socket above the USB connector out.



#### Notes:

**Do not pull the (U)SIM socket rudely for the socket is fixed with the modem. Otherwise the socket will get damaged.**

3. Insert the (U)SIM card into the socket, and make sure that metal contact area facing to the modem.




4. Insert the plastic socket into the modem. You can hear a click when the (U)SIM card socket locks into place.


### Inserting the modem

Insert the modem into the router.

1. Slide the back cover and remove it.

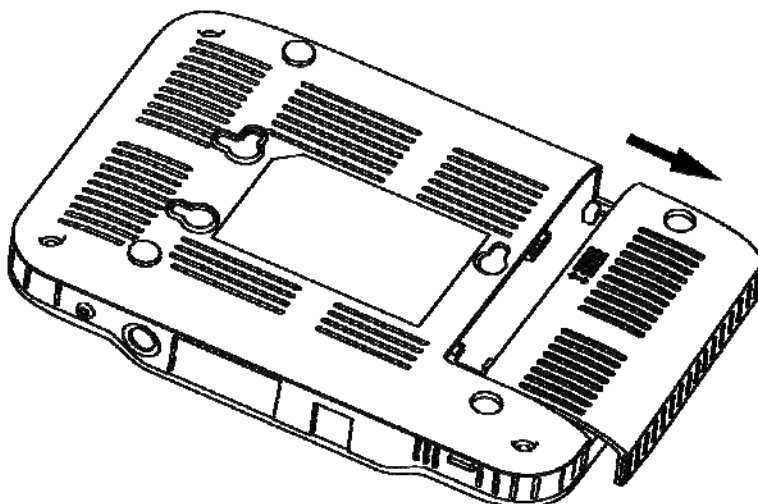

2. Plug the USB connector into the USB port.

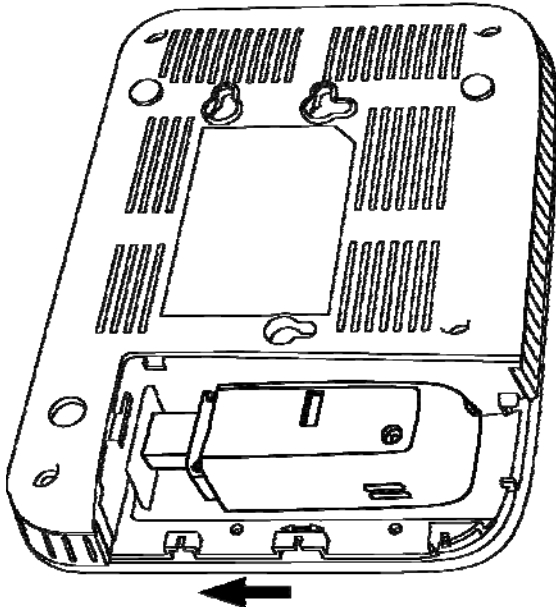

3. Close the back cover.

**Warning:**

Please power off the router and remove the external power adapter before removing or inserting the modem, if not, the router or modem may be damaged.

## Connecting phone

Connect the telephone to the PHONE interface using phone cable(RJ11).

## Connecting computer

Connect your computer to the LAN interface using the Ethernet cable (RJ45).

**Notes:**

The router will adapt the Ethernet cable style (crossover or straight) automatically.

## Connecting the external power

1. Connect the external power adaptor to a standard power outlet.
2. Insert the plug into the socket at the rear of the router.

## Switching on your device

1. Turn the power switch on to get started. Make sure that the phone is on hook before power on.

**Notes:**

Do not put anything on the top of router. Do not lay routers to overlap each other when using.

2. Wait 1~2 minutes after turning the router on before you use the service. The RSSI & PWR indicator should be lit on.

**Notes:**

When the router is turned off, an incoming caller will hear the prompt like “The number you have dialed is currently unavailable.”

If the RSSI (Radio Signal Strength Indicator) LED is blinking constantly then try moving the router to another location. The router takes 1~2 minutes to initialize, attach to the network and obtain an IP address.

## **Power supply**

For normal operation connect the router to the external power adapter. In case of power failure or when there is no available external power supply, the router can not work.

## **About (U)SIM card**

Avoid handling the (U)SIM card unnecessarily. Hold the card by the edges to prevent static damage. Keep the (U)SIM card away from electrical and magnetic appliances.

## **Notes on Service and Coverage**

If you cannot get service, make sure that:

- You are in an area which has sufficient network coverage.
- You are using the correct (U)SIM card.
- If necessary you need enter your PIN or PUK code.
- If the RSSI (Radio Signal Strength Indicator) LED is blinking constantly then try moving the modem to another location.
- Please wait 1-2 minutes for the modem to initialize, attach to the network and obtain an IP address.

# Chapter 3

## Voice Calls

### Making a Call

Before making a call, make sure:

- The (U)SIM card is inserted.
- The modem is inserted properly.
- The telephone cable (RJ11) is connected properly.
- The PWR light is on.
- The RSSI light is on.

To make a call:

1. Pick up the handset.
2. Key in the telephone number.
3. You can either press # key on the telephone to send the call, or wait 4~8 seconds for the call to be connected automatically.
4. Call will be connected.



#### Notes:

**If there is no RSSI indication, the RF signal is unavailable. Change the location of the router and make sure nothing is blocking it.**

### Making a Trunk Call

If you are making a trunk call, add the area code as normal.

E.g. 0396 12345678

### Making an International Call

If you are making an international call, key in the international access code followed by the country code, area code and number.

E.g. 00 11 64 12345678

### Answering the Call

When the phone rings, pick up the handset to answer it. If the telephone has hands-free function you can answer the call by pressing the **Hands-free** button. Press the hands-free button again to end the call.

# Chapter 4

## Internet Access

The router does not require any drivers, and it supports all operating systems with Ethernet LAN capability, such as Windows 2000, XP, Vista, MAC OS X and Linux. The router supports two computers surfing on internet using Ethernet cable at the same time, and also supports Wireless LAN connection.



### Notes:

**All the parameter settings in this chapter are just for your reference. Please contact your service provider for detail.**

## Preparation

Before using the data service, make sure:

- The (U)SIM card is installed into the modem.
- The modem is inserted into the router.
- The Ethernet cable is connected properly.
- The PWR light is on.
- The RSSI light is on.
- The PPP light is on.

### Web browser requirement:

It is suggested that you use one of these web browsers to connect to the internet.

- IE 6.0 or above
- Firefox 2.0
- Netscape version 9.0

## Settings

Do not change any settings unless instructed by your service provider. To make changes to your settings you need to disconnect the router from the network. After making changes reboot your router by turn off and on again.

## Login

The router can be connected by RJ45 or by Wi-Fi (the SSID is “ZTE Wireless Network”). By either connection mode, you should set to obtain an IP address automatically in the attribution setting of Internet protocol(TCP/IP).

After your computer gets the IP address (like 192.168.0.101) from the router, open a web browser and type “http://192.168.0.1” in the address bar, and then input the username and password to log in.

**User Name:** admin

**Password:** admin





Welcome to ZTE MF613

goahead  
WEB SERVER™

User Name :

Password :

Save

Login Clear

Copyright ©2009.ZTE. All rights reserved.

Click **Login** to log in the router. Check **Save** to let the Explorer keep the user name and password. When you successfully login, the router status web page appears:



ZTE  
3G Wireless Router  
webGUI Configuration

Router State

- Quick Setup
- WAN Connection
- 3G Settings
- Router
- Wi-Fi Setting
- Firewall
- Advanced
- Logout

EDGE CMCC P C Disconnected

Home

3G Information

Network Provider	CMCC
Network Type	EDGE
Roam	OFF
Domain	CS_PS

WAN Information

PPP Status	Disconnected
IP Address	0.0.0.0
Primary DNS	0.0.0.0
Secondary DNS	0.0.0.0

WLAN Current Status

SSID	ZTE Wireless Network
Channel	6
Security Level	Disable

LAN and WLAN Information

IP Address	192.168.0.1
Subnet Mask	255.255.255.0
Default Gateway	192.168.0.1

Copyright ©2009.ZTE. All rights reserved.

The whole page is divided into two parts. Related functions can be executed by operation in the related areas.

- **Index area:** Show configuration list for your router.
- **Content area:** Show the detail configuration.

## Quick Setup

The **Quick Setup** helps you to quickly set the basic settings of your router. The following sections describe the steps and parameters of **Quick Setup**.

1. Read the guide carefully, and then click **Next**.

## Quick Setup

•The wizard will show you how to set up your gateway in the safe way: Click "Next" to continue, click "Back" and "Next" to navigate, and click "Finish" to save the settings.

Notes:

Basic parameters can be set in this wizard. For advanced parameters, you need to set them in other menus.

Next

## 2. Set the PPP Profile Configuration and then click **Next**.

## Quick Setup--&gt;PPP Profile Configuration

- Profile Name: The default profile that you used currently.
- APN: If a fixed APN(Access Point Name) is given by your ISP, select "Manual APN"; otherwise, select "Auto APN", the gateway automatically obtains it.
- Dial No.:This parameter are provided by your ISP, Dial No. is used for data service connections;

## Profile

Profile Name	<input type="text" value="ZTE"/>
--------------	----------------------------------

## APN

APN Setting	<input type="radio"/> Auto APN <input checked="" type="radio"/> Manual APN
APN	<input type="text" value="cmwap"/>

## Dial Setting

Dial No.	<input type="text" value="*99#"/>
----------	-----------------------------------

Back Next

## 3. Set the PPP Authentication and then chick **Next**.

## Quick Setup--&gt;PPP Authentication

## •PPP Authentication

The authentication mode is provided by your Internet Service Provider(ISP).

Password Authentication Protocol(PAP): It provides a simple method without encryption for the peer to establish its identity using a 2-way handshake.

Challenge-Handshake Authentication Protocol(CHAP): It is used to periodically verify the identity of the peer PPP User Name and PPP Password are provided by your ISP and used to obtain authentication from the ISP when the connection is established.

## PPP Authentication

Authentication	<input type="radio"/> CHAP <input checked="" type="radio"/> PAP
----------------	---

PPP User Name	<input type="text"/>
---------------	----------------------

PPP Password	<input type="text"/>
--------------	----------------------

Back Next

## 4. Set the SSID Configuration and then click **Next**.

## Quick Setup --&gt;SSID Configuration

- Name SSID(Service Set Identifier): Enter a character string up to 32 characters as the name for your wireless local area network(WLAN).
- SSID Broadcast  
Enabled: The gateway broadcasts the SSID and other devices can detect and connect to it.  
Disabled: The gateway disables broadcasting and hides the name of your network.

## SSID

Name(SSID)	ZTE Wireless Network
------------	----------------------

## SSID Broadcast

SSID Broadcast	Enabled ▼
----------------	-----------

Back Next

5. Set the Security Configuration and then click **Next**.

## Quick Setup--&gt;Security Configuration

- Add encryption to your wireless network to prevent unauthorised traffic monitoring and access.  
No Encryption: Your wireless network is open to everyone without authentication and encryption, and this option is not recommended.  
Wireless Equivalent Privacy(WEP): It is a 64-bit or 128-bit encryption method with user configurable fixed keys.  
Wi-Fi Protected Access(WPA): It is a 256-bit encryption method with keys changing automatically.  
WPA2: It is the securer version of WPA with implementation of the 802.11i standard.  
WPA Encryption Algorithm: TKIP, AES, TKIP+AES.  
WPA Pre-Shared Key: Enter the Pre-Shared key as a plain text(ASCII) pass-phrase of at least 8 characters.  
Key Rotation Interval: Specify the key update interval in seconds. Enter 0 to disable the update function.  
Network Key: Enter 5 ASCII characters or 10 hexadecimal digits for a 64-bit key, enter 13 ASCII characters or 26 hexadecimal digits for a 128-bit key.

## Encryption Mode

Encryption Mode	NO ENCRYPTION ▼
-----------------	-----------------

Back Next

6. Show all the configurations and then click **Finish** to complete. If you want to modify, please click **Back**. (The figure is only for your reference as shown below).

Quick Setup-->Configuration as Follows

Profile Name:	ZTE
Dial No.:	*99#
PPP User Name:	
APN Setting:	manual
APN:	cmwap
PPP Authentication:	pap
Name (SSID):	ZTE Wireless Network
SSID Broadcast:	enable
Encryption Mode:	NO ENCRYPTION

Back Apply

## WAN Connection

Click **WAN Connection**, you can configure how to connect to the Internet.

WAN Connection

PPP Connection Mode

<input type="radio"/>	Auto Connect
<input checked="" type="radio"/>	On Demand Connect
	Max Idle Time: <input type="text" value="10"/> minutes
<input type="radio"/>	Manual Connect <input type="text" value="Connect Internet"/> <input type="button" value="v"/>
PPP Connection Status	Disconnected

Apply

There are three connection mode:

- **Auto Connect:** The router will automatically connect to WAN when it is powered on.
- **On Demand Connect:** The connection will be established when data transmission are required.
- **Max Idle Time:** The router will disconnect from the Internet if there are no data transmission for a specific time. The default value is 10 minutes
- **Manual Connect(Default):** Connect to Internet or disconnect from Internet manually.

Click **Apply** to confirm your configuration, and then the PPP connection status will be shown in the figure.

## 3G Settings

### Wireless Info

Select **3G Settings > Wireless Info**, the 3G wireless information is shown in the following figure:

## 3G Settings--&gt;Wireless Info

• Wireless Info • Network Select • APN Setting

## 3G Wireless Information

Network Provider	CMCC
Network Type	EDGE
Roam	OFF
RSSI	-96 dBm
RSCP	-0 dBm
Ec/Io	-0 dB
Cell ID	16231
LAC Code	37333

Refresh

Click **Refresh** to update the wireless information.

**Network Select**

Select **3G Settings > Network Select**, the Band Selection Mode is shown in the following figure:

## 3G Settings--&gt;Network Select

• Wireless Info • Network Select • APN Setting

## Band Selection Mode

<input checked="" type="radio"/>	Automatic
<input type="radio"/>	Only WCDMA
<input type="radio"/>	Only GSM

Apply

- **Automatic:** Router searches for valid network according to the wireless network.
- **Only WCDMA:** Router searches for WCDMA network only.
- **Only GSM:** Router searches for GSM network only.

Click **Apply** to confirm your configuration.

**APN Setting**

Select **3G Settings > APN Setting**, the APN parameters are shown in the following figure:

## 3G Settings--&gt;APN Setting

• Wireless Info • Network Select • APN Setting

## APN Setting

Profile Selection	ZTE ▼
Profile Name	ZTE
APN Setting	<input type="radio"/> Auto APN <input checked="" type="radio"/> Manual APN
APN	cmwap
Dial No.	+99#
PDP Type	<input checked="" type="radio"/> IP <input type="radio"/> PPP
PDP Setting	<input checked="" type="radio"/> Auto PDP <input type="radio"/> Manual PDP
DNS	<input checked="" type="radio"/> Auto DNS <input type="radio"/> Manual DNS
Authentication	<input type="radio"/> CHAP <input checked="" type="radio"/> PAP
User Name	
Password	

Save Set default Add Delete

- **Profile Selection:** Select the profile which you want to use for the internet connection.
- **Profile Name:** The profile which is set as default.
- **APN Setting:** APN address mode. If a fixed APN is given by your service provider, select Manual APN. Otherwise select the Auto APN, and the router will automatically obtain this parameter.
- **APN:** Access Point Name.
- **Dial No.:** This dial number is used for data service connection.
- **PDP Type:** **IP** (Default) or **PPP**.
- **PDP Setting:** PDP address mode. If a fixed IP address is given by your service provider, select Manual PDP. Otherwise select the Auto PDP and the router will automatically obtain this parameter.
- **DNS:** Select **Auto DNS** or **Manual DNS**.
- **Authentication:** Select **CHAP** or **PAP**.
- **User Name:** Set user name for this APN .
- **Password:** Set password for this APN.

To add a new APN profile:

1. Click **Add** to define a new APN profile.
2. Input those parameters as shown above.

**Notes:**

**If you have any problem, please contact with your service provider.**

3. Click **Save** to save this new profile.
4. Click **Set default** to set this profile as default.

## Router

### LAN

Select **Router > LAN**, the LAN parameters are shown in the following figure:

Router-->LAN

•LAN •DHCP Clients

LAN Interface Setup

IP Address	192.168.0.1
Subnet Mask	255.255.255.0
MAC Address	00:1E:73:E6:E3:3D
DHCP Type	Server ▼
DHCP Start IP	192.168.0.100
DHCP End IP	192.168.0.200
DHCP Lease Time	24 hour(s)
UPNP	Disable ▼

Apply Cancel

- **IP Address:** LAN IP address of the router.
- **Subnet Mask:** Subnet mask of the router.
- **MAC Address:** MAC address of the LAN interface.
- **DHCP Type:** The router is set up as a DHCP server, which provides IP address in IP pool range for all the computer connections.
- **DHCP Start IP:** Allocate start IP address for IP pool.
- **DHCP End IP:** Allocate end IP address for IP pool.
- **DHCP Lease Time:** Define how long the leased IP address will be expired.
- **UPNP:** Enable or Disable the Universal Plug and Play function.

Click **Apply** to confirm your configuration.

## DHCP Clients

Select **Router > DHCP Clients**, All of the DHCP clients information will be shown in the following figure.

Router-->DHCP Clients

•LAN •DHCP Clients

00:00:00  
DHCP Clients

Host Name	MAC Address	IP Address	Expires in
PC164682286718	00:24:2B:45:0C:E6	192.168.0.101	1 days


Refresh

## Wi-Fi Settings

### Station list


Select **Wi-Fi Setting > Station List**, All of the wireless network stations information will be shown in the

following figure:

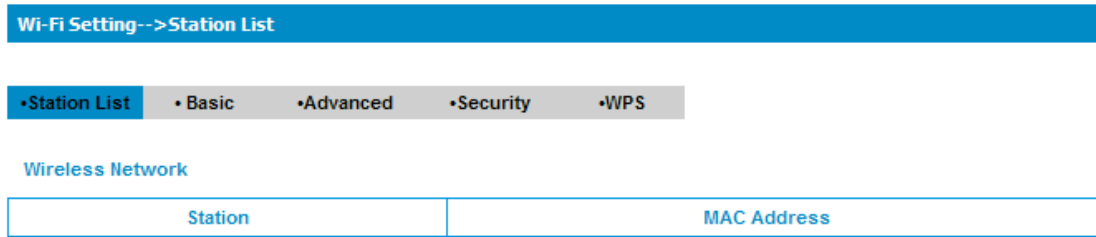

**Basic**

 Select **Wi-Fi Setting > Basic**, the wireless network parameters and WDS mode are shown in the following figure:

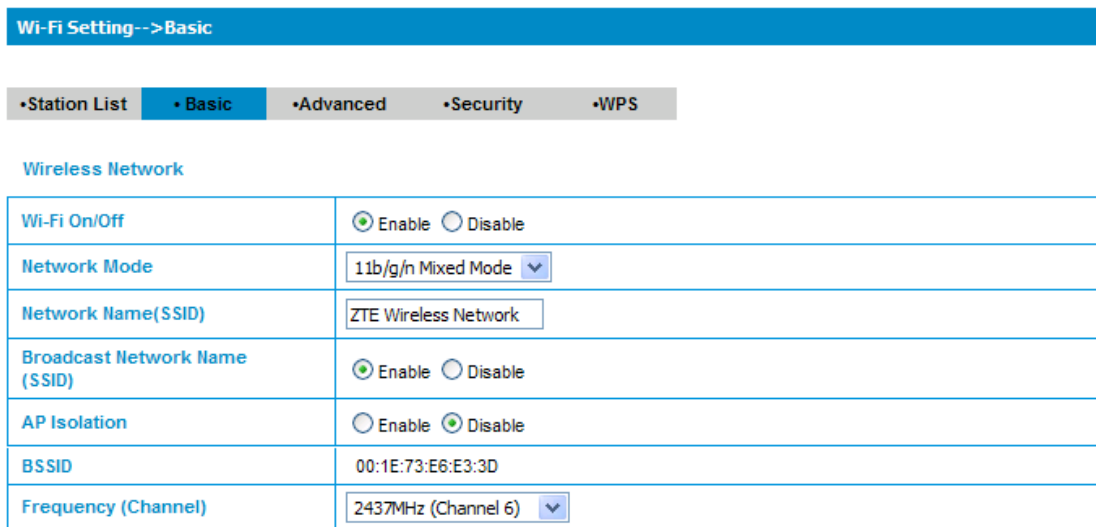

- **Wi-Fi On/Off:** Click this button to set the router **Wi-Fi On** or **Off**.
- **Network Mode:** Including 11b/g Mixed Mode, 11b only, 11g only and 11b/g/n Mixed Mode.
- **Network Name(SSID):** Service Set Identifier. Enter a string less than 32 characters as the name for your wireless local area network(WLAN).
- **Broadcast Network Name(SSID):** Disable or Enable(Default) this function. The router broadcasts the SSID, and other devices can detect and connect to it by selecting Enable. The router disables broadcasting and hides the name of your network by selecting Disable.
- **AP Isolation:** When enable this function, each of your wireless client will not be able to communicate with each other.
- **BSSID:** Show the MAC address of the **Wi-Fi**.
- **Frequency(Channel):** The frequency band in which the WLAN operates. If some channels in your area may have interference from other electronic devices, please choose the clearest channel to optimize the performance and coverage of your wireless network. The default value is 2437MHz(Channel 6).

The Wireless Distribution System allows the router to communicate with other APs wirelessly. To make it work, please make sure that the router and these APs are in the same channel with the same SSID.



## Wireless Distribution System(WDS)

WDS Mode	Repeater Mode ▾
Phy Mode	CCK ▾
EncryptType	NONE ▾
AP MAC Address	<input type="text"/>
AP MAC Address	<input type="text"/>
AP MAC Address	<input type="text"/>
AP MAC Address	<input type="text"/>

- **WDS Mode:** Lazy Mode, Bridge Mode and Repeater Mode are available. The default value is Disable.
- **Phy Mode:** Physical layer transmission mode. CCK, OFDM, HTMIX and GREENFIELD are available.
- **EncryptType:** The encryption type including NONE, WEP, TKIP or AES. If you select **NONE**, any data will be transmitted without encryption and any station can access the router.
- **AP MAC Address:** For WDS Mode of Bridge Mode and Repeater Mode, you have to fill in the other AP MAC address.

The HT physical Mode parameters are shown in the following figure:

## HT Physical Mode

Operating Mode	<input checked="" type="radio"/> Mixed Mode <input type="radio"/> Green Field
Channel BandWidth	<input type="radio"/> 20 <input checked="" type="radio"/> 20/40
Guard Interval	<input type="radio"/> long <input checked="" type="radio"/> Auto
MCS	Auto ▾
Reverse Direction Grant(RDG)	<input type="radio"/> Disable <input checked="" type="radio"/> Enable
Extension Channel	2457MHz (Channel 10) ▾
Aggregation MSDU(A-MSDU)	<input checked="" type="radio"/> Disable <input type="radio"/> Enable
Auto Block ACK	<input type="radio"/> Disable <input checked="" type="radio"/> Enable
Decline BA Request	<input checked="" type="radio"/> Disable <input type="radio"/> Enable



- **Operating Mode:** Set the HT physical operating mode.
- **Channel Bandwidth:** Set the HT physical channel bandwidth.
- **Guard Interval:** Set the HT physical guard interval.
- **MCS:** Set fix MCS rate for HT rate.
- **Reverse Direction Grant(RDG):**Enable **RDG** or not.
- **Extension Channel:** Set extension channel. The extension channel is also able to send and receive data.
- **Aggregation MSDU(A-MSDU) :** Mark to enable Hyper Throughput TX Aggregate MAC Service Data Unit, and clear by selecting **Disable**.
- **Auto Block ACK:** Block ACK(Acknowledge Number) or not during data transferring.
- **Decline BA Request:** Reject peer BA-Request or not.

Click **Apply** to confirm your configuration.

**Advanced**

Select **Wi-Fi Setting > Advanced**, the advanced wireless network parameters and Wi-Fi multimedia parameters are shown in the following figure:

Wi-Fi Setting-->Advanced

•Station List •Basic •Advanced •Security •WPS

Advanced Wireless

Beacon Interval	<input type="text" value="100"/> ms (range 20 - 999, default 100)
Data Beacon Rate (DTIM)	<input type="text" value="1"/> ms (range 1 - 255, default 1)
Fragment Threshold	<input type="text" value="2346"/> (range 256 - 2346, default 2346)
RTS Threshold	<input type="text" value="2347"/> (range 1 - 2347, default 2347)
TX Power	<input type="text" value="100"/> (range 1 - 100, default 100)
Short Preamble	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Short Slot	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Tx Burst	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Pkt_Aggregate	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
IEEE 802.11H Support	<input type="radio"/> Enable <input checked="" type="radio"/> Disable(only in A band)

Wi-Fi Multimedia

WMM Capable	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
APSD Capable	<input type="radio"/> Enable <input checked="" type="radio"/> Disable

- **Beacon Interval:** The router broadcasts beacon message to announce that it has buffered frames to deliver. The default value is 100 (ms).
- **Data Beacon Rate(DTIM) :**Set the wireless network data beacon rate.
- **Fragment Threshold:** Set the wireless network fragment threshold.
- **RTS Threshold:** Set the wireless network RTS threshold.
- **TX Power:** Set the wireless network TX power.
- **Short Preamble:** Disable short preamble or not.
- **Short Slot:** Enable short slot or not.
- **Tx Burst:** Enable Tx burst or not.
- **Pkt\_Aggregate:** Enable packet aggregation or not.
- **IEEE 802.11H Support:** Support IEEE 802.11H or not.
- **WMM Capable:** Enable Wi-Fi Multimedia(WMM) or not.
- **APSD Capable:** Enable APSD or not.

Click **Apply** to confirm your configuration.

### Security

Select **Wi-Fi Setting > Security**, the Security parameters and Wireless MAC Filtering parameters are

shown in the following figure:

Wi-Fi Setting-->Security

Station List Basic Advanced **Security** WPS

Security Policy

Security Mode	OPEN
Encrypt Type	NO ENCRYPTION

- **Security Mode:** Including **OPEN**, **SHARED**, **WEPAUTO**, **WPA-PSK**, **WPA2-PSK** or **WPA-PSK/WPA2-PSK**.
- **Encrypt Type:** Use WEP Encryption or not.

The Wireless MAC Filtering is used to control the wireless network access.

Wireless MAC Filtering

Add MAC Filtering Rule Wireless Disable

Apply Cancel

- **Add MAC Filtering Rule:** Choose the type of MAC filtering, Wireless Disable, Wireless Allow or Wireless Reject.
- **MAC Address:** Add the MAC addresses to the rule list.

Click **Apply** to confirm.



#### Notes:

- **For Add MAC Filtering Rule of Wireless Allow:** The devices with the MAC address added in the list can communicate with the router. And others can not.
- **For Add MAC Filtering Rule of Wireless Reject:** The devices with the MAC address added in the list can not communicate with the router. And others can.

The security modes are described below:

- **Open:** You can authenticate successfully with a SSID, whether it is valid or empty.
- **SHARED:** The WLAN clients who have the same WEP key with wireless gateway can pass the authentication and access the wireless network.
- **WEPAUTO:** Select WEP security automatically.
- **WPA-PSK:** WPA Pre-Shared Key, Enter the Pre-Shared key as a plain text (ASCII) pass-phrase of at least 8 characters.
- **WPA2-PSK:** It is the securer version of WPA with implementation of the 802.11i standard.
- **WPA-PSK/WPA2-PSK:** Apply both the WPS-PSK and WPA2-PSK scheme.

If the Authentication type is **Shared** or **WEPAUTO**, or you select **Open** and set the **Encrypt Type** as **WEP**, the WEP parameters are shown in the following figure.

Wire Equivalence Protection (WEP)

Default Key		Key 1 ▾	
WEP Keys	WEP Key 1 :	<input type="text"/>	Hex ▾
	WEP Key 2 :	<input type="text"/>	Hex ▾
	WEP Key 3 :	<input type="text"/>	Hex ▾
	WEP Key 4 :	<input type="text"/>	Hex ▾

- **Default Key:** Set the WEP Key as the default.
- **WEP Keys:** At most four keys can be set in the blank. Choose the primary key index. The primary key is the only key in use at a given time. Whatever keys you enter for an access point, you must also enter the same keys for the client adapter in the same order. In other words, WEP key 1 on the AP must match WEP key 1 on the client adapter, WEP key 2 on the AP must match WEP key 2 on the client adapter, etc. A WEP is either 10 or 26 hexadecimal digits (0~9,a~f and A~F)based on whether you select 64 bits 128 bits or 152 bits in the Encryption Strength drop-down list.

If the Authentication type is **WPA-PSK** , **WPA2-PSK** or **WPA-PSK/WPA2-PSK** , the WPA parameters are shown in the following figure.

WPA

WPA Algorithms	<input type="radio"/> TKIP <input type="radio"/> AES <input type="radio"/> AUTO
Pass Phrase	<input type="text" value="12345678"/>
Key Renewal Interval	<input type="text" value="3600"/> seconds

- **WPA Algorithm:** TKIP, AES or AUTO.
- **Pass Phrase:** You can input hexadecimal digits up to 64 characters or input ASCII characters choose a length of 63 characters or less.
- **Key Renewal Interval:** Define how long the key should be renewed.

Click **Apply** to confirm your configuration.

WPS

Select **Wi-Fi Setting > WPS**, the WPS page shown in the following figure:

Wi-Fi Setting-->WPS

Station List Basic Advanced Security **WPS**

WPS Config

WPS  ▾

Apply

**WPS:** This function is to simplify the security setup of Wi-Fi networks. This Router supports the configuration setup using PIN configuration method or PBC configuration method.

Select **Enable** , and then click **Apply** to configure the details.

The following figure shows you the current configuration of WPS. Click **Reset OOB** on this page to restore the default value.

## WPS Summary

WPS Current Status	Idle
WPS Configured	No
WPS SSID	ZTE Wireless Network
WPS Auth Mode	Open
WPS Encryp Type	None
WPS Default Key Index	1
WPS Key(ASCII)	
AP PIN	51314538

The following figure shows you the WPS mode and status.

## WPS Progress

WPS mode	<input checked="" type="radio"/> PIN <input type="radio"/> PBC
Client PIN	<input type="text"/>

## WPS Status

WPS Status	<div style="border: 1px solid #ccc; padding: 5px;">         WPS: Idle       </div>
------------	--

- **WPS mode:** Select PIN or PBC mode. If you select **PIN** mode, you need fill in the **Client PIN** which you can get from other wireless device, or input the router's PIN(**AP PIN** in the WPS Summary) in the other wireless device. If you select **PBC** (Push Button Communication) mode, click **Apply** or press the WPS Key at the rear of the router to active this function, and then you need enable the WPS function on the other wireless device in two minutes to start authentication process with the router.
- **Client PIN:** Fill in the PIN code of the other wireless device if selecting PIN mode as the WPS Config method.
- **WPS Status:** Show the authentication process of WPS

## Firewall

### MAC/IP/Port Filtering

Select **Firewall > Mac/Ip/Port Filtering**, the Mac/IP/Port Filtering is shown in the following figure:

Firewall-->Mac/Ip/Port Filtering

• Mac/Ip/Port Filtering	•URL Filtering	•Port Forwarding	•DMZ	•System Security
-------------------------	----------------	------------------	------	------------------

**Basic Settings**

MAC/IP/Port Filtering	Disable <input type="button" value="v"/>
-----------------------	--

If you select Enable, the filter settings will appear:

Firewall-->Mac/Ip/Port Filtering

- Mac/Ip/Port Filtering
- URL Filtering
- Port Forwarding
- DMZ
- System Security

Basic Settings

MAC/IP/Port Filtering	Enable ▾
Default Policy -- The packet that don't match with any rules would be:	Dropped. ▾

Apply

Apply

MAC/IP/Port Filter Settings

MAC address	<input type="text"/> (XX:XX:XX:XX:XX:XX, eg:00:1E:90:FF:FF:FF)
Dest IP Address	<input type="text"/> (XXX.XXX.XXX.XXX, eg:192.168.5.101)
Source IP Address	<input type="text"/>
Protocol	None ▾
Dest Port Range	<input type="text"/> - <input type="text"/> ( 0~65535)
Source Port Range	<input type="text"/> - <input type="text"/>
Action	Accept ▾
Comment	<input type="text"/>

The maximum rule count is 10.

Apply

Reset

- **Default Policy:** Set how to handle the packet if none of the rules matches.
- **MAC address:** Set the MAC address that will be filtered.
- **Dest IP Address:** Set the destination IP address that will be filtered.
- **Source IP Address:** Set the source IP address that will be filtered.
- **Protocol:** Set which protocol will be used for filtering.
- **Dest Port Range:** Set the destination port numbers that will be filtered.
- **Source Port Range:** Set the source port numbers that will be filtered.
- **Action:** Set how to handle the packet if it matches with the rule.
- **Comment:** type comment for the filter settings.

Click **Apply** to confirm your configuration.

The following figure shows you the current MAC/IP/Port filtering rules in system.

Current MAC/IP/Port filtering rules in system:

No.	MAC address	Dest IP Address	Source IP Address	Protocol	Dest Port Range	Source Port Range	Action	Comment
Others would be dropped								

Others would be dropped

Delete Selected

Reset

## URL Filtering

Select **Firewall > URL Filtering**, the URL Filtering is shown in the following figure:

Content Filter Settings

• Mac/Ip/Port Filtering
• URL Filtering
• Port Forwarding
• DMZ
• System Security

**Current Webs URL Filters:**

No	URL
----	-----

**Add a URL filter:**

URL:	<input style="width: 80%;" type="text" value=""/> ( eg: www.zte.com)
------	--

Type URL address, and then click **Add** to add the URL address into the filtering list. The new URL filtering item will be shown in the **Current Webs URL Filters** area.

### Port Forwarding

Select **Firewall > Port Forwarding**, the port forwarding is shown in the following figure:

Firewall-->Port Forwarding

• Mac/Ip/Port Filtering
• URL Filtering
• Port Forwarding
• DMZ
• System Security

**Virtual Server Settings**

Virtual Server Settings	Disable <input type="button" value="v"/>
-------------------------	--

If you select **Enable**, the Virtual Server Settings will appear:

Firewall-->Port Forwarding

• Mac/Ip/Port Filtering
• URL Filtering
• Port Forwarding
• DMZ
• System Security

**Virtual Server Settings**

Virtual Server Settings	Enable <input type="button" value="v"/>
IP Address	<input style="width: 80%;" type="text" value=""/> (XXX.XXX.XXX.XXX, eg:192.168.5.101)
Port Range	<input style="width: 20%;" type="text" value=""/> - <input style="width: 20%;" type="text" value=""/> ( 0~65535)
Protocol	TCP&UDP <input type="button" value="v"/>
Comment	<input style="width: 80%;" type="text" value=""/>

The maximum rule count is 10.

**Current Virtual Servers in system:**

No.	IP Address	Port Range	Protocol	Comment

- **IP Address:** Set IP address for the virtual server.
- **Port Range:** Set port numbers for the virtual server.
- **Protocol:** Set protocol for the virtual server.
- **Comment:** Type comment for the virtual server settings.

Click **Apply** to confirm your configuration. And the current virtual servers will be shown in the Current Virtual Servers in system area.

### DMZ

Select **Firewall > DMZ**, the DMZ setting is shown in the following figure:

The screenshot shows the 'Firewall-->DMZ' configuration page. At the top, there are navigation tabs: 'Mac/Ip/Port Filtering', 'URL Filtering', 'Port Forwarding', 'DMZ', and 'System Security'. The 'DMZ' tab is selected. Below the tabs, the 'DMZ Settings' section contains a single dropdown menu labeled 'DMZ Settings' with the value 'Disable' selected. An 'Apply' button is located at the bottom right of the form.

If you select **Enable**, set the DMZ IP address, and then click **Apply** to confirm your configuration.

The screenshot shows the 'Firewall-->DMZ' configuration page. The 'DMZ' tab is selected. In the 'DMZ Settings' section, the 'DMZ Settings' dropdown is set to 'Enable'. Below it, the 'DMZ IP Address' field is a text input box with a placeholder '(XXX.XXX.XXX.XXX, eg:192.168.5.101)'. An 'Apply' button is located at the bottom right of the form.

### System Security

Select **Firewall > System Security**, the system security setting is shown in the following figure:

The screenshot shows the 'System Security Settings' configuration page. At the top, there are navigation tabs: 'Mac/Ip/Port Filtering', 'URL Filtering', 'Port Forwarding', 'DMZ', and 'System Security'. The 'System Security' tab is selected. Below the tabs, the 'Remote management' section contains a dropdown menu labeled 'Remote management (via WAN)' with the value 'Deny' selected. The 'Ping form WAN Filter' section contains a dropdown menu labeled 'Ping form WAN Filter' with the value 'Disable' selected. 'Apply' and 'Reset' buttons are located at the bottom right of the form.

**Allow** or **Deny** the remote management function and **Enable** or **Disable** ping from WAN filter on requirement, and then click **Apply** to confirm your configuration..

## Advanced

### Status



Select **Advanced > Status**, the system information is shown in the following figure:

**Advanced-->Status**

•Status •Statistics •Management •Upgrade •Restore •Shutdown •PIN Manage

System Info

IMEI	352847025074608
Wireless access module software version	BD_P673M2_GWV1.0.0B02
Control and route module software version	CR_P670A1V1.0.0B02
Hardware version	PCBP670A1V1.0.0
System Up Time	1 hour, 30 mins, 53 secs

## Statistics

Select **Advanced > Statistics**, the system statistics information is shown in the following figure:

**Advanced-->Statistics**

•Status •Statistics •Management •Upgrade •Restore •Shutdown •PIN Manage

Memory

Memory total:	13296 kB
Memory left:	876 kB

WAN/LAN

WAN Rx packets:	15642
WAN Rx bytes:	1673235
WAN Tx packets:	20287
WAN Tx bytes:	15417592
LAN Rx packets:	15642
LAN Rx bytes:	1673235
LAN Tx packets:	20287
LAN Tx bytes:	15417592

## Management

Select **Advanced > Management**, the administrator settings information is shown in the following figure:

**Advanced-->Management**

•Status •Statistics •Management •Upgrade •Restore •Shutdown •PIN Manage

Administrator Settings

Account	<input type="text" value="admin"/>
Password	<input type="password" value="••••"/>

To set new account, type new account and password, and then click Apply to confirm your configuration.




### Notes:

**If you change the Account or Password, please make sure that you can remember the new Account or Password.**

## Upgrade

Select **Advanced** > **Upgrade** to upgrade the software version of the router.

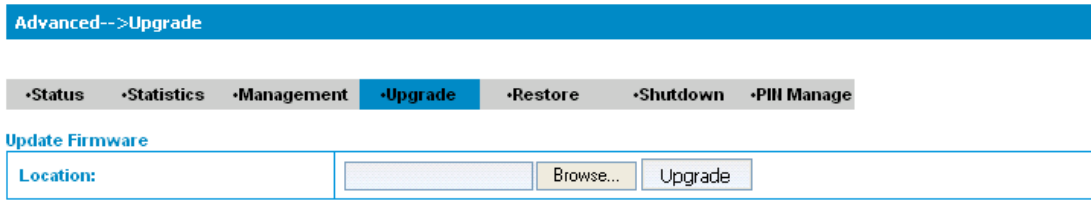

Click **Browse...** locate the latest software version, and then click **Upgrade**.

**Notes:**

- Please do not cut off the power supply, and do not to do any other operations when upgrading.
- After upgrading, the router will turn off automatically. You should turn the router on by manually.


**Restore**

Select **Advanced** > **Restore**, click Restore to set all the settings to their factory default values, and the device will be turned off.




**Shutdown**

Select **Advanced** > **Shutdown**, click Shutdown to turn the router off.

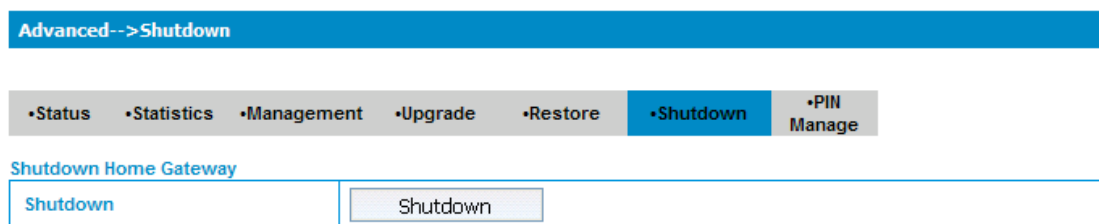

**PIN Manage**

 Select **Advanced** > **PIN Manage**, the PIN manage is shown in the following figure:

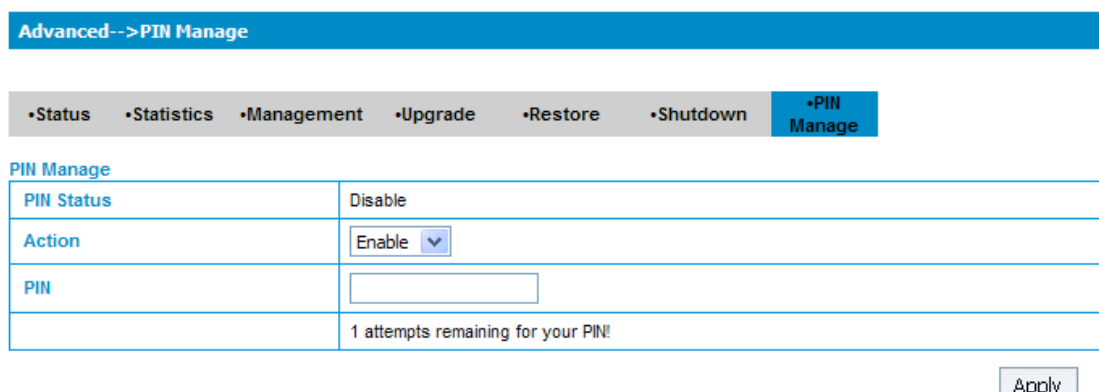

If you select **Modify**, the modification parameters are shown in the following figure:

**Advanced-->PIN Manage**

•Status •Statistics •Management •Upgrade •Restore •Shutdown •PIN Manage

**PIN Manage**

<b>PIN Status</b>	Disable
<b>Action</b>	Modify ▾
<b>PIN</b>	<input type="text"/>
<b>New PIN</b>	<input type="text"/>
<b>Confirm New PIN</b>	<input type="text"/>
	1 attempts remaining for your PIN!

Type the old PIN code, and then type two times the new PIN code. Click **Apply** to confirm your configuration.




#### Notes:

Three time consecutive wrong PIN code entries will lock the (U)SIM card.

## Logout

1. Select **Logout**, a pop-up windows will appear as shown in the following figure :

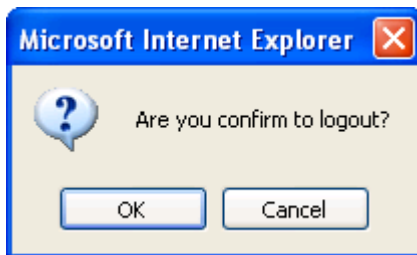

2. Click **OK** to log out .

## Disconnecting from the Internet

1. Select **Disconnect Internet** from **WAN Connection** page, if you want to terminate your Internet connection.

**WAN Connection**

**PPP Connection Mode**

<input type="radio"/>	Auto Connect
<input type="radio"/>	On Demand Connect
<input checked="" type="radio"/>	Manual Connect <input type="text" value="Disconnect Internet"/> ▾
<b>PPP Connection Status</b>	Disconnected

2. click **Apply** to confirm.

**Tips:**

**Turn off the router can also terminate Internet connection.**

# Chapter 5

## Troubleshooting

1. Make sure that the router is turned on and all the cables are connected correctly.
2. Check the RSSI, PPP, WiFi and PWR LED's are all in normal state.

### Voice Related Problems

Symptoms	Possible Problems/ Solutions
No Dial Tone.	Please wait for 1~2 minutes after the router is turned on. If RSSI is blinking, you have no good RF reception. Change the location of the router.
There is a prompt/ phone alert/ announcement as soon as I lift the phone off the hook.	Make sure your (U)SIM card is inserted correctly and the PIN number has been entered. If the PIN number has been entered incorrectly then you will need to enter the PUK code when prompted.
The line is noisy/ distorted when I lift the phone off the hook.	Remove any electrical appliance which is too close to the phone or router. The cable or phone set might be faulty.
I hear a rapid engaged tone as soon as I lift the phone off the hook.	Put the phone on hook and try again. If you are connected to the internet using the 2G (GSM) network, please disconnect this first.
After dialing the last digit I hear nothing /silence.	When you have finished dialing you can press the # key or wait 4-8 seconds to connect the call.
I can't make or receive a call when I am surfing on the net.	If you are connected using the 2G (GSM) network then you cannot surf the net and make a phone call simultaneously. Please disconnect the internet and wait 30 seconds to 1 minute before making a call.

### Internet Related Problems

Symptoms	Possible Problems/ Solutions
I cannot access the internet at all.	Please check your configuration settings. Please wait 1~ 2 minutes for the router to initialize. Check your service indicator LED's.
The download or upload speeds are very slow.	The speed is dependent on signal strength. Check your signal strength and network type.

### Others

Symptoms	Possible Problems/ Solutions
The RSSI signal indicator is always blinking or does not light.	This indicates poor reception. Try moving the router to another location near the window.

# Appendix A

## Technical Parameters

### **MF613 Fixed Wireless Adapter**

- LED Display:
  - i. Power Indicator
  - ii. Wi-Fi Indicator
  - iii. PPP Indicator
  - iv. Radio Signal Strength Indicator
- External Interface:
  - i. External Power Socket
  - ii. Phone Interface (PHONE)
  - iii. Data Interface (LAN)
  - iv. Test Interface (Mini-USB)
- Power Adapter:

Input: 100V~240V (AC), 50~60Hz

Output: +12V (DC), 1.2A
- Dimensions (W×H×D): 163mm×114mm×29mm

### **ZTE USB Modem (Inner modem)**

- Network:

HSUPA/HSDPA/UMTS/EDGE/GPRS/GSM
- Data Service:

HSUPA 2Mbps UL

HSDPA 7.2Mbps DL
- MicroSD Slot: up to 4GB
- Dimensions (H×W×D): 69mm×26mm×12mm