



ZTE WP623N

GSM Wireless Phone

User Guide

Copyright © 2008 by ZTE Corporation

All rights reserved.

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice. The information on the package is only for your reference. Images are for you reference only. Please check the product model before purchasing.

ZTE Plaza, Keji Road South, Hi-tech Industrial Park, Nanshan District, Shenzhen, P.R.China

Zip Code: 518057

Service Hotline: +86-755-26779999

[E-mail:mobile@zte.com.cn](mailto:mobile@zte.com.cn) [Http://www.zte.com.cn](http://www.zte.com.cn)

Know Your Phone



Key Instruction

Key

Description

MENU/SELECT key It is used to enter main Menu, select or confirm options in Menu, or confirm the character chosen in condition of character input.

NAMES/CLR/BACK key It is used to erase input information, or cancel operating, exit to previous interface, or enter Names list in standby state.

MESSAGE key This is the shortcut key to enter message menu.

Number key Use the number keys to enter numbers and characters.

key, * key It differs in different mode, option or function menu.

Scrolling key Press these keys to scroll cursor to the left, right, up or down when inputting characters or selecting items. Or default functions in standby state are set in Settings menu.

EXT PWR Lights on when the phone is connected to external power supply.









EXIT Key It is used to power on/power off the phone.

CALL/REDIAL key In condition of off-hook or hand-free, press this key to make a call after having entered the telephone number intended for calling.

HAND-FREE key If you are using the handset to call and want to transfer the call to the speakerphone, press “HAND-FREE” key and hang up the handset to put conversation on the speakerphone.

Interface Icons



Icon	Description	Icon	Description
	Signal strength		New Message (flop when memory if full)
	Mute		Call Forwarding
	Power Indicator		Alarm clock
	Roaming		Keypad Lock

Installation

1. Handset

Connect phone set and handset with the phone cord.

2. Antenna

Install the antenna to antenna connector **ANT**. Hold the plastic stick of the antenna and rotate the metal screw cap in clockwise direction to fix it up. **Do not rotate antenna directly.**

3. External power adapter

Plug the external power adapter to the external AC socket.

How to Power on/off

- ◆ Switch the power toggle switch **BATT** (which located at the phone's back) to “ | ” side.
- ◆ Press the \downarrow /EXIT **key** for about 3 seconds to power on the phone.
- ◆ In state of power-on, press and hold \downarrow /EXIT **key** to power off the phone.
- ✂ **As usual, suggest make use of external power supply. When power down or unavailable power supply nearby, you can use battery for backup.**

How to Make a Call

- ◆ Pick up the handset or press the **HAND-FREE** key. Or go to step 2 directly.
- ◆ Enter the telephone number by using the **Number keys** (add area code when making a long distance call) or select from Names, or press **CALL/REDIAL Key** to enter the recent calls list, select a number.
- ◆ Press the **CALL/REDIAL Key** to make the call.

Voice Mail

Before using **Voicemail**, please consult with service provider to confirm that the voicemail box has been activated.

The system automatically sends a message to your phone informing a new voice message. Read the message and then dial voicemail box number to listen to your voice message.

To read your voice mail, hold **"1" key** to dial voicemail box number in standby state.

Message

Select **Short Messages** in **Menu**.

- Select **New message** to write and edit message text, select **Options** to send or save the message.
- Select **Inbox** to view messages received.
- Select **Outbox** to view the sent messages.
- Select **Draftbox** to view draft messages.
- Select **Msg settings** to make some necessary short message settings.
- Select **Voicemail** to **Get voicemail**, or set the **Voicemail No.**.

Phone Lock Code

Phone code could prevent your phone from illegal use. The default phone lock code is 1234. Change it to your own phone password as soon as possible.

PIN Code and PUK Code

- ◆ **PIN Code**: PIN Code could prevent your SIM Card from illegal use. When PIN lock is on, you should enter the PIN code when opening the phone again. Change the default PIN code password to your own PIN Code password as soon as possible.
- ◆ **PUK Code**: Consecutive inputting wrong PIN code for several times can cause locking of SIM Card. To unlock, you need PUK code.

PIN code and PUK Code may be offered together with the SIM Card. If not, contact with network operator.

Text Input

Operation	Method
Input Letters	Multitap Input—"ABC" or "abc", press corresponding letter key till the letter appears. Press # key to switch between capitalization and lowercase.
Input Words	eZiText Input—"Eng", press the Number keys to input the characters of the word.
Input Digits	Numbers Input—"123", press digit key once.
Input Symbol	Symbols Input —press * key, then select corresponding symbol by pressing Scrolling key . ABC/abc Input — press "1" key till the symbol (common symbols) appears.
Input Space	Press " 0 " key, except for being in numbers mode.
Erase Character	Press NAMES/CLR/BACK key .
Erase all the characters	Hold NAMES/CLR/BACK key till all the characters to be erased.
Move cursor	Press Scrolling key .
Change input mode	Press # key to change text input mode.

Menu Tree

1. Short Messages

- 1.1 New message
- 1.2 Inbox
- 1.3 Outbox
- 1.4 Draftbox
- 1.5 Msg settings
- 1.6 Voicemail

2. Call Menu

- 2.1 Calls
- 2.2 Diverts

3. Settings

- 3.1 Phone settings
- 3.2 Display settings
- 3.3 Audio settings
- 3.4 Clock settings
- 3.5 Call settings
- 3.6 Network settings
- 3.7 Security settings

4. Tools

- 4.1 Alarm clock
- 4.2 Calculator

5. STK

Menu Function

Hereinafter are brief instructions on menu functions of the phone.

<i>Function</i>	<i>Description</i>	<i>Selection</i>
Add contact	Save phone number	Names→ Options →Add new Contact
Search contact	Search for a contact entry	Names→ Options →Search
Used space of Names	View the number of saved entries and maximum number of entries capacity in SIM card	Names→ Options →Used space
Speed dial list	View speed dial list	Names→ Options → Speed dial list
Send message	Send message to others	Menu→Short Messages→New message
Read message	Read message in Inbox, Outbox, Draftbox	Menu→Short Messages →Inbox/Outbox/Draftbox
Templates message	Some common used messages preformatted	Menu→Short Messages → Msg settings →Templates
Status Report	Let network send Status Report message to inform your sending message successfully or not	Menu→Short Messages → Msg settings →Status Report
Used space of messages	View the number of saved messages and maximum number of messages capacity in SIM card	Menu→Short Messages→ Msg settings →Used space
Voicemail	Receive and listen to Voice messages	Menu→Short Messages → Voicemail
Recent calls	View or dial all recent calls	Menu→ Call Menu→ Calls
Call forwarding	Forward an incoming call to a designated phone number	Menu→ Call Menu→ Diverts
Shortcut key	Set the scrolling key as shortcut key of some menu	Menu→ Settings→ Phone settings→ Fastkey settings
Keypad lock	Lock the keypad automatically, Press # key, then* key to unlock.	Menu→ Settings→ Phone settings→ Auto lock keypad

<i>Function</i>	<i>Description</i>	<i>Selection</i>
Backlight	Set the backlight On/off when using the phone	Menu→ Settings→Display settings→Backlight
Tone	Select phone's Ring/Key/Warn tone	Menu→ Settings→ Audio settings → Ringtone/Key tones/Warn tone
Missed alert	When there are missed calls, alert or not.	Menu→ Settings→ Audio settings → Missed alert
Message alert	Select type of tone to prompt when there is message	Menu→ Settings→ Audio settings → Message alert
Power on/off Ring	Ring or not when power on/off the phone	Menu→ Settings→ Audio settings →Power on/off Ring
Volume	Set the volume of ringtone /speaker	Menu→ Settings→ Audio settings →Ringtone/Speaker volume
Date and Time	Set the date and the time	Menu→ Settings→ Clock settings → Date & Time
Date format	Set the date format	Menu→ Settings→ Clock settings → Date format
Minute minder	Set minute minder	Menu→ Settings→ Call settings →Minute minder
Connected minder	Set connected minder	Menu→ Settings→ Call settings →Connected minder
Call waiting	Put the current call on hold to answer the other incoming call	Menu→ Settings→ Call settings → Call waiting
Network Settings	Set the way of searching network	Menu→ Settings→ Network settings
SIM password	Set or change the SIM password	Menu→ Settings→ Security settings→ SIM password
Phone lock	Set or change the phone lock code	Menu→ Settings→ Security settings→ Phone lock
Network call bar	The service provider will offer you a 4-digital Network Code to activate Network Call Bar	Menu→ Settings→ Security settings→ Network call bar
Alarm clock	Set alarm alert time	Menu→ Tools → Alarm clock

Warning and Maintenance

- Keep the phone out of the reach of little children. The phone may cause injury if used as a toy.
- Use original accessories or accessories that are authorized by the manufacturer.
- Keep the phone dry and store in shady and cool place.
- Do not expose your phone to direct sunlight or store it in hot areas. High temperature can shorten the life of electronic devices.
- Prevent liquid from seeping into your phone.
- Do not drop, knock or harshly treat the phone. Rough handling can break internal circuit boards.
- Do not connect the phone with other unauthorized peripheral equipments. Do not attempt to disassemble the phone and battery by yourself.
- Power off your phone before clean the phone. Use clean fabric that is anti-static to clean your phone.
- As your phone can produce electromagnetic field, do not use the phone near electrical appliances.
- Do not charge the phone without battery.
- Be aware of the usage limitation when using a phone at places such as oil warehouses or chemical factories.
- The user is cautioned that changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Warranty terms

The warranty does not apply to defects or errors in the product caused by:

- (a) Reasonable abrasion.
- (b) Misuse including mishandling, physical damage, improper installation, unauthorized disassembly of the product.
- (c) Water or any other liquid damage.
- (d) Any unauthorized repair or modification.
- (e) Power surges, lightning damage, fire, flood or other events outside ZTE's reasonable control.
- (f) Use of the product with any unauthorized third party products such as generic chargers.

(g) Any other cause beyond the range of normal usage for products.

End User shall have no right to reject, return, or receive a refund for any product from ZTE under the above-mentioned situations.

This warranty is end user's sole remedy and ZTE's sole liability for defective or nonconforming items, and is in lieu of all other warranties, expressed, implied or statutory, including but not limited to the implied warranties of merchantability and fitness for a particular purpose, unless otherwise required under the mandatory provisions of the law.

Limitation of Liability

ZTE shall not be liable for any loss of profits or indirect, special, incidental or consequential damages resulting from or arising out of or in connection with using this product, whether or not ZTE had been advised, knew or should have known the possibility of such damages.

Declaration

We, ZTE Corporation, declared that:

- The user is cautioned that changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.
- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference, and
 - (2) this device must accept any interference received, including interference that may cause undesired operation.
- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or **10**

television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

- This device complies with FCC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, human proximity to the antenna shall not be less than 20cm (8 inches) during normal operation.

Troubleshooting

If your phone appears following phenomenon in the process of application, read following relative information at first. If the problems still can not be solved, please contact with the distributor or service provider.

Problem	Check Point
When switching on the phone, it prompts “Enter PIN”.	Input your PIN Code which offered with SIM card together. If you have changed PIN code, input the new PIN Code.
When switching on the phone, it prompts “Emergency Only”.	Check whether valid SIM card is inserted or not.
When switching on the phone, it prompts “Enter phone code”.	Enter lock code you set already to Unlock the phone.

No ring tone prompt for a incoming call.	Check volume setting of ring tone.
No display on screen when disconnect external power supply.	Check whether the battery switch is turn to “ ”, whether the battery has electricity, or it is damaged; or power on the phone again.
Press CALL/REDIAL key, but no number is sent.	Check whether you have set Network Call Bar.
Certain call cannot be received.	Check whether the number is restricted to come.
Cannot send short message.	Check the network condition, or message centre setting.
Other abnormal phenomenon.	First refer to user manual, then check whether the power is connected correctly or not, if there are no problems, please power off and re-start the phone again.

Declaration of RoHS Compliance

To minimize the environmental impact and take more responsibility to the earth we live, this document shall serve as formal declaration that the ZTE WP623N manufactured by ZTE CORPORATION are in compliance with the Directive 2002/95/EC of the European Parliament - RoHS (Restriction of Hazardous Substances) with respect to the following substances:

- (1) Lead (Pb)
- (2) Mercury (Hg)
- (3) Cadmium (Cd)
- (4) Hexavalent Chromium (Cr (VI))
- (5) Polybrominated biphenyls (PBB's)
- (6) Polybrominated diphenyl ethers (PBDE's)

The ZTE WP623N manufactured by ZTE CORPORATION, meet the requirements of EU 2002/95/EC; however, some assemblies are customized to client specifications. Addition of specialized, customer-specified materials or processes which do not meet the requirements of EU 2002/95/EC may negate RoHS compliance of the assembly. To guarantee compliance of the assembly, the need for compliant product must be communicated to ZTE CORPORATION in written form.

This declaration is issued based on our current level of knowledge. Since

conditions of use are outside our control, ZTE CORPORATION makes no warranties, express or implied, and assumes no liability in connection with the use of this information.

For this product's Recycling Manual based on WEEE directive, please send email to inquiry or visit the website below to download:

WWW: <http://ensupport.zte.com.cn>

E-mail: weee@zte.com.cn