



ZTE WP623R GSM Wireless Phone

User Guide

Copyright © 2009 by ZTE Corporation

All rights reserved.

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice. The information on the package is only for your reference. Images are for your reference only.



ZTE Plaza, Keji Road South, Hi-tech Industrial Park, Nanshan District, Shenzhen, P.R.China

Zip Code: 518057 [Http://www.zte.com.cn](http://www.zte.com.cn) Service Hotline: +86-755-26779999

Know your Phone



Key Instruction

Key	Description
MENU/SELECT key	It is used to enter main Menu, select or confirm options in Menu, or confirm the character chosen in condition of character input.
NAMES/CLR/BACK Key	It is used to erase input information, or cancel operating, exit to previous

pop-up window interface.

MESSAGE key

This is the shortcut key to enter message menu.

Number key

Use the number keys to enter numbers and characters.

key, * key

It differs in different mode, option or function menu.

Scrolling key

Press these keys to scroll cursor to the left, right, up or down when inputting characters or selecting items. Or default functions in standby mode are set in Settings menu.

EXIT Key

It is used to power on/power off or exit from any window interface to standby mode

CALL/REDIAL key








Press this key to make a call after having entered the telephone number intended for calling or entered the last called

telephone number.

HANDFREE key

If you use the handset to make a call and put conversation on the speakerphone, press “**Hands-free**” key and hand down the handset to put conversation on the speakerphone.

Interface Icons

Icon	Description	Icon	Description
	Signal strength		New Message (flop when memory if full)
	Mute		Call Forwarding
	Bar Blacklist		Bar All
	Friend Only		Power Indicator

Installation

1. Handset

Connect phone set and receiver with the handset cord.

2. Antenna

Install the antenna to antenna connector **ANT**. Hold the plastic stick₄

of the antenna and rotate the metal screw cap in clockwise direction to fix it up. **Do not rotate antenna directly.**

3. External power adapter

Plug the external power adapter to the external AC socket 100V ~ 240V.

How to power on/off

- ◆ Turn on the power toggle switch to “ | ” side which located at the phone's back.
- ◆ Press the \downarrow /EXIT key for about 3 seconds, the phone will then automatically test whether the SIM card is inserted and valid.
- ◆ In standby state, besides making and answering calls, you can do also:
 - Press **MESSAGE** key to enter **Messages** menu.
 - Press **MENU/SELECT** key to enter main **Menu**.
 - Press **NAMES/CLR/BACK** key to enter **Contacts** list.
- ◆ In state of power-on, press and hold button \downarrow /EXIT key, LCD screen closes or turn off the power toggle switch directly.

How to Make a Call

- ◆ Pick up the handset or press the **HANDFREE** key.
- ◆ Enter the telephone number by using the **Number keys** (add area code

when making a long distance call) or select from phone book.

- ◆ Press the **CALL/REDIAL Key** to make the call.

How to access GPRS

If your phone supports GPRS service, connect the data cable to computer and phone's **DATA** interface (do not insert or remove data cable when power is on). Then you can access GPRS by "ZTE Dial-Up (GSM) software" on the CD which may be offered with the phone. If you use the USB port, first install the "USB Driver" on the CD.

Text Input

Operation	Method
Input Letters	Multitap Input—"ABC" or "abc", press corresponding letter key till the letter appears.
Input Words	eZiText Input—"Eng", press any key once to key in any word.
Input Digits	Numbers Input—"123", press digit key once.
Input Symbol	Symbols Input —press * key and press Left/Right key and Up/Down key to select corresponding symbol. ABC/abc Input — press "1" key till the symbol (common symbols) appears.
Input Space	Press " 0 " key, except for being in numbers mode.
Erase Character	Press NAMES/CLR/BACK key .
Erase all the characters	Hold NAMES/CLR/BACK key till all the characters to be erased.

Move cursor left or right	Press Left/Right key .
Change input mode	Press # key to change text input mode.
Capitalization	Press # key to " ABC " and " abc " input mode to switch between capitalization and lowercase.

Menu Tree

1. Short Messages

- 1.1 New message
- 1.2 Inbox
- 1.3 Outbox
- 1.4 Draftbox
- 1.5 Msg settings
- 1.6 Voicemail

2. Call Menu

- 2.1 Calls
- 2.2 Diverts

3. Settings

- 3.1 Phone settings
- 3.2 Display settings
- 3.3 Audio settings
- 3.4 Clock settings
- 3.5 Call settings
- 3.6 Network settings
- 3.7 Security settings

4. Tools

- 4.1 Alarm clock
- 4.2 Calculator

5. STK

Voice Mail

Before using **Voicemail**, please consult with service provider to confirm that the voice mailbox has been activated.

The system automatically sends a message to your phone informing a

Message

1. Select **Short Messages** in **Menu**.
2. Select **New message** to write and edit message text.
3. Select **Options** to send or save the message.
 - Select **Inbox** to view messages received.
 - Select **Outbox** to view the sent messages.
 - Select **Draftbox** to view draft messages.
 - Select **Msg settings** to make some necessary short message settings.

		→Add new contact
Search contact	Search for a contact entry	Contacts→ Options →Search
Used space	View the number of saved entries and maximum number of entries capacity in phone and SIM	Contacts→ Options →Used space
Templates message	Some common used messages preformatted	Menu→ Short Messages → Msg settings →Templates
Voicemail	Receive and listen to Voice messages	Menu→ Short Messages → Voicemail
Recent calls	View or dial all recent calls	Menu→ Call Menu→ Calls
Call forwarding	Forward an incoming call to a designated phone number	Menu→ Call Menu→ Diverts
Shortcut key	Set the scrolling key as shortcut key of some menu	Menu→ Settings→ Phone settings→ Fastkey settings
Keypad lock	Lock the keypad automatically	Menu→ Settings→ Phone settings→ Auto lock keypad
Tone	Select phone's Ring/Key /Warn tone	Menu→ Settings→ Audio settings → Ring/Key/Warn tone
Message alert	Select type of tone to prompt when there is message	Menu→ Settings→ Audio settings → Message alert
Volume	Set the volume of ringtone /speaker /handfree	Menu→ Settings→ Audio settings →Ringtone/Speaker/Handfree volume
Date & Time	Set the date and the time	Menu→ Settings→ Clock settings → Date & Time
Date format	Set the date format	Menu→ Settings→ Clock settings → Date format

SIM password	Set or change the SIM password	Menu→ Settings→ Security settings→ SIM password
Phone lock	Set or change the phone lock code	Menu→ Settings→ Security settings→ Phone lock
Network call bar	The service provider will offer you a 4-digital Network Code to activate Network Call Bar	Menu→ Settings→ Security settings→ Network call bar
Alarm clock	Set alarm alert time	Menu→ Tools → Alarm clock
Calculator	Execute basic math calculation	Menu→ Tools→ Calculator

Phone Lock

Phone lock could prevent your phone from illegal use. The default phone password is 1234. Please change it to your own phone password as soon as possible.

PIN Code and PUK Code

PIN Code: Pin Code could prevent your SIM Card from illegal use. When Pin lock is on, you should enter the PIN code when opening the handset again. Please change the default PIN code password to your own PIN Code password as soon as possible.

PUK Code: Consecutive inputting wrong PIN code for several times can cause locking of SIM Card. To unlock, you need PUK.

PIN code and PUK Code may be offered together with the SIM Card. If not, please contact with network operator.



Safety Warning

To the Owner

- Some electronic devices are susceptible to electromagnetic interference sent by phone if inadequately shielded. Use phone at least 20 cm or as far away as you can from TV sets, radio and other automated office equipment so as to avoid electromagnetic interference.
- Operating phone may interfere with medical devices like hearing aids and pacemakers, or other medical devices in hospital. Consult a physician or the manufacturer of the medical device before using phone.
- Be aware of the usage limitation when using phone at places such as oil warehouses, or chemical factories, where there are explosive gases or explosive products being processed, because even if your phone is in idle state, it still transmits radio frequency (RF) energy. Therefore, power off your phone if required.
- Do not touch the antenna while calling. Otherwise it will affect the quality of calling and waste battery energy. The damaged antenna will cause slight burn while touching your skin.
- Keep out of the reach of small children. phone may cause injury if used as a toy.
- Do not put other things on the terminal to avoid overlaying radiator.
- Keep the antenna free from obstructions and position the antenna straight up. This will ensure best call quality.

Phone Use

- Please use original accessories or accessories that are authorized by the manufacturer. Using any unauthorized accessories may affect your phone's performance, and violate related national regulations about telecom terminals, or even endanger your body.
- As your phone can produce electromagnetic field, do not place it near magnetic items such as computer disks.
- Do not expose your phone to direct sunlight or store it in hot areas. High

temperatures can shorten the life of electronic devices.

- Prevent liquid from leaking into your phone.
- Disconnect external power supply and do not use your phone during thunderstorm.
- Unplug the external power adapter or remove battery when your phone is not in use, esp. for a long period of time.
- It is highly recommended to charge the battery before initial use. The battery might have been discharged during storage and delivery.
- Do not unplug the connector of the data cable from phone, and not install or remove battery, when the power is on.
- Keep phone power on and in service area when make emergency call. Enter emergency call number in status of standby, and then press **Call key** to send.
- Do not attempt to disassemble the phone by yourself. Non-expert handling of the devices may damage them.

Battery Use

- Do not short-circuit the battery, as this can cause excessive heat and fire.
- Do not store battery in hot areas or dispose of it in a fire to avoid explosion.
- Never use any charger or battery damaged or worn out.
- Return the wear-out battery to the provider or put it in the appointed recycle place. Do not put it in familial rubbish.

Warning: If the battery is broken, keep away from substance inside. If it taints your skin, wash your skin with abundant fresh water and ask doctor for help if necessary.

Safety and General Use in Vehicles

- Before making or answering a call, you should pay attention to the local laws about using wireless mobile phones and take them into account in practical use.
 - Safety airbag, brake, speed control system and oil eject system shouldn't be affected by wireless transmitting. If you do meet problems above, contact your automobile provider.
 - Power off your mobile phone when refueling your automobile, and so do the place where duplex wireless equipments are banned. Don't put your phone]]
-

together with flammable or explosive items, inner spark may cause fire.

Cleaning and Maintenance

- The phone is non-waterproof, keep it dry and store in shaded and cool place.
- If you want to clean your phone, use clean fabric that is a bit wet or anti-static. Do not use harsh chemical cleaning solvents or strong detergents to clean your phone such as alcohol, dilution agent and benzene. Power-off your phone before you clean it.
- Use phone within a temperature range of -10°C~+55°C and the humidity less than 95%.

Limit Warranty

The warranty does not apply to defects or errors in the product caused by:

- (a) Reasonable abrasion.
- (b) Misuse including mishandling, physical damage, improper installation, unauthorized disassembly of the product.
- (c) Water or any other liquid damage.
- (d) Any unauthorized repair or modification.
- (e) Power surges, lightning damage, fire, flood or other events outside ZTE's reasonable control.
- (f) Use of the product with any unauthorized third party products such as generic chargers.
- (g) Any other cause beyond the range of normal usage for products.

End User shall have no right to reject, return, or receive a refund for any product from ZTE under the above-mentioned situations.

This warranty is end user's sole remedy and ZTE's sole liability for defective or nonconforming items, and is in lieu of all other warranties, expressed, implied or statutory, including but not limited to the implied warranties of merchantability and fitness for a particular purpose, unless otherwise required under the mandatory provisions of the law.

Limitation of Liability

ZTE shall not be liable for any loss of profits or indirect, special, incidental or

consequential damages resulting from or arising out of or in connection with using this product, whether or not ZTE had been advised, knew or should have known the possibility of such damages.

Declaration

We, ZTE Corporation, declared that:

- The user is cautioned that changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.
- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- The antenna(s) used for this transmitter must be installed with providing a separation distance of at least 20cm from all persons.
- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

Changes or modifications not expressly approved by the party responsible for

compliance could void the user's authority to operate the equipment.

