

ZTE

**ZTE WP659+
GSM Wireless
Phone
User Guide**



ZTE CORPORATION

NO.55,Hi-tech Road South,ShenZhen,P.R.China


Postcode:518057

<http://www.ztedevice.com> mobile@zte.com.cn

Service Hotline:+86-755-26779999

The information on the package is only for your reference.Images are for your reference only,please check the product model before purchasing.
ZTE reserves the rights to change specifications and parameters of the products without further notice.

{tc " Know Your Phone" Wf E}Know Your Phone

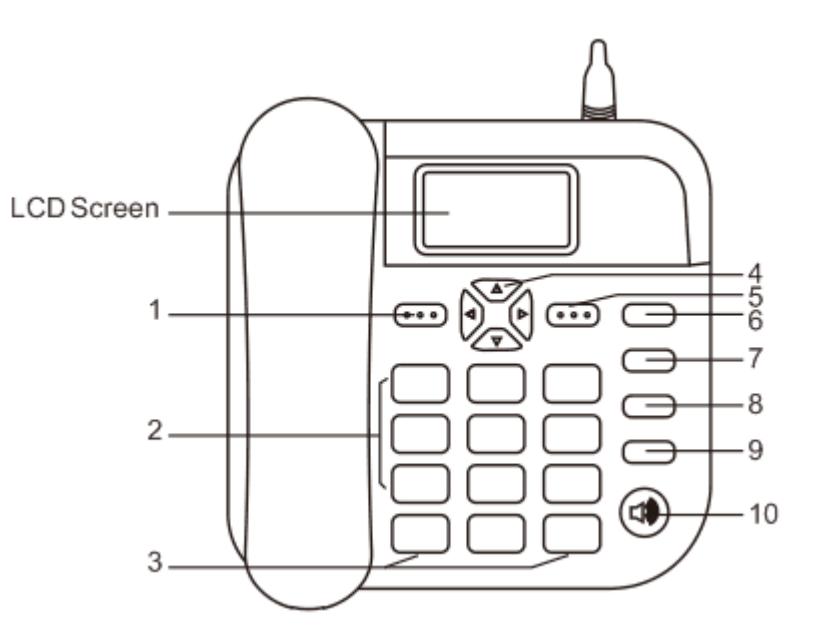

{tc " Key Instruction" Wf E}Key Instruction





Key	Description
1. MENU/OK	<ul style="list-style-type: none">• Enter main menu.• Performs the function indicated at the left bottom of the screen.
2. Number	<ul style="list-style-type: none">• Use these keys to enter numbers and characters.
3. # , *	<ul style="list-style-type: none">• Perform different functions under different conditions.
4.Scrolling	<ul style="list-style-type: none">• Press these keys to scroll cursor to the left, right, up or down when inputting characters or selecting items.• Default functions in standby mode are set in Settings menu.

Key	Description
5. NAMES/BACK	<ul style="list-style-type: none"> To return to upper menu, or cancel Enter the Phonebook in Idle screen
6. EXIT	<ul style="list-style-type: none"> To turn ON/OFF the unite
7. MUTE	<ul style="list-style-type: none"> To mute the voice while communication
8. MESSAGE	<ul style="list-style-type: none"> This is the shortcut key to enter message menu in standby mode.
9. CALL/REDIAL	<ul style="list-style-type: none"> Make a call or answer an incoming call. In standby mode, press this key to enter Dialed calls list.
10. HANDS-FREE	<ul style="list-style-type: none"> If you are using the handset to call and want to transfer the call to the speakerphone, press this key and hang up the handset to put conversation on the speakerphone. Press this key to end a hands-free call.

Notes:

In this manual, "press" a key means to press the key once, "hold" a key means to press the key for 2 or 3 seconds.

Interface Icons

Icon	Description	Icon	Description
	Signal strength		New message
	Silent		Power indicator

Installation

1. **Handset A** **Handset B** **Handset E** Handset
Connect phone and handset via the phone cord.

2. *{tc "External power adapter" Wf A}{tc "External power adapter" Wf B}{tc " External power adapter" Wf E}External power adapter*

Plug the external power adapter to the external AC socket.

3. *{tc "SIM card" Wf A}{tc "SIM card" Wf B}{tc " SIM card" Wf E}SIM card*

Always switch the phone off before removing or inserting SIM card.

Open the bottom cover of the battery. Remove the battery, slide the SIM card into the SIM card slot. Make sure that the contact area of the card is facing down, and the beveled corner matches with the SIM card slot. Put in the battery and install the bottom cover.

{tc " How to Power on/off" Wf E}How to Power on/off

- ◆ To power on the phone, connect phone and external power outlet with the power adapter and then hold the **EXIT** key till the phone is powered on.
- ◆ To power off the phone, at standby mode, hold the **EXIT** key till the phone is powered off.

Notes:

It is strongly recommended to connect the phone to external power outlet, and use internal battery to power your phone only when external power fails or is not available. The phone will charge the internal battery automatically when it is connected to external power outlet.

{tc " How to Make a Call" Wf E}How to Make a Call

There are two methods for making a call.

■ The first method:

1. Pick up the handset or press the **HANDS-FREE** key.
2. Enter the phone number, press **CALL/REDIAL** key to make the call.

■ The second method:

Enter the number or select recipient's number from **Contacts**, or press **CALL/REDIAL** key to select a number from the Dialed calls list, then press **CALL/REDIAL** key to make the call.

Notes:

Add the international prefix, country code and area code (without the leading 0) before the number when making an international call.

{tc " Message" \f E}Message

Select **Messaging** in **Menu**.

- Select **Write message** to write message, Press **Options** select **Send to** or **Save**.
- Select **Inbox** to view messages received.
- Select **Outbox** to view the failure messages.
- Select **Drafts** to view the draft messages.
- Select **Sent messages** to view the successfully sent messages.
- Select **SMS templates** to View the template messages.
- Select **SMS settings** to make some necessary short message settings.
- Select **Memory status** under **SMS settings** to View the message of saved entries and maximum number of entries capacity in phone and SIM.

{tc " Phone Code" \f E}Security setting

Security setting could prevent your phone from unauthorized use. The default phone code is 1122. Change it to your own as soon as possible.

If you change the default phone code to a new one, remember it or place it at secure place.

{TC " PIN1 Code and PUK Code" \f "E"}PIN Code and PUK Code

- **PIN code:** PIN code could prevent your SIM card from illegal use. When PIN code is enabled, you should enter the PIN code when powering on the phone again. Change the default PIN code to your own as soon as possible.
- **PUK code:** The SIM card will be locked if you enter a wrong PIN code consecutively for three times. To unlock, you need PUK code.

Notes:

PIN code and PUK code may be offered together with the SIM card. If not, contact your service provider.

{tc " Text Input" Wf E}Text Input

Operation	Method
Input digits	"123", press the Number keys to input the digits you want directly.
Input letters	" Abc ", " abc ", " ABC ", press corresponding letter key till the letter appears.
Input words	"= ABC ", " =abc ", press the Number keys to input the characters of the word. Then press MENU/SELECT key to confirm.
Input symbol	Press * key, and then select corresponding symbol by using Scrolling keys.
Input space	Apart from Numbers input mode, press " 0 " key to add space.
Erase character	Press NAMES/BACK key. Hold NAMES/BACK key until the cursor before the character be erased.
Move the cursor	Press Scrolling keys.
Change input mode	Press # key to change text input mode.

{tc " Menu Function" Wf E}Menu Function

Hereinafter are brief instructions for menu functions of the phone.

Function	Description	Selection
Create message	Create message and send to others.	Menu→ Messaging→ Write message
Read message	Read message in Inbox, Outbox, Drafts, Sentbox.	Menu→ Messaging→ Inbox/Outbox/Drafts/Sent messages
Message settings	Make some necessary short message settings.	Menu→ Message→ SMS settings
Call history	View or dial all recent calls.	Menu→ Call history→ Missed calls/Dialed calls/Received calls/Delete call logs
Call duration	Check the Last call, Received calls, Dialed calls or Call history duration.	Menu→ Call history→ Missed calls/Dialed calls/Received calls→ Options(Scrolling to view)
Phonebook	View contacts	Menu→ Phonebook
Add new contact	Save phone number.	Menu→ Phonebook→ Options→ Select
Speed dial list	Set and view speed dial list.	Menu→ Phonebook→ Options→ Phonebook settings→ Speed dial
Call divert	Specify the conditions under which the call types should be diverted to another number.	Menu→ Settings→ Call settings→ Call divert
Call waiting	Put the current call on hold to answer the other incoming call.	Menu→ Settings→ Call settings→ Call waiting

Function	Description	Selection
Call barring	Restrict the dialing or receiving of certain calls.	Menu→ Settings→ Call settings→ Call barred
Advanced settings	Other setting items of Call setting	Menu→ Settings→ Call settings → Advanced setting→ Black list/Call time reminder/Answer mode/Delay dial
Time and date	Set the date and the time, and the date and time format.	Menu→ Settings→ Phone settings→ Time & date
Language	Set the display language	Menu→ Settings→ Phone settings → Language
Dedicated keys	Set the scrolling key as shortcut of some menu.	Menu→ Settings→ Phone settings→ Dedicated keys
Screen auto lock	Lock the keypad automatically. Press # key, then * key to unlock.	Menu→ Settings→ Phone settings→ Screen auto lock
Backlight	Set the backlight time, when using the phone.	Menu→ Settings→ Phone settings →LCD backlight
Change PIN	Set or change the PIN code	Menu → Settings → Security settings → SIM security → Change PIN
Change password	Set or change the phone lock code.	Menu→ Settings→ Security settings→ Phone security→ Change password
Restore settings	Switch to the factory default settings. The phone will clew input	Menu→ Settings→ Restore factory settings

Function	Description	Selection
	password, the password default 1122.	
Profiles	Set profiles of your phone.	Menu→ Profiles
Network Settings	Set the way of searching network.	Menu→ Settings→ Network selection
Calculator	Execute basic math calculation.	Menu→ Organizer→ Calculator
Alarm clock	Set alarm clock.	Menu→ Organizer→ Alarm
FM radio	Listen to FM radio.	Menu→ FM radio.

{tc " Warning and Maintenance" Wf 549}Warning and Maintenance

- Some electronic devices are susceptible to electromagnetic interference sent by the phone if inadequately shielded. Keep using the phone at least 20 cm or as far away as you can from TV sets, radio and other automated office equipment so as to avoid electromagnetic interference.
- Operating the phone may interfere with medical devices like hearing aides and pacemakers, or other medical devices in hospital. Consult a physician or the manufacturer of the medical device before using the phone.
- Be aware of the usage limitation when using the phone at places such as oil warehouses, or chemical factories, where there are explosive gases or explosive products being processed, because even if your phone is in idle state, it still transmits radio frequency (RF) energy. Therefore, power off your phone if required.
- Do not touch the antenna while calling. Otherwise it will affect the quality of calling and waste battery energy. The damaged antenna will cause slight burn while touching your skin.
- Keep the antenna free from obstructions and position the antenna straight up. This will ensure best call quality.
- Keep the phone out of the reach of small children. The phone may cause injury if used as a toy.
- Do not put other things on the terminal to avoid overlaying radiator.
- Use original accessories or accessories that are authorized by the manufacturer. Using any unauthorized accessories may affect your

phone's performance, and violate related national regulations about telecom terminals, or even endanger your body.

- As your phone can produce electromagnetic field, do not place it near magnetic items such as computer disks.
- Do not expose your phone to direct sunlight or store it in hot areas. High temperature can shorten the life of electronic devices.
- Prevent liquid from leaking into your phone.
- Disconnect external power supply and do not use your phone during thunderstorm.
- Unplug the external power adapter or remove battery when your phone is not in use, esp. for a long period of time.
- It is highly recommended to charge the battery before initial use. The battery might have been discharged during storage and delivery.
- Do not unplug the connector of the data cable from the phone, and not install or remove battery, when the power is on.
- Do not attempt to disassemble the phone by yourself. Non-expert handling of the devices may damage them.
- The phone is non-waterproof, keep it dry and store in shady and cool place.
- If you want to clean your phone, please use clean fabric that is a bit wet or anti-static. Do not use harsh chemical cleaning solvents or strong detergents to clean your phone, such as alcohol, dilution agent and benzene. Power off your phone before you clean it.

{tc " Limited Warranty" Wf E}Limited Warranty

- This warranty does not apply to defects or errors in the Product caused by:
 - i. Reasonable Router Appearance Disfiguration.
 - ii. End User's failure to follow ZTE's installation, operation or maintenance instructions or procedures.
 - iii. End User's mishandling, misuse, negligence, or improper installation, disassemble, storage, servicing or operation of the Product.
 - iv. Modifications or repairs not made by ZTE or a ZTE-certified individual.
 - v. Power failures, surges, fire, flood, accident, actions of third parties or other events outside ZTE's reasonable control.
 - vi. Usage of products of third Parties, or usage in conjunction with third party products provided that such defects is due to the combined usage.
 - vii. Any other cause beyond the range of normal usage for Products.

End User shall have no right to reject, return, or receive a refund for any product from ZTE under the above-mentioned situations.

- This warranty is end user's sole remedy and ZTE's sole liability for defective or nonconforming items, and is in lieu of all other warranties, expressed, implied or statutory, including but not limited to the implied warranties of merchantability and fitness for a particular purpose, unless otherwise required under the mandatory provisions of the law.

{tc " Limitation of Liability" Wf 549}Limitation of Liability

ZTE shall not be liable for any loss of profits or indirect, special, incidental or consequential damages resulting from or arising out of or in connection with using of this product, whether or not ZTE had been advised, knew or should have known of the possibility of such damages, including, but not limited to lost profits, interruption of business, cost of capital, cost of substitute facilities or product, or any downtime cost.

{tc " Troubleshooting" Wf E}Troubleshooting

If your phone appears following phenomenon in the process of application, read following relative information at first. If the problems still can not be solved, please contact with the distributor or service provider.

Problem	Check Point
When switching on the phone, it prompts enter "PIN".	Input your PIN code which offered with SIM card together. If you have changed PIN code, input the new PIN code.
When switching on the phone, it prompts "Emergency".	Check whether valid SIM card is inserted or not.
When switching on the phone, it prompts enter "password".	Enter lock code you set already to unlock the phone.
No ring tone prompt for a incoming call.	Check volume setting of ring tone. And check whether "mute" is set in Profiles.
No display on screen when disconnect external power supply.	Check whether the battery has electricity, or it is damaged; or power on the phone again.
Press CALL/REDIAL key, but no number is sent.	Check whether you have set call barring.
Certain call cannot be received.	Check whether the number is

Problem	Check Point
	restricted.
Cannot send short messages.	Check the network condition, or message center setting.
Other abnormal phenomenon.	First refer to the user manual, and then check whether the power is connected correctly or not. If there is no problem, restart the phone.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct

The interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of FCC Rules.

Operation is subject to the following two conditions:

This device may not cause harmful interference, and This device must accept any interference received, including interference that may cause undesired operation.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. such modifications could void the user's authority to operate this equipment.

FCC RF Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.