



ZTE WP750

User Guide

Copyright © 2011 by ZTE Corporation

All rights reserved.

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice. The information on the package is only for your reference. Images are for your reference only. Please check the product model before purchasing.

No.55, Hi-tech Road South, ShenZhen, P.R.China

 
PostCode: 518057

Service Hotline: +86-755-26779999

E-mail: mobile@zte.com.cn

Http://www.zte.com.cn

Know Your Phone

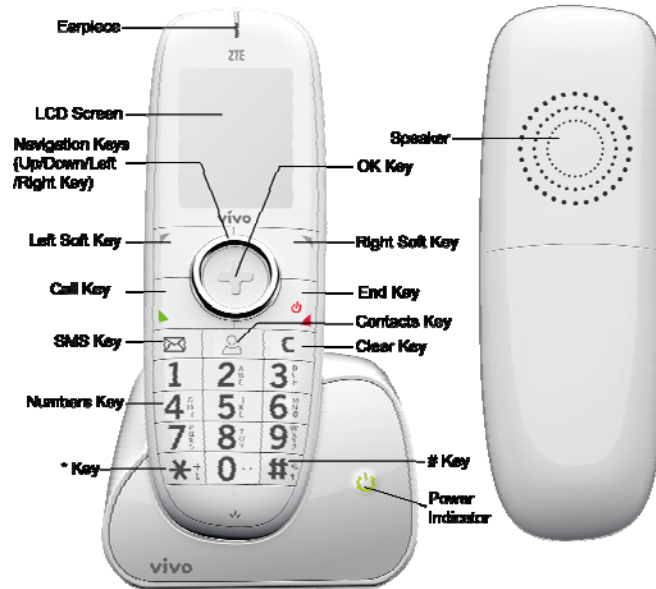

Note: Please refer to the real object, and this image is only for reference.







Key Instruction

Key	Description
Navigation Keys (Up/Down/Right/Left)	■ In standby mode: Used as hot keys to activate pre-set functions.

Key)	<ul style="list-style-type: none"> ■ In lists, messages and menus: Used to scroll up, down, left and right.
Left Soft Key	<ul style="list-style-type: none"> ■ The bottom line of the display shows the options that can be selected using the Left Soft Key.
Call Key	<ul style="list-style-type: none"> ■ Press the Call Key to dial or answer calls.. ■ In standby mode: Press the Call Key to show a list of all calls.
SMS Key	<ul style="list-style-type: none"> ■ This is the shortcut key to enter message menu.
Numbers Key	<ul style="list-style-type: none"> ■ Use the Number Keys to input numbers and character. ■ Hold keys 1 to 9 to make a speed call(These keys should be set in advance)
* Key	<ul style="list-style-type: none"> ■ Press the * Key to enter * ■ Press and hold * Key to lock Keypad ■ In an editing interface: Press the * Key to pop-up the symbols window.
OK Key	<ul style="list-style-type: none"> ■ In lists and menus: Press OK Key to confirm the command or the option selected. ■ In standby mode: Press the OK Key to enter the main menu interface.
Right Soft Key	<ul style="list-style-type: none"> ■ The bottom line of the display shows the options that can be selected using the Right Soft Key.
End Key	<ul style="list-style-type: none"> ■ Press and hold the End Key to turn the phone on/off. ■ Press the End Key to end or reject a call. ■ Press the End Key to return to the standby mode
Contacts Key	<ul style="list-style-type: none"> ■ In standby mode: Press the Contacts Key to display the contacts in your phone.
Clear Key	<ul style="list-style-type: none"> ■ Press the Clear Key once to delete the character on the left of the cursor when entering text or numbers. ■ Hold the Clear Key to erase all characters during text entry. ■ Press the Clear Key to delete a message, a contact, an Email or a file.
# Key	<ul style="list-style-type: none"> ■ In an editing screen: Press the # Key to change the input

	mode. ■ Press the # Key to enter #.
--	--

Interface Icons

Icon	Description	Icon	Description
	3G network Signal strength		GSM network Signal strength
	Alarm clock		New Message(flop when memory is full)
	Power Indicator		Mute

Installation

1. Charge the battery

 
- Connect the lead of the charger to the power jack in the phone below.
- Connect the charger to a standard AC socket.
- Meanwhile, power indicator in up-right corner of the display flops cyclically, indicating the charging is going. In power-off mode while charging, the display only shows the charging indicator. If the battery is completely flat in storage or used up, it may take for a while before the power indicator appears on the display or any calls can be made.
- When the power indicator on the screen stops flopping, the charging is completed. The charging takes usually up to 4 hours. In the process of charging, it is a normal phenomenon that the battery, phone and charger get into hot accordingly.
- After the completion of charging, disconnect the charger from the phone and AC socket.

Note:

- *When it is in charge, place the phone on condition of good ventilation and temperature between 0°C~+45°C. Ensure to use the charger offered by the manufacturer. Using unauthorized charger may cause danger and violate the authorization of the phone and the guarantee article.*
- *When the phone is automatically switched off or indicates the alarm information of power shortage, charge the battery in time.*
- *The duration time of the standby status or conversation of the phone is based on ideal working environment. In practice, the working time of battery varies with network condition, working environment and application methods.*
- *Please install the battery firstly before charge or use it.*


2. (U)SIM Card

- Power off the phone and remove other external power.
- Press and push the back-cover of the phone down to release and remove it.

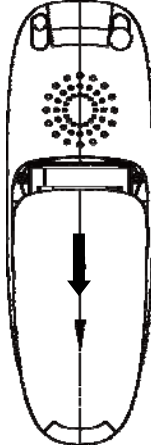

- Insert (U)SIM card into (U)SIM card slot in the phone or pull out (U)SIM

 card out of slot, as shown in picture hereinafter.

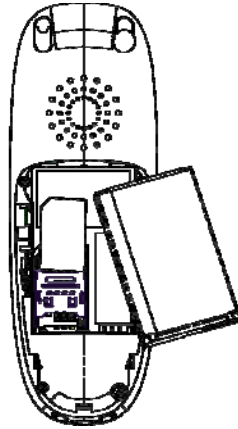

- Direct the back cover towards the locking catches on the both sides of the phone and push the back-cover of the phone upward to lock the cover into its place.

How to Power on/off

- ◆ Hold the **End Key** to power on the phone.
- ◆ In state of power-on, press and hold the **End Key** to power off the phone.

How to Make a Call

- ◆ Enter telephone number.
Add the international prefix, country code and area code (without the leading 0) before the number when making an international call.
- ◆ Press the **Call Key** to make the call.

Note: If required, press the * Key twice for the international prefix "+", or input international prefix e.g. "00" directly. Press * Key three times for the pause symbol "P".

Message and E-mail

Select **Msg** in **Menu** → **Messages**.

- Select **Create message** to write a message, select **Options** to send or save the message.
- Select **Inbox** to view messages received.
- Select **Outbox** to view the sent messages you haven't sent.
- Select **Draftbox** to view draft messages.
- Select **Sent** to view the sent messages.
- Select **User Folders** to view the messages where you have moved from Inbox and you can create new folders.
- Select **(U)SIM Inbox** to view the message stored in (U)SIM card.
- Select **Cell Broadcast** to view the broadcast messages.
- Select **Settings** to make some settings about MMS, SMS, Templates and Cell Broadcast Settings.

Select **Email** in **Menu** → **Messages**.

- Select **New Email** to edit an Email, select **Options** to send or save the message.
- Select **Inbox** to view Emails received.
- Select **Outbox** to view the Emails you haven't sent.
- Select **Draftbox** to view draft Emails.
- Select **Sent** to view the sent Emails.
- Select **User Folders** to view the Emails where you have moved from Inbox and you can create new folders.
- Select **Settings** to make some necessary settings about Email.

Phone code

Phone code could prevent your phone from illegal use. The default phone code is 0000. Change it to your own phone password as soon as possible.

PIN1 Code and PUK Code

- ◆ **PIN1** Code ((U)SIM password): PIN1 Code could prevent your (U)SIM Card from illegal use. When (U)SIM password is on, you should enter the PIN1 code when opening the phone again. Change the default PIN1 code password to your own PIN1 Code password as soon as possible.
- ◆ **PUK** Code: Consecutive inputting wrong PIN1 code for several times can cause locking of (U)SIM Card. To unlock, you need PUK code.

Note: PIN1 code and PUK Code may be offered together with the (U)SIM Card. If not, contact with network operator.

Text Input

Operation	Method
Input Letters	In "ABC" or "abc" input mode, press corresponding letter key till the letter appears.
Input Words	In "Eng" or "Pt" input mode, press the Number keys to input the characters of the word.
Input Digits	In "123" input mode, press digit key once.
Input Symbol	Press * key, then select corresponding symbol by pressing Navigation Keys , and then press OK Key to confirm. In ABC/abc Input mode, press "1" key till the symbol (common symbols) appears.
Input Space	Press "0" Key , except for being in numbers mode.
Erase Character	Press Clear Key .
Erase all the characters	Press and hold Clear Key till all the characters to be erased.
Move cursor	Press Navigation Keys .
Change input mode	Press # Key to change text input mode.

Menu Tree

1. Recent Call

- 1.1 All
- 1.2 Missed
- 1.3 Received
- 1.4 Dialed

2. Browser

3. Vivo Chip

4. IntraVivo

5. Messages

- 5.1 Msg
- 5.2 Email

6. Tools

- 6.1 Game & App
- 6.2 Alarm
- 6.3 Calendar
- 6.4 Stopwatch
- 6.5 World Time
- 6.6 Calculator
- 6.7 Converter

7. Settings

- 7.1 Profiles
- 7.2 Phone

- 7.3 Display
- 7.4 Connections
- 7.5 Calls
- 7.6 Security

8. Multimedia

- 8.1 Music
- 8.2 Video
- 8.3 Audio record

9. File Mgr

- 9.1 Pictures
- 9.2 Audios
- 9.3 Videos
- 9.4 Other files

Menu Function

Hereinafter are brief instructions on menu functions of the phone.

<i>Function</i>	<i>Description</i>	<i>Selection</i>
Add contact	Save phone number	Contacts → Options → Add new Contact
Edit the contact	Edit the contact	Contacts → Options → Edit contact
Delete contact	Delete the contact	Contacts → Options → Delete contact
Used space	View the number of saved entries and maximum number of entries capacity in phone and (U)SIM	Contacts → Options → Advanced → Memory info.
Speed Dial info.	View speed dial list	Contacts → Options → Advanced → Speed Dial info.
Set speed dial	Set the speed dial number	Contacts → Options → Set speed dial
Batch operation	Copy/move all the contact information between (U)SIM card and phone. Delete all contacts in (U)SIM card or phone.	Contacts → Options → Advanced → SIM Management
Send message	Send message to others	Menu → Messages → Msg → Create message
Read message	Read message in Inbox, Outbox, Draftbox, Sent, User folders, (U)SIM Inbox, Cell Broadcast	Menu → Messages → Msg → Inbox/Outbox /Draftbox /Sent/(U)SIM Inbox/Cell Broadcast

Templates message	Some common used messages preformatted	Menu → Messages → Msg → Settings → Templates Settings
Recent calls	View or dial all recent calls	Menu→ Recent Call → All / Missed / Received / Dialed
Call forwarding	Forward an incoming call to a designated phone number	Menu→ Settings → Calls → Call forwarding
Call waiting	Answer the second call, hold the first call.	Menu → Settings → Calls → Call waiting
Language	Set the displayed language	Menu→ Settings→ Phone → Language
Own number	Set the own number	Menu→ Settings→ Phone → Phone number
Shortcut key	Set the scrolling key as shortcut key of some menu	Menu→ Settings→ Phone → Shortcut keys
Keypad lock	Lock the keypad automatically	Menu→ Settings → Phone → Auto keypad
Time and Date	Set Date , Time, Time style and Auto-update	Menu→ Settings → Phone →Time and Date
Message alert	Select type of tone to prompt when there is a message	Menu→ Settings → Profiles → Edit → Message tone
Volume	Set the volume of Voicecall ringtone / Earpiece volume	Menu→ Settings→ Profiles → Edit →Voicecall ringtone / Earpiece volume
Power on/off sound	Open/Close power on/off function	Menu→ Settings→ Profiles → Edit → Power on/off sound
Hide my number	Hide your number when making a call.	Menu→ Settings→ Calls→ Hide my number

Fixed dialling number	If this function is enabled, only the numbers of the fixed dial number list can be dialed out. And all the messages can not be sent.	Menu→ Settings→ Security→ Fixed dial numbers
Network Settings	Set the way of searching network	Menu→ Settings→ Connections → Network settings
PIN code and Handset code	Set or change the PIN code and Handset code	Menu→ Settings→ Security → Active security codes / Change security codes
Profiles settings	This setting allows you to personalize your phone to best suit the environment you are in	Menu → Settings → Profiles
Music	Use the tool to play music	Menu → Multimedia → music
Video	Use the tool to play video	Menu → Multimedia →Video
Audio record	Record the voice memo.	Menu → Multimedia → Audio record
Streaming URL	Streaming URL are links to audio or video streaming content over the internet. The content is only available while connected to the server and depends on your network provider.	Menu → Multimedia → Video → Streaming URL
Stopwatch	To measure an exact duration of time.	Menu → Tools → Stopwatch
World time	View the other cities time	Menu → Tools → World Time

	of the world.	
Converter	Make unit conversion.	Menu → Tools → Converter
Calendar	Set and modify the agenda.	Menu → Tools → Calendar
File manager	To organize the files or folders.	Menu → File Mgr
Alarm clock	Set alarm alert time	Menu → Tools → Alarm
Calculator	Execute basic math calculation	Menu → Tools → Calculator
Browser	Launch WAP browser to link web site	Menu → Browser



Safety Warning

To the Owner

- Some electronic devices are susceptible to electromagnetic interference sent by phone if inadequately shielded. Use phone at least 20 cm or as far away as you can from TV sets, radio and other automated office equipment so as to avoid electromagnetic interference.
- Operating phone may interfere with medical devices like hearing aids and pacemakers, or other medical devices in hospital. Consult a physician or the manufacturer of the medical device before using phone.
- Be aware of the usage limitation when using phone at places such as oil warehouses, or chemical factories, where there are explosive gases or explosive products being processed, because even if your phone is in idle state, it still transmits radio frequency (RF) energy. Therefore, power off your phone if required.
- Keep out of the reach of small children. Phone may cause injury if used as a toy.
- Do not put other things on the terminal to avoid overlaying radiator.

Phone Use

- Please use original accessories or accessories that are authorized by the manufacturer. Using any unauthorized accessories may affect your phone's performance, and violate related national regulations about telecom terminals, or

even endanger your body.

- As your phone can produce electromagnetic field, do not place it near magnetic items such as computer disks.
- Do not expose your phone to direct sunlight or store it in hot areas. High temperatures can shorten the life of electronic devices.
- Prevent liquid from leaking into your phone.
- Disconnect external power supply and do not use your phone during thunderstorm.
- Unplug the external power adapter or remove battery when your phone is not in use, esp. for a long period of time.
- It is highly recommended to charge the battery before initial use. The battery might have been discharged during storage and delivery.
- Do not unplug the connector of the data cable from phone, and not install or remove battery, when the power is on.
- Keep phone power on and in service area when make emergency call. Enter emergency call number in status of standby, and then press **Call Key** to send.
- Do not attempt to disassemble the phone by yourself. Non-expert handling of the devices may damage them.

Battery Use

- Do not short-circuit the battery, as this can cause excessive heat and fire.
- Do not store battery in hot areas or dispose of it in a fire to avoid explosion.
- Never use any charger or battery damaged or worn out.
- Return the wear-out battery to the provider or put it in the appointed recycle place. Do not put it in familial rubbish.

Warning: If the battery is broken, keep away from substance inside. If it taints your skin, wash your skin with abundant fresh water and ask doctor for help if necessary.

Safety and General Use in Vehicles

- Before making or answering a call, you should pay attention to the local laws about using wireless mobile phones and take them into account in practical use.
- Safety airbag, brake, speed control system and oil eject system shouldn't be affected by wireless transmitting. If you do meet problems above, contact your automobile provider.
- Power off your mobile phone when refueling your automobile, and so do the place

where duplex wireless equipments are banned. Don't put your phone together with flammable or explosive items, inner spark may cause fire.

Cleaning and Maintenance

- The phone is non-waterproof, keep it dry and store in shaded and cool place.
- If you want to clean your phone, use clean fabric that is a bit wet or anti-static. Do not use harsh chemical cleaning solvents or strong detergents to clean your phone such as alcohol, dilution agent and benzene. Power-off your phone before you clean it.
- Use phone within a temperature range of -10°C~+55°C and the humidity less than 95%.

Radio Frequency (RF) Energy

- This model device meets the government's requirements for exposure to radio waves.
- This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.
- The exposure standard for wireless devices employs a unit of measurement known as the Specific Absorption Rate or SAR. The SAR limit set by the FCC is 1.6W/kg.
- • Tests for SAR are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.
- • The highest SAR value for the model device as reported to the FCC when worn on the body, as described in this user guide, is **0.891 W/kg**. (Body-worn measurements differ among device models, depending upon available enhancements and FCC requirements.)
- • While there may be differences between the SAR levels of various devices and at various positions, they all meet the government requirement.
- • The FCC has granted an Equipment Authorization for this model device with all

reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model device is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on:

- FCC ID: **Q78-ZTEWP750**.
- For body worn operation, this modem has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and positions the handset a minimum of 1.5 cm from the body. Use of other enhancements may not ensure compliance with FCC RF exposure guideline.

FCC Compliance

- This device complies with part 15 of the FCC rules. Operation is subject to the condition that this device does not cause harmful interference. This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - i. Reorient or relocate the receiving antenna.
 - ii. Increase the separation between the equipment and receiver.
 - iii. Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
 - iv. Consult the dealer or an experienced radio/TV technician for help.

v. Changes or modifications not expressly approved by the party responsible

for compliance could void the user's authority to operate the equipment.

The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

(1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including

interference that may cause undesired operation.

Limit Warranty

The warranty does not apply to defects or errors in the product caused by:

- (a) Reasonable abrasion.
- (b) Misuse including mishandling, physical damage, improper installation, unauthorized disassembly of the product.
- (c) Water or any other liquid damage.
- (d) Any unauthorized repair or modification.
- (e) Power surges, lightning damage, fire, flood or other events outside ZTE's reasonable control.
- (f) Use of the product with any unauthorized third party products such as generic chargers.
- (g) Any other cause beyond the range of normal usage for products.

End User shall have no right to reject, return, or receive a refund for any product from ZTE under the above-mentioned situations.

This warranty is end user's sole remedy and ZTE's sole liability for defective or nonconforming items, and is in lieu of all other warranties, expressed, implied or statutory, including but not limited to the implied warranties of merchantability and fitness for a particular purpose, unless otherwise required under the mandatory provisions of the law.

Limitation of Liability

ZTE shall not be liable for any loss of profits or indirect, special, incidental or

consequential damages resulting from or arising out of or in connection with using this product, whether or not ZTE had been advised, knew or should have known the possibility of such damages.

Troubleshooting

If your phone appears following phenomenon in the process of application, read following relative information at first. If the problems still can not be solved, please contact with the distributor or service provider.

Problem	Check Point
When switching on the phone, it prompts "Enter PIN1".	Input your PIN1 Code which offered with (U)SIM card together. If you have changed PIN1 code, input the new PIN1 Code.
When switching on the phone, it prompts "Emergency only".	Check whether valid (U)SIM card is inserted or not.
When switching on the phone, it prompts "Enter phone code".	Enter phone lock code you set already to unlock the phone.
No ring tone prompt for a incoming call.	Check volume setting of ring tone.
No display on screen when disconnect external power supply.	Check whether the battery has electricity, or it is damaged; or power on the phone again.
Certain call cannot be received.	Check whether the number is restricted to come.
Cannot send short message.	Check the network condition, or message center settings.
Other abnormal phenomenon.	First refer to user manual, then check whether the power is connected correctly or not, if there are no problems, please power off and re-start the phone again.