

**ZTE中兴**  
**GSM Wireless Phone**  
**User Guide**

ZTE CORPORATION  
NO. 55, Hi-tech Road South, ShenZhen, P.R.China  
Postcode: 518057  
Tel: (86) 755 26779999  
URL: <http://www.zte.com.cn>  
E-mail: [mobile@zte.com.cn](mailto:mobile@zte.com.cn)  
Manual No. : 079584500000

## **LEGAL INFORMATION**

Copyright © 2010 ZTE CORPORATION.


All rights reserved.

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice.

# Chapter 1

## Know Your Phone

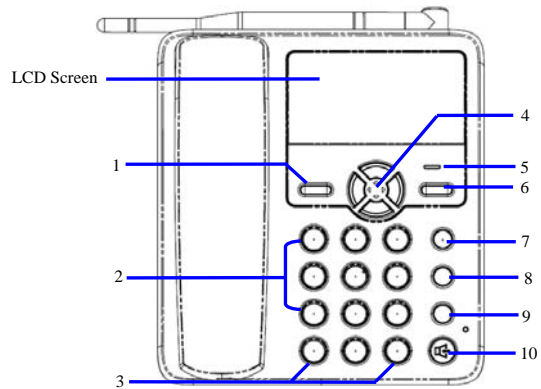

# Chapter 2

## Key Instruction

Key	Description
1. MENU/SELECT	<ul style="list-style-type: none"><li>• Enter main menu.</li><li>• Select or confirm options in menus.</li></ul>
2. Number	<ul style="list-style-type: none"><li>• Use these keys to enter numbers and characters.</li></ul>
3. # , *	<ul style="list-style-type: none"><li>• Perform different functions under different conditions.</li></ul>
4.Scrolling	<ul style="list-style-type: none"><li>• Press these keys to scroll cursor to the left, right, up or down when inputting characters or selecting items.</li><li>• Default functions in standby mode are set in Settings menu.</li></ul>
5. EXT PWR	<ul style="list-style-type: none"><li>• Lights up when the phone is connected to external power outlet.</li></ul>
6. NAMES/CLR/BACK	<ul style="list-style-type: none"><li>• In standby mode, press this key to enter right-bottom submenu on the screen.</li><li>• Press this key to erase character(s) while editing text.</li><li>• Press this key to return to the previous page during menu navigation.</li></ul>
7.MESSAGE	<ul style="list-style-type: none"><li>• This is the shortcut key to enter message menu in standby mode.</li></ul>
8. EXIT	<ul style="list-style-type: none"><li>• End an active call or reject calls.</li><li>• Power on/power off the phone.</li></ul>
9. CALL/REDIAL	<ul style="list-style-type: none"><li>• Make a call or answer an incoming call.</li><li>• In standby mode, press this key to enter recent calls list.</li></ul>
10.HANDS-FREE	<ul style="list-style-type: none"><li>• If you are using the handset to call and want to transfer the call to the speakerphone, press this key and hang up the handset to put conversation on the speakerphone.</li><li>• Press this key to end a hands-free call.</li></ul>










### Notes:

In this manual, “press” a key means to press the key once, “hold” a key means to press the key for 2 or 3 seconds.

# Chapter 3

## Interface Icons

Icon	Description	Icon	Description
	Signal strength		New message (blinks when memory is full)
	Silent		Divert always
	Power indicator		Alarm clock
	Keypad lock		

# Chapter 4

## **Installation**

### ***1. Handset***

Connect phone and handset via the phone cord.

### ***2. External power adapter***

Plug the external power adapter to the external AC socket.

### ***3. SIM card***

Always switch the phone off before removing or inserting SIM card.

Open the bottom cover of the battery. Remove the battery, slide the SIM card into the SIM card slot. Make sure that the contact area of the card is facing down, and the beveled corner matches with the SIM card slot. Put in the battery and install the bottom cover.

# Chapter 5

## How to Power on/off

- ◆ To power on the phone, connect phone and external power outlet with the power adapter and then hold **Exit** key for about three seconds.
- ◆ To power off the phone, hold the **Exit** key till the phone is powered off.



### Notes:

It is strongly recommended to connect the phone to external power outlet, and use internal battery to power your phone only when external power fails or is not available. The phone will charge the internal battery automatically when it is connected to external power outlet.

# Chapter 6

## How to Make a Call

There are two methods for making a call.

■ The first method:

1. Pick up the handset or press the **HANDS-FREE** key.
2. Enter the phone number, wait for several seconds to send the call automatically or press **CALL/REDIAL** key to make the call.

Select recipient's number from **Phonebook**, or press **CALL/REDIAL** key to select a number from the recent calls list, then press **CALL/REDIAL** key to make the call.

■ The second method:

Enter the number or select recipient's number from **Phonebook**, or press **CALL/REDIAL** key to select a number from the recent calls list, then press **CALL/REDIAL** key to make the call.



**Notes:**

Add the international prefix, country code and area code (without the leading 0) before the number when making an international call.



# Chapter 7

## **Voice Mail**

Before using voice mail, please contact service provider to confirm that the voicemail has been activated.

The system automatically sends a message to your phone to inform you that there is a new voice mail. Read the message and then dial voice mailbox number to listen to your voice mail.

To read or send your voice mail quickly, you set the voice mailbox number first. Pick up the handset or press **HANDS-FREE** key, and then hold “1” key to dial voice mailbox number. In standby mode, you can also hold “1” key directly to dial voice mailbox number.

# Chapter 8

---

## Message

Select **Short Message** in **Menu**, and then select **Accept**.

- Select **New message** to write message text, select **Option** to send or save the message.
- Select **Inbox** to view messages received.
- Select **Outbox** to view the **Only Save** or **Send and Save** messages.
- Select **Draftbox** to view draft messages.
- Select **Voice mail** to listen to your voice mail messages, or set the voice mailbox number.
- Select **Message settings** to make some necessary short message settings.

# Chapter 9

## **Phone Code**

Phone code could prevent your phone from unauthorized use. The default phone code is 1234. Change it to your own as soon as possible.

If you change the default phone code to a new one, remember it or place it at secure place.

# Chapter 10

---

## PIN1 Code and PUK Code

- **PIN1** code (SIM password): PIN1 code could prevent your SIM card from illegal use. When PIN1 code is enabled, you should enter the PIN1 code when powering on the phone again. Change the default PIN1 code to your own as soon as possible.
- **PUK** code: The SIM card will be locked if you enter a wrong PIN1 code consecutively for several times. To unlock, you need PUK code.



### Notes:

PIN1 code and PUK code may be offered together with the SIM card. If not, contact your service provider.

# Chapter 11

## Text Input

Operation	Method
Input letters	<b>Multitap</b> Input—"ABC", "Abc" or "abc", press corresponding letter key till the letter appears.
Input words	<b>eZiText</b> Input—"Eng", press the <b>Number</b> keys to input the characters of the word.
Input digits	<b>Numbers</b> Input—"123", press the <b>Number</b> keys to input the digits you want directly.
Input symbol	Press * key, and then select corresponding symbol by using <b>Scrolling</b> keys. Press "1" key till the symbol (common symbols) appears under <b>Multitap</b> input mode.
Input space	Apart from <b>Numbers</b> input mode, press "0" key to add space.
Erase character	Press <b>NAMES/CLR/BACK</b> key.
Erase all the characters	Hold <b>NAMES/CLR/BACK</b> key till all the characters are erased.
Move the cursor	Press <b>Scrolling</b> keys.
Change input mode	Press # key to change text input mode.

# Chapter 12

## Menu Function

Hereinafter are brief instructions for menu functions of the phone.

Function	Description	Selection
Create message	Create message and send to others.	Menu→ Short Message →New message
Read message	Read message in Inbox, Outbox, Drafts.	Menu→ Short Message→ Inbox/Outbox/Drafts
Voicemail	Receive and listen to voice mail messages. Set voice mailbox number.	Menu→ Short Message→ Voice mail
Message settings	Make some necessary short message settings.	Menu→ Short Message→ Message settings
Browse contact	View contacts of the selected group.	Menu→ Phonebook→ Browse
Add contact	Save phone number.	Menu→ Phonebook→ Create
Search contact	Search for a contact entry.	Menu→ Phonebook→ Search
Speed dial list	View speed dial list.	Menu→ Phonebook→ Speed dial
Save to	Select contact saving method.	Menu→ Phonebook→ Setting→ Save to
Ring tone	Set ring tone for the contact groups.	Menu→ Phonebook→ Setting→ Set group ring tone
Storage status	View the number of saved entries and maximum number of entries capacity in phone and SIM.	Menu→ Phonebook→ Storage status
Recent calls	View or dial all recent calls.	Menu→ Call Records→ Missed call/Outgoing call/Incoming call
Call duration	Check the outgoing or incoming duration.	Menu→ Call Records→ Call duration
Profiles	Set profiles of your phone.	Menu→ Settings→ Profiles
Date and Time	Set the date and the time.	Menu→ Settings→ Clock settings→ Date & Time settings
Date display format	Set the date format.	Menu→ Settings→ Clock settings→ Date display format
Time display format	Set the time format.	Menu→ Settings→ Clock settings→ Time display format
Backlight	Set the backlight on/off when using the phone.	Menu→ Settings→ Back light
Language	Set language for the phone.	Menu→ Settings→ Phone settings→ Language

Function	Description	Selection
Shortcut key	Set the scrolling key as shortcut key of some menu.	Menu→ Settings→ Phone settings→ Shortcut settings
Keypad lock	Lock the keypad automatically. Press # key, then * key to unlock.	Menu→ Settings→ Phone settings→ Auto lock keypad
Minute minder	Set minute minder.	Menu→ Settings→ Call settings→ Minute beep
Auto dial	Set auto dial function.	Menu→ Settings→ Call settings→ Auto dial
Call waiting	Put the current call on hold to answer the other incoming call.	Menu→ Settings→ Network service→ Call waiting
Call divert	Specify the conditions under which the call types should be diverted to your voicemail box or another number.	Menu→ Settings→ Network service→ Call divert
Call barring	Restrict the dialing or receiving of certain calls.	Menu→ Settings→ Network service→ Call barring
Network Settings	Set the way of searching network.	Menu→ Settings→ Network service→ Network selection
SIM password	Set or change the SIM password.	Menu→ Settings→ Security settings→ SIM password
Phone lock	Set or change the phone lock code.	Menu→ Settings→ Security settings→ Phone lock
Factory settings	Switch to the factory default settings.	Menu→ Settings→ Security settings→ Factory settings
Version Info	View the software version of the phone.	Menu→ Settings→ Version Info
Alarm clock	Set alarm clock time.	Menu→ Tools→ Alarm
Calculator	Execute basic math calculation.	Menu→ Tools→ Calculator
Services	SIM Card Tool Kit (various for different SIM card).	Menu→ Services

# Chapter 13

---

## Warning and Maintenance

- Some electronic devices are susceptible to electromagnetic interference sent by the phone if inadequately shielded. Keep using the phone at least 20 cm or as far away as you can from TV sets, radio and other automated office equipment so as to avoid electromagnetic interference.
- Operating the phone may interfere with medical devices like hearing aides and pacemakers, or other medical devices in hospital. Consult a physician or the manufacturer of the medical device before using the phone.
- Be aware of the usage limitation when using the phone at places such as oil warehouses, or chemical factories, where there are explosive gases or explosive products being processed, because even if your phone is in idle state, it still transmits radio frequency (RF) energy. Therefore, power off your phone if required.
- Do not touch the antenna while calling. Otherwise it will affect the quality of calling and waste battery energy. The damaged antenna will cause slight burn while touching your skin.
- Keep the antenna free from obstructions and position the antenna straight up. This will ensure best call quality.
- Keep the phone out of the reach of small children. The phone may cause injury if used as a toy.
- Do not put other things on the terminal to avoid overlaying radiator.
- Use original accessories or accessories that are authorized by the manufacturer. Using any unauthorized accessories may affect your phone's performance, and violate related national regulations about telecom terminals, or even endanger your body.
- As your phone can produce electromagnetic field, do not place it near magnetic items such as computer disks.
- Do not expose your phone to direct sunlight or store it in hot areas. High temperature can shorten the life of electronic devices.
- Prevent liquid from leaking into your phone.
- Disconnect external power supply and do not use your phone during thunderstorm.
- Unplug the external power adapter or remove battery when your phone is not in use, esp. for a long period of time.
- It is highly recommended to charge the battery before initial use. The battery might have been discharged during storage and delivery.
- Do not unplug the connector of the data cable from the phone, and not install or remove battery, when the power is on.
- Do not attempt to disassemble the phone by yourself. Non-expert handling of the devices may damage them.
- The phone is non-waterproof, keep it dry and store in shady and cool place.
- If you want to clean your phone, please use clean fabric that is a bit wet or anti-static. Do not use harsh chemical cleaning solvents or strong detergents to clean your phone, such as alcohol, dilution agent and benzene. Power off your phone before you clean it.



# Chapter 14

---

## Limited Warranty

- This warranty does not apply to defects or errors in the Product caused by:
  - i. Reasonable Router Appearance Disfiguration.
  - ii. End User's failure to follow ZTE's installation, operation or maintenance instructions or procedures.
  - iii. End User's mishandling, misuse, negligence, or improper installation, disassemble, storage, servicing or operation of the Product.
  - iv. Modifications or repairs not made by ZTE or a ZTE-certified individual.
  - v. Power failures, surges, fire, flood, accident, actions of third parties or other events outside ZTE's reasonable control.
  - vi. Usage of products of third Parties, or usage in conjunction with third party products provided that such defects is due to the combined usage.
  - vii. Any other cause beyond the range of normal usage for Products.

End User shall have no right to reject, return, or receive a refund for any product from ZTE under the above-mentioned situations.

- This warranty is end user's sole remedy and ZTE's sole liability for defective or nonconforming items, and is in lieu of all other warranties, expressed, implied or statutory, including but not limited to the implied warranties of merchantability and fitness for a particular purpose, unless otherwise required under the mandatory provisions of the law.

# Chapter 15

## **Limitation of Liability**

ZTE shall not be liable for any loss of profits or indirect, special, incidental or consequential damages resulting from or arising out of or in connection with using of this product, whether or not ZTE had been advised, knew or should have known of the possibility of such damages, including, but not limited to lost profits, interruption of business, cost of capital, cost of substitute facilities or product, or any downtime cost.

# Chapter 16

## Troubleshooting

If your phone appears following phenomenon in the process of application, read following relative information at first. If the problems still can not be solved, please contact with the distributor or service provider.

Problem	Check Point
When switching on the phone, it prompts "Enter PIN 1".	Input your PIN code which offered with SIM card together. If you have changed PIN code, input the new PIN code.
When switching on the phone, it prompts "Emergency Only".	Check whether valid SIM card is inserted or not.
When switching on the phone, it prompts "Enter phone code".	Enter lock code you set already to unlock the phone.
No ring tone prompt for a incoming call.	Check volume setting of ring tone.
No display on screen when disconnect external power supply.	Check whether the battery has electricity, or it is damaged; or power on the phone again.
Press <b>CALL/REDIAL</b> key, but no number is sent.	Check whether you have set call barring.
Certain call cannot be received.	Check whether the number is restricted.
Cannot send short messages.	Check the network condition, or message center setting.
Other abnormal phenomenon.	First refer to the user manual, and then check whether the power is connected correctly or not. If there is no problem, restart the phone.

# Chapter 17

## Declaration

We, ZTE Corporation, declared that:

- The user is cautioned that changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.
- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- The antenna(s) used for this transmitter must be installed with providing a separation distance of at least 20cm from all persons.
- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment