

# Outdoor&Shower Bluetooth Speaker

Model: \$100

# Package Content

1 x Seedforce \$100 Bluetooth Speaker

1 x USB Charging Cable

1 x 3.5mm Audio Cable


1 x Lanyard

1 x User Manual

# Specification

Waterproof Dustproof grade	lp65
Bluetooth Version	V4.1
Supported Bluetooth Profile	HSP ,HFP A2DP,AVRCP
Operation Range	Up to 10m / 33ft
Play Time	16hours
Charging Time	4hours
Speaker Output Power	5W
Product Weigh	180 g
Product Dimension	3.18x3.18x1.78in/81x81x45mm
AUX	3.5mm Audio-in Jack
Power Input	Micro USB 5V,1A
Battery type	Built-in Lithium Battery (2500mAh)

#### **Product Overview**

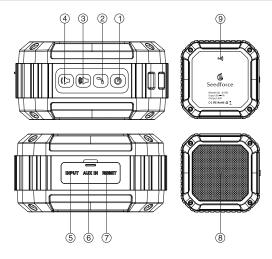

- 1. Power/Pair on and off button
- 2. Call taking/Pause music
- 3. Volume increase button
- 4. Volume decrease button
- 5. Reset Hold
- 6. Aux Audio Input Port
- 7. Micro USB Charge Port
- 8. Horn(A Pilot Light Inside)
- 9. NFC induction Zone

#### Charging

Before getting started enjoying your \$100 speaker, it is important to fully charge it for 4 hours.

- To charge the unit:
- 1. Connect the micro USB end of the charging cable to the micro USB charging port on the speaker.
- 2. Next, plug the USB cable into a USB charging source (option a or b) and the red LED indicator will come on.
- 3. When the red LED turns off your device is charged andready to use. The normal charge time is 4 hours.

 $\star$ If the battery is running low, the speaker will make a "du-du" sound every 25 seconds, please recharge the battery according to the instructions above.

Now that your device is charged, it is ready to go!

# Bluetooth Pairing (for mobile phones, tablets, laptops)

- 1. Press the power on/off button for 2 seconds , the machine will be power on.and then the indicate blue led will be flash 2 times. and then ,please press the power on/off button for 2 seconds again , the the machine will enter the pair mode the blue and red indicate led will flash in turn.
- 2. The mobile-phone that the first pair with machine, please open the Bluetooth function and search the machine, find the machine (\$100) and connect., If connect successfully the blue led will flashing.
- 3. If the mobile-phone paired successfully before, the machine will be auto connect with mobile -phone when the machine turn on
- 4. When the machine connect the mobile-phone successfully, you can play the music in the mobile-phone, and then if you mobile phone have call in, you can answer by short- press the power on/off button or reject the call by press the power on/off button for 2 seconds. If you want to end this call when you in answer status, you also can by short-press power on/off button again.

#### Note:

- 1. If pairing is not completed within 5 minutes, the speaker will be off automatically. Please restart the speaker and try again.
- 2. Press and hold the multi-function button for 2 seconds and the speaker will disconnect with the current connected device and go into pairing mode again.
- 3. When turning on the Bluetooth function of the device last connected, the speaker will automatically connect to it.
- 4. If using with computer, please make sure you have downloaded the latest Bluetooth driver for your operating system.
- 5.Maximum operating range for the \$100 speaker is 33ft (10m). If you move out of range, the speaker will lose connection. You will need to move back to within range and reconnect to your Bluetooth audio device.

# Playing Audio via Auxiliary (AUX)

Turn on the \$100 Bluetooth speaker and connect it with your PC or notebook via the 3.5mm audio jack by using the 3.5mm audio cable attached.

#### Note:

- 1. When playing audio through AUX, you are able to adjust the volume from the speaker by pushing the volume control button.
- 2. If there is no audio output from your PC or notebook within 5 minutes, the speaker will be off automatically. Please restart the speaker and try again.
- 3. For some computers, you may need to visit the audio control panel to manually set the speaker as the default audio device.

#### Operating Instruction:

- 1. Power on/off: By press button for 2 seconds, the machine will be turn on. when the machine in working state, you can enter bluetooth pair mode by long-press button for 2 seconds. In the working status, if you press this button for 4 seconds in the working status, the machine will be turn off.
- 2. Micro USB Charge Port use for recharging.
- **3**. Adjust the Volume and switch the track: Short Press/Long Press the volume button to switch to the next of the preview track and increase or decrease the volume.
- 4. Push the volume control button right/left to increase ordecrease the volume.
- **5.** Music Control :Press the Call taking/pause music button once to pause, and press it again to resume.
- **6.** Answering a call: Press the Call taking/pause music button once to answer a call, or answer directly from your phone.
- 7. Ending a call: During a call, press the Call taking/pause music button once will end the call. You can also end the call directly from your phone.
- **8**. Rejecting an incoming call: When a call is incoming, hold and press the Call taking/pause music button for 2 seconds will reject the incoming call.
- 9. Reset button: Tryusethepintopressthebutton, when the machine deadhalt.

Status of the speaker	LED Indicator
Pairing mode	The Bluetooth indicator flashes rapidly
Connectedto a device	The Bluetooth indicator flashes once every 5 seconds
AUX Mode	The AUX indicator flashes rapidly
Charging	The charging indicator stays on
Fully charged	The charging indicator goes off

## FAQ and Trouble Shooting

Q: Why isn't my speaker pairing with my iPhone/iPad?

A: Please make sure that your \$100 speaker is powered on and in pairing mode (blue light flashes rapidly). Also, check to see that your iPhone/iPad is in searching mode.

Q: Why can't my speaker play audio via Aux?

A: Please try connecting and disconnecting the 3.5mm audio cable a few times. Make sure the speaker is turned on. Sometimes, computer system may not recognize the device at first. For some computers, you may need to visit the audio control panel to manually set the speaker as the default audio device.

Q: Can I use the speaker while it is charging?

A: Yes, but in order to ensure the long-term performance of the battery, we recommend that you try to avoid using the speaker while charging.

Q: The music sometimes cuts off while playing.

A: The operation range of the speaker may be influenced by obstructions, such as walls, pillars, etc. To ensure a stable connection, we recommend avoiding such obstructions whenever possible and/or shortening the distance during use.

Q: I turn on the speaker, but I cannot see any LED lights coming on? A: Please make sure that the unit is charged. If it is fully charged and still nothing happens or if you are not able to charge the unit, please contact our customer support for warranty cover.

#### Care and Maintenance

- 1. Keep the speaker away from heat and humidity.
- 2. Do not put the product under direct sunlight or hot areas. High temperatures will shorten lifespan of the speaker, battery and the internal circuit board.
- 3. Power off the speaker when not in use and before storing.

### Warranty

We warrant this device for 18 month from date of the original purchase for manufacturer defects. If the device fails due to a manufacturing defect, please return the product directly to where it was purchased and the device will be repaired or replaced.

## **Customer Support Contact**

For additional assistance or warranty cover claim, please contact us: Email: seedforce@outlook.com (all enquires)

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.