

## TO PLAY SAFELY

- Don't operate your boat where there are water plants, rubbish, or other obstacles in the pond. This could impair propeller and cause damage.
- Don't play when there is a strong water current or when the wind is blowing strongly on the pond.
- Never play in ocean (salt) water. This will cause rusting of parts.
- Don't play outdoor during thunderstorms.
- Avoid jamming of Boats using the same frequency band.
- Interference can be caused by other strong radio waves. In such cases, try playing at another time or in a different place.
- If the boat does not work well, try changing the batteries of both the boat and the transmitter with new or recharged batteries.
- After playing bring the boat to a dry place, remove the batteries from the boat and the transmitter, drain all the water out of the hull, and dry the boat well before putting it away.

## CAUTION

- Please read instructions book carefully before operating this Boat.
- The rotating propeller is very dangerous. Never put your fingers closed to the propeller when boat is turned ON.
- When lifting your boat, make sure you hold the body securely.
- Bring the boat back to shore (out of water) before the battery power is running out.
- It is designed safely that backward sailing is lower in speed compared with forward sailing.
- If the BOAT capsizes, take out all the batteries and dry them out completely, especially at the terminals, when the BOAT is dried completely, insert the batteries as before and check the operation of both motor and transmitter control before replacing into the water.
- Adult supervision is recommended. Keep out of reach of very young children.
- Children should be made aware of the dangers associated with playing neat water.
- The propellers of this BOAT rotate at very high speeds.
- Please keep these instructions for future reference.
- Never attempt any repair as this may invalidate your guarantee.

## TROUBLE SHOOTING

### PROBLEM! VEHICLE DOES NOT MOVE

1. Are the + and - contacts correctly matched in transmitter and boat?
2. Are the metal contact tabs touching, rusty or dirty in transmitter?
3. Are there batteries in vehicle and transmitter?
4. Is the power switch on boat and transmitter turned on?
5. Is the battery / power pack weak or out of power?

### PROBLEM! VEHICLE RUNS SLOWLY

1. Are the batteries in the boat and transmitter worn out?
2. Is there something obstructing the movement of the boat?

### Warning:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules and R&TTE Directive 1999/5/EC. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to the radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into a outlet on a circuit different from that to which the receiver is needed.
- Consult the dealer or an experienced radio/TV technician for help.

 
 
THIS PRODUCT IS FOR THE USE IN U.K., SPAIN, GERMANY, FRANCE, BELGIUM, ITALY, SWITZERLAND, THE NETHERLANDS, DENMARK, PORTUGAL, U.S. AND CANADA.



CE 0197 !

Printed in China

Another Quality Product From



NO.1072 / 1073  
©ZAP TOYS 2002  
MADE IN CHINA

# RADIO CONTROL

#1072

# Cabin Cruisers



#1073

# JETSKI

For over 5 years of age  
Three function R/C

## Instruction Manual

 
PLEASE ENSURE TO REMOVE ALL ACCESSORIES AND COMPONENTS FROM THE PACKAGING

### HOW TO OPERATE :

1. Switch on boat.
2. Hold "forward" button on transmitter to go forward.
3. Hold "reverse" button on transmitter to make boat turns in reverse.
4. Release button on transmitter to make boat stop.
5. Switch off boat after using.


## Transmitter battery installation and assembly

9V battery for transmitter

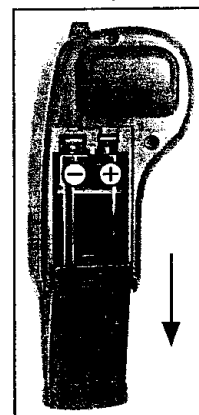

Forward drive

 Turns in reverse

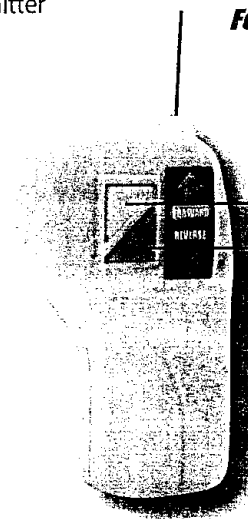


### CAUTION:

Children be playing with this game should be supervised by an adult, as with any products designed to be used in on, around water. Remove products from water when not in use.

### CAUTION:

To prevent any damage to the radio device and motor, remove any water inside the boat, and dry inside of the boat as well as the batteries after each use. Store the product with battery compartment opened to allow the compartment dry.
 
# Boat battery installation and assembly

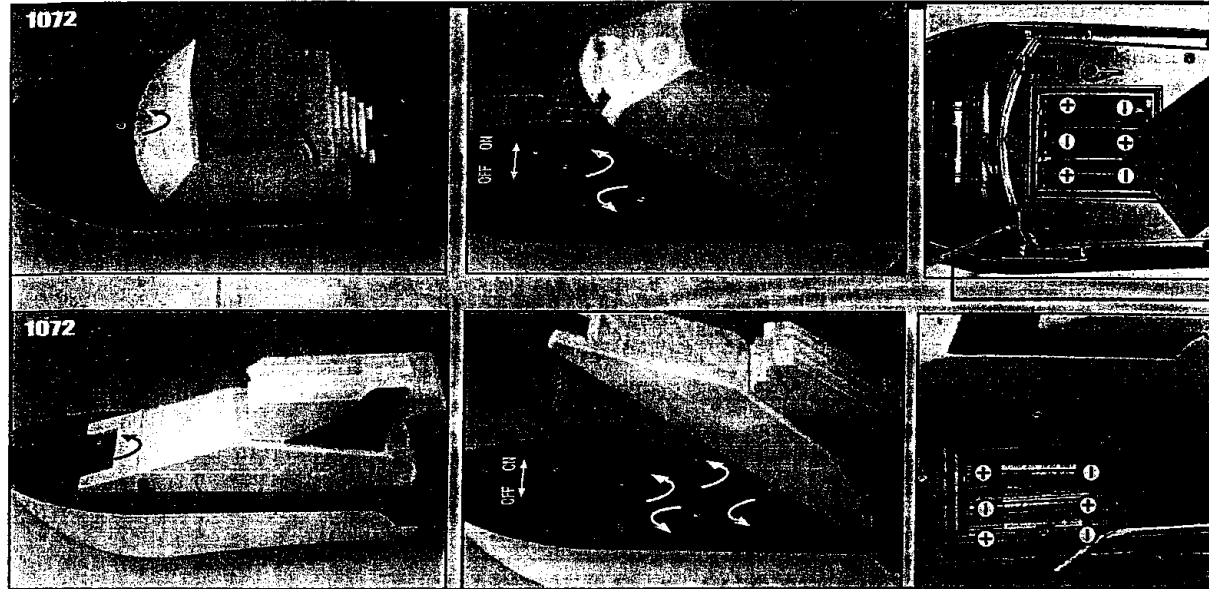

- 3x"AA"size batteries for boat
- Place all the batteries in the battery box as picture. Make sure that negative (-) and positive (+) poles are positioned properly.
- Do not mix alkaline batteries and NI-CAD batteries.

