

P.01/01

Battery Life

and battery life by switching off when not in use.

Interference

visible not to use vehicle close to high tension wires or radios.

D.Range

When vehicle goes beyond radio signal contact loss of control or slowness will occur. Extend transmit antenna higher for re-contact. Ensure antenna is screwed on tightly.



1 : 12 SCALE
For over 7 years of age

Model No. 9303

Instruction Manual

9.6V FULL FUNCTION RADIO CONTROL

CAUTION-ELECTRIC PRODUCT:
NOT RECOMMENDED FOR USE UNDER 12 YEARS OF AGE. AS WITH ALL ELECTRIC PRODUCTS, PRECAUTIONS SHOULD BE OBSERVED DURING HANDLING AND USE TO PREVENT SHOCK.

TOTAL P.01 P.01

HINTS FOR MAINTENANCE

- radio waves interference may affect behaviour of the vehicle. Special care for your vehicle is mentioned below.
- not abuse your vehicle.
- avoid heat, water, sand and high impact collisions. Off road vehicles run easily on grassy surfaces.
- avoid using vehicle on wet surfaces or rain
- avoid using vehicle on sandy or dusty areas
- avoid using vehicle for long periods under direct sunlight. Sunlight or excessive heat may damage sensitive / electronic instruments
- store vehicle transmitter in dry cool places away from heaters or warm areas.
- Collision with hard surface may damage vehicle.
- Vehicle will not perform on thick carpet or dusty floors.
- Avoid running two vehicles of the same frequency (Purchase two vehicles with different frequencies instead.)
- Always brush your vehicle after use to remove dust. Keep vehicle clean.
- Always wipe vehicle with soft rag or cloth. Avoid cleaning vehicle with water or any chemicals

TROUBLE SHOOTING AND CARE FOR R/C VEHICLES

- PROBLEM: VEHICLE DOES NOT MOVE**
- Are the + and - contacts correctly matched in transmitter?
 - Are the metal contact tabs touching, rusty or dirty in transmitter?
 - Are there batteries in vehicle and transmitter?
 - Is the power switch on vehicle and transmitter turned on?
 - Is the battery / power pack weak or out of power?

The Responsible Party in USA
ZAP TOYS
Room 1055, The International Toy Center,
200 Fifth Avenue, N. Y. 10010. USA
Tel: (646) 536-5460

- PROBLEM: VEHICLE RUNS SLOWLY**
- The battery is weak or fading.
 - The battery pack is worn out and needs to be replaced
 - Batteries are miss matched or old.

IF VEHICLE HAS A NOTICEABLE DROP IN PERFORMANCE, INCONSISTENT MOVEMENT OR FAILS TO RUN, RECHARGE POWER PACK AND / OR REPLACE A FRESH 9V BATTERY. FOR GOOD RESULT, USE 9V ALKALINE BATTERY.

TIME TO CHARGE!

Battery pack is uncharged when new. NiCd Batteries lose all power at once. Your vehicle will suddenly stop. If this is the case, the vehicle is not defective, it had just run out of power.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

 
- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.

ETL SEMKO ④			
Incoming Date: 17 NOV 2000			
			Action By
			Beta

1. Charging Battery

Insert charger plug into suitable household outlet. Connect battery pack to charger clip. Charge battery pack for 4 hours.

REMARKS - New battery packs need charging and a pack will be fully charged after four hours. Extended charging does not improve or increase running time. After four hours disconnect battery pack and unplug charger. Battery pack can be charged up to 1000 times. Running time is between 20 - 30 minutes, but can vary from 10 - 20 minutes, depending on the size, weight, speed of the vehicle and terrain. The vehicle will quit suddenly when power is completely utilised. Wait a few minutes for pack to cool. Remove from vehicle and then re-charge.

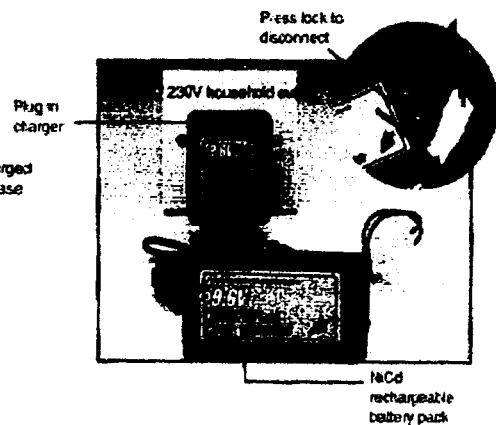

CAUTION


- Leakage may occur if battery not used for lengthy period of time.
- Be careful when disconnecting unit. Do not pull on wires.
- Too much force when disconnecting wire may cause short circuit.
- It is suggested you wait for 20 - 25 minutes before recharging a battery pack. This will give battery pack time to cool off.
- Recharging a warm battery pack will shorten its life.
- Keep away from fire or high temperature.
- Do not charge leaking or damaged batteries.
- Unplug battery pack when not in use.
- Do not dispose battery pack in fire as this may cause an explosion and serious injury.
- Dispose NiCd batteries properly. Do not disassemble.
- You must always remove battery pack from the vehicle prior to charging.
- The battery charger is not for any other use except as instructed.
- It is suggested that parents periodically check wires and plugs.

FCC ID : NEX9303-5-49
ZAP TOYS
MADE IN CHINA

This device complies with part 15 of the FCC rules. operation is subject to the following conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

2. Power Pack Installation

 - Open by turning lock and lifting cover off.
 - Join the pack connector plug into compartment plug receptacle and secure tightly.
 - Drop pack into position, close and lock cover.
- When disconnecting pack DO NOT PULL ON WIRES.

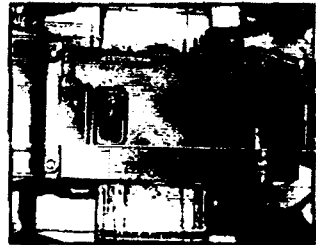

Another Quality Product From LUCKY

95%

+186 755 898 1797

17-NOV-2000 14:45

TO 0085227429149

FROM ZAP

14:47

17-NOV-2000

Battery Life

Extend battery life by switching off when not in use.

Interference

Advisable not to use vehicle close to high tension wires or CB radios.

D.Range

When vehicle goes beyond radio signal contact, loss of control or slowness will occur. Extend transmit antenna higher for re-contact. Ensure antenna is screwed on tightly.

I.HINTS FOR MAINTENANCE

Radio waves interference may affect behaviour of the vehicle. Special care for your vehicle is mentioned below.

Do not abuse your vehicle.

- Avoid heat, water, sand and high impact collisions. Off road vehicles run easily on grassy surfaces.
- Avoid using vehicle on wet surfaces or rain.
- Avoid using vehicle on sandy or dusty areas.
- Avoid using vehicle for long periods under direct sunlight. Sunlight or excessive heat may damage sensitive / electronic instruments.
- Store vehicle transmitter in dry cool places away from heaters or warm areas.
- Collision with hard surface may damage vehicle.
- Vehicle will not perform on thick carpet or dusty floors.
- Avoid running two vehicles of the same frequency (Purchase two vehicles with different frequencies instead.)
- Always brush your vehicle after use to remove dust. Keep vehicle clean.
- Always wipe vehicle with soft rag or cloth. Avoid cleaning vehicle with water or any chemicals.

9.TROUBLE SHOOTING AND CARE FOR R/C VEHICLES

PROBLEM: VEHICLE DOES NOT MOVE

- Are the + and - contacts correctly matched in transmitter?
- Are the metal contact tabs touching, rusty or dirty in transmitter?
- Are there batteries in vehicle and transmitter?
- Is the power switch on vehicle and transmitter turned on?
- Is the battery / power pack weak or out of power?

PROBLEM: VEHICLE RUNS SLOWLY

- The battery is weak or fading.
- The battery pack is worn out and needs to be replaced.
- Batteries are miss matched or old.

TIME TO CHARGE!

Battery pack is uncharged when new. NiCd Batteries lose all power at once. Your vehicle will suddenly stop. If this is the case, the vehicle is not defective, it had just run out of power.

The Responsible Party in USA
ZAP TOYS
Room 1055, The International Toy Center,
240 Fifth Avenue, N. Y. 10010, USA
Tel: (646) 336-5460

IF VEHICLE HAS A NOTICEABLE DROP IN PERFORMANCE, INCONSISTENT MOVEMENT OR FAILS TO RUN, RECHARGE POWER PACK AND / OR REPLACE A FRESH 9V BATTERY. FOR GOOD RESULT, USE 9V ALKALINE BATTERY.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to the radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Another Quality Product From



1:12 SCALE
For over 7 years of age

Model No. 9303

Instruction Manual

9.6V FULL FUNCTION RADIO CONTROL

PLEASE ENSURE TO REMOVE ALL ACCESSORIES AND COMPONENTS FROM THE STYROFOAM PACKING

1. Charging Battery

Insert charger plug into suitable household outlet. Connect battery pack to charger clip. Charge battery pack for 4 hours.

 
 
REMARKS - New battery packs need charging and a pack will be fully charged after four hours. Extended charging does not improve or increase running time. After four hours disconnect battery pack and unplug charger. Battery pack can be charged up to 1001 times. Running time is between 20 - 30 minutes, but can vary from 10 - 20 minutes, depending on the size, weight, speed of the vehicle and terrain. The vehicle will quit suddenly when power is completely utilised. Wait a few minutes for pack to cool. Remove from vehicle and then re-charge.

CAUTION

- Leakage may occur if battery not used for lengthy period of time.
- Be careful when disconnecting unit. Do not pull on wires.
- Too much force when disconnecting wire may cause short circuit.
- It is suggested you wait for 20 - 25 minutes before recharging a battery pack. This will give battery pack time to cool off.
- Recharging a warm battery pack will shorten its life.
- Keep away from fire or high temperature.
- Do not charge leaking or damaged batteries.
- Unplug battery pack when not in use.
- Do not dispose battery pack in fire as this may cause an explosion and serious injury.
- Dispose NiCd batteries properly. Do not disassemble.
- You must always remove battery pack from the vehicle prior to charging.
- The battery charger is not for any other use except as instructed.
- It is suggested that parents periodically check wires and plugs.

2. Power Pack Installation

- Open by turning lock and lifting cover off.
- Join the pack connector plug into compartment plug receptacle and secure tightly.
- Drop pack into position, close and lock cover. When disconnecting pack DO NOT PULL ON WIRES.

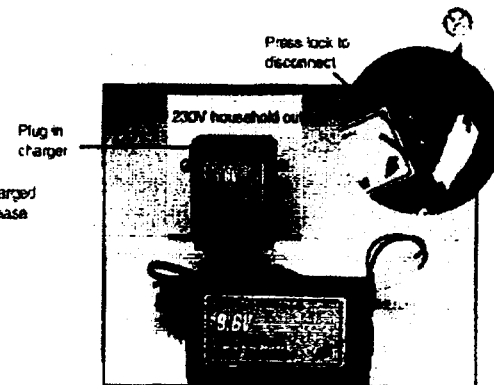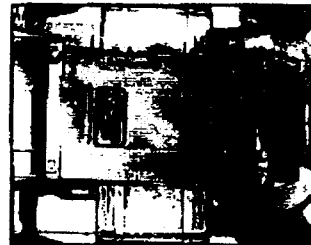

Plug in charger

Press lock to disconnect

NiCd rechargeable battery pack

FCC ID : NEX9303-5-49
ZAP TOYS
MADE IN CHINA

This device complies with part 15 of the FCC rules. operation is subject to the following conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.



BATTERY-ELECTRIC PRODUCT:
NOT RECOMMENDED FOR CHILDREN UNDER 14 YEARS OF AGE. AS WITH ALL ELECTRIC PRODUCTS PRECAUTIONS SHOULD BE OBSERVED DURING HANDLING AND USE TO PREVENT ELECTRICAL SHOCK.

TOTAL P.01 P.01

95%

+186 755 898 1797

17-NOV-2000 14:49

P.01

TO 0085227429149

FROM ZAP

14:52

17-NOV-2000