

8.

C) Battery Life

Extend battery life by switching off when not in use.

E) Interference

Advisable not to use vehicle close to high tension wires or CB radios.

D) Range

When vehicle goes beyond radio signal contact, loss of control or slowness will occur. Extend transmit antenna higher for re-contact. Ensure antenna is screwed on tightly.

9. HINTS FOR MAINTENANCE

Radio waves interference may affect behaviour of the vehicle. Special care for your vehicle is mentioned below.

Do not abuse your vehicle.

Avoid, heat, water, sand and high impact collisions. Off road vehicles run easily on grassy surfaces.

- Avoid using vehicle on wet surfaces or rain.
- Avoid using vehicle on sandy or dusty areas.
- Avoid using vehicle for long periods under direct sunlight. Sunlight or excessive heat may damage sensitive / electronic instruments.
- Store vehicle transmitter in dry cool places away from heaters or warm areas.
- Collision with hard surface may damage vehicle.
- Vehicle will not perform on thick carpet or dusty floors.
- Avoid running two vehicles of the same frequencies (Purchase two vehicles with different frequencies instead.)
- Always brush your vehicle after use to remove dust. Keep vehicle clean.
- Always wipe vehicle with soft rag or cloth. Avoid cleaning vehicle with water or any chemicals

10. TROUBLE SHOOTING AND CARE FOR R/C VEHICLES

IF VEHICLE HAS A NOTICEABLE DROP IN PERFORMANCE, INCONSISTENT MOVEMENT OR FAILS TO RUN, RECHARGE POWER PACK AND / OR REPLACE A FRESH 9V BATTERY. FOR GOOD RESULT, USE 9V ALKALINE BATTERY.

PROBLEM! VEHICLE DOES NOT MOVE

Are the + and -s contacts correctly matched in transmitter?
Are the metal contact tabs touching, rusty or dirty in transmitter?
Are there batteries in vehicle and transmitter?

Is the power switch on vehicle and transmitter turned on?
Is the battery / power pack weak or out of power?

PROBLEM! VEHICLE RUNS SLOWLY

The battery is weak or fading.
The battery pack is worn out and needs to be replaced.
Batteries are miss matched or old.

TIME TO CHARGE!

BATTERY PACK IS UNCHARGED WHEN NEW. NiCd BATTERIES LOSE ALL POWER AT ONCE. YOUR VEHICLE WILL SUDDENLY STOP IF THIS IS THE CASE. THE VEHICLE IS NOT DEFECTIVE. IT HAD JUST RUN OUT OF POWER.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide a reasonable protection against harmful interference when the equipment is properly installed and used in accordance with the instructions. This equipment does not generate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to the radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ITEM NO.9304

Another Quality Product From



BUZZARD / WEASEL

1 : 16 SCALE
For over 7 years of age

Instruction Manual

6.0V FULL FUNCTION RADIO CONTROL

CAUTION-ELECTRIC PRODUCT:
NOT RECOMMENDED FOR CHILDREN UNDER 14 YEARS
OF AGE. AS WITH ALL ELECTRIC PRODUCTS,
PRECAUTIONS SHOULD BE OBSERVED DURING
HANDLING AND USE TO PREVENT ELECTRIC SHOCK.

PLEASE ENSURE TO REMOVE ALL ACCESSORIES AND COMPONENTS FROM THE STYROFOAM PACKING

1.

Charging Battery

Insert adapter into suitable household outlet.
Connect adapter to Plug-in Charger.
Connect Battery Pack to charger.
Charge Battery Pack for 4 hours.

REMARKS - New battery packs need charging and a pack will be fully charged after four hours. Extended charging does not improve or increase running time.
After four hours disconnect battery pack and unplug power adapter.
Battery pack can be charged up to 1001 times.
Running time is between 20 - 30 minutes, but can vary from 10 - 20 minutes, depending on the size, weight, speed of the vehicle and terrain. The vehicle will quit suddenly when power is completely utilised. Wait a few minutes for pack to cool.
Remove from vehicle and then re-charge.

CAUTION

- Leakage may occur if battery not used for lengthy period of time.
- Be careful when disconnecting unit. Do not pull on wires.
- Too much force when disconnecting wire may cause short circuit. It is suggested you wait for 20 - 25 minutes before recharging a battery pack. This will give battery pack time to cool off.
- Recharging a warm battery pack will shorten its life.
- Keep away from fire or high temperature.
- Do not charge leaking or damaged batteries.
- Unplug battery pack when not in use.
- Do not dispose battery pack in fire as this may cause an explosion and cause serious injury.
- Dispose NiCd batteries properly. Do not disassemble.
- You must always remove battery pack from the vehicle prior to charging.
- The battery charger is not for any other use except as instructed.
- It is suggested that parents periodically check wires and plugs.

2. Power Pack Installation

- Slide the battery pack into vehicle chassis (see diagram)
- Turn the compartment lock 1/4 counter clockwise to secure the battery.

