



# smart fortwo-coupé

 
#9389

## Instruction Manual


Please read through this instruction manual carefully before starting to operate.

Please ensure to remove all accessories and components from packaging.

### 1. What is in the package :

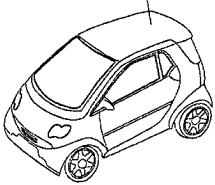

Vehicle

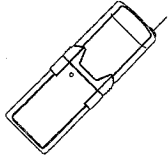 

Transmitter





Manual

### 2. Battery installation:


 
 
Recommended to use alkaline batteries for best performance, 3 X AAA (1.5V) batteries. (not included)

1. Remove battery compartment cover located on the back of the transmitter.
2. Insert 3 X AAA (1.5V) batteries into the transmitter following the +/- marking.
3. Replace the battery cover.

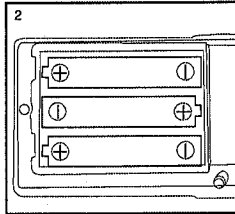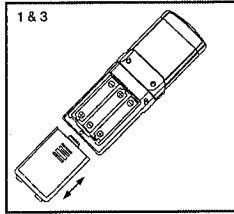

### 3. Charging Your Micro Smart:

   1. Disconnect transmitter into 2 separate units. The charger is the unit with 3 X AAA (1.5V) batteries installed.
2. Insert the charger into the charging socket located at the chassis.
3. When green light on the charger goes out, Micro Smart is charged.
4. Remove the charger.

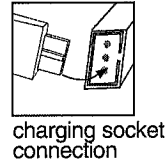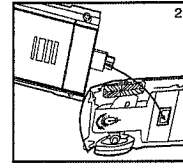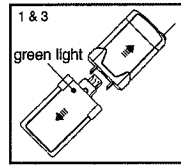




**Attention :** Make sure the charging connector is in-line with the charging socket. Incorrect insertion will damage the charging socket.

### Extended Operating Time (follow - up recharging)

   
1. Recharge the battery once. Without using the battery, recharge a second time. This "follow - up recharging" will lengthen the playing time.
2. Moreover, if you recharge the battery 3 times in a row before use, the playing time will be extended even more.
3. However, be careful NOT to recharge the battery more than 3 times in a row.
4. Also, note that the battery duration differs depending on how you play.

### 4. Racing Your Micro Smart

1. Re-connect the charger unit into the transmitter to become a transmitter unit.
2. Extend the transmitter antenna to its full length.
3. Press buttons at both sides of the transmitter to pop up the cover to show control buttons.
4. Before racing your Micro Smart, make sure that the antenna is standing vertically upright for better signal receiving.

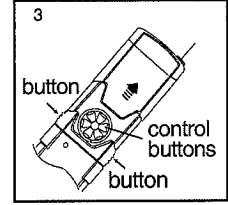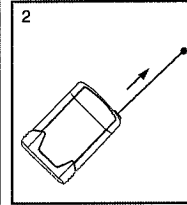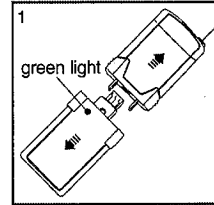

### 5. How to play :

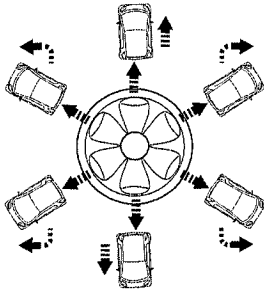 

### MAINTENANCE AND CARE:

- Never drive the vehicle on a wet floor, on sand, or in mud, rain, or snow. These can damage it.
- Do not expose the vehicle to extreme temperatures.
- To protect the vehicle's wheel mechanism from lint and hair, do not drive it on carpet.
- Be sure to remove the batteries from the transmitter when storing the product away.
- Make sure the transmitter antenna is straight to avoid hindering transmitter cover popping up.
- Keep this instruction Manual carefully for future use.

### CAUTION:

- Do not apply a big shock to vehicle and transmitter.
- Do not play in the thunderstorms.
- Do not play outdoors. This product is made only for indoor use.
- Do not leave the vehicle or transmitter near sources of heat or under direct sunlight for long periods of time.
- Never play with your vehicle in the street.
- Non-rechargeable batteries are not to be recharged
- Rechargeable batteries are to be removed from the toy being charged,
- Rechargeable batteries are only to be charged under adult supervision, The rechargeable batteries on the car was not to be replaced
- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy
- The supply terminals are not to be short-circuited.

### HELPFUL HINTS:

- If vehicle does not respond to the transmitter, move closer to the vehicle and try again.
- If vehicle starts to lose power. It may experience loss of performance ability. If this happens, simply recharge your vehicle again.
- If the vehicle moves slowly, recharge the battery and check the wheel mechanisms for lint, thread, hair or dust.
- When the transmitter range decreases, replace the battery in the controller.

### TROUBLE SHOOTING

Problem	Cause	Correction
Vehicle drives slowly	- Weak rechargeable batteries in the vehicle.	- Recharge the vehicle with the charger.
Poor range control	- Weak batteries in transmitter - Strong interference at the surrounded area.	- Replace with new batteries - Move to a better location to drive your vehicle.

### Warning:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

**NOTE :** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules and R&TTE Directive 1999/5/EC. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- Consult the dealer or an experienced radio/TV technician for help.

**THIS PRODUCT IS FOR THE USE IN U.K., SPAIN, GERMANY, FRANCE, BELGIUM, ITALY, SWITZERLAND, THE NETHERLANDS, DENMARK, U.S., CANADA AND PORTUGAL**

Intellectual Property Rights licensed by smart gmbh Licensed manufacturer: lucky Plastic Factory Limited

CE0197

Another Quality Product From



NO.9389  
©ZAP TOYS 2004  
MADE IN CHINA  
Printed in China