

User manual



Mercedes-Benz  
SLR McLaren

 


#9434

Instruction Manual

Please read through this instruction manual, carefully before starting to operate. Please ensure to remove all accessories and, components from packaging.

What is in the box

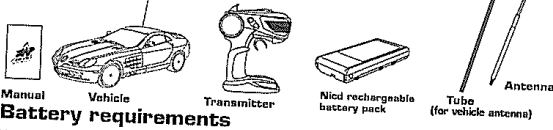

Battery requirements

 
Vehicle: NiCd rechargeable battery pack (9.6V).  
Transmitter: 1 x 9V (006P, 6F22) size Batteries.

Battery installation Transmitter

1. Remove battery cover located at the underside.
2. Insert 1 X 9V battery following the +/- marking.
3. Replace battery cover.

Simple Steps To Power Your Vehicle

1. Charge: Use charger to charge the 9.6v rechargeable battery pack.
2. Lock Battery Pack: Drop the battery pack into position, lock it, you are set to run!



FEATURES

- 2-channel superheterodyne digital proportional system
- BEC system (power source for both driving and receiver are common)
- Front suspension: Trailing arm
- Rear suspension: Rigid axle
- Rear wheel differential gear
- Frequencies: 6 Bands
- Separately sold optional parts enable you to set machine to your liking.

Charging Battery

 
Insert charger plug into suitable household outlet. Connect battery pack to charger clip

Charging time - First charge 7 hours (not more than 8 hours)  
- Recharge 4 hours.

REMARKS : New battery packs need charging and a pack will be fully charged after 7 hours. Extended charging does not improve or increase running time. 4 hours is required for recharging the battery. After charging, please disconnect battery pack and unplug charger. Running time is between 20 - 30 minutes, but can vary from 10 - 20 minutes, depending on the size, weight, speed of the vehicle and terrain. The vehicle will quit suddenly when power is completely utilised. Wait a few minutes for pack to cool. Remove from vehicle and then re-charge.

CAUTION!


- Leakage may occur if battery is not used for an extended period of time.
- Be careful when disconnecting unit. Do not pull on wires.
- Too much force when disconnecting wire may cause short circuit.
- It is suggested you wait for 20 - 25 minutes after use before recharging the battery pack. This will give battery pack time to cool off.
- Recharging a warm battery pack will shorten its life.
- Keep away from fire or high temperature.
- Do not charge leaking or damaged batteries.
- Unplug battery pack when not in use.
- Do not dispose battery pack in fire as this may cause an explosion and serious injury.
- Dispose NiCd batteries properly. Do not disassemble.
- You must always remove battery pack from the vehicle prior to charging.
- The battery charger is not for any other use except as instructed.
- It is suggested that adults periodically check wires and plugs.
- Non-rechargeable batteries are not to be recharged!
- Rechargeable batteries are to be removed from the toy being charged.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy
- The supply terminals are not to be short-circuited.
- The batteries should be recharged by adults only.

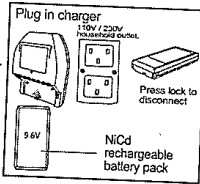


MAINTENANCE AND CARE

- Never drive the vehicle on a wet floor, on sand, or in mud, rain or snow. These can damage it.
- Do not expose the vehicle to extreme temperatures.
- Be sure to remove the batteries from the vehicle and transmitter when storing the product away.
- To protect the vehicle's wheel mechanism from lint, thread, hair, and dust particles. You can use a small brush, tweezers or tie a small bit of cloth to the tip of a toothpick, etc., and wipe off.
- Always keep vehicle clean, use a dampened cloth to wipe off, and then wipe all the water off with a dry cloth. Never use chemicals to clean the product.
- Keep this instruction manual carefully for future use.
- Avoid holding the wheels when rotating, this will cause the electronic components short-circuit, overheating and will cause malfunction

 How to Play  
Names of Parts

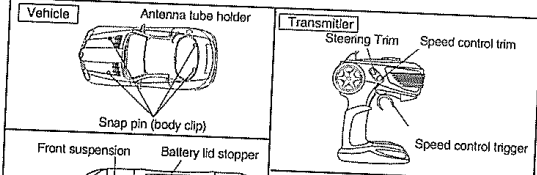

 Preparation for Starting Operation  
How to Attach Antenna Tube

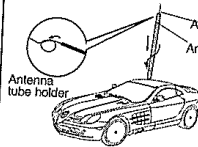


How to Install Transmitter Antenna


Place the transmitter antenna into the antenna holder to screw it in clockwise.



 Speed control trigger

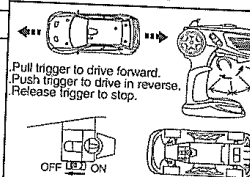

Steering control wheel

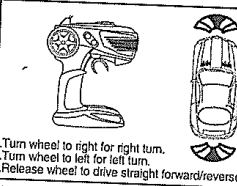 

HELPFUL HINTS:

- If vehicle does not respond to the transmitter, move closer to the vehicle and try again.
- If vehicle starts to lose power, it may experience loss of performance ability. If this happens, simply replace the battery pack.
- If the vehicle moves slowly, try changing the batteries and check the wheel mechanisms for lint, thread, hair or dust.
- When the transmitter range decreases, replace the battery in the controller.
- If someone uses a CB nearby, it might interfere with control of the car. If this happens, move the car and transmitter away from the CB.

TROUBLE SHOOTING:

Problem	Causes	Correction
Vehicle doesn't move	- Power switch is turned OFF. - Vehicle is too far away from the controller. - The metal tab in the battery is flattened and not touching the batteries installed.	- Turn the power switch ON. - Bring the vehicle closer to the controller. - Lift up the metal tab so that it touches the tip of the battery.
Vehicle drives slowly	- Weak batteries in the vehicle.	- Recharge the battery pack, following the +/- marking.
Poor range control	- Weak battery in the transmitter. - Strong interference at the surrounded area.	- Replace the battery pack. - Move to a better location to Drive your vehicle.

Warning:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules and R&TTE Directive 1999/5/EC. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference the radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
- Reorient or relocate the receiving antenna.  
- Increase the separation between the equipment and receiver.  
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.

Consult the dealer or an experienced radio/TV technician for help.  
**THIS PRODUCT IS FOR THE USE IN U.K., SPAIN, GERMANY, FRANCE, BELGIUM, ITALY, SWITZERLAND, THE NETHERLANDS, DENMARK, U.S., CANADA AND PORTUGAL.**

CE0197

Another Quality Product From



English  
NO.9434  
©ZAP TOYS 2004  
MADE IN CHINA  
Printed in China




#9459

 Instruction Manual

Please read through this instruction manual, carefully before starting to operate. Please ensure to remove all accessories and, components from packaging.

What is in the box

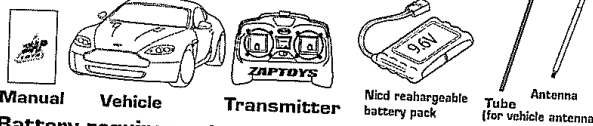

Battery requirements


Recommended to use alkaline batteries for best performance.  
Vehicle : NiCd rechargeable battery pack (9.6V)  
Transmitter : 1 x 9V (006P, 6F22) size Batteries

Battery installation

- Transmitter**
1. Remove battery cover located at the back.
  2. Insert 1 X 9V battery following the +/- marking.
  3. Replace battery cover.



**Vehicle**

 - A. Open by turning lock and lifting cover off.
- B. Join the pack connector plug into compartment plug receptacle and secure tightly.
- C. Drop pack into position, close and lock cover. When disconnecting pack DO NOT PULL ON WIRES.

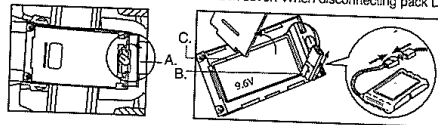

How to Play

  1. Insert antenna wire through the hollow tube. Avoid pulling wire too tight. Tie a knot on top to Secure.
2. Turn switch to "ON" position for power. You are set to run!

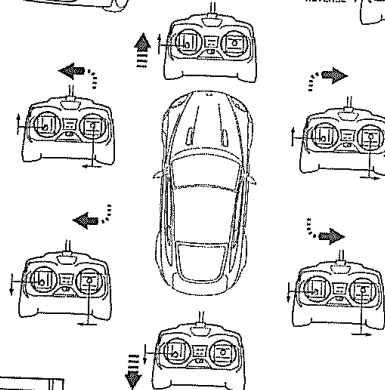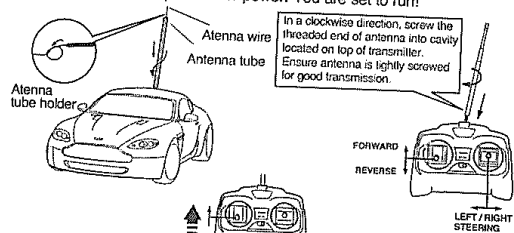

Trim Switch Control

Trim switch is located on the underside of the vehicle, between the two front wheels, and is used to align the wheels for consistent straight line driving.

MAINTENANCE AND CARE

- Never drive the vehicle on a wet floor, on sand, or in mud, rain or snow. These can damage it.
- Do not expose the vehicle to extreme temperatures.
- Be sure to remove the batteries from the vehicle and transmitter when storing the product away.
- To protect the vehicle's wheel mechanism from lint, thread, hair, and dust particles. You can use a small brush, tweezers or tie a small bit of cloth to the tip of a toothpick, etc., and wipe off.
- Always keep vehicle clean, use a dampened cloth to wipe off, and then wipe all the water off with a dry cloth. Never use chemicals to clean the product.
- Keep this instruction manual carefully for future use.
- Avoid holding the wheels when rotating, this will cause the electronic components short - circuit, overheating and will cause malfunction.

HELPFUL HINTS

- If vehicle does not respond to the transmitter, move closer to the vehicle and try again.
- If vehicle starts to lose power. It may experience loss of performance ability. If this happens, simply replace with new batteries.
- If the vehicle moves slowly, try changing the batteries and check the wheel mechanisms for lint, thread, hair or dust.
- When the transmitter range decreases, replace the battery in the controller.
- If someone uses a CB nearby, it might interfere with control of the car. If this happens, move the car and transmitter away from the CB.

CAUTION

- Do not apply a big shock to vehicle and transmitter.
- Do not play in the thunderstorms.
- Do not touch the wheels when the switch is turned ON because it is extremely dangerous.
- Do not leave the vehicle or transmitter near sources of heat or under direct sunlight for long periods of time, which may damage sensitive electronic instruments.
- Do not operate the vehicle near small children, because it can be very dangerous.
- Do not mix old and new batteries together. Do not mix battery type or brands.
- Always select a safe place to play. Never drive your vehicle in the street.
- Non - rechargeable batteries are not to be recharged
- Rechargeable batteries are to be removed from the toy being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short - circuited.

TROUBLE SHOOTING

Problem	Causes	Correction
Vehicle doesn't move	- Power switch is turned OFF. - Vehicle is too far away from the controller. - The metal tab in the battery cartridge is flattened and not touching the batteries installed.	- Turn the power switch ON. - Bring the vehicle closer to the controller. - Lift up the metal tab so that it touches the tip of the battery.
Loss of Control	- Another radio control vehicle using the same frequency is operated near your vehicle	- Race against other vehicles using different frequencies or channel.
Vehicle drives slowly	- Weak batteries in the vehicle.	- Replace with new batteries, following the +/- marking.
Poor range control	- Weak battery in the transmitter. - Strong interference at the surrounded area.	- Replace with new battery. - Move to a better location to Drive your vehicle.

Warning:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules and R&TTE Directive 1999/5/EC. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- Consult the dealer or an experienced radio/TV technician for help.

**THIS PRODUCT IS FOR THE USE IN U.K., SPAIN, GERMANY, FRANCE, BELGIUM, ITALY, SWITZERLAND, THE NETHERLANDS, DENMARK, U.S., CANADA AND PORTUGAL.**

Aston Martin, the Aston Martin logo and V8 Vantage are trademarks registered and licensed by Aston Martin Lagonda (c) 2005 Aston Martin Lagonda

CE0197

Another Quality Product From



English NO.9459  
©ZAP TOYS 2004  
MADE IN CHINA  
Printed in China

 


#9471

**Instruction Manual**

Please read through this instruction manual, carefully before starting to operate. Please ensure to remove all accessories and, components from packaging.

**What is in the box**



**Battery requirements**

 
Vehicle : NiCd rechargeable battery pack (9.6V)  
Transmitter : 1 x 9V (006P, 6F22) size Batteries.

**Battery installation Transmitter**

1. Remove battery cover located at the back.
2. Insert 1 X 9V battery following the + / - marking.
3. Replace battery cover.

**Power Pack Installation**

- A. Open by turning lock and lifting cover off.
- B. Join the pack connector plug into compartment plug receptacle and secure tightly.
- C. Drop pack into position, close and lock cover. When disconnecting pack DO NOT PULL ON WIRES.



**Charging Battery**

 
Insert charger plug into suitable household outlet. Connect battery pack to charger clip

Charging time - First charge 7 hours (not more than 8 hours)  
- Recharge 4 hours.

REMARKS : New battery packs need charging and a pack will be fully charged after 7 hours. Extended charging does not improve or increase running time. 4 hours is required for recharging the battery. After charging, please disconnect battery pack and unplug charger. Running time is between 20 - 30 minutes, but can vary from 10 - 20 minutes, depending on the size, weight, speed of the vehicle and terrain. The vehicle will quit suddenly when power is completely utilized. Wait a few minutes for pack to cool. Remove from vehicle and then re-charge.

**CAUTION!**

- Leakage may occur if battery is not used for an extended period of time.
- Be careful when disconnecting unit. Do not pull on wires.
- Too much force when disconnecting wire may cause short circuit.
- It is suggested you wait for 20 - 25 minutes after use before recharging the battery pack. This will give battery pack time to cool off.
- Recharging a warm battery pack will shorten its life.
- Keep away from fire or high temperature.
- Do not charge leaking or damaged batteries.
- Unplug battery pack when not in use.
- Do not dispose battery pack in fire as this may cause an explosion and serious injury.
- Dispose NiCd batteries properly. Do not disassemble.
- You must always remove battery pack from the vehicle prior to charging.
- The battery charger is not for any other use except as instructed.
- It is suggested that adults periodically check wires and plugs.
- Non-rechargeable batteries are not to be recharged
- Rechargeable batteries are to be removed from the toy being charged.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy
- The supply terminals are not to be short-circuited.
- The batteries should be recharged by adults only.
- Transformers used with the toy are to be regularly examined for damage to the cord, plug, enclosure and other parts, and that, in the event of such damage, the toy must not be used with this transformer until the damage has been repaired.


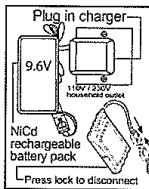


**MAINTENANCE AND CARE**

- Never drive the vehicle on a wet floor, on sand, or in mud, rain or snow. These can damage it.
- Do not expose the vehicle to extreme temperatures.
- Be sure to remove the batteries from the vehicle and transmitter when storing the product away.
- To protect the vehicle's wheel mechanism from lint, thread, hair, and dust particles. You can use a small brush, tweezers or tie a small bit of cloth to the tip of a toothpick, etc., and wipe off.
- Always keep vehicle clean, use a dampened cloth to wipe off, and then wipe all the water off with a dry cloth. Never use chemicals to clean the product.
- Keep this instruction manual carefully for future use.
- Avoid holding the wheels when rotating, this will cause the electronic components short-circuit, overheating and will cause malfunction

**How to Play**

  1. Insert antenna wire through the hollow tube. Avoid pulling wire too tight. Tie a knot on top to Secure.
2. Turn switch to "ON" position for power. You are set to run!

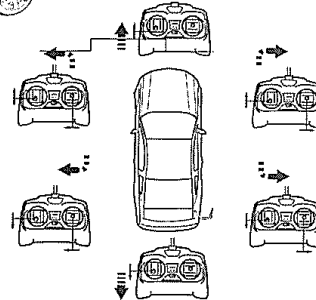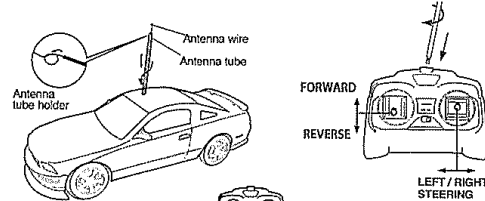

**Trim Switch Control**

Trim switch is located on the underside of the vehicle, between the two front wheels, and is used to align the wheels for consistent straight line driving.

**HELPFUL HINTS:**

- If vehicle does not respond to the transmitter, move closer to the vehicle and try again.
- If vehicle starts to lose power, it may experience loss of performance ability. If this happens, simply replace the battery pack.
- If the vehicle moves slowly, try changing the batteries and check the wheel mechanisms for lint, thread, hair or dust.
- When the transmitter range decreases, replace the battery in the controller.
- If someone uses a CB nearby, it might interfere with control of the car. If this happens, move the car and transmitter away from the CB.

**TROUBLE SHOOTING:**

Problem	Causes	Correction
Vehicle doesn't move	- Power switch is turned OFF. - Vehicle is too far away from the controller. - The metal tab in the battery is flattened and not touching the batteries installed.	- Turn the power switch ON. - Bring the vehicle closer to the controller. - Lift up the metal tab so that it touches the tip of the battery.
Loss of Control	- Another radio control vehicle using the same frequency is operated near your vehicle	- Race against other vehicles using different frequencies or channel.
Vehicle drives slowly	- Weak batteries in the vehicle.	- Recharge the battery pack, following the + / - marking.
Poor range control	- Weak battery in the transmitter. - Strong interference at the surrounded area.	- Replace the battery pack. - Move to a better location to Drive your vehicle.

**Warning:**

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules and R&TTE Directive 1999/5/EC. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to the radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
- Reorient or relocate the receiving antenna.  
- Increase the separation between the equipment and receiver.  
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.  
- Consult the dealer or an experienced radio/TV technician for help.  
THIS PRODUCT IS FOR THE USE IN U.K., SPAIN, GERMANY, FRANCE, BELGIUM, ITALY, SWITZERLAND, THE NETHERLANDS, DENMARK, U.S., CANADA AND PORTUGAL.



Ford, Ford Mustang GT, and the Ford Oval are registered trademarks owned and licensed by Ford Motor Company

Another Quality Product From



CE0197

English NO. 9471 ZAP TOYS 2005 MADE IN CHINA Printed in China