TÜV Rheinland Product Safety GmbH

Appendix 5



Am Grauen Stein D - 51105 Köln

Prüfbericht - Nr.:

Test Report No.

14010953 001

Seite 4 von 4 Page 4 of 4

MINI CRUSHER ProRacer

#9436/9437/9438/9439/9440/9441

WARNING: NG HAZARD-Sma

Instruction Manual

Please read through this instruction manual, carefully before starting to operate Please ensure to remove all accessories and, components from packaging.

What is required to play





Vehicle: 4 x 1.5V (AA) size batteries Transmitter: 1 x 9V (006P, 6F22) size battery

Battery installation Transmitter

- Remove battery cover located underside.
 Insert 1 X 9V battery following the + /- marking.
 Replace battery cover.

Simple Steps To Power Your Vehicle

- Open battery cover located underside.

 Insert 4 X 1.5V(AA) batteries following the +/- marking.







FEATURES

- ear suspension:Rigid axie ear wheel differential gear equencies: 6 Bands
- parately sold optional parts enable you to set machine to your liking

MAINTENANCE AND CARE

- NAME ENAMED CARE

 Never drive the vehicle on a wet floor, on sand, or in mud, rain or snow. These can damage it.

 Do not expose the vehicle to extreme temperatures.

 Be sure to remove the batteries from the vehicle and transmitter when storing the product away.

 To protect the vehicle's wheel mechanism from lint, thread, hair, and dust particles.

 You can use a small brush, tweezers or tie a small bit of cloth to the tip of a toothpick, etc., and wipe off.

 Always keep vehicle clean, use a dampened cloth to wipe off, and then wipe all the water off with a dry cloth. Never use chemicals to clean the product.

 Keep this instruction manual carefully for future use.

- Need prits instruction maintain calculus, or flucture use.
 Avoid holding the wheels when rotating, this will cause the electronic components short-circuit, overheating and will cause malfunction.
 Charger used with the toy are to be regularly examined for damage to the cord, plug, enclosure and other parts, and that, in the event of such damage, the toy must not be used with this charger until the damage has been repaired.

HELPFUL HINTS

- If vehicle does not respond to the transmitter, move closer to the vehicle
- and try again.

 If vehicle starts to lose power. It may experience loss of performance ability. If this happens, simply replace with new batteries.

 If the vehicle moves slowly, try changing the batteries and check the wheel mechanisms for lint, thread, hair or dust.
- When the transmitter range decreases, replace the battery in the controller. If someone uses a CB nearby, it might interfere with control of the car. If this happens, move the car and transmitter away from the CB.


- Do not apply a big shock to vehicle and transmitter.
 Do not play in the thunderstorms.
 Do not touch the wheels when the switch is turned ON because it is
- extremely dangerous.

 
 Do not leave the vehicle or transmitter near sources of heat or under direct sunlight for long periods of time, which may damage sensitive electronic instruments
- Do not operate the vehicle near small children, because it can be very dangerous.

 
- very dangerous.

 Do not mix old and new batteries together. Do not mix battery type or brands. Always select a safe place to play. Never drive your vehicle in the street. Non rechargeable batteries are not to be recharged Rechargeable batteries are to be removed from the toy being charged. Rechargeable batteries are only to be charged under adult supervision. Only batteries of the same or equivalent type as recommended are to be used. Batteries are to be inserted with the correct polarity. Exhausted batteries are to be removed from the toy. The supply terminals are not to be short dircuited.

How to Play Names of Parts

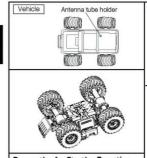





How to Install Transmitter Antenna Place the transmitter an into the antenna holder screw it in clockwise. Antenna tube

Speed control trigger



neel to right for right turn. neel to left for left turn. e wheel to drive straight forward/re

Problem	Causes	Correction
Vehicle doesn't move	Power switch is turned OFF. Vehicle is too far away from the controller. The metal tab in the battery cartridge is flattened and not touching the batteries installed.	Turn the power switch ON. Bring the vehicle closer to the controller. Lift up the metal tab so that it touches the tip of the battery.
Loss of Control	Another radio control vehicle using the same frequency is operated near your vehicle	Race against other vehicles using different frequencies or channel.
Vehicle drives slowly	- Weak batteries in the vehicle.	 Replace with new batteries, following the + / - marking.
Poor range control	Weak battery in the transmitter. Strong interference at the surrounded area.	Replace with new battery. Move to a better location to Drive your vehicle.

Warning:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

for compliance could void the user's authority to operate the equipment NOTE: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of FCC Rules and R&TTE Directive 1999/5/EC. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference the radio communications. However, there is no guarantee that interference will not occur in a particular installation. This equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.

- Consult the dealer or an experienced radio/TV technician for help.

THIS PRODUCT IS FOR THE USE IN U.K., SPAIN, GERMANY, FRANCE, BELGIUM, ITALY, SWITZERLAND, THE NETHERLANDS, DENMARK, U.S., CANADA AND PORTUGAL



English #9436/9437/9438/9439/9440/9441 ©ZAPTOYS 2005 MADE IN CHINA **Printed in China**