


TC70 QUICK START GUIDE




FEATURES

Note: Remove protective shipping film that covers the touch screen, exit window and camera window before using.

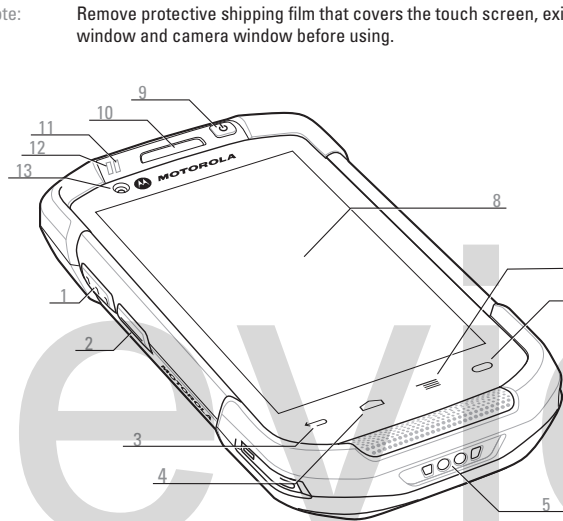

- | | |
|-----------------------|--|
| 1 Scan Button | 8 Touch Screen (with screen protector) |
| 2 Programmable Button | 9 Power Button |
| 3 Back Button | 10 Receiver |
| 4 Home Button | 11 Charging/Notification LED |
| 5 Power Input | 12 Data Capture LED |
| 6 Search Button | 13 Front-facing Camera |
| 7 Menu Button | |

Note 1: To reset the TC70, press and hold the Power button until the menu appears and then select **Reset**.

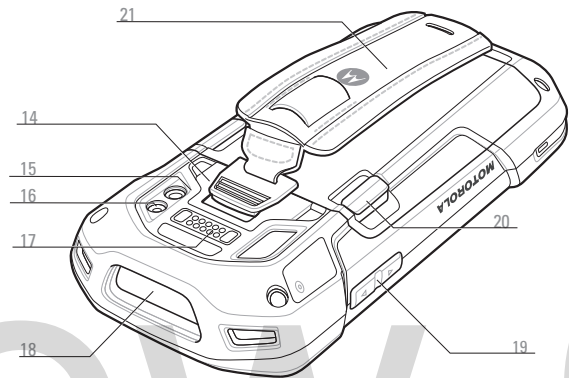

- | | |
|-----------------------------|--------------------------|
| 14 Handstrap Mounting Point | 18 Exit Window |
| 15 Camera Flash | 19 Volume Button |
| 16 Rear-facing Camera | 20 Battery Release Latch |
| 17 Interface Connector | 21 Handstrap |


Notifications

Data Capture LED:

- Green: Good Decode
- Red: Data capture in process

Charging/Notification LED:


- Slow blinking amber: Battery charging
- Solid green: Fully charged
- Fast blinking amber: Charging error
- Slow blinking blue: Application notification.

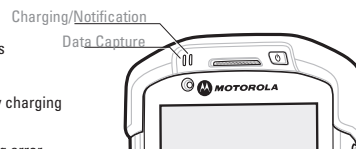

CARD INSTALLATION

MicroSD Card Installation (Optional)




1. Remove the handstrap.
2. Lift the access door.
3. Insert the microSD card into the card holder.
Push the card all the way into the card holder.

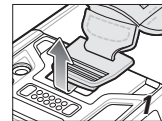



NOTE:

Proper position of the microSD card — the card connector (i.e., gold contacts) should be facing down.



4. Replace the access door. Ensure that it is properly seated.

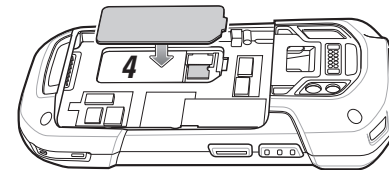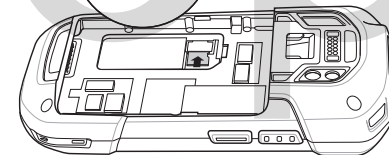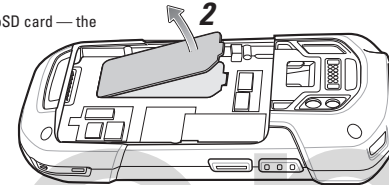

BATTERY INSTALLATION

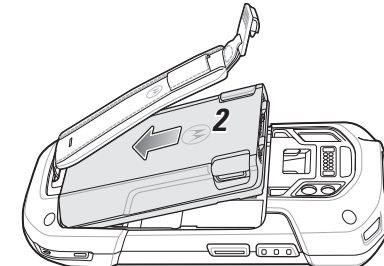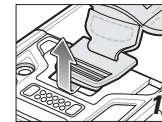


1. Remove the handstrap.
2. Insert the bottom of the battery into the battery compartment.
3. Rotate the battery down into the battery compartment and press the battery down until it snaps into position.
4. Re-attach the handstrap.

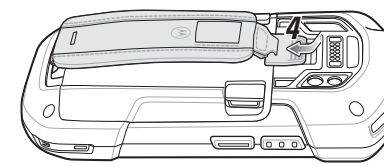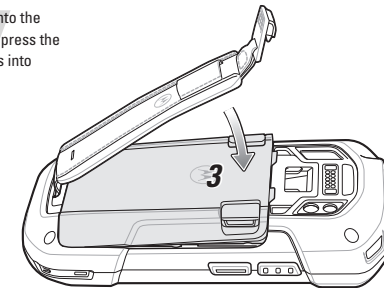


BATTERY REMOVAL

1. Unlatch the handstrap.
2. Press the Power button until the menu appears.
3. Touch **Power Off**.
4. Press the battery latches in and lift the battery from the TC70.

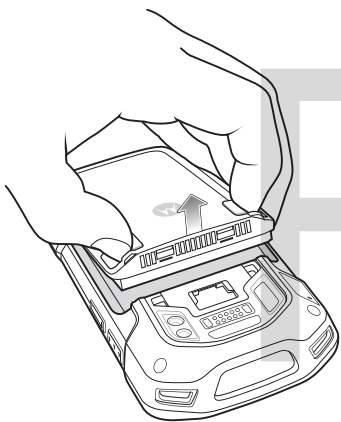

ACCESSORIES

Five Slot Charge Only Cradle

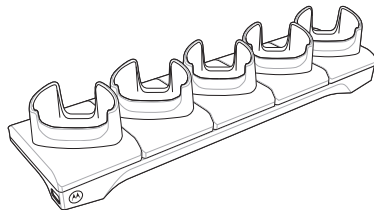


Four Slot Battery Charger




Magnetic Stripe Reader



 Holster




Charge Only Cable

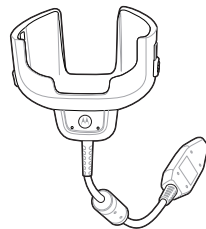


DATA CAPTURE OPTIONS


Imaging

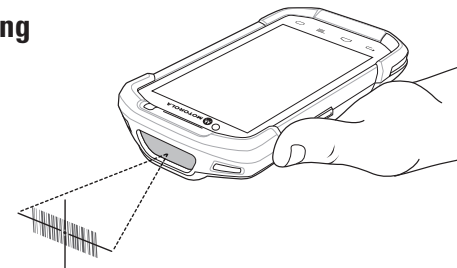

1. Ensure that an application is open and a text field is in focus (text cursor in text field).
2. Point the exit window at the bar code.
3. Press and hold the **Scan** button.
4. The red laser aiming pattern turn on to assist in aiming. When the TC70 decodes the bar code the Data Capture LED light green and a beep sounds.
5. Release the **Scan** button.

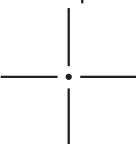

Camera Decode

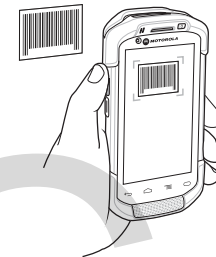


1. Ensure that an application is open and a text field is in focus (text cursor in text field).
2. Point the TC70 at the bar code.
3. Press the **Scan** button.
4. In the image window align the red target over the bar code. When the TC70 decodes the bar code the Data Capture LED light green and a beep sounds.
5. Release the **Scan** button.

Camera Photo




1. Touch **Camera**.
2. Point the TC70 at an object.
3. Touch the shutter button.

AVOID EXTREME WRIST ANGLES

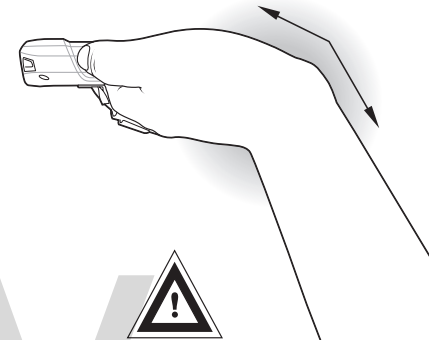

AVOID EXTREME WRIST ANGLES

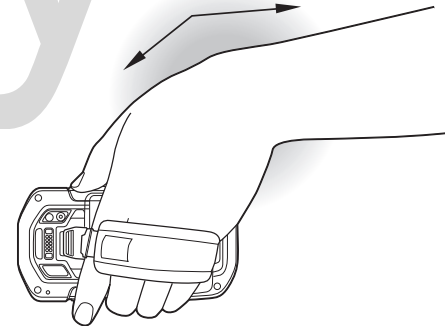

MOTOROLA

Motorola Solutions, Inc.
1301 E. Elgonquin Rd. Schaumburg, IL 60196-1078, U.S.A.

MOTOROLA, MOTO, MOTOROLA SOLUTIONS and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC and are used under license. Android is a trademark of Google Inc. All other trademarks are the property of their respective owners.

© 2014 Motorola Solutions, Inc. All rights reserved.



MN000746A01 Rev. A — April 2014

For more information see the TC70 User Guide and the TC70 Integrator Guide available at: <http://www.motorolasolutions.com/support>