


Front




SONIC PRO WIRELESS HEADPHONES

Instruction Manual


www.digitalesentials.technology

Product overview

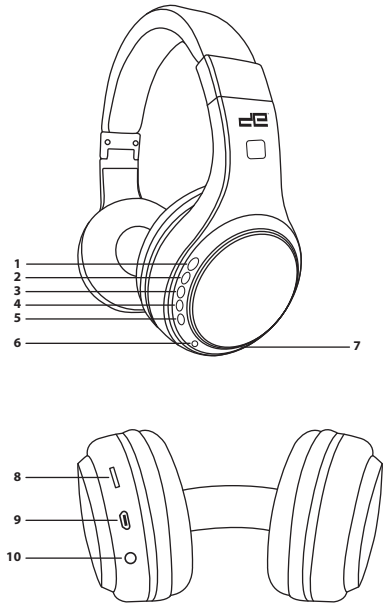

1. Mode Button
2. ⏮ Vol-/Previous Track
3. ⏪ Play/Pause Button
4. +Vol ⏭ Vol+/Next Track
5. 🔊 Power Button/ Multi-function Button
6. Microphone
7. LED Indicator
8. microSD Memory Card Slot
9. Charging Port
10. 3.5 mm Aux-In Port

Package contents



Wireless Headphones x 1pc
 Instruction Manual x 1pc

Technical specification

Driver Diameter:	40 mm
Frequency Response:	20 Hz - 20 KHz
Sensitivity:	110 dB +/- 3 dB
Impedance:	32 Ohms
Charging Time:	2 Hours
Playing Time:	2-3 Hours
Battery Capacity:	250 mAh
Battery Type:	Li-ion Battery 3.7 V
Receiver Distance:	≤ 32.8 Feet
Bluetooth Version:	4.2

Power On/Off

Power on
 Press the 🔊 button to turn on the wireless headphones. After "Power On" and the LED indicator will turn blue.

Power off
 Press the 🔊 button to turn off the wireless headphones. After "Power Off" and the LED indicator will turn off.

Bluetooth pairing

1. Keep the distance between your wireless headphones and mobile phone (or other devices) within 32.8 Feet.
2. Power on the wireless headphones and it will automatically turn to Bluetooth pairing mode when there is no microSD memory card inserted. You will hear a beep sound and the LED indicator will flash in blue and red.
3. Activate the Bluetooth function on your phone within range and select "DEHP-0363" from the list shown.
4. You will hear a beep sound after pairing is successful.
5. While there is no pairing with Bluetooth device within 5 minutes, wireless headphones will turn off automatically.

Reconnect Bluetooth

When powered on, the wireless headphones will automatically connect with the last successfully paired device.

How to use

Mode change

Press the mode button to change from the Bluetooth mode to MP3 music play mode and vice versa.

Back

How to use

Play/Pause track
 Press ⏪ Button.

Volume control
 Long press +Vol ⏭ Button: Increase volume
 Long press ⏮ Vol- Button: Decrease volume

Track control
 Short press +Vol ⏭ Button: Play next track
 Short press ⏮ Vol- Button: Play previous track

Answering a call
 Quickly press the 🔊 Button to answer an incoming call.

Ending a call
 Quickly press the 🔊 Button to end a call.

Redialing a call
 Double press the 🔊 Button to redial a call.

Rejecting a call
 Press the 🔊 button for 2 seconds to reject a call when the wireless headphones rings.

microSD memory card
 Turn the headphones on and insert the microSD memory card into the slot, you will hear "Music Play Mode". The MP3 track will be played automatically.

Charging product

1. Use the Micro USB cable provided with this wireless headphones.
2. Open the cover, connect the Micro USB plug to Micro USB charging port on the wireless headphones, then connect the USB plug to a USB port on a computer or wall adapter to begin charging.
3. The light will turn red while charging and will turn off once fully charged.

NOTE:

- You must select a qualified charger from a regular manufacturer.
- You must charge the wireless headphones if it has been not used for more than 12 months.

FAQ

- **If the product cannot be paired with your device, please try the following:**
 Ensure that your product is in pairing mode or reconnection mode. Ensure that Bluetooth search function of your mobile device is activated.
- **If the product will not turn on:**
 Make sure the product is fully charged.
- **Can I change the battery for the product?**
 This product uses a built-in non-detachable battery which cannot be removed.
- **If the product cannot be recharged:**
 If you use a power outlet, ensure that the power supply is connected securely and the outlet works. If you use a computer, ensure that it is connected and the USB port is powered.

Digital Essentials 1-Year Limited Warranty

This warranty does not cover normal wear and tear, abusive use or misuse, modification, tampering or by any other cause not related to either materials or workmanship. This warranty does not apply to product used for any industrial, professional or commercial purposes.

Technical Assistance

For service on any defective under 12 months warranty policy, please contact Consumer Support.

Email: consumersupport@zeeva.com

Digital Essentials is a brand of Zeeva International Ltd.
Keep All Relevant Information for Future Reference

⚠ Safety instructions for the rechargeable lithium ion battery and charging the product

- The input voltage to the product is 5V 1A.
- In order to charge the product in safe manner and reliable conditions, please only adopt certified appropriate charger/ adapter for charging this product.
- Only charge the product at ambient temperatures between 10 deg C/ 50 deg F and 40 deg C/104 deg F
- Do not heat above 70 deg C/158 deg F, e.g. Do not expose to sunlight or throw into fire.
- Switch off the product after use.
- Please note that we won't take any responsibility for any wrong operation (e.g. Voltage higher than 5V) as this may result in severe injury or loss of property, and we cannot control the operating process during the time the user using this product.
- In extreme cases, abuse or misuse of Lithium battery pack can lead to explosion, heat generation, fire development or smoke development

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 (1) This device may not cause harmful interference.
 (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:
 The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCC ID: 2ADMS-DEHP-0363