

billboard® WIRELESS SPEAKER USER MANUAL

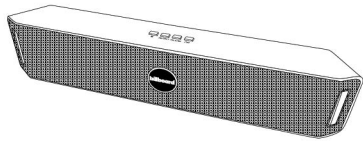 


Table of contents

1 Introduction	1
2 Package includes	2
3 Connection Diagram	3
4 How to use	3
4.1 General functions	3
4.2 Pairing to mobile phone	4
4.3 Charging your speaker	6
5 Technology specification	7
6 FAQ	8

1. Introduction

 
Congratulations, and thank you for choosing the Bluetooth Wireless Speaker. This manual will help you operate the Bluetooth Wireless Speaker, but you should first familiarize yourself with the Bluetooth functionality of your mobile phone or other devices before using the Bluetooth Wireless Speaker.

Safety Rules


- Please follow the rules depicted in this manual closely to ensure your safety. Before using this Bluetooth speaker, we would strongly encourage you to read through this user manual.
- Be more wary of any edges, uneven surfaces, metal parts, accessories and its packaging so as to prevent any possible injuries or damages.
- Do not modify, repair or dismantle this Bluetooth speaker. Doing so may result in fires, electric shocks, complete breakdown of this Bluetooth speaker, etc. All of which, are not covered under warranty.
- Do not use any diluents or volatile liquid to clean the Bluetooth speaker.
- Do not use the Bluetooth speaker in a hazardous location.

1

2. Package includes

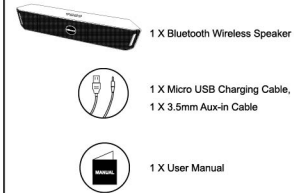

 3. Connection Diagram

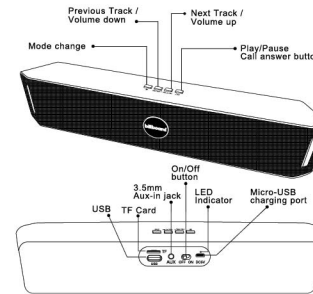

2

4. How to use

4.1. General Functions

Desired Result	Required Action
Turn on & Enter the pairing mode	Switch the On/Off button at the back.
Pairing	You should use a Bluetooth function mobile phone or other Bluetooth Master Device and to perform pairing action (detail refer to the chapter about pairing)
Play / pause	Press ▶ to play when the device is pausing and press ⏸ to pause when the device is playing.
Next	Press ▶▶ is for next music.
Previous	Press ◀◀ is for previous music.
Volume up	Long press the VOL+ for volume up.
Volume down	Long press the VOL- for volume down.
Charging	Plug the charger to micro-USB port at the back of the device. (Red LED is on)
Input Mode change	Long press "M" to change the audio input mode.
TF card playback	Insert TF card to the TF card slot, then switch on the speaker. The speaker will play the music from TF card.
USB playback	Insert USB to the USB slot, then switch on the speaker. The speaker will play the music from USB.

3

4.2. Pairing to Mobile phone or other device

To use your Bluetooth speaker, you must first pair your speaker with a phone or a computer. Once your Bluetooth speaker is paired to a specific mobile phone, they will remain paired and automatically recognize each other whenever they are within range.

Pairing to a phone and Entertainment device:

- Turn on your phone and ensure its Bluetooth function is activated
- Turn on the speaker to go to the pairing mode.
- Search your Bluetooth devices on your phone by following the phone's instructions. Refer to your phone's user manual for more information.
- After a few seconds the phone will list "BB-BT-SPEAKER" as a discovered device. Select it and follow your phone's to instruction pair.
- Your phone will confirm the pairing, and then press Yes/Ok.
- Finally, select to connect with "BB-BT-SPEAKER" from your phone.

4

Pairing to a computer and Entertainment device:

- If there is no Bluetooth function supported by your computer, a Bluetooth adapter is necessary. Connect the adapter to your computer and ensure its Bluetooth function is activated.
- Turn on the speaker to get into the pairing mode.
- Open the Bluetooth software (such as Blue Soleil) installed on your computer, and select "Search your Bluetooth devices" function. Refer to user manual of the Bluetooth software for more information.
- After a few seconds the "BB-BT-SPEAKER" will be listed in the Bluetooth software of your computer as a discovered device. Select this icon and click right button of your mouse to select "pairing" item, then select "connect with audio device" with the same operation.

5

4.3. Charging your speaker

The speaker is convenient to connect to a USB charger via its Micro-USB port. Make sure that your speaker is fully charged for at least 6 hours before initial use. Insert one terminal of your charger to the USB port of your PC and the other terminal to the Micro-USB port. While charging, the red LED light is constantly on. When charging is completed, the LED turns off.



Warning:

- You must select a qualified charger from a reliable source.
- You must charge the Bluetooth speaker if it has not been used for more than 12 months.

6

5. Technical specification

Parameter	Value
Bluetooth Specification	4.1
RF Range	10 m
Frequency Response	20Hz-20KHz
Loudspeaker Output	6W
Play Time	3-4 hours
Charging Time	Around 2 hours
Dimension (L×W×H)	65mm x 52mm x 320mm
Weight	528g

7

6. FAQ

- Why is there no power even when the Speaker is powered on?
Ans: Ensure the battery is being charged up to 6 hours for its first use. The LED turns on when it starts charging.
- There is no sound when played.
Ans: Check the connection between speaker with phone or computer, if the connection is not established, please reconnect again. Make sure the speaker is paired and connected with your phone or other master device.

8

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.