
Date: 06 07 2023 Product: EP-0692 IM Z E E V A

Size: 222.75(W) x 105(H)mm

FRONT SIDE

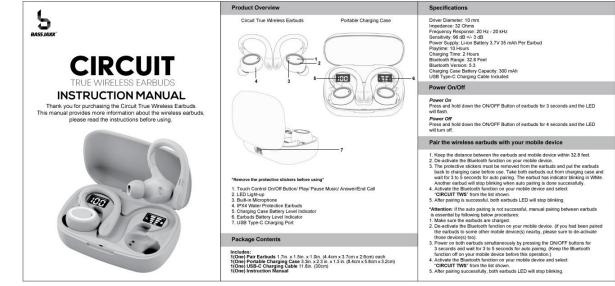

BACK SIDE Recharge Charging Case FAQ

 Δ For your safety, please always use appropriate 5V output

charger/Adapter to charge the product.

DO NOT USE Quick Charging USB Adapter to charge the product, as it might damage the product. 1. Use the USB Type-C charging cable provided with the packaging.

- 2. Connect the USB plug to a USB port on a computer or wall adapted then connect the USB Type-C plug to the USB Type-C charging port
- on the charging case to begin charging
 3. The last digit of the Battery Level Indicator will be flashing during
- charging.
 4. Once fully charged, the Battery Level Indicator will stop flashing. The Earbuds Battery Level Display will be flashing during the earbuds are charging and will be off after fully charged.

You must select a qualified charger from a regular manufacturer.
You must charge the charging case and earbuds if it has been not used for more than



▲ CAUTION: The USB Type-C charging cable included with this item is intended for use with this product. Only use the included USB Type-C charging cable to charge this product.

If the wireless earbuds cannot be paired with your device,

please try the following:
Ensure that your earbuds are in pairing mode or reconnection mode
Ensure that Bluetooth search function of your mobile device is activated.

If the wireless earbuds will not turn on:
Make sure the earbuds are fully charged.
Make sure the protective stickers are removed from the Earbuds

Can I change the battery for the earbuds and the charging case?

The wireless earbuds and the charging case use a built-in non-detachable battery which cannot be removed.

If the charging case cannot be recharged:
If you use a power outlet, ensure that the power supply is connected securely
and the outlet works. If you use a computer, ensure that it is connected and the

△ Safety instructions for the lithium battery and charging the product

-The input voltage to the product is 5V 1A.

-In order to charge the product in safe manner and reliable conditions, please only adopt certified appropriate charger/ adapter for charging the product.
-Only charge the product at ambient temperatures between 10 °C/50 °F and 40 °C/104 °F

- Do not heat above 70 °C/158 °F, eg. Do not expose to sunlight or throw into fire. Switch off the product after use.

-Please note that we won't take any responsibility for any wrong operation (eg. Voltage higher than 5V) as this may result in severe injury or loss of property, and we cannot control the operating process during the time the user using this

In extreme cases, abuse or misuse of Lithium battery pack can lead to explosion, heat generation, fire development or smoke developmen

When powered on, the wireless earbuds will automatically connect with the last Disconnect the wireless earbuds from your mobile device

Reconnect the wireless earbuds to your mobile device

Power off the wireless earbuds; or Switch off the Bluetooth on your mobile phone; or

Leave the earbuds 60ft away from your mobile phone or further.

Answer / Reject a call

When receive a call, press the ON/OFF Button once (on either earbud) to accept the call, or answer the call normally via your mobile phon Press and hold 2 seconds to reject it.

To end the call, just press ON/OFF button at any side of earbud with Beep sound

Functions

Pause / Play Music: Short Press on ON/OFF Button Go back to previous song: Double click left ON/OFF button. Advance to next song: Double click right ON/OFF button. Voice Assistant: Press and hold ON/OFF button for 2 seconds.

Charging your Earbuds

- Open the charging case cover.
 Remove the protective stokers between earbuds and charging case.
 Insert the Earbuds into the charging case.
 The earbuds will start the charge automatically.
 ELD indicator light of the Earbuds will be turned on when charging.
- Once fully charged, the LED will be off.

Note: If the charging is not start, take out both earbuds from the charging case

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

 2. Changes or modifications not expressly approved by the party responsible for
- compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this

equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

 Increase the separation between the equipment and receiver.

 Connect the equipment into an outlet on a circuit different from that to which the
- receiver is connected

Consult the dealer or an experienced radio/TV technician for help.

RF warning statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



FCC ID: 2ADM5-EP-0692

ITEM# EP-0692

Distributed by 1616 Holdings, Inc. 701 Market Street, Suite 200 Philadelphia, PA 19106 Made in China

Keep all relevant information for future reference