Date: OCT 24 2023 Product: EP-0701 IM

Size: 222.75(W) x 105(H)mm



FRONT SIDE





Package Contents

1(One) Pair Earbuds 1.29in. x 0.67in. x 0.73in. (3.3cm x 1.7cm x 1.9cm)each 1(One) Portable Charging Case 2.93in. x 2.22in. x 1.09in. (7.4cm x 5.6cm x 2.8cm) 1(One) USB Type-C Charging Cable 11.8in. (30cm) 1(One) Instruction Manual.

Orier Diameter: 10 mm Ingedanos: 32 Ohres Frequency Reposones: 20 Hz - 20 kHz Sensibilly; 56 dB + 1-3 dB Playfime: 10 Hours Charging Time: 24 Hours Blustooth Range: 32.8 Feet Blustooth Range: 32.8 Feet Blustooth Factors: 5.3

Open/ Close Main Compartment

Double tap Auto Lifting Sensor (2) to open main compartment automactically Double tap Auto Lifting Sensor (2) to close main compartment automactically





Holding the lower part of the charging case during ope Do not block the main compartment. Do not push or pull the main compartment.

Power On
Press and hold down the ON/OFF Button of earbuds for 3 seconds and the LED will flash.

Press and hold down the ON/OFF Button of earbuds for 4 seconds and the LED will turn off. Pair the wireless earbuds with your mobile device

- Keep the distance between the earbuds and mobile device within 32.8 feet.
 De-achiest the Blustoch function on your mobile device.
 Put the activate of the charging case before use. Take both earbuds cut from the Arbud case to the charging case before use. Take both earbuds cut from the Arbud case of the A
- successruly.

 4. Activate the Bluetooth function on your mobile device and select "EP-0701 TWS" from the list shown.

 5. After pairing is successful, both earbuds LED will stop blinking.

- *Affection: If the auto paring is not successful, menual pairing between earlouds is essentially following below procedures:

 2. De exclusive the behavior handle only on mobile device, (if you had been paired the earlouds is sown other mobile device(in) nearly, pieses are not obe-exclusive the process of the mobile device(in) nearly, pieses are not obe-exclusive and the earlouds are one of the mobile device(in) nearly, pieses are not obe-exclusive and a series of the earlouds of the earlou

Reconnect the wireless earbuds to your mobile device When powered on, the wireless earbuds will automatically connect with the last successfully paired device.

FCC STATEMENT

1. This device complex with Part 15 of the FCC Rules. Operation is subject to the

(1) This device among the course harmful intenference.

(2) This device must accept any intenference received, including intenference that
many causes undestance operations.

(3) This device must accept any intenference received, including intenference that
many causes undestance operations.

(3) This device must be approved by the party responsible for
compliance could void the user's authority to operate the equipment.

BACK SIDE

Disconnect the wireless earbuds from your mobile device

Power off the wireless earbuds; or Switch off the Bluetooth on your mobile phone; or Leave the earbuds 60ft away from your mobile phone or further.

Answer / Reject a call

When receive a call, press the ON/OFF Button once (on either earbud) to accept the call, or answer the call normally via your mobile phone.

Press and hold 2 seconds to reject it.

End a call

To end the call, just press CN/OFF button at any side of earbud with Beep sound to end it.

Note: If the charging is not start, take out both earbuds from the charging case and insert again after few seconds.

Recharge Charging Case

- A For your safety, please always use appropriate 5V output charger/Adapter to charge the product.

 DO NOT USE Quick Charging USB Adapter to charge the product, as it might damage the product.
- as It riight certified to the product.

 1. Double tap to close the main compartment.

 2. Use the USB Type-C charging cable provided with the packaging.

 3. Connect the USB Type-C plug to the USB Type-C or wall adapter, then connect the USB Type-C plug to the USB Type-C charging port on the charging case to begin charging

 4. The Charging Case LED Indicator will be flashing in Red during characting.
- charging.

 5. Once fully charged, the Charging Case LED Indicator will stop
 flashing.

 6. The Charging Case LED Indicator will be flashing in Blue during the
 earbuds are charging and will be off after fully charged.

*Make sure the main compartment is closed before charging.





⚠ CAUTION: The USB Type-C charging cable included with this item is intended for use with this product. Only use the included USB Type-C charging cable to charge this product.

FAQ

If the wireless earbuds cannot be paired with your device, please try the following:
Ensure that your earbuds are in pairing mode or reconnection mode Ensure that Bluetooth search function of your mobile device is activated.

If the wireless earbuds will not turn on: Make sure the earbuds are fully charged.

Can I change the battery for the earbuds and the charging case? The wireless earbuds and the charging case use a built-in non-detachal which cannot be removed.

If the charging case cannot be recharged:
If you use a power outlet, ensure that the power supply is connected securely
and the outlet works. If you use a computer, ensure that it is connected and the
USB port is powered.

compliance could visit the user's authority to operate the equipment. MOTE: This equipment has been leasted and bound a compty with his finish for close 3 egiptidence; parsent of the fit for the FCC Piles. These limits are designed to provide consensation protection of the FCC Piles. These limits are designed to provide executed protection of part of the FCC Piles. These limits are insclined installation. This equipment generates uses and can radiate radio frequency energy and, for installation of the inaccretance with the reductions, guarantee that interference will not court in a particular installation. If this equipment does execute harm's freference are ador to relevation exposure, which exposure that interference will not court in a particular installation. If this equipment does execute harm's freference in early or state of the following measures. Increase the separation between the equipment and receiver. In consist the separation between the equipment and receiver. - Consult the deliver or an experienced radio TV technican for help. RF warning statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by 1616 Holdings, Inc. is under license. Other trademarks and trade names are those of their respective owners.

ITEM# EP-0701

FCC ID: 2ADMS-EP-0701 Keep all relevant information for future reference Distributed by 1616 Holdings, Inc. 701 Market Street, Suite 200 Philadelphia, PA 19106 Made in China