

105(H) x 297(W) mm



SWIFT EARBUDS

WIRELESS EARBUDS WITH MICROPHONE

USER MANUAL

Thank you for purchasing the SWIFT Wireless Earbuds. This manual provides more information about the wireless earbuds, please read the instructions before using.

Earbuds Overview



Power On/Off

- ◆ **Power on**
Press and hold down the On/Off Button for 3 seconds and the blue LED will turn on.
- ◆ **Power off**
Press and hold down the On/Off Button for 4 seconds and the blue LED will turn off.

Pair SWIFT Wireless Earbuds with your mobile device

1. Keep the distance between your wireless earbuds and mobile phone (or other devices) within 32.8 Feet.
2. Power on the SWIFT Wireless Earbuds
3. Activate the Bluetooth function on your phone within range and select "Swift BT Earbud" from the list shown.
4. The LED blinks in blue when paired successfully.

- ◆ Attention: If the pairing is not successful within 2 minutes, the earbuds will power off, please repeat the pairing procedures to try again.

Reconnect SWIFT Wireless Earbuds to your mobile device

- ◆ When powered on, the earbuds will automatically connect with the last successfully paired device.

Disconnect the earbuds from your mobile device

- ◆ Power off the earbuds; or
- ◆ Switch off the Bluetooth on your mobile phone; or
- ◆ Leave the earbuds 60ft away from your mobile phone or further.

Answer a call

- ◆ When you receive a call, press the On/Off Button once to accept the call, or answer the call normally via your mobile phone.

End a call

- ◆ Press the On/Off Button once to end the call or hang up your mobile phone.

Technical specification

Bluetooth version: - - - - - 3.0
 Bluetooth operating range: - - - - - 32.8 Feet
 Frequency response: - - - - - 20Hz - 20KHz
 Playing time: - - - - - 2-2.5hrs
 Standby time: - - - - - 50hrs
 Fully charged time: - - - - - 2hrs
 Battery Capacity:- - - - - 55mAh
 Rechargeable Li-Ion Battery - - - - - 3.7V

FAQ

- ◆ **If the SWIFT Wireless Earbuds cannot be paired with your device, please try the following:**
Ensure that your earbuds are in pairing mode or reconnection mode. Ensure that Bluetooth search function of your mobile device is activated.
- ◆ **If the SWIFT Wireless Earbuds will not turn on:**
Make sure the earbuds are fully charged.
- ◆ **Can I change the battery for the earbuds?**
SWIFT Wireless Earbuds use a built-in non-detachable battery which cannot be removed.
- ◆ **If the SWIFT Wireless Earbuds cannot be recharged:**
If you use a power outlet, ensure that the power supply is connected securely and the outlet works. If you use a computer, ensure that it is connected and the USB port is powered.

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 (1) This device may not cause harmful interference.
 (2) This device must accept any interference received, including interference that may cause undesired operation.
 2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCC ID: 2ADM5-EP0424

Distributed by Five Below Merchandising, Inc.
 1818 Market Street, Suite 2000
 Philadelphia, PA. 19103
 Visit us at www.fivebelow.com

Keep All Relevant Information for Future Reference