


Cone Wireless Speaker Manual

Size: 4.5(H) x 11.7(W)in / 115(H) x 297(W)mm




WIRELESS SPEAKER USER MANUAL

Thank you for purchasing the Wireless Speaker.
This manual provides more information
about this wireless speaker, please read the instructions before using.

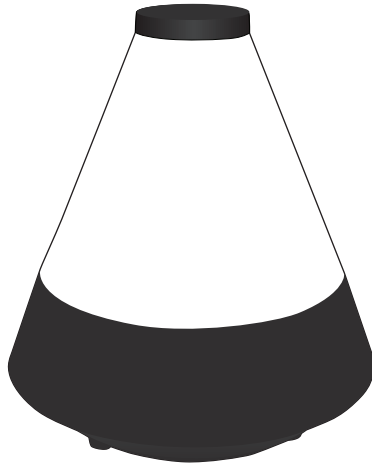

Product Overview

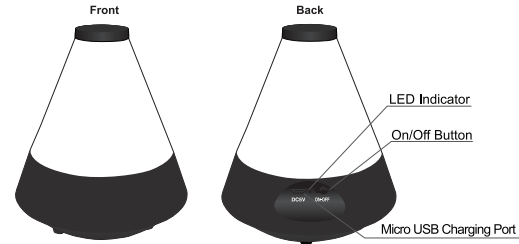

Package Contents

- ◆ Wireless Speaker x 1
- ◆ Micro USB Charging Cable x 1
- ◆ User Manual x 1

Power On/Off

- ◆ **Power on**
Slide the ON/OFF Button to left, turn on the speaker.
- ◆ **Power off**
Slide the ON/OFF Button to right, turn off the speaker.

Pair Bluetooth speaker with your mobile device

1. Keep the distance between your Bluetooth speaker and mobile phone (or other devices) within 32.8 Feet.
 2. Power on the Bluetooth speaker.
 3. Activate the Bluetooth function on your phone within range and select "Cone Speaker" from the list shown.
 4. You will hear a beep sound when pairing is successful.
- ◆ Attention: If the pairing is not successful within 2 minutes, the Bluetooth speaker will power off. Please repeat the pairing procedures to try again.

Reconnect Bluetooth speaker to your mobile device

- ◆ When powered on, the Bluetooth speaker will automatically connect with the last successfully paired device.

Charging your Bluetooth speaker

1. Use the micro USB cable provided with this speaker.
2. Connect the micro USB plug to micro USB charging port on the speaker, then connect the USB plug to a USB port on a computer or wall adapter to begin charging.
3. The light will turn red while charging and will turn off once fully charged.

NOTE:

- ◆ You must select a qualified charger from a regular manufacturer.
- ◆ You must charge the Bluetooth speaker if it has been not used from more than 12 months.



Technical specification

Bluetooth version:	- - - - -	3.0
Frequency response:	- - - - -	20Hz-20KHz
Bluetooth music time:	- - - - -	2-2.5hrs
Standby time:	- - - - -	60hrs
Charging time:	- - - - -	2-3hrs
Playing time:	- - - - -	1-2hrs
Bluetooth operating range:	- - - - -	32.8 Feet

FAQ

- ◆ **If the Wireless Speaker cannot be paired with your device, please try the following:**
Ensure that your speaker is in pairing mode or reconnection mode.
Ensure that Bluetooth search function of your mobile device is activated.
- ◆ **If the Wireless Speaker will not turn on:**
Make sure the speaker is fully charged.
- ◆ **Can I change the battery for the speaker?**
Wireless Speaker uses a built-in non-detachable battery which cannot be removed.
- ◆ **If the Wireless Speaker cannot be recharged:**
If you use a power outlet, ensure that the power supply is connected securely and the outlet works. If you use a computer, ensure that it is connected and the USB port is powered.

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference.
 - (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCC ID: 2ADM5-SP-0325

Distributed by Five Below Merchandising, Inc.
1818 Market Street, Suite 2000
Philadelphia, PA 19103
Made in China

Visit Us At:
www.fivebelow.com

Keep All Relevant information for Future Reference