

FCC ID: 2ADM5-TL-0019

THUNDERBOLT

Instruction Manual



REMARK: THE BOAT WILL ONLY WORK UNDER THE CONDITION THAT IT IS PLAYED ON WATER

PACKAGE CONTENTS




PRODUCT DESCRIPTION

Specification

- Remote control power supply: 2x "AA" 1.5V Alkaline Batteries (Not Included)
- Boat power supply: 3 x "AA" 1.5V Alkaline Batteries (Not Included)
- Play time: 20-30 minutes
- Radio control type: RC model
- Control distance: <32 Feet

REMOTE CONTROLLER DIAGRAM

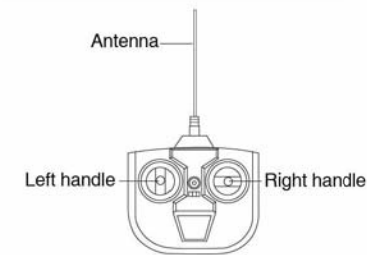


REMOTE CONTROLLER BATTERIES INSTALLATION



To install batteries into the controller, unscrew the screw on the battery box cover, to open the cover. Insert 2 x "AA" batteries 1.5V Alkaline Batteries (not included) into the battery box. Batteries should be placed as show on the diagram.

Notice:

- When inserting the batteries, you must insert according to the correct polarity, the remote wont function if batteries are reversed.

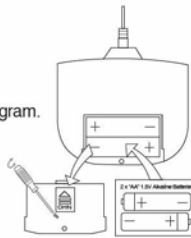

BOAT BATTERIES INSTALLATION

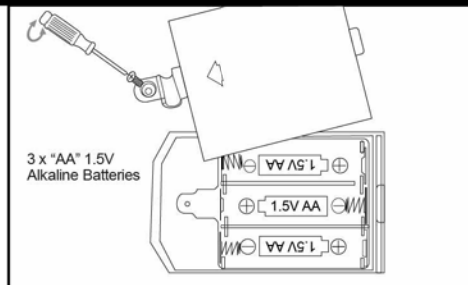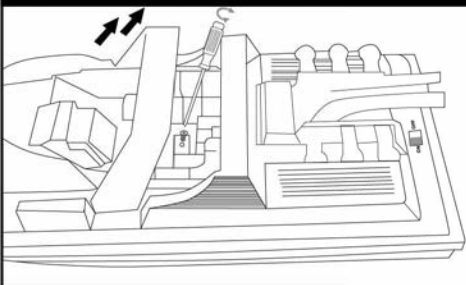

CAUTION

- Make sure you never lose sight of the boat when operating.
- Do not use the RC boat when it has visible or mechanical damage.
- Never sail near people or animals to avoid injuries or accidents.
- Make sure to sail in a controlled and safe environment without obstacles and where no damage can be done.

Safety Warnings:

For safety and security purposes, the boat will not operate until it is placed into the water This helps prevent the propeller from harming people or hitting solid objects.

1. This product is suitable for people aged 3+. This product must always be used under adult supervision and guidance.
2. Please do not mix new and old batteries, or mix different types of batteries (e.g. mixing alkaline batteries with rechargeable batteries is very dangerous)
3. When using rechargeable batteries, do not attempt to charge the battery immediately after use, because the battery may get hot. Please wait until the battery cools down before charging.
4. To avoid injury, please make sure no people or animals are near where the boat is operating. Make sure there are no plants or debris in the water to avoid damaging the propeller on the boat.
5. The effective remote distance is up to 32 feet. Please do not exceed this range, or the remote controller will go out of range and you will loose control.
6. When the boat is not in use, please power off.
7. When the boat is operating, please focus on safety first. If the boat loses control, you must find a safe way to retrieve it. Please do not attempt to retrieve the boat from the water unless you know it is absolutely safe.

Maintenance:

1. If the RC boat stops running and will not power on, you must remove the battery.
2. Avoid exposing the surface of the boat to long exposures of sunlight to prevent damaging the boat's surface.
3. If the RC boat is not used for a long period of time, please remove the battery to avoid possible damage to the boat from battery leakage.

FCC Statement

This device complies with the part 15 of the FCC rules. Operation is subject to the following two conditions:(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/ TV technician for help.

IMPORTANT: BATTERY INFORMATION

CAUTION:

1. TO AVOID BATTERY LEAKAGE

- a. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
- b. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
- c. Remove exhausted or dead batteries from the product.
- d. Remove batteries if product is not to be played with for a long time.
- e. Do not short-circuit the supply terminals.
- f. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries.

- Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.
2. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.