## **TL-0024 Wireless RC Car IM**

# 130CT17



## Instruction Manual

Thank you for purchasing the Wireless RC Car.


This manual provides more information about this RC Car, please read the instructions before using.



## 10+ Product Overview



Front

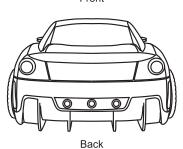

## **Package Contents**

Wireless RC Car x 1
Instruction Manual x 1

## Specifications

Power supply: 4 x "AA" 1.5V Batteries (Not Included)

#### **Smartphone App Download**



Method 1: Scan the QR Code for quick download

Method 2: Visit the following website for download

http://120.77.216.242/2code2lxhl/lxhlbletoblecarnew2.php

Method 3: Search "Wireless RC Car" in the app store

As the app download limitations are not the same in all the countries. Please noted that the method of download maybe different, but you can try all the three methods provided for you above.

Compatible With: iOS & Android


#### Smartphone App Connection





Open the app and press the search button on the left, it will show the Wireless RC Car nearby, select the RC car and it will connect with the app automatically.

#### **Standard Control**

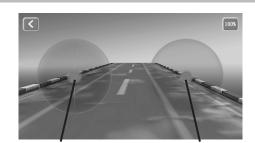

rd / Backward

Use the left controller to move the Wireless RC Car Forward / Backward Use the right controller to turn the Wireless RC Car Left / Right.

#### **Operation Method**

 
Note: To avoid losing control, always pay attention when controlling the Wireless RC Car.



Forward Button



Control Wireless RC Car to move forward





Backward Button

Control Wireless RC Car to move backward



Left Button

ontrol Wireless RC Car to move le





Control Wireless RC Car to move right

## Hand Strokes




Draw a line on the screen and the Wireless RC Car will automatically follow the path to start moving.

## **Gravity Sensor**



Use the left controller to move the Wireless RC Car Forward / Backward. Turn your smartphone left or right to use the sensor for Left / Right control.


#### Power On/Off & Front Axle Control

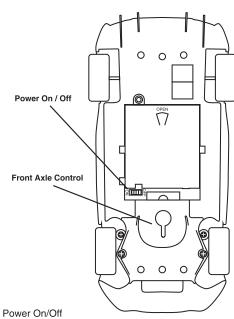

Power On/Off
Slide the ON/OFF Switch to the left to turn on the Wireless RC Car.
Slide the ON/OFF Switch to the right to turn off the Wireless RC Car.

Front Axle Control
Slide the Front Axle Control Switch to adjust front axle alignment.

#### **Wireless RC Car Batteries Installation**

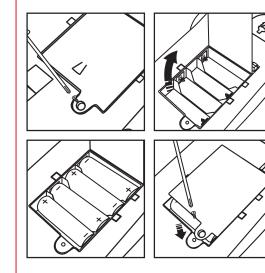

To install batteries into the Wireless RC Car, unscrew the screw on the battery box cover to open the cover. Insert 4 x "AA" 1.5V batteries (Not Included) into the battery box. Batteries should be placed as shown on the diagram.

#### Notice

When inserting the batteries, you must insert according to the correct polarity, the Wireless RC Car wont function if batteries are reversed.

## Performance Tips

- Do not drive the Wireless RC Car on grass, sand or go through water.
- 2. Do not drive the Wireless RC Car in windy or rainy weather.
- Do not drive the Wireless RC Car into any hard object.Keep fingers, hair and loose clothing away from Wireless RC Car.

## **Care and Maintenance**

Always use dry and soft cloth to clean this product.

Avoid this product from being exposed to sunlight or heat.

Avoid immersing these toys in water, otherwise, the electronic parts may be damaged.

Check the product regularly. If any damages are discovered, please stop using immediately, until it is completely repaired in good working condition.

#### IMPORTANT: BATTERY INFORMATION

⚠ CAUTION:

1. TO AVOID BATTERY LEAKAGE

 a. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.

 b. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.

- c. Remove exhausted or dead batteries from the product.
- d. Remove batteries if product is not to be played with for a long time.
- e. Do not short-circuit the supply terminals.

Should this product cause, or be affected by local electrical interference, move it away from other electrical equipment.Reset ( switching ON&OFF again or removing and re-inserting batteries) if necessary.

## Warning

This product is suitable to be used by people who has operating experience in rc car model or aged no less than 10 years old.

Please do not put the product in your mouth to prevent choking hazard

Please do not put the finger into available interspaces.

Please do not play the product in a brutal way such as throwing, crashing or twisting it.

Please store the smaller-sized product accessories in places that are out of reach of children, in order to avoid the occurrence of accidents.

Avoid placing the batteries in places in high temperatures and avoid exposure to heat.

When young children are operating the product, it shall be ensured that

the adults are guiding and making sure the product control is within the viewing range of the controller (or instructor) so that it makes the control of the rc car more convenient.

When the product is not in use, please switch off the power supplies of the Wireless RC Car and the remote control, and remove the batteries from the product.

Please note that we won't take any responsibility for any wrong operation as this may result in severe injury or loss of property, and we cannot control the operating process during the time when the user assembles or uses this product.

Once this product is sold, we won't be responsible for any safety responsibility during the time the user operates or uses controls this products.

## FCC Statement

This device complies with the part 15 of the FCC rules. Operation is subject to the following two conditions:(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

  Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/ TV technician for help.

FCC ID: 2ADM5-TL-0024