



Android 2.3

C 91 User Manual

Directory-----	2
1.Use statement-----	3
2.Appearance Description-----	3
2.1 Overall structure-----	3
2.2 Button, and plug-ins-----	4
3. The description of menu interface-----	4
3.1 Desktop description-----	4
3.2 Status Bar Description -----	5
4.Basic set of equipment -----	5
4.1 Wireless Control -----	5
4.2 Sound and display-----	6
4.3 Security and location-----	7
4.4 Date and time-----	7
4.5 Locate and text-----	8
4.6 Battery Charging-----	9
5. Software installation and management-----	9
5.1 Browser-----	9
5.2 E-mail-----	10
5.3 Google Map -----	10
5.4 Alarm clock -----	11
5.5 HDMI digital output-----	11
6. O / I File Manager -----	12
7.FAQ-----	13
7.1 Can not open the media player-----	13
7.2 Screen flashing-----	13
7.3 Headphones can not hear sound-----	13
7.4 Can not copy the file-----	13
7.5 how connect the tablet PC with computer----	13
8. Operating instruction-----	13
8.1 helpfile-----	13
8.2 version information-----	14

1. Use statement

 
Statement: The company are committed to quality innovation and continual improvement of software. If the final version of products has any differences from the description of the user guide , please subject to the final product .Thank you.

2. Appearance Description

2.1 Overall structure




2.2 Button and plug-ins

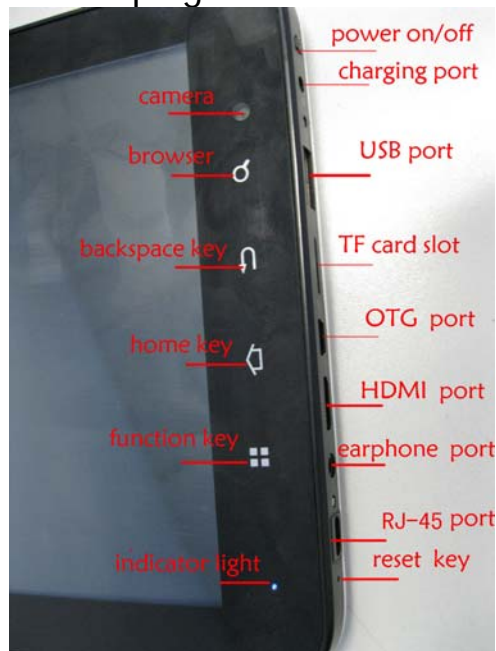


Note: if system halted, please insert one slender material into the reset key ,then system will shutdown

 insert an external charger, then charge lamp will turn on;
When charge is completed, charge lamp will turn off

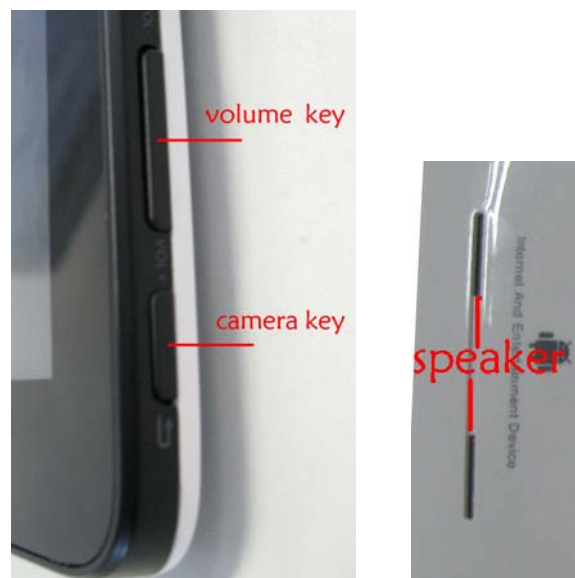

3.The description of menu interface

3.1 Desktop description

With Pressing the icon" , you can enter menu and choose the options you need,

such as email settings and so on



3.2 Status Bar Description


The status bar is located on the top screen

 


On the top screen, it shows the followings from left to right: wireless network signal, wired network signal, residual battery, current time, two volume adjustment keys., return key, function key,

4. Basic settings of e-pad devices


4.1 Wireless Control


press the set-up"  " in the menu page to enter set-up interface

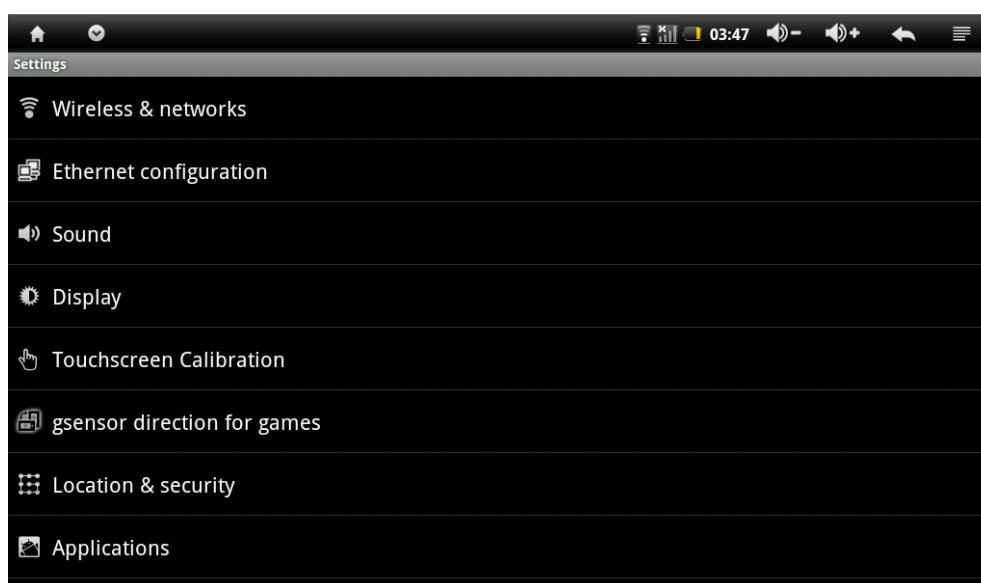


WI-FI settings: set up and manage the notice of access point to the

wireless

 .When The icon showed on the right is " " with gray color ,that means WIFI is in the state of close

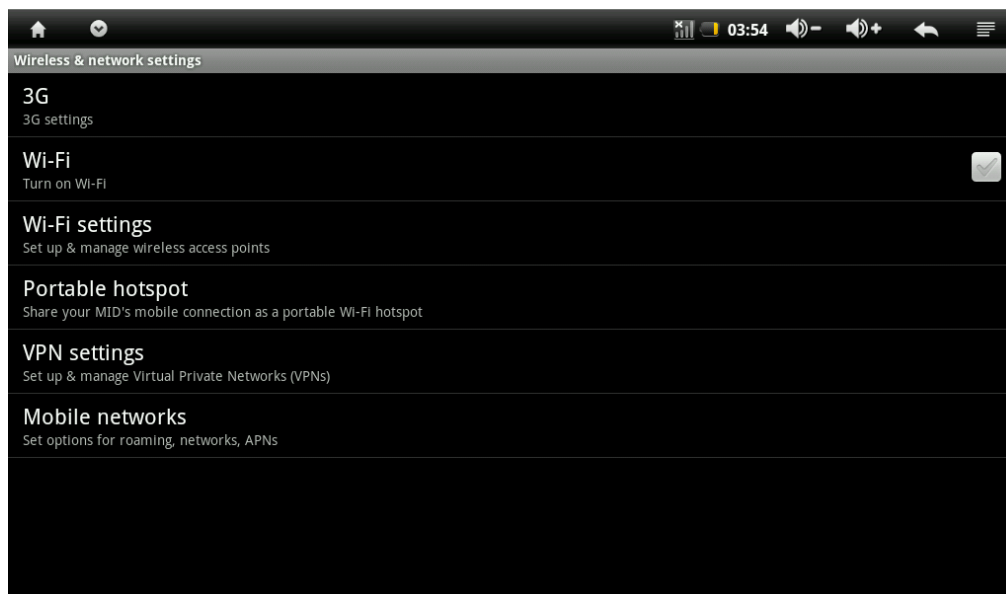

click network notification .When the right icon shows " " ,it means device is scanning the network that is available. The device will search automatically and add the nearby wi-fi network which can be connected. click wireless network port and then you can connect network.

4.2 Sound and display

 
silent mode: All sound will become silent except for media and alarm

The Volume of media: Adjust the volume of media by dragging the move point to right or left

Direction: It will change the direction automatically when you rotate the MID

Cartoon: It will show cartoon when you open or close a window

Brightness: Adjust the brightness of screen by dragging the point to the right or left

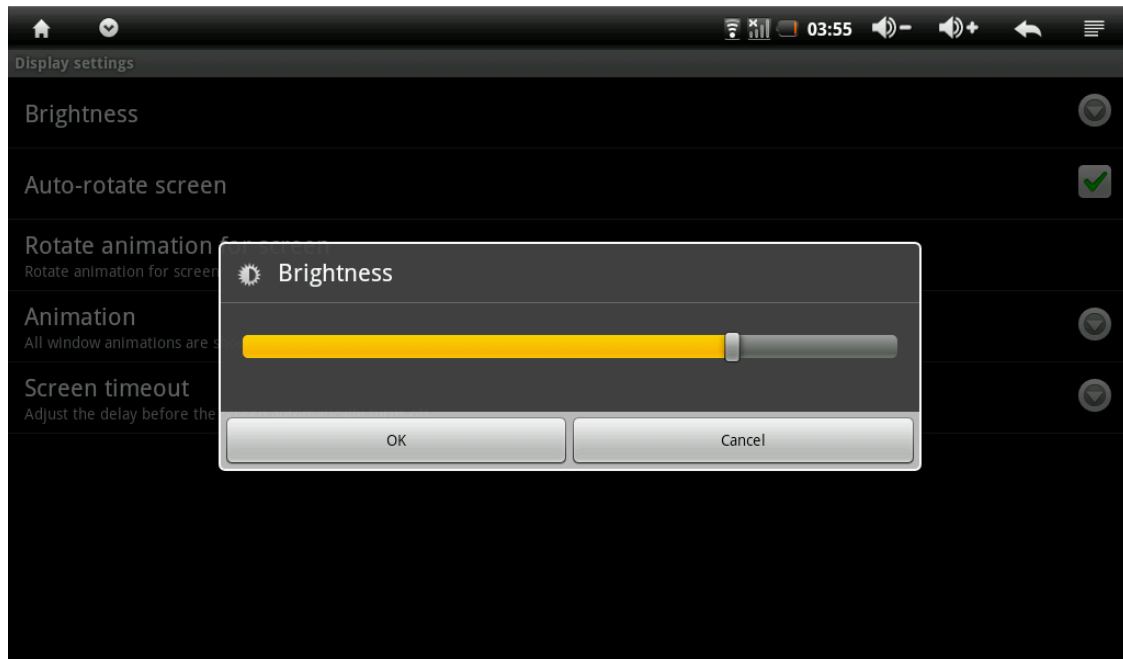

Idle screen: There are six kinds of time interval for your choose for idle screen: 15 seconds, 30 seconds, 1 minutes, 2 minutes, 10 minutes and 30 minutes.

4.3 Security and location

safety and location: set up my location and password selections, Using of wireless network: you can check the location of application by using wireless network

Visible password: it will show your password when you typing them

4.4 Date and time

 
Date and time: set up date, time ,time zone and format

Set up date and time: enter the interface of date setting to set up the date and time

Select time zone: enter the interface of time zone to set up the time zone

Set up time format: set up the display format of time


Choose date format: Choose different display format of date

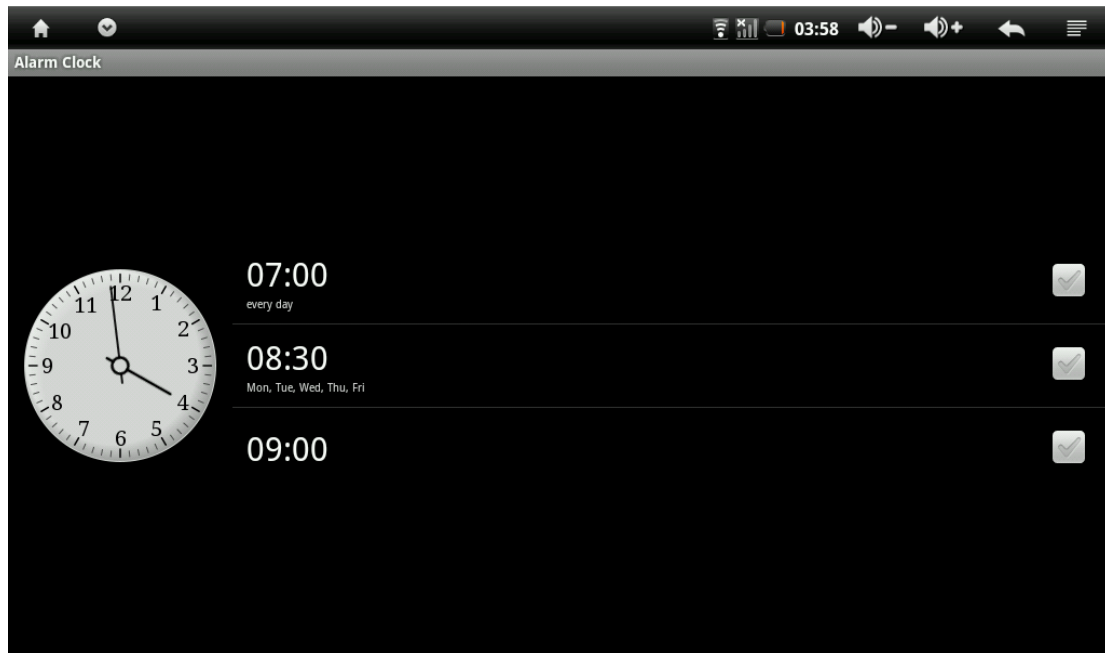

4.5 Locate and text

set up the locate (language and area), text entry and automatic error correction

 Select area:

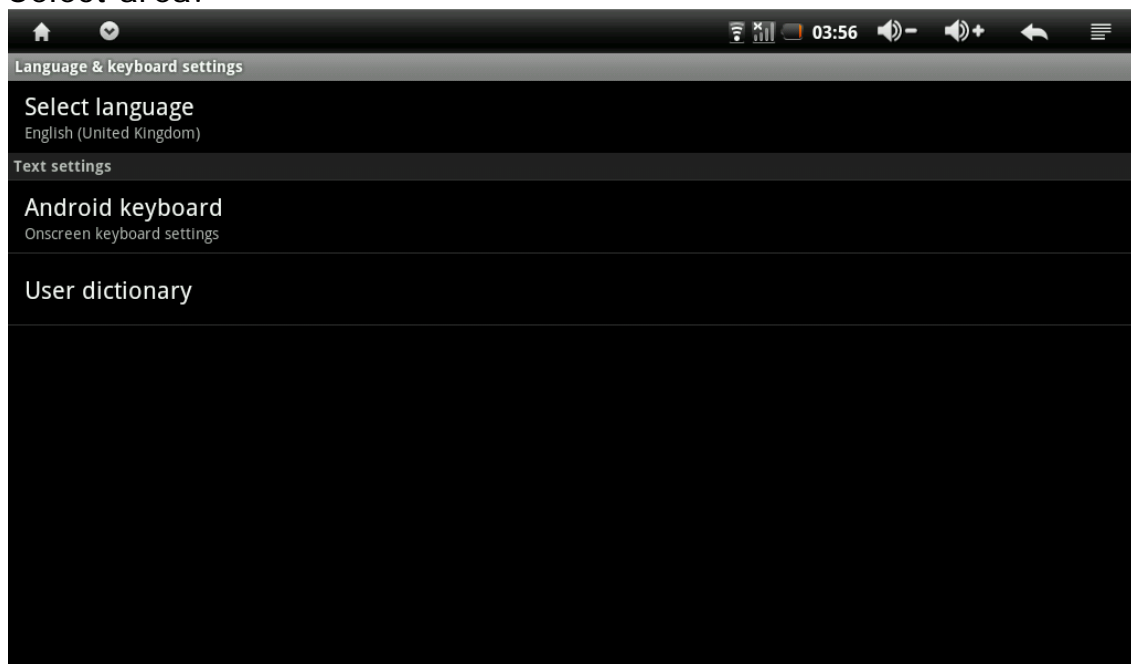



There are 54 kinds of language for choice

4.6 Battery Charging

There is a built-in battery, when the battery level is low, the system will recommend you to charge

Way of charging: One end of the adaptor connected to power socket, another end connected to the power port of the device.

<1>, When the indicator light of battery charging turns red, it means device is charging. when green, it means the tablet is on.


When the indicator light goes out, It means battery is fully charged.

<2>, During the charging period, user can still use the Pc.

Note: In the boot of state, .it takes long time for charging.

5. Software installation and management

5.1 Browser

Click " " and open the following web page.
Start: enter website by inputting web address



5.2 E-mail



Click E-mail icon" " and enter the e-mail,

You can proceed as follows:

 
- 1、 Set an e-mail account
- 2、 Open a new e-mail
- 3、 Send and receive e-mails

Note: Shortcut menu will popup when clicking the menu button..

5.3 Google map



Click" " and enter Google Map

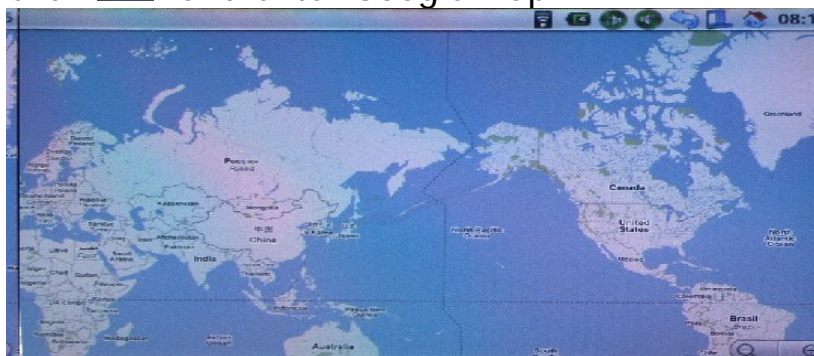

--Click the zoom icons on the touch screen to zoom in and zoom out images

--Drag touch screen, move the image up-and-down and right-and-left

Click Menu :

--search: search maps by entering address


--Line : search drive circuit by entering starting and finishing address

 
--Map mode: three modes for choice, map mode、satellite mode and traffic mode.

--My position: Find out my current location by setting up "My Location"

--more: more information about Google Map

5.4 Alarm clock

Click " " and enter the alarm clock settings

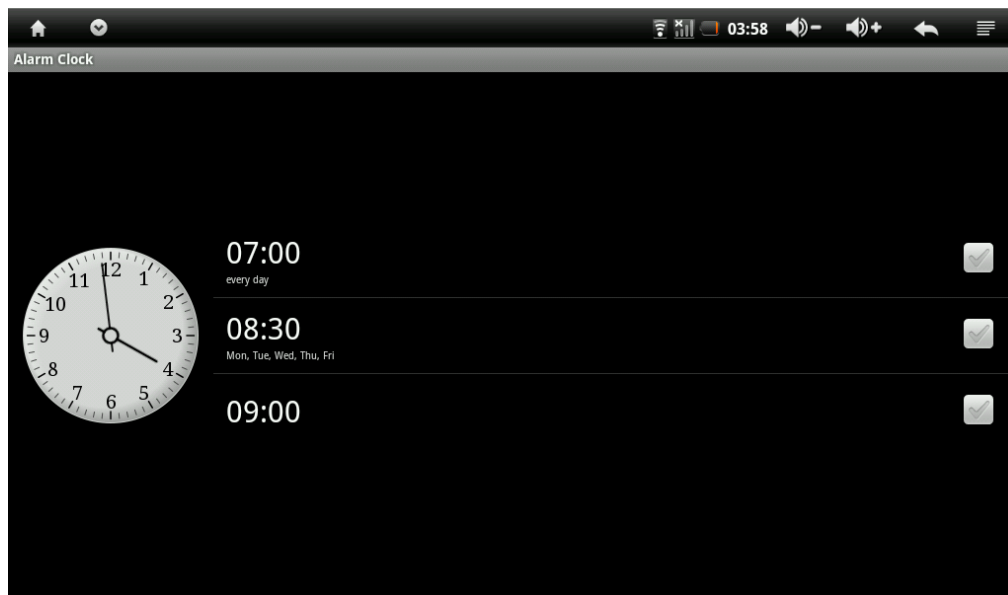

Set up time : Enter the interface of time settings to set up time.

Set up hour format: set up displaying format of time

 
Select the format of date: choose different format to show date.

5.5 HDMI digital output

use the mini-HDMI cable to connect the tablet with TV

click "HDMI switch"  then choose one among them

HDMI 480P or HDMI 720P or HDMI 1080P

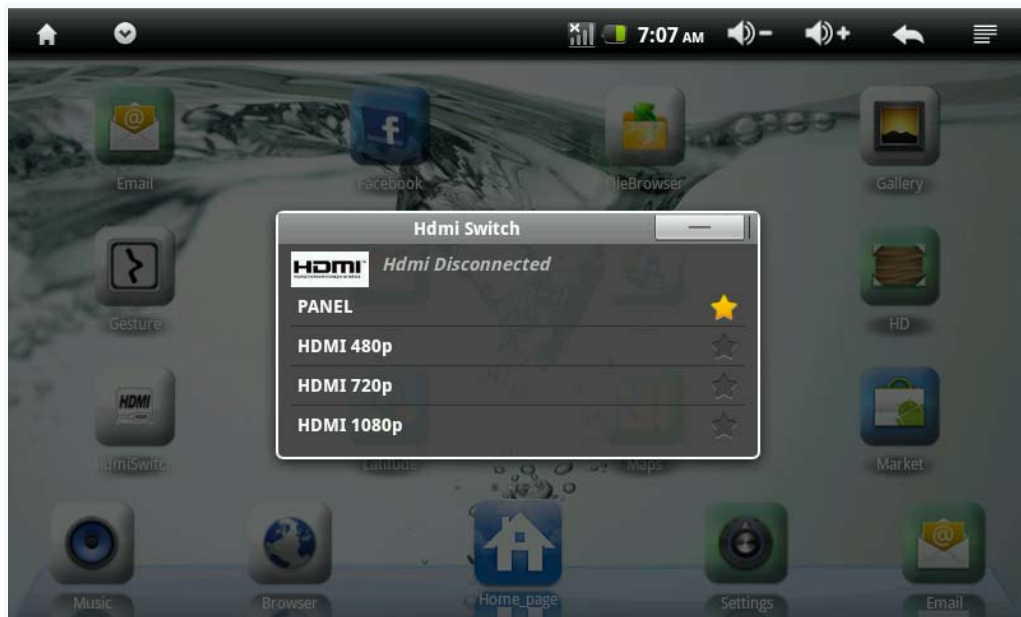

Then you can see the computer screen on TV screen .

6.O/I File Manager

Click "  " and enter O/I File manager, you can browse the files



in the e-pad and T-Flash memory card .

Short click the menu key or click the mean software on the screen to bring up the operator interface.

Operation: bring up the operation interface

- Cut: Cut a file or folder
- Copy: Copy a file or folder
- Delete: Delete a file or folder
- Rename: Rename a file or folder

7. FAQ

7.1 Can not open the media player

- Check battery
- Connect the power adapter and then check again
- If it is still cannot be opened, please contact our sales person

7.2 Screen is flashing after starting up

- short of power, please charge

7.3 Headphones can not hear sound

- please check whether the volume has been set to 0
- please check whether the music file has been damaged. Try playing other music to determine. If the file has been damaged, it could lead to serious noise or skips.

7.4 Can not copy the file

- Confirm whether the computer and the player is properly connected
- Confirm whether the storage space is full

 
7.5The procedure of connect the tablet PC with computer

- Use the cable connect the tablet PC and computer
 - when the USB icon appear on the status bar, pull down the status bar
 - USB connected
 - turn on the USB storage
- Then you can see the file of tablet PC in your computer

8. operating instruction

8.1 Helpfile

Enter into OI FILE MANAGER, then click file named“flash”,as the picture shows below:

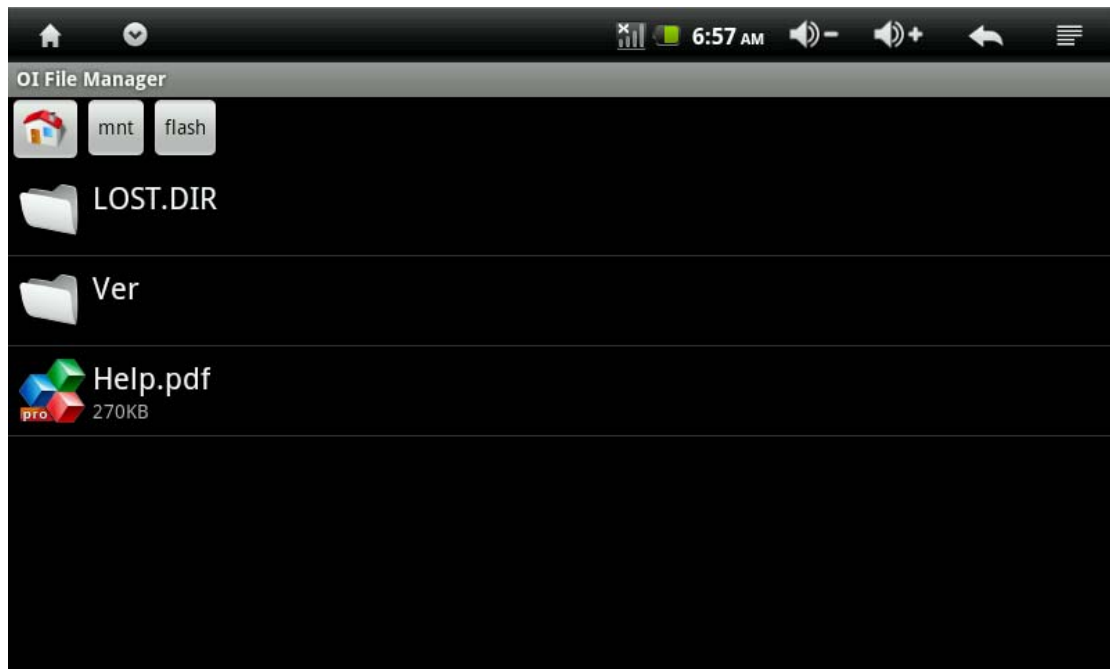

Click the "Help" folder, you can see the helpfile, inside there are some common solutions and guidance, as the picture shows below:



8.2 version information

click "Ver", you can see the version information of the tablet, including: model NO., hardware version, date of manufacture and so on, shown as the picture, model NO. is C91, date of manufacture is August 30.

FCC warning:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.