 


# sound bar

SSB-4W

---

Instruction Manual **EN**

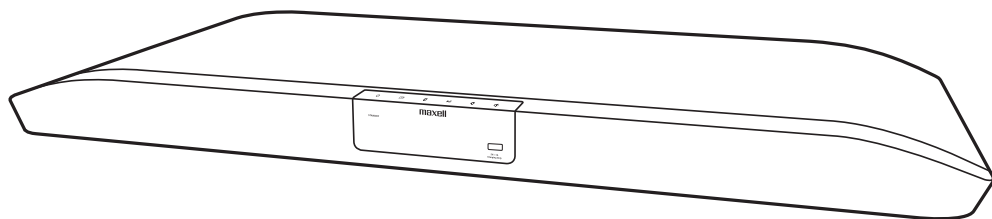

## Contents

What's in the Box.....	2
Important Safety Instructions .....	3
Identifying the Parts .....	6
Main Unit .....	6
Smart Remote Control .....	7
Getting Started.....	8
Prepare the Smart Remote Control.....	8
Precautions Concerning Batteries .....	8
Connections .....	9
Place TV on top .....	9
Connect to Power .....	9
USB DC 5V Charge .....	9
Connect to TV .....	9
Connect to a <i>Bluetooth</i> ® Device.....	12
Connect to an External Audio Device.....	13
Basic Operation.....	14
Turn On/Off.....	14
Adjust Volume Level.....	14
Mute Sound .....	14
Bass Boost .....	14
Select SRS Sound.....	14
Program Smart Remote Control to Control TV .....	14
Troubleshooting.....	15
Specifications .....	16
FCC & IC Compliance .....	17

## What's in the Box



Main Unit

 


Instruction Manual




Smart Remote Control  
(Maxell CR2025 lithium button battery included)


EN EN

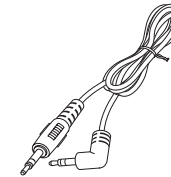

 
Line Cable  
(3.5mm to 3.5mm)  
(For TV Headphone Output)

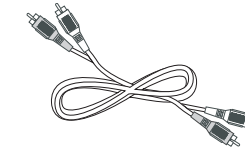

 
Line Cable  
(RCA to RCA)  
(For TV Line out)



Optical Cable

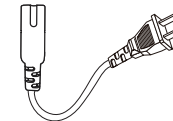 

AC Power Cable

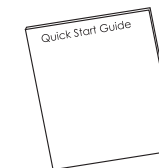 

Quick Start Guide





Important Safety Instructions



DOs and DON'Ts Leaflet

## Important Safety Instructions

	<b>WARNING</b> <b>RISK OF ELECTRIC SHOCK</b> <b>DO NOT OPEN</b>	
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		





The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude as to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the apparatus.




### Reading the user's manual

- The contents of this user's manual may be modified without any prior notification.
- The appearance and specifications may be partially modified without any prior notification.
- The Company shall not be responsible for any injury caused by fire, earthquake or a third party, as well as any injury that occur due to intentional or accidental mishandling or improper use by the customer.
- Company shall not be held responsible for any damages that may occur due to employment of a usage method not designated in the user's manual.
- Company shall not be held responsible for any damages that may occur due to malfunctioning of the Product resulting from the use of this Product together with other devices.
- This Product is not intended for use in facilities and equipment which may affect human lives, including medical equipment, nuclear devices, aerospace equipment and transport equipment, as well in facilities and equipment which require a high degree of reliability. Company shall not be held responsible for any accident resulting in personal injury or death or any fire accident that may occur due to failure of this Product when this Product is used in the control systems of those facilities and equipment.

	<b>Warning!</b> Indicates that 'there is a possibility of causing death or serious physical injury if this Product is erroneously handled'.
	<b>Caution!</b> Indicates that 'there is a possibility of causing physical injury*1 or occurrence of physical damage*2 if this Product is erroneously handled'.

\*1: Serious physical injury implies injuries such as loss of eyesight or injury, burns, electric shock, bone fracture or poisoning that have subsequent complications and which require hospitalization or long term hospital visit for medical treatment.

\*2: Physical injury implies injury, burns and electric shock which do not require hospitalization or long-term hospital visit for medical treatment.

	△ This symbol shows that the user needs to exercise caution while handling this Product to prevent fire, explosion and heating. The specific caution to be taken is written inside the symbol.
	⊘ This symbol implies restriction of an action while handling this Product. The specific restriction is written inside or near the symbol.
	● This symbol implies compulsion of an action based on the instructions. The specific compulsion is written inside or near the symbol.

### Warning











To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.










 

 


### Warning

The battery (battery or batteries or battery pack) must not be exposed to excessive heat such as sunshine, fire or the like.

EN EN

## Important Safety Instructions

	<b>Warning!</b>	
	<b>Do not repair, modify or disassemble.</b> It may cause fire, electric shock or injury. The Company shall not be responsible for any physical damage caused by repairing, modification or disassembly. Also, any repairing of a fault caused by repairing, modification or disassembly by the user will be charged, even if it happens during the warranty period.	 Don't
	<b>Keep the Product (Remote Control) out of reach of children.</b> They may accidentally swallow the battery and cause choking and damage the stomach. The cord may entangle around the child's body and cause suffocation. If any accident occurs by any chance, please consult a doctor immediately.	 Don't
	<b>Do not use in a rainy or snowy place, by the waterside or in the bathroom.</b> It may cause fire or electric shock.	 Don't
	<b>Do not use if it is thundering.</b> It may cause fire or electric shock.	 Don't
	<b>Do not keep a flower vase, flowerpot, cup, or any container containing medicine, cosmetics or water, near the Product.</b> They may break and get into the Product and cause fire or electric shock.	 Don't
	<b>Do not insert any kind of metal or easily combustible object through the aperture.</b> It may cause fire or electric shock.	 Don't
	<b>Do not block any ventilation openings.</b> It may get heated and cause fire. Install in accordance with the manufacturer's instructions.	 Don't
	<b>Do not put more than 80kg on top of this apparatus.</b> It may damage the apparatus.	 Don't
	<b>Do not use a wrong power plug out of the 2 power cords provided for this apparatus.</b> It may damage the power plug and/or the power socket. It may cause fire or electric shock.	 Don't

	<b>Caution!</b>	
	<b>Do not keep in a shaky place.</b> The Product may fall and get damaged.	 Don't
	<b>Do not keep in a place where lampblack or steam falls.</b> It may cause fire or accident.	 Don't
	<b>Do not keep in a place which is directly hit by cold air, or a place which is extremely cold.</b> Dew may fall and cause short circuit or burnout.	 Don't
	<b>Do not listen in high volume continuously for a long time.</b> Do not listen in high volume, which causes ringing in the ears, continuously for a long time. It may damage hearing.	 Don't
	<b>Do not raise the volume excessively from the beginning.</b> Sudden high volume may damage hearing. Minimize the volume before playing.	 Don't
	<b>Do not keep in an excessively hot place, such as radiators, heaters, stoves, or other apparatus (including amplifiers) that produce heat.</b> The surface of the device or parts may get damaged, and may also cause fire. Do not keep especially in a closed car in summer, and in a place where sunlight directly falls or near a stove. This may cause leakage of battery fluid.	 Don't
	<b>Do not use in sandy beaches and sandy soil where sand can easily enter, or in dusty locations.</b> It may cause burnout, fire or accident.	 Don't
	<b>Do not cover or wrap with a cloth or futon.</b> Heat may get generated and deform the Product, or Product may catch fire.	 Don't
	<b>Do not keep a cathode-ray tube near it.</b> Spots may appear because of it.	 Don't
	<b>Ensure to refer the user's manual to connect to an external device.</b> Connect to an external device after carefully reading this user's manual and the user's manual of the external device, as well as after turning off the power.	 Don't
	<b>Do not plug or unplug the power plug with wet hands.</b> It may cause electric shock.	 Don't
	<b>Insert the power plug completely and firmly into the outlet socket.</b> If the power plug is not inserted properly, fire may occur due to electric shock or dust deposition.	 Don't
	<b>Turn off power when repairing or if not going to be used for a long time, and remove the power plug.</b> Hot adhering to this may cause electric shock or physical damage.	 Caution!

## Important Safety Instructions

### Safety

- 1 Read these instructions – All the safety and operating instructions should be read before this product is operated.
- 2 Keep these instructions – The safety and operating instructions should be retained for future reference.
- 3 Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
- 4 Follow all instructions – All operating and use instructions should be followed.
- 5 Do not use this apparatus near water – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool, and the like.
- 6 Clean only with dry cloth.
- 7 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10 Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.

- 11 Only use attachments/accessories specified by the manufacturer.
- 12 Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



 
- 13 Unplug the apparatus during lightning storms or when unused for long periods of time.
- 14 Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

15 FCC/IC RF Radiation Exposure Statement  
 Caution: To maintain compliance with the FCC's RF exposure guidelines, place the product at least 20cm from nearby persons.

16 The rating label will be stuck on the rear of the unit.


## Identifying the Parts

### Main Unit: Top View

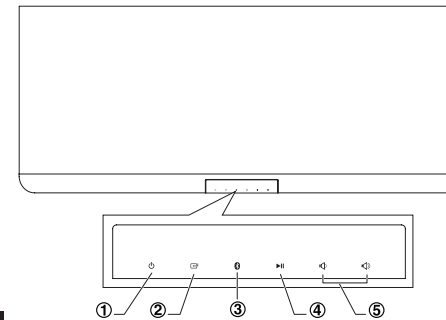


- 1 - Turn on this unit or switch to Power standby mode.
- 2 - Select a source.
- 3 - Press this button to choose *Bluetooth* source.  
- Hold and press the button to Pair the *Bluetooth*-enabled device.
- 4 In *Bluetooth* mode:  
Start or pause playback.
- 5 Decrease or Increase sound volume level.

### Front View

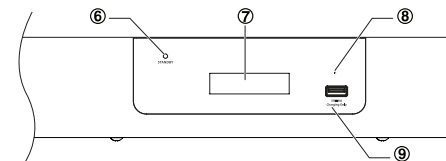 

- 6 Light indicators
- 7 Display Panel  
Show the current status.
- 8 iR  
Remote control sensor.
- 9 5V=1A Charging Only  
Use this socket to charge your smartphone and tablet PC.


### Rear View

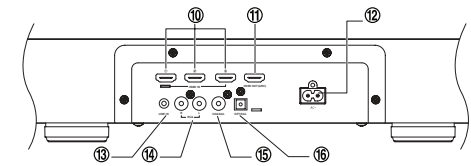 

- 10 HDMI IN Socket  
- HDMI input x 3.
- 11 HDMI OUT Socket  
- HDMI output (ARC) x 1.
- 12 AC~ Power Plug  
- Connect a power cord.
- 13 LINE IN Terminals  
- Standard 3.5mm audio input jack.
- 14 RCA Terminals  
- Standard RCA audio input jack.
- 15 Coaxial Terminals  
- 1 Coaxial input jack.
- 16 OPTICAL Terminals  
- 1 Optical input jack.

## Identifying the Parts
 
### Smart Remote Control

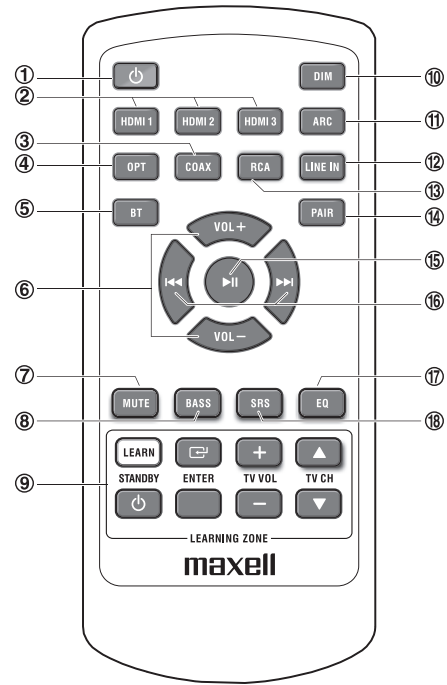

- 1
  - Turn on or turn off the unit.
- 2 HDMI
  - Select an HDMI audio input source from HDMI 1, 2 and 3.
- 3 COAX
  - Select COAXIAL source.
- 4 OPT
  - Select OPTICAL source.
- 5 BT
  - select *Bluetooth* source.
- 6 VOL+/- (Volume)
  - Adjust sound volume level
- 7 MUTE
  - Mute or resume sound from the unit.
- 8 BASS
  - Select Bass boost level 1,2 or no Bass boost effect.

- 9 LEARN
  - Activate learning mode to setup commands from the TV remote control, to control some TV functions.
- 10 DIM
  - Adjust brightness level of display panel.
- 11 ARC
  - Activate Audio Return Channel (ARC) function.
- 12 LINE IN
  - Select LINE IN source from LINE IN.
- 13 RCA
  - Select RCA source from RCA.
- 14 PAIR
  - Pair with *Bluetooth*-enabled device.
- 15
  - In *Bluetooth* mode:
  - Start or pause playback.
- 16
  - In *Bluetooth* mode:
  - Skip to previous/next track.
- 17 EQ
  - Select a preset sound effect:
  - cinema, speech, music, sport, standard.
- 18 SRS
  - Switch on or turn off SRS WOW HD effect.

EN EN

## Getting Started

 
### Prepare the Smart Remote Control

The Smart Remote Control provided allows the unit to be operated from a distance.


- Even if the Smart Remote Control is operated within the effective range (6m), remote control operation may be impossible if there are any obstacles between the unit and the remote control.
- If the Smart Remote Control is operated near other products which generate infrared rays, or if other remote control devices using infrared rays are used near the unit, it may operate incorrectly. Conversely, the other products may operate incorrectly.

### For First-time use:

The unit has a pre-installed lithium CR2025 battery. Remove the protective tab to activate the remote control battery.

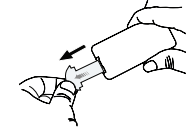

### To Replace the Smart Remote Control Battery:

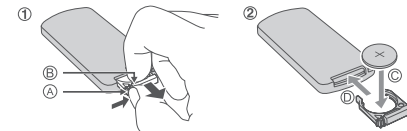 

- (A): Press the flip on the left.
- (B): Pull out the battery tray and remove the old battery.
- (C): Place a new CR2025 battery into the battery tray with correct polarity (+/-) as indicated.
- (D): Insert the tray back into the slot.


### Precautions Concerning Batteries

 - When the Smart Remote Control is not to be used for a long time (more than a month), remove the battery from the Smart Remote Control to prevent it from leaking.
- If the batteries leak, wipe away the leakage inside the battery compartment and replace the batteries with new ones.
- Do not use any batteries other than those specified.
- Do not heat or disassemble batteries. Never throw them in fire or water.
- Do not carry or store batteries with other metallic objects. Doing so could cause batteries to short circuit, leak or explode.
- Never recharge a battery unless it is confirmed to be a rechargeable type.

## Connections

### Place TV on top

Please read the DOs and DON'Ts Leaflet provided for proper installation position of the unit.

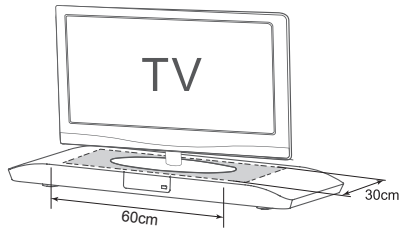

### Warning:

Please turn down the volume of the TV, or other sources before connection. Loud sound might be suddenly produced.

### Connect to Power

 
#### Caution:

Risk of product damage!

- Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the unit.
- Risk of electric shock! When you unplug from the AC power source, always hold the plug part and pull it from the socket. Never pull the cord.
- Ensure the correct power cord is matched to the main power socket. Using a wrong power cord might damage the power plug and the socket.


Connect the AC power cord to:

- the AC socket on this unit.
- the wall socket.

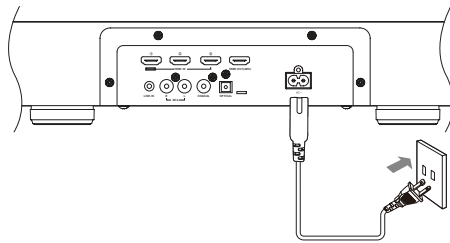

### USB DC 5V Charge

 Connect a USB cable(not supplied) to USB Charging 5V=1A socket to charge your smartphone or tablet PC.

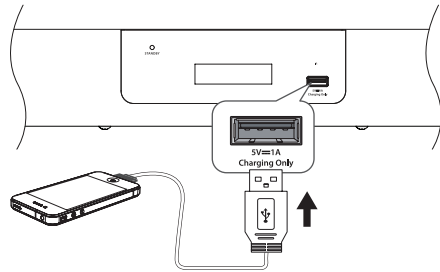


### Connect to TV

#### Using HDMI socket

Connect HDMI(High Definition Multimedia Interface), DVI(Digital Visual Interface), or HDCP(High-bandwidth Digital Contents Protection)-compliant TVs through HDMI for the best picture quality. This connection transmits both video and audio signals.

#### Note:

 Some TVs do not support HDMI audio transmission.

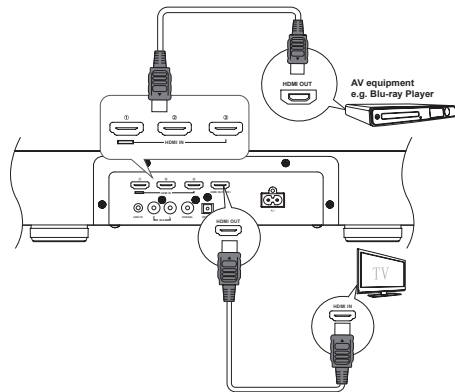

### 1 Watch movie from blu-ray player

- a) Connect a HDMI cable to the HDMI OUT socket on the AV equipment and HDMI IN 1, HDMI IN 2 or HDMI IN 3 socket on the unit.

## Connections

 
- b) Connect another HDMI cable from the HDMI OUT socket on the unit to the HDMI IN socket on the TV.

#### Note:

If your TV has only a DVI connector, connecting through a HDMI-to-DVI adapter is necessary. Extra optical audio connection might be needed to complete this connection.


### 2 Watching broadcasting TV program using TV supporting ARC

- a) If you want to watch TV program and listen to the sound with this unit, TV that supported HDMI Audio Return Channel (ARC) function do not need any extra connection.  
 b) Use HDMI cable for connection  
 c) Connect to the HDMI(ARC) socket on TV.  
 d) Connect to the HDMI OUT (ARC) socket on the unit.

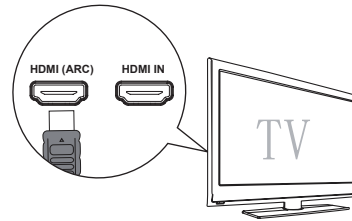

### 3 Watching broadcasting TV program using TV do not support ARC

 If you want to watch TV programme and listen the sound with this unit, but your TV does not support ARC function, you will need an additional audio cable (HDMI/OPTICAL/COAXIAL/RCA/LINE-IN cable) to connect from the audio output of the TV to the audio input of the unit.

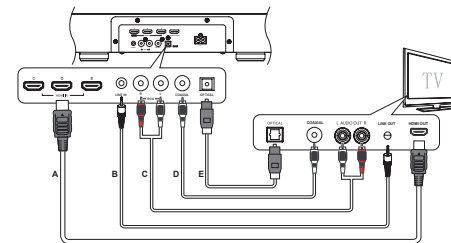

- a. Connect either:

- HDMI output (TV) to HDMI input (①/②/③) (unit) via HDMI cable; or
- LINE-OUT/Headphone(TV) to LINE-IN(unit) via 3.5mm cable.
- RCA output (TV) to RCA input(unit) via RCA-to-RCA cable; or
- Coaxial output (TV) to Coaxial input (unit) via a Coaxial cable (not supplied); or
- Optical output (TV) to Optical input (unit) via an Optical cable (not supplied); or

### Customer Electronics Control(CEC) function

Please check the setting of your TV HDMI function to see whether CEC function is available. If your TV has CEC function in HDMI,

 
- Switch off the TV, the unit will also switch off immediately.
- Play your Blu-ray player, the unit and TV will switch on immediately.

#### Note:

CEC function can be varied by different TV brands and models. Check the compatibility of CEC function on your TV.

### Using Optical IN socket

If your TV does not have HDMI sockets, please follow the set up below.

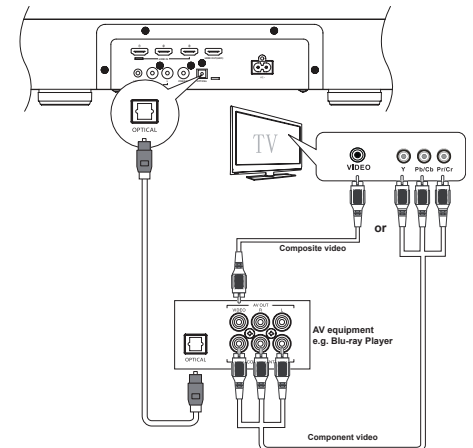

## Connections

 
- Connect Optical output source into the unit.
- Connect Video output of the AV equipment into the Video input of TV via either,
  - Component connection (Green, Blue, Red)(not supplied); or
  - Composite connection (Yellow)(not supplied).

### Note:

You can listen to the TV program sound from connecting to the unit via Optical port.

### Using Coaxial socket

If your TV does not have HDMI sockets, please follow the set up below.

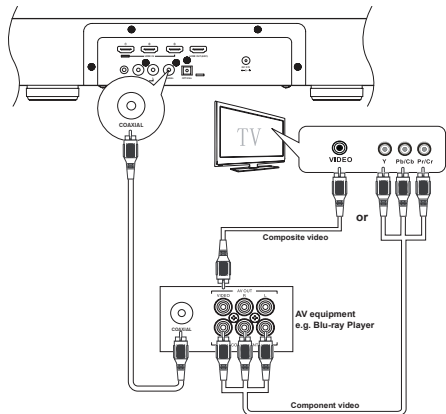


- Connect Coaxial output source into the unit.
- Connect Video output of the AV equipment into the Video input of TV via either,
  - Component connection (Green, Blue, Red)(not supplied); or
  - Composite connection (Yellow)(not supplied).

### Note:

 You can listen to the TV program sound from connecting to the unit via coaxial port.

### Using RCA IN socket

For audio devices that do not support HDMI or Optical output, please follow the set up below.

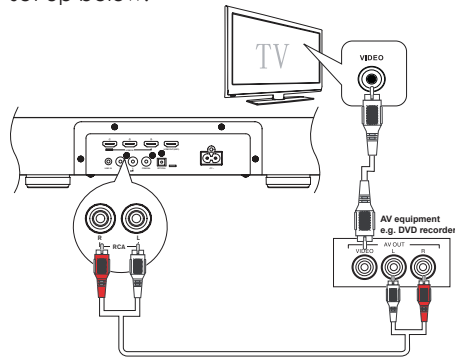


- Connect Composite Video output of the AV equipment e.g. DVD recorder to Composite Video input on the TV.
- Connect Audio L-R output of the AV equipment to the RCA input on the unit.

### Note:

 You can listen to the TV program sound from connecting to the unit via RCA or LINE IN port.

### Using Line-IN socket

You can listen to the sound of the TV program by connecting to the unit via LINE-IN cable.

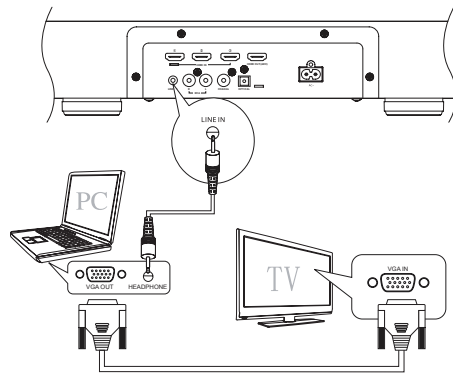

### Note:

You can also connect to your PC with LINE-IN cable in the setup shown below.

## Connections

### Connect to a Bluetooth® Device

You can listen to music from a *Bluetooth*-enable device via this player.

### Pair the Bluetooth-enabled devices

The first time you connect your *Bluetooth* device to this player, you need to pair your device to this player.

### Note:

- The operational range between this player and a *Bluetooth* device is approximately 8 meters.
- Before you connect a *Bluetooth* device to this unit, familiarize yourself with the *Bluetooth* capabilities of the device.
- Compatibility with all *Bluetooth* devices is not guaranteed.
- Any obstacle between this unit and a *Bluetooth* device can reduce the operational range.
- Keep this player away from any other electronic device that may cause interference.

- Turn on the *Bluetooth* function on your device.
- Switch player's source to *Bluetooth*, Display panel shows "BT", then show "NO BT" (if there's no *Bluetooth* device connected).
- Press "PAIR" button on remote control or on top of the unit to activate *Bluetooth* pairing mode, display panel shows "PAIRING".
- Search for *Bluetooth* device with your device.
- Select "SSB-4W" in the pairing list.
- Enter "0000" when prompted for a keyword (if necessary), if the pairing succeeds, display panel shows "BT" again.
- To disconnect connection, turn off the *Bluetooth* function on your device or switch the player to other source.

### Tip

- If there's a connection exist, press "PAIR" button on remote control or on top of the unit for seconds will reactivate the pairing mode, the connection will be interrupted.
- If there's no other *Bluetooth* device pair with this player in two minutes, the player will recovery previous connection.
- The player will also be disconnected when your device is moved beyond the operational range.
- If you want to reconnect your device to this player, place it within the operational range.
- If the device is moved beyond the operational range, when it is brought back, please check if the device is still connected with the player.
- If they are connected, display panel shows "BT".
- If the connection is lost, display panel shows "NO BT", follow the instruction above to pair your device to the player again.

 
### Listen to music from Bluetooth device

- If the connected *Bluetooth* device supports Advanced Audio Distribution Profile (A2DP), you can listen to the music stored on the device through the player.
- If the device also supports Audio Video Remote Control Profile (AVRCP) profile, you can use the player's remote control to play music stored on the device.
  - Pair your device with the player.
  - Start play music via your device (if it support A2DP)
  - Use supplied remote control to control play (if it support AVRCP)
    - To pause/resume play, press the button.
    - To skip to a track, press the buttons

## Connections

### Connect to an External Audio Device

You can connect to your audio devices, e.g. CD player, to enjoy purely music, via the following connections.

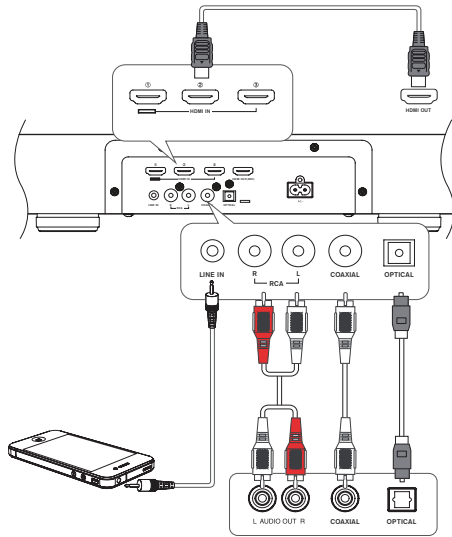

Auto-on/off function is applied in this unit. Auto-off is to facilitate people not to control the unit when no sound is playing in few minutes. And when there are sounds input, the unit will switch on automatically after few seconds. For HDMI, Auto-on function will work with CEC only.

#### Warning:

If the volume of the TV or an external device via RCA or LINE IN is too low, the auto-off function will be triggered and the unit will switch to standby mode after 3 minutes.

Please turn up the volume of the input source (not the unit, but, e.g. TV or MP3 player, etc.) slowly, until it returns to normal mode.

To avoid the auto-off being triggered unintentionally, pre-set the source volume higher and adjust the unit volume to a comfortable level.


#### Note:

You might hear the sound over-lapping from both the TV and the unit while following some of the suggestion connections. To avoid this, turn the volume of TV down to 0 or mute it.

## Basic Operation

### Turn On/Off

#### Turning the System ON/OFF

Press the  button on the unit or remote control.

#### Note:

When turning the system on, the system will continue in the mode was set last time.


#### Note:

Be sure to unplug the power cord from the outlet when the system is not in use for an extended period of time.

The unit will switch to standby mode when the audio cables are disconnected or when you turn off TV/external device after several minutes.

### Adjust Volume Level


Either,

- 1) Press the VOL +/- button on the remote control; or
- 2) Press  button on the unit, to increase or decrease the volume level.

**If the unit is connected to the TV headphone jack, you can control the Volume Level using the TV remote control.**

**If the unit is connected to TV HDMI jack with CEC(Customer Electronics Control) function enabled. The sound of the unit can be controlled by the TV remote control.**

### Mute Sound

Press the MUTE button on the remote control to mute. Press this button again or VOL+/VOL- buttons on the remote control or  on the unit to resume the sound.

### Bass Boost



Press BASS button on the remote control to turn on the bass. Press this button again to switch to level 2 or to turn it off.

### Select SRS Sound

Press SRS button on the remote control to select SRS WOW HD effect. Press this button again to cancel the effect.

 
### Program Smart Remote Control to Control TV

You can store a total of up to seven of your most frequently used TV functions in the TV learning zone of the Smart Remote Control. This feature enables you to use only one remote control to operate the unit together with your TV.

The remote control codes of a TV are stored in the Smart Remote Control. The available preset buttons are ON/OFF , FUNCTION , ENTER, TV VOL+/VOL-, TV CH+/CH-.

#### NOTE:

During the learning process, the normal remote control functions are disabled.

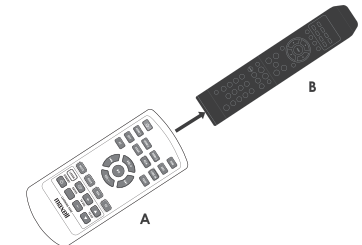

- 1 Place the Smart Remote Control (A) within a 5mm-50mm distance from the TV remote control (B), pointer to pointer as shown above.
- 2 Press and hold the LEARN button for 2 seconds to activate the learning mode. A red indicator on the Smart Remote Control (A) at LEARN button will light up.
- 3 Press one of the TV learning zone buttons on the Smart Remote Control (A), the red indicator flashes.
- 4 Press the button on the TV remote control (B) that is to be stored on the Smart Remote Control (A). When the code is received successfully, the red indicator will quickly flash for 3 times. If the code is not successfully received, the red indicator will keep on flashing.
- 5 Repeat steps 3-4 to program more functions onto the Smart Remote Control (A).
- 6 Press the LEARN button to save the setting and to exit the learning mode. Red indicator will turn off immediately.



## Troubleshooting

To keep the warranty valid, never try to repair the system yourself. If you encounter problems when using this unit, check the following points before requesting for service. Warranty void if case is opened.

Symptom	Likely Cause	What to do
No sound	Speaker not connected to active AC power	<ul style="list-style-type: none"> <li>Verify that speaker is connected and that the circuit is on.</li> </ul>
	Power not switched on	<ul style="list-style-type: none"> <li>Switch on power and verify that power LED is on.</li> </ul>
Suddenly No sound	Triggered auto-off function	<ul style="list-style-type: none"> <li>Turn the volume up of the source, e.g TV, mp3 player, etc, and readjust the sound of the unit to trigger auto-on function.</li> <li>See No Sound symptom above.</li> </ul>
No sound, speaker is connected to working AC power but sound won't come on	Cannot trigger auto-on function	<ul style="list-style-type: none"> <li>Increase the volume of the source input signal.</li> </ul>
	Speaker power cable is faulty or improperly connected	<ul style="list-style-type: none"> <li>Re-seat the power cable at both ends.</li> <li>Substitute a known-good power cable.</li> </ul>
	Blown fuse	<ul style="list-style-type: none"> <li>Contact with your manufacturer for repairment.</li> </ul>
No sound. Speaker comes on	Faulty cables and connections	<ul style="list-style-type: none"> <li>Disconnect and re-seat signal cables.</li> <li>Make sure cables are plugged completely.</li> <li>Replace suspected cable with a known-good cable.</li> </ul>
Noise or hiss heard at output	Faulty Cables and connections	<ul style="list-style-type: none"> <li>Disconnect and re-seat signal cables.</li> <li>Make sure cables are plugged completely.</li> <li>Replace suspected cable with a known-good cable.</li> </ul>
	Noisy source device	<ul style="list-style-type: none"> <li>Disconnect the devices that are connected to your speaker one at a time. If the noise goes away, the problem is with the source or the connecting cable.</li> </ul>
Hum or Buzz that increases or decreases when more than one source are inputting single to the unit at the same time	Interference internally	<ul style="list-style-type: none"> <li>Disconnect or mute the other channels to solve the problem.</li> </ul>
	Faulty cable between source equipment and unit	<ul style="list-style-type: none"> <li>Substitute a known-good cable for the suspected faulty cable.</li> </ul>
Smart Remote control does not work	No/Low battery power	<ul style="list-style-type: none"> <li>Remove the transparent film at the bottom of Smart Remote control.</li> <li>Insert/Replace remote control battery with a CR2025 battery.</li> </ul>
The Unit does not responds to the remote control	No/Low signal from remote control to the unit	<ul style="list-style-type: none"> <li>Reduce the distance between the Smart Remote control and the unit.</li> <li>Aim the Smart Remote control directly at the sensor on the front of the unit.</li> </ul>
	The unit responds but no sound	<ul style="list-style-type: none"> <li>Before you press any function button, first select the correct source.</li> <li>See Troubleshooting [No Sound] Symptom.</li> </ul>
HDMI ARC/CEC ERROR No Sound or Have sound but with error message shown on TV	TV CEC function is not compatible with unit CEC function.	<ul style="list-style-type: none"> <li>Check the TV CEC function and compatibility on TV user's manual.</li> <li>Disable TV CEC/ARC function</li> <li>Use other suggested connections.</li> </ul>
HDMI ARC/CEC ERROR Both TV and the unit has sound coming out	TV CEC function is not partially compatible with unit CEC function.	<ul style="list-style-type: none"> <li>Check the TV CEC function and compatibility on TV user's manual.</li> <li>Select speaker option in TV menu to from the Unit only</li> </ul>

## Specifications

### General

Power Requirements.....	AC 110-120V~ 60Hz
Output Power:	
Front Speakers .....	30W x 2
Woofer .....	100W
Total Harmonic Distortion .....	1%(1kHz, 1W)
Audio Input Sensitivity/Impedance LINE: .....	600mV/47kΩ
Frequency Response .....	50Hz - 20kHz
Unit Dimensions (W x H x D) .....	930 x 390 x 82mm
NET Weight(Unit) .....	8.4kg

### Speaker

#### Front

Impedance.....	3 Ω
Rated Power.....	30W

#### Woofer

Impedance.....	6 Ω
Rated Power.....	100W

### Remote

Distance .....	6m
Angle .....	60°

### Digital signal input/output information

Digital Sampling frequency .....	48kHz
HDMI signal format.....	PCM

### Warranty: 1 year

- Design and specifications are subject to change without notice.

## FCC & IC Compliance

---

### FCCID: Z8M-SSB-4W

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) **this device must accept any interference received, including interference that may cause undesired operation.**

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Model No: SSB-4W with certification/registration number **IC: 11096A-SSB4W**

EN