

TS-1809 Sound Bar for
iphone/ipod Docking
with Bluetooth, Aux in



IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. Unplug this apparatus during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

FCC Warnings

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is

connected.

- Consult the dealer or an experienced radio/TV technician for help.

Additional Warnings

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.

L'appareil ne doit pas être exposé aux écoulements ou aux éclaboussures et aucun objet ne contenant de liquide, tel qu'un vase, ne doit être placé sur l'objet.

- Main plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.

La prise du secteur ne doit pas être obstruée ou doit être facilement accessible pendant son utilisation. Pour être complètement déconnecté de l'alimentation d'entrée, la prise doit être débranchée du secteur.

- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

Les piles ne doivent pas être exposées à de forte chaleur, tel qu'à la lumière du soleil, au feu ou autres choses de semblable.

- Caution marking is located at the rear or bottom of the apparatus.

Attention marquage est situé sur le panneau arrière ou inférieur de l'unité.

- The marking information is located at the rear or bottom of apparatus.

Le marquage est situé sur le panneau arrière ou inférieur de l'unité.

WARNINGS AND PRECAUTIONS

- CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

- WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

Avertissement: Pour réduire le risque d'incendie ou de choc électrique, ne pas exposer cet appareil sous la pluie et l'humidité.

- CAUTION: Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.

- WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

- WARNING: Do not place the unit on top of any soft, porous, or sensitive surfaces to avoid damaging the surface. Use a protective barrier between the unit and surface to protect the surface.

- WARNING: Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.

- CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

PRÉCAUTION: Danger d'explosion si les piles sont remplacées de façon incorrect.

Remplacer les piles seulement par le même type de pile ou l'équivalent.

- WARNING: There is a danger of explosion if you attempt to charge standard Alkaline batteries in the unit. Only use rechargeable NiMH batteries.

- **WARNING:** The remote control's button cell battery contains mercury. Do not put in the trash, instead recycle or dispose of as hazardous waste.
- **WARNING:** Lithium batteries, like all rechargeable batteries are recyclable and should be recycled or disposed of in normal household waste. Contact your local government for disposal or recycling practices in your area. They should never be incinerated since they might explode.
- **WARNING:** Shock hazard - Do Not Open.
- **AVIS: RISQUE DE CHOC ÉLECTRIQUE - NE PAS OUVRIR**

Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.

La prise du secteur est utilisé pour déconnecter le système.

La prise du secteur ne doit pas être obstruée ou doit être facilement accessible pendant son utilisation. Pour être complètement déconnecté de l'alimentation d'entrée, la prise doit être débranchée du secteur.

Do not mix old and new batteries.

Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.

No mezcle baterías viejas y nuevas.

No mezcle baterías alcalinas, estándar (carbono-zinc) o recargables (ni-cad, ni-mh, etc.).




WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The lightning flash with arrowhead symbol within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

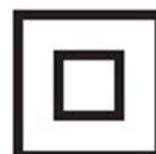


This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.

Assembly (continued)


AUDIO/VIDEO ASSEMBLY

The Audio/Video Dock can stream video to a T.V. and accept incoming audio. Follow the wiring guide below to connect the Audio/Video dock.

1. Plug the RCA audio cables in the the audio dock input R/L.
2. Plug the RCA video cable into the video output.
3. Plug the RCA video cable into the video input source.
4. Plug the RCA audio cables into the audio source input R/L.
5. Plug the power cable into a standard outlet.
6. Insert the power cable into the DC transformer.
7. Plug the DC power source into the DC 15V port.

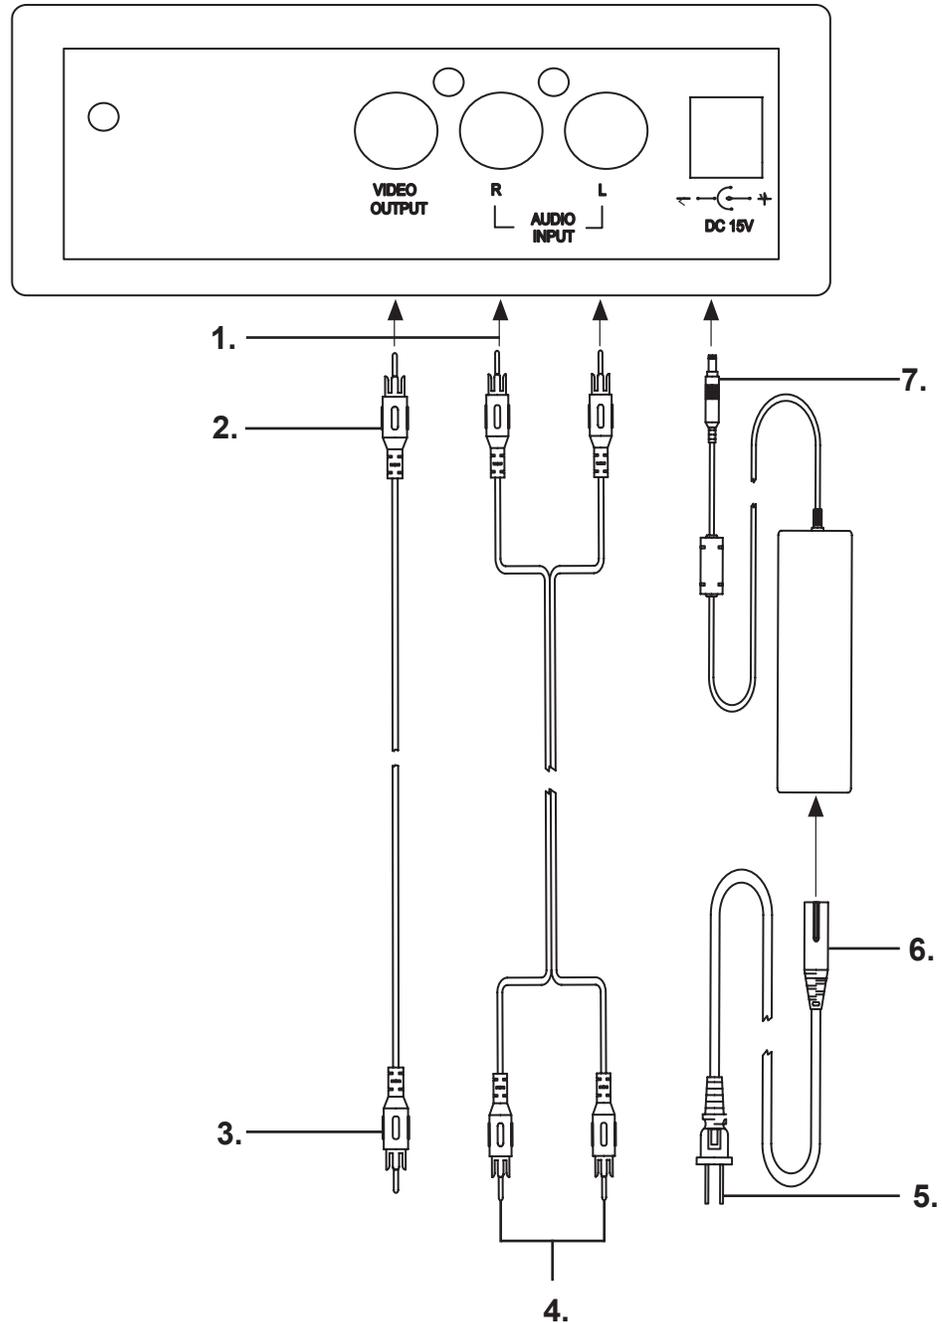


Audio/Video Dock Operation

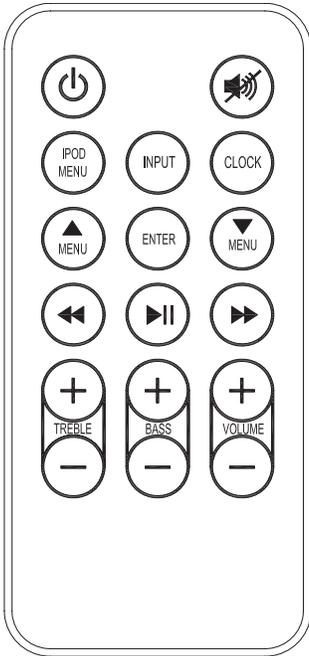

Audio/Video Dock Remote

- Power / Standby
- Mute
- Access the menu of the docked iPhone/ iPod
- Scroll through source input options
- Display time
- Scroll the docked iPhone/ iPod menu or preset radio station
- Confirm selection from the docked iPhone/ iPod menu
- Scroll the docked iPhone/ iPod menu or preset radio station
- Scroll the docked iPhone/ iPod menu or preset radio station
- Back (Previous)/ In FM mode to search the radio channel
- Play/Pause
- Forward (Next)/ In FM mode to search the radio channel
- Adjust Treble
- Adjust Bass
- Adjust Volume

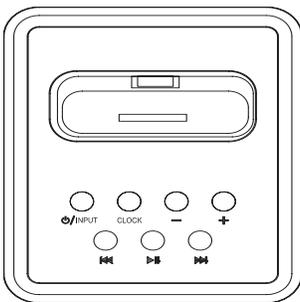

Audio/Video Dock

- Main Power / Scroll through source input options
- Display / Set Time
- Adjust Volume
- Back (Previous)
- Play/Pause
- Forward (Next)

Audio/Video Dock Operation (continued)

Power

The POWER button on the Audio/Video Dock or Remote supplies power to all of the functions of the sound system.

Charging

1. Insert the iPod or iPhone to the dock connector.
2. The docked iPod or iPhone begins charging.



NOTE: Certain irregular shaped or large phone covers may need to be removed for use with the docking station.

Clock

1. Automatic Time Set:

The console will read and sync the clock to the time from your docked iPhone or iPod (at standby mode).



NOTE: Automatic time sync will not work with some older model iPods.

2. Manual Time Set:

Hold "CLOCK" for 3 seconds until the hour digits flashes.

Press the "volume (+/-)" buttons to set the hour.

Press "CLOCK" again. The minute digits will flash.

Press the "volume (+/-)" buttons to set the minutes.

Press "CLOCK" to confirm.

3. The clock display will fade after 10 seconds. Press "CLOCK" to continuously display the time.

Tuning the FM Radio

1. Power on the unit by pressing the power button.
2. Press the INPUT button to switch to FM mode.
3. Press the ◀ and ▶ buttons to adjust the radio to the desired frequency.
4. Press and hold the ◀ and ▶ buttons to search for a next available frequency.

Saving a Station as a Preset

Automatic Pre-Set

1. The unit will automatically scan and save up to 30 preset stations by pressing and holding the ▶|| button.

Manual Pre-Set

1. Tune to the desired station.
2. Press the ▶|| button once to assign a preset station. Press again to confirm and save the preset station.
3. Press the ▲ and ▼ buttons (on the Audio/Video remote control) to select the desired station.
4. Up to 30 stations may be saving as presets P01-P30.

Input Setting

Press the "INPUT" button to scroll through the different input options:

iPod

When IPOD is displayed. The Audio/ Video Dock will play sound and/or video from your docked iPod or iPhone device.

BLUE

When BLUE is displayed. The Audio/Video Dock will scan for other smartphones or devices. The blue flashing light indicates the unit is searching for devices with a Bluetooth function activated. Selecting "sound system" from your device will link it to the console and allow to play audio and/or video from up to 10 meters away. The light will stay continuously lit once a connection has been made to the device.

87.5

When radio analog is displayed, the Audio/Video Dock will play FM radio stations.

LINE

When LINE is displayed, the Audio Video Dock will play audio and/or video from your television or other device connected to the console by RCA cables.