 





A4 便携打印机
A4 portable printer
快速入门指南
Quick Start Guide

01 包装清单 Package Contents

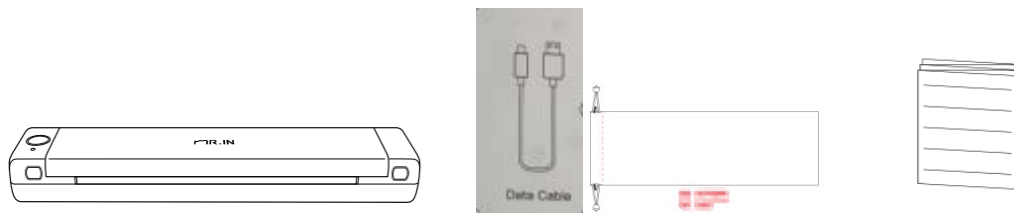


打印机*1 个 1xPrinter 电源线*1 条 1x Data Cable 绒布袋*1 个 1x Flannel Bag
说明书*1 本 1x Quick Start Guide

 02 机器说明 Printer Components

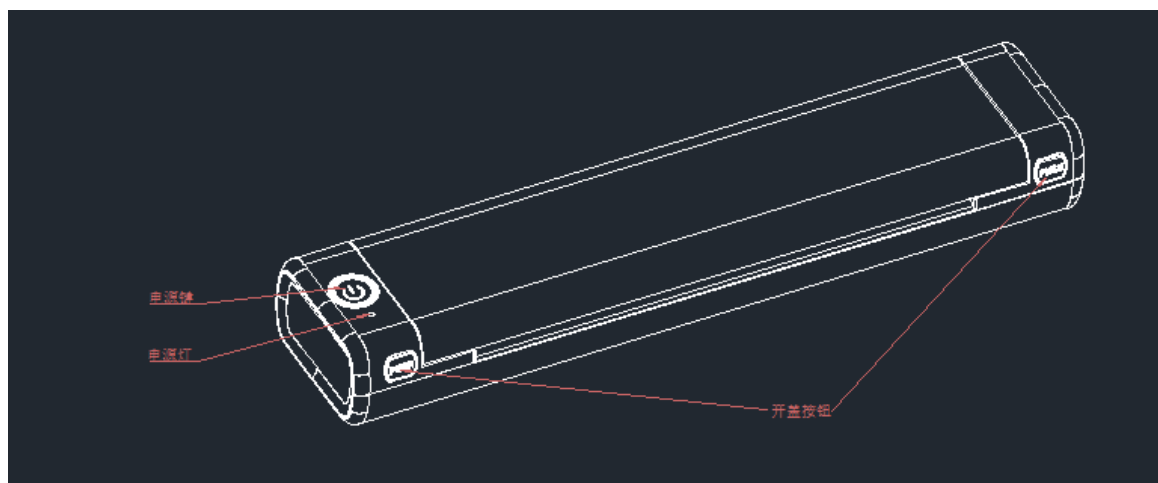

 Power Button
Power Indicator
Cover Release Latches

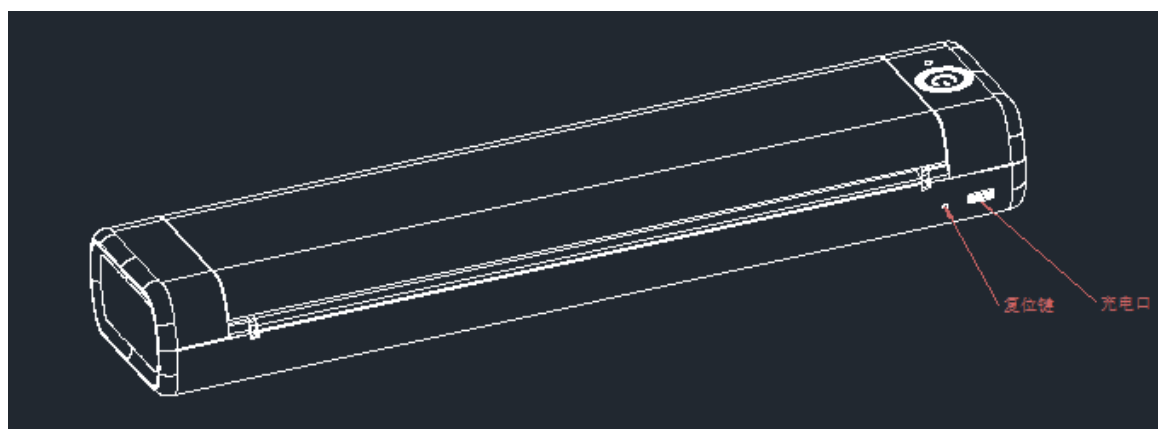

Reset Button
Power Socket

03 指示灯状态说明

| 名称 | 状态 | 功能说明 |
|-------|-----|----------|
| 电源指示灯 | 红灯亮 | 缺纸/开盖/高温 |
| | 红灯闪 | 电量不足 |
| | 绿灯亮 | 正常状态 |
| | 绿灯闪 | 充电中 |

03 Indicator Light Guide

| Name | Status | Description |
|-----------------|------------------|---------------------------------------|
| Power Indicator | Lit (Red) | Out of paper/ Cover is open/ Overheat |
| | Blinking (Red) | Low power |
| | Lit (Green) | Normal |
| | Blinking (Green) | Charging |

04 按钮功能

| | |
|----------|----------------------------|
| (电源)按钮功能 | 操作 |
| 开启打印机 | 按住此按钮约 3 秒钟，直到电源指示灯亮起 |
| 打印二维码 | 双击打印二维码，可手机 app 扫描二维码，连接机器 |
| 关闭打印机 | 按住此按钮约 3 秒钟，直到电源指示灯熄灭 |

04 Button Function

| | |
|-------------------------|---|
| (Power) Button Function | Operation |
| Turn on the printer | Press and hold the button for around 3 seconds until the power indicator light turns on. |
| Print QR code | Double-press the button to print QR code. You can scan the QR code using the App on the phone and connect to the printer. |
| Turn off the printer | Press and hold the button for around 3 seconds until the power indicator light turns off. |

05 Precautions

1. Please use 5V 2A input for charging, and it is recommended to use mobile phone power adapter for charging.
2. Please connect the USB cable to the power adapter before charging, Please gently insert or unplug the charging cable when charging, to prevent excessive force from damaging the port.
3. After the charging is completed, please unplug the charging cable in time.

4. In order to avoid danger, do not use or charge in the environment of high temperature, high humidity, heavy smoke and dust, such as in bathroom, steam room, near to open flame, etc.
5. Improper charging may cause damage to the print head.
6. Do not touch the print head to prevent scalding caused by overheating.
7. The tearing blade is sharp, please be careful to avoid touching it by mistake.
8. If the machine is malfunctioning, insert the reset hole to restart the machine.

06 Battery warning instructions

- * It is forbidden to disassemble, hit, squeeze the battery, or throw it into fire;
- * If severe swelling occurs, please do not reuse it;
- * Do not place in a high temperature environment, and it is strictly prohibited to use the battery after soaking in water;
- * There is a danger of explosion if the battery is replaced by the wrong type. Be sure to dispose of the used battery according to the instructions;
- * If consumers use a power adapter for power supply, they should purchase a power adapter that meets the requirements of corresponding safety standards or a power adapter with CCC certification.

07 操作指南 Instruction Guide

7.1 应用程序安装 Install App

(1) 下载 app

请在手机应用市场中搜索“Phomemo”，下载软件 app

(1) Download the App

Please search for “Phomemo” on your phone's App market and download the App.

Download App



(2) 机器连接 app Connect the printer to the App

方法一：打开手机蓝牙，打开 Phomemo APP，点击 Phomemo APP 主界面右上角图标，在下拉列表中选择 M08F 进行连接。

备注：安卓系统需要开启定位，并允许 App 获取相关权限。

方法二：双击机器电源按钮打印二维码，打开 Phomemo APP，点击 Phomemo APP 主界面右上角图标，在添加设备页，点击扫描连接，扫描二维码连接机器

Method 1: Turn on your phone's Bluetooth and open your Phomemo App. Press the button on the top right of your Phomemo App home page and select M08F from the list.

Note: Android system needs to enable positioning and allow app to obtain relevant permissions.

Method 2: Double-press the printer's power button to print a QR code. Open your Phomemo App and press the button on the top right of your Phomemo App home page. On the selection page, press scan and scan the QR code to connect to the printer.

 


7.2 耗材安装与更换 Install and change the printer's consumable

(1) 耗材安装方法 Installing Consumable

用双手握住纸张，使其保持平直，然后小心地将纸张插入打印机的进纸槽中，直到卷轴将其拉入最佳开始位置。为了实现最佳打印效果，请使用原厂 Phomemo 纸张。

Use two hands to hold the paper and make sure it is straight and aligned. Insert the paper carefully into the printer's feeder until the roller pulls the paper to its optimal position. To get the best printing quality, please use original Phomemo papers.

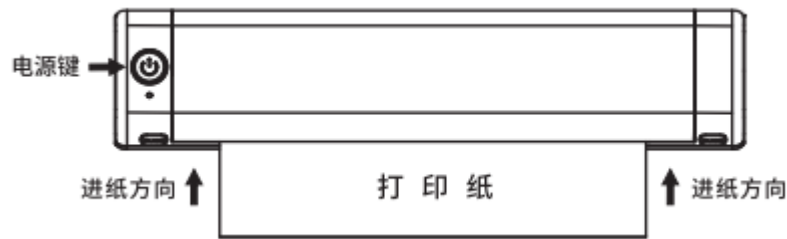

Power button

Paper feed direction

Printing paper

Paper feed direction

提示： Hint:

①纸张的短边必须与进纸槽口平行。

②纸张仅有一面可打印，检查纸张，印有“This side should face up”字样为非打印面，应朝上安装。

(1) The paper must be inserted aligned to the paper feeder.

(2) The paper can only be printed on one side, please check the paper. The side printed with “This side should face up” is the non-printable side and should be installed with that side faced up.

(2) 耗材更换方法 Changing Consumable

1. 您可以在 app 应用程序中将纸张设置为【单张纸】、【折叠 A4 纸】

 
2. 按照上述耗材安装方法，安装对应耗材规格。

1. You can set the paper as “Single paper” or “Fanfold A4 paper” in the App.

2. Refer to the instructions on “Installing Consumable” to install the relevant consumables.

注意事项：Note:

1. 当需要取出打印纸时，需同时按下 PUSH 键，机器上盖轻轻弹开，取出纸张。



PUSH Button

2. 当使用【折叠 A4 纸】时，打印完文件，需沿着穿孔虚线，撕下纸张。

1. When you need to take out the printing paper, press the PUSH buttons simultaneously to open the printer cover and take out the paper.

2. When using “Fanfold A4 paper”, after printing your documents, tear along the perforation lines.

08 官方打印纸类型 Official printing paper type

普通热敏纸：不含双酚-A，在室内常温干燥无阳光直射环境下，字迹可保存时长 7/10 年。

书写速干热敏纸：不含双酚-A，可手写且油墨速干的热敏纸，在室内常温干燥无阳光直射环境下，字迹可保存时长 10 年。

*上述打印纸为印先森官方专用耗材，是印先森的专用纸张。

*若您因未使用官方专用耗材而引起打印机故障，则无法享受三包政策。

Normal thermal paper: Does not contain Bisphenol-A. The printed texts can last for 7 to 10 years if stored in a dry condition at room temperature without direct sunray.

Writable Quick-drying thermal paper: Thermal paper that does not contain Bisphenol-A, can be written on, and dries ink quickly. The printed texts can last up to 10 years if stored in a dry condition at room temperature without direct sunray.

*The printing papers mentioned above are official Mr.In printing papers.

*Any issues with your printer arising from using non-official printing papers will not be covered under our warranty policy.

09 售后支持 After-sales Service

9.1 Warranty description

100% warranty within 1 year

* Although the product has undergone strict testing and quality inspection, accidents may occur during transportation, resulting in damages to the machine. If there is any problem with the printer, please contact us through the following methods. We have a quick response after-sales team to solve the problem professionally.

* If the problem is still not solved through our joint efforts, we will replace you with a new machine for free, and you need not to pay any fees. Your satisfaction makes us advance.

9.2. After-sales information

OnlineContact information:

Whatsapp : +86 13928088284 / +86 15338193665

Skype : Phomemo Team-Jessie / Phomemo Team-Helen

Customer Service phone number: +1 855 957 5321(US only)

Service time: Mon-Fri 9AM-5PM (EST) for any questions & suggestions.

Email address:support@phomemo.com

Official Website:www.phomemo.com



Please search for "Phomemo" to get the printer operation guide

10. Warranty card

☐ Return

☐ Exchange

☐ Repair

| | |
|---|--|
| User Info. | Name: Sex: Phone: |
| | Address: |
| Product Info. | Purchase date: |
| | Product order number: |
| | Product Serial Number: |
| Requirements of return/replacement/repair | Reason description: |
| Maintenance records | Failure condition: Maintenance person: |
| | Handling situation: Delivery date: |
| | Maintenance ticket number: Delivery date: |

Product certification

Inspector: Delivery date:

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may

cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.