

www.gravastar.com



Diagram illustrating the front view of the GirevaStar P9 car, showing various components and their locations:

- Noise-Canceling Microphone
- Touch Button
- Indicator light
- Main Microphone
- Charging Pin
- Charging Pin
- Charging Case
- Atmosphere Light
- Charging Case Latch
- Type-C Charging Port
- Reset Button

Earbuds
 Product Model: P9 PLUS
 BT Version: V5.3
 Transmission Distance: >10 meters
 Noise Cancellation Mode: ANC Active Noise Cancellation
 Environmental Noise Cancellation
 Decode Support: SBC/AAC
 Charging Time: 1.5H
 Battery Life: About 7H (Turn off ANC mode and play at 70% volume)
 Total Battery Life: About 28h (Turn off ANC mode and play at 70% volume)

Input: 5V~500mA
Output: 5V~100mA
Charging Time: 2H
Battery Capacity: 500mAh
Charging Port: Type-C
Product Dimension: 60*56*21mm
Product Weight: 68g

Earbuds, Ear Tips*3 sets, Manual, Charging Cable, Accessory Box

Please do not wear earbuds to take a bath, get wet, put them in the washing machine, or use them in extreme environments such as abnormal temperature. After each normal use, please use dry cloth and other tools to wipe off sweat or rain on the earbuds, which can effectively extend the use time of the earbuds.

 
Gently insert the ear tip downwards into the ear canal, ensuring the earphones remain stable when you lightly shake your head (the correct way to wear them is with the logo facing upwards)



* When making a call, please adjust the earphones to make sure the microphone is not covered.


During a call, directing the earphone microphone towards your mouth can improve call clarity.

When using the device for the first time, please remove the earphones, remove the protective film from the earphones, and fully charge both the charging case and the earphones.



Place the earphones into the charging case and close the lid to charge. The earphone indicator will show a red breathing light, which will turn off after one minute.

 when the battery is below 30%, and pulse green when it is above 30%, with a gradual breathing effect. Once fully charged, the green light will remain solid.

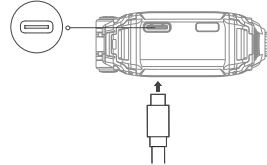


When the battery level is $\leq 10\%$, a notification sound will play every five minutes, saying "Not enough energy."

When opening or closing the charging case, or when taking the earbuds out of or placing them into the charging case.

- Red light flashes once when battery is below 30%
- Green light flashes once when battery is above 30%
- At 10% battery, red light flashes rapidly for 3 seconds

 Earbuds automatically turn on when removed from the charging case and turn off when placed back in.

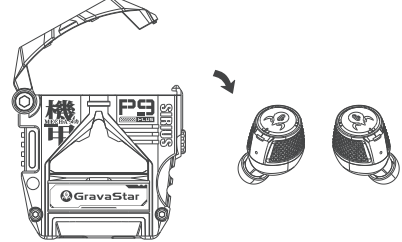

1. Single-click the case button to:
 - Turn on ambient light
 - Cycle through 6 colors (red, green, purple, orange, cyan, blue)
 - Light automatically turns off after 5 minutes
2. Double-click the case button to turn off ambient light

 
Open the charging case, on your phone, search for "GravaStar Sirius Plus" in Bluetooth settings Tap to connect. "Bluetooth connected" indicates successful pairing. "Bluetooth disconnected" plays when connection is lost. "Ready to pair" sounds when searching for a new connection.

True Wireless Stereo (TWS) Mode: Remove both earbuds from the charging case for automatic pairing.



If pairing fails, return both earbuds to the charging case and try again. After initial pairing, earbuds will automatically reconnect to the last paired device when removed from the case (ensure Bluetooth is enabled on your device).

Press and hold for 3 seconds Power On/Off
Single Tap Play/Pause/Answer/End Call
Press And Hold For 1.5 Seconds Cycle Noise Control (ANC On/Transparency/ANC Off)
Triple Tap Activate Voice Assistant (Single Earbud Mode):

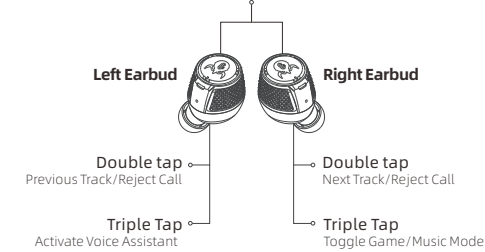

Press and hold the charging case button for 5 seconds. This will: Clear all paired device records; Reset the True Wireless Stereo (TWS) connection between earbuds; Cause the earbud lights to quickly alternate between red and white 3 times.

- 1. No Sound from One Earbud:**
 - a. Clear all Bluetooth pairing and connection records on your device.
 - b. Place both earbuds back in the charging case, then remove them.
 - c. Attempt to reconnect the earbuds to your device.
- 2. When to Reset Your Earbuds:** Reset your earbuds if you experience any of the following issues:
 - a. Only one earbud is working
 - b. Unable to connect to your phone
 - c. Failure to switch from single earbud to dual earbud mode
 - d. Any other functional issues To reset, follow the earbuds reset procedure in the user manual.

Warning

1. Do not disassemble, repair, or modify the headphones for any reason, as this may cause a fire or permanently damage the product.
2. Do not expose the device to extremely low or high temperatures (below 0°C or above 45°C).
3. Avoid directing the product's indicator light into the eyes of children or animals.
4. Do not use this product during thunderstorms, as thunderstorms can cause the device to malfunction and increase the risk of electric shock.
5. Do not use alcohol or other volatile liquids to clean this product.
6. Keep this product away from liquids.

1. Please read this user manual carefully before using the product and keep it in a safe place.
2. Before the first use, please fully charge this product.
3. If the product is not used for a long time (more than two weeks), please recharge it.
4. Use only chargers from reputable manufacturers that are certified by the national CCC.
5. Extended use of the headphones at high volumes may damage hearing; please control the usage time and volume reasonably.
6. Using headphones reduces awareness of external sounds; do not use headphones in environments that may threaten safety.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter

Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement in portable exposure condition without restriction.