 


# USER'S MANUAL

## RF 2.4G KEYBOARD

Model No.: RF-688

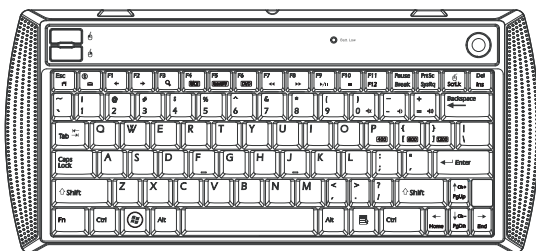

### Introduction

Congratulations on your purchase of a high-quality product. Your RF 2.4G wireless keyboard represents the state of the art in wireless keyboard design and is designed for reliable and trouble-free performance.

### Safety

Before getting started, read these instructions and save them for future reference.

- Do not drop or hit your Keyboard.
- Do not use your Keyboard in a location that is subject to strong vibrations because vibration may damage your Keyboard.
- Do not disassemble or modify the product in any way. Disassembly or modification may void your warranty and could damage your Keyboard leading to a fire or electric shock.
- Do not use or store your Keyboard in damp locations. Liquid entering the product may cause damage or lead to fires or electric shock.
- Do not insert metal objects, such as coins or paper clips, into your Keyboard.
- Your Keyboard is for general device use. Do not use your Keyboard with a device that requires exceptional reliability, especially if a breakdown or malfunction of might jeopardize life or health, such as aerospace equipment, atomic power control



 
 
systems, traffic-related equipment, transportation equipment, industrial robotics, combustion equipment, safety devices, and life-support systems.

- Batteries may explode or leak if they are improperly recharged, inserted, disposed of in fire, or mixed with used batteries or different battery types. There is a risk of explosion if a battery is replaced incorrectly.
- Dispose of used batteries according to local regulations. Keep the battery compartment cover and the batteries out of the reach of small children.

## Features

- Ultra-slim compact size keyboard has trackball mouse function and mouse buttons function.
- Embedded scroll wheel function by trackball.
- Built-in Media and website function keys.
- Auto Power-Save mode for extended battery life.
- Patented Scissor-Key Structure provides positive response and noise-free.
- Transmission range is upto 10 meters.
- Certified for CE, FCC safety.

## Keyboard Components

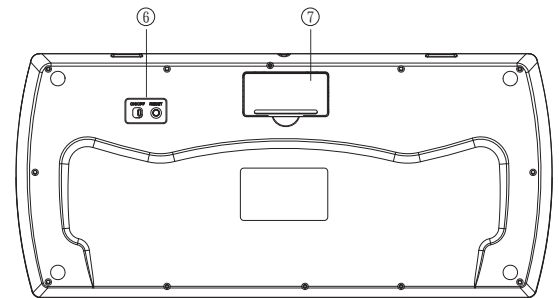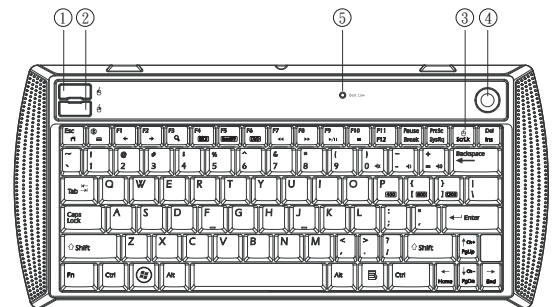

1. Mouse Left Key
2. Mouse Right Key
3. Mouse Middle Key
4. Trackball
5. Battery Low Indicator
6. Power Switch and Pairing Button
7. Battery Cover
8. Receiver



## Package Contents

- RF 2.4Ghz Wireless Keyboard
- USB Receiver
- AAA Alkaline Batteries x2
- User's Manual

## Operating System Support

- Windows XP
- Windows Vista (32-bit / 64-bit)
- Windows 7 (32-bit / 64-bit)

## Specifications

### Keyboard

 
- Dimension: 310.0(L) x 138.0(W) x 18.0(H) mm
- Weight: 500 ± 30g (w/o battery)
- Radio Frequency: 2.4 Ghz
- Operating Distance: 10 Meters
- Key Number: 82 Keys (US)
- Battery: 2 x AAA Alkaline Batteries
- Battery Life: 2 Months (Base on Average Usage)

### Receiver


- Dimension: 19.2(L) x 12.0(W) x 2.4(H) mm
- Weight: 1.2 ± 0.5g
- Interface: USB 1.1

## Installing Batteries


1. Open the battery cover.

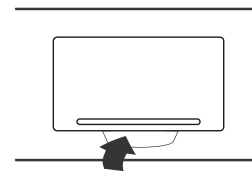

 2. Insert two AAA alkaline batteries and make sure the batteries are installed properly.

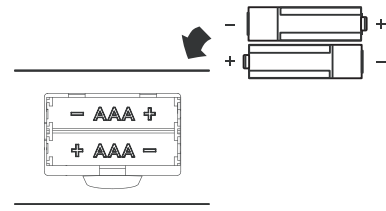

 3. Close the battery cover.

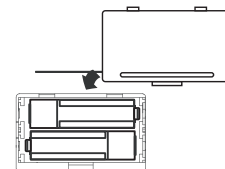

## Installation Procedure

Before installing this product, please make sure you have one available USB port reserved for receiver.

 
### A. Setting Up the Receiver


1. Plug the receiver into an available USB port.
2. Wait for Windows to install drivers for the receiver and keyboard.

### B. Setting Up the Keyboard

1. Turn ON your keyboard by sliding the switch at bottom case.
2. Press the RESET button of the keyboard.
3. Try moving the keyboard closer to the receiver.
4. After few seconds, your keyboard is ready for use.

## Special Function



Scroll Page: Hold  and rotate trackball, you can have scroll wheel function that is exactly the same as scroll wheel of mouse.



## Media and Website Function Keys



To use these function keys, please hold “Fn” and then press function key.

- 1 Launch default web browser
- 2 Launch default email program
- 3 Go back to previous web page
- 4 Proceed to next web page
- 5 Search mode
- 6 Launch Windows Media Center
- 7 Record TV
- 8 Play DVD within Media Center
- 9 Rewind
- 10 Fast forward
- 11 Play/ Pause
- 12 Stop
- 13 Mute
- 14 Volume Down
- 15 Volume Up
- 16 Adjust trackball resolution: 400 / 800 / 1200



## Troubleshooting

- Make sure that you have paired your keyboard with your device. For more information, see “Installation Procedure” on page 6.
- Make sure that your operating system is compatible with your keyboard. For more information, see “Operating System” on page 4.
- Make sure that the anode(+) and cathode(-) symbols on the batteries match the anode(+) and cathode(-) symbols in the battery compartment.

## Battery Low

- Low-battery is indicated by illumination on the top case of keyboard. Please replace the batteries when the indicator lights up.
- We recommend using alkaline batteries for the keyboard.
- You may need to reset the connection after replacing new batteries for the keyboard.
- Do not mix old and new batteries, or mix different types of batteries. This can cause rupture or leakage, resulting in personal injury or property damage.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference and
- (2) this device must accept any interference received, including interference that may cause undesired operation