 


"2.4GHz All Around Freedom, Infinite Possibilities" Alpha Transport, RF-726

User's Manual

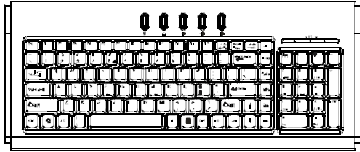

System requirements

- IBM or compatible PC
- Windows and Macintosh Operating System
- Pentium-equivalent processor or above
- At least 10 MB hard disk space
- One available USB port

OS support

- Windows XP/Windows 2000/NT
- Windows ME
- MAC OS

Introduction

Thank you for your patronage of purchasing our cordless keyboard and optical mouse. For your own safety, please read this manual thoroughly before using this product. After you have read this manual, please keep it in place for reference when necessary.

Contents in the package

The following items are included in the package. Please make sure all items are accounted for as you open the package. If there was any item missing or damaged, please contact the reseller where the product was purchased or our support center.

- Wireless Keyboard x 1
- Wireless Optical Mouse x 1
- USB 2.4GHz dongle receiver x 1
- Manual/warranty x 1
- Optical Mouse Charger x 1 (110V, 220V, optional)
- Alkaline batteries x 2 (AAA, for mouse)
- Alkaline batteries x 2 (AAA, for keyboard)

Warning

Please do not use this product in a shady, wet, or oily environments. Failure to do so may shorten the life of this product and may cause bodily harm. Please keep this product as far away from Radio Frequency interruption areas as possible. This is not an outdoor product. Exposing this product to the elements may cause damage to the product and bodily harm to its users. Please do not use petroleum, benzene or thinner-based solution to clean this product.

Mouse

- Dimensions: 98x56x35.8mm
- Weight: 95 +/- 25g (with Battery)
- Key Number: 3 Keys (Wheel button on middle button)
- Battery: Alkaline batteries x 2 (AAA, for mouse) (Rechargeable, do not charge non-rechargeable dry-cell or alkaline batteries)
- Battery Life: 1 Month (Based on average usage)
- Channel: 16 Channels
- ID: 65535 sets
- Radio Frequency: 2.4GHz

Dongle Receiver

- Dimensions: 102x75x29mm
- Weight: 14g
- Interface: USB 1.1

Attention

The mouse's optical sensor may not work on bumpy, reflective and/or translucent materials, such as glass, polished table top and/or cloth. We recommend using a mouse pad for improved accuracy.

B. Setting up the Keyboard and Mouse

- Open the keyboard's battery compartment cover and insert the two pieces of AAA Alkaline batteries. Make sure they are properly installed. (FIG. 2)
- Replace the keyboard battery compartment cover.
- Open the mouse's battery compartment cover and insert the two pieces of AAA Rechargeable batteries. Make sure they are properly installed. (FIG. 3)
- Replace the mouse battery compartment cover.
- Press the button on the dongle receiver to reset the ID.
- Flip the keyboard around and gently press the ID key; as pointy objects such as a pin may be used.
- Flip the mouse around and gently press the ID key; as pointy objects such as a pin may be used.
- The LED indicator on the dongle receiver will go off when the ID's have been properly set and the keyboard and mouse are working.

Warranty Information

This product is backed by a One-Year Manufacturer's Warranty, starting from the date of purchase. The warranty covers free repair in accordance with the contents stated here in but does not cover wear and tear and any malfunctions or damages as a result of improper usage as stated in this manual.

Specifications

Keyboard

- Dimensions: 303x163x22mm
- Weight: 561 +/- 25g (with Battery)
- Key Number: 105 Keys (By language)
- Battery: Alkaline batteries x 2 (AAA, for keyboard)
- Battery Life: 3 Month (Based on average usage)
- Channel: 16 Channels
- ID: 65535 sets
- Radio Frequency: 2.4GHz
- Hot Keys: WWW, E-Mail, Mute, Vol+, VOL-

Installation Procedure

Before installing this product, please make sure you have one available USB port reserved for the dongle receiver. If your computer did not have an available USB port, you may purchase one of Zippy's 10-Key keypad with USB Expansion ports or equivalent USB hub.

A. Setting up the Dongle Receiver

- Plug the dongle receiver (FIG. 1) into an available USB port.
- Wait for Windows to install drivers for the dongle receiver, keyboard and mouse.
- When the dongle receiver has been properly initialized, its LED light will stay lit.

Battery Low

 
 
- Low-Battery is indicated by the illumination of the mouse scroll-wheel. Please recharge the mouse when the LED lights up to illuminate the scroll-wheel. Only connect the mouse to the charger when rechargeable batteries are being used. Charging non-rechargeable dry-cell or alkaline batteries may cause the batteries to explode.
- If you choose not to charge the mouse, please swap out the rechargeable batteries with fresh batteries for continuous usage.
- While the mouse is in sleep mode, please press any button or move the scroll wheel to wake it up.
- We recommend using alkaline batteries for the keyboard.
- You may need to reset the ID's after replacing new batteries for the keyboard and mouse.

Warning

Please be careful when resetting the ID's for the keyboard, mouse and dongle receiver. Objects with sharp point may break and leave behind shards.

Please do not attempt to charge non-rechargeable batteries using the mouse and adapter. Doing so may cause the non-rechargeable batteries to explode.

To remove batteries, please repeat steps 4 to 3 or 2 to 1 in reverse order.

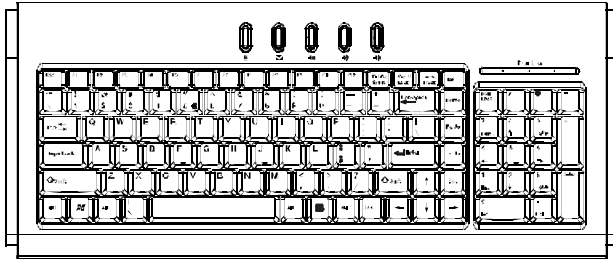

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications (including the antennas) made to this device that are not expressly approved by the manufacturer may void the user's authority to operate the equipment.

FCC RF Radiation Exposure Statement: This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

Mandatory repair charges are required for the following conditions, even within the guarantee period:

- (1) Malfunction or damage is due to misuse or improper alteration or repair.
 - (2) Malfunction or damage is caused by the movement or fall during installation after the purchase.
 - (3) Malfunction or damage is caused by fire, salt, gas, earthquake, lightning, wind, water or other natural calamities, or abnormal voltage.
 - (4) The manual is not presented.
 - (5) Date of purchase, customer's name, name of the shop are not filled in or altered.
 - (6) Malfunction or damage is caused by other devices connected to the RF-726.
- Together repair service, please disconnect RF-726 from other devices connected.

Date	Contents of service
Person in charge	
Person in charge	

Hotkey Functions

There are five built-in hotkeys for the RF-726 for quick access under the Windows operating system. Please refer to the following section on their functions.



- WWW: Launch the default internet browser.
- E-mail: Launch the default e-mail management program.
- Mute: Switch the on/off of the sound.
- Vol+: Increase the volume level.
- Vol-: Decrease the volume level.

FCC Statement on CLASS B

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Troubleshooting

Please visit our On-Line FAQ section for help.

Warning

As shielded-type power cord is required in order to meet FCC Commission limits and also to prevent interference to the nearby radio and television reception. It is essential that only the supplied power cord be used.

Use only shielded cable to connect I/O devices to this equipment.

You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

All brand names, trademarks and logos are the properties of their respective owners.

This warranty is intended to provide free repair under the terms and period stated herein. Accordingly, this warranty shall not limit the legal rights entitled to the customer. For more information concerning the repair after expiration of the guarantee period, please contact us or our retailer where you purchased this product.

Names of other products mentioned in this Manual are the trademarks or registered trademarks of their respective owners.

Any changes or modifications (including the antennas) made to this device that are not expressly approved by the manufacturer may void the user's authority to operate the equipment.