 
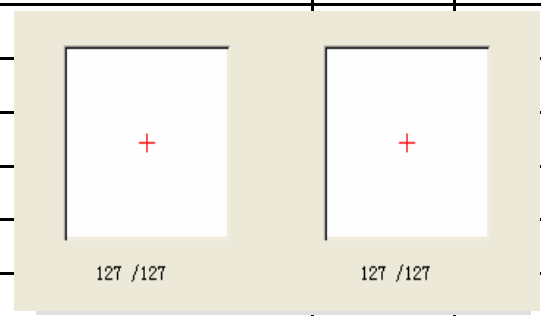 
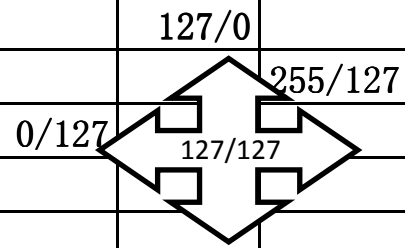 
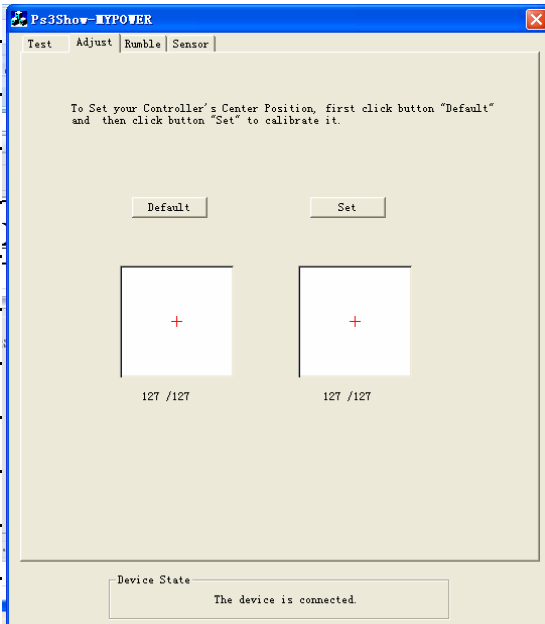 


PS3/PC 2IN1 Wireless controller Instruction Manual


Product name: PS3/PC 2IN1 Wireless controller		
.Fuction description		
1.This product is designed for PS3 game console.		
.Features		
PS3/PC 2 in 1 wirless controller is for use with PS3/PC.This product adopts the advanced sensing motion technology.		
.Technical data		
1. 2.4GHZ wireless controller.		
2. USB Charging.		
3. Compatible PS3 any version.		
4. Support dual vibration.		
5. 6 axis sensing motion.		
6. Forced connection and seven channels LED indication.		
7. △ ○ X □ L1 R1 L2 R2 SELECT START L3 R3 PS button.		
8. Overall size: L133 ×85 W×H47 MM		
.How to use it?		
1. Correctly connect PS3 console and TV, plug the controller receiver into the PS3 console USB port, then turn on console. 正确连接好主机电源及电视机, 将手柄接收器插入PS3主机USB口, 并开启主机电源;		
Here the LED on controller receiver starts to flash slowly indicating it's ready for connection.		
2. Install battery pack or place AA batteries to the battery compartment, turn the controller switch to ON position, the channel indicator on controller starts to flash slowly. 装入电池盒或电池包, 打开手柄电源开关, 手柄上的通道指示灯开始闪烁(慢闪), 此时先按一下接		
Press Link button on receiver and press PS button on controller. The LED on both receiver and controller will be illuminated indicating the connection is		
Once they're connected successfully, it's ok to just press PS button for connection on next time.		
3. The controller PS button is same with the original controller PS button.		
4. Channel combination: LED1-4 indicates channel1-4, LED1+LED4 indicates channel 5, LED2+LED4 indicates channel6, LED3+LED4 indicates channel7.		
5. The button function is same as original. (△、○、□、×, D-pad , L1, L2, R1, R2, left 3D , right 3D, SELECT, START)		
For use with PC:		
1. Plug the receiver into PC console USB port, the LED on receiver will		
2. Install driver:		
3. Install battery pack or place AA batteries to the battery compartment, turn the controller switch to ON position, the channel indicator on controller starts to flash slowly.		
4. Press Link button on receiver, the LED indicator will flash quickly. Then press PS button on controller, here the LED indicator on receiver will be illuminated continuously.		
5. Click to enter the test interface as below pictures.		
.special remark		
FCC ID: XSFPS33032 This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.		
changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment		

功能键 参数值变化

△	1	
○	2	
X	3	
□	4	
L2	5	
R2	6	
L1	7	
R1	8	
SELECT	9	
START	10	
L3	11	
R3	12	
PS	13	
UP	14	POV 上
RIGHT	15	POV 右
DOWN	16	POV 下
LEFT	17	POV 左

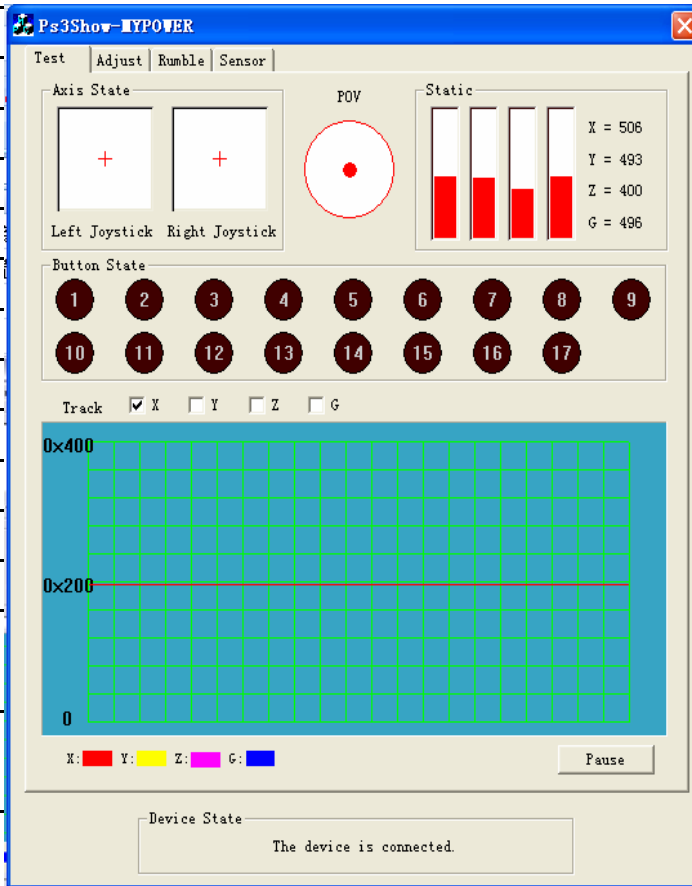


 左3D 右3D

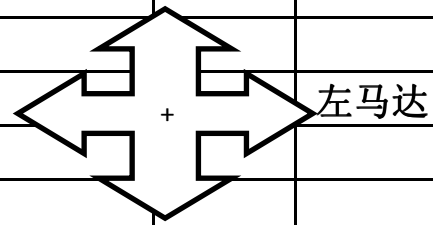

左马达

右马达

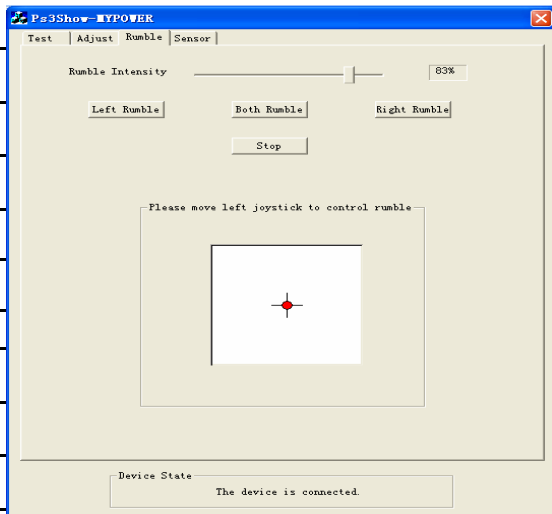


按下图动方向测试各SENSOR的性能，
上下都必须测试通过。上下红色“X”
的位置，都必须变为绿色：√

黄色代表X轴动方向

蓝表代表Y轴动方向

白色代表Z轴动方向

红色代表G轴动方向

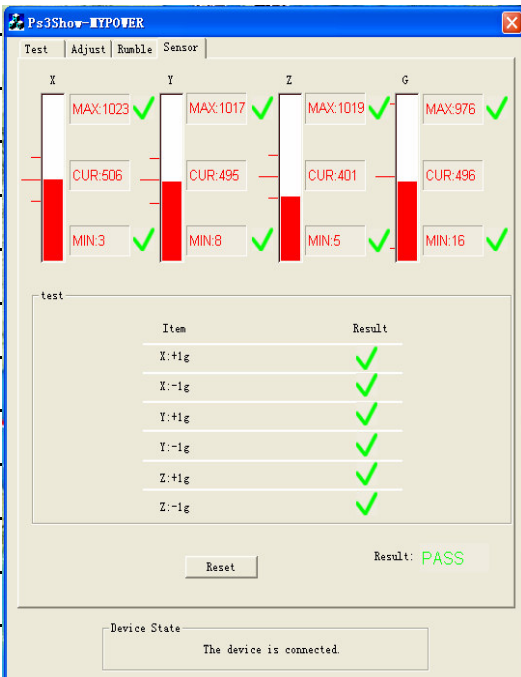

- Do not use detergents to clean the product, that may damage the cabinet finish and leak inside. 请不要用腐蚀性液体擦拭, 避免硬物划伤机壳表面, 以免影响外
- Do not expose this product into dust, direct sunlight, wet weather environment. 请勿将本产品置于下列环境下, 过热, 冷或太潮湿的地方, 阳光直接照射的地方, 灰尘较多的地方.
- Do not use any cleaner and other chemical. Soft cloth is OK 机壳表面沾有污垢和以免腐蚀机壳表面和注入机内损坏元器件.
- Do not disassembly, that may damage product, and lose the guarantee rights. 不要尝试自行分解, 拆装或改装本产品的任何部分, 这样的行为可能会损坏产品, 并使您所享有的产品保修失效.
- If you abandon the product please put it into the recycling station 如果要丢弃本产品时, 请将其放入专业的回收站进行处理.
- Please use the product following the instruction. If any technical problem, please contact our technician for assistance. 请依照使用说明书进行产品组装或调整, 请不要自行以非本手册说明范围内的方式或程序调整, 如果您以非本说明书的方式和程序调整发生不可预期的状况, 请您通知本公司相客服、技术人员为你处理!

八. Special statement 特别申明:

- PS3 is registered trademark of SONY. This product is not sponsored, endorsed or approved by Sony. PS3 品牌是SONY公司的商标, 本产品非SONY公司授权生产的产品。