

MOODSET

Setup Instructions




? Need support? 800-331-3340

1. GETTING STARTED

ITEMS INCLUDED:

(music player shipped separately)

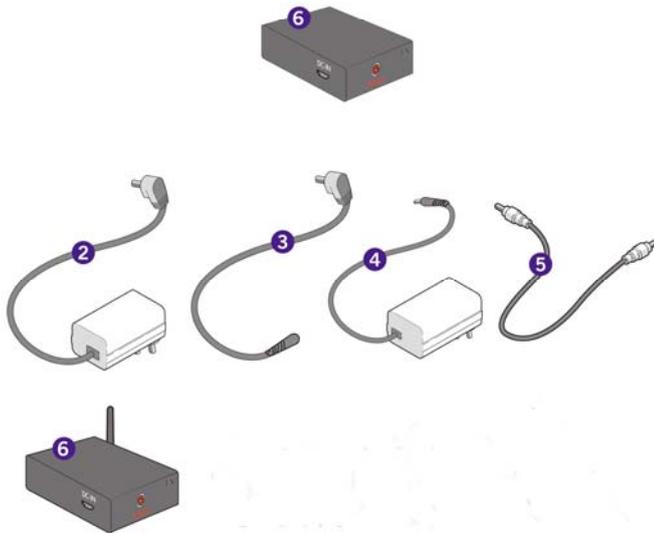


1. Wireless Receiver Box
2. Receiver Power Supply (with assorted power prongs)
3. 10ft Power Cord Extension (2)
4. Transmitter Power Supply (with assorted power prongs) (2)
5. Audio Cable
6. Wireless Transmitter Box

2. SET UP MEDIA PLAYER

If installing a new Mood Media | Muzak music player (shipped separately), follow the User Guide Setup Instructions included with the player.

3. SET UP SPEAKERS & TRANSMITTER

1. Attach audio cable to transmitter.
2. Attach other end of audio cable to Audio Out A (or Audio Zone 1) on player.
3. Attach power supply to transmitter.
4. Attach transmitter power plug to power outlet.
5. Attach receiver power plug to power outlet
6. Attach power supply to receiver.
7. Attach audio cable to receiver
8. Attach other end of audio cable to Audio In on voice box

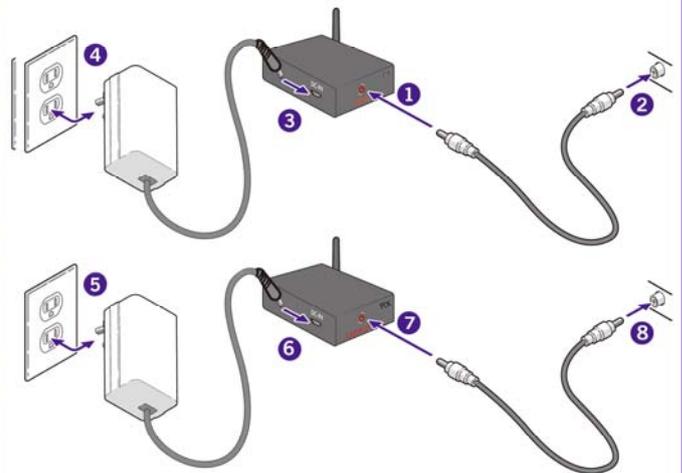

Wireless Receiver Tips

Place receiver in horizontal position with antenna in vertical position. When all power supplies are turned on and audio cable is connected to a voice box, you will begin receiving a signal. Do not place within 5 feet of a microwave oven.

Wireless Transmitter Tips

Place transmitter in horizontal position with antenna in vertical position. Speakers are pre-paired to transmitter provided. When all power supplies are turned on and audio cable is connected to transmitter, you will begin receiving a signal. Do not place within 5 feet of a microwave oven.

To set a new wireless signal:

1. Turn off all speakers.
2. Initiate transmitter pairing mode by pressing the pairing button to the left of the power light for greater than 3 seconds (a paper clip or pin will work).
3. Immediately turn on all speakers and transmitter should now show a solid green light and speakers will remain paired.

SAFETY & SECURITY

WARNING: To reduce the risk of fire or electrical shock, do not expose this apparatus to rain or moisture.

WARNING: No naked flame sources - such as candles - should be placed on the product.

IMPORTANT SAFETY INFORMATION:

DO NOT expose this apparatus to dripping or splashing and ensure that no objects filled with liquids, such as vases, are placed on the apparatus. To completely disconnect this apparatus from the AC mains, disconnect the power supply cord plug from the AC receptacle. The main plug of the power supply cord shall remain readily operable. UNPLUG this apparatus during lightning storms or when unused for long periods of time.

? Need support? 800-331-3340

MOODSET

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, Human proximity to the antenna shall not be less than 20cm (8 inches) during normal operation.

IC STATEMENT

English:

1. This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

French:

1. Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage

2. radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

WARRANTY

Purchased Equipment shall be free from defects in materials and workmanship for a period of one (1) year from the date of original installation at a Service Location by Supplier (unless Supplier notifies Subscriber that a different warranty period applies) or if Supplier does not install the Purchased Equipment, one (1) year from the date of delivery. In the event of any covered defect reported by Subscriber during the applicable warranty period, Supplier shall provide replacement parts or replacement equipment at no additional charge upon Supplier's confirmation of any such defect. The decision of whether to provide replacement parts or to replace defective equipment shall be in Supplier's sole discretion. Labor required in connection with this repair and replacement warranty (i.e., necessary on-site service calls) will be performed by Supplier at no charge during the first ninety (90) days following the original installation date of any item of Purchased Equipment which has been installed by Supplier. All other maintenance requested by a Subscriber in connection with the Purchased Equipment shall be on a time and materials basis at Supplier's rates and charges in effect at the time the service call is made, unless Subscriber has purchased a PSP for the subject equipment. With respect to any video displays, Supplier will provide a copy of the applicable manufacturer's warranty to Subscriber and agrees to facilitate the warranty claim process for Subscriber in the event Subscriber reports any covered defects during the applicable warranty period. Supplier does not offer and is not responsible to Subscriber for any repair or replacement of defective video displays. Neither Supplier nor the manufacturers or distributors of Purchased Equipment shall have any obligation to Subscriber or liability under any warranty for repair or replacement of Purchased Equipment due to minor cosmetic damage, misuse, abuse, theft, vandalism, accident, the acts or omissions of Subscriber or any other party (other than an employee or agent of Supplier), power surges, fire, lightning or any other event resulting from a peril of nature. ALL OTHER WARRANTIES, EXPRESS AND IMPLIED ARE HEREBY DISCLAIMED.

WARNINGS

WARNING: To reduce the risk of fire or electrical shock, do not expose this apparatus to rain or moisture.

WARNING: No naked flame sources - such as candles - should be placed on the product.

Important Safety Information:

DO NOT expose this apparatus to dripping or splashing and ensure that no objects filled with liquids, such as vases, are placed on the apparatus.

To completely disconnect this apparatus from the AC mains, disconnect the power supply cord plug from the AC receptacle.

The main plug of the power supply cord shall remain readily operable.

UNPLUG this apparatus during lightning storms or when unused for long periods of time.