

Quick Start Guide

Wireless N-lite ADSL2+ 4-port Ethernet Gateway

Firmware Version 1.00 Edition 1, 2/2011

DEFAULT	LOGIN DETAILS
LAN Port	LAN1 ~ LAN4
IP Address	http://192.168.1.1
Username	admin
Password	1234



www.zyxel.com

Device Panels





Introduction

The AMG1202-T10A is an ADSL router with a four-port built-in Ethernet switch and IEEE 802.11n wireless capability. The AMG1202-T10A allows wired and wireless clients to safely access the Internet.



Overview

- · Before You Begin, on page 4
- Hardware Connections, on page 5
- Initial Configuration, on page 7
- · Set Up a WPS Connection, on page 11

Before You Begin

Make sure you have the following things before you start.

- INTERNET ACCESS: You need an Internet account with an ISP (Internet Service Provider) and information such as user name, password, and so on.
- WEB BROWSER: Internet Explorer 6.0 and later versions, with JavaScript enabled, or Mozilla Firefox 3 and later versions or Safari 2.0 and later versions. The browser will be used to access the Internet and/or access the AMG1202-T10A Web Configurator.

See the User's Guide for all configuration details including file sharing and setting up a shared printer.

To read the User's Guide insert the CD that came in the box into your CD-ROM drive. A screen should pop up. Navigate to the User's Guide from this screen. If a screen does not pop up, open Windows Explorer (click My Computer), click on the CD-ROM drive (usually drive D) and navigate to it from there.

Hardware Connections



Remove any clear plastic covers from the AMG1202-T10A before using it.

- DSL: Use a telephone wire to connect this port to a telephone jack (or the DSL or MODEM jack on a splitter, if one is already installed).
- 2. ETHERNET 1-4: Use an Ethernet cable to connect a computer to this port for initial configuration and/or Internet access.
- **3.** Use the power adaptor provided with your AMG1202-T10A to connect an appropriate power source to this socket.
- 4. Push the power switch to the on position.

Checking the LEDs

Look at the LEDs at the front panel of the AMG1202-T10A.

- The **POWER** LED blinks during start-up and is green once the AMG1202-T10A is ready.
- Each **ETHERNET** LED turns on if the corresponding **ETHERNET** port is properly connected. The LEDs blink when the AMG1202-T10A is sending or receiving data through the corresponding ETHERNET port.
- The DSL LED stays on if a physical DSL connection exists.
- The **INTERNET** LED is green when Internet access is available and blinks when transmitting data.
- The WLAN/WPS LED stays green when the wireless LAN is ready. It blinks when the AMG1202-T10A is sending/receiving data through the wireless LAN.

If none of the LEDs are on, check your connections. Make sure that you have the power adaptor connected to the AMG1202-T10A and plugged into an appropriate power source. Make sure the power source is turned on. Turn the AMG1202-T10A off, wait for a few seconds and turn it back on. If the LEDs are still off, contact your local vendor.

Initial Configuration

Enter the information in the wizard exactly as given by your ISP. If no information was given for a field in the wizard, leave it to the default.

Eile	Edit	View	Favorites	Tools	Help
Addres	s 🙆	http://1	92.168.1.1/		

ZyXEL
ZYXEL AMG1202-T10A
Welcome to your router Configuration Interface
Enter password and click to login.
Password:
Login Cancel

Open a web browser on the computer. Type "http://192.168.1.1" as the website address.

Enter "1234" (default) as the password and click **Login**.

ZyXEL	
Use this s	screen to change the password.
Your router is currently of from unauthorized users Please select a new pass others to guess. We sug difficult for an intruder to	using the default password. To protect your network we suggest you change your password at this times word that will be easy to remember yet difficult for gest you combine text with numbers to make it more guess.
Enter your new passwon click "Ignore" to keep th	d in the two fields below and click "Apply". Otherwise e default password
New Password:	

The following screen displays if you have not yet changed your password. It is strongly recommended you change the default password. Enter a new password, retype it to confirm and click **Apply**; alternatively click **Ignore** to proceed to the main menu if you do not want to change the password now.



The Welcome screen opens. Click the Wizard button in the top right corner to enter the Wizard setup.

ZyXEL
Please select Wizard or &dvanced mode
The Withord setup walks you through the most common configuration settings.
We suggest you use this mode if it is the first time you are setting up your router or if you need to make basic configuration changes.
Use Advanced mode if you need access to more advanced features not included in Wizard mode.
O Go to Wizard setup
• Go to Advanced setup
Click here to always start with the Advanced setup.
Apply Exit

If the **INTERNET** light is off, select **Go to Wizard setup** and click **Apply** to display the wizard main screen.

	ZyXEL
	Welcome to the ZyXEL Wizard Setup
9	INTERNET SETUP The consistion vasaré at a waik you bhrough the most common comparation weather. This water at has been broken down into two steps, with of which may have multiple program.

Click **INTERNET SETUP**. Wait while your AMG1202-T10A tries to detect your DSL connection.

Follow the directions in the wizard. Enter the settings as specified by your ISP. For more details on using the wizard for Internet configuration, see **Internet and Wireless Wizard Setup** in the User's Guide.

Internet Setup

If the **INTERNET** light is off, the Internet connection can be manually configured.

Go to Network > WAN > Internet Connection. Enter the Internet access information exactly as given to you by your ISP in the Internet Connection screen and click Apply. See your User's Guide for detailed information.

When your ADSL Internet connection is setup, the **DSL** LED should be green. The **INTERNET** LED lights green when either one of the Internet connection is correct.

If you cannot access the Internet and the INTERNET LED is off, make sure you enter the correct information in the WAN screens. If you are using a new Internet account, contact your ISP to make sure it is active. If you are trying to access the Internet wirelessly, make sure the wireless and security settings in your wireless client are the same as the settings in the AMG1202-T10A.

Wireless Setup

To create a wireless network, the AMG1202-T10A and your wireless computer(s) must all use the same SSID (network name), channel and security settings.

- 1. Go to Network > Wireless LAN.
- Enable wireless LAN, enter a name to identify your wireless network (such as "My-SSID") in the SSID field, and select a channel which is not used by neighboring wireless devices.
- Select your security mode and configure wireless security settings. In this example, the AMG1202-T10A uses WPA2-PSK for data encryption.

If you do not set wireless security, anyone within range could use your AMG1202-T10A to access your network and the Internet. Make sure your wireless security settings are compatible with your existing wireless devices. See the User's Guide for more information on wireless networks.

lireless Setup	
Enable Wireless LAN	
Channel Selection	Auto Channel Select 💌 Current Channel: 6
Common Setup	
Enable SSID Autogener	ation
Name(SSID)	My-SSID
Hide SSID	
Security Mode	WPA2-PSK 👻
Encryption	TKIP/AES
WPA Compatible	
Enable Key Autogenerat	tion
Pre-Shared Key	pyzxwmfhpd
WPA Group Key Update Tin	ner 0 (In Seconds)
MAC Filter	Allow Association Edit
QoS	Enable QoS

Go to the Set Up a WPS Connection section if you do not want to use the wireless LAN screen to set up your wireless network.

Set Up a WPS Connection



For more information, please refer to the User's Guide on the provided CD or at the <u>www.zyxel.com</u> download library.

Was this guide helpful? Send your comments to techwriters@zyxel.com.tw

