



PowerTel M7510 mobile phone

Operating Instructions





Hearing aid compatibility

This telephone is equipped with T Coil coupler making it compatible with most popular hearing aids. Due to the wide range of hearing aids available there is no guarantee that the telephone will function with all hearing aid models. Please check your hearing aid immunity rating is higher than M2. This rating can be provided by the manufacturer of your hearing aid. Instruments with rating lower than M2 may not be compatible with this telephone. When using this telephone press the 'T' button on your hearing aid to switch it to Telecoil mode, this will link your hearing aid to the phone and will enable clearer sound without background noises. Please check if your hearing aid is equipped with 'T' facility and if it is automatic or manual. Hearing aids with high immunity rating equipped with automatic T mode should be able to detect your phone automatically and switch over to T position. Hearing aids with Manual T function would need manual activation of this function on your hearing aids.

Helpline 0844 800 6503

(See page 91 for costs and hours of operation)

Quick Start Guide	6
Quick Glance	6
What is in the box	8
Installing the SIM card(s), memory card and battery	8
Charging the battery	11
Charging via the mini USB charging socket	11
Charging via the desktop charging unit	11
Battery status	12
Switching the mobile phone on and off.....	12
Setting the display language	13
Setting the time and date	13
Taking a call	14
Rejecting a call	14
Ending a call	14
Making a call	14
Advanced Settings and Functions	15
The phone in details	16
Keys and Parts.....	16
Special key functions	16
Icons in the display	20

Using the phone	22
General	22
Entering text.....	22
External display (sub LCD)	25
Switching the mobile phone on and off.....	25
Using the torch	26
Dialling a phone number / Calling	27
Dialling with the speed dialling keys.....	27
Dialling with the one-touch dialling keys.....	28
Using redial / using the Calls list.....	28
Taking a call.....	29
Setting the volume	29
Hands-free	29
Muting the microphone.....	30
Options whilst in a call	30
3-party conference.....	31
“Phonebook” menu	32
Opening the phonebook.....	32
Checking the memory status	32
Creating a new phonebook entry.....	33
Calling from the phonebook.....	34
Editing a phonebook entry.....	35

Deleting a phonebook entry.....	35
Deleting all phonebook entries.....	35
Copying/moving all phonebook entries	36
Storing a phonebook entry to a speed dialling key.....	36
Storing a phonebook entry to an one-touch dialling key.....	37
“Messages” menu.....	40
Messages menu	41
Text message settings.....	42
Multimedia message settings.....	44
Service message settings.....	45
Writing and sending a SMS/MMS	46
Reading/deleting messages and further options	47
“Call center” menu	50
Reading the calls list	50
Deleting the calls list.....	51
“SOS” menu	52
Selecting an emergency call destination	52
Entering emergency call numbers	53
Select an outgoing emergency voice message.....	54
Recording a personal emergency voice message	54
Emergency call procedure	56
Cancel the emergency call function.....	57

“Settings” menu	58
Tone control	58
Switching Boost on and off.....	58
Direct number	59
Profiles	59
Call settings.....	62
Dual SIM settings	67
Phone settings	67
Network settings.....	70
Security settings	72
Bluetooth	73
Restore settings	76
“Organizer” menu	77
Calender.....	77
Calculator.....	77
Tasks.....	78
Alarm.....	78
Stopwatch.....	79
“Services” menu	81


“Multimedia” menu	82
Camera/Camcorder	82
Gallery	85
Video player	86
Sound recorder	87
“File manager” menu	89
Appendix	90
Technical data.....	90
Service hotline	91
Problems and solutions.....	91
Tips on the battery	94
Intended use	95
Areas of use	95
Safety Information	96
Power adapter plug.....	98
Disposal	99
Declaration of Conformity	100
Maintenance	101
Guarantee	101
Index	104
Menu tree	108

Quick Start Guide

Important: Before you start, please read the safety information on page 96.

Quick Glance

- | | |
|----------------------------------|---|
| 1 Earpiece | 13 Camera lens |
| 2 Display | 14 Front display |
| 3 Left softkey | 15 Notification LEDs |
| 4 Navigation key | 16 Charging contacts |
| 5 Call key | 17 LED Flashlight |
| 6 Direct call keys
M1, M2, M3 | 18 Emergency call switch |
| 7 Keypad | 19 Loudspeaker |
| 8 Star key | 20 Headset socket (Headset
not supplied) |
| 9 Hash key | 21 Mini-USB charging socket |
| 10 Microphone | 22 Boost key/
Flashlight key |
| 11 End call key /
On/Off key | 23 Volume control |
| 12 Right softkey | |

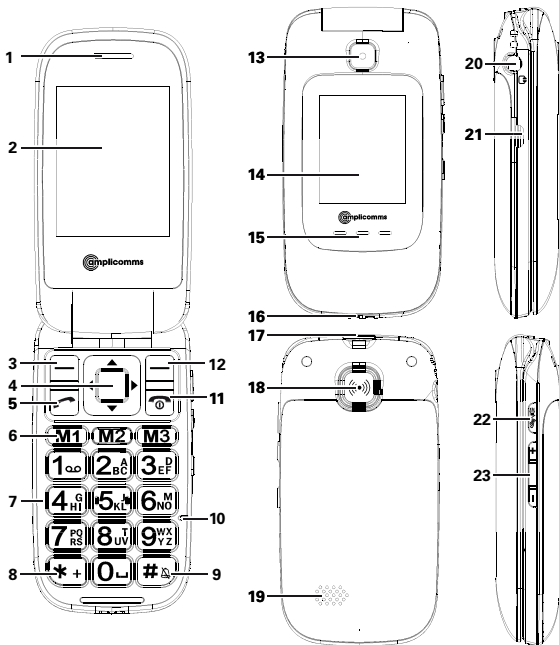

What is in the box

The box contains:

- | | |
|-------------------------|----------------------|
| 1 mobile phone | 1 power adapter plug |
| 1 li-ion battery | 1 operating manual |
| 1 desktop charging unit | |

Installing the SIM card(s), memory card and battery

Risk of swallowing small objects!

The SIM card can be removed.

Small children can swallow them.


Pay attention that the SIM card is not bent or scratched. Prevent any contact with water, dirt or electrical charges.

Your telephone number is carried by the SIM card, not the phone. Therefore if you use a SIM card you had in a previous phone, you will keep the same phone number.

- Switch the phone off.
- Remove the battery cover by pressing on it in the area below the SOS key, slide it down and take it off.
- If there is already a battery inside, remove it.

- Your phone supports two SIM cards. This enables you to use cards from two different networks and/or countries. Before making an outgoing call, sending a text message or using data services the phone will prompt you to decide and chose which SIM Card to use if you are using two at that time.

Note: The card slot marked with “G&W” (on the right hand side in the drawing) supports UMTS/GSM (3G) and the card slot marked with “GSM” (on the left hand side in the drawing) is limited to GSM (2G) only. When using only one SIM card, in order to use all the phone’s services via 3G networks you must place the SIM card in card slot “G&W”.

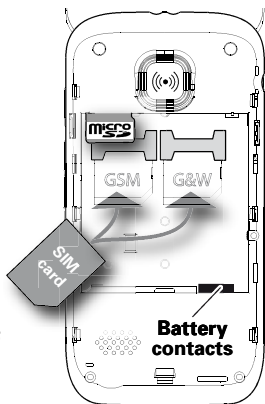

Slide the SIM card with the golden contacts facing down in the moulded SIM card holder. The SIM card must be located under the metal retaining bar to be in the correct position.

- To expand the internal storage memory, you can insert a microSD memory card (max. 32 GB / not included in the delivery). Insert the memory card into the slot until it stops as illustrated.
- Insert the battery. The golden contacts on the battery must face towards the bottom right. Press lightly on the top end of the battery until it snaps into place.
- Replace the battery cover on the back of the phone and shift it upwards until it clicks into place.

Charging the battery

- Before starting to charge the battery, check that it has been installed properly. Do not remove the battery while it is being charged. This could damage the phone.
- When charging the battery for the first time, it should be charged for at least 4 hours. Some batteries only reach their full capacity after several complete charge/discharge cycles.

Charging via the mini USB charging socket

- Plug the power adapter in the mini USB charging socket.
- Connect the power adapter plug. For safety reasons, only use the power adapter plug supplied.

Charging via the desktop charging unit

- Plug the power adapter plug in the mini USB charging socket on the charging unit. Insert the phone in the charging unit to charge it.

- It may take a few seconds before the phone indicates the charging process.

Battery status

The current battery charge status is indicated in the display as follows:





Full --> --> --> --> -- Empty

When the battery charge is low, a corresponding warning message appears in the display. Charge the battery.

When the battery charge drops below the minimum status, the phone switches off automatically.

Switching the mobile phone on and off

 3 sec. Switch the mobile phone on. To stop the melody press the End call key.

 3 sec. Switch the mobile phone off.



Some SIM cards will require you to enter a PIN code. Follow the prompts on the screen.

The SIM code (PIN of the SIM card) that you received with your SIM card, protects the SIM card against unauthorised use. The PIN2 code supplied with some SIM cards, you need to access certain services. If you enter the PIN or PIN2 code incorrectly three times in a row, you will be prompted to enter the PUK or PUK2 code. Check with your provider if you do not know these codes.

Setting the display language

If you want to select a different language please refer to the **Settings** menu, starting on page 58.

Setting the time and date

Refer to the **Settings** menu, starting on page 58.

Taking a call



Take the call

Rejecting a call



Reject the call

Ending a call



End the call

Making a call

Enter the phone number

Clear

Delete the last digit if incorrect



Dial the phone number



Advanced Settings and Functions

For more details about setting up your Amplicomms M7510 and other functions follow the descriptions in this user guide.

Examples:

- Set your one-touch dialling keys -> page 37.
- Store numbers in the phone book -> page 33.

The phone in details

Keys and Parts

for the explanation of keys and parts please refer to page 6.

Special key functions

Left softkey

In standby -> open the main menu
In menus the function changes due to the term in the display above the softkey (e. g. **OK, Select**).

Right softkey

In standby -> open the phonebook
In menus the function changes due to the term in the display above the softkey (e. g. **Back**).

Direct call keys

M1, M2, M3 - pressing one of these keys dials the assigned phone number. A phonebook entry can be assigned to each one-touch dialling key (refer to "Storing a phonebook entry



to a one-touch dialling key“ page 37).

Call key

- Take a call or dial a number.
- Open the call list and the redial list

End call key

- End or reject a call
- Cancel the current process and return to standby (in menus)
- Switch the mobile phone on and off

Navigation key

Navigate through the menu.

In standby the navigation key offers a quick access to specific menu items that you can define yourself (refer to page 69). The default settings are as follows:

- ▲ - Quick access to the tone settings: customisation of the user profile (ringtone etc.).
- ▼ - Switch on the camera.
- ◀ - Open SMS/MMS menu



- ▶ - Calculator
- - centre of the navigation key
In standby: open the menu
In menus: function “OK”

Digit key 0

In idle mode, long press (approx 3 s) to toggle the tone control setting between “Low frequency”, “High frequency” and “Normal frequency”. (See page 58 for explanation of tone control).

Digit key 1

Long press (approx. 3 s) dials the number to access your voice mail messages.

Note: If prompted, it may be necessary to enter your network's voice mail number first. Refer to the documentation supplied with your SIM card for this number.



Star key

- to enter the international prefix “+” in pre-dialling (press 2 times) or to enter P (pause)/W (wait) (may be necessary for call-through numbers or remote accessing an answering machine).

- when entering text: open the special character table.

Hash key

- In standby: long press toggles between selected user profile and silent mode.

- when entering text: toggles between case and numbers.

Volume control

+/- keys: - In standby: adjusts the volume level of the ringtone

- Whilst on a call -> adjusts the ear-piece or Hands-free volume.




Boost/Flashlight key In standby: press and hold for approx. 2 sec to switch the torch on/off

- In a call: press to toggle between boost and normal volume.

SOS key Start the SOS sequence. For details please refer to the SOS menu, starting on page 52.

Icons in the display


 Signal strength of the phone's connection








 Battery capacity (refer to page 12)

 New SMS

 New call

 Call forwarding active

 Alarm is activated

-  Boost is activated
-  Profile "Outdoor" or "General" is activated
-  Profile "Meeting" is activated
-  Profile "Silent" is activated
-  A headset is connected
-  Bluetooth is activated
-  The "Roaming" symbol will appear if the phone switches to an alternate network provider. This may occur for example when entering another country. The Roaming facility depends on your network provider. Call your network provider if you have any queries regarding this service.

Using the phone

General

All the functions can be accessed via the various menus.

- Use the arrow keys ▲ /▼ to scroll through the menus and the lists (e. g. phonebook).
- Press **Back**, to return to the last step.
- Press **OK**, to get to the next step.

Entering text

- When entering text (e. g. phonebook or SMS) use the **#-key** to toggle between smart input (eZi ABC or eZi abc), uppercase letters (ABC), lowercase letters (abc), words beginning in size (Abc) or numbers (123).
 - **Smart text input** is based on a built-in dictionary. Start writing a word, using the keys 2 to 9. Press each key only once for one letter. Confirm a word by **Select** or by adding a space (press **0**). If the word is not correct, press the **volume keys +/-** repeatedly,



and select the word from the list. When you do not find the correct letters between ◀ and ▶ press **Clear** until you find the first letters are OK, then press **Select**, then continue by typing the next letter key, if this is incorrect use the option bar at the bottom of the screen which should have appeared, showing individual letters and characters then press choose a letter and press **Select**. Repeat this procedure for the next letter if necessary. If you still cannot get the correct word, Long press ***-key** and you can temporarily toggle the input method from Smart ABC/abc to plain ABC/abc.

NOTE: If you wish to include a numeric character you can do this by pressing and holding the appropriate numeric key down for 3 seconds.

- In order to enter text in **Multitap** mode, press the key labelled with the corresponding letter/character. If the first character of the group is required, press the key

once. If the second character is required, press it twice, and so on. To enter two characters assigned to the same key, press the key the respective number of times to enter the first character. Then wait for approx. 2 sec. and enter the second letter.

Punctuation: Press the numeric key 1 you get punctuation.

Special character: press * to display the special character table. Select the character using ▲ /▼/◀ /▶ and confirm with **OK**.

Move the cursor: use ◀ /▶ to move the cursor.

Switching the input language: press and hold down the #-key (approx. 3 s) to get the list of the available languages. Select an entry and press **OK**.

- Use the arrow keys ▲ /▼/ ◀/▶ to place the cursor and press **Delete** for deleting characters.

Important Note: If the display light turns off, any key-stroke activates only the light again. You must press the desired button a second time to perform the function.

External display (sub LCD)

The external display informs you of the incoming calls, SMS and, for a short time after closing the mobile phone, it also shows the signal strength, battery capacity and time. With a short press on one of the outer buttons (+ / - / boost key or emergency button) you can activate the display at any time.

Switching the mobile phone on and off

Switch off: Press and hold the red end call key. After a few seconds the telephone will be switched off.

Switch on: Press and hold the red end call key until the display light will be switched on. Enter the PIN code for your SIM card and press **OK**. Entering the PIN code is not requi-

red if this feature is switched off for your SIM card (refer to page 72 “SIM lock” / not available for every provider).

Using the torch

Activate the display, press and hold the boost/flashlight key for approx. 2 seconds to switch the torch on and off.

Note:

- **The light is generated by a high-power LED. Do not shine directly into eyes or optical devices.**
- **Please remember that by the operation of the torch, the operating time to the next charging of the phone is shortened.**



Dialling a phone number / Calling

- The phone must be in standby (SIM card inserted and the phone switched on).
- Enter the telephone number incl. the prefix. For entering a + in front of the country prefix press * quickly two times.
- Press the green call key to dial the phone number.
- Press the red end call key for ending the call.

Dialling with the speed dialling keys

- Make sure, a phone number is assigned to the respective key. Press the desired digit key for approx. 3 seconds. Each stored number is dialled. To program the speed dialling keys see "Storing a phonebook entry to a speed dialling key," page 36.

Dialling with the one-touch dialling keys

- Make sure, a phone number is assigned to the respective key. Press the desired one-touch dialling key. Each stored number is dialled. To program the one-touch dialling keys see "Storing a phonebook entry to an one-touch dialling key," page 37.

Using redial / using the Calls list

- In standby press the green call key. A list of the last calls is shown (Missed calls, dialled calls, received calls). Select an entry using the arrow keys ▲ / ▼.
- Press the green call key to dial the selected phone number.

Taking a call

- If your phone is ringing:
 - Press the green call key or the left softkey (**Options** -> **Answer**) to take the call.
 - Press the red end call key or the right softkey to reject the call. The caller gets the busy tone (depending on your provider).

Setting the volume

- During a call you can set the volume using the + / - keys on the right hand side of the phone. The setting will be saved.

Hands-free

- During a call press **H-Free**. You can hear the caller via the loudspeaker.
- For switching off press **H-Held**. The loudspeaker will be switched off.

Muting the microphone

- During a call press **Options**, select **Mute** and press **On**. The microphone will be muted.
- To unmute press **Options**, select **Mute** and press **Off**.

Options whilst in a call

You can select the following **Options** with the left softkey:

- **Hold single call** -> The call is put on hold. To retrieve the call press **Options/Retrieve single call**
- **End single call** -> End the call (same as end call key).
- **New call**
- **Phonebook** -> Open the phonebook.
- **Call center** -> Open the call history.
- **Messages** -> Open the messages menu.
- **Sound recorder**
- **Mute**
- **DTMF**

3-party conference

“3-party” is a provider dependant feature. Establishing a 3-party conference lets you talk to two subscribers simultaneously.

- Call the first subscriber.
- Press **Options** -> **New call**, enter the phone number for the second subscriber and press the green call key.

or

press **Options** -> **Phonebook** or **Call history** to select an entry. Press **Options** and select **Call** - **OK**.

- When the second subscriber answers, press **Options** and select **Conference** - **OK** to establish the 3-party conference.

Press **Options** -> **Switch** to toggle between the two subscribers.

“Phonebook” menu

You can save names and phone numbers in the internal memory (up to 500 entries) and on the SIM card.

Opening the phonebook

- In standby press **Names**
or
- During a call press **Options**, select **Phonebook** and press **OK**.

Checking the memory status

For checking how many names and phone numbers are stored in the phonebook press **Names** -> **Options** -> **Phonebook settings** -> **Memory status** -> **OK**. The status of the SIM and phone memory is displayed.



Creating a new phonebook entry

- Press **Names**, select **Add new contact** at the very top -> **Options** -> **Select**.
- Select whether the new entry should be stored to the phone's memory or to the SIM card and press **OK**.

Note: If the entry is saved to the SIM card, you can only enter the name and one phone number.

- Enter the name and press ▼.
- Enter the (first) phone number and press ▼.
- If necessary enter additional phone numbers (Home number/Office number). After every input press ▼.
- Assign a ring melody to the entry. Use ◀ and ▶ to select a melody. If **Default** is selected, the standard ringtone (as set in the profile) is used. Select **New record** to record a personal ring tone or speak any text to the telephone's microphone. Your recorded words will be used as ringtone for this entry. To do this, press

Options -> **New record** and say your personal ringtone into the microphone.

- Via **Options** - **Add detail** you can enter further contact information for this entry.
- When you are finished entering information for the new entry, press **Options** -> **Save**.

Note: Your personal ringtone

You can record e. g. "Peter is calling" as a ringtone. Did you associate this ringtone to phonebook entry "Peter", your phone will announce calls from Peter with: "Peter is calling".

Calling from the phonebook

- Press **Names** to open the phonebook.
- Select an entry using the arrow keys or enter the first letter for the entry.
- Press the green call key to dial the phone number.



Editing a phonebook entry

- Press **Names** to open the phonebook.
- Select an entry, press **Options**, select **Edit** and press **Select**.
- Edit the entry.
- Press **Options** -> **Save**.

Deleting a phonebook entry

- Press **Names** to open the phonebook.
- Select an entry, press **Options**, select **Delete** and press **Select**. Press **Yes** in the following confirmation query.

Deleting all phonebook entries

- Press **Names** -> **Options** -> **Phonebook settings** -> **Delete all contacts**. Select whether the contacts in the phone or on the SIM card should be deleted, enter the phone lock code (in delivery state: 0000) and confirm.

Copying/moving all phonebook entries

- Press **Names** -> **Options** -> **Phonebook settings** -> **Copy/Move contacts**. Select whether the contacts in the phone should be copied/moved to the SIM card or vice-versa and confirm.

Note: The contacts will be deleted from their original location when moved!

Storing a phonebook entry to a speed dialling key

- Press **Names** -> **Options** -> **Phonebook settings** -> **Speed dial** and press **OK**.
- Make sure that the feature **Speed dial** is switched on.

Note: When you see "Off" below status press the left softkey (OK) and switch on the function.

- Select **Set numbers** and press **OK**.
- Select a button from the list (2...9) and press **Edit**.



- The phonebook is opened. Select an entry and press **OK**.

Storing a phonebook entry to an one-touch dialling key

- Press **Menu** -> **Settings** -> **Direct Number** -> **OK**
- Select a direct call key (M1, M2, M3), enter a phone number and press **OK**.
- Press **Yes** in the following confirmation query.

Further options

With the phonebook open and an entry selected press

Options and select one of the following options:

- **View:** The entry is shown
- **Send text message:** Send a SMS/MMS to the respective phone number.
- **Call:** To make a call to the phone number.
- **Edit:** You can edit the entry.
- **Delete:** The entry will be deleted.

- **Copy:** You can copy the entry to the telephone or to the SIM card.
- **Move:** You can move the entry to the telephone or to the SIM card. The entry will be deleted at its origin.
- **Add to Blocklist:** The entry will be added to the block list.
- **Groups:** You can define caller groups. In these caller groups, you can group phone book entries stored in the phone book of the phone.
- **Phonebook settings**
 - **Preferred storage:** Select where new entries should be saved (SIM card, telephone).
 - **Speed dial:** Switch on the speed dial function and edit the speed dial buttons.
 - **Memory status:** Shows the number of entries on the SIM card and in the phone.
 - **Copy contacts:** Copy all contacts from the SIM card to the phone and vice-versa.



- **Move contacts:** Move all contacts from the SIM card to the phone and vice-versa.
- **Delete all contacts:** Delete all contacts.

“Messages” menu

You can send and receive text messages (SMS / Short Message Service) and multimedia messages (MMS).

A message will be treated as an SMS until you attach an image, sound, etc. Then it will automatically be converted to an MMS. In this case, there are more and other options available if needed.

Received messages are stored either internally in the phone or on the SIM card. Unread messages are stored in the Inbox. When a new SMS/MMS is received, a message appears on the display.

If the memory is full, you will receive a message. To receive new messages you will have to delete old messages.



Messages menu

Press **Menu** -> **Messages** -> **OK**. You will have the following options:

- **Write message:** To write a new SMS/MMS.
- **Inbox:** Open the list of received messages.
- **Drafts:** Open the draft list.
- **Outbox:** Open the list of messages still to be sent.
- **Sent messages:** Open the list of already sent messages.
- **Broadcast message:** If your provider supports this service you can change some parameters in this menu.
Note: These settings should only be changed by advanced users.
- **Message settings:** You can change some of the SMS related parameters.
Note: These settings should only be changed by advanced users.

Text message settings

Note for the SMS centre number: This particular number is needed for sending and receiving of SMS. It is stored on the SIM card correctly. In certain cases it is necessary to check that number or to change it.

- Press **Menu**, select **Messages** -> **Message settings** -> **Text message** and press **OK**.
- You will have the following options:
 - **SIM1/SIM2 message settings**
 - **Profile settings** (the active profile is marked with a green tick).
 - Select the desired profile, press **Options**, select **Activate** or **Edit** and press **Select**.
 - Editing options include: change the profile name, the SMSC address (the phone number for your provider's SMS centre), the validity period (change the setting using ◀ and ▶) and the message type (this parameter should remain "Text" and not be changed.)



- **Voicemail server:** You can change your voicemail phone number. If you have questions, please contact your network provider.
Exit the menu by pressing **Back** or **Save**.
- **Common settings:** Select whether sent SMS should be saved.
- **Memory status:** The status of the SIM and phone memory is displayed.
- **Preferred storage:** Select where messages should be saved (**SIM** or **Phone**).

Multimedia message settings

Note about MMS: Both you and the recipient must have a subscription that supports drafting and sending multimedia messages. This type of profile or account is often pre-installed. If not, you can get the information from your network provider.

- Press **Menu**, select **Messages** -> **Message settings** -> **Multimedia message** and press **OK**.
- You have the following options.
 - **Data account (SIM1/SIM2):** Select **Primary** or **Secondary account** and press **Edit**. Select an entry from the list and press **OK**.
 - **Common settings**
 - **Compose:** Settings for composing a MMS as **Slide time**, **Creation m...**, **Picture resi...**, **Auto signa...**, **Signature**.



- **Sending:** Settings for sending a MMS as **Validity pe...**, **Delivery re...**, **Read report**, **Priority**, **Delivery ti..**, **Send and s...**
- **Retrieval:** Settings for treating a MMS as **Home net...**, **Roaming**, **Filters**, **Read report**, **Delivery re....**
- **Preferred storage:** Select, where the MMS should be stored to (**Memory card** or **Phone**).
- **Memory status:** The status of the memory card and phone memory is displayed.

Service message settings

- Press **Menu**, select **Messages** -> **Message settings** -> **Service message** and press **OK**.
- You have the following options.
 - **Enable push:** Press **OK**, select from the options and press **OK**.
 - **Service loading:** Press **OK**, select from the options and press **OK**.

Writing and sending a SMS/MMS

- Press **Menu**, select **Messages** -> **Write message** and press **OK**.
- Write your message using the digit keys. For more information for entering text refer to chapter "Using the phone / General", page 22.
- After having entered the text press **Options**, select **Send to** and press **Select**.

Note: When sending a MMS, press **Options** to select images, sounds or other attachments.

- Select **Enter recipient**, press **Select**, enter the phone number including the prefix and press **Options** -> Done.
 - The entered phone number will be shown.
 - Press **Options**, select **Send** and press **OK**.
- or
- Select **Add from Phonebook** and press **OK**.
 - Select an entry and press **OK**.



- The selected entry will be shown.
- Press **Options**, select **Send** and press **OK**.

Reading/deleting messages and further options

- Press **Menu**, select **Messages** -> **Inbox** and press **OK**.
- Select a message.
- Press **Options** when viewing the list. You have the following options:
 - **View**: The message is displayed.
 - **Reply**: Reply to the number from which the message was sent.
 - **Call sender**: Call the sender on the phone.
 - **Forward**: Forward the message to a different number.
 - **Delete**: Delete the message.
 - **Delete all**: Delete all messages.
 - **Save to Phonebook**: (only available if there is no respective entry in the phonebook yet) stores the sender's phone number in the phonebook.

Press **Options** when displaying the SMS content to open the following options:

- **Reply:** Reply to the number from which the message was sent.
- **Call sender:** Call the sender on the phone.
- **Forward:** Forward the text to a different number.
- **Delete:** Delete the message.
- **Add to Calendar:** You can add a reminder directly into the calendar. Edit the input options. For saving the entry move to one of the input fields for date or time and press **OK**. Confirm the prompt to save the entry.
- **Advanced** with the following options: **Use number / Use URL / Use USSD / Copy to phone/to SIM / Move to phone/to SIM.**



- **Edit options:** You can mark / copy the whole text or a part the text and paste it into a new message (Write message -> Options -> Edit options -> Paste).

"Call center" menu

A new call is shown on the display.

- Press **Back** to delete the message. The icon for a new call appears in the display. You can see this call "normally" in the **Missed calls** list.
- Press **View**, to read the caller's name and number.
- Press **Options**. For further options please refer to the following chapter..

Reading the calls list

- Press **Menu**, select **Call center** and press **OK**.
- Select **Missed calls**, **Dialled calls** or **Received calls** and press **OK**.

In these lists you will have the following options:

Press **Options** and select one of the following options:

- **View**: Read the details.
- **Call**: Call the telephone number.
- **Send message**: Send a SMS/MMS to the phone number.



- **Save to Phonebook:** (only available if there is no respective entry in the phonebook yet) save the entry in the phonebook.
- **Add to Blocklist:** Add the entry to the block list.
- **Edit before call:** Edit the phone number before calling back.
- **Delete:** Delete the entry.

Deleting the calls list

- Press **Menu**, select **Call center** and press **OK**.
- Select **Delete call logs** and press **OK**.
- Select a list to delete **Dialled calls**, **Missed calls**, **Received calls** or **All calls** and press **OK**. Press **Yes** in the following confirmation query.

"SOS" menu

This phone is equipped with an emergency call function. You can register up to 5 personal phone numbers for automatic periodic dialling or an emergency phone number for an emergency call centre.

Note: With two SIM cards installed, choose **SIM selection** for the SIM card to be used for the emergency call.

Selecting an emergency call destination

- Press **Menu**, select **SOS** -> **SOS mode setting** and press **OK**.
- Select **Set 5 numbers**, if you want to call up to five personal emergency call numbers (see below) or **Set call center**, if you want to call an emergency call centre. Select **Off** for deactivating the emergency call function.

Entering emergency call numbers

- Press **Menu**, select **SOS** and press **OK**.
- Select **Set SOS number** -> **OK**, select one of the 5 possible entries and press **Edit**.
- Select **Add from phonebook**, to select a phone number from the phonebook or **Edit number**, to enter the phone number manually.

or

- Select **Call center number** -> **OK** and enter the desired phone number.

Note: It is forbidden to enter a public emergency number such as police, fire and rescue control centre. It is a purely "private" emergency call.

Select an outgoing emergency voice message

- Press **Menu**, select **SOS** -> **Set outgoing voice MSG** and press **OK**.
- Select **Default**, to select the default outgoing voice message.

or

- Select **Custom**, to select a personal outgoing voice message. To use this setting you will have to record the personal outgoing message before (see below).

Recording a personal emergency voice message

- Press **Menu**, select **SOS** -> **Set outgoing voice MSG** and press **OK**.
- Select **Custom** and press **OK**.
- Select **Record** and press **OK**.
- Press **Options**, select **New record** and press **OK**.
- Speak your personal outgoing message to the microphone.

- Stop recording with **Stop**.
- Then choose **Select** and press **OK**, to activate your personal emergency contact.

With **Play**, you can listen to the control notifications.

If you **Delete** your personal emergency voice message the default outgoing voice message will be restored again.

Emergency call procedure

Press and hold down the emergency call button on the rear of the device for approx. 2-3 seconds. When the automatic SOS call starts you will hear a siren tone.

When **"Set 5 numbers"** is set:

- The first phone number will be dialled.
- If the first phone number will not answer the next phone number will be dialled and so on. All phone numbers (max. 5) will be called one by one subsequently. If you have only set one phone number, the phone will only call that number cyclically. This procedure will be repeated as long as the phone's battery is not empty.

The procedure stops, as soon as the first person answers. The emergency voice message will be played. If the called party press **key "0"** within 10 seconds after your recorded voice playing ended, hands free mode

will be activated at your side and you can talk to the called person directly.

- **Note: Please mention explicitly in your personal emergency message, that the called party will have to press key “0” to be able to speak with you. If not, the loop continues. This prevents the emergency loop from terminating, when, for example, an answering machine takes your emergency call.**
- **The emergency loop continues even after an answered emergency call, until you cancel the emergency (press emergency call button again).**

Cancel the emergency call function

Press and hold down the emergency call button again for approx. 2-3 seconds.

"Settings" menu

Tone control

Set the tone for the earpiece/loudspeaker.

- Press **Menu**, select **Settings** -> **Tone Control** and press **OK**.
- Select **Normal frequency**, **Low frequency** (increases the lower frequencies) or **High frequency** (increases the higher frequencies) and press **OK**.

Switching Boost on and off

- Press **Menu**, select **Settings** -> **Boost setting** and press **OK**.
- Select **On** to activate the Boost function permanently or **Off** to deactivate it.

If you have turned off the gain here in general, you can switch it on at any time with the boost button (refer to page 6) to increase the earpiece volume.



Prolonged listening at full speaker volume can cause hearing damage.

Direct number

You can assign important phone numbers to the one-touch dialling keys M1, M2 and M3.

- Press **Menu**, select **Settings** -> **Direct Number** and press **OK**.
- Select a one-touch dialling key (**M1, M2, M3**), enter the phone number manually and press **OK**.
- Press **Yes** in the following confirmation query.

Profiles

You can store different profiles (special settings dependent on user and surroundings), which you can switch quickly.

- Press **Menu**, select **Settings** -> **Profiles** and press **OK**.
- Select one of the profiles and press **Options**.

- You have the following options:
 - **Activate:** The profile with the respective settings is activated.
 - **Customize:** Change the settings for the respective profile ("Silent" can not be edited).
 - **Alert type:** Select whether an incoming call should be signalled by **Ring only**, **Vib. only**, **Vib. and ring** or **Vib. then ring** (Vib. = vibration).
 - **Ring type:** You can select **Ascending**, **Beep once** or **Repeat**.
 - **SIM 1/SIM 2 Ring:** Selecting the melody for incoming calls for each SIM card installed.
 - **Ring Volume:** Select the volume for the ring tone.
 - **SIM1/SIM2 SMS-** Set the tone for an incoming message.
 - **SMS Volume:** Select the volume for the incoming message tone.



- **Keypad** - Select whether the confirmation of a pressed button should be confirmed with a **Click**, a **Tone**, **Human voice tone** (with a voice prompt when entering a digit) or **Silent**.
- **Key Volume**: Select the volume for the keytone.
- **Power on** - Set the tone for powering on the phone.
- **Power off** - Set the tone for powering off the phone.
- **Cover open** - Set the tone for opening the phone's cover.
- **Cover close** - Set the tone for closing the phone's cover.
- **System alert** - Switch the sound on/off for system notifications.

The new settings will only take effect if you press **Options** again and select **Save**, once the modifications are done.

Call settings

- After pressing **Menu** -> **Settings** -> **Call settings** -> **OK** you have the following options (separately for SIM1 / SIM2, if two SIM cards are installed):
 - **Caller ID:** Settings for the transmission of your phone number.
 - **Set by network:** Using the default setting of your provider.
 - **Hide ID:** No transmission of your phone number.
 - **Send ID:** Transmission of your phone number.
 - **Call waiting:** Settings for an incoming call if you are already in a conversation.
 - **Activate:** The second call will generate a short beep in the earpiece.
 - **Deactivate:** The second caller will get the busy tone.
 - **Query status:** Information on the current setting.



- **Call divert:** Settings for call diversion.
 - **Divert all voice calls:** You can **Activate** a call diversion for all voice calls **To new number** (enter subsequently a destination) or select **To voicemail**, if you want to divert to your voice mail box. Select **Deactivate** to deactivate a diversion or **Query status** to get information on the current setting.
 - **Divert if unreachable:** Call diversion, if your phone is not available (switched off or “No network”). For information on settings please refer to “Divert all voice calls”.
 - **Divert if no answer:** Call diversion, if you do not accept the call. For information on settings please refer to “Divert all voice calls”.
 - **Divert if busy:** Call diversion, if your phone is busy. For information on settings please refer to “Divert all voice calls”.

- **Divert all data calls:** Diversion for all "No voice" calls. For information on settings please refer to "Divert all voice calls"
- **Cancel all divers:** To cancel all call diversions.
- **Call barring:** Barring of incoming or outgoing calls. You can request the barring password from your network provider.
 - **Outgoing calls:** If you select **All voice calls**, no more calls can be dialled. If you select **International voice calls**, no more calls to networks abroad can be dialled. If you select **International voice calls except to home**, only calls to your home country can be made.
 - **Incoming calls:** If you activate **All voice calls** no more calls will be signalled - You are not available.

The setting **Voice calls when roaming** bars all incoming calls, if you are not in your home land



(e. g. abroad on vacation).

- **Cancel all:** Cancel all barrings.
- **Change barring password:** Changing the password for activating/deactivating the call barring. You can request the barring password from your network provider.
- **Advanced settings:**
 - **Block list:** You can enter a list of phone numbers to be blocked. If you activate this feature calls from phones with the respective numbers will not be signalled any more.
 - **Auto redial:** If the function is activated, phone numbers that were "busy," will be redialled automatically (interval 5 min, max. 5 attempts).
 - **Call time reminder:** You can specify whether you want to be alerted during a call by a beep in the earpiece after a certain time of call duration. For **Single** you can set a time up to 3000 sec (=

50 min), for **Periodic** you can set up a time between 30 and 60 s.

- **Reject by SMS:** If this feature is activated you can reject an incoming call by SMS (Incoming call is signalled: **Options** -> **Reject by SMS** -> select a template).
- **Connect notice:** When this feature is turned on, an advisory will be given in the handset when the connection is established.
- **Answer mode:** If **Cover answer** is selected, a call will be taken by opening the flap. If **Any key** is activated, incoming calls can be taken by any key (except the right softkey and the red end call key). If **Auto answer when headset mode** is activated, an incoming call will be taken automatically if a headset is connected.

If no option is activated an incoming call can only be taken with the green call key.



Dual SIM settings

- Press **Menu** -> **Settings** -> **Dual SIM settings** -> **OK** to select the active SIM card (if two SIM cards are installed). This is, for example, useful if you use a "private" and "business" SIM card. **Dual SIM Enabled** means both SIM cards are activated. **Only SIM1 Enabled** or **Only SIM2 Enabled** activates only the respective SIM card.

Phone settings

- Press **Menu**, select **Settings** -> **Phone settings** and press **OK**.
- You have the following options:
 - **Time and date:** In this menu you can **Set home city**, **Set time/date** and **Set format** (time 24/12h / date (DD MM YYYY / MM DD YYYY / YYYY MM DD) / Date separator). If you switch on **Update with time zone**, the time will be automatically updated when the time zone changes (see above: **Set home city**).

"SETTINGS" MENU

- **Schedule power on/off:** You can set up to four automatic switch on/off times for your phone.
 - Select **Enable** or **Disable** and press **OK**.
 - Select an entry and press **OK**.
 - Under "Status", using the arrow keys ◀/▶ select "Activate" to turn the function on.
 - Select **Power on** or **Power off** using the arrow keys ◀/▶ .
 - Then enter the desired time and press **Save**.

Note: Please note that depending on the settings entering the SIM PIN is required when switching the phone on. See also -> Security settings / SIM lock, page 72.

- **Language:** Select a language for the display.
- **Display**
 - **Wallpaper:** Select a wallpaper for the standby mode.
 - **Power on display/Power off display:** Select an



- animation which should be played when powering the phone on/off.
- **Sub LCD Clock type:** Select a type for the clock on the external display.
 - **Dedicated key:** You can assign quick access for some menus to the navigation key ▲ /▼/◀/▶. Pressing the respective key in standby opens the assigned menu directly.
 - Select a key (**Up, Down, Left or Right**), press **Edit** and select a function from the list. Press **OK**.
 - **Night mode:** Set the time for the night mode. During the set “Night mode”-time the indicator LED signaling (see below) is deactivated.
 - **Signal LED:** Select whether the indicator LED for charging, incoming calls and new messages should be always active (On), in night mode (see above) or always deactivated (Off).

- **LCD backlight:** Set the brightness and the duration for the backlight.

Network settings

- Press **Menu**, select **Settings** -> **Network settings** and press **OK**.
 - You have the following options (separately for SIM1 / SIM2, if two SIM cards are installed):
 - SIM1/SIM2 network settings
 - **Network selection:** Select whether the network selection should be automatic or manual (**Selection mode**), start a **New search** or select a network from the list (**Select network**). When **Automatic** is selected the phone tries to connect to your SIM card's provider.
 - **Service selection:** Select GSM (2G), WCDMA (3G) or Automatic (recommended).
- Note:** 3G is a third generation mobile communications standard (UMTS / Universal Mobile Tele-



communications System), with which significantly higher data transfer rates are possible than with the second generation (2G) mobile communications standard, the GSM standard (Global System for Mobile Communications). For a mobile telephone conversation, however, it is irrelevant which standard is available; the advantages of the higher transfer rates only apply to data applications, e.g. sending a MMS.

- **Network information:** Information about the used network / provider.
- **GPRS transfer pref.:** Select **Data prefer** or **Call prefer**.

Security settings

- Press **Menu**, select **Settings** -> **Security settings** and press **OK**.
- You have the following options (separately for SIM1 / SIM2, if two SIM cards are installed):
 - **SIM1/SIM2 security:**
 - **PIN lock:** You can turn on or off the request for the SIM PIN when the phone is switched on. This is not allowed for some SIM cards/providers.
 - **Change PIN:** You can change the PIN für the SIM card.
 - **Change PIN2:** You can change the PIN2 für the SIM card.
 - **Phone security:**
 - **Phone lock:** Entering the phone lock code you can lock the phone (0000 in delivery state).
 - **Change password:** You can change the phone lock code (0000 in delivery state).



Bluetooth

- Press **Menu**, select **Settings** -> **Bluetooth** and press **OK**.
- You have the following options:
 - **Power**: Switching the function on or off. You can change the setting with the left softkey.
 - **Visibility**: Select whether your phone is visible for other Bluetooth devices when the Bluetooth function is activated. You can change the setting with the left softkey.
 - **My device**: For connecting the phone to another Bluetooth device with audio profile (e. g. headset or car kit).

Previously the "Search new device" and the "pairing" with the device has to be carried out. After selecting the device and **Options** you have the following options:

- **Connect** (with the paired device)

- **Service list**
- **Rename**
- **Authorize:** You can assign an authorisation to a Bluetooth device. This is practical, e.g. for preventing the constantly repeating query for hands-free systems in the car. To do this, set the authorisation to "Always connect".
- **Delete**
- **Delete all**
- **Search audio device:** After pressing **OK** the phone searches active bluetooth devices. Having found a device this must be paired with the phone (left soft-key: **Pair**).
- **My name:** The Bluetooth name. Can be changed.
- **Advanced:** After pressing **OK** you have the following options:
 - **Audio path:** Determine whether the audio remains on the phone or is routed to a Blue-



tooth headset.

- **Storage:** Select the preferred storage (Phone/Memory card/Always ask).
- **Sharing permission:** Select **Full control** or **Read only**.
- **My address:** The phone's Bluetooth address.

Note: If your phone is connected to a Bluetooth hands-free device you must copy your phone book entries from your SIM card to the phone (see page 36) before you can use the hands-free device to call those numbers and to enable the hands-free device to display the caller's name instead of the phone number during a call.)

Restore settings

You can reset the phone to its factory settings.

- Press **Menu**, select **Settings** -> **Restore factory settings** and press **OK**.
- Enter the phone password (0000 in delivery state) and press **OK**.
- Press **Yes** in the following confirmation query.



“Organizer” menu

Calendar

You can set the calendar from January 1970 to December 2030. With **Options** the following functions are available:

- View
- View all
- Add event
- Delete event
- Jump to date
- Go to today
- Go to weekly/monthly view
- Start of week

Calculator

The phone can support four continuous mixed arithmetic operations.

- Enter the first digit(s) for your arithmetic operation.

Enter the "dot" using the hash key.

- Press the navigation key $\blacktriangle/\blacktriangledown/\blacktriangleleft/\blacktriangleright$ to select the operation sign (+ - x \div).
- Enter the next digit(s).
- Press the button in the centre of the navigation key to carry out the operation.

Tasks

After pressing **Add** you can define tasks. There are various options available.

Alarm

You can set 5 different alarms, which will sound once, daily or only on certain days.

- Select an entry and press **Edit**.
- Switch the alarm **On** or **Off** using $\blacktriangleleft/\blacktriangleright$ and press \blacktriangledown .
- Enter the desired time.
- Select **Once**, **Everyday** or **Custom** (Options - On/Off, when ready: Options - Done).



- Select with **Alert type** what kind of alarm should be given (Ring only / Vib. only / Tone and Vib.).
- Press **Done**.

Stopwatch

The stopwatch has various features.

- **Typical stopwatch**
 - **Split timing:** Stopwatch with split timing and total time. Press **Start** to start the function, **Split** to take the split time (the total time is still displayed), **Pause** or the button in the centre of the navigation key stops the stopwatch with saving ability, and after pressing **Options** you can **Reset** or **Continue** the stopwatch.
 - **Lap timing:** Stopwatch with lap timing without total time. Press **Start** to start the function, **Lap** to take the lap time (each elapsed time since the last round timing is displayed), **Pause** or the button in the cen-

tre of the navigation key stops the stopwatch with saving ability, and after pressing **Options** you can **Reset** or **Continue** the stopwatch.

- **View records:** list of the stored records.
- **nWay stopwatch**

The nWay stopwatch is composed of 4 parallel stopwatches that you can individually start with the navigation key ▲ /▼/◀/▶.

The active timer can be started with the button in the centre of the navigation key or the left soft key (**Start**), stopped (**Pause**) and resumed (**Cont.**).

Pressing the right softkey **Reset** resets the respective timer.



“Services” menu

The items in this menu depend on your network operator. Please check with your provider for details.

"Multimedia" menu

Camera/Camcorder

- Press **Menu**, select **Multimedia** -> **Camera** and press **OK**. The installed camera will be switched on in picture mode. The current image will be shown on the display.
- When in camera mode press the **left softkey** (wrench icon) to access the options. Use the arrow keys ◀/▶ to navigate and ▲/▼ to edit the settings.

Press the left softkey to save the settings and the right softkey to exit the menu.

- **EV**: Setting the exposure.
- **Switch to photo album/video recorder**: Switch to video recorder mode or photo album.
- **Capture mode**: Normal, Continuous shot or Add frame.
- **Scene mode**: Select **Auto** or **Night**.
- **Image size**: Setting the image size for the photo.
- **Self-timer**: Setting the trigger time.



- **White balance:** Selecting the settings for white balancing.
- **Effects:** Select different (colour) effects.
- **Adv. settings**
 - **Storage:** Select whether the images should be saved on the telephone or on the memory card.
 - **Image quality:** Defining the image quality.
 - **Contrast:** Contrast setting.
 - **Time stamp:** When this function is switched on, the date and time will be superimposed on the image.
 - **Shutter sound:** Selecting the tone when activating the trigger.
 - **Anti-flicker:** Anti-flicker setting.
 - **Restore default:** Resetting all options to standard settings.
- When in video recorder mode press **Options** to see the following options:

- **EV:** Setting the exposure.
- **Switch to Video player/Camera:** Switch to video player or camera mode.
- **Scene mode:** Select **Auto** or **Night**.
- **Record size:** Setting the image size for the video.
- **White balance:** Selecting the settings for white balancing.
- **Effects:** Select different (colour) effects.
- **Record limit:** Set the maximum duration for recordings.
- **Adv. settings**
 - **Storage:** Select whether the videos should be saved on the telephone or on the memory card.
 - **Video quality:** Defining the video quality.
 - **Contrast:** Contrast setting.
 - **Record audio:** Record the original sound during video recordings.
 - **Anti-flicker:** Anti-flicker setting.



- **Restore default:** Resetting all options to standard settings.

Gallery

- Press **Menu**, select **Multimedia** -> **Gallery** and press **OK**. A gallery of the available images will be displayed.
- Press **Options**. You have the following options:
 - **View** - shows the picture with further options:
Use the keys **1** and **3** to rotate the picture, use **4** and **6** to enlarge/reduce the view. Press the left soft-key to access the following options:
 - **Play:** Starts a slide show.
 - **Use as:** Use the image as a background image, Power on/Power off display.
 - **Send:** Option for sending the image as an MMS or via Bluetooth.
 - **Image information:** information about the image.
 - **Settings:** Set the speed for the slide show.

- **Image information:** information about the image.
- **Browse style:** Select the style (List style/Matrix style).
- **Send:** Option for sending the image as a MMS or via Bluetooth.
- **Use as:** Use the image as a background image, etc.
- **Rename:** Change the name of the image.
- **Delete:** Delete the image.
- **Sort by:** Options for sorting the images.
- **Storage:** Select the storage location for images (telephone/memory card).

Video player

- Press **Menu**, select **Multimedia** -> **Video player** and press **OK**. List of the existing video files.
- Press **Options**. You have the following options:
 - **Play:** Play the video file with further options (navigation key):
 - Start/Pause: press ■.



- Stop: press the right softkey.
- Back: press ◀.
- Forward: press ▶.
- Enlarge/rotate: press * key.
- Setting the volume with the **volume keys + / -**.
- **Send**: Option for sending the video as a MMS or via Bluetooth.
- **Rename**: Change the name of the video.
- **Delete**: Delete the video.
- **Sort by**: Options for sorting the videos.
- **Storage**: Select the storage location for videos (telephone/memory card).

Sound recorder

- Press **Menu**, select **Multimedia** -> **Sound recorder** and press **OK**.
- Press **Options**. You have the following options:
 - **New record**: Record an audio file.

- **List:** List of the existing audio files with additional options:
 - **Play:** Play an audio file.
 - **Rename:** Rename an audio file.
 - **Delete:** Delete an audio file.
 - **Use as:** using the audio file as incoming ringtone.
 - **Send:** Send the audio file as a MMS or via Bluetooth.
- **Settings:** Settings for the recordings such as the storage medium (telephone/memory card), file format and audio quality.



“File manager” menu

You can edit the storage media (Phone/Memory card) in this menu. Selecting **Open** displays the respective directory structure and additional editing options are available.

Format formats the respective memory - **ATTENTION:** All content will be irrevocably deleted!

Appendix

Technical data

Quad-band	850 / 900 / 1800 / 1900 MHz	
WCDMA dual-band	900 / 2100 MHz	
Additional functions	Bluetooth, torch, emergency call function	
Battery	Li-Ion, 3.7 V, 900 mAh	
Earpiece volume	Maximal +35 dB	
Talk time	up to 5 hours	
Standby time	up to 8 days	
Dimensions	approx. 102 x 51 x 20 mm (closed) approx. 190 x 51 x 12 mm (open)	
USB connection	Micro USB, EU Standard	
Headset connection	3.5 mm jack, 4-conductor (TRRS) phone connector	
SAR values	GSM 900	Head: 0.507 / Body: 0.260
	DCS 1800	Head: 0.229 / Body: 0.077
	WCDMA 900	Head: 0.517 / Body: 0.328
	WCDMA 2100	Head: 0.431 / Body: 0.270



Service hotline

Should problems arise with the telephone, please refer to the following information first. In the event of technical problems, please contact our service hotline under tel. 0844 800 6503 (Using a UK landline, at the time of going to print: calls cost 6p for connection charge and then 5p a minute. Mobile costs may vary.) In the case of claims under the terms of guarantee, contact your sales outlet. There is a 2 year period of guarantee.

Problems and solutions

Problems

Remedy

The mobile phone cannot be switched on.

- No battery inserted.
- Battery is not charged.

The phone is requesting a PUK when I switch on the phone

If you do not have the PUK for your SIM card then contact your service provider

No signal quality is displayed.

Keypad does not function or only functions very slowly.

A message appears in the display for some functions, indicating execution/use is not possible.

No network connection. The mobile phone is in a location where there is no network service. Move to a different location or contact your service provider.

The operating speed of the display is reduced in the case of low temperatures. This is normal.

Some functions can only be used after the respective service has been applied for. Contact your service provider.

Screen frozen or no response when pressing keys.

Remove the battery for 3 minutes and try again.

No connection to the mobile telecommunication network.

Contact your service provider.

The “Insert SIM” message appears in the display.

Ensure that the SIM card has been installed correctly. Contact your service provider, if necessary.

The battery cannot be charged or is empty within a short time.

- Battery is defective.
- Place the phone correctly in the charging unit or connect the charging unit properly. Clean the contact surfaces on the mobile phone and charging

unit with a soft, dry cloth.

- Charge the mobile for 4 hours.

Tips on the battery

- Only use batteries, cables and charging unit approved by the manufacturer, otherwise the battery could be damaged.
- Do not short circuit the battery. Always leave the battery in the phone to avoid accidentally short circuiting the battery contacts.
- Keep the battery contacts clean and free of dirt.
- The battery can be charged/discharged hundreds of times but its service life is limited. Replace the battery when the battery power has decreased noticeably.

Intended use

This mobile phone is designed for use when connected to a mobile phone network. Any other use is considered unintended use. Unauthorised modification or reconstruction is not permitted. Under no circumstances open the device or complete any repair work yourself.

Areas of use

- Do not use the phone in prohibited areas.
- Switch the phone off in the vicinity of medical equipment (e.g. in hospitals).
- Do not use the phone in petrol stations or near fuels and chemicals.
- Check with the airline whether mobile phones may be used on board.

Safety Information

- Prevent exposure to smoke, dust, vibration, chemicals, moisture, heat and direct sunlight. The phone is not waterproof; therefore, keep it dry.
- Only use original accessories and batteries. Never attempt to connect other products.
- If you want to connect the phone to another device, read the manual supplied with that device with regard to any detailed safety information.
- Never attempt to connect incompatible products.
- Repairs to this device may only be completed by qualified service personnel.
- All mobile communication equipment is subject to interference which may impair its performance.
- Keep the phone and accessories out of the reach of children.
- The SIM card can be removed. Caution! Small children can swallow them.

- The ringing tone is issued via the loudspeaker. Take an incoming call first and then hold the phone to your ear. This prevents any possible hearing damage.
- Only use the phone while driving or riding a transport vehicle in road traffic when using the approved hands-free equipment and appropriately positioned holders. Ensure that no safety-related functions are interfered with when operating the phone. It is essential to observe the applicable national laws and regulations.
- Always maintain a distance of at least 15 cm to implanted heart pacemakers to prevent any possible interference. If you have had a pacemaker implanted, do not carry the phone in a breast pocket when switched on. Always hold the phone to the ear furthest away from the pacemaker during calls.
Switch the phone off immediately if you notice or suspect any adverse effects.

- This phone is hearing aid compatible. If you wear a hearing aid, however, please contact your doctor or the hearing aid manufacturer to inquire about any possible impairments through mobile communication equipment.
- Do not rely on the mobile phone as a safeguard for emergencies. For a variety of technical reasons, it is not possible to guarantee a reliable connection under all circumstances.

Power adapter plug



- Energiesparend
- Economisant l'énergie
- A risparmio di energia
- Energy efficient

The power adapter plug supplied fulfills the ecodesign requirements of the European Community (Directive 2005/32/EC). This means that the current consumption is considerably less, both in operation as well as in standby, in comparison to older power adapter plug models.

Disposal

In order to dispose of your device, take it to a collection point provided by your local public waste authorities (e.g. recycling centre). According to laws on the disposal of electronic and electrical devices, owners are obliged to dispose of old electronic and electrical devices in a separate waste container. The symbol indicates that the device must not be disposed of in normal domestic waste!



Batteries represent a hazard to health and the environment!

Never open, damage or swallow batteries or allow them to pollute the environment. They may contain toxic, ecologically hazardous heavy metals. You are legally obliged to dispose of power packs and batteries at the point of sale or in the corresponding containers provi-

ded at collection points by local public waste authorities.

Disposal is free of charge. The symbols indicate that the batteries must not be disposed of in normal domestic waste and that they must be brought to collection points provided by local public waste authorities.



Packaging materials must be disposed of according to local regulations.



Declaration of Conformity

This device fulfils the requirements stipulated in the EU directive: 1999/5/EU directive on radio equipment and telecommunications terminal equipment and the mutual recognition of their conformity.

Conformity with the above mentioned directive is confirmed by the CE mark on the device. To view the complete Declaration of Conformity, please refer to the free

download available on our web site

www.amplicomms.com

Maintenance

- Clean the housing surfaces with a soft, fluff-free cloth. Do not use any cleaning agents or solvents.

Guarantee

AMPLICOMMS equipment is produced and tested according to the latest production methods. The implementation of carefully chosen materials and highly developed technologies ensure trouble-free functioning and a long service life. The terms of guarantee do not apply when a device malfunction was caused by the mobile telecommunications network operator/provider. The terms of guarantee do not apply to the batteries or power packs used in the products. The period of guarantee is 24 months from the date of purchase.

All deficiencies related to material or manufacturing

errors within the period of guarantee will be redressed free of charge. Rights to claims under the terms of guarantee are annulled following tampering by the purchaser or third parties.

Damage caused as a result of improper handling or operation, normal wear and tear, incorrect positioning or storage, improper connection or installation or Acts of Gods and other external influences are excluded from the terms of guarantee. In the case of complaints, we reserve the right to repair defective parts, replace them or replace the entire device.

Replaced parts or devices become our property. Rights to compensation in the case of damage are excluded where there is no evidence of intent or gross negligence by the manufacturer.

If your device shows signs of defect during the period of guarantee, please return it to the sales outlet in which you purchased the AMPLICOMMS device together with the

purchase receipt. All claims under the terms of guarantee in accordance with this agreement can only be asserted at the sales outlet.

No claims under the terms of guarantee can be asserted after a period of two years from the date of purchase and hand-over of the product.

Index

3-party conference 31

A

Alarm 78

Answer mode 66

Areas of use 95

Auto redial 65

B

Battery 8

Battery status 12

Block list 65

Bluetooth 73

Boost 58

C

Calculator 77

Calendar 77

Call barring 64

Call center 50

Call divert 63

Call settings 62

Call time reminder 65

Caller ID 62

Calling 27

Calls list 28, 50

Camcorder 82

Camera 82

Cancel the emergency
call function 57

Charging the battery . . . 11

Charging via the mini
USB charging socket . . . 11

Checking the memory
status 32

Connect notice 66

D

Declaration
of Conformity 100

Dedicated key 69

Desktop charging unit . . 11

Dialling a phone number 27

Direct number	59	Guarantee	101
Display	68	H	
Disposal	99	Hands-free	29
Dual SIM settings.	67	I	
E		Icons in the display	20
Emergency call		Intended use.	95
destination	52	K	
Emergency call		Keytone.	61
numbers	53	L	
Emergency call		Language	13, 68
procedure	56	LCD backlight	70
Emergency voice		M	
message	54	Maintenance.	101
Ending a call.	14	Making a call	14
Entering text.	22	Memory card	8
External display		Memory status.	32
(sub LCD)	25	Messages menu.	41
F		Mini USB charging	
File manager	89	socket.	11
G			
Gallery.	85		

Multimedia	82	Profiles	59
Multimedia message settings	44	Q	
Multitap.	23	Quick Start Guide.	6
Muting the microphone	30	R	
N		Redial	28
Network settings	70	Reject by SMS	66
Night mode	69	Rejecting a call	14
O		Restore settings	76
One-touch dialling . 28, 37		Ring type.	60
Options whilst in a call . 30		Ringtone volume	60
Organizer	77	S	
P		Safety Information.	96
Personal emergency voice message	54	Schedule power on/off . 68	
Phone security	72	Security settings	72
Phone settings	67	Service hotline	91
Phonebook	32	Service message settings	45
Phonebook settings.	38	Service selection	70
Problems and solutions	91	Services.	81
		Signal LED	69

SIM card	8
SIM security	72
Smart text input.	22
SMS center number	42
SOS	52
Sound recorder	87
Special key functions	16
Speed dialling.	27, 36
Stopwatch.	79
Switching the mobile phone on and off	12, 25

T

Taking a call	14, 29
Tasks	78
Technical data.	90
Text message settings.	42
Time and date	13, 67
Tips on the battery.	94
Tone control	58
Torch	26

V

Video player	86
Voicemail	43
Volume	29
Volume control.	20

W

What is in the box	8
Writing and sending a SMS/MMS	46

Menu tree

Messages

- Write message*
- Inbox*
- Drafts*
- Outbox*
- Sent messages*
- Broadcast messages*
- Message settings*
 - Text message
 - SIM*
 - Memory status*
 - Text msg. counter*
 - Save sent messages*
 - Preferred storage*
 - Multimedia message
 - Data account*
 - Common settings*
 - Service message

Phonebook (Option)

- View
- Send text message
- Send multimedia message
- Call
- Edit
- Delete
- Copy
- Add to block list
- Groups

- Phonebook settings
 - Preferred storage*
 - Speed dial*
 - Memory status*
 - Copy contacts*
 - Move contacts*
 - Delete all contacts*

Call center

Call history

- Missed calls*
- Dialled calls*
- Received calls*
- Delete call logs*

Block list

Auto redial

Call time display

Call time reminder

Answer mode

SOS

SOS mode setting

Set SOS numbers

Call center number

Set outgoing voice MSG

Settings

Profiles

Direct Number

Boost Setting

Tone Control

Phone settings

- Time and date
- Schedule power on/off
- Language
- Pref. input methods
- Display
 - Wallpaper*
 - Power on display*
 - Power off display*
 - Sub LCD Clock type*
- Dedicated key
- Extra settings
 - Main LCD backlight*
 - Night mode*
 - Power On/off Mode Setting*
 - Flap LED Mode setting*
 - Incoming SMS Mode Setting*
 - Incoming Call Mode Setting*
 - Missed SMS Mode Setting*
 - Missed Call Mode Setting*

Network settings

- Network selection
- GPRS connection
- GPRS transfer pref.

Security settings

- SIM security
 - PIN lock*
 - Change PIN*
 - Change PIN2*

Phone security
Phone lock
Change password

Bluetooth

Power
Visibility
My device
My name
Preferred storage

Restore settings

Organizer

Calendar
Calculator
Alarm
Tasks
Stopwatch


Services

(depending on network provider)

Multimedia

Camera
Gallery
Video player
Sound recorder

File manager

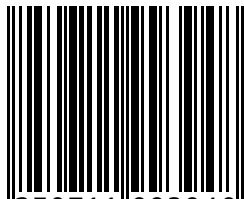

4 250711 993948



Audioline GmbH
D-41460 Neuss
04/2016 – Edition 1.1

