

Autodesk NavisWorks Manage 2009

User Manual

Autodesk, Inc.

Autodesk NavisWorks Manage 2009: User Manual

Autodesk, Inc.

Copyright © 2007 Autodesk, Inc.

Revision 6.1.46140

Autodesk, Inc. reserves the right to make changes in specification at any time and without notice. The information furnished by Autodesk, Inc. in this publication is believed to be accurate; however, no responsibility is assumed for its use, nor for any infringement of patents or other rights of third parties resulting from its use.

Autodesk, NavisWorks, AutoCAD, Revit, Inventor, and 3ds Max are registered trademarks or trademarks of Autodesk, Inc. All other brand names, product names or trademarks belong to their respective holders. All rights reserved.

LightWorks, the LightWorks logo, LWA and LWA-Enabled are registered trademarks of LightWork Design Ltd. The LWA-Enabled logo, Interactive Image Regeneration, IIR, A-Cubed, Feature-Following Anti-Aliasing and FFAA are all trademarks of LightWork Design Ltd. All other trademarks, images and logos remain the property of their respective owners. Copyright of LightWork Design Ltd. 1990-2006, 2007.

This software is based in part on the work of the Independent JPEG Group.

Contains a modified version of Open CASCADE libraries. See the license file "OpenCascadeLicense.txt" in the NavisWorks installation directory. Source code is available from download.autodesk.com/us/navisworks/OpenCascade.zip.

Contents

Part 1. Welcome to Autodesk NavisWorks Manage 2009	1
Chapter 1. Autodesk NavisWorks Manage 2009 Readme	2
Installing Autodesk NavisWorks Manage 2009	2
Customer Involvement Program	2
Product Notes	3
Autodesk Freedom	3
Resources	3
Known Problems in Autodesk NavisWorks Manage 2009	4
Credits	4
Chapter 2. New Features	5
Part 2. Installation	7
Chapter 3. Quick Start to Stand-Alone Installation	8
How to Prepare for Installation	8
How to Review System Requirements	8
How to Understand Administrative Permission Requirements	8
How to Install Multiple or Bundled Products	8
How to Locate Your Autodesk NavisWorks Manage 2009 Serial Number	8
How to Avoid Data Loss During Installation	9
How to Install and Run Autodesk NavisWorks Manage 2009	9
How to Install Autodesk NavisWorks Manage 2009	9
How to Register and Activate NavisWorks	9
How to Launch NavisWorks	10
How to Launch NavisWorks in Another Language	10
Chapter 4. Move to NavisWorks from a Previous Release	11
Chapter 5. Install NavisWorks for an Individual User	12
The NavisWorks Installation Wizard	12
System Requirements	12
Install NavisWorks	13
Register and Activate NavisWorks	16
Add or Remove Features	17
Reinstall or Repair Autodesk NavisWorks Manage 2009	17
Uninstall Autodesk NavisWorks Manage 2009	18
Chapter 6. Install NavisWorks for Multiple Users	20
Quick Start to Network Installation	20
How to Prepare for Deployment	20
How to Set Up a License Server	21
How to Set Up and Distribute the Program	25
System Requirements for a Deployment	28
Creating Network Deployments	30
Preliminary Tasks for a Network Deployment	30
Use the Installation Wizard to Set Up a Deployment	32
Point Users to the Administrative Image	39
Uninstall the Program	40
Chapter 7. Installation Troubleshooting	41
What are the minimum system requirements?	41
How can I check my graphics card driver to see if it needs to be updated?	41
What is the difference between a stand-alone license and a network license?	42
What is the benefit to using a network licensed version of the software?	42
When performing a Typical installation, what gets installed?	42
Where are my product manuals?	43
Deployment Issues	43

Is there a checklist I can refer to when performing a deployment?	43
Where should deployments be located?	43
Where can I check if service packs are available for my software?	43
Networking Issues	44
Where do I find my server name?	44
If I choose to create a log file, what kind of information does the log file contain?	44
Maintenance Issues	44
Is it possible to change the installation folder when adding or removing features?	44
When should I reinstall the product instead of a repair?	44
Do I need my original disk to reinstall my software?	44
When I uninstall my software, what files are left on my system?	44
Part 3. Basic NavisWorks Functionality	46
Chapter 8. Overview	47
Chapter 9. File Management	48
File Menu	48
New Files	48
Refreshing Files	49
Opening Files	49
Opening Files via URL	50
Appending Files	50
Merging Files	51
Saving Files	51
Saving and Renaming Files	52
Publishing Files	52
Printing	52
Printing the Current Viewpoint	52
Previewing Printouts	53
Setting up printouts	53
Deleting Files	54
Emailing Files	54
Importing Files	55
Importing PDS Tags	55
Importing PDS Display Sets	56
Importing Viewpoints XML	57
Importing Search XML	58
Importing Search Sets XML	59
Exporting Files	60
Exporting to a Piranesi EPix Format	61
Exporting an Image	61
Exporting an Animation	63
Controlling the Size of an Image	65
Exporting PDS Tags	66
Exporting Viewpoints	66
Exporting Current Search	67
Exporting Search Sets	67
Exporting Viewpoints Report	67
Exporting to Autodesk DWF	68
Exporting to Google Earth KML	68
Quitting NavisWorks	71
Chapter 10. Converting Files	72
File Readers	72
NWF Files	73
NWD Files	73
NWC Files	74
DWG and DXF Files	76
DWF Files	80
Bentley AutoPLANT Files	82

3DS Files	84
DGN and PRP Files	85
MAN Files	88
PDS Files	90
IGES Files	91
STEP Files	93
Inventor Files	95
VRML world files	96
Riegl Scan Files	98
Faro Scan Files	100
Leica Scan Files	101
Z+F Scan Files	102
ASCII Laser Scan Files	104
STL Stereolithography files	105
AVEVA Review RVM and RVS files	106
IFC files	109
Sketchup SKP files	111
File Exporters	113
AutoCAD .nwc Exporter	114
Revit .nwc Exporter	116
MicroStation .nwc Exporter	119
Viz and Max .nwc Exporter	121
ArchiCAD .nwc Exporter	125
CAD Previewing	127
NavisWorks Navigator for AutoCAD	127
Chapter 11. Publishing	129
Publishing from NavisWorks	129
Publishing from AutoCAD	131
Publishing from MicroStation	132
Freedom	134
Chapter 12. Navigating	139
Navigation Modes	139
Walking	140
Looking Around	140
Zooming	141
Zooming to a Box	141
Panning	142
Orbiting	142
Examining	142
Flying	143
Spinning on a Turntable	143
Navigation Tools	144
Viewing Everything	145
Viewing Selected Items	145
Focusing	146
Perspective Camera	146
Orthographic Camera	146
Collision Detection	147
Gravity	148
Crouching	149
Third Person View	149
Preset Viewpoints	150
Straighten	151
Set World Up	151
Camera Tilt	152
Thumbnail Views	153
Using a SpaceBall	155

Chapter 13. Selecting Items	157
Selection Trees	157
Interactive Selection	159
Select Mode	160
Select Box Mode	160
Selection Commands	161
Selection and Search Sets	162
Saving Selection and Search Sets	162
Recalling Selection and Search Sets	163
Managing Selection Sets	163
Selection Resolution	165
Selection Options	166
Chapter 14. Finding	168
Properties	168
Finding Items	169
Quick Find	171
Finding Comments	172
Chapter 15. Editing	175
Holding and releasing objects	175
Undo/Redo	176
Hiding Items	178
Making items required	178
Hiding Unselected Items	178
Overriding Item Properties	179
Overriding Color	179
Overriding Transparency	179
Overriding Transforms	180
Overriding Hyperlinks	181
Resetting Overridden Properties	181
Resetting Colors and Transparencies	181
Resetting Hyperlinks	181
Resetting Items' Positions	181
Resetting All Overridden Properties	182
Resetting All Colors and Transparencies	182
Resetting All Items' Hyperlinks	182
Revealing All Items	182
Making All Items Unrequired	182
Resetting All Items' Positions	183
Custom Properties	183
Add User Data Tab	183
Rename User Data Tab	183
Add New Property	184
Edit Property Value	184
Rename Property	185
Delete Property	185
Delete User Data Tab	185
Setting a File's Units and Transform	186
Chapter 16. Display Modes	188
Rendering Styles	188
Lighting	188
Render Modes	193
Display Primitives	194
Background Color	196
Culling Options	196
Orientation Options	198
Speed Options	199
Display Options	201

Performance Options	202
Presenter Options	204
Chapter 17. Viewpoints	207
Saving Viewpoints	207
Recalling Viewpoints	207
The Viewpoints Control Bar	208
The Viewpoint Shortcut Menus	209
The Viewpoints Control Bar Shorcut Menu	209
Viewpoints	210
Viewpoint Animations	210
Folders	211
Editing Viewpoints	211
Viewpoints Options	214
Chapter 18. Sectioning	218
Sectioning a model	218
Linking Sections	220
Chapter 19. Animation	222
The Animation Toolbar	222
The Viewpoints Control Bar	223
Creating Viewpoint Animations	224
Editing Viewpoint Animations	225
Animation Cuts	226
Playing Back Animations	226
Chapter 20. Reviewing	228
Commenting	228
Adding Comments	229
Editing Comments	231
Deleting Comments	232
Redlining	233
Adding Redlines	233
Adding Redline Tags	235
Finding Redline Tags	236
Editing Redline Tags	237
Measuring	237
Measuring Tools	238
Snapping	240
Transforming Objects	241
Measure Options	243
Hyperlinks	244
Adding Hyperlinks	245
Displaying Hyperlinks	246
Following Hyperlinks	247
Editing Hyperlinks	247
Deleting Hyperlinks	249
Hyperlinks Options	250
Smart Tags	254
Smart Tags Options	254
Collaboration	257
SwitchBack	260
Chapter 21. Object Manipulation	262
Using Snapping	262
Highlighting Objects	263
Moving Objects	265
Rotating Objects	266
Scaling Objects	267
Changing Color	268
Changing Transparency	268

Using the Manual Entry Boxes	268
Chapter 22. Interface	270
The Main Interface Components	270
The Menu Bar	270
The Toolbars	271
The Main Navigation Window	272
The Control Bars	272
The Status Bar	273
View Menu	274
Control Bars	275
Workspaces	275
Customizing Toolbars	277
Workspace Toolbar	284
Customizing the Main Window	285
Stereo Rendering	288
Scene Statistics	289
Units	290
Profiles	291
Search Directories	292
Chapter 23. Tools	293
Comparing Models	293
Chapter 24. Options	296
File Options	296
Location Options	296
Environment Options	297
Global Options	298
Configuring Global Options	299
Importing and Exporting Global Options	301
Chapter 25. DataTools	305
Adding Database Links	305
Configuring Database Links	307
Managing Database Links	310
Full Tag List	314
Chapter 26. Getting Help	317
Help Topics	317
What's This?	318
NavisWorks on the Web	318
License	319
Customer Involvement Program	321
System Info	322
About NavisWorks	322
Part 4. Using Presenter	324
Chapter 27. Overview of Presenter	325
Working with the Presenter Window	325
The Rendering Style Toolbar	326
Using the Presenter Archives	326
The User Archive	327
Additional Archives	327
Chapter 28. Rendering Scenes	329
Setting Up And Rendering A Scene	329
Exporting Rendered Output	329
Chapter 29. Presenter Materials	333
Materials Tab	333
Applying Presenter Materials	333
Removing Presenter Materials	334
Organizing and Managing Materials	335
Editing Presenter Materials	337

Advanced Materials	341
Chapter 30. Presenter Lighting	344
Lighting Tab	344
Adding and Positioning Lights	344
Organizing and Managing Lights	346
Editing Lights	348
Shadow Casting	351
Advanced Lighting	352
Soft Shadows	352
Physically Accurate Lights	352
Volumetric Lights	353
Image-based Lighting	353
Chapter 31. Presenter RPCs	356
RPC Tab	356
Chapter 32. Rendering Effects	360
Effects Tab	360
Background Effects	360
Foreground Effects	363
Chapter 33. Rendering Styles	365
Rendering Tab	365
Rendering Styles	365
Predefined Rendering Styles	366
Auto Exposure	367
Chapter 34. Texture Space	369
Chapter 35. Presenter Rules	372
Rules Tab	372
Predefined Rules	372
Custom Rules	373
Applying Presenter Rules	375
The Presenter Rules Example	375
Part 5. Object Animation	379
Chapter 36. Overview	380
Basic terminology	380
Scope	380
Chapter 37. Working with Object Animation Windows	382
The Animator Window	382
The Animator Toolbar	382
The Scene View	384
The Timeline View	386
The Manual Entry Bar	388
The Scripter Window	389
The Script View	390
The Event View	392
The Action View	393
The Properties View	395
Chapter 38. Creating Animations	397
Animation Scenes	397
Adding Scenes	397
Deleting Scenes	397
Organizing Scenes	398
Animation Sets	399
Adding Animation Sets	399
Updating Animation Sets	400
Manipulating Geometry Objects	401
Cameras	410
Adding Cameras	410
Manipulating Camera Viewpoints	411

Section Plane Set	411
Adding Section Plane Sets	411
Manipulating Sectional Cuts	411
Keyframes	412
Capturing Keyframes	412
Editing Keyframes	413
Playing Animation Scenes	417
Chapter 39. Adding Interactivity	418
Animation Scripts	418
Adding Scripts	418
Deleting Scripts	418
Organizing Scripts	419
Events	419
Adding Events	420
Testing Events	420
Configuring Events	420
Actions	424
Adding Actions	424
Testing Actions	424
Configuring Actions	424
Enabling Scripting	429
Chapter 40. Animation Exercise	430
Opening a Gatehouse Door	430
Animating a Door	430
Creating Scripts	433
Testing the Results	435
Part 6. Using TimeLiner	436
Chapter 41. Overview of TimeLiner	437
Working with the TimeLiner Window	437
The Tasks Tab	438
The Links Tab	442
The Configure Tab	444
The Rules Tab	446
The Simulate Tab	446
The Select Link Dialog	448
Field Selector Dialog	448
The Simulation Settings Dialog	450
The Overlay Text Dialog	456
Getting Started	458
Chapter 42. TimeLiner Tasks	463
Adjusting the Task View	463
User Columns	464
Creating Tasks	464
Adding Tasks Manually	465
Adding Tasks Automatically	465
Editing Tasks	466
Deleting Tasks	468
Attaching Tasks to Geometry	468
Attaching Tasks Manually	469
Using Rules to Attach Tasks	470
Validating Project Schedule	472
Chapter 43. Linking to External Project Files	474
Supported Scheduling Software	474
Microsoft Project 2000	475
Microsoft Project	475
Microsoft Project MPX	475
Primavera Project Planner	475

Primavera Project Management 4 and 5	475
Asta Power Project	476
Adding and Managing Links	476
Adding Links	476
Editing Links	477
Deleting Links	477
Building Tasks from Links	478
Synchronizing Tasks with Project Changes	478
Chapter 44. 4D Simulation	480
Playing Simulations	480
Configuring Simulations	480
Simulation Playback	480
Simulation Appearance	481
Chapter 45. Export	483
Chapter 46. TimeLiner Options	484
Chapter 47. Adding Animation	485
Overview	485
Adding Animation to an Entire Schedule	485
Adding Animation to Tasks	489
Adding Scripts to Tasks	490
Part 7. Using Clash Detective	491
Chapter 48. Overview of Clash Detective	492
Working with the Clash Detective Window	492
The Batch Tab	493
The Rules Tab	494
The Select Tab	495
The Results Tab	497
The Report Tab	500
Getting Started	502
Chapter 49. Clash Batches	503
Running Clash Tests	503
Managing batches of clash tests	503
Merging clash tests from multiple files	503
Importing clash tests	503
Exporting clash tests	504
Creating custom clash tests	506
Chapter 50. Clash Rules	508
Using Default Clash Rules	508
Adding Custom Clash Rules	508
Managing Clash Rules	511
Chapter 51. Selecting Items for Testing	513
Selecting Items for a Clash Test	513
Selecting Clash Test Options	513
Time-Based and Soft Clash Testing	514
Time-Based Clashing	514
Soft Clashing	516
Time-Based Soft Clashing	517
Running a Clash Test	518
Chapter 52. Clash Results	519
Reviewing Test Results	519
Time-Based and Soft Clash Testing Results	521
Chapter 53. Reporting Clash Results	525
Glossary	528
Index	535

Part 1. Welcome to Autodesk NavisWorks Manage 2009

Autodesk NavisWorks Manage 2009 software provides 3D construction project professionals with the control and peace of mind of advanced interference management, analysis and coordination. 3D design data created in building information modeling (BIM) applications such as the Revit family of products can be combined with other design models and comprehensively reviewed, regardless of file size or format.

In this documentation you can find information on:

- Installation
 - Basic NavisWorks Functionality
 - Presenter
 - Object Animation
 - TimeLiner
 - Clash Detective
-

Chapter 1. Autodesk NavisWorks Manage 2009 Readme

This section contains late-breaking information about Autodesk NavisWorks Manage 2009. For new and updated information about all Autodesk© products, visit our website at <http://www.autodesk.com>.

Installing Autodesk NavisWorks Manage 2009

Release Version with Beta

If you have previously installed any beta version (including RC versions) of Autodesk NavisWorks Manage 2009, you must completely uninstall these pre-release versions before installing the retail version. Instructions to do this are posted on the beta portal in the Beta Readme files.

Exporters for 64 bit CAD systems

Autodesk NavisWorks Manage 2009 includes exporters for 64 bit versions of 3D Studio Max (9, 2008, 2009) and AutoCAD based products (2008, 2009). These exporters are packaged as a separate product within the installer called "Autodesk NavisWorks 2009 (64 bit exporters)". This product will only be available for installation on a 64 bit operating system and will be installed by default.

The 64 bit exporters require Autodesk NavisWorks Manage 2009 to be installed for full functionality. Autodesk NavisWorks Manage 2009 should not be uninstalled without also uninstalling "Autodesk NavisWorks 2009 (64 bit exporters)".

Customer Involvement Program

During the first week of Autodesk NavisWorks Manage 2009 use, a new window will appear to invite you to join the Customer Involvement Program (CIP). By joining, NavisWorks will send anonymous data to Autodesk related to the use of the application.

We strongly encourage you to participate in the program, and assure you there is no risk to your privacy. We hope you will help us improve our product through this effort.

What does CIP track?

- Number of minutes you are running the software.
- Number of sessions that end due to stability issues.
- Menu actions triggered.
- Import/export actions (including file extension used).
- Scene statistics after a load or import (number of objects, faces, vertices etc.).
- Machine configuration (resolution, hard disks).
- Other Autodesk products installed.
- Plug-in (DLLS) installed with NavisWorks.

What does CIP not track?

- There is no way for CIP to track any information related to the user.
- There is also no way to track information outside of Autodesk products.

To turn CIP on and off:

- Turn CIP on or off by going to Help > Customer Involvement Program.
The dialog will appear, allowing you to switch it on or off.

Product Notes

Supported file formats and applications

- For an up to date list of supported file formats and applications go to [NavisWorks Product Center](#).

Autodesk Freedom

- A free 3D viewer for NavisWorks NWD and Autodesk DWF files, Freedom is the answer for those without design software or specialist skills that want to explore a project model.
- Freedom offers an unrestricted, easy to use interface for real-time navigation of even the largest 3D models complete with textures and materials, as well as animation playback, hyperlinks and saved viewpoints.
- Click here to [install Freedom](#).

Resources

- NavisWorks is provided with a number of sample models, which are installed in the `Examples` directory within the Autodesk NavisWorks Manage 2009 installation directory
- NavisWorks has a powerful API (Application Programming Interface) that allows developers to customize the product. The API documentation and example files are installed in the `API` directory within the Autodesk NavisWorks Manage 2009 installation directory
- NavisWorks has support for ArchVision's RPCs for use with Presenter, and is provided with a number of sample RPC files. The sample RPCs are installed in the `Presenter\lads\layla_data\textures\RPC` directory within the Autodesk NavisWorks Manage 2009 installation directory.
- NavisWorks has support for Image Based Lighting through the use of High Dynamic Range Images (HDRIs). The LightWorks User site has a number of resources for users of HDR Images:

[Access the LightWork Design HDRI Resource Page](#)

[Access the LightWork Design HDRI Starter Collection](#)

- Microsoft .NET Framework

Earlier versions of Revit (Building 8 / Structures 2) require the .NET Framework version 1.1 to be separately installed. If the .Net Framework version 1.1 is not installed an error message will be displayed when Revit is started. You can download a copy of the .Net Framework version 1.1 by searching for ".Net Framework version 1.1 redistributable package" in the downloads section of [Microsoft's website](#).

- Adobe Reader

This is free software that enables the viewing and printing of Adobe's Portable Document Format (PDF) files.

NavisWorks documentation is stored in PDF format, therefore, requiring this viewer to read them.

[Download Adobe Reader](#)

Known Problems in Autodesk NavisWorks Manage 2009

For an up-to-date list of outstanding issues in Autodesk NavisWorks Manage 2009, visit the NavisWorks website at www.autodesk.com/navisworks.

Credits

Autodesk kindly acknowledges the following contributors to the NavisWorks example models:

- National Ice Centre model courtesy of Design and Property services, Nottingham City Council, Nottingham, England.
- Scorpion TKX890 Snowmobile model courtesy of Scorpion Recreational Products, L.L.C. Manistee, Michigan, USA
- City of Bath model courtesy of the Centre for Advanced Studies in Architecture, University of Bath, England.
- Gatehouse model courtesy of Dr. David Kerr, Taylor Woodrow, Taywood House, 345 Ruislip Road, Southall UB1 2QX, England.
- Eircom Park model courtesy of HBG Construction Ltd., Merit House, Colindale, London NW9 5AF, England. Architects: RHWL Partnership, 77 Endell St. London WC2H 9DZ, England. Client: IMG Ireland, 5 Clare St. Dublin 2 Ireland.
- KLM model courtesy of Laing Ltd, Maxted House, 13 Maxted Road, Hemel Hempstead HP2 7DX, England.

Chapter 2. New Features

Autodesk NavisWorks Manage 2009 contains many new features and enhancements.

Interface Enhancements

- Object Animation

Animate objects across an animation timeline using simple but powerful object manipulation and animation tools.

Interact with objects whilst they interact with the viewer, all via new simple but powerful scripting tools.

Link object movement with TimeLiner for precise object movement scheduling based on project tasks, for more informative and realistic 4D process planning.

Link object movement with Presenter for enhanced worksite realism in exported photo-realistic animations.

Link object movement with Clash Detective to automatically check for interferences between static and moving objects, for example a door colliding with an obstructing column.

Link object movement with both TimeLiner and Clash Detective together for full time-based interference checking. Scheduling the moving of a crane on-site could coincide with the delivery of construction materials, all simulated in Autodesk NavisWorks Manage 2009, all checked for scheduling and interference issues, all adding up to a powerful, automated workspace simulation and planning tool.

- .NET GUI Modernization

Up-to-date look and feel including new icons, improved control bar docking and tabbed control bars.

- Workspaces

Allow predefined default window and menu layouts, as well as full customization and sharing of layouts across multiple PCs.

- New editor for **Global Options**.

A change from complex tabs to a logical tree structure, making finding options much simpler. Also making global options sharable across multiple PCs through import and export.

Licensing Enhancements

- FlexLM Licensing

The capability of check-in / check-out of licenses, timed-out licenses to automatically return checked-out licenses after a set period of time.

- Autodesk Standalone Licensing

Support for the well-known and well-documented Autodesk standard licensing technology.

Operating System Support

- Microsoft Vista Support
Full support for Microsoft's latest operating system.
- 64-bit Support
Support for 64-bit versions of both XP and Vista.

File Formats

- 3D Text Support
Visualization of 3D text from AutoCAD and MicroStation.
- Parametric Support
Increasing cylinder accuracy, and dramatically reducing the memory footprint of file formats containing them. Of key benefit to the MicroStation exporter and DGN file reader.
- Object Animation Playback
Playback of object animations inside NWD and NWC files that have been created in Autodesk NavisWorks Manage 2009 or Autodesk NavisWorks Simulate 2009.
- File Format Updates
 - AutoCAD 2009 (32-bit and 64-bit)
 - Revit 2009
 - MAX 2008 and 2009
 - MAX 9 (32-bit and 64-bit)
 - VIZ 2008 and 2009
 - Inventor 2009
 - ArchiCAD 11
 - Faro 4.1
 - MicroGDS 10
 - Primavera v6

Part 2. Installation

This section provides step-by-step installation instructions for Autodesk NavisWorks Manage 2009. In particular, you will learn how to:

- Install stand-alone versions of the program
 - Install network-licensed or multi-seat stand-alone versions of the program
 - Upgrade the program
 - Troubleshoot your installation
-

Chapter 3. Quick Start to Stand-Alone Installation

This section provides step-by-step instructions about how to install Autodesk NavisWorks Manage 2009 on your system. You should read the entire Standalone Installation Guide if you have any questions that are not addressed in this Quick Start section.

For information about installing network-licensed or multi-seat stand-alone versions of the program, see the Network Installation Guide.

How to Prepare for Installation

Before you install Autodesk NavisWorks Manage 2009, you must review the system requirements, understand administrative permission requirements, locate your Autodesk NavisWorks Manage 2009 serial number, and close all running applications. After you complete these tasks, you can install Autodesk NavisWorks Manage 2009.

How to Review System Requirements

Make sure that the computer on which you install Autodesk NavisWorks Manage 2009 meets the system requirements. If your system does not meet the system requirements, many problems can occur, both within Autodesk NavisWorks Manage 2009 and at the operating system level.

To review the system requirements, see “ [System Requirements](#) ”.

How to Understand Administrative Permission Requirements

To install Autodesk NavisWorks Manage 2009, you must have administrator permissions. You do not need to have domain administrative permissions. See your system administrator for information about administrative permissions.

To run Autodesk NavisWorks Manage 2009, you do not need administrator permissions. You can run the program as a limited user.

How to Install Multiple or Bundled Products

Some Autodesk packages are comprised of multiple products or are part of *multi-product bundles*. The Installation wizard for packages that are comprised of multiple products gives you the option to choose which products you want to install. During the install process, you'll be informed whether a copy of the software is already installed or you'll be warned if your system does not meet the minimum system requirements for the product. Each product is displayed on its own tabbed panel and you can individually configure them to specifically fit your needs.

If you've purchased a package that is a multi-product bundle, such as an educational or institutional package, you may have a package that includes several Autodesk products. For these bundled packages, an Installer Disk contains information for all the products in the package. The Installer Disk helps manage all of the products being installed.

How to Locate Your Autodesk NavisWorks Manage 2009 Serial Number

When you are activating Autodesk NavisWorks Manage 2009, you are prompted for your serial number. Your serial number is located on the outside of the product package. Make sure to have this number available before you activate the program so that you don't have to stop in the middle of the installation.

How to Avoid Data Loss During Installation

The Autodesk NavisWorks Manage 2009 installation process may stop if some applications (such as Microsoft® Outlook® or virus-checking programs) are running. Close all running applications to avoid possible data loss.

How to Install and Run Autodesk NavisWorks Manage 2009

To use the product, you must install the product, register and activate it, and then launch it.

How to Install Autodesk NavisWorks Manage 2009

Autodesk NavisWorks Manage 2009 ships on single DVD. The installation process has been streamlined by means of the Installation wizard.

1. Insert the NavisWorks DVD into your computer's media drive.

The Installation wizard launches in the language that best matches the settings on your computer.

If the Installation wizard does not start automatically, double-click `Setup.exe` at the root of the NavisWorks DVD.

2. In the NavisWorks Installation wizard, click Install Products.
3. Follow the directions on each installation page.

Note:

When you select Install without making any changes, the Installation wizard asks you to confirm you want to continue installing using the default configuration. If you select Yes, a Typical installation takes place.

For more information about installing NavisWorks, see “[Install NavisWorks](#)”.

How to Register and Activate NavisWorks

After NavisWorks is installed, you can initiate the registration process by launching the product. When you launch NavisWorks, the Product Activation wizard is displayed. Follow the directions in the Product Activation wizard to register the product.

Make sure you have your product serial number available. You cannot register and activate NavisWorks without it.

Note:

If you are upgrading from an earlier release of NavisWorks, use your new serial number when you register and activate the new release.

For more information about registering NavisWorks, see “ [Register and Activate NavisWorks](#) ”.

How to Launch NavisWorks

Assuming that you've followed all of the previous steps outlined in this Quick Start section, you can launch NavisWorks and start taking advantage of its new and updated features.

You can start NavisWorks in the following ways:

- **Desktop shortcut icon.** When you install NavisWorks, a NavisWorks shortcut icon is placed on your desktop. Double-click the NavisWorks icon to start NavisWorks.
- **Start menu.** On the Start menu, click Programs (Windows XP) or All Programs (Windows Vista) Autodesk > Autodesk NavisWorks Manage 2009 > Autodesk NavisWorks Manage 2009.
- **Location where NavisWorks is installed.** If you have administrative permissions, you can run NavisWorks in the location where you installed it. If you are a limited-rights user, you must run NavisWorks from the Start menu or from the desktop shortcut icon. If you want to create a custom shortcut, make sure that the Start In directory for the shortcut points to a directory where you have write permissions.

How to Launch NavisWorks in Another Language

To run NavisWorks in another of the supported languages, you need to add one of the language selector arguments to the desktop shortcut.

1. Right-click the NavisWorks desktop shortcut, and click **Properties** on the shortcut menu to open the **NavisWorks Properties** dialog box.
2. On the **Shortcut** tab, enter a space in the **Target** field after **..roamer.exe**", and then enter one of the following arguments:

-lang enu	Enter this for English localization
-lang deu	Enter this for German localization
-lang jpn	Enter this for Japanese localization
-lang rus	Enter this for Russian localization
-lang chs	Enter this for Chinese (PRC) localization

3. Click **OK** to save the changes.

Chapter 4. Move to NavisWorks from a Previous Release

If you have a previous version of NavisWorks installed on your system, you can install Autodesk NavisWorks Manage 2009 and keep other versions of the program on the same system. This is called a *side-by-side* installation.

If you've purchased a version of Autodesk NavisWorks Manage 2009, which is labeled as an *upgrade*, you are required to uninstall the previous version within 120 days of installing Autodesk NavisWorks Manage 2009. See your license agreement for more information.

Chapter 5. Install NavisWorks for an Individual User

This section provides instructions for installing and activating your Autodesk products for an individual user on a stand-alone computer. For information about installing network-licensed or multi-seat stand-alone versions of the program, see the Network Installation Guide.

The NavisWorks Installation Wizard

The Autodesk NavisWorks Manage 2009 Installation Wizard contains all installation-related material in one place. From the Installation wizard, you can access user documentation, install the product and supplemental tools, view support solutions, and learn about deploying your product on a network.

Note:

Autodesk NavisWorks Manage 2009 ships on a single DVD. Insert the Autodesk NavisWorks Manage 2009 DVD in your DVD drive to start the installation process. Follow the prompts to complete the installation. As long as the DVD is in the drive, you can access documentation by clicking the documentation link.

- **Review installation documentation before you install.** Click the Read the Documentation link to launch the Help system, and read the Welcome to Autodesk NavisWorks Manage 2009 and Installation sections.
- **Install Autodesk NavisWorks Manage 2009.** From the Installation wizard, click Install Products. Follow the on-screen instructions to complete the installation.

System Requirements

Before you install your product on a stand-alone computer, make sure that your computer meets the minimum system requirements. See the following table for hardware and software requirements.

Hardware and software requirements	
Hardware/Software	Requirement
Operating system	Windows®XP® Professional, SP 2 (recommended)
	Windows XP Home, and Professional, SP 2
	Windows Vista Ultimate
	Windows Vista Enterprise
	Windows Vista Business
	Windows Vista Home Premium
	Windows Vista Home Basic
Web browser	Microsoft® Internet Explorer 6.0, SP 1 (or later)
Processor	AMD®Athlon®, 3.0 GHz or faster (minimum)
	Intel®Pentium® IV, 3.0 GHz or faster (recommended)

Hardware and software requirements	
Memory (RAM)	512 MB (minimum)
	2 GB or greater (recommended)
Display card	128 meg, 1024 x 768 VGA, True Color (minimum)
	256 meg or greater - 1280 x 1024 32-bit color video display adapter, True Color (recommended)
Hard disk	Installation 800 MB
Pointing device	MS-Mouse compliant
DVD-ROM	Any speed (for installation only)
Optional hardware	Open GL [®] -compatible 3D video card
	Printer or plotter
	Modem or access to an Internet connection
	Network interface card

Install NavisWorks

This section contains information for installing Autodesk NavisWorks Manage 2009 on a stand-alone computer. You must have administrative permissions to install NavisWorks.

Your DVD is required to install NavisWorks. Insert the Autodesk NavisWorks Manage 2009 DVD to start the installation process. Follow the prompts to complete the installation.

To install NavisWorks using default values on a stand-alone computer

This is the fastest means of installing NavisWorks on your system. Only default values are used which means it is a typical installation being installed to C:\Program Files\Autodesk NavisWorks Manage 2009.

1. Insert the Autodesk NavisWorks Manage 2009 DVD into your computer's DVD drive.

The Autodesk NavisWorks Manage 2009 Installation wizard launches in the language that best matches the settings on your computer.

If the Installation wizard does not start automatically, double-click `Setup.exe` at the root of the NavisWorks DVD.

2. In the Installation wizard, click Install Products.
3. Select the product you want to install and click Next.
4. Review the Autodesk software license agreement for your country or region. You must accept this agreement to proceed with the installation. Choose your country or region, click I Accept, and then click Next.

Note:

If you do not agree to the terms of the license and want to terminate the installation, click Cancel.

5. On the Personalize the Products page, enter your serial number and user information and click Next.

The information you enter here is permanent and is displayed in the Autodesk NavisWorks Manage 2009 window (accessed by **Help > About**) on your computer. Because you can't change this information later without uninstalling the product, make sure you enter the correct information now.

6. On the Review - Configure - Install page, click Install to begin installing. Then select Yes, to continue installing using the default configuration.

The wizard does the following:

- Uses a Typical installation, which installs the most common application features.

To see which features are included in a Typical installation, refer to “ [When performing a Typical installation, what gets installed?](#) ”.

- Installs NavisWorks to the default install path of C:\Program Files\Autodesk NavisWorks Manage 2009 .

7. On the Installation Complete page, select View the Autodesk NavisWorks Manage 2009 Readme if you want to launch the Autodesk NavisWorks Manage 2009 Help system.

8. Click Finish.

To install NavisWorks using using configured values on a stand-alone computer

With this installation method, you can fine-tune exactly what gets installed by using the Configure option. You can alter the installation type, the installation path and the license type.

1. Insert the Autodesk NavisWorks Manage 2009 DVD into your computer's DVD drive.

The Autodesk NavisWorks Manage 2009 Installation wizard launches in the language that best matches the settings on your computer.

If the Installation wizard does not start automatically, double-click `Setup.exe` at the root of the NavisWorks DVD.

2. In the Installation wizard, click Install Products.
3. Select the product you want to install and click Next.
4. Review the Autodesk software license agreement for your country or region. You must accept this agreement to proceed with the installation. Choose your country or region, click I Accept, and then click Next.

Note:

If you do not agree to the terms of the license and want to terminate the installation, click Cancel.

5. On the Personalize the Products page, enter your serial number and user information and click Next.

The information you enter here is permanent and is displayed in the Autodesk NavisWorks Manage 2009 window (accessed by **Help > About**) on your computer. Because you can't change this information later without uninstalling the product, make sure you enter the correct information now.

6. On the Review - Configure - Install page, click Configure to make configuration changes such as changing the installation type, or changing the installation path.
7. On the Select License Type page, select Stand-Alone License, and then click Next.
8. On the Select the Installation Type page, you can choose to make the following configuration changes:

- **Select Features To Install** - use the check boxes to select only the features you want to install:

Autodesk NavisWorks Manage 2009 - contains full set of Autodesk NavisWorks Manage 2009 files.

API - contains the Component Object Model interface for customising and extending the NavisWorks functionality.

Sample RPC's - contains several Rich Photorealistic Content files for the Presenter tool.

Example NWD files - contains various feature sample files.

PDF manual - contains the Autodesk NavisWorks Manage 2009 user guide in PDF format.

Note:

To view or print any files with an extension of .pdf, Adobe® Reader must be installed on your computer. If you do not have Adobe Reader, you can download the latest version by visiting <http://www.adobe.com>.

Exporter Plugins - contains various exporter plugins. These plugins enable models to be exported into native Autodesk NavisWorks Manage 2009 file format from within the corresponding 3rd party software. By default, the Installation wizard will enable the exporter plugins for all 3rd party products installed on your PC.

Note:

For some plugins, you must have the 3rd party software installed on your PC to be able to select them.

-
- **Product Install Path** - use the browse button to select the drive and location where Autodesk NavisWorks Manage 2009 will be installed.

If you are enabling exporter plugins for the 3rd party software, which is not installed on your PC, you must use this field to browse to the correct location in the software installation directory.

Click Next to proceed with the configuration process.

9. On the Configuration Complete page, click Configuration Complete to return to the Review - Configure - Install page. Then, click Install.
10. On the Installation Complete page, select View the Autodesk NavisWorks Manage 2009 Readme if you want to launch the Autodesk NavisWorks Manage 2009 Help system.
11. Click Finish.

You have successfully installed Autodesk NavisWorks Manage 2009. You are now ready to register your product and start using the program. To register the product, start Autodesk NavisWorks Manage 2009 and follow the on-screen instructions.

Note:

Autodesk does not recommend or support the distribution of an Autodesk product using imaging software. However, if you plan to use this method of distribution, please review the instructions detailed in Distribute the Product Using Imaging Software in the *Network Installation Guide*.

Register and Activate NavisWorks

The first time you start Autodesk NavisWorks Manage 2009, the Product Activation wizard is displayed. You can either activate NavisWorks at that time or run NavisWorks and activate it later. Until you register and enter a valid activation code for Autodesk NavisWorks Manage 2009, you are operating the program in trial mode and the Product Activation wizard is displayed for 30 days from the first time that you run the program. If after 30 days of running Autodesk NavisWorks Manage 2009 in trial mode you have not registered and provided a valid activation code, your only option is to register and activate Autodesk NavisWorks Manage 2009. You will not be able to run in trial mode after the 30 days expires. Once you register and activate Autodesk NavisWorks Manage 2009, the Product Activation wizard is no longer displayed.

The fastest and most reliable way to register and activate your product is by using the Internet. Simply enter your registration information and send it to Autodesk over the Internet. Once you submit your information, registration and activation occur almost instantly.

To register and activate Autodesk NavisWorks Manage 2009:

1. Click Start menu > Programs (Windows XP) or All Programs (Windows Vista) > Autodesk > Autodesk NavisWorks Manage 2009 > Autodesk NavisWorks Manage 2009.
2. In the Autodesk NavisWorks Manage 2009 Product Activation wizard, select Activate the Product, and then click Next.

This starts the Register Today process.

3. Click Get an Activation Code.
4. Click Next and follow the on-screen instructions.

If you do not have Internet access, or if you want to use another method of registration, you can register

and activate Autodesk NavisWorks Manage 2009 in one of the following ways:

- **Email.** Create an email message with your registration information and send it to Autodesk.
- **Fax or Post/Mail.** Enter your registration information, and fax or mail the information to Autodesk.

Add or Remove Features

You can add or remove Autodesk NavisWorks Manage 2009 features at any time. For example, you may have chosen a Custom installation option when you first installed NavisWorks, but now you want to add features that you did not install originally. Or you may no longer need to use all of the features that were installed originally. You can add or remove features by using the Add or Remove Programs dialog box.

To add or remove features:

1. In the Control Panel, double-click Add or Remove Programs.
2. In the Add or Remove Programs dialog box, click Autodesk NavisWorks Manage 2009, and then click Change/Remove in Windows XP or Uninstall/Change in Vista.

The Autodesk NavisWorks Manage 2009 Installation wizard re-opens in Maintenance Mode.

3. Click Add or Remove Features.
4. On the Add/Remove Features page, select a feature to install or uninstall. The icons to the left of the selections give you an indication of the action that will be taken.



- indicates a feature that was originally not installed.



- indicates a currently installed feature or a feature that you want to add.



- indicates an originally installed feature that is chosen for removal.

Note:

If you need to revert to the Autodesk NavisWorks Manage 2009 features that you selected in your original installation, click Cancel.

Click Next.

5. On the Update Autodesk NavisWorks Manage 2009 Installation page, click Next.
6. On the Update Complete page, you are informed when the updates have been performed. Click Finish.

Reinstall or Repair Autodesk NavisWorks Manage 2009

If you accidentally delete or alter files that are required by Autodesk NavisWorks Manage 2009,

NavisWorks might not perform correctly, and you might receive error messages when you try to execute a command or find a file. You can attempt to fix this problem by reinstalling or repairing Autodesk NavisWorks Manage 2009. The reinstallation or repair uses the features that were part of the installation type you chose when you initially installed the program.

To reinstall or repair Autodesk NavisWorks Manage 2009:

1. In the Control Panel, double-click Add or Remove Programs.
2. In the Add or Remove Programs dialog box, click Autodesk NavisWorks Manage 2009, and then click Change/Remove in Windows XP or Uninstall/Change in Vista.

The Autodesk NavisWorks Manage 2009 Installation wizard re-opens in Maintenance Mode.

3. Click Repair Autodesk NavisWorks Manage 2009.
4. On the Select Repair or Reinstall page, click one of the following, and then click Next:
 - **Repair My Autodesk NavisWorks Manage 2009 Installation.** This option replaces all registry entries that NavisWorks initially installed and restores Autodesk NavisWorks Manage 2009 to its default state.
 - **Reinstall My Autodesk NavisWorks Manage 2009 Installation.** This option repairs the registry and reinstalls all files from the original installation. Use this option if the Repair My Autodesk NavisWorks Manage 2009 Installation option does not solve the problem.
5. On the Repair Autodesk NavisWorks Manage 2009 page, click Next to start the process.
6. On the Repair Complete page, you are informed when the repairs have been performed. Click Finish.

Uninstall Autodesk NavisWorks Manage 2009

When you uninstall Autodesk NavisWorks Manage 2009, all components are removed. This means that even if you've previously added or removed components, or if you've reinstalled or repaired Autodesk NavisWorks Manage 2009, the uninstall removes all NavisWorks installation files from your system.

To uninstall Autodesk NavisWorks Manage 2009:

1. In the Control Panel, double-click Add or Remove Programs.
2. In the Add or Remove Programs dialog box, click Autodesk NavisWorks Manage 2009, and then click Change/Remove in Windows XP or Uninstall/Change in Vista.

The Autodesk NavisWorks Manage 2009 Installation wizard re-opens in Maintenance Mode.

3. Click Uninstall.
4. On the Uninstall Autodesk NavisWorks Manage 2009 page, click Next to remove NavisWorks from the system.

5. When informed that the product has been successfully uninstalled, click Finish.

Note:

Even though Autodesk NavisWorks Manage 2009 is removed from your system, the software license remains. If you reinstall Autodesk NavisWorks Manage 2009 at some future time, you will not have to register and re-activate the program.

Chapter 6. Install NavisWorks for Multiple Users

This section provides step-by-step instructions for installing network-licensed or multi-seat stand-alone versions of the Autodesk NavisWorks Manage 2009.

Quick Start to Network Installation

Network deployment of this program requires careful planning and execution. If you are not familiar with network administration and deployment, you should read the entire Network Installation Guide before you attempt to deploy and administer the program over a network.

How to Prepare for Deployment

To prepare for a deployment, you need to choose an installation type and a license server model.

How to Choose an Installation Type

When you set up your deployment, you need to choose the type of installation to deploy. In the Autodesk NavisWorks Manage 2009 Installation wizard, you specify one of the following installation types:

- **Network License installation.** With this type of installation, you install the program to workstations with the files and registry entries that allow the program to communicate with the Network License Manager. You also define the configuration of the Network License Manager so that the licenses can be accessed. Workstations running the program based on a network installation do not require individual activation. Licensing of this program is managed by at least one license server.

The main advantage is that you can install Autodesk NavisWorks Manage 2009 on more systems than the number of licenses you have purchased (for example, purchasing 25 licenses but installing on 40 workstations). At any one time, Autodesk NavisWorks Manage 2009 runs on the maximum number of systems for which you have licenses. This means you get a true floating license.

- **Multi-Seat Stand-Alone installation (Stand-Alone option).** Choose this type of installation for stand-alone installations where a single serial number is used for multiple seats. Multi-seat stand-alone installations do not rely upon a Network License Manager to manage product licenses; however, you can still use the Autodesk NavisWorks Manage 2009 Installation wizard to create administrative images and create deployments. Registration and activation is more automated for multi-seat stand-alone installations. After the first activation using the multi-seat stand-alone serial number, activation occurs automatically for all workstations based on this deployment, as long as your systems are connected to the Internet.
- **Stand-Alone installation (Stand-Alone option).** Choose this type of installation for stand-alone installations where a single serial number is used for a single seat. Like a multi-seat stand-alone installation, you do not use the Network License Manager to manage product licensing, but installation, registration, and activation occurs on each workstation.

If you choose one of the Stand-Alone installation types, you can proceed to [“How to Set Up and Distribute the Program”](#).

How to Choose a License Server Model

If you chose the Network Installation option, you need to decide which license server model to use to distribute the product licenses.

Note:

If you are deploying a stand-alone or multi-seat stand-alone installation type, you do not use a license server model. Proceed to [“How to Set Up and Distribute the Program”](#).

For the network installation, use one of the following license server models:

- **Single license server model.** The Network License Manager is installed on a single server, so license management and activity is restricted to this server. A single license file represents the total number of licenses available on the server.
- **Distributed license server model.** Licenses are distributed across more than one server. A unique license file is required for each server. To create a distributed license server, you must run the Network License Manager on each server that is part of the distributed server pool.
- **Redundant license server model.** You use three servers to authenticate a single license file. One server acts as the master, while the other two provide backup if the master server fails. With this configuration, licenses continue to be monitored and issued as long as at least two servers are still functional. The license file on all three servers is the same. You must install the Network License Manager on each server.

Each of these license server models is described in detail in the *Network Licensing Guide*. It is strongly recommended that you read that guide before you deploy the program. You can find the *Network Licensing Guide* by clicking the Documentation link at the lower left corner of the Autodesk NavisWorks Manage 2009 Installation wizard

How to Set Up a License Server

If you are planning to have users run the program using network licenses, you need to use the Network License Manager and the Network License Activation utility.

The Network License Manager helps you configure and manage license servers. The Network License Activation utility helps you get licenses and register them over the Internet.

How to Install the Network License Manager

The Network License Manager is used to configure and manage the license servers.

To install your Network License Manager:

1. In the Autodesk NavisWorks Manage 2009 Installation wizard, click Install Tools and Utilities.
2. On the Select the Products to Install page, select Autodesk Network License Manager and click Next.
3. Review the Autodesk software license agreement for your country or region. You must accept this agreement to proceed with the installation. Choose your country or region, click I Accept, and then click Next.

Note:

If you do not agree to the terms of the license and want to terminate the installation, click Cancel.

4. On the Review - Configure - Install page, review your product selection and the current settings. If you don't want to make any changes, click Install. If you want to change the install type or installation path, click Configure.
5. On the Select the Installation Type page, accept the default installation path (C:\Program Files\Autodesk Network License Manager\) or Browse to specify a different path. If you enter a path that does not exist, a new folder is created using the name and location you provide. Click Next.

Note:

Do not install the Network License Manager on a remote drive. When you install the Network License Manager files, you must provide a path to a local drive. You must specify the drive letter; the universal naming convention (UNC) is not supported.

6. On the Configuration Complete page, click Configuration Complete to return to the confirmation page.
7. On the Review - Configure - Install page, click Install.
8. When the Installation Complete page displays, click Finish.

How to Install and Use the Network License Activation Utility

With the Network License Activation utility, you can obtain licenses over the Internet, which saves time and effort in setting up a network-licensed version of the program. In addition, you can register your product, get automated support by email if you cannot obtain a license over the Internet, and save and migrate license files automatically.

To install your Network License Activation utility:

1. In the Autodesk NavisWorks Manage 2009 Installation wizard, click Install Tools and Utilities.
2. On the Select the Products to Install page, select Autodesk Network License Activation Utility and click Next.
3. Review the Autodesk software license agreement for your country or region. You must accept this agreement to proceed with the installation. Choose your country or region, click I Accept, and then click Next.

Note:

If you do not agree to the terms of the license and want to terminate the installation, click Cancel.

4. On the Review - Configure - Install page, review your product selection and the current settings. If you don't want to make any changes, click Install. If you want to change the install type or installation path, click Configure.

5. On the Select the Installation Type page, either accept the default installation path (C:\Program Files\Autodesk Network License Manager\Network License Activation Utility\enu\) or Browse to specify a different path. If you enter a path that does not exist, a new folder is created using the name and location you provide. Click Next.
6. On the Configuration Complete page, click Configuration Complete to return to the confirmation page.
7. On the Review - Configure - Install page, click Install.
8. When the Installation Complete page displays, click Finish.

To use your Network License Activation utility:

1. Click Start menu > Programs (Windows XP) or All Programs (Windows Vista) > Autodesk > Network License Manager > Autodesk NavisWorks Manage 2009 Network License Activation Utility.
2. On the Obtain a Network License page, review how this utility works and the requirements for using it, and then click Next.
3. On the Server Information page, enter the product serial number.

Note:

If you are modifying an existing license file or obtaining a new license for an existing product, your previously entered information might be displayed. Make sure that the serial number that is displayed is the one you want to license. If it is not, enter the correct product serial number.

4. In the License Server Model section, click a license server model. For more information about each license server model, click the ? button.
5. In the Server Host Name box, enter a server host name or click the [...] button to locate the name of each server you plan to use.
6. In the Host ID box, for each server host name you entered in the previous step, click Lookup to have the utility automatically locate the host ID for the server, or enter the host ID manually.

Note:

If your server has more than one network adapter, select the one that corresponds to a physical network adapter. To determine which adapters are physical, enter **ipconfig /all** at a Windows command prompt and view the Description field above each physical address. If there is more than one physical network adapter, you can use any one of them, as long as it was listed when you ran ipconfig /all. Logical devices such as VPN adapters, PPP adapters, and modems may be listed but are not usable for licensing.

7. If you chose Distributed Server in the License Server Model section, the Seats box is displayed. In the Seats box, enter the number of seats for each license server, and then click Next.
8. On the Confirm Server Information page, review the server information you entered, and click Next.
9. If the Register and License Your Autodesk Product page is displayed, do all of the following, and

then click Next.

In the This Product Is To Be Registered To option, select Company or Individual.

In the Select Country or Region section, select your country or region of residence.

In the Is This an Upgrade section, select Yes or No.

10. If the Registration Information page is displayed, enter your registration information, and then click Next.
11. If the Confirm Information page is displayed, review your registration information, and then click Next.
12. If the Connecting page is displayed, click Next to connect to the Internet to obtain your network license.
13. On the Licenses Received page, in the Save License File for *[computer name]* dialog box, enter the location where you want to save your license file, or click Browse to navigate to the location.
14. If you have an existing license file from another Autodesk product, select one of the following options:
 - **Insert the New License Information Into It.** The new license information is added into the existing license file.
 - **Overwrite the Existing License File.** The entire contents of the existing license file is replaced with the new license information. Select this option only if you no longer require any part of the existing license file contents.
15. Click Next.
16. On the License Activation Successful page, click Print to save a printed copy of the license information, or click Done to complete the transaction and exit the Network Activation utility.

How to Configure Your License Server

You configure a license server so that you can manage the Autodesk product licenses you received when you ran the Network License Activation utility. Configure the license server with the *lmtools.exe* utility.

You should be logged in with Administrator rights when working with the LMTOOLS utility.

To configure your license server:

1. Do one of the following:
 - Click Start menu > Programs (Windows XP) or All Programs (Windows Vista) > Autodesk > Network License Manager > LMTOOLS.
 - Right-click the LMTOOLS icon (Windows Vista) on the desktop and click Run As Administrator.

2. In the *Lmtools* program, on the Service/License File tab, select the Configure Using Services option.
3. Click the Config Services tab.
4. On the Config Services tab, in the Service Name list, select a service name or do one of the following:
 - If a service name is selected, verify that it is the one you want to use to manage licenses.
 - If no service name exists, enter the service name you want to use to manage licenses.

Note:

If you have more than one software vendor using FLEXlm® for license management, the Service Name list contains more than one option.

5. In the Path to *Lmgrd.exe* File box, enter the path to the Network License Manager daemon (*lmgrd.exe*), or click Browse to locate the file.

By default, this daemon is installed in the `\Program Files\Autodesk Network License Manager` folder.
6. In the Path to the License File box, enter the path to your license file, or click Browse to locate the file.
7. In the Path to the Debug Log File box, enter a path to create a debug log, or click Browse to locate an existing log file.
8. To run *lmgrd.exe* as a service, select Use Services.
9. To automatically start *lmgrd.exe* when the system starts, select Start Server at Power Up.
10. Click Save Service to save the new configuration under the service name you selected on the Config Services tab. Then click Yes.
11. Click the Start/Stop/Reread tab.
12. On the Start/Stop/Reread tab, do one of the following:
 - If a service has not yet been defined for Autodesk, click Start Server to start the license server.
 - If a service for Autodesk is already defined and running, click ReRead to refresh the Network License Manager with any changes made to the license file or Options file.

The license server starts running and is ready to respond to client requests.
13. Close *lmtools.exe*.

How to Set Up and Distribute the Program

Once you have prepared for deployment and you have used the Network License Manager and the Network License Activation utility, you are ready to set up and distribute this program by using the

Autodesk NavisWorks Manage 2009 Installation wizard and choosing a deployment method.

How to Create a Network Share

A network share is an installation folder that you make available to users' computers on a network. You point users to this location to install the program. Create a network share that will be used by the Autodesk NavisWorks Manage 2009 Installation wizard during the creation of a client deployment.

You must have Full Control permissions set for your shared folder when you are creating your deployment images. Read permissions are necessary to access the network share and administrative permissions on the workstation where the program is deployed.

To create your network share:

1. On the desktop of a network server, create a folder named *Autodesk*.
2. Right-click the *Autodesk* folder and click Share and Security (or Sharing).
3. In the *[folder name]* Properties dialog box, Sharing tab, select Share This Folder.
4. Specify a Share Name, such as *Autodesk* or *MyDeployments*, if necessary.
5. Click the Permissions button. In the Permissions dialog box make sure Full Control is active. Click OK.

In Vista, right-click the *Autodesk* folder and then click Share. In the Properties dialog box select Sharing and then Advanced Sharing to share the folder. Click the Permissions button to make sure Full Control is active. Click OK.

These steps are important when creating your deployment images.

6. Click OK or Close to close the Properties dialog box.
7. For each product you plan to install, create a subfolder in the *Autodesk* folder. Name each folder with the pertinent product name.

How to Use the Installation Wizard to Set Up a Deployment

You can create a deployment directly from the Autodesk NavisWorks Manage 2009 Installation wizard. From the deployment, users can install the program on their computers.

Note:

The following procedure illustrates just one of the ways you can set up a deployment. This procedure details a single-server network deployment with a Typical client setup type and no customizations. For further information about setting up deployments, see Use the Installation Wizard to Set Up a Deployment.

To use the Installation wizard to create a default deployment:

1. In the Autodesk NavisWorks Manage 2009 Installation wizard, click Create Deployments.
2. On the Begin Deployment page, you need to specify the following: administrative image location and deployment name.

In the administrative image field, enter an existing shared network location where you want to create an administrative image, or click the Browse button to navigate to a location where there is a shared network location. Users install the program from this location. If you do not know how to create a network share, see [“How to Create a Network Share”](#).

In the deployment name field, enter the new deployment's name. The name you enter here is the name of the shortcut your users will access to install the product.

Click Next.

3. On the Select the Products to Include in the Deployment page, choose the products you want to deploy and click Next.
4. Review the Autodesk software license agreement for your country or region. You must accept this agreement to proceed with the installation. Choose your country or region, click I Accept, and then click Next.

Note:

If you do not agree to the terms of the license and want to terminate the installation, click Cancel.

5. On the Product and User Information page, enter your serial number and user information and click Next.

Note:

The information you enter here is permanent and is displayed in the Autodesk NavisWorks Manage 2009 window (accessed by Help > About) on your computer. Because you can't change this information later without uninstalling the product, make sure you enter the correct information now.

6. On the General Deployment Settings page, choose if you want the deployment to create a network log and/or a client log, run the client installation in silent mode, and if you want users to participate in the Customer Involvement program.

When you choose to create a network log file, you also have to specify where the log file is created by entering either a valid UNC (universal naming convention) path or hard-coded path on your network. The network log file is optional.

Note:

The folder where the network log resides must be a shared folder where users who install the program have Change permissions. Otherwise, successes or failures for user installations cannot be written to the log file.

Choose whether you want a client log file created.

If you want to prevent users from changing installation settings when they install, select Silent mode.

If you choose participation in the Customer Involvement program, Autodesk sends helpful information about the product.

Click Next.

7. On the Review - Configure - Create Deployment page, click Create Deployment.

By clicking Create Deployment, an administrative image is created in the shared folder using the deployment options listed in the Current Settings field.

8. On the Deployment Complete page, click Finish.

How to Deploy This Program

You can choose from several methods of deploying the program. Network sharing is the default method.

- **Network Share.** Users launch the program with the shortcut icon that you created with the Installation wizard, in step 3 of the procedure How to Use the Installation Wizard to Set Up a Deployment. The program is installed on users' local computers, and a product icon appears on their desktop.

Note:

Users must have Read permissions to access the network share and administrative permissions on the workstation where this program is installed.

- **Scripting.** Installation scripts are most useful for stand-alone installation of programs on computers that are connected to a network. Scripts are also useful for installing service packs, extensions, and object enablers on a network.
- **Group Policy Objects (GPOs).** With group policy objects, this program can be advertised to any Windows XP or Windows Vista computer that is part of a Windows 2003 Server Active Directory environment.

Autodesk products are designed to be installed on a computer so that any user who logs on to the computer can run the software. If you attempt to assign this program for a specific user rather than a computer, you may encounter problems when a second specified user tries to install or uninstall a copy of the program.

- **Imaging Software.** You can use imaging software, such as Norton Ghost, to create a master image to distribute Autodesk products. Once created, the master image is then replicated to other computers throughout your facility.

Care needs to be taken since the use of imaging software can result in conflicts with the product licensing, incomplete installations, and problems with activation.

System Requirements for a Deployment

This section contains the system requirements for the location of the administrative image that you create, the network license server, and the client workstation.

Before you begin installing the program on a network, make sure that your servers and client workstations

meet the minimum recommended hardware and software requirements for a deployment.

See the following tables for administrative image, license server, and client workstation system requirements.

Hardware and software requirements for the location of the administrative image	
Hardware/Software	Requirement
Hard disk	1.5 GB (recommended)

Hardware and software requirements for the the network license server	
Hardware/Software	Requirement
Operating system	Windows Vista 32-bit
	Windows XP 32-bit
	Windows 2003 Server Edition
Computer/processor	AMD®Athlon®, 3.0 GHz or faster (minimum)
	Intel®Pentium® IV, 3.0 GHz or faster (recommended)
Network interface card	Compatible with existing Ethernet network infrastructure
Communication protocol	TCP/IP

Hardware and software requirements for client machine	
Hardware/Software	Requirement
Operating system	Windows®XP® Professional, SP 2 (recommended)
	Windows XP Home, and Professional, SP 2
	Windows Vista Ultimate
	Windows Vista Enterprise
	Windows Vista Business
	Windows Vista Home Premium
	Windows Vista Home Basic
Web browser	Microsoft® Internet Explorer 6.0, SP 1 (or later)
Processor	AMD®Athlon®, 3.0 GHz or faster (minimum)
	Intel®Pentium® IV, 3.0 GHz or faster (recommended)
Memory (RAM)	512 MB (minimum)
	2 GB or greater (recommended)
Display card	128 meg, 1024 x 768 VGA, True Color (minimum)
	256 meg or greater - 1280 x 1024 32-bit color video display adapter, True Color (recommended)
Hard disk	Installation 800 MB
Pointing device	MS-Mouse compliant
DVD-ROM	Any speed (for installation only)

Hardware and software requirements for client machine	
Optional hardware	Open GL©-compatible 3D video card
	Printer or plotter
	Modem or access to an Internet connection
	Network interface card

Creating Network Deployments

In this section, you'll find more detailed information about using the Autodesk NavisWorks Manage 2009 Installation wizard to create or modify deployments.

Preliminary Tasks for a Network Deployment

Installing this program on a network requires careful planning and execution. The deployment checklist gives you a quick summary of the type of information you should be familiar with during your deployments.

Deployment Checklist	
<input type="checkbox"/>	You have reviewed the system requirements. You must make sure that your network, servers, and client workstations meet the system requirements. See "System Requirements for a Deployment" .
<input type="checkbox"/>	You have closed all other programs and disabled anti-virus software. See "Minimize Chances of Installation Failure" .
<input type="checkbox"/>	You have identified where deployments will reside such as a shared folder for each program you plan to deploy. See "Create Shared Folders for Your Deployments" .
<input type="checkbox"/>	You have installed and activated any supporting tools and utilities. See "Install and Activate Tools and Utilities" .
<input type="checkbox"/>	You have specified whether you want to create log files that contain deployment and installation data, run silent mode, and participate in the Customer Involvement Program. See "Specify Log File Locations" .
<input type="checkbox"/>	You understand the type of license you've purchased. If you plan a network license deployment, you should also be familiar with the type of license server model you want to use and the license server names. See "Select a License Type (optional)" .
<input type="checkbox"/>	You know which features you want to include with the installation. See "Select the Installation Type (optional)" .
<input type="checkbox"/>	You know how you're going to personalize the programs during registration. Using consistent registration data is very important. See "Register the Product" .

When you have completed these tasks, you are ready to create a deployment from the Installation wizard.

Minimize Chances of Installation Failure

The Autodesk NavisWorks Manage 2009 installation process may stop if some applications, such as Microsoft Outlook or virus checking programs, are running when you are creating a deployment. Close all running applications and temporarily disable virus checking utilities.

Create Shared Folders for Your Deployments

Shared folders are required for both network license and multi-seat stand-alone methods of installation. The shared folder (*network share*) is created before you run the Installation wizard and is where product deployments are stored.

It is recommended that you name the network share folder *Deployments* on the desktop of the system where you want deployments stored. You can then add subfolders inside the shared *Deployments* folder that clearly convey the name of product you plan to deploy. This is also beneficial if you plan to deploy multiple products.

Any subfolders that are placed inside a shared folder are automatically shared.

Note:

You must have Full Control permissions set for your shared folder when you are creating your deployment images. Read permissions are necessary to access the network share and administrative permissions on the workstation where the program is deployed.

To create a shared folder:

1. On a network server, create a folder named *Deployments*.
2. Right-click the *Deployments* folder and click Share and Security (or Sharing).
In Vista, right-click the *Deployments* folder and then click Share. Click the Permissions button to make sure Full Control is active.
3. In the *[folder name]* Properties dialog box, Sharing tab, select Share This Folder.
In Vista, in the Properties dialog box, select Sharing and then Advanced Sharing.
4. Specify a Share Name, such as *MyDeployments*, if necessary.
5. Click the Permissions button. In the Permissions dialog box make sure Full Control is active. Click OK.
6. Click OK or Close to close the Properties dialog box.
7. For each product you plan to install, create a subfolder in the *Deployments* folder. Name each folder with the pertinent product name.

Install and Activate Tools and Utilities

Several supporting tools and utilities are necessary if you plan to have users run the programs with network licenses. Ancillary programs you might install include:

- Network License Manager
- Network License Activation Utility
- SAMreport Lite

Refer to the *Network Licensing Guide* for detailed information about how to set up your license servers. The *Network Licensing Guide* is available on the Documentation link of the Autodesk NavisWorks Manage 2009 Installation wizard.

Use the Installation Wizard to Set Up a Deployment

The deployment process is initiated from the Installation wizard. Deployments are created from which users can install the program on their computers. You make choices during the deployment process to create various client deployment images and deployment types that meet user requirements and company needs.

Note:

Because the deployment process provides you with numerous options for creating and customizing your deployments, there are many deployment pages you need to complete and choices you must make. You should set aside ample time to complete the deployment process in one sitting.

Start the Deployment Process

Once you start the Installation wizard, you initiate the deployment process to set up a deployment.

To start the deployment process:

- In the Autodesk NavisWorks Manage 2009 Installation wizard, click Create Deployments.

Create a Deployment

A deployment contains a Microsoft Transform (MST) file that modifies the default behavior of the installation program. As you begin a deployment, you need to select the location of your Administrative image, and a deployment name.

To create a deployment:

1. In the Installation wizard, click Create Deployments.
2. On the Begin Deployment page, enter the location of your Administrative image or click the Browse button to locate your image. Enter your deployment's name.

Note:

The deployment location should be a shared network folder. To create a shared folder, see [“Create Shared Folders for Your Deployments”](#).

3. On the Select the Products to Include in the Deployment page, select the products and click Next.
 4. Review the Autodesk software license agreement for your country or region. You must accept this agreement to proceed with the deployment. Choose your country or region, click I Accept, and then click Next.
-

Note:

If you do not agree to the terms of the license and want to terminate the installation, click Cancel.

5. On the Product and User Information page, enter the serial number and required personalization data. Click Next.
6. On the General Deployment Settings page, choose whether or not you want to create a network log and its location, and a client log. You can also run the client’s installation in silent mode and if you want users to participate in the Customer Involvement Program. Click Next.
7. If you do not want to make configuration changes on the Review - Configure - Install page, click Create Deployment. Then select Yes, to continue installing using the default configuration.
8. Select the Register products online link to register and activate your product, or click Finish and register and activate later.

Enter Product and User Information

The Product and User Information page is used to personalize the program for your company. The information you enter here is permanent and is displayed in the About Autodesk NavisWorks Manage 2009 window (accessed by Help > About) on all workstations that install your deployment. Because you can’t change this information later without uninstalling, make sure you enter the correct information now.

You must also enter your product serial number in order to run the product. The product serial number is located on the product packaging. The serial number must contain a three-digit prefix followed by an eight-digit number.

To enter your serial number and personal information:

1. On the Product and User Information page, enter your product serial number and the required personalization data.
-

Note:

Although it is required that you enter information in each box on this page, you can enter any information that you want to convey to users who install the deployment.

2. Click Next.
-

Specify Log File Locations

The program has two types of log files with which you can monitor information about deployments and installations.

- **Network log.** The network log file keeps a record of all workstations that run the deployment. On the General Deployment Settings page of the deployment process, you choose whether or not to create a network log file. The log lists the user name, workstation name, and the status of the installation. Refer to this file for status information and details about problems that users encountered during installation (for example, low disk space or inadequate permissions). The network log is named with the same name you chose for your deployment. You can specify where the log file is created by entering either a valid UNC (universal naming convention) path or hard-coded path on your network, for example `\\MyComputer\Autodesk\Autodesk NavisWorks Manage 2009`.

Note:

The folder where the network log resides must be a shared folder where users who install the program have Change permissions. Otherwise, successes or failures for user installations cannot be written to the log file.

- **Client log.** The client log contains detailed installation information for each workstation. This information may be useful in diagnosing installation problems. The client log is located in the `\Temp` directory of each client workstation.

To specify a log file location:

1. While creating a deployment, on the General Deployment Settings page, select the check box next to the Create Network Log box. Enter the name of the folder where you want the network log to be located.
2. If you want to create a client log, select the Create Client Log option.
3. Click Next.

What Is Silent Mode?

When silent mode is active and a user initiates the deployment, the installation proceeds without any explicit user input. No dialog boxes are presented that require interaction from the user. This includes all error and warning dialog boxes. Check the log file for errors that may occur in the event of installation problems.

Customer Involvement Program (CIP)

If you choose to have your clients participate in the Customer Involvement Program, Autodesk NavisWorks Manage 2009 will automatically send Autodesk information about system configuration, what features you use most, any problems that you encounter, and other information helpful to the future direction of the product.

Select a License Type (optional)

When you set up your deployment, you choose the type of installation to deploy based on the type of software license you purchased: stand-alone or network. You also select the network license server model you want to use to distribute product licenses.

Specify the license type to use during deployment

Stand-Alone license (a single serial number for a single seat). For a stand-alone license, you install, register, and activate the program on each workstation.

Network license. With this type of installation, you install the program to workstations with the files and registry entries that allow the program to communicate with the Network License Manager. You also define the configuration of the Network License Manager so that the licenses can be accessed. Workstations running the program based on a network installation do not require individual activation. Licensing of this program is managed by at least one license server.

To deploy a stand-alone license:

1. While creating a deployment, on the Select the License Type page, select Stand-alone license.
2. Click Next.

Specify the license server model during deployment

If you choose the Network license option, you need to decide which license server model to use to distribute your product licenses - single, distributed or redundant license server model.

If you are deploying a stand-alone or multi-seat stand-alone installation type, you do not use a license server model. For more information on server models, see [“How to Choose a License Server Model”](#).

To deploy a network license using a single license server model:

1. While creating a deployment, on the Select the License Type page, select the Network License option.
2. Select Single License Server as the license server model you want to use with the Network License Manager.

If you have already used the Network License Manager to create a license server model, you must select the same license server model in this step. If you have not yet used the Network License Manager to create a license server model, make sure that you select the same settings in the Network License Manager that you choose here.

For detailed information about license server models, see “License Server Models” in the *Network Licensing Guide*, located on the Documentation link of the Installation wizard.

3. Enter the server name of the server that will run the Network License Manager, or click the Browse button to locate the server. Click Next.

To deploy a network license using a distributed license server model:

1. While creating a deployment, on the Select the License Type page, select the Network License option.
2. Select Distributed License Server as the license server model you want to use with the Network License Manager.

If you have already used the Network License Manager to create a license server model, you must select the same license server model in this step. If you have not yet used the Network License Manager to create a license server model, make sure that you select the same settings in the Network License Manager that you choose here.

For detailed information about license server models, see “License Server Models” in the *Network Licensing Guide*, located on the Documentation link of the Installation wizard.

3. Enter the name of one of the servers that will run the Network License Manager, or click the Browse button to locate the server. Click Add to add the server to the Server Pool. Once all the servers are added to the Server Pool list, use the Move Up and Move Down buttons to arrange the servers in the order you want them to be searched by a user's workstation. You must enter at least two servers. Click Next.

To deploy a network license using a redundant license server model:

1. While creating a deployment, on the Select the License Type page, select the Network License option.
2. Select Redundant License Server as the license server model you want to use with the Network License Manager.

If you have already used the Network License Manager to create a license server model, you must select the same license server model in this step. If you have not yet used the Network License Manager to create a license server model, make sure that you select the same settings in the Network License Manager that you choose here.

For detailed information about license server models, see “License Server Models” in the *Network Licensing Guide*, located on the Documentation link of the Installation wizard.

3. In the First Server Name field, enter a server name of one server that will run the Network License Manager, or click the Browse button to locate the server. Enter the server names for the remaining two servers that you will use in the redundant server pool. Click Next.

Note:

If you are not sure how to obtain the server host name, see “Plan Your License Server Configuration” in the *Network Licensing Guide*, located on the Documentation link of the Installation wizard.

Select the Installation Type (optional)

As part of making your deployment choices, you can choose which features are included with the installation, and specify where the product is installed on each workstation.

You choose the location where program files are installed on the client workstation in the Product Install Path. To help decide where the product is installed, a chart of drives and disk space is provided.

To deploy a custom installation and specify a product location:

1. During the deployment, on the Select the Installation Type page select the features that you want to install in the Select Features to Install list.

Your choices are as follows:

Autodesk NavisWorks Manage 2009	Contains full set of Autodesk NavisWorks Manage 2009 files
API	Contains the Component Object Model interface for customising and extending the NavisWorks functionality
Sample RPC's	Contains several Rich Photorealistic Content files for the Presenter tool
Example NWD files	Contains various feature sample files
PDF manual	Contains the Autodesk NavisWorks Manage 2009 user guide in PDF format.
Exporter Plugins	Currently, you cannot change any of the settings. By default, the exporter plugins for all 3rd party products installed on a client PC will be automatically enabled.

2. Enter the path on the client workstation where you want to install the program, for example `C:\Program Files\Autodesk NavisWorks Manage 2009`, or click the Browse button to specify the install location.
3. Click Next.

Final Review and Complete Setup

To complete your deployment setup, confirm the settings you selected.

To confirm and complete the setup of a network deployment:

1. After making all your deployment settings, on the Review - Configure - Create Deployments page, scroll the list of current settings and verify your installation selections.
2. If you want to change any selections you made for the deployment, click the Configure button.

3. If you want a hardcopy of the installation information displayed on this page, click the Print button.
4. If you are ready to complete the deployment, click Create Deployment.
5. On the Deployment Complete page, click Finish.

To confirm and complete the setup of a multi-seat stand-alone deployment:

1. After making all your deployment settings, on the Review - Configure - Create Deployments page, scroll the list of current settings and verify your installation selections.
2. If you want to change any selections you made for the deployment, click the Configure button.
3. If you want a hardcopy of the installation information displayed on this page, click the Print button.
4. If you are ready to complete the deployment, click Create Deployment.
5. On the Deployment Complete page, click Register Products Online.
6. Registration at this stage ensures that consistent data is being used to streamline product activation. When a user installs from this deployment and runs the product, registration data is automatically referenced and the product gets activated. See ["Register the Product"](#).
7. Click Finish.

You have created an Autodesk product deployment with precise options that are specific to your group of users. You can now inform those using this deployment where the administrative image is located so that they can install the program.

Register the Product

It is very important that the registration data (for example, your company name and contact information) you supply when registering and activating your products is consistent across all Autodesk products that you install. If you enter this data incorrectly or inconsistently, you can run into activation problems.

The way products are registered depends upon the type of license you selected while creating the deployment. In order to receive an activation code, your product must be registered.

To register a network licensed deployment:

1. On the Start menu (Windows), click All Programs (or Programs) > Autodesk > Network License Manager > Autodesk NavisWorks Manage 2009 Network License Activation Utility.
2. On the Obtain a Network License page, review how this utility works and the requirements for using it, and then click Next.
3. Follow the on-screen instructions to complete the registration and activation.

To register a multi-seat stand-alone licensed deployment:

1. On the Deployment Complete page, click Register Products Online.

The Register Today page is displayed. You complete Register Today at this point so that all users have the same default registration information.

2. In the Register Today wizard, follow the on-screen instructions to complete the registration.

Note:

This process only registers the product. If users are connected to the Internet, activation occurs automatically when the product is started.

Modify a Deployment (optional)

After a deployment is created, it may be necessary to modify the deployment for some client workstations. You can apply a patch or select various custom files that are not part of the base administrative image. You can also perform modifications such as changing the installation directory from drive C to drive D.

To modify a deployment:

1. Open the shared network folder where you originally chose to place your product deployment.
2. In the Tools folder, double-click the Create and Modify a Deployment shortcut.

This re-opens the Installation wizard.

3. Click through the deployment pages and make the necessary changes.
4. After all the modifications have been made, click Create Deployment.

Point Users to the Administrative Image

When you have completed the deployment process, you are ready to have users install the newly created or modified deployment. You need to notify your users of the shortcut that was created in the administrative image. The shortcut is the same name that you chose in ["Create a Deployment"](#).

To point users to the administrative image:

- The simplest method of notifying users how to install the deployment is to email them with instructions about using the shortcut. At a minimum, the instructions need to include the location of the deployment and instructions about double-clicking the shortcut to the deployment.

Uninstall the Program

When you uninstall Autodesk NavisWorks Manage 2009, all components are removed in the process. This means that even if you have previously added or removed components, or if you have reinstalled or repaired the program, uninstalling removes all program installation files from your system.

Note:

If you plan to modify an administrative image at a later date (for example, by adding a patch to it), do not remove that image.

To uninstall the program:

1. In the Windows Control Panel, click Add or Remove Programs.
2. In the Add/Remove Programs window, select Autodesk NavisWorks Manage 2009, and then click Change/Remove.
3. When the Installation wizard opens, choose Uninstall Autodesk NavisWorks Manage 2009.
4. On the Uninstall Autodesk NavisWorks Manage 2009 page, click Next to remove NavisWorks from the system.
5. When informed that the product has been successfully uninstalled, click Finish.

Chapter 7. Installation Troubleshooting

This section outlines common issues and their solutions that may arise while performing a general installation of your product.

What are the minimum system requirements?

Before you install your product on a stand-alone computer, make sure that your computer meets the minimum system requirements.

Hardware and software requirements	
Hardware/Software	Requirement
Operating system	Windows®XP® Professional, SP 2 (recommended)
	Windows XP Home, and Professional, SP 2
	Windows Vista Ultimate
	Windows Vista Enterprise
	Windows Vista Business
	Windows Vista Home Premium
	Windows Vista Home Basic
Web browser	Microsoft® Internet Explorer 6.0, SP 1 (or later)
Processor	AMD®Athlon®, 3.0 GHz or faster (minimum)
	Intel®Pentium® IV, 3.0 GHz or faster (recommended)
Memory (RAM)	512 MB (minimum)
	2 GB or greater (recommended)
Display card	128 meg, 1024 x 768 VGA, True Color (minimum)
	256 meg or greater - 1280 x 1024 32-bit color video display adapter, True Color (recommended)
Hard disk	Installation 800 MB
Pointing device	MS-Mouse compliant
DVD-ROM	Any speed (for installation only)
Optional hardware	Open GL®-compatible 3D video card
	Printer or plotter
	Modem or access to an Internet connection
	Network interface card

How can I check my graphics card driver to see if it needs to be updated?

It is recommended that you verify and update your graphics card driver to optimize your program. Use the following procedure to identify your current graphics card driver.

To identify your graphics card driver:

1. Start Autodesk NavisWorks Manage 2009.
2. Click Help > System Info.

The Autodesk NavisWorks Manage 2009 information dialog box opens.

3. Review the information about your system including the graphics card driver and driver version, and click OK to close the dialog.

What is the difference between a stand-alone license and a network license?

Stand-alone licensed products are registered and activated to an individual workstation. While the software can be installed on multiple systems in your facility, the license only allows one system to be operational. The Portable License Utility can be used if a license needs to be transferred to another system. If you need to run more systems, you need to purchase more stand-alone licensed products, or consider converting to network licenses.

Network licensed products rely on the Network License Manager to keep track of software licenses. The software can be installed and run on multiple systems, up to the maximum number of licenses you've purchased. The Network License Manager "checks out" licenses until they are all in use. No further systems can run the program until a license is "checked in." If you need to run more systems, you can purchase additional licenses for the Network License Manager to maintain.

What is the benefit to using a network licensed version of the software?

Network licensed products are recommended for large drafting/design facilities, classrooms, and lab environments. The main advantage is that you can install products on more systems than the number of licenses you have purchased (for example, purchasing 25 licenses but installing on 40 workstations). At any one time, products will run on the maximum number of systems for which you have licenses. This means you get a true floating license. If software needs to be run on more systems, additional licenses can be purchased.

Registration and activation occurs only once and the licenses are maintained on your Network License Server.

When performing a Typical installation, what gets installed?

A Typical installation includes the following features:

Autodesk NavisWorks Manage 2009	Contains full set of Autodesk NavisWorks Manage 2009 files
API	Contains the Component Object Model interface for customising and extending the NavisWorks

	functionality
Sample RPC's	Contains several Rich Photorealistic Content files for the Presenter tool
Example NWD files	Contains various feature sample files
PDF manual	Contains the Autodesk NavisWorks Manage 2009 user guide in PDF format.

Additionally, the Installation wizard will automatically enable the exporter plugins for all 3rd party products installed on your PC.

Where are my product manuals?

All documentation created for Autodesk products are built in two different formats: PDF and CHM.

CHM files are made available during installation; click the Documentation link in the Installation wizard. To access CHM files after the product is installed, use the Help system in the product.

PDF files are available after the product is installed; they are located in the `\Autodesk NavisWorks Manage 2009\Manuals` folder.

CHM files are installed to the `\Autodesk NavisWorks Manage 2009` folder.

Deployment Issues

This section outlines common issues and their solutions with regards to software deployments.

Is there a checklist I can refer to when performing a deployment?

The *Network Installation Guide* contains a complete section that describes preliminary actions and the entire deployment process. See "[Preliminary Tasks for a Network Deployment](#)".

Where should deployments be located?

Shared folders are required for both network license and multi-seat stand-alone methods of installation. The shared folder (*network share*) is created before you run the Installation wizard and is where product deployments are stored. It is recommended that you name the network share folder *Deployments* on the desktop of the system where you want deployments stored. You can then add subfolders inside the shared *Deployments* folder that clearly convey the names of products you plan to deploy.

Any subfolders that are placed inside a shared folder are automatically shared.

Note:

You must have Full Control permissions set for your shared folder when you are creating your deployment images. Read permissions are necessary to access the network share and administrative permissions on the workstation where the program is deployed.

Where can I check if service packs are available for my software?

To find out if a patch or Service Pack is available for your product, visit the Autodesk Product Support page at <http://support.autodesk.com>.

Networking Issues

This section outlines common issues and their solutions with regards to performing a network installation or configuring your network license servers.

Where do I find my server name?

When installing a network licensed product, you must specify the name of the server that will run the Network License Manager. If you don't know the server name, you can quickly find it by opening a Windows command prompt on the system that will be the Network License Manager. At the prompt, enter *ipconfig /all* and note the Host Name entry.

If I choose to create a log file, what kind of information does the log file contain?

There are two types of log files that can be generated that monitor information about deployments and installations.

The Network log file keeps a record of all workstations that run the deployment. The log lists the user name, workstation name, and the status of the installation. Refer to this file for status information and details about problems that users may have encountered during installation.

The Client log file contains detailed installation information for each workstation. This information may be useful in diagnosing installation problems. The client log is located in the `\Temp` directory of each client workstation.

Maintenance Issues

This section outlines common issues and their solutions with regards to adding and removing features, reinstalling or repairing your installation, and uninstalling products.

Is it possible to change the installation folder when adding or removing features?

Once your product is installed, you cannot change the installation path from the Add/Remove Features page. Changing the path while adding features results in program corruption, so it is not an option.

When should I reinstall the product instead of a repair?

You should reinstall your product if you accidentally delete or alter files that are required by the program. Missing or altered files adversely affect the performance of your product and cause error messages when you try to execute a command or find a file.

If an attempt to repair an installation fails, reinstalling is the next best option.

Do I need my original disk to reinstall my software?

When performing a reinstall of the product, you do not need to have the original DVD on hand. Installation data is cached locally on your drive and that data is reused when reinstalling.

When I uninstall my software, what files are left on my system?

If you uninstall the product, some files remain on your system such as files you created or edited.

Your license file also stays on your workstation when you uninstall your product. If you reinstall on the same workstation, the license information remains valid and you do not have to reactivate the product.

Part 3. Basic NavisWorks Functionality

The core functionality of Autodesk NavisWorks Manage 2009 enables 3D CAD file aggregation and real-time navigation of digital projects of any size, and provides a comprehensive project review toolkit. In this section, you will learn how to:

- Work with files
 - Navigate and explore your designs
 - Take and publish model snapshots
 - Create visualizations and real-time walkthroughs
 - Review your design
 - Customize NavisWorks
-


Chapter 8. Overview

The basis of Autodesk NavisWorks Manage 2009 is its ability to walk through any size model in real time. NavisWorks guarantees a user-defined frame rate using a unique algorithm which automatically calculates which items to render first during navigation, based on the size of items and distance from the viewpoint. Items which NavisWorks does not have time to render are, therefore, sacrificed or "dropped out" in the name of interactivity. These items are, of course, rendered when navigation ceases. The amount of drop-out depends on several factors including: hardware (in particular graphics card and driver performance), as well as the size of the NavisWorks navigation window and the size of the model. If you wish to reduce drop-out during navigation, you have the option to reduce frame rate and, therefore, trade it off against drop-out.

When working with truly large "supermodels" in NavisWorks, you will require a sufficient amount of RAM to load and review the data. NavisWorks employs JetStream technology which optimizes the usage of the available RAM. Before running out of memory, NavisWorks will page unnecessary data to the hard disk, freeing up space for loading to continue. JetStream technology also enables the user to commence navigating the supermodel, before it has completely loaded into memory.

NavisWorks is large address aware, utilizing any additional memory assignment following the 3GB switch available on Windows XP systems.

To start NavisWorks, double-click the NavisWorks icon on the desktop, or go to **Start > Programs > Autodesk > Autodesk NavisWorks Manage 2009 > Autodesk NavisWorks Manage 2009**. The following sections will describe the interface in more detail.

NavisWorks contains full context-sensitive Help. Click , and click the toolbar button or menu option to display the appropriate Help topic. Or, alternatively, go to the **Help** menu.

Chapter 9. File Management

With Autodesk NavisWorks Manage 2009 you can open a wide variety of native 3D CAD file types without having to have the CAD application on your machine. See [Chapter 10, *Converting Files*](#) for more detailed information on these file formats and their options. File management all happens with the **File** menu and the **Standard** toolbar.



File Menu

The **File** menu includes the following items:

- New
- Refresh
- Open
- Open URL
- Append
- Merge
- Save
- Save As
- Publish
- Print
- Print Preview
- Print Setup
- Delete
- Send
- Import
- Export
- Recent Files
- Exit


New Files

This option resets NavisWorks and closes existing files.

To create a new file:

- On the **File** menu, click **New**

or

- Click **New**  on the **Standard** toolbar.

Refreshing Files

When working in NavisWorks, it is possible that others may be working on the CAD files you are currently reviewing. For example, if you are coordinating various disciplines on a project, then you may have an overall .nwf file referencing numerous design files. During the iterative stages of the project, any member of the design team could potentially be modifying their CAD files. To ensure the data you are reviewing is current, NavisWorks provides a refresh function to reload any files that have been modified since commencing the review session. This feature does not reload all of the files you have loaded, merely those modified since last opening them.

To refresh your scene with the latest versions of the currently loaded model files:

- On the **File** menu, click **Refresh**

or


- Click **Refresh**  on the **Standard** toolbar.

Opening Files

With Autodesk NavisWorks Manage 2009 you can open a wide variety of native CAD file types without having to have the CAD application on your machine. See [Chapter 10, *Converting Files*](#) for more detailed information on these file formats and their options. To open a model file:

- On the **File** menu, click **Open**

or

- Click **Open**  on the **Standard** toolbar.

Note:

The standard **Open** dialog use of **Shift** and **Control** keys allows multiple files to be selected and appended to the current set of models.

Opening Files via URL

With Autodesk NavisWorks Manage 2009 you can open NavisWorks published .nwd files via the Internet. Having uploaded your .nwd file to a web server, this file can then be opened directly from within NavisWorks. Utilizing JetStream technology, it will not be necessary for the entire file to be downloaded before navigation can commence - between 10% and 50% will be sufficient for this, depending on the file structure. (The greater the hierarchical structure of the model, the closer to 50% will be required for navigation to commence. Similarly, the lesser the hierarchical structure of the model, the closer to 10% will be required).

To open a file via a URL:

- On the **File** menu, click **Open URL**.

Appending Files

NavisWorks enables you to build up a complex scene from smaller models by appending, or uniting, multiple model files together, which can be of any type that Autodesk NavisWorks Manage 2009 supports. (See [Chapter 10, Converting Files](#) for more detailed information on these file formats and their options).

Each file has its own units and when appending more files to the scene, each file is automatically scaled to match the units of the first file loaded into the scene. Each file type has a default unit associated with it that it uses when loading files of that type. You can change this associated unit on the **Units** tab of the **Global Options** dialog (see “ [Units Options](#) ” for more detailed information). However, once a file is loaded, you can change its unit scaling by clicking **File Units and Transform** on the **Edit** menu. See “ [Setting a File's Units and Transform](#) ” for more information.

The combined set of models may be published as a single NavisWorks .nwd file using the NavisWorks Publisher. These models can then be viewed with NavisWorks Freedom™ free viewer. See “ [Publishing from NavisWorks](#) ” for more information.

You can also save the combined set of models as an .nwf file. No geometry is saved in this format, but a list of appended files, along with their path relative to the .nwf file is saved, along with any overrides, comments, redlines, viewpoints or other NavisWorks specific information. See “ [Saving Files](#) ” for more information on saving files.

To append a file:

- On the **File** menu, click **Append**

or

- Click **Append**  on the **Standard** toolbar.

Note:

The standard **Open** dialog use of **Shift** and **Control** keys allows multiple files to be selected and appended to the current set of models.


Merging Files

When merging multiple .nwf files, that each comprise the same reference files, NavisWorks will only load a single set of the combined models, along with all review markup (such as tags, viewpoints or comments) from each .nwf file. Any duplicate geometry or markup will be removed when merged. See “[NWF Files](#)” for more information on .nwf files.

Merging a file:

1. **Open** the first file to be merged, (see “[Opening Files](#)” for information on how to do this).
2. On the **File** menu, click **Merge**

or

Click **Merge**  on the **Standard** toolbar.

3. Browse to and select the file, or files, to be merged.

Note:

The standard **Open** dialog use of **Shift** and **Control** keys allows multiple files to be selected and merged with the currently loaded model.

Merging TimeLiner Data

If two or more merged files contain TimeLiner data, limited merging can be done with this data. Three scenarios are handled:

- If the two TimeLiner data sets are identical, then merging of files can occur without issue.
- If the two TimeLiner data sets are completely unrelated, merging of data in this context will not be successful.
- If the two TimeLiner data sets contain the same Primary link, then the data set with the most recent link (i.e. the newest file date) is chosen over the other. If the Primary links are different, then the data set with the highest number of tasks will be used, and links will be re-attached wherever possible.

For more information on TimeLiner, see [Chapter 41, Overview of TimeLiner](#) .


Saving Files

When you have finished reviewing a model or a set of models and are exiting NavisWorks, you are prompted to save. When saving to a NavisWorks .nwf file, only a list with pointers to the files currently loaded is saved, along with the scene's environment, the current view, clash results (if available) and viewpoints. If you want to take a snapshot of the scene, including all geometry, then you need to publish an .nwd file. See “[Publishing Files](#)” for information on how to do this.

Saving a file:

1. On the **File** menu, click **Save**

or

Click **Save**  on the **Standard** toolbar.

2. Enter a name and location for the file, if you wish to change the existing name.
3. Click **Save** to save the file or **Cancel** to return to NavisWorks without saving.

Saving and Renaming Files

This is exactly the same as the **Save** option (see “ [Saving Files](#) ”, but it gives you the opportunity to rename the file that you are saving.

Saving a file with a new name:

1. On the **File** menu, click **Save As**.
2. Enter a new name and location to store the file.
3. Click **Save** to save the file or **Cancel** to return to NavisWorks without saving.

Publishing Files

Publishing a NavisWorks .nwd file takes a snapshot of the current scene that cannot then be changed (i.e. files cannot be deleted from a published .nwd file). The file can also be used with the NavisWorks Freedom™ free viewer. This command is only available if you have the NavisWorks Publisher option.

See “ [Publishing from NavisWorks](#) ” for more information.

Printing

You can print a hard copy of the current viewpoint to any printer or plotter.

Printing the Current Viewpoint

When the print option is selected, it prints the current viewpoint scaled to fit and centered on the page.

Note:


If you would prefer to export an image for printing, see “ [Exporting an Image](#) ” for more

information.

Printing the current viewpoint:

1. On the **File** menu, click **Print**

or

Click **Print**  on the **Standard** toolbar.

2. Check the printer settings are as required, and click **OK** to print the viewpoint or **Cancel** to return to NavisWorks without printing anything.

Note:

The maximum image size is 2048x2048 pixels.

The **Properties** button controls printer-specific ink and paper settings.

Previewing Printouts

Before you print out a copy of the model you are working on, you may wish to see how it will appear.

Previewing a model before printing:

1. On the **File** menu, click **Print Preview**.
2. Use **Zoom In** and **Zoom Out** to do just that with the preview image.
3. Click **Print**, **OK** to confirm and print the image, or click **Close** to return to NavisWorks.

Setting up printouts

This option enables the setting up of paper size and orientation options.

Changing the print setup:

1. On the **File** menu, click **Print Setup**.

The **Print Setup** dialog box is displayed.

2. Make changes as required to the paper, orientation, and click the **Properties** button to change printer-specific settings.

- Click **OK** to print the image, or click **Cancel** to return to NavisWorks.

Deleting Files

This option deletes the selected files from the scene. It is only available when more than one file is appended in the scene.

Note:

You cannot delete files from within a "published" NavisWorks .nwd file (see "[Publishing Files](#)"). You can only delete appended files, whether they were appended manually, or within an .nwf file.

To delete a file:

- On the **File** menu, click **Delete**.

Note:

It is not possible to **undo** this command.

Emailing Files


NavisWorks is a communication tool, and the **Send** option makes it easy for you to send your current model along with its viewpoints. The **Send** option uses your current email exchange service and will prompt you to set one up if it cannot find one.

Sending an email will first save the current working file, so you are guaranteed to always send the latest review.

To send a file by email from within NavisWorks:

- On the **File** menu, click **Send**

or

- Click **Send**  on the **Standard** toolbar.

This accesses your email package, and sends the current file as an email attachment.

Receiving 3D Mail

If an .nwf file is received, NavisWorks will search for the appended files first using the absolute path that the sender originally saved the file with. This is useful if a team is on a local network and the files can be found using the Universal Naming Convention (UNC). Otherwise, a team not sharing a server can organize a project using the same file hierarchy and drive letter and NavisWorks can find the files this way.

If NavisWorks is unable to find the files, then the recipient can save the attached .nwf in a directory where all the appended files are located. The .nwf can then look for these files relative to its own location.

This way, you are able to move a whole sub-directory from your projects directory to a completely new location. Save the .nwf file in this new place and it will be able to search for the files from here.

Importing Files

The import option inputs Intergraph PDS review data, including:

- PDS Tags (.tag)
- PDS Display Sets (.dst)

It is also possible to import data that has been exported from previous NavisWorks sessions, including:

- Viewpoints XML (.xml)
- Search XML (.xml)
- Search Set XML (.xml)
- Clash Test XML (.xml)

See “ [Exporting Files](#) ” for more information on exporting data from NavisWorks.


Importing PDS Tags

Tag information from Intergraph PDS contains a unique ID, saved viewpoint and corresponding comments. Tag information created in NavisWorks may also be exported to be used in Intergraph PDS. See “ [Exporting Files](#) ” for more information.

Importing PDS tag files:

1. On the **File** menu, click **Import > PDS Tags**.

The **Import** dialog box is displayed.

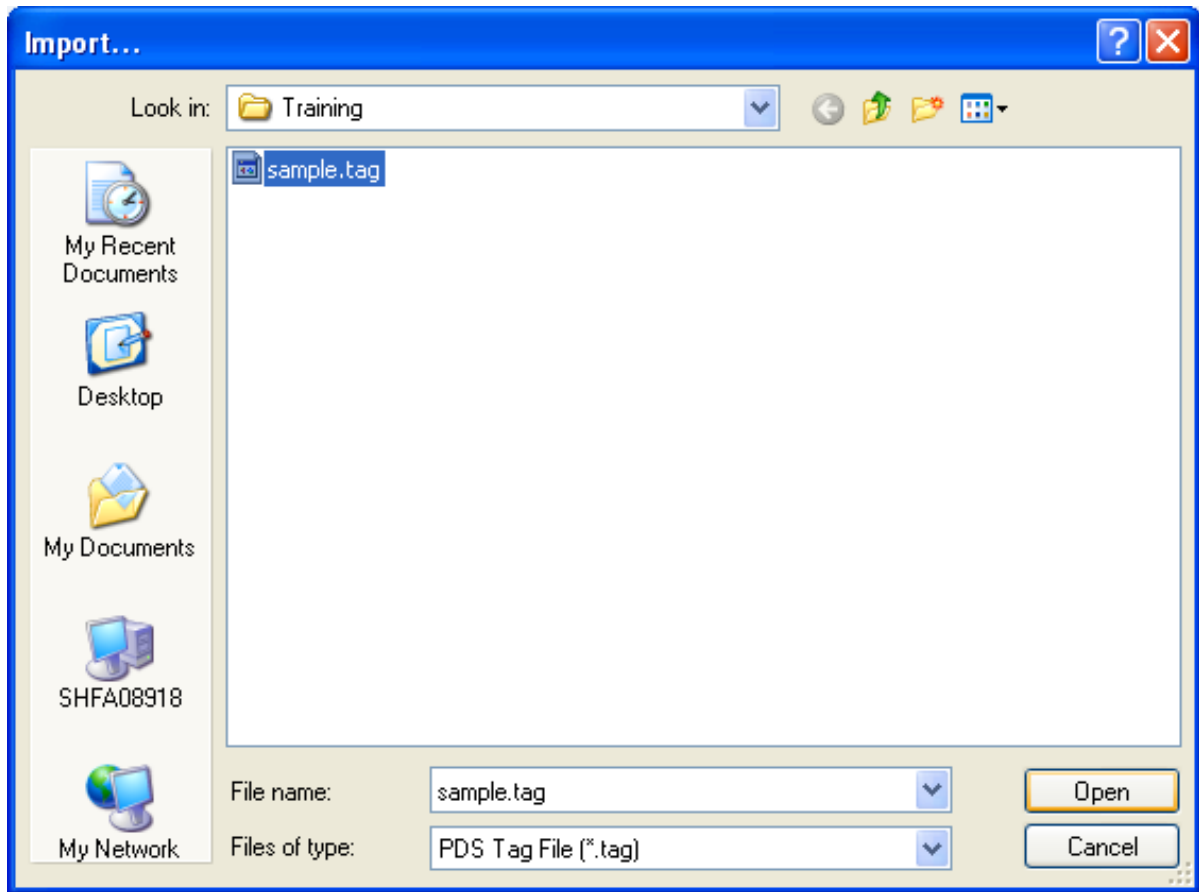

2. Locate and **Open** the .tag file to import the PDS tag data, or click **Cancel** to return to NavisWorks without importing a file.


Importing PDS Display Sets

Display sets from Intergraph PDS contain detailed criteria, defining item selections. When imported into NavisWorks, .dst files create search sets in the Selection Sets control bar. See “ [Selection and Search Sets](#) ” for more information on search sets.

Importing PDS display sets to create search sets:

1. On the **File** menu, click **Import > PDS Display Sets**.

The **Import** dialog box is displayed.

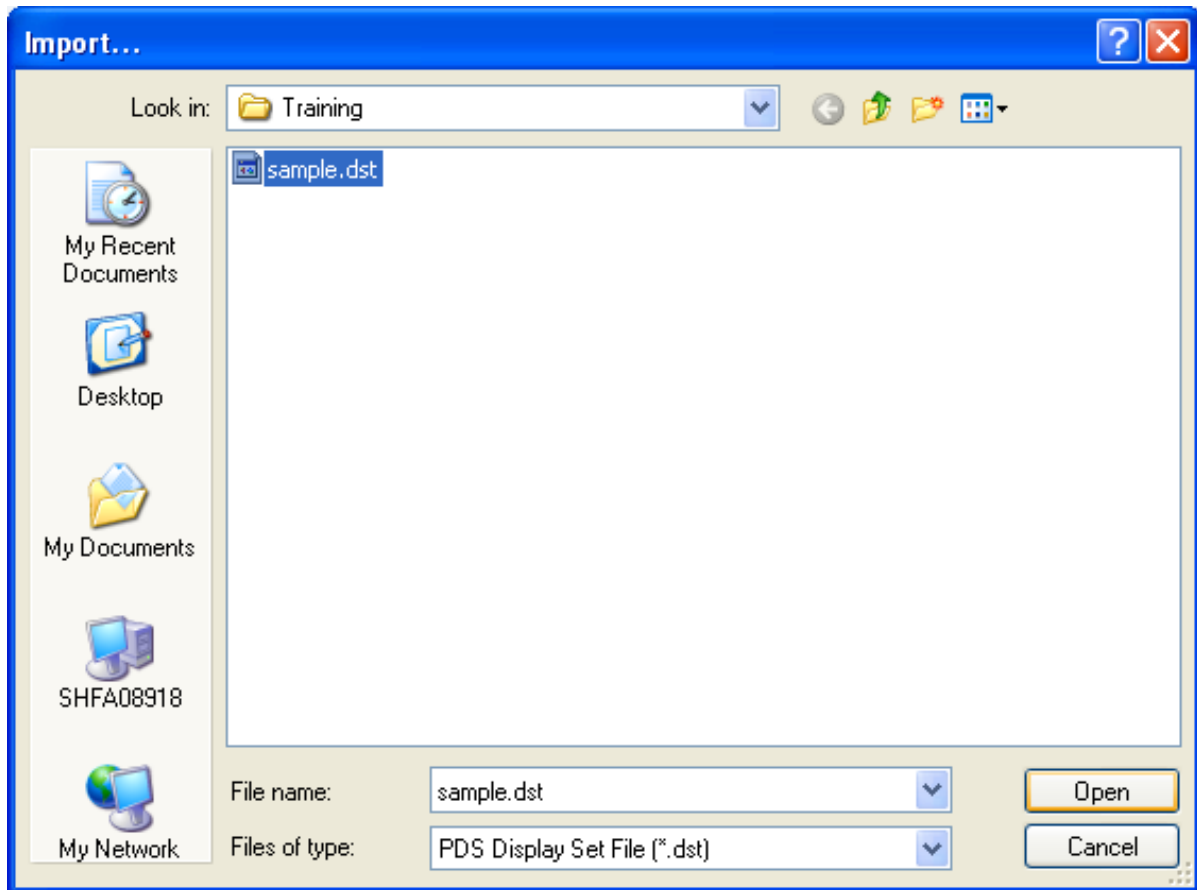

2. Locate and **Open** the .dst file to import the PDS display sets, or click **Cancel** to return to NavisWorks without importing a file.


Importing Viewpoints XML

Viewpoints can be imported into NavisWorks via an .xml file, enabling you to bring viewpoints into the current scene from another model file. For example, if you are working on different versions of the same model, you can save viewpoints in one version of the file, export them and then import them into the other version. See “[Saving Viewpoints](#)” for more information on saving viewpoints and “[Exporting Viewpoints](#)” for more information on exporting viewpoints to an .xml file.

Importing viewpoints and associated data:

1. On the **File** menu, click **Import > Viewpoints XML**.

The **Import** dialog box is displayed.

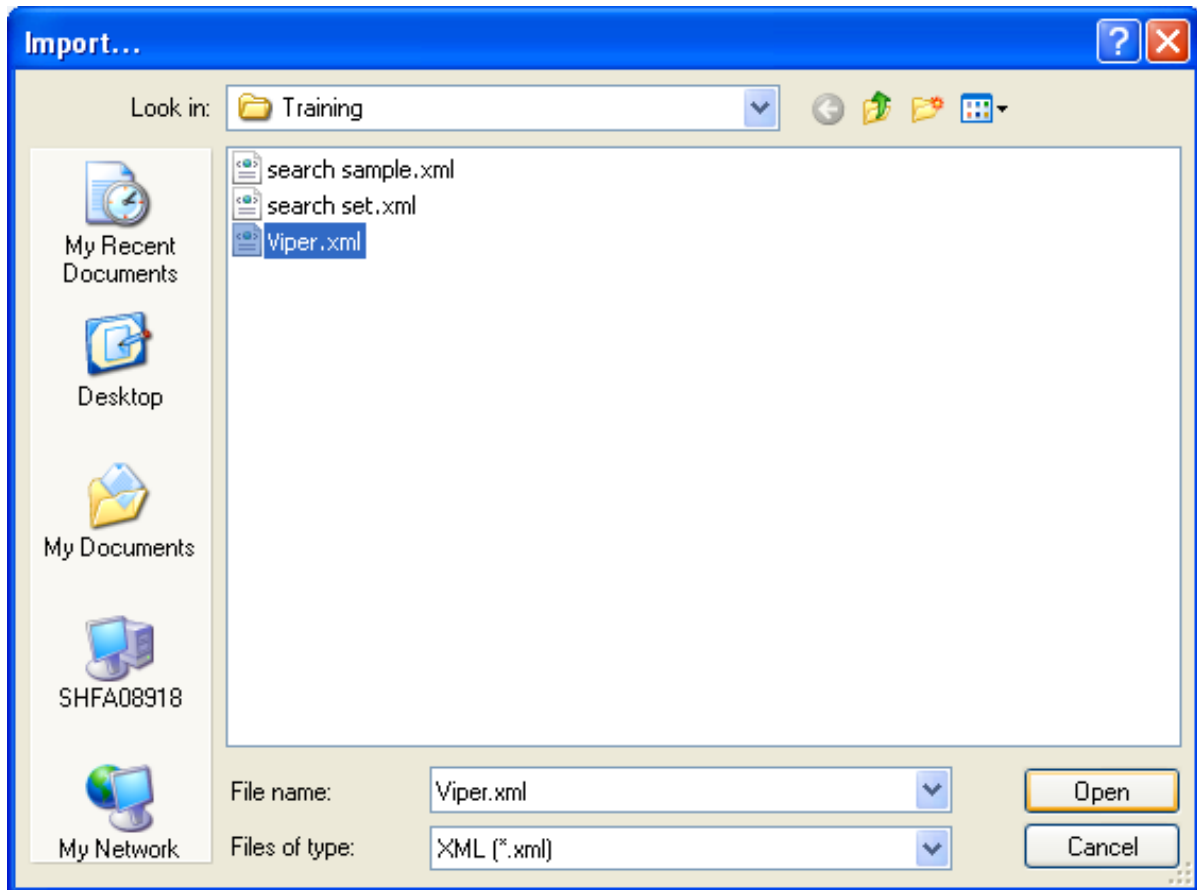

2. Locate and **Open** the viewpoints .xml file to import the viewpoints, or click **Cancel** to return to NavisWorks without importing a file.


Importing Search XML

Search criteria can be imported into NavisWorks which populates the **Find Items** control bar. The search can then be run on the current model, finding any items that match the specific criteria. See “[Finding Items](#)” for more information on searching the model for items based on their properties.

Importing search criteria into the Find Items control bar:

1. On the **File** menu, click **Import > Search XML**.

The **Import** dialog box is displayed.

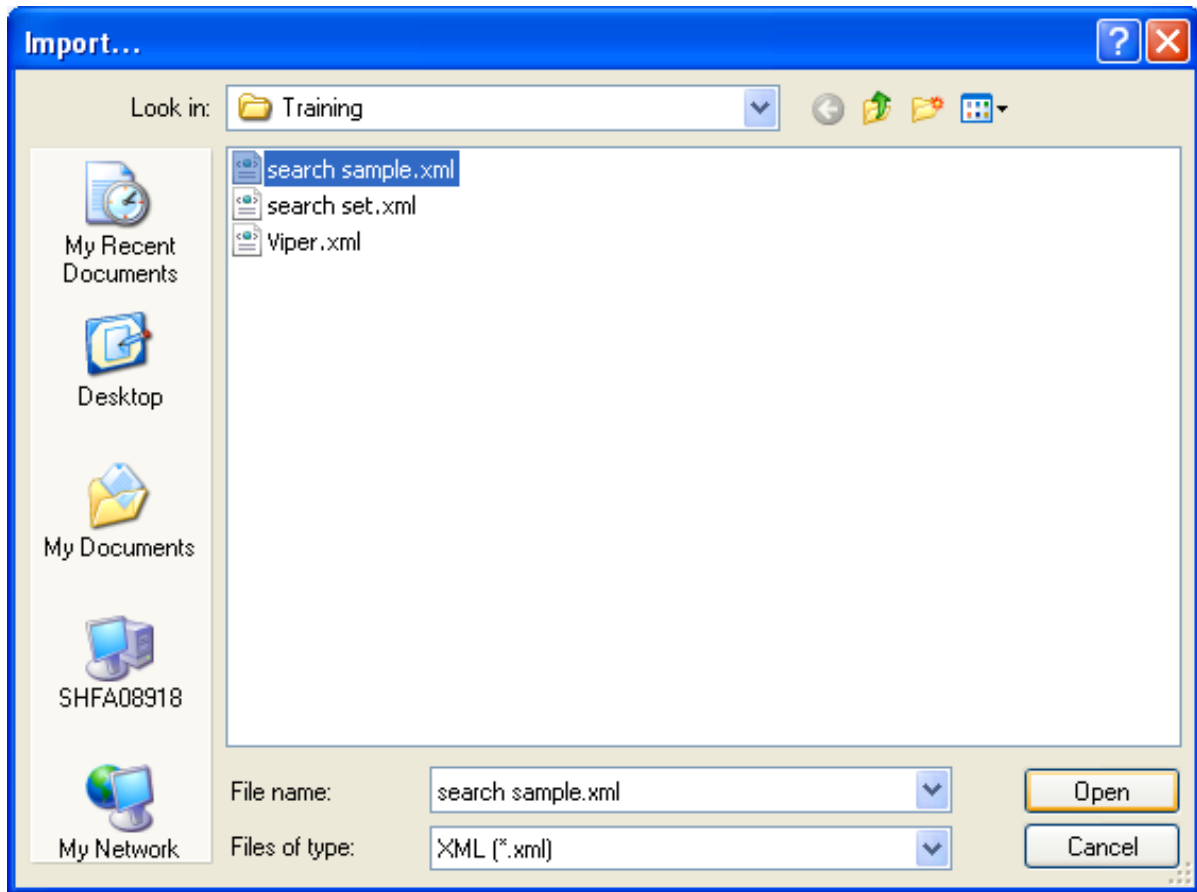

2. Locate and **Open** the search .xml file to import the search criteria into the **Find Items** control bar, or click **Cancel** to return to NavisWorks without importing a file.


Importing Search Sets XML

Search sets can be imported into NavisWorks which populates the **Selection Sets** control bar with pre-defined search sets. Selecting an imported search set will define the current Find Items criteria and search the current model accordingly. See “[Finding Items](#)” for more information on searching the model for items based on their properties.

Importing search sets into the Selection Sets control bar:

1. On the **File** menu, click **Import > Search Sets XML**.

The **Import** dialog box is displayed:

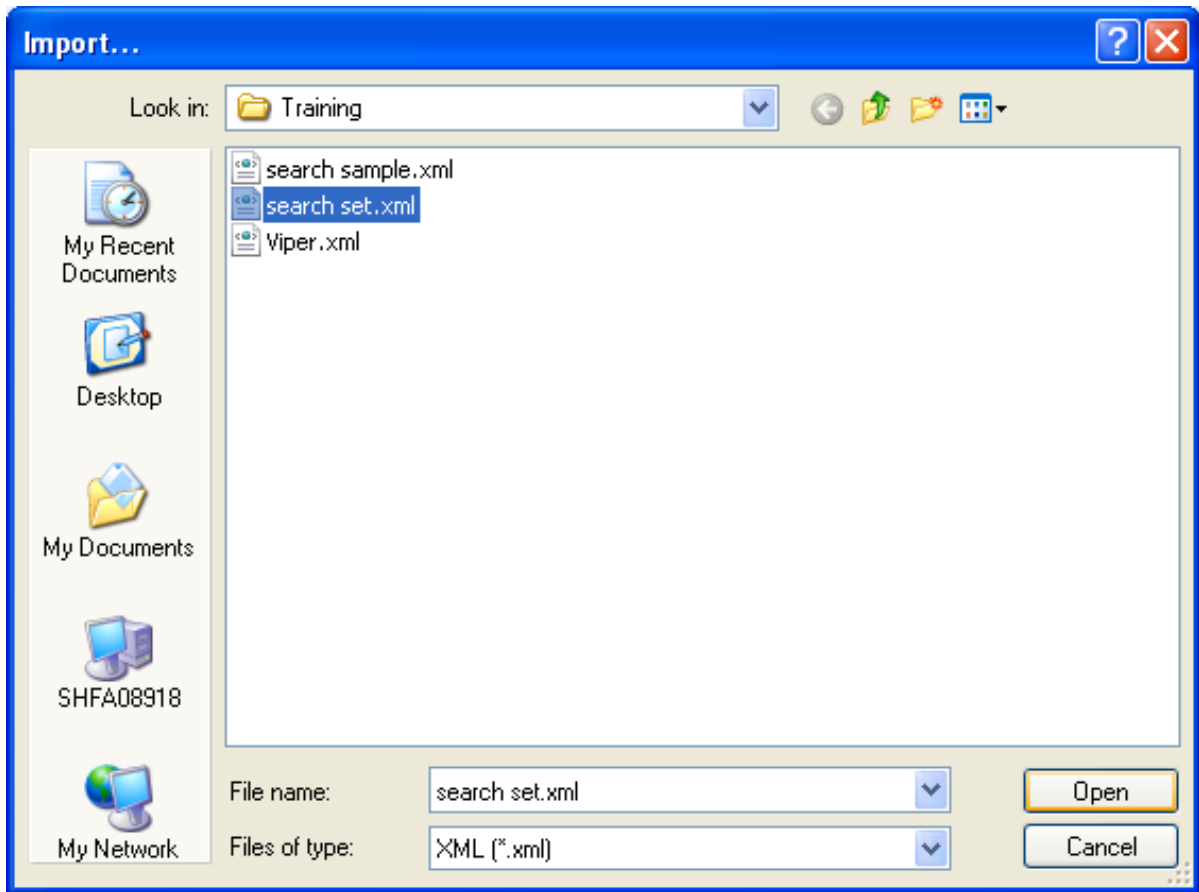

2. Locate and **Open** the search sets .xml file to import the search sets into the **Selection Sets** control bar, or click **Cancel** to return to NavisWorks without importing a file.

Exporting Files

The export option outputs the current viewpoint in one of four ways:

- Piranesi EPix format (.epx)
- Windows Bitmap format (.bmp)
- Portable Network Graphics format (.png)
- JPEG format (.jpg)
- Rendered image formats (various)

It is also possible to export an animation to:

- Windows AVI (.avi)

Or, as a sequence of individual frames, to:

- JPEG format (.jpg)
- Portable Network Graphics format (.png)
- Windows Bitmap (.bmp)

The export option additionally outputs a variety of review data, including:

- PDS Tags (.tag)
- Viewpoints XML (.xml)
- Current Search XML (.xml)
- Search Sets XML (.xml)
- Clash Test XML (.xml)
- Viewpoint Report HTML (.html)

The export option outputs a number of additional review file types:

- Autodesk DWF (.dwf)
- Google Earth KML (.kml)

Exporting to a Piranesi EPix Format

Exporting an .epx file for rendering in Informatix's Piranesi:


1. On the **File** menu, click **Export > Piranesi EPix**.
2. Click the **Browse** button to locate a destination and enter a new filename to export, if you wish to change from the existing filename and location.
3. Select the sizing options for the file to be exported. (See "[Controlling the Size of an Image](#)" for more details).
4. Click **Save** to export the file, or **Cancel** to return to NavisWorks.

Exporting an Image

Exporting to a Bitmap, PNG or JPEG

1. Display the view you want to export in the main navigation window, and click **Export > Image** on the **File** menu.


The **Image Export** dialog box is displayed.

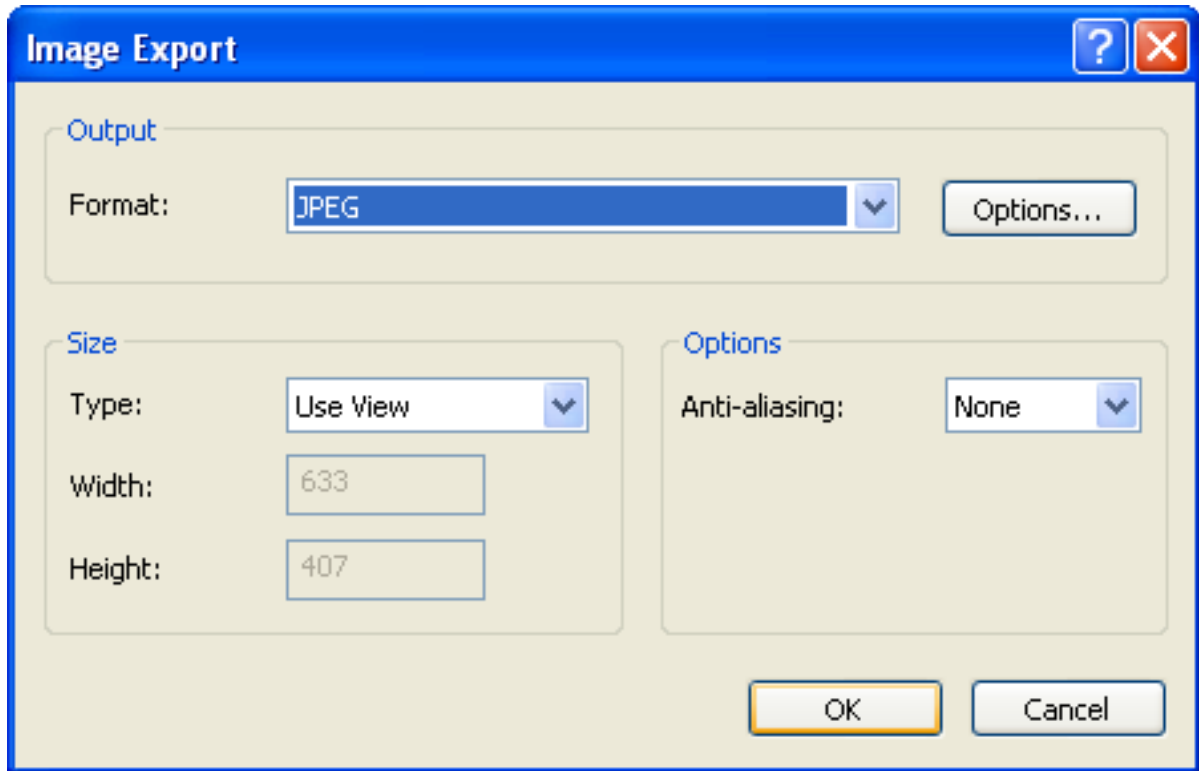

2. Select the format of the image you wish to export:


- Windows Bitmap
- Portable Network Graphics (PNG)

Select **Interlacing** and **Compression** options from the **PNG Options** dialog box:

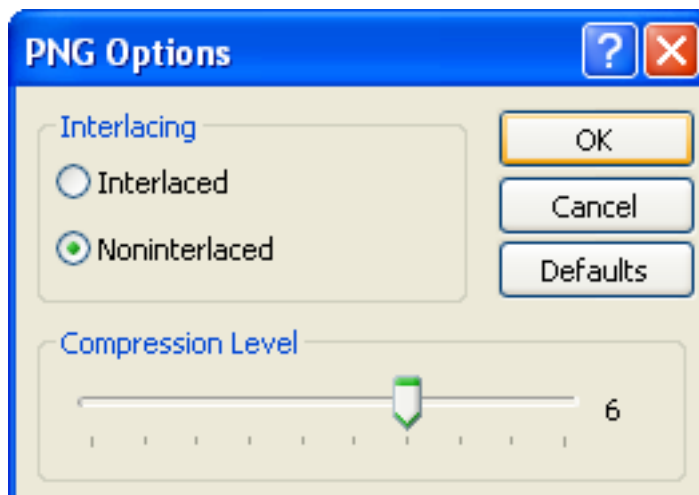

- JPEG

Select **Compression** and **Smoothing** options from the **JPEG Options** dialog box:

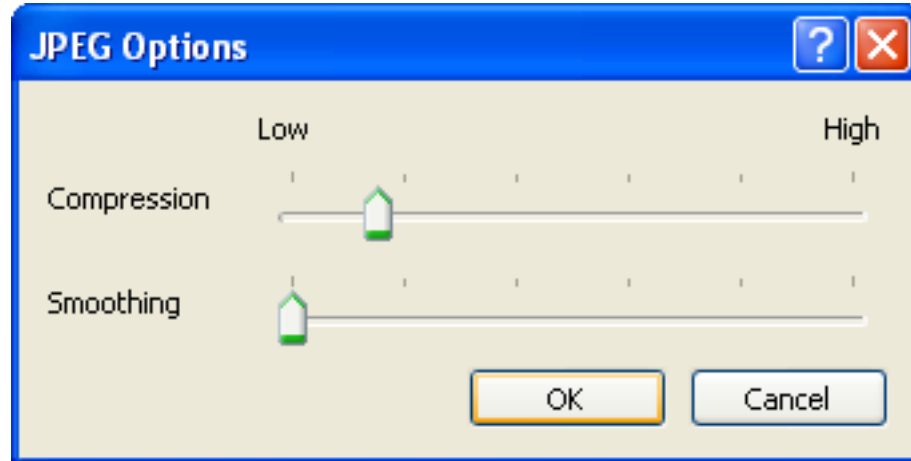


3. Select the sizing options for the file to be exported. (See “ [Controlling the Size of an Image](#) ” for more details).
4. Click **OK** to continue, or click **Cancel** to return to NavisWorks without exporting an image.
5. Enter a new name and location to store the file.
6. Click **Save** to export the file, or **Cancel** to return to NavisWorks.

Exporting an Animation

Exporting an animation to an .avi file, or a sequence of image files:

1. With an animation selected, on the **File** menu, click **Export > Animation**.

The **Animation Export** dialog box will be displayed.

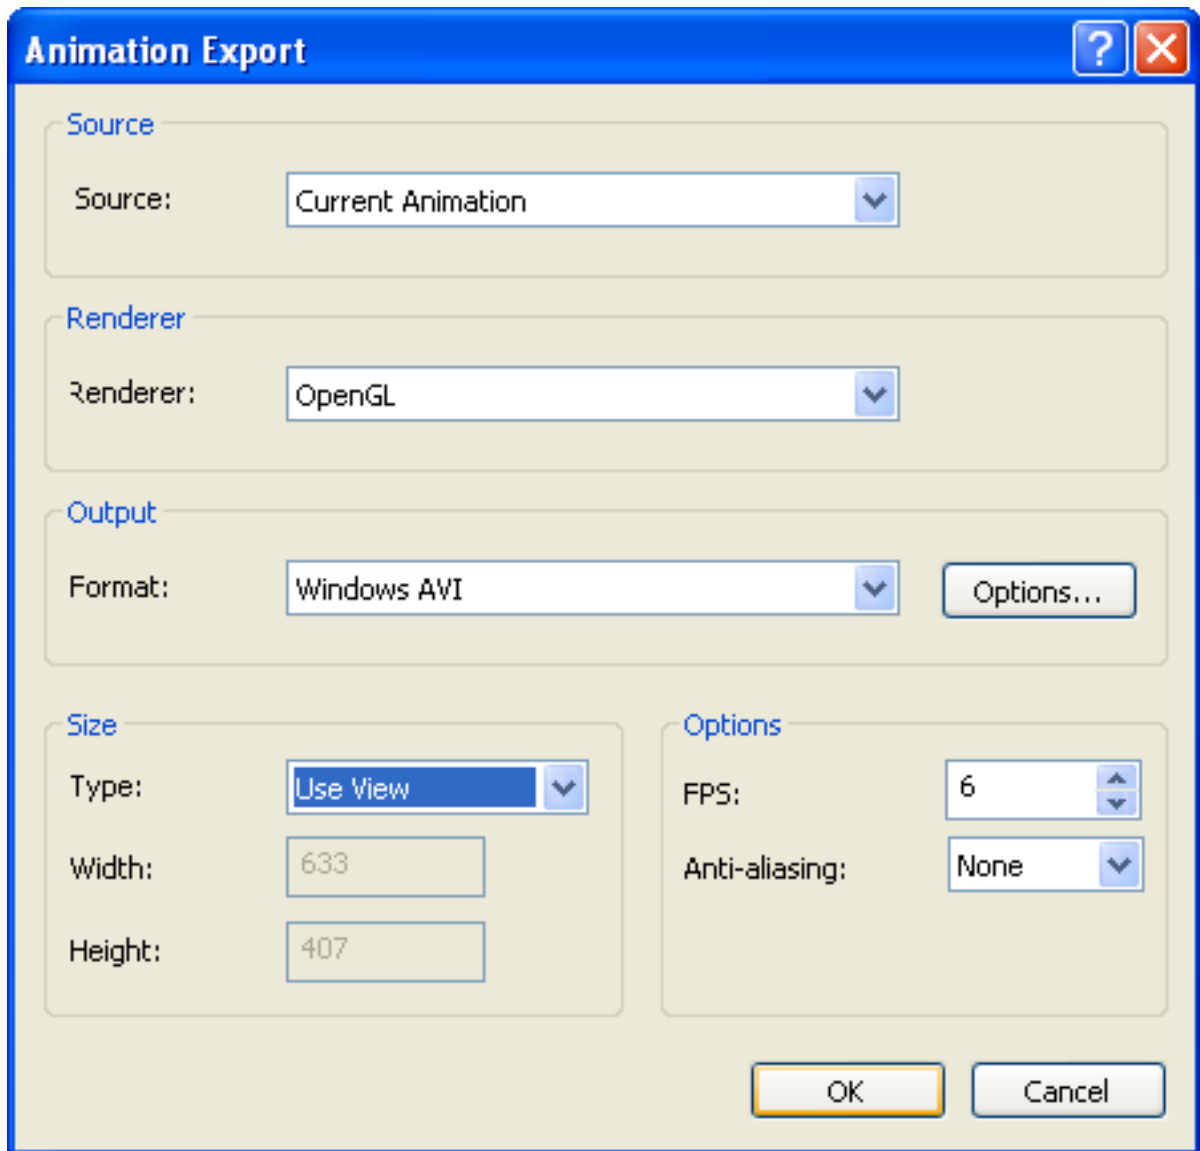

2. Select the **Source** from which you wish to export the animation.
 - Current Animation** - the currently selected viewpoint animation.
 - TimeLiner Simulation** - the currently selected TimeLiner sequence.
 - Current Animator Scene** - the currently selected object animation.
3. Select the **Renderer** with which you wish to render the exported animation.
 - OpenGL** - quickly renders your animation; this option is also ideal for previewing animations.
 - Presenter** - use this option when you require the highest rendering quality.

4. Select the **Format** in which you wish the output to be exported in:

- Windows AVI

Click **Options...** to select the **Video Compression** you require.

Note:

Clicking **Compression** will open a standard Windows™ dialog box that allows you to choose which codec to use, as well as its configuration. Only those codecs currently installed will be shown and the PC that the .avi file will be run on will also need the same codec installed.

- JPEG (sequence of static images, taken from individual frames)

Click **Options...** to set the **Compression** and **Smoothing** levels you require.

- PNG (sequence of static images, taken from individual frames)

Click **Options...** to set the **Interlacing** and **Compression** levels you require.

- Windows Bitmap (sequence of static images, taken from individual frames)

5. Select the sizing options for the file to be exported. See "[Controlling the Size of an Image](#)" for more details.

6. For AVI files, you should also enter the number of frames per second (FPS) you require.

Note:

The higher the FPS, the smoother the animation will be. However, using a high FPS will considerably increase the rendering time. 10-15 fps should be enough for a good quality AVI.

7. Click **OK** to continue, or **Cancel** to return to NavisWorks.


8. Enter a new name and location to store the file(s).

Note:

For image sequences, the name will contain the first integer of a 'counter', e.g. 001. Subsequent frames will be automatically incremented by one, e.g. 002, 003, 004 and so on.

9. Click **Save** to export the file(s), or **Cancel** to return to NavisWorks.

Controlling the Size of an Image

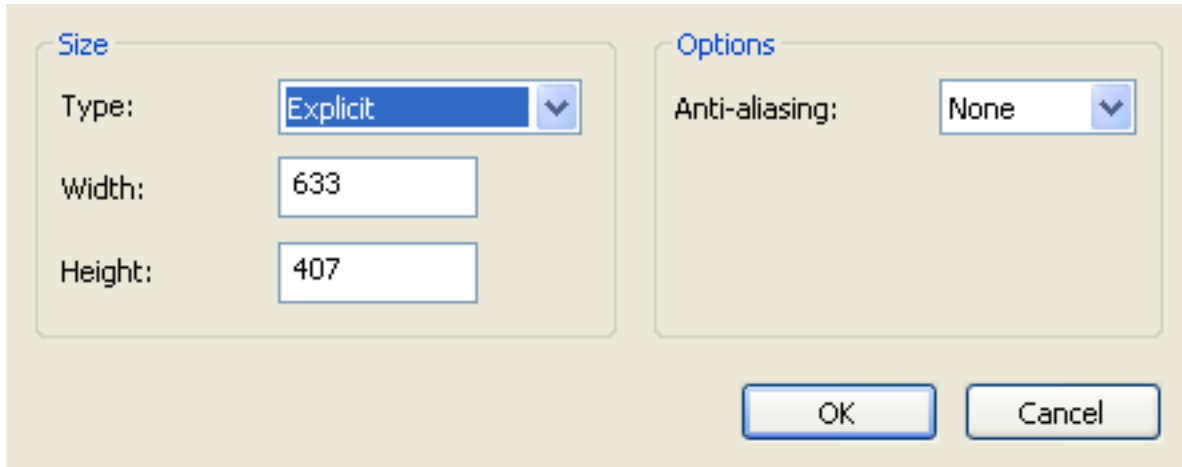

The size of the exported image/animation can be set in various ways:

Explicit allows you full control of the width and height (the dimensions are in pixels).

Aspect Ratio allows you to set the height, and the width is automatically calculated from the aspect ratio of your current view.

Use View takes the width and height of your current view.

Anti-Aliasing smooths the edges of the exported images. The higher the number, the smoother the image, but the longer they take to export. 4x should be adequate for most situations.

Note:

There is a maximum size of 2048 x 2048 pixels, for NavisWorks OpenGL output.

Exporting PDS Tags

Exporting PDS tags

1. On the **File** menu, click **Export > PDS Tags**.
2. Enter a new filename and location, if you wish to change from those suggested.
3. Click **Save** to export the .tag file, or **Cancel** to return to NavisWorks.

Exporting Viewpoints

Viewpoints can be exported from NavisWorks to an .xml file. These viewpoints contain all associated data, including camera positions, sections, hidden items and material overrides, redlines, comments, tags and collision detection settings.

Once the viewpoint data is exported to this text-based file format, it can either be imported into other NavisWorks sessions, or it can be accessed and used in other applications. For example, you may want to set up the same viewpoints in your CAD application.

Exporting viewpoints:

1. On the **File** menu, click **Export > Viewpoints XML**.
2. Enter a new filename and location, if you wish to change from those suggested.
3. Click **Save** to export the .xml file, or **Cancel** to return to NavisWorks.

Exporting Current Search

The search criteria specified in the Find Items dialog box can be exported to an .xml file. This can then be imported into other NavisWorks sessions. For example, if you have specified a complicated search criteria, containing various logic statements, that relates to all projects you work on, then this feature allows you to specify it once and use it on all projects.

Exporting current search:

1. From the **File** menu, choose **Export > Current Search XML**.
2. Enter a new filename and location, if you wish to change from those suggested.
3. Click **Save** to export the .xml file, or **Cancel** to return to NavisWorks.

Exporting Search Sets

Saved search sets can be exported from NavisWorks as an .xml file. These can then be imported into other NavisWorks sessions and re-used. For example, if you have a number of generic searches that you perform on all of your projects, this feature allows you to specify the searches once and use them on all projects.

Exporting search sets:

1. On the **File** menu, click **Export > Search Sets XML**.
2. Enter a new filename and location, if you wish to change from those suggested.
3. Click **Save** to export the .xml file, or **Cancel** to return to NavisWorks.

Exporting Viewpoints Report

An .html file can be exported containing a JPEG of all of the saved viewpoints and associated data, including camera position and comments.

Note:

To customize the appearance or layout of the html file, you will need to edit the `viewpoints_report_lang.xml` file, where `lang` is a code representing your language. The installed file is located in the `stylesheets` subdirectory of the NavisWorks install directory. You can copy the edited file to the `stylesheets` subdirectory of any of the NavisWorks search directories. See “ [Search Directories](#) ” for more information.

Exporting viewpoints report:

1. On the **File** menu, click **Export > Viewpoints Report HTML**.
2. Enter a new filename and location, if you wish to change from those suggested.
3. Click **Save** to export the report, or **Cancel** to return to NavisWorks.

Exporting to Autodesk DWF

Autodesk DWF files can be exported from NavisWorks. The exporter creates a `.dwf` file containing:

- All geometry
- All materials
- Per-vertex colors
- Properties (where available)

Exporting a DWF file:

1. On the **File** menu, click **Export > Autodesk DWF**.
2. Enter a new filename and location, if you wish to change from those suggested.
3. Click **Save** to export the file, or **Cancel** to return to NavisWorks.

Exporting to Google Earth KML

Google Earth KML files can be exported from NavisWorks. The exporter creates a compressed KML file with the extension `.KMZ` and supports the export of:

- Triangles
- Lines

- Materials (colour and flat transparency only)
- Viewpoints (adjustments may occur due to Google Earth limitations)
- Model Hierarchy
- Hyperlinks (currently only URLs work correctly in Google Earth)

Exporting to Google Earth KML files:

1. On the **File** menu, click **Export > Google Earth KML....** This brings up the following dialog box.

KML Options

Options

Export model relative to terrain height

Collapse on export:

Limit number of polygons

Enable

Number of polygons

Origin

	Longitude (°)	Latitude (°)	Altitude (m)	
Google Earth	<input type="text" value="1.55971211056774"/>	<input type="text" value="3.3726012123342"/>	<input type="text" value="0.0000000000000000"/>	Import...
NavisWorks Manage	<input type="text" value="12.860"/>	<input type="text" value="-45.189"/>	<input type="text" value="-121.756"/>	Pick...

Second reference point

Enabled

	Longitude (°)	Latitude (°)	Altitude (m)	
Google Earth	<input type="text" value="0.0000000000000000"/>	<input type="text" value="0.0000086000000000"/>	<input type="text" value="0.0000000000000000"/>	Import...
NavisWorks Manage	<input type="text" value="1.00"/>	<input type="text" value="0.00"/>	<input type="text" value="0.00"/>	Pick...

Third reference point

Enabled

	Longitude (°)	Latitude (°)	Altitude (m)	
Google Earth	<input type="text" value="0.0000086000000000"/>	<input type="text" value="0.0000000000000000"/>	<input type="text" value="0.0000000000000000"/>	Import...
NavisWorks Manage	<input type="text" value="0.00"/>	<input type="text" value="0.00"/>	<input type="text" value="1.00"/>	Pick...

Buttons: Help, OK, Cancel

2. Select **Export model relative to terrain height** to put Google Earth in a mode where all heights are measured from the surface of the ground. When this is off all heights are measured from sea-level.

Note:

When positioning a model relative to sea level, the height of the Google Earth reference points must also be measured relative to sea level. When positioning a model relative to the ground, the Google Earth reference points must be measured relative to the ground.

Google Earth always places new placemarks at an altitude of zero, irrespective of whether that is relative or absolute.

3. **Collapse on export** allows different levels of collapsing parts of the model hierarchy in the exported file.
 - **None** ensures the whole heirarchy is exported
 - **All objects** collapses everything into one node
 - **Files** collapses each file into one node
 - **Layers** collapses each layer into one node
4. **Limit number of Polygons** should be enabled to restrict the amount of geometry exported into the output file. Geometry is selected on the basis of taking the most obvious objects in preference to the fine detail. If the exported file is too large for Google Earth to display, try enabling this and reducing the number of polygons. **View, Scene Statistics** in NavisWorks shows the number of triangles and/or lines in the current project. By setting a polygon limit you are choosing to export only some of these items.

Note:

Google Earth's ability to handle large numbers of polygons is far more limited than NavisWorks. Hence it is worth noting that currently Google Earth will consider 1,000,000 polygons as being a big model.

5. The **Origin** position values are the first pair of reference points on the Google Earth surface, and must always be defined. The NavisWorks reference point will always be positioned to exactly overlay the Google Earth reference point.

Second and **Third** reference points can be used, and if enabled then the position and orientation of the model can be more accurately defined.
6. Use the **Import** buttons to read-in saved placemark locations from KML files exported from Google Earth.

The Origin **Import** button differs slightly from the other two; if the KML file contains multiple placemarks, this button will offer the user the choice of importing second and third reference points if available. The other two buttons will only import a single reference point.
7. The **Pick** buttons allow the reference point locations to be selected in the main 3D view.

These points must be visible in the main 3D view prior to exporting, as once the **KML Options** dialog box is open you will not be able to navigate before picking.

Note:

You may wish to use **View, Split** to split the main 3D view enabling you to have separate views of each reference point.

Quitting NavisWorks

Quitting NavisWorks:

1. On the **File** menu, click **Exit**
2. If the model has been changed since opening it, NavisWorks will ask you whether you want to save any changes. Respond appropriately and NavisWorks will then close.

Chapter 10. Converting Files

With Autodesk NavisWorks Manage 2009 you can open a wide variety of native CAD file types without having to have the CAD application on your machine. Files read by NavisWorks include .dwg, .dgn, .dxf and Inventor. For a full list of CAD files that NavisWorks can open, please refer to the web site www.autodesk.com/navisworksmanage. This site will also explain which entities are read by NavisWorks and which are ignored, as well as any object property information that is converted. It is possible to load multiple files of different formats into the same scene in NavisWorks and set their units and origins appropriately. There are also a number of options to help optimize native CAD file reading.

In addition to these native CAD files, Autodesk NavisWorks Manage 2009 also reads its own native .nwc (NavisWorks Cache), .nwf (NavisWorks File review) and .nwd (published NavisWorks Data) file formats.

Some file formats, such as those from Autodesk's Viz and Graphisoft's ArchiCAD cannot be read directly by NavisWorks but there are exporters available to export to the NavisWorks .nwc file format from these applications. See “ [File Exporters](#) ” for more details.

File Readers

As well as the NavisWorks file formats, .nwf, .nwd and .nwc, NavisWorks can open a variety of native CAD and scanning applications' formats:

- .dwg
- Bentley AutoPLANT .dwg, .mdb
- .dxf
- .dwf
- .3ds
- .dgn
- .man
- PDS files
- .iges
- .step
- Inventor parts & assemblies
- VRML world files (.wrl;.wrz)
- Riegl Scan data (.3dd)
- Faro Scan data (.fls, .flw, .iQscan;.iQmod;.iQwsp)
- Leica Scan data (.pts;.ptx)
- Z+F Scan data (.zfc;.zfs)
- ASCII Laser Scan data (.asc;.txt)

- STL Stereolithography data (.stl)
- AVEVA Review (.rvm)
- IFC files (.ifc)
- Sketchup (.skp)

NWF Files

.nwf files can be saved by NavisWorks in order to save a current review of the scene. No geometry is saved in this format, but a list of appended files, along with their path relative to the .nwf file is saved, along with any overrides, comments, redlines, viewpoints or other NavisWorks specific information. .nwf files are useful when the CAD files are still changing throughout the design period, as the latest files are loaded each time the .nwf file is opened.

NWD Files

.nwd files are files published by NavisWorks Publisher and are snapshots of the model at a certain time. See “ [Publishing from NavisWorks](#) ” for more information on this.


NWD Options

NavisWorks allows you to enable and disable geometry compression and select whether the precision of certain options should be reduced when saving (or publishing) .nwd files. Geometry compression results in less memory being required and therefore smaller .nwd files.

Setting NWD options:

1. On the **Tools** menu, click **Global Options**.
2. Expand the **Model** node in the **Options Editor** dialog box, and click the **NWD** option.

The NWD page is displayed.

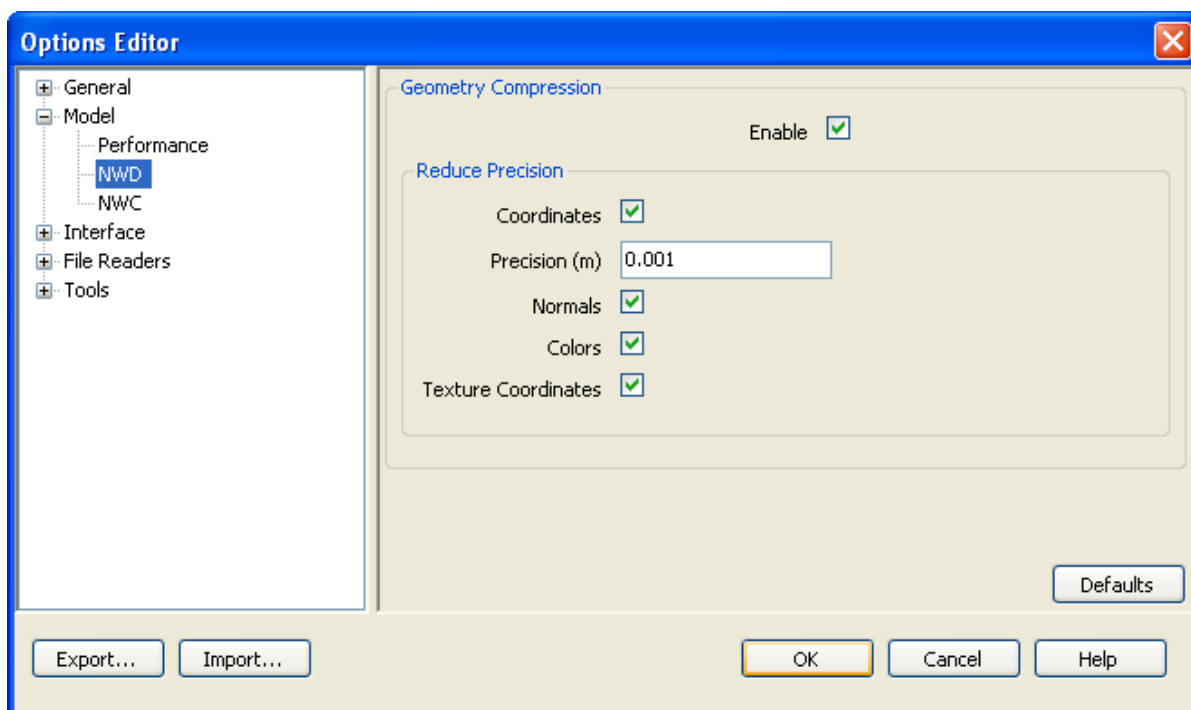

3. Clear the **Enable** check box if you do not require any geometry compression.
4. Select the **Coordinates** check box if you want to reduce the precision of coordinates.

Enter the value to which you wish coordinates to be precise to in the **Precision** box. The larger the value, the less precise coordinates will be and the smaller the .nwd will be.

5. Select the **Normals** check box to reduce the precision of normals.
6. Select the **Colors** check box to reduce the precision of colors.
7. Select the **Texture Coordinates** check box to reduce the precision of texture coordinates.
8. Click **OK** to set these options or **Cancel** to exit the dialog without setting them.

NWC Files

Cache files (.nwc) are used when reading native CAD files, such as files from AutoCAD or MicroStation. By default, when Autodesk NavisWorks Manage 2009 opens a native CAD file, it first checks in the same directory whether there is a NavisWorks cache file present with the same name as the CAD file but with a .nwc extension. If there is, and this cache file is newer than the native CAD file, then NavisWorks will open this file instead as it has already been converted to NavisWorks format and therefore will open much quicker. If, however, there is no cache file present, or the cache file is older than the native CAD file, then NavisWorks will have to open the CAD file and convert it. At this point, it will by default write a cache file in the same directory and with the same name as the CAD file, but with the .nwc extension, for speeding up the opening of this file in future.

See “[File Exporters](#)” for more information on why you might want to use the .nwc file exporters, which CAD applications you can export from and how.

NWC Options


NavisWorks allows you to enable and disable the reading and writing of cache files.

This describes the default process. The options here enable you to enable and disable the reading and writing of cache files. For example, you may want to disable reading cache files to ensure that NavisWorks converts every native CAD file each time it is read, even though this is a slower process. Also, you may want to disable the writing of cache files in order to save on disk space and clutter, even though the cache files are generally many times smaller than the original native CAD files.

Setting NWC options:

1. On the **Tools** menu, click **Global Options**.
2. Expand the **Model** node in the **Options Editor** dialog box, and click the **NWC** option.

The NWC page is displayed.

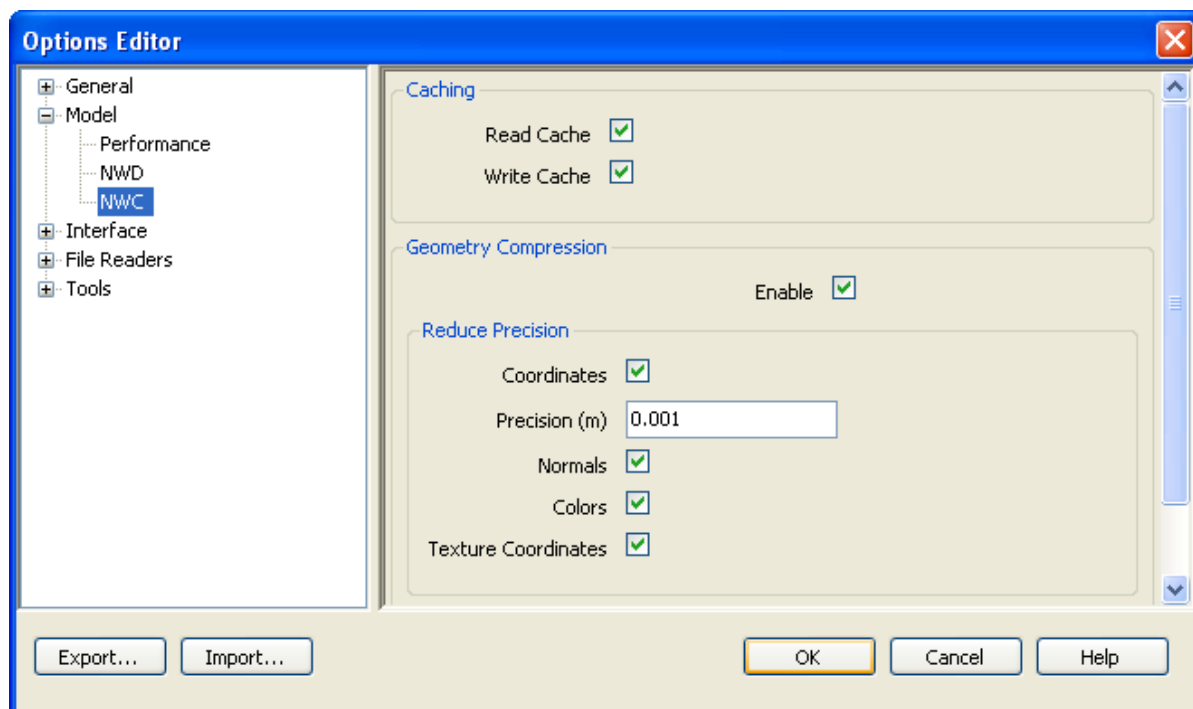

3. Clear the **Read Cache** check box if you want to ignore any existing caches when opening a native CAD file.
4. Clear the **Write Cache** check box if you do not wish to write a cache file the next time a native CAD file is loaded.
5. Clear the **Enable** check box if you do not require any geometry compression when .nwc files are written.
6. Select the **Coordinates** check box if you want to reduce the coordinate precision.

Enter the value to which you want coordinates to be precise to in the **Precision** box. The larger the

value, the less precise coordinates will be and the smaller the .nwc will be.

7. Select the **Normals** check box to reduce the precision of normals.
8. Select the **Colors** check box to reduce the precision of colors.
9. Select the **Texture Coordinates** check box to reduce the precision of texture coordinates.
10. Click **OK** to set these options or **Cancel** to exit the dialog without setting them.

DWG and DXF Files

NavisWorks's .dwg and .dxf file reader uses Autodesk's ObjectDBX™ technology and so is guaranteed to read all object geometry and information for those third party applications that utilize the ObjectDBX Framework.

The reader currently supports all surface (shaded) entities (3D faces, rectangular meshes, polyface meshes, circles, extruded lines and so on), including Proxy Graphics and custom objects such as ACIS based entities (3D Solid, Region), lines, points and snap points. Complex entities (shapes, dimensions, text) are not supported. The structure of the drawing is preserved including xrefs, blocks, inserts, AutoCAD color index, layers, views and active viewpoint. Entities are colored using the AutoCAD Color Index (ACI), so will match those in an AutoCAD "shaded" view.

There is also an .nwc file exporter for AutoCAD - see "[AutoCAD .nwc Exporter](#)" for more details.

Note:

The reader supports files from all products based on AutoCAD 2009 and earlier.

Supported Entities

- All 2D and 3D geometry, including arcs, lines, polylines with non-zero thickness, ACIS objects (regions and solids), polygon and polyface meshes, 3D faces and surfaces.
- Points and snap points.
- Lines, polylines, circles, arcs with zero thickness.
- Named views.
- Layers.
- Colors.
- Blocks, inserts and multiple inserts.
- Groups.
- External references (xrefs).
- Hyperlinks.
- Text or multi-line text.

- Entity handles.
- Attributes.
- Textures.
- File properties.

Unsupported Entities


- Lights
- Splines
- Multi-lines
- Linetypes
- Dimensions and leaders
- Raster bitmaps
- Construction lines (xlines and rays)
- Hatching

DWG and DXF File Reader Options

Setting the .dwg and .dxf file reader options:

1. On the **Tools** menu, click **Global Options**.
2. Expand the **File Readers** node in the **Options Editor** dialog box, and click the **DWG/DXF/SAT** option.

The DWG/DXF/SAT page is displayed.

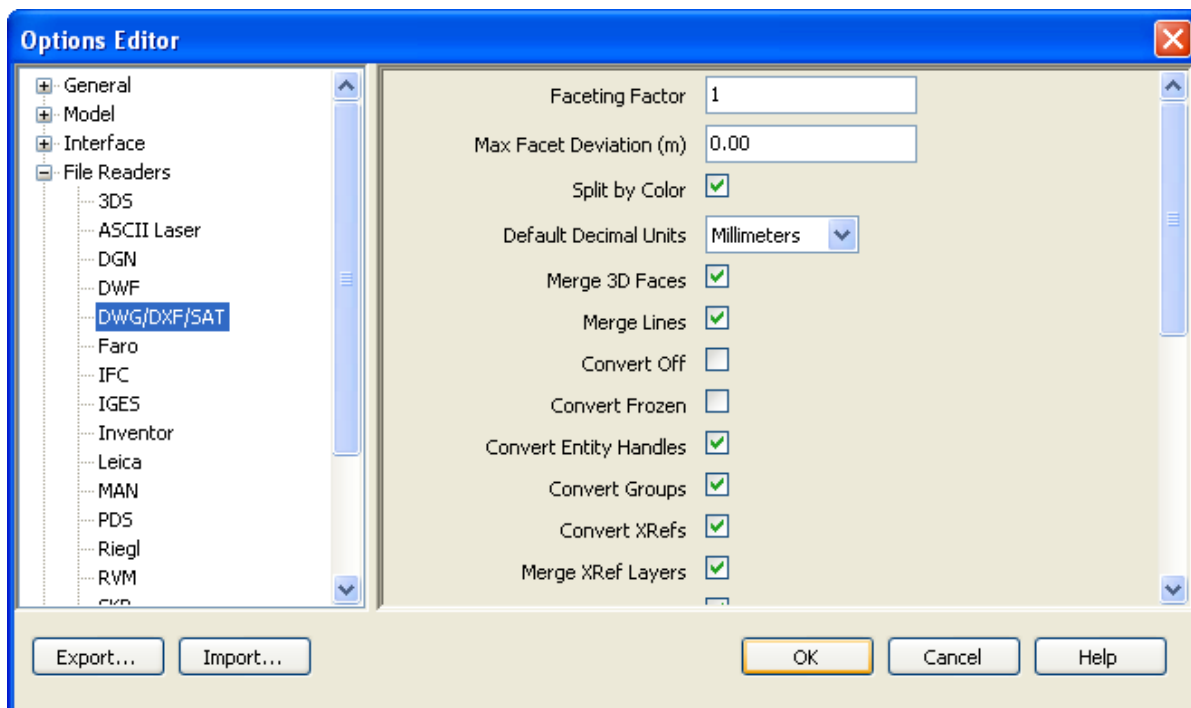


3. Enter the **Faceting Factor** (the value must be greater than 0). The higher the value, the more NavisWorks will facet rounded entities and, therefore, the smoother they will appear. See [Faceting Factor](#) for more information.
4. Enter the **Max Facet Deviation**. This will facet entities to within the specified tolerance. See [Max Facet Deviation](#) for more information.
5. Select the **Split by Color** check box if you want to be able to select parts of compound entities in NavisWorks. For example, a window object from Architectural Desktop may be split into a frame and a pane. If this check box is not selected, then you will only be able to select the window object as a whole, whereas if you select this check box, you will be able to select the individual pane and frame. However, the names of the pane and frame will be based on their color.
6. From the **Default Decimal Units** drop-down list, choose the type of units that NavisWorks will use when opening .dwg and .dxf files that were created with decimal drawing units. Note that .dwg and .dxf files do not specify the units they were created in. If the units turn out to be wrong, they can be easily changed using the **File Units and Transform** option (see “ [Setting a File's Units and Transform](#) ” for more details).
7. Select the **Merge 3D Faces** check box if you want to reduce the complexity of the model as seen in the selection tree by interpreting adjoining faces with the same color, layer and parent as a single item. To keep the entities as separate items in NavisWorks, clear the check box.
8. Select the **Merge Lines** check box if you want to reduce the complexity of the model as seen in the selection tree by interpreting joining lines with the same color, layer and parent as a single item. To keep the entities as separate items in NavisWorks, clear the check box.
9. Select the **Convert Off** check box if you want to read layers that are switched off in .dwg and .dxf files. They will be converted but hidden in NavisWorks.
10. Select the **Convert Frozen** check box if you want to read layers that are frozen in .dwg and .dxf files.

They will be converted but hidden in NavisWorks.

11. Select the **Convert Entity Handles** check box if you want to read entity handles as a property attached to the item in NavisWorks.
12. Select the **Convert Groups** check box if you want to retain the groups from .dwg and .dxf files, adding another selection level to the selection tree. See [Chapter 13, *Selecting Items*](#) for more information on selecting objects and the selection tree.
13. Select the **Convert XRefs** check box if you want to convert any external reference files contained within the .dwg file. Clear this check box to get more control over which files you append into NavisWorks.
14. Select the **Merge XRef Layers** check box if you wish to merge the layers of external reference files into those of the main .dwg file. Leaving this unchecked will keep the external reference file separate within the selection hierarchy of NavisWorks.
15. Select the **Convert Views** check box if you want to convert the named views from the file into NavisWorks viewpoints.
16. Select the **Convert Points** check box if you want to read any points from .dwg and .dxf files. See “[Display Options](#)” for more information on how to display these in NavisWorks.
17. Select the **Convert Lines** check box if you want to read any lines and arcs from .dwg and .dxf files. See “[Display Options](#)” for more information on how to display these in NavisWorks.
18. Select the **Convert Snap Points** check box if you want to read any snap points from .dwg and .dxf files. See “[Display Options](#)” for more information on how to display these in NavisWorks.
19. The **Loader Version** drop-down list allows selection of which version of ObjectDBX is used when loading AutoCAD files. This allows you to select support for the correct version of object enablers that may be used within the file. Please note that once any particular version of ObjectDBX is loaded, which occurs during reading of a .dwg or .dxf file, that the version in use will not change until NavisWorks is restarted.
20. Select the **Load Material Definitions** check box if you want to load material definitions into NavisWorks from Autodesk Architectural Desktop .dwg files.
21. Select the **Use ADT Standard Configuration** check box to force reading of Autodesk Architectural Desktop .dwg files using the Standard display configuration. If unchecked, geometry and materials will be read in according to whether they are displayed in the currently saved display configuration.
22. Select the **Convert Hidden ADT Spaces** check box to perform conversion of space objects that lack any visible 3D geometry in ADT (for example if they lack floor or ceiling thicknesses). This will result in corresponding hidden objects appearing in NavisWorks. The normal behavior for space objects that have visible 3D geometry in ADT is unaffected.
23. The **Material Search Paths** edit box may contain file paths in a semi-colon separated list that will be searched for texture files used in Autodesk Architectural Desktop materials. Default Autodesk paths are automatically searched and need not be entered.
24. The **Render Type** drop-down list enables you to specify the render style used for objects when loading .dwg files.

Selecting the **Automatic** option means NavisWorks will use the render style saved in the .dwg file. If geometry does not appear correctly, adjust the render style by selecting the **Rendered**, **Shaded**, or **Wireframe** option from the drop-down list, as appropriate

25. Clicking the **Advanced** button will open a dialog which giving you the option to read object information from various third party applications that are built on AutoCAD.

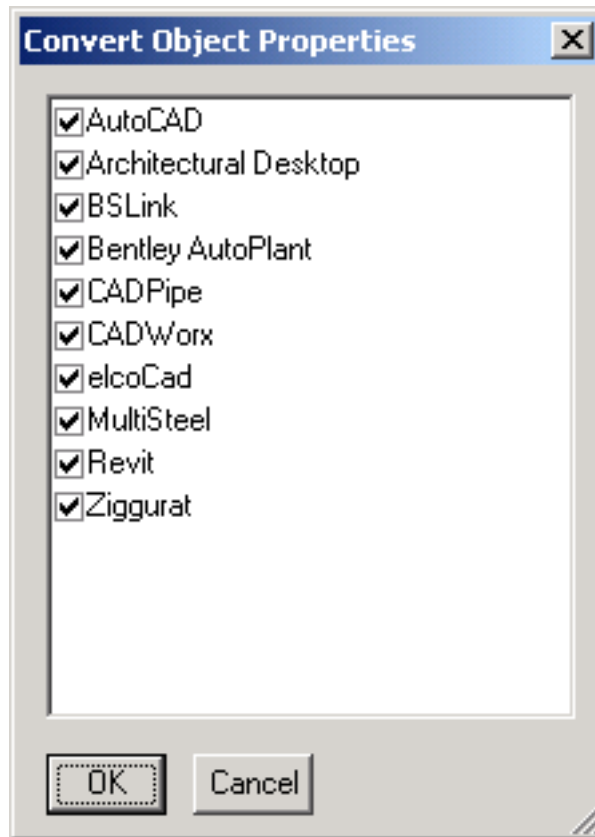

Check those applications you wish to read information from.

26. Click **OK** to set these options or **Cancel** to exit the dialog without setting them.

DWF Files

Autodesk's DWF (Design Web Format) was specifically developed by Autodesk as a file format for architects, engineers, and GIS professionals to share design data. The NavisWorks file reader reads all 3D geometry, as well as textures and properties. A full list is given below.

Supported Entities

- All 3D geometry
- Texture maps.
- Texture coordinates
- Colors (per-vertex, per-face)
- Property fields

- Categories

Unsupported Entities


- 2D lines/plot sections
- Thumbnails
- Marked-up sketches
- More than one 3D section per file (any others are ignored)
- NURBS Surfaces
- Cameras

DWF File Reader Options

Setting the .dwf file reader options:

1. On the **Tools** menu, click **Global Options**.
2. Expand the **File Readers** node in the **Options Editor** dialog box, and click the **DWF** option.

The DWF page is displayed.

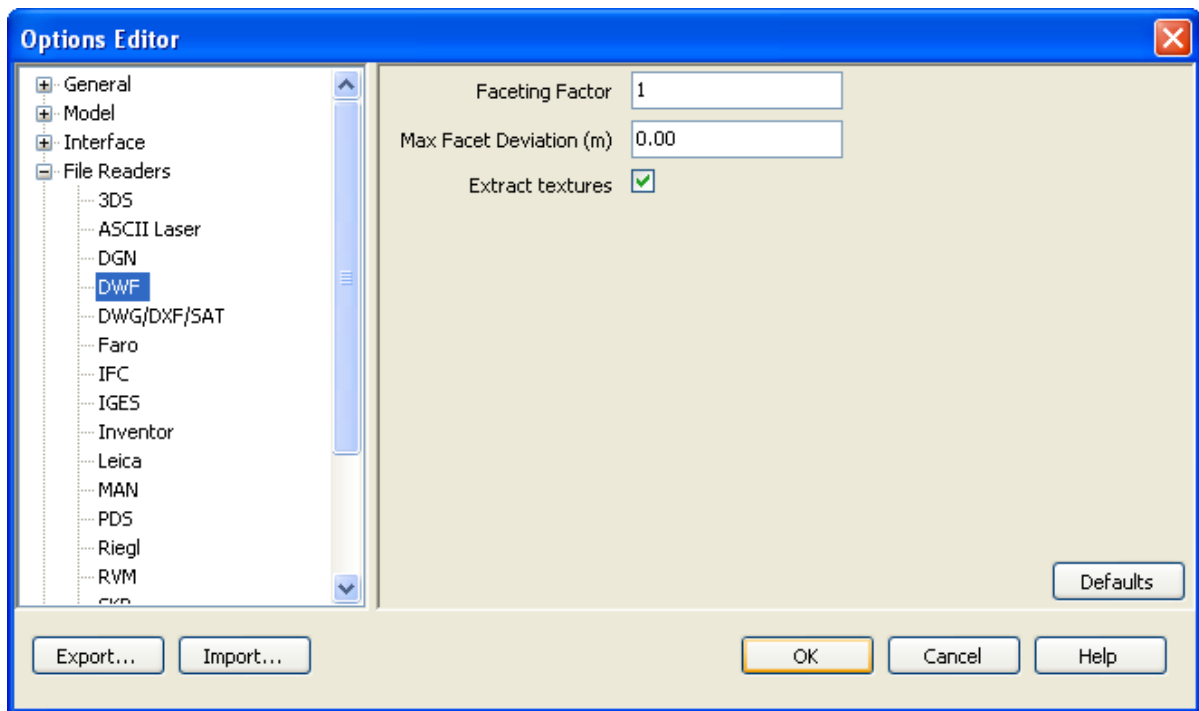

3. Enter the **Faceting Factor** (the value must be greater than 0). The higher the value, the more

NavisWorks will facet rounded entities and therefore the smoother they will appear. See [Faceting Factor](#) for more information.

4. Enter the **Max Facet Deviation**. This will facet entities to within the specified tolerance. See [Max Facet Deviation](#) for more information.
5. Select the **Extract textures** check box to load in textures and environment maps associated with the file. Environment maps will not automatically be set in the scene, and will need to be manually set up in Presenter.
6. Click **OK** to set these options or **Cancel** to exit the dialog without setting them.


Bentley AutoPLANT Files

Bentley AutoPLANT is based on AutoCAD and as such uses the .dwg file format to store model geometry. Any settings related to the .dwg file format also affect files from AutoPLANT.

AutoPLANT Object Properties can be stored in external database .mdb files, and NavisWorks supports these files through the **DataTools** functionality. By default NavisWorks and DataTools are both set up to support AutoPLANT .dwg and .mdb files, and will be looking for Equipment, Nozzle and Piping Data.

Setting DataTools:

1. On the **Tools** menu, click **File Options**.
2. In the **File Options** dialog box, click the **DataTools** tab.

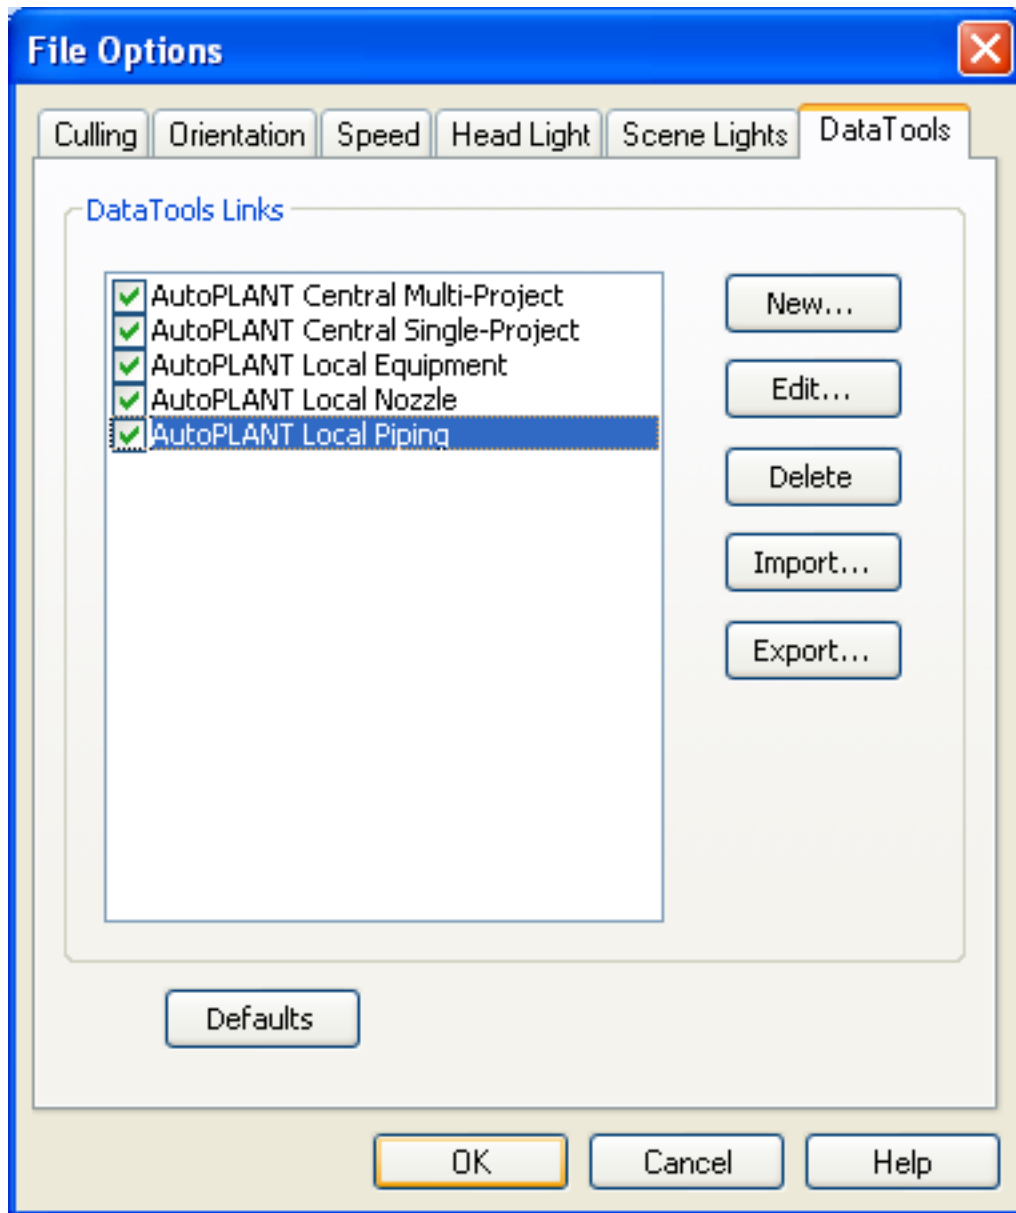

The settings for these three sets of data can be edited by selecting the appropriate item in the list and clicking on the **Edit** button. See [Chapter 25, DataTools](#) for more information.

For AutoPLANT properties to be loaded correctly an .mdb file must be located in the same directory as the .dwg file, with the same filename followed by the .mdb extension. If this file exists, NavisWorks will automatically pick it up and use it to show appropriate properties in the **Properties** window.

Note:

NavisWorks does not currently support per-project properties.

3DS Files

3DS is a common file format that is supported by many CAD applications. The NavisWorks file reader reads all 2D and 3D geometry as well as texture maps. The hierarchy defined by the keyframe data from keyframe 0 is preserved, including instancing. Entities are positioned based on keyframe 0.

Autodesk NavisWorks Manage 2009 does not read .max files, but instead has exporters for Viz and Max. Entity support is the same as for the 3ds reader. See “[Viz and Max .nwc Exporter](#)” for more information.

Textures from .3DS files come through into NavisWorks Presenter, though you should bear in mind that .3DS files contain file names in the 8.3 DOS format only and that various formats are not yet supported in Presenter (see below).

Supported Entities

- All 2D and 3D geometry
- Cameras
- Groups
- Texture maps in the formats: 8-bit color-mapped, 16-bit and 24-bit true color, uncompressed or Run Length Encoded .tga, .bmp, .jpg, .lwi (LightWork Image).
- Colors (from material color, not wireframe color - ambient, diffuse, shininess, transparency and self illumination)

Unsupported Entities


- Keyframes (objects are currently taken from keyframe 0)
- Texture maps in the formats: gray-scale .tga, .tif, .gif, .png.
- Other maps (e.g. opacity maps, reflections etc.)
- Wireframe meshes
- Lines, splines
- Points
- Background images

3DS File Reader Options

Setting the .3ds file reader options:

1. On the **Tools** menu, click **Global Options**.
2. Expand the **File Readers** node in the **Options Editor** dialog box, and click the **3DS** option.

The **3DS** page is displayed.

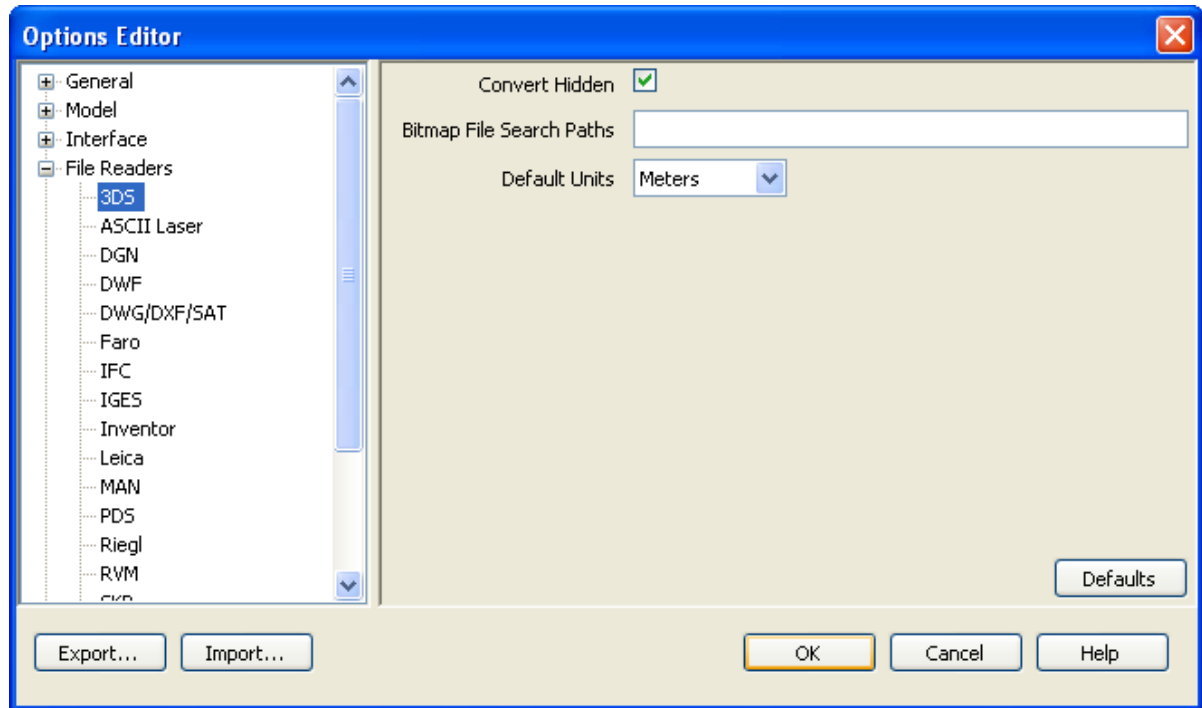

3. Select the **Convert Hidden** check box if you want to read hidden entities from the .3ds file. They will be converted but hidden in NavisWorks.
4. The paths of texture map files are not stored with the texture maps in the model so enter a semi-colon separated list of paths in **Bitmap File Search Paths** that the reader will search in when it finds texture maps in the model.
5. From the **Default Units** drop-down list, choose the type of units that NavisWorks will use when opening .3ds files. If the units turn out to be wrong, the model can be easily rescaled using the **File Transform** option (see “[Setting a File's Units and Transform](#)” for more details).
6. Click **OK** to set these options or **Cancel** to exit the dialog without setting them.

DGN and PRP Files

NavisWorks can read 3D .dgn and .prp files from Bentley's MicroStation, but does not support .cel files or 2D .dgn files. Reference files and instances of cells are respected and the selection tree reflects this file structure.

There is also an .nwc file exporter for MicroStation - see “[MicroStation .nwc Exporter](#)” for more details.

Note:

The reader supports files from MicroStation 95, SE and /J. It does not support MicroStation Modeller and any versions of MicroStation before 95.

The DGN reader additionally does not support auxiliary coordinate systems.

Supported Entities

- All 2D and 3D geometry including shapes, complex shapes, meshes, cones, surfaces, B-spline boundaries, solids, SmartSolids and Feature Solids, lines, arcs and ellipses.
- Splines and B-spline curves.
- Lights.
- Levels.
- Cells and shared cells and their instancing.
- Colors and ambient, diffuse and shininess properties of materials from .pal and .mat palette and material files.
- Texture maps.
- Reference files including aliases.
- Dynamic drawing of parametric models when loading/exporting DGN and PRP files.
- 3D text used for notes and labels is now converted and displayed by default.
- Family, Part and Texture information from TriForma, and PDS object information from .drv files.
- DMRS and database linkage and association ID's.


Unsupported Entities

- Raster bitmaps.
- Dimensions and leaders.

DGN File Reader Options

Setting the .dgn file reader options:

1. On the **Tools** menu, click **Global Options**.
2. Expand the **File Readers** node in the **Options Editor** dialog box, and click the **DGN** option.
The **DGN** page is displayed.

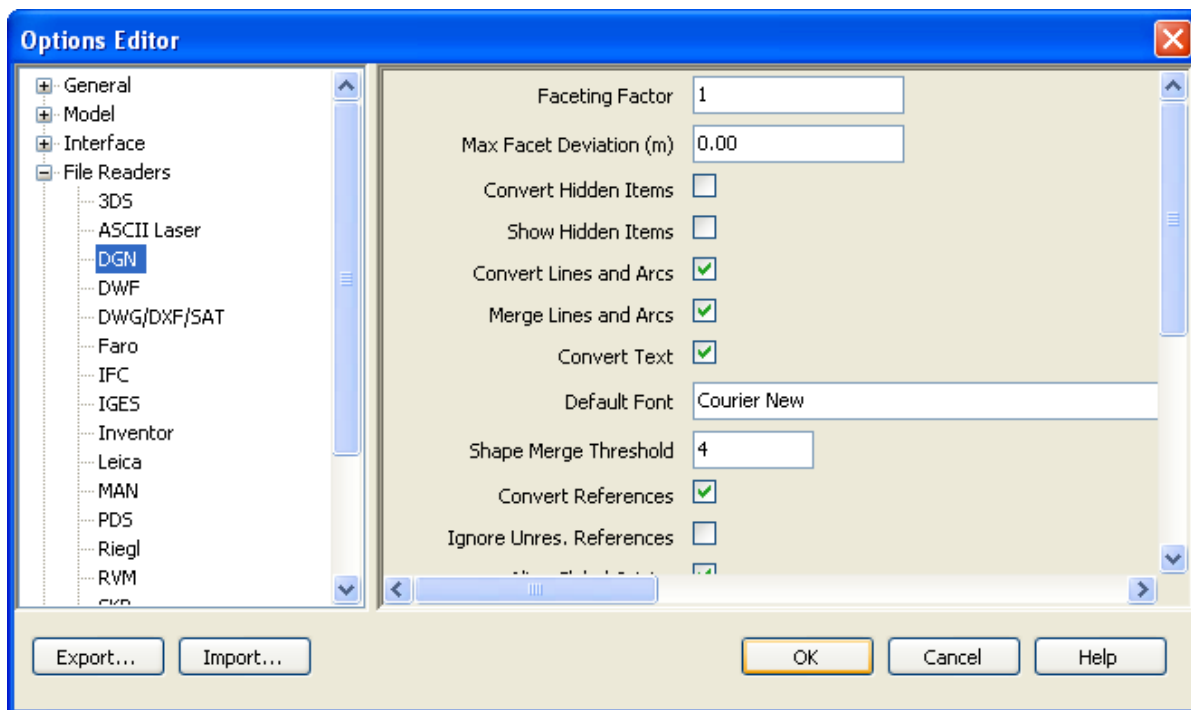

3. Enter the **Faceting Factor** (the value must be greater than 0). The higher the value, the more NavisWorks will facet rounded entities and therefore the smoother they will appear. See [Faceting Factor](#) for more information.
4. Enter the **Max Facet Deviation**. This will facet entities to within the specified tolerance. See [Max Facet Deviation](#) for more information.
5. Select the **Convert Hidden Items** check box if you want to read hidden entities from the .dgn file. They will be converted but hidden in NavisWorks.
6. Select the **Show Hidden Items** check box if you want to show all entities in the .dgn file whether they are set as hidden or not. This option will only work if **Convert Hidden Items** is also selected.
7. Select the **Convert Lines and Arcs** check box if you want to read lines, splines, curves, arcs, circles or ellipses from the .dgn file.
8. Select the **Merge Lines and Arcs** check box if you want to reduce the complexity of the model as seen in the selection tree by interpreting adjoining lines etc. with the same color, level and parent as a single item. Clear this check box if you want to leave these elements as separate items in NavisWorks.
9. Select the **Convert Text** check box if you want to read text from the .dgn file. Text will be converted into smart tags in NavisWorks.
10. Enter the **Shape Merge Threshold** into the box. See [Shape Merge Threshold](#) for more information on Shape Merge Threshold.
11. Select the **Convert References** check box if you want to read reference files from the .dgn file.
12. Select the **Ignore Unres. References** check box if you want to ignore unresolved reference files from the .dgn file. If this check box is cleared, then you will be presented with a dialog to find any unresolved reference files at a run time.

13. Select the **Use Level Symbology** check box if you want to use the level symbology from MicroStation so that items in NavisWorks take their color from level rather than the default element color in MicroStation.
14. MicroStation has the concept of a “global origin”, which is where (0, 0, 0) is located (assuming there are no active ACSs). Changing this global origin in MicroStation doesn't actually move anything; it simply changes the reporting of coordinates. However, when attaching references in MicroStation, you can tell it to align global origins.

Select the **Align Global Origins** check box if you want to use this functionality when loading DGN files into NavisWorks. When two DGN files are appended together with this check box selected, their global origins will be in the same place.
15. Select the **Use Materials** check box if you want to use MicroStation's materials in place of its colors in NavisWorks. If you choose not to export materials, NavisWorks will assign the same colors as in the MicroStation scene. Assigning materials will assign the same textures, diffuse, ambient and specular colors to the elements as in the MicroStation scene.
16. Enter a semi-colon separated list of paths in **Material Search Paths** that the reader will search in for MicroStation palette (.pal) and material (.mat) files in order to convert its materials.
17. Select the **Convert PDS Data** check box if you want to read object information from Intergraph's Plant Design System™ while reading the .dgn files. PDS information is read from Intergraph's .drv files. NavisWorks looks for a .drv file with the same base name as the .dgn file in the same directory.
18. Select the **Convert TriCAD Data** check box if you want to read object information from Triplan's TriCAD™ while reading the .dgn files.
19. Select the **Convert TriForma Data** check box if you want to read object information from Bentley's TriForma™ while reading the .dgn files.
20. Enter a semi-colon separated list of paths in **TriForma Dataset Search Paths** that the reader will search for Triforma data set files. User defined datasets will need their directories adding to this list.
21. Enter a **View Number** if you want to use a specific view for loading. The loader will use the level visibility of this view when converting items. If you want to use the first active view, set this value to 0.
22. Click **OK** to set these options or **Cancel** to exit the dialog without setting them.

MAN Files

NavisWorks can read .man files from Informatix's MicroGDS™ version 6.0 or later. MicroGDS™ projects are not supported. The workaround is to first export the desired project window as a .man file.

MicroGDS Renderer materials are shown in their flat-shaded colors in NavisWorks Shaded display. In Full Render or Presenter rendering, the full shaders are used. Only the standard LightWorks shaders are available - those which are unique to MicroGDS are not available inside NavisWorks - a compromise is made for shaders which are not available inside NavisWorks.

- **height band** color shader is treated as plain grey
- **wrapped random** color shader is treated as a plain color using the flat-shaded color from MicroGDS
- **wrapped stencil** transparency is ignored

- **undulate**, **wrapped brick**, **wrapped grid** and **wrapped ripple** displacement shaders are ignored
- **object axis** texture space is equivalent to the NavisWorks **Box** texture space
- **auto axis** and **object xy axis** texture spaces are treated as a **Box** texture space
- **grid** background is treated as a plain background using the **background color** - no grid lines will show
- Foreground and Environment shaders are ignored
- All other shaders, as of MicroGDS 7.2, are correctly imported into NavisWorks.

Note:

MicroGDS materials are specified in millimetres, and are converted into metres to make NavisWorks materials, dividing distance parameters by 1000. Windows with Perspective Views are read into NavisWorks as View objects.

Windows with Perspective Views are read into NavisWorks as Saved Viewpoints.

Supported Entities

- Clump primitives.
- Line primitives. The color of line primitives is determined by the first phase in which they appear in the Principal Window. If they are not included in the Principal Window, they will have a color determined by their style.
- Light styles. Projector lights are treated as a Spot light without the transparent image.
- Material styles, both plain and most LightWorks Renderer materials. Materials using wrapped images locate their image files using the "Texture Path" specified below.
- Views. Perspective Views are read in as if 3-point Perspective; parallel Views are not read. A Section Plane in a MicroGDS View is set in the corresponding NavisWorks View.
- Layers. All layers are read, and made visible according to their status in the Principal Window of the MAN file.
- Instances.
- Object data structure.

Unsupported Entities


- Text primitives.
- Photo primitives.

MAN File Reader Options

Setting the MAN file reader options:

1. On the **Tools** menu, click **Global Options**.
2. Expand the **File Readers** node in the **Options Editor** dialog box, and click the **MAN** option.

The **MAN** page is displayed.

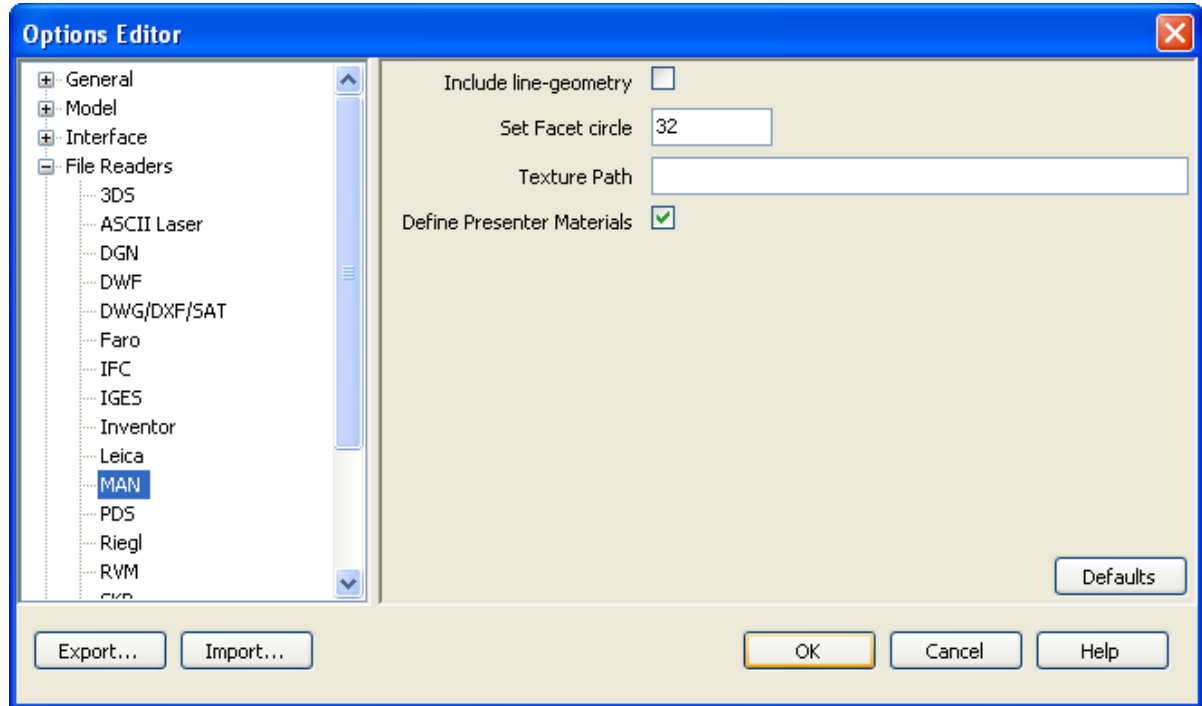

3. Select the box **Include line-geometry** to include MicroGDS line-primitives into NavisWorks
4. **Set Facet circle**. Adjust the number of facets used for arcs - enter the number of straight line segments to facet a whole circle. (This corresponds to the MicroGDS **Set Facet** preference.)
5. **Texture Path**. Enter the path to the folder containing images used in MicroGDS Materials. Materials using image files will use this string as the base for relative paths. (This corresponds to the MicroGDS **Renderer Textures** preference.)
6. Select the **Define Presenter Materials** check box if you wish MicroGDS material-styles to be defined as NavisWorks Presenter materials.
7. Click **OK** to set these options or **Cancel** to exit the dialog without setting them.


PDS Files

NavisWorks allows you to load DRI files from the PDS Design Review package.

Setting the PDS file reader options:

1. On the **Tools** menu, click **Global Options**.
2. Expand the **File Readers** node in the **Options Editor** dialog box, and click the **PDS** option.

The **PDS** page is displayed.

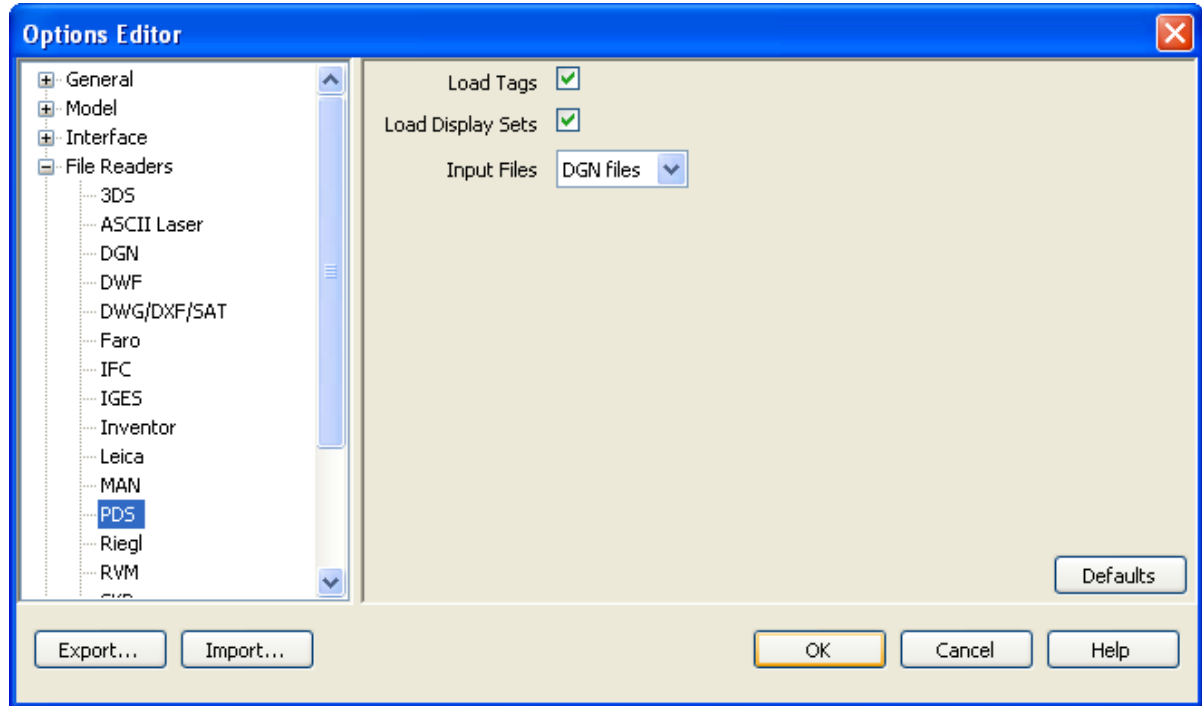

3. Select the **Load Tags** check box to load associated TAG files together with the DRI file.
4. Select the **Load Display Sets** check box to load associated Display Set DST files with the DRI file.
5. In the **Input Files** drop-down box select **DGN Files** to read the original DGN files, or **NWC Files** to load the NWC cache versions of the files instead.

The last option is useful if you routinely perform a batch conversion of the DGN files into NWC files, and would like to load the NWC files when reading a DRI file.

6. Click **OK** to set these options or **Cancel** to exit the dialog without setting them.

IGES Files

NavisWorks uses the Open CASCADE libraries to read and tessellate .igs and .iges files up to and including IGES 5.3.

Supported Entities

- Groups
- Colors
- Planes
- Parametric spline, ruled, B-spline, offset, bounded, trimmed and plane surfaces and surfaces of revolution.
- Tabulated cylinders
- Solids and manifold solids
- Shells
- Faces

Unsupported Entities


- Points
- Lines
- Circular or conic arcs
- Composite, parametric spline, B-spline, or offset curves
- Boundaries
- Attributes

IGES File Reader Options

Setting the IGES file reader options:

1. On the **Tools** menu, click **Global Options**.
2. Expand the **File Readers** node in the **Options Editor** dialog box, and click the **IGES** option.

The **IGES** page is displayed.

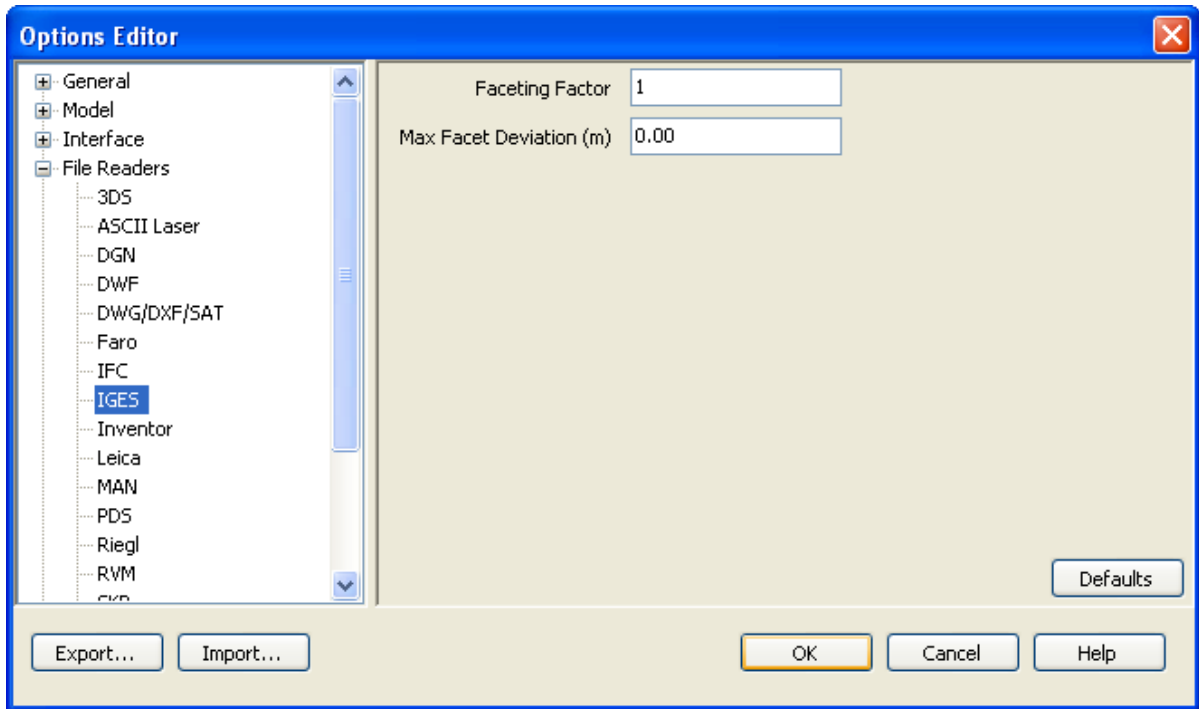

3. Enter the **Faceting Factor** (the value must be greater than 0). The higher the value, the more NavisWorks will facet rounded entities and therefore the smoother they will appear. See [Faceting Factor](#) for more information.
4. Enter the **Max Facet Deviation**. This will facet entities to within the specified tolerance. See [Max Facet Deviation](#) for more information.
5. Click **OK** to set these options or **Cancel** to exit the dialog without setting them.

STEP Files

NavisWorks uses the Open CASCADE libraries to read and tessellate .stp and .step files up to and including AP214 CC2 and AP203.

Supported Entities

- Assemblies
- Colors
- Planes
- B-spline and rational B-spline, Bezier, conical, cylindrical, offset, rectangular trimmed, linear extrusion, bounded, manifold, spherical, toroidal, uniform and quasi-uniform, surfaces.
- Shells
- Advanced and faceted boundary representations (BReps)

Unsupported Entities


- Points
- PCurves, B-spline, rational B-spline, Bezier, trimmed, uniform or quasi-uniform curves.
- Circles or ellipses
- Hyperbola

STEP File Reader Options

Setting the STEP file reader options:

1. On the **Tools** menu, click **Global Options**.
2. Expand the **File Readers** node in the **Options Editor** dialog box, and click the **STEP** option.

The **STEP** page is displayed.

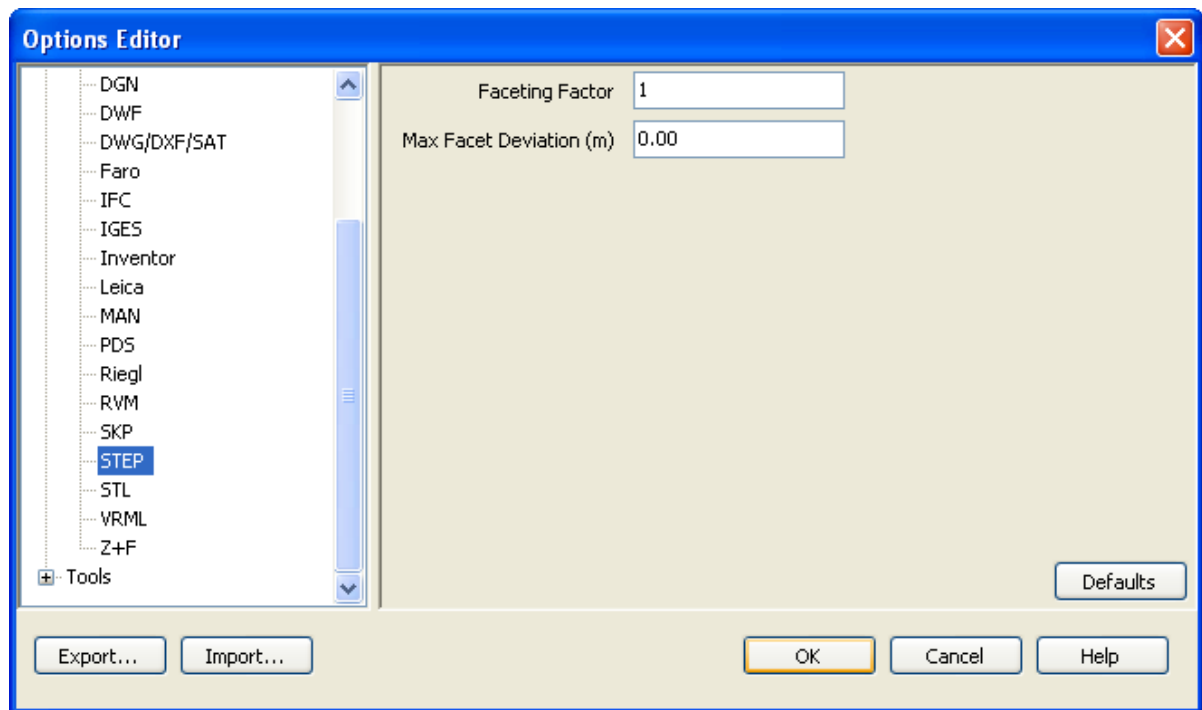

3. Enter the **Faceting Factor** (the value must be greater than 0). The higher the value, the more NavisWorks will facet rounded entities and therefore the smoother they will appear. See [Faceting Factor](#) for more information.
4. Enter the **Max Facet Deviation**. This will facet entities to within the specified tolerance. See [Max Facet Deviation](#) for more information.
5. Click **OK** to set these options or **Cancel** to exit the dialog without setting them.

Inventor Files

Autodesk Inventor™ part (.ipt), assembly (.iam) and project (.ipj) files can be read by NavisWorks. Drawing (.idw) files cannot be read.

Note:

The reader supports files from Autodesk Inventor 2009™ and earlier. Later versions should also work, but haven't been tested. Autodesk Inventor 5™ (or higher) or Autodesk Inventor Design Tracking 5™ (or higher) must be installed. Autodesk Inventor Design Tracking™ can be downloaded from support.autodesk.com.

Supported Entities

- All geometry
- Assembly structure
- Materials


Unsupported Entities

- Material names

Inventor File Reader Options

Setting the Inventor file reader options:

1. On the **Tools** menu, click **Global Options**.
2. Expand the **File Readers** node in the **Options Editor** dialog box, and click the **Inventor** option.
The **Inventor** page is displayed.

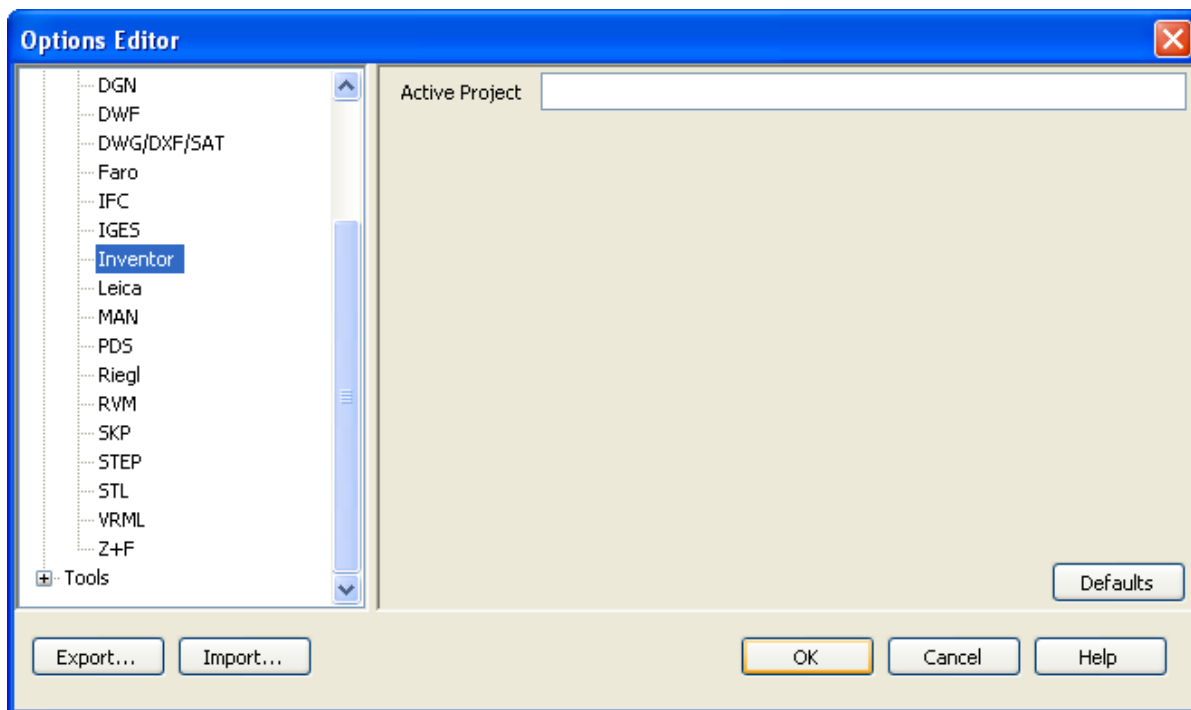

3. The **Active Project** text box displays the path of the current Inventor project. To change project, open the corresponding project file or enter the path to it here.
4. Click **OK** to set these options or **Cancel** to exit the dialog without setting them.

VRML world files

VRML world files can be read by NavisWorks.

Note:

The reader supports files in both VRML1 and VRML2 file formats.

Supported Entities

- All 3D geometry including cuboids, cylinders, cones, spheres, elevation grids, extrusions, face and line sets, and points.
- All grouping nodes - however some limitations exist on certain types of group node (see below).

Partially Supported Entities

- VRML2 Billboard nodes - children will be loaded but no billboarding will take place.
- VRML2 Collision nodes - children will be loaded but no specification of collision detection occurs.

- VRML1 WWWAnchor and VRML2 Anchor nodes - children will be loaded but any referenced VRML world will not be loaded upon clicking objects.
- VRML1 and VRML2 LOD nodes - the most detailed (i.e. first) child will always be loaded.


Unsupported Entities

- All ROUTE definitions.
- All sensor nodes.
- All interpolator nodes.
- Textures specified within the VRML file (VRML2 PixelTexture nodes and the image component of VRML1 Texture2 nodes).
- VRML2 Script nodes.
- VRML2 MovieTexture nodes.
- VRML2 Fog nodes.
- VRML2 AudioClip and Sound nodes.
- All text-related nodes (VRML1 AsciiText and VRML2 Text nodes, and FontStyle nodes).

VRML File Reader Options

Setting the VRML file reader options:

1. On the **Tools** menu, click **Global Options**.
2. Expand the **File Readers** node in the **Options Editor** dialog box, and click the **VRML** option.
The **VRML** page is displayed.

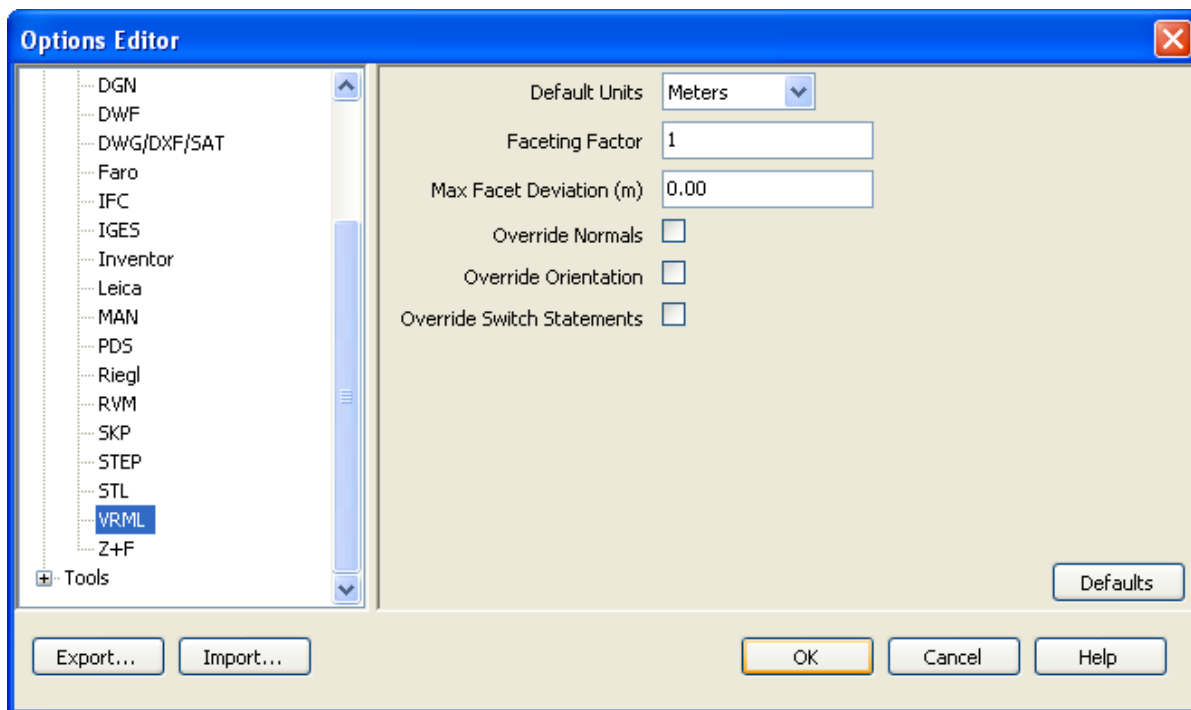

3. Use the **Default Units** drop-down list to alter the default units for any loaded VRML world.
4. Select the **Override Normals** check box if you want to override any provided normals and force auto-generation within NavisWorks.
5. Select the **Override Orientation** check box if you want to override any specified orientation of vertices and force all to be assumed to be counter-clockwise.
6. Select the **Override Switch Statements** check box if you want to override the standard behavior of switch statements. Often VRML authors will use switch statements to contain geometry selectable by scripts. Since Navisworks has no support for scripting, this option will allow some aspect of that geometry to be exposed, although results are unlikely to be precisely as the author intended.
7. Click **OK** to set these options or **Cancel** to exit the dialog without setting them.

Riegl Scan Files

Riegl™ scan files can be read by NavisWorks.

Note:

The reader supports files from all Riegl™ LMS scanners.

Supported Entities

- Points

- Triangles

Unsupported Entities


- No other entities are supported.

Riegl Scan File Reader Options

Setting the Riegl Scan file reader options:

1. On the **Tools** menu, click **Global Options**.
2. Expand the **File Readers** node in the **Options Editor** dialog box, and click the **Riegl** option.

The **Riegl** page is displayed.

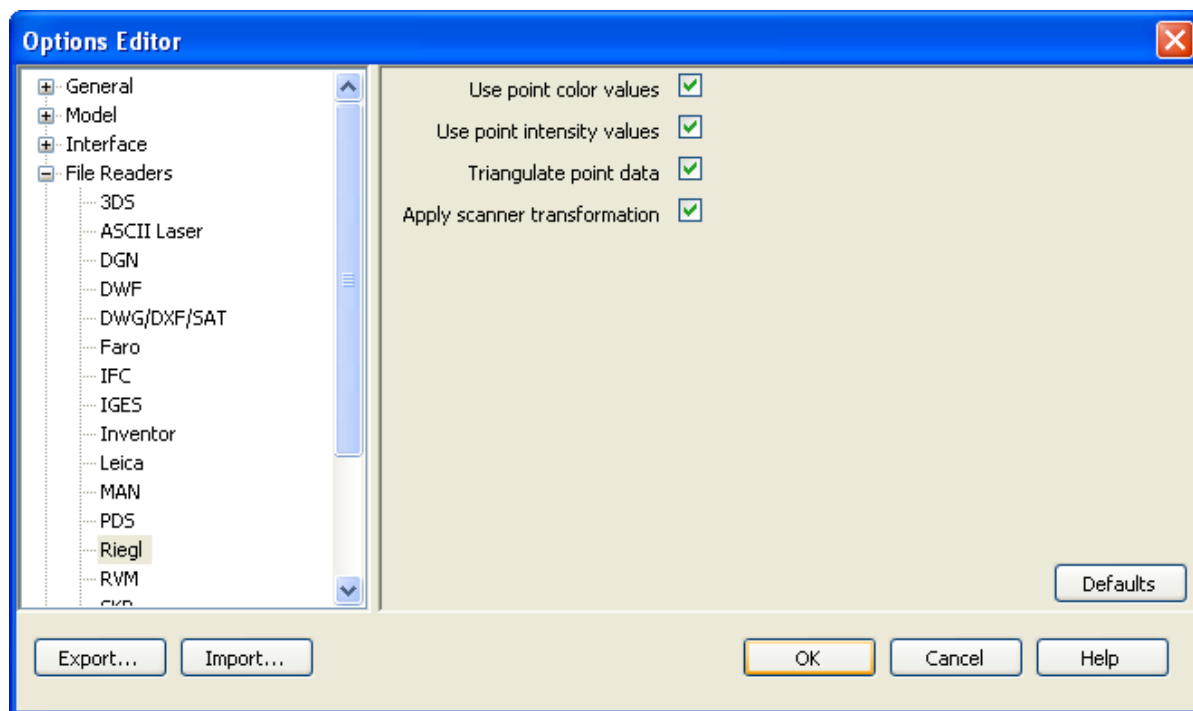

3. Select the **Use point color values** check box if you want to extract color values from the input file.
4. Select the **Use point intensity values** check box if you want to extract intensity values from the input file.
5. Select the **Triangulate point data** check box if you want to extract triangles from the input file. The file will take much longer to load.
6. Select the **Apply scanner transformation** check box if you want to display the image in global coordinates (necessary when the file contains more than one frame) or in local coordinates, relative

to the scanner.

7. Click **OK** to set these options or **Cancel** to exit the dialog without setting them.

Faro Scan Files

Faro™ scan files can be read by NavisWorks. iQmod and iQwsp files are workspace files that contain a list of one or more associated iQscan files. The iQscan files must be located in a folder called 'Scans', located in the same directory as the workspace file.

Note:

The reader supports files from all Faro™ scanners.

Supported Entities

- Points

Unsupported Entities


- No other entities are supported.

Faro Scan File Reader Options

Setting the Faro Scan file reader options:

1. On the **Tools** menu, click **Global Options**.
2. Expand the **File Readers** node in the **Options Editor** dialog box, and click the **Faro** option.

The **Faro** page is displayed.

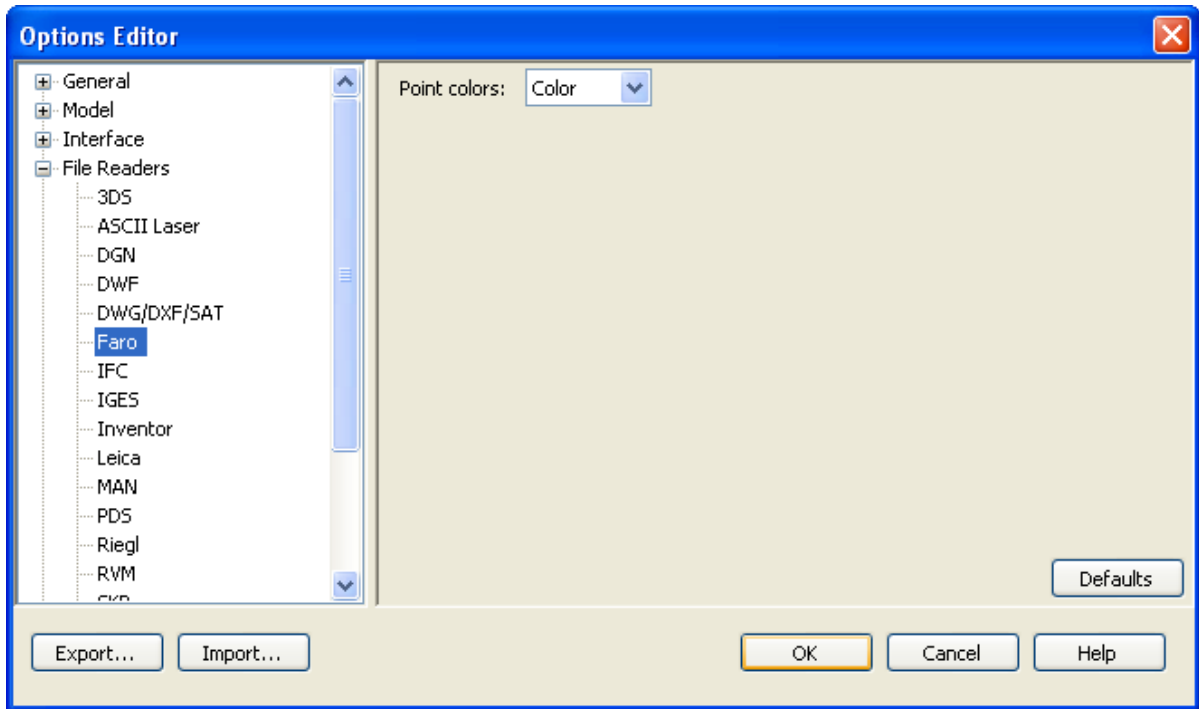

3. **Point colors** for Faro files can be set to **None** where the points come through as white, and **Intensity** and **Color** where the points use the intensity or color values stored in the file.

It should be noted that if **Point colors** is set to a higher level in the Global Options than are available in the file, then it will default to the highest available within the file. So for example if the **Point colors** are set to color, but only intensities are available in the file, intensities will be shown in the main view.

4. Click **OK** to set these options or **Cancel** to exit the dialog without setting them.

Leica Scan Files

Leica™ scan files can be read by NavisWorks.

Note:

The reader supports files from all Leica™ HDS scanners.

Supported Entities

- Points

Unsupported Entities


- No other entities are supported.

Leica Scan File Reader Options

Setting the Leica Scan file reader options:

1. On the **Tools** menu, click **Global Options**.
2. Expand the **File Readers** node in the **Options Editor** dialog box, and click the **Leica** option.

The **Leica** page is displayed.

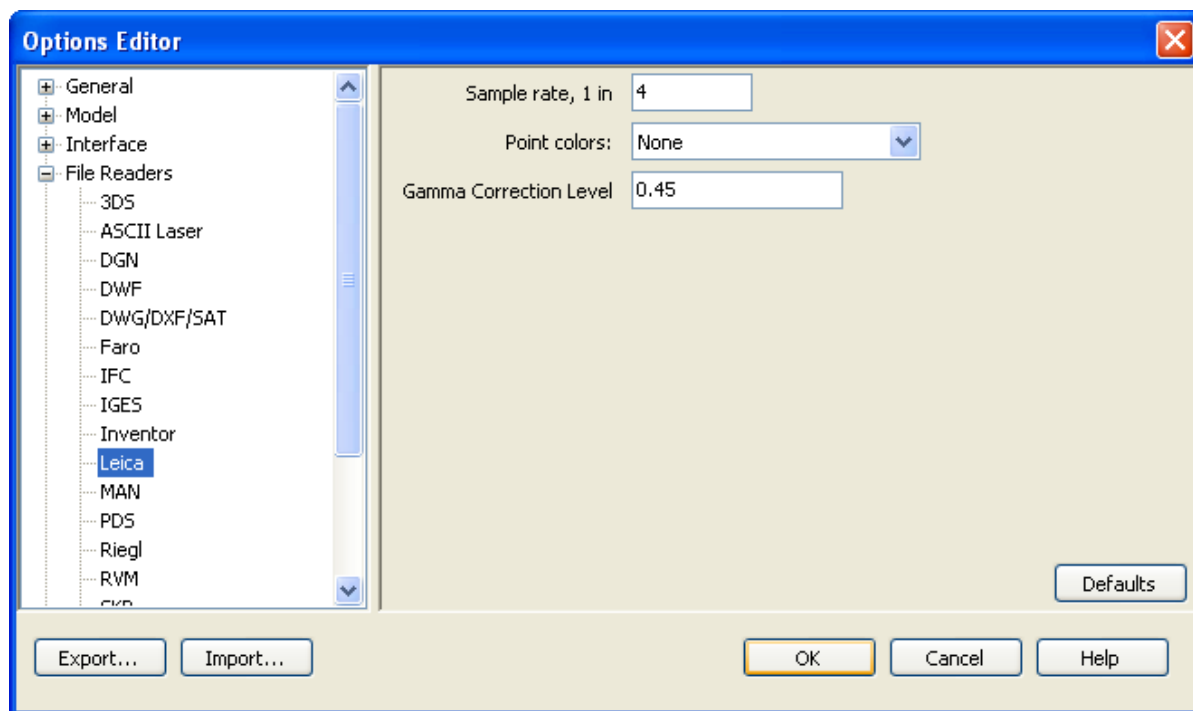

3. Set the value in the **Sample rate** box if you want to adjust the frequency of points extracted from the input file. By increasing the rate, the number of points extracted will be reduced. This will have the effect of reducing the image resolution, but increasing the speed with which the file is loaded.
4. From the **Point colors** drop-down list, choose how the points are brought through when opening Leica files. **None** brings through the points set to white. **Raw Intensities** uses the intensities set in the file. **Color** uses the color settings in the file. **Color-Mapped Intensity** transforms point intensity values to a spectrum of RGB colors. The **Gamma Correction Level** is used to alter the gamma correction values whilst using the point intensities set in the file. Gamma values can range between 0.0 and 1.0 are useful to correct weighting of intensity values at the lower end of the intensity range.
5. Click **OK** to set these options or **Cancel** to exit the dialog without setting them.

Z+F Scan Files

Z+F™ scan files can be read by NavisWorks.

Note:

The reader supports files from all Z+F™ IMAGER scanners.

Supported Entities

- Points

Unsupported Entities


- No other entities are supported.

Z+F Scan File Reader Options

Setting the Z+F Scan file reader options:

1. On the **Tools** menu, click **Global Options**.
2. Expand the **File Readers** node in the **Options Editor** dialog box, and click the **Z+F** option.

The **Z+F** page is displayed.

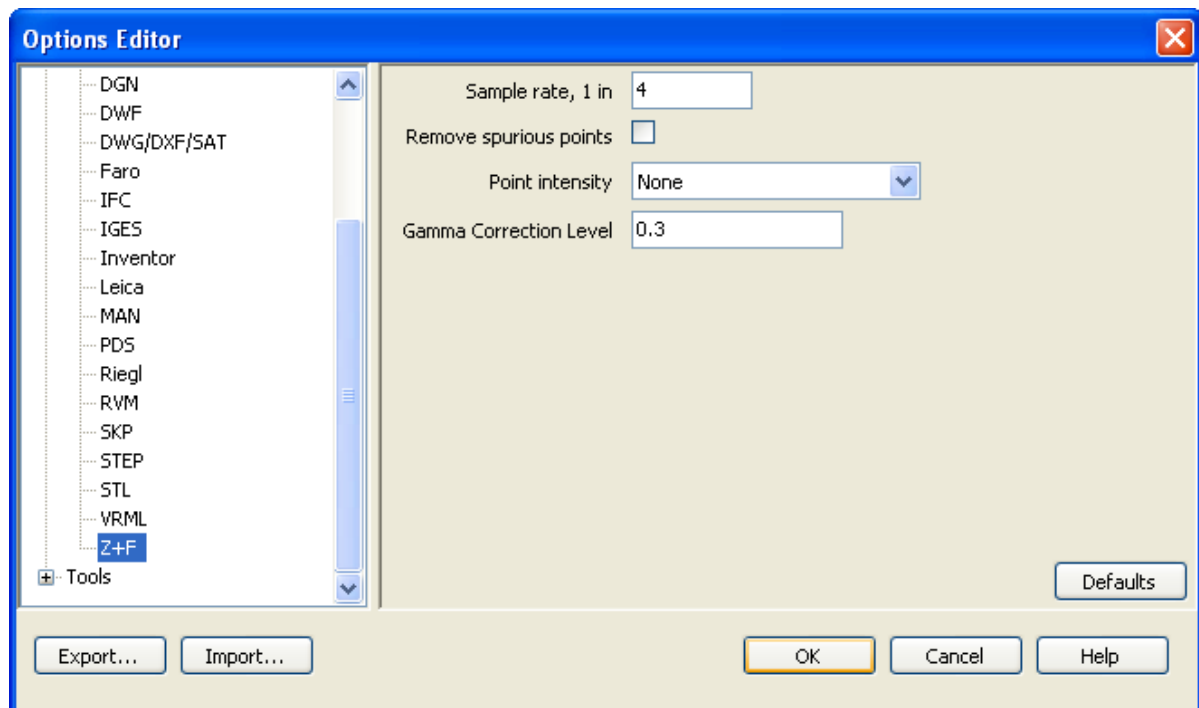

3. Set the value in the **Sample rate** box if you want to adjust the frequency of points extracted from the input file. By increasing the rate, the number of points extracted will be reduced. This will have the effect of reducing the image resolution, but increasing the speed with which the file is loaded.
4. Select the **Remove spurious points** check box if you want to ignore spurious points in the input file.

5. From the **Point intensity** drop-down list, choose how the points are brought through when opening Z+F files. **None** brings through the points set to white. **Raw Intensities** uses the intensities set in the file. **Color-Mapped Intensity** transforms point intensity values to a spectrum of RGB colors. The **Gamma Correction Level** is used to alter the gamma correction values whilst using the point intensities set in the file. Gamma values can range between 0.0 and 1.0 are useful to correct weighting of intensity values at the lower end of the intensity range.
6. Click **OK** to set these options or **Cancel** to exit the dialog without setting them.

ASCII Laser Scan Files

ASCII Laser Scan files can be read by NavisWorks.

Note:

Most scanner software allows the user to export the point data in an ASCII text file. Providing that the data is saved in the correct format, this data can be read by NavisWorks.

Supported formats for ASCII laser scan data are listed below. The data must be separated using one of the following characters: comma, tab or space. The character used to signify a decimal must be a point (period).

- X, Y, Z
- X, Y, Z, Intensity
- X, Y, Z, Red, Green, Blue
- X, Y, Z, Intensity, Red, Green, Blue

Intensity values are integers in the range 0-255 (Note: These will not be gamma corrected). Red, Green and Blue values are also integers in the range 0-255.

Supported Entities

- Points

Unsupported Entities


- No other entities are supported.

ASCII Laser Scan File Reader Options

Setting the ASCII Laser Scan file reader options:

1. On the **Tools** menu, click **Global Options**.

- Expand the **File Readers** node in the **Options Editor** dialog box, and click the **ASCII Laser** option. The **ASCII Laser** page is displayed.

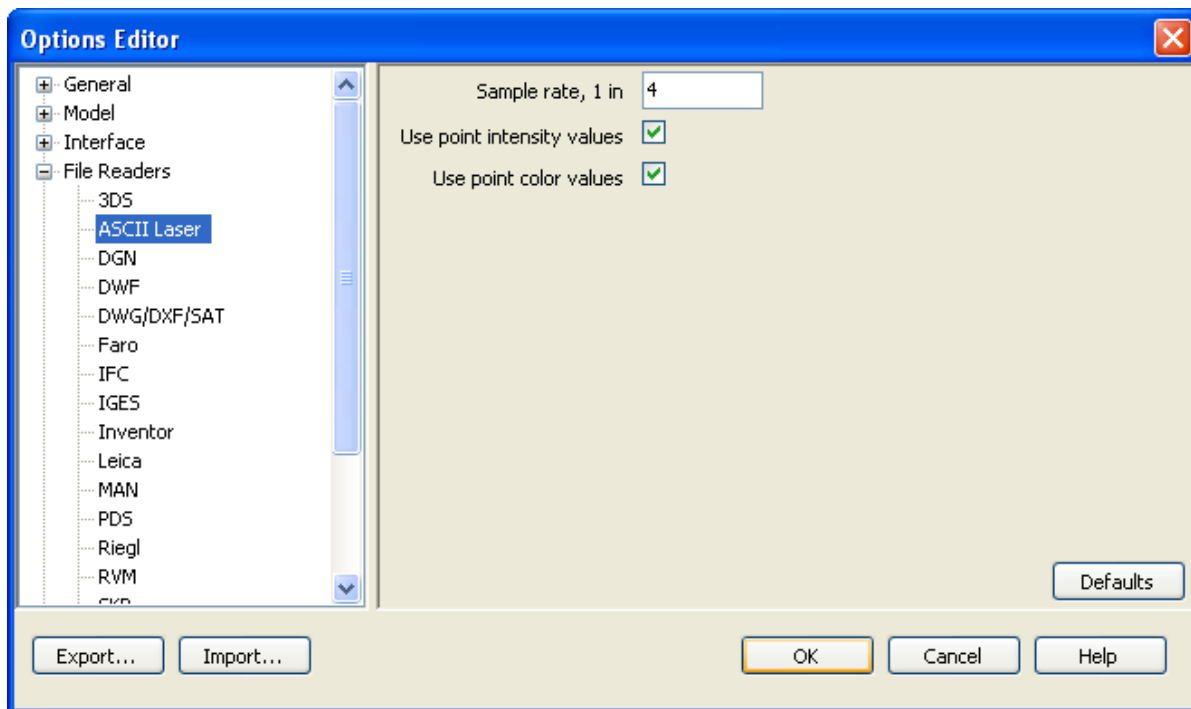

- Set the value in the **Sample rate** box if you want to adjust the frequency of points extracted from the input file. By increasing the rate, the number of points extracted will be reduced. This will have the effect of reducing the image resolution, but increasing the speed with which the file is loaded.
- Select the **Use point intensity values** check box if you want to extract intensity values from the input file.
- Select the **Use point color values** check box if you want to extract color values from the input file.
- Click **OK** to set these options or **Cancel** to exit the dialog without setting them.

STL Stereolithography files

STL™ stereolithography files can be read by NavisWorks.

Note:

The reader only supports binary files. ASCII versions are unsupported.

Supported Entities

- Triangles

Unsupported Entities


- No other entities are supported.

STL File Reader Options

Setting the STL file reader options:

1. On the **Tools** menu, click **Global Options**.
2. Expand the **File Readers** node in the **Options Editor** dialog box, and click the **STL** option.

The **STL** page is displayed.

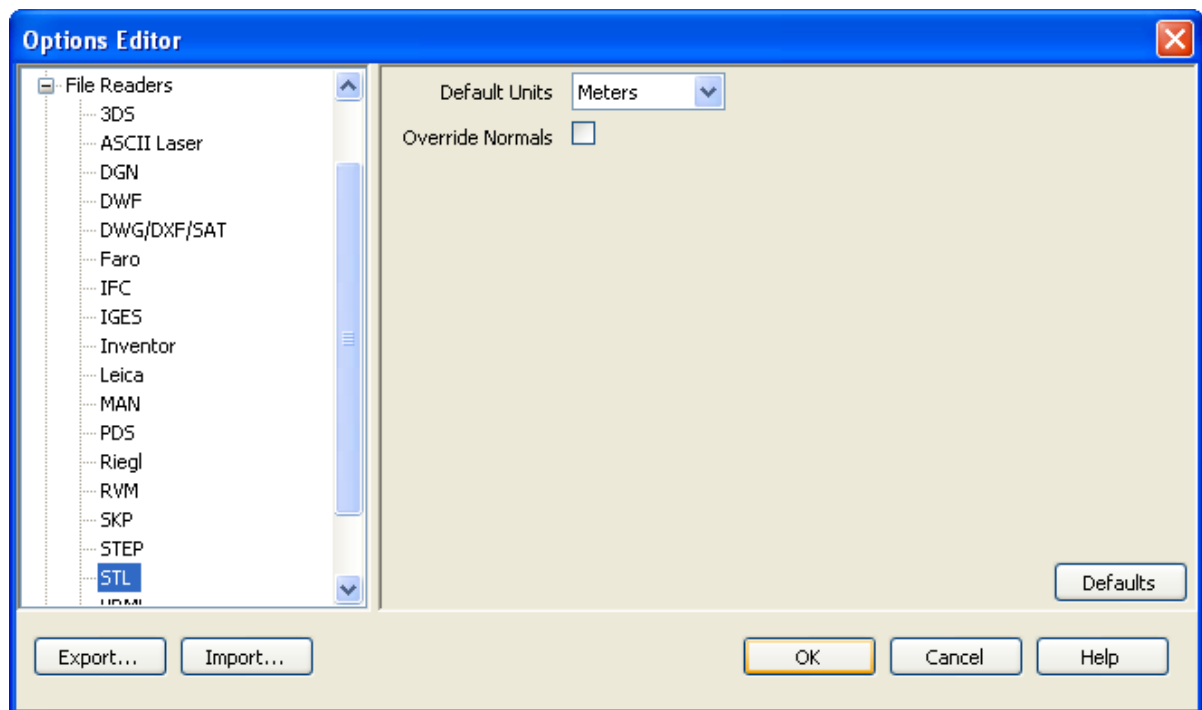

3. Use the **Default Units** drop-down list to alter the default units for any loaded STL solid.
4. Select the **Override Normals** check box if you want to override any provided normals and force auto-generation within NavisWorks.
5. Click **OK** to set these options or **Cancel** to exit the dialog without setting them.

AVEVA Review™ RVM and RVS files

The NavisWorks RVM Reader can read both binary and ASCII .rvm files exported from AVEVA's PDMS™ product. Attribute files are supported, output using either the "Dump Attributes" or "Data" (also called "OUTPUT") formats, with the file extensions .att, .attrib and .txt. RVS files are also supported.

Supported Entities

- All geometry
- Attributes stored on groups
- Textures (via RVS file)
- Cameras and camera tracks (via RVS file)
- Clip planes (via RVS file)
- Signs (via RVS file)
- Tags (via RVS file)
- Labels (via RVS file)
- Translucency (via RVS file)


Unsupported Entities

- Attributes stored on primitives
- Lights
- Object Animation
- Smooth Animation
- Groups
- Autotags

RVM File Reader Options

Setting the RVM file reader options:

1. On the **Tools** menu, click **Global Options**.
2. Expand the **File Readers** node in the **Options Editor** dialog box, and click the **RVM** option.
The **RVM** page is displayed.

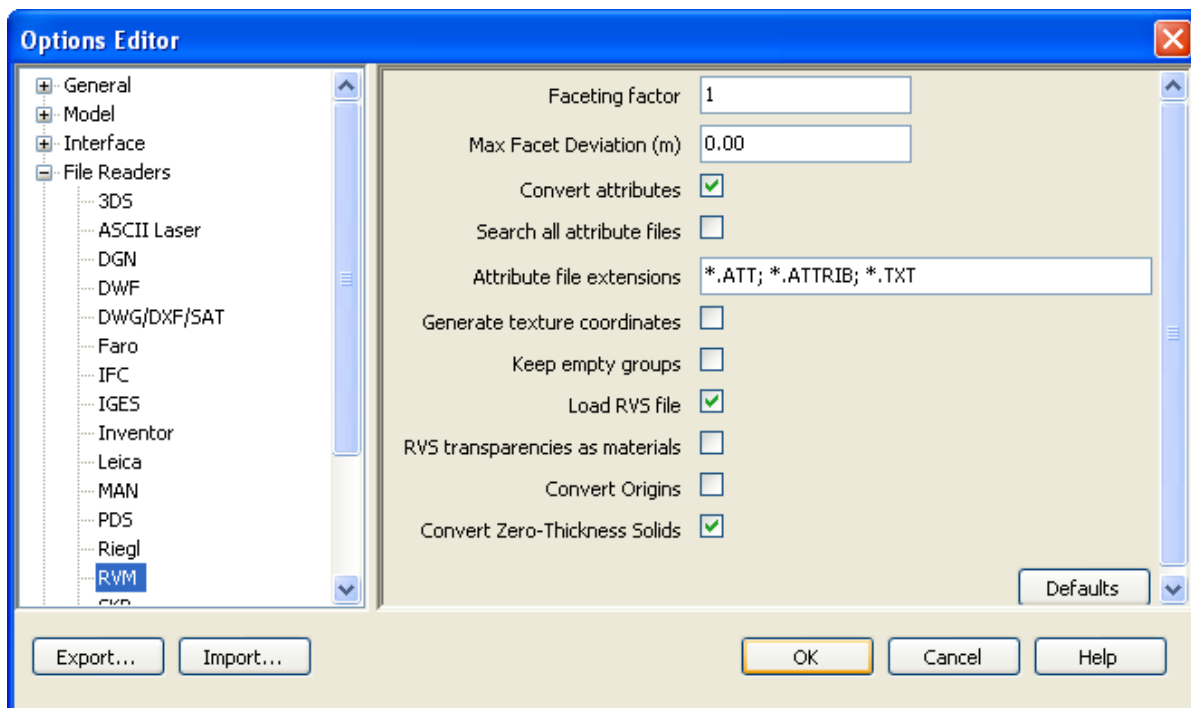

3. Enter the **Faceting Factor** (the value must be greater than 0). The higher the value, the more NavisWorks will facet rounded entities and therefore the smoother they will appear. See [Faceting Factor](#) for more information.
4. Enter the **Max Facet Deviation**. This will facet entities to within the specified tolerance. See [Max Facet Deviation](#) for more information.
5. Select the **Convert attributes** check box to attempt to load attribute files.
6. Select the **Search all attribute files** check box to affect how attribute files are looked for and loaded.

If unchecked, the reader firstly looks for an attribute file with the same name as the RVM file in the same directory, followed by all attribute files contained within any subdirectory with the same name as the RVM file. The attribute file extensions searched are listed in the **Attribute file extensions** box.

If the **Search all attribute files** check box is selected, the reader looks for a file using the method above, but also tries all attribute files in the same directory as the RVM irrespective of filename.

7. **Attribute file extensions** lists all extensions that will be considered for attribute conversion. This can be edited and added to where necessary.

Note:

Using **Dump Attributes** may not bring through all attribute data. If more than one database is used in the project, it is recommended that attributes be exported using the **Datal** method.

8. Select the **Generate texture coordinates** check box to create texture coordinates for each point in the model. This will affect how textures are applied to the geometry.
9. Select the **Keep empty groups** check box to keep any groups in RVM file that do not contain

geometry. If unchecked, such groups will be discarded.

Note:

RVM files do not contain color information beyond a color number on each scene element. As these colors are customisable; NavisWorks provides a color definition file to allow easy color personalisation.

Two examples of this file are located in the RVM subdirectory inside the main NavisWorks install directory:

colors.txt - these are a set of default Review™ colors (this file is used by NavisWorks).

PDMS_colors.txt - these are a set of the default PDMS™ colors (example file - this is not used by NavisWorks)

To use a different set of colors, copy the **colors.txt** file into one of the NavisWorks search directories, and edit the contents accordingly. The RVM Reader will search these directories on startup and use the first colors.txt file it finds. See “[Search Directories](#)” for more information

10. **Load RVS file** should be selected if a corresponding RVS file should be searched for and loaded on loading the RVM file. To work correctly, the RVS file must have the same name as the associated RVM file, but with the .rvs extension.
11. **RVS transparencies as materials** should be selected if it is required to respect transparencies coming through from the RVS files, treating them as materials within NavisWorks. If this is left unchecked, RVS transparencies are ignored.
12. Click **OK** to set these options or **Cancel** to exit the dialog without setting them.

IFC files

The NavisWorks IFC Reader reads in stand-alone .ifc files.

Supported Entities

- Faceted BReps
- Extruded area solids
- Geometric sets
- Face-based and surface-based models
- Simple, trimmed, and composite curves
- Simple surfaces
- Simple parametric, arbitrary and derived profiles
- Boolean clipping results and element-level voiding and projection CSG operations
- Basic styled and mapped items

- Property sets, including simple and complex properties


Unsupported Entities

- Voided BReps
- Bounded half-space solids
- Complex parametric profiles
- BSpline curves
- Curve styles
- Swept surfaces
- Textures and complex lighting
- Loading of server-based IFC models

IFC File Reader Options

Setting the IFC file reader options:

1. On the **Tools** menu, click **Global Options**.
2. Expand the **File Readers** node in the **Options Editor** dialog box, and click the **IFC** option.
The **IFC** page is displayed.

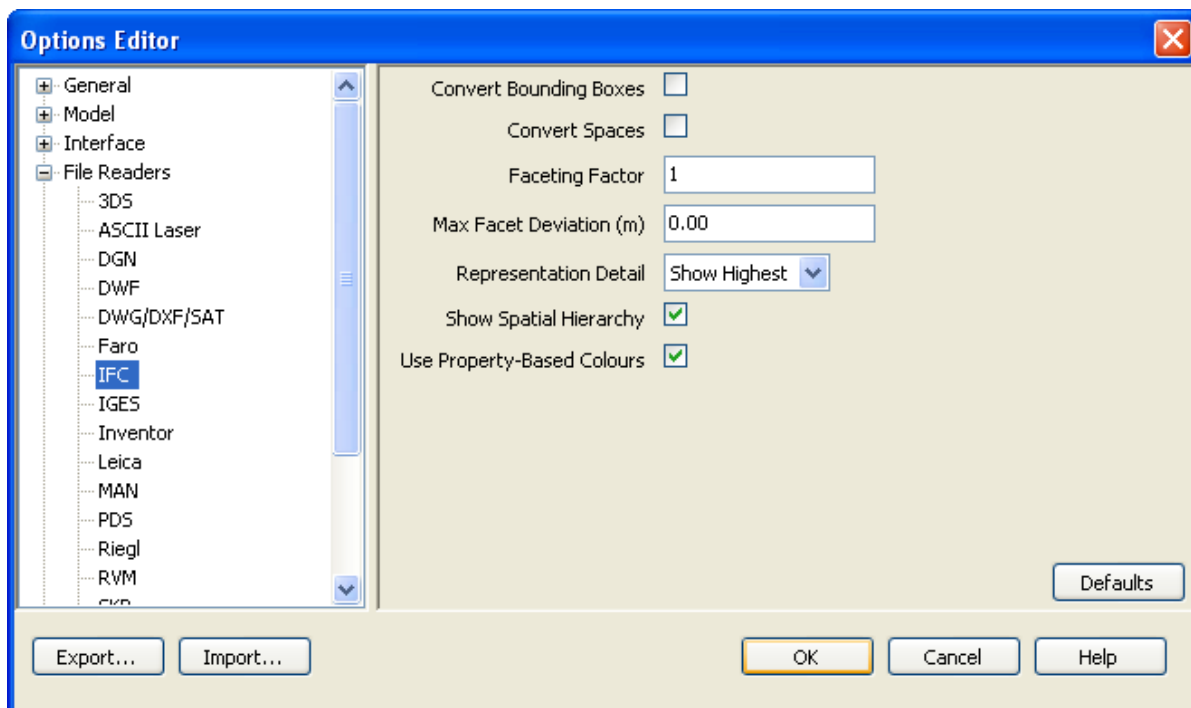

3. Enter the **Faceting Factor** (the value must be greater than 0). The higher the value, the more NavisWorks will facet rounded entities and therefore the smoother they will appear. See [Faceting Factor](#) for more information.
4. Enter the **Max Facet Deviation**. This will facet entities to within the specified tolerance. See [Max Facet Deviation](#) for more information.
5. Select the **Show Spatial Hierarchy** check box to have the Selection Tree window show the IFC model representation as a tree structure rather than a simple list of elements.
6. Select the **Convert Bounding Boxes** check box to bring through and visualise bounding boxes.
7. Select the **Convert Spaces** check box to bring through and visualise spaces.
8. Select the **Use Property-Based Colors** check box to convert and use property-based colors. If it is found that an ifc file is predominantly black when loaded, clear this box to revert back to using ifc-standard colors.
9. IFC elements can have multiple visual representations; bounding boxes (simplest), lines, styled lines, polygons, and styled polygons (most complex). Loading and showing all of these representations can lead to cluttered visuals and memory overheads. To manage this, **Representation Detail** can be set to **Highest Only** to only load and show the most complex level of detail available whilst ignoring simpler ones, **Show Highest** to load all representations, but only show the highest level of detail available, or **Show All** to show everything available.
10. Click **OK** to set these options or **Cancel** to exit the dialog without setting them.

Sketchup SKP files

NavisWorks supports Sketchup through its native SKP file format.

Supported Entities

- Geometry
- Materials (face front material only)
- Transparency
- Groups
- Components
- Layers
- Imported images
- Transparency

Unsupported Entities


- Text
- Dimensions
- Section planes

Sketchup SKP File Reader Options

Setting the SKP file reader options:

1. On the **Tools** menu, click **Global Options**.
2. Expand the **File Readers** node in the **Options Editor** dialog box, and click the **SKP** option.

The **SKP** page is displayed.

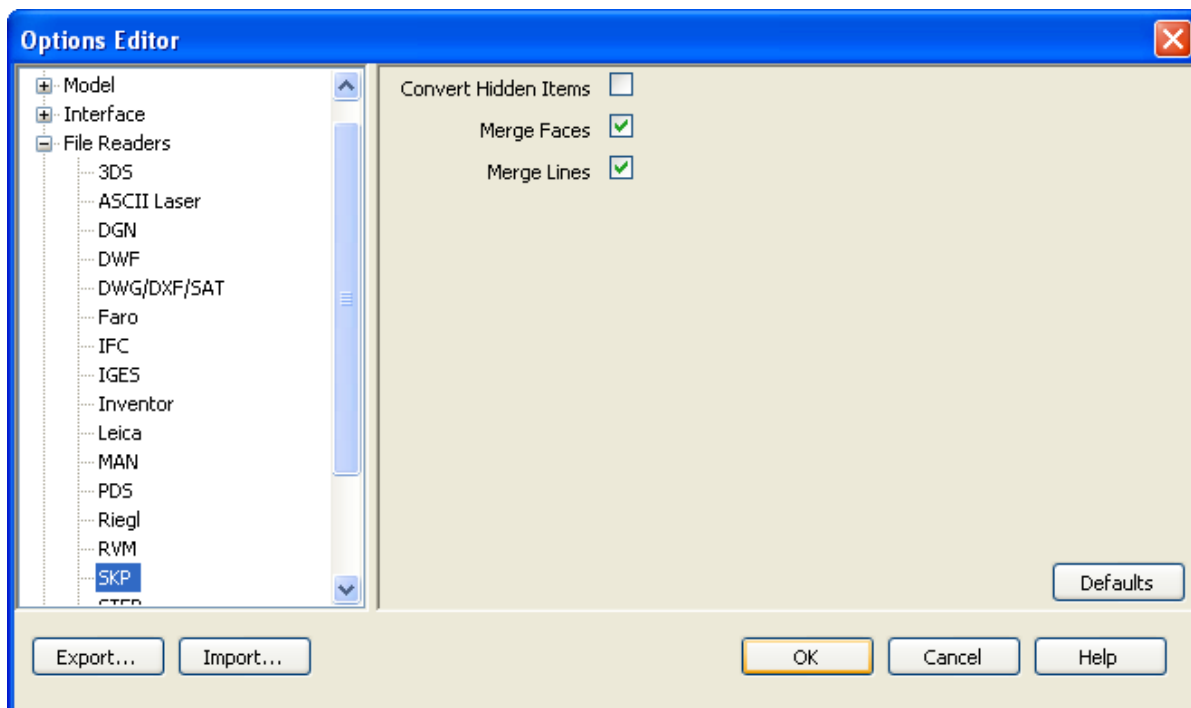

3. Select the **Convert Hidden Items** check box if you want to read hidden entities from the .skp file. They will be converted but hidden in NavisWorks.
4. Select the **Merge Faces** check box if you want to reduce the complexity of the model as seen in the selection tree by interpreting a body as a single item consisting of a group of faces. Leaving unchecked leaves the faces as separate items in NavisWorks.
5. Select the **Merge Lines** check box if you want to reduce the complexity of the model as seen in the selection tree by interpreting adjoining lines with the same color, layer and parent as a single item. Leaving unchecked leaves these entities as separate items in NavisWorks.
6. Click **OK** to set these options or **Cancel** to exit the dialog without setting them.

File Exporters

Cache files can in some cases be exported from the CAD application itself. Currently, they can be written directly from AutoCAD, Revit, MicroStation, ArchiCAD and Viz. There are two reasons you may want to use cache files in this way:

1. Autodesk NavisWorks Manage 2009 cannot read the native CAD file directly, in the case of ArchiCAD, Viz and Revit, but you wish to view the files created in these applications.
2. You wish to get a better quality file into NavisWorks. Although the direct file readers are adequate the majority of the time, the exporters can get a better quality. So if you are missing some items, or some items are being read wrongly by reading the native CAD files directly, then try exporting to an .nwc file and reading this into NavisWorks instead.

There are .nwc file exporters for the following CAD applications:

- Autodesk's AutoCAD
- Autodesk's Revit
- Bentley's MicroStation
- Autodesk's Viz and Max
- Graphisoft's ArchiCAD

AutoCAD .nwc Exporter

NavisWorks comes with ARX plugins for any AutoCAD™ based product, such as Architectural Desktop™, that enable you to export an .nwc file directly from the CAD application in which it was created. As long as AutoCAD is already installed on the computer when NavisWorks is installed, the ARX plugin is installed with NavisWorks on a **Custom Install** or **Full Install** and ready for use.

Note:

If you install AutoCAD after NavisWorks, then install NavisWorks again, choosing the **Custom Install** option and choose the relevant version of AutoCAD. The NavisWorks installer will find the right place for the plugin and set up all relevant registry entries for you.

The .nwc exporter is available for any AutoCAD based product between AutoCAD 14 and 2009 releases.

You can also publish .nwd files directly from AutoCAD™ if you have the Publisher tool. For more details, refer to "[Publishing from AutoCAD](#)".

Exporting .nwc files from AutoCAD:

1. Type **nwcout** at the command line.
2. The standard Windows™ **Save As** dialog box is displayed, so choose the location and name of the .nwc file to be exported.
3. Click **OK** to export the file or **Cancel** to return to AutoCAD without exporting it.

See "[DWG and DXF Files](#)" for what entities are and are not supported by the AutoCAD exporter.

If, on typing **nwcout** at the command line, you get an error, you probably have to load the ARX plugin manually. You should only have to do this once.

Loading the NavisWorks ARX Plugin

Loading the ARX plugin manually:

1. Type **ARX** (followed by return) at the command line.
2. Then type the letter **I** (followed by return) at the command line, for "Load".
3. The **Select ARX file** dialog box will be displayed, so browse to the ARX plugin. By default, for AutoCAD R14, this will be C:\Program Files\Common Files\Autodesk\NavisWorks\2009\nwexport.arx, for AutoCAD 2000 based applications, this will be C:\Program Files\Common Files\Autodesk\NavisWorks\2009\NWExport2000\nwexport2000.arx, for AutoCAD 2004 based applications, this will be C:\Program Files\Common Files\Autodesk\NavisWorks\2009\NWExport2004\nwexport2004.arx, and so on.
4. Click **OK** to load the ARX plugin.
5. You should now be able to use the **nwcout** command from AutoCAD to export an .nwc file.

The NavisWorks Partial Menu for AutoCAD

If you prefer to work from menus, there is a partial menu available to run this export command from, along with the other NavisWorks ARX plugins.

Loading the NWExport partial menu:

1. At the command line, type **menuload** (followed by return).
2. The **Menu Customization** dialog box will be displayed, so change the **Files of type** to **Menu Template (*.mnu)** and browse to the partial menu. By default, for AutoCAD R14, this will be C:\Program Files\Common Files\Autodesk\NavisWorks\2009\NWExport\LwNw_Export.mnu, for AutoCAD 2000 based applications, this will be C:\Program Files\Common Files\Autodesk\NavisWorks\2009\NWExport2000\LwNw_Export.mnu, and for AutoCAD 2004 based applications, this will be C:\Program Files\Common Files\Autodesk\NavisWorks\2009\NWExport2004\LwNw_Export.mnu, and so on.
3. Click **Load** and then **Yes** to the dialog box that appears.

You should now have a **NavisWorks** menu just before the **Help** menu and this will be reloaded into future AutoCAD sessions. This menu contains 4 items:

- Publish .nwd
See "[Publishing from AutoCAD](#)" for more details.
- Export .nwc
See "[AutoCAD .nwc Exporter](#)" for more details.
- NavisWorks Export Options
See "[AutoCAD .nwc Exporter Options](#)" for more details.

- Navigator

See “ [NavisWorks Navigator for AutoCAD](#) ” for more details.

AutoCAD .nwc Exporter Options

Available from the NavisWorks menu, or by typing **nwopt** at the command prompt, this enables you to configure various elements of the exported file to your choosing.

See “ [DWG and DXF File Reader Options](#) ” for details on what each of the options does.

Once you have set the options, future exports of .nwc and publishes of .nwd files will use these settings.

Revit .nwc Exporter

Autodesk NavisWorks Manage 2009 cannot read native Revit files directly, however, support for both Revit Building and Revit Structures can be achieved through exporting a NavisWorks .nwc cache file, which can then be read into NavisWorks.


Note:

Earlier versions of Revit (Building 8 / Structures 2) require the .NET Framework version 1.1 to be separately installed. If the .Net Framework version 1.1 is not installed an error message will be displayed when Revit is started. You can download a copy of the .Net Framework version 1.1 by searching for ".Net Framework version 1.1 redistributable package" in the downloads section of [Microsoft's website](#).

Exporting .nwc files from Revit:


1. Start Revit and load the project.
2. Set the editing view to normal, and make sure the **Modify** tool is selected.
3. Select the **Tools > External Tools > Autodesk NavisWorks Manage 2009** menu option. If this option is not available, check firstly that the **Modify** tool is selected, and secondly that the Revit license is correct such that the product is not being used in Demo/Viewer mode.

A file selection dialog box is displayed.

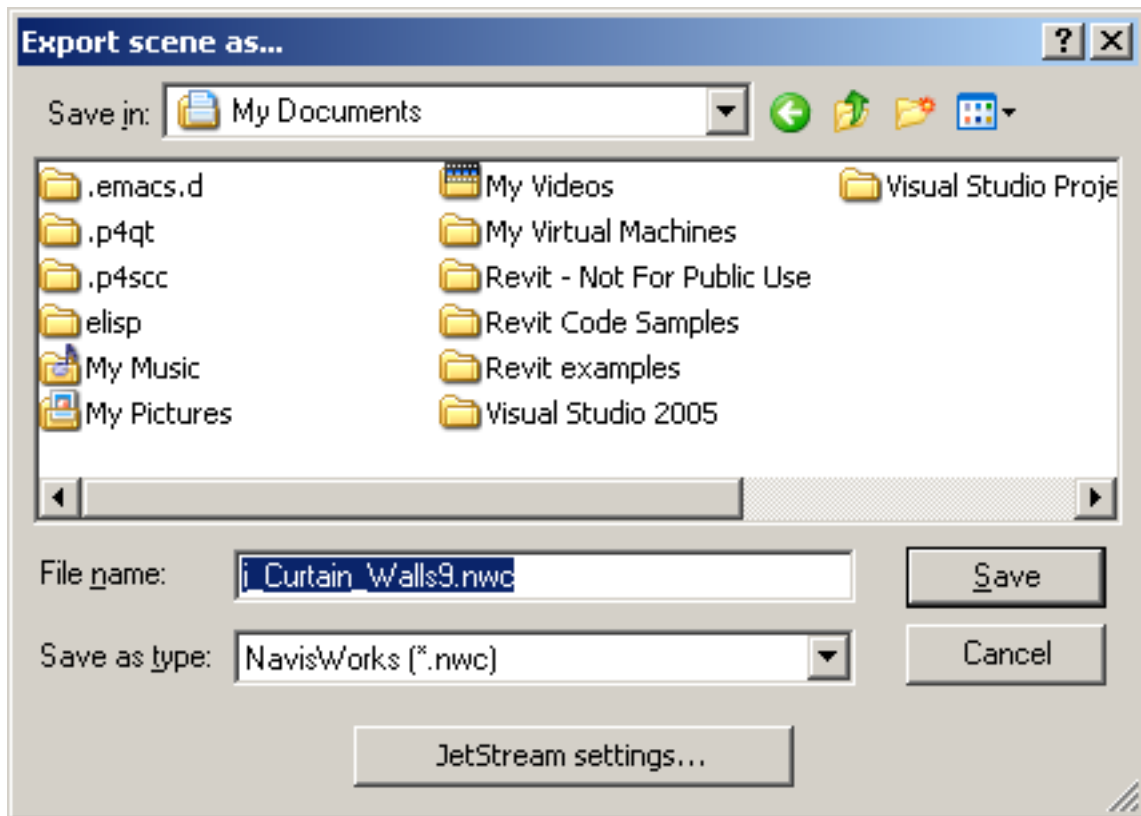

4. Select the location and filename you want to export to.
5. Click on the **NavisWorks settings** button to change the export configuration.

The **Revit Options** dialog is displayed

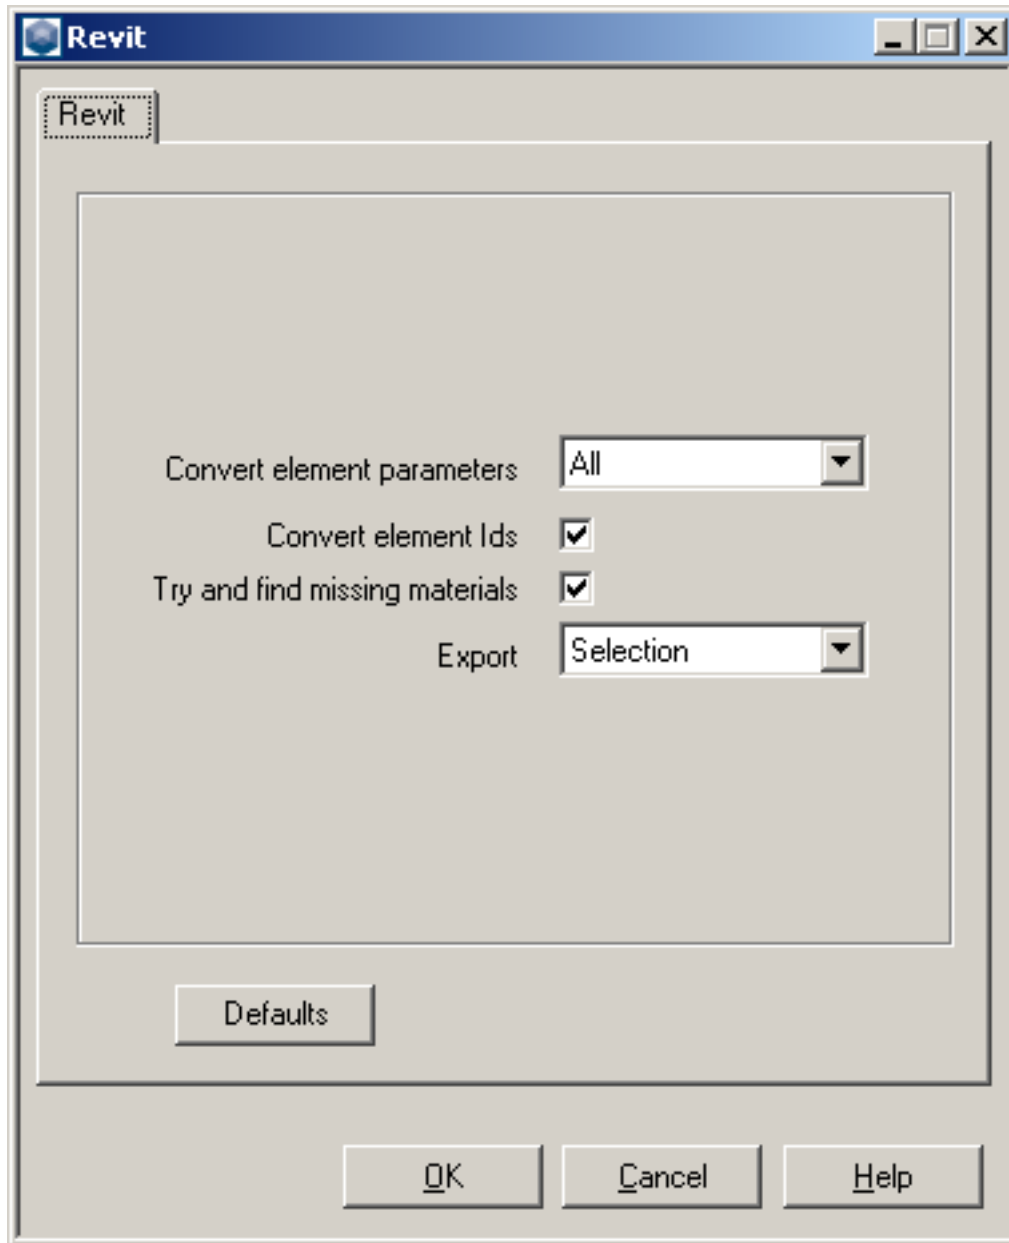

6. **Convert element parameters** can be set to **None** where none of the parameters are read, **Elements** where all parameter fields are read from all found elements, or **All** where all parameters from all found elements are read, as well as property tabs added for any elements referenced.
7. Select the **Convert element Ids** check box to export the id numbers on each Revit element.
8. Select the **Try and find missing materials** check box to search for an appropriate material where one is expected but not found. This can help to improve the appearance of exported models.
9. **Export** can be set to **Entire scene** where all geometry in the project is exported, **Current view** where everything that is currently visible is exported, or **Selection** where only those items that are currently selected are exported.

10. Click **OK** to export the file or **Cancel** to return to Revit without exporting it.

MicroStation .nwc Exporter

NavisWorks comes with MDL plugins for MicroStation™ 95, SE, /J and v8 that enable you to export .nwc files directly from the CAD application in which it was created. As long as MicroStation is already installed on the computer when NavisWorks is installed, the MDL plugin is installed with NavisWorks on a **Custom Install** or **Full Install** and ready for use.

Note:

If you install MicroStation after NavisWorks, then install NavisWorks again, choosing the **Custom Install** option and choose the relevant version of MicroStation. The NavisWorks installer will find the right place for the plugin and set up all relevant registry entries for you.

You can also publish .nwd files directly from MicroStation™ if you have the Publisher tool. For more details, refer to “ [Publishing from MicroStation](#) ”.

There are two steps to exporting .nwc files from MicroStation - first you have to load the MDL plugin into MicroStation and then you have to export the file.

Loading the NavisWorks MDL Plugin

Loading the NWExport MDL plugin manually:

1. Go to the **Utilities > Key-in** dialog box to load the application manually.
2. Type "**mdl load nwexport6**" (without the quotes) and press return.

If you regularly export .nwc files from MicroStation, then you will not want to load the NWExport plugin manually each time, so do the following:

Loading the NWExport MDL plugin automatically:


1. Go to **Workspace > Configuration**.
2. Choose **Design Applications** under **Category**.
3. Choose **NWEXPORT6** under **Available Applications**.
4. Click **Add** and confirm that you want NWExport added to your default configuration.
5. MicroStation will then automatically load NWExport in future sessions.
6. Click **OK**.

Once NWExport plugin is loaded, you can export to .nwc using the **nwcout** command from the key-in command line.

Exporting .nwc files from MicroStation:

1. Type **nwcout** at the key-in prompt.

The MicroStation export dialog box is displayed.

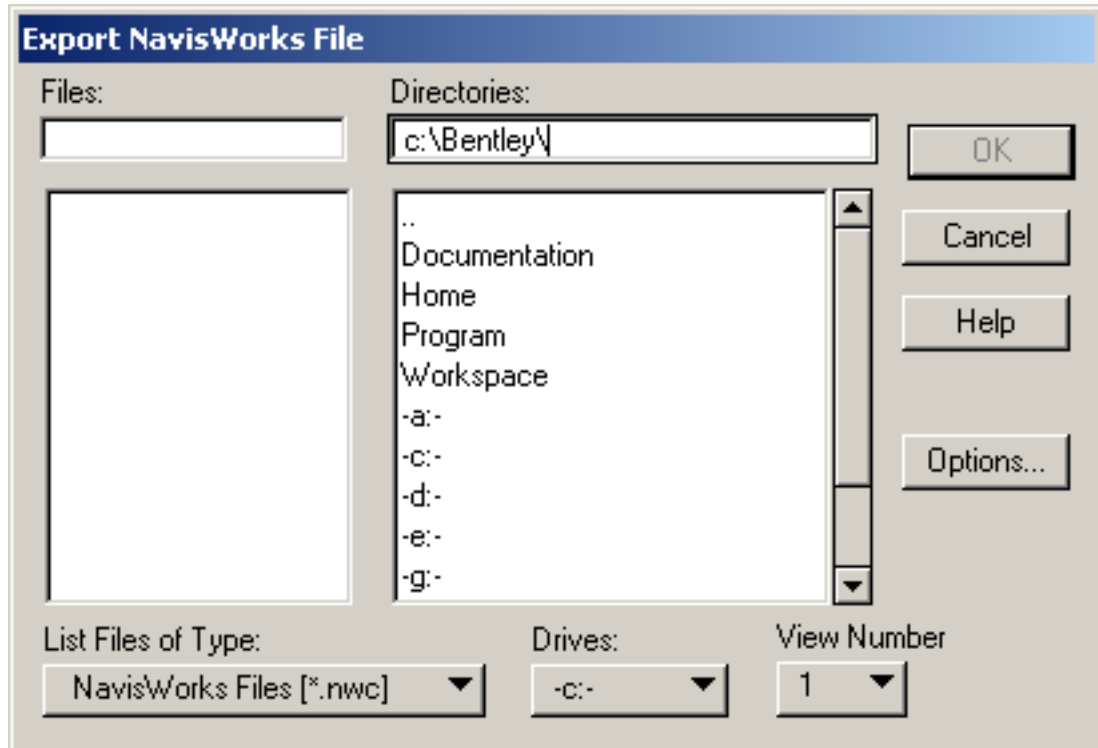

2. Select the location and filename you want to export to. The exporter will make a guess at a suitable filename for you.
3. Select the view number you wish to the model to be exported from.
4. Click the **Options** button if you want to change the export configuration. See “ [MicroStation .nwc Exporter Options](#) ” for more information on these options.
5. Click **OK** to export the file or **Cancel** to return to MicroStation without exporting it.

Note:

MicroStation can also be customized to add NWExport commands to the menu bar using the **Workspace > Customize** dialog box.

See “ [DGN and PRP Files](#) ” for what entities are and are not supported by the MicroStation exporter.

NavisWorks colors are derived from either MicroStation cell colors or MicroStation materials, depending on the export options set during **nwcout**. The appearance of objects in Publisher will match the appearance of a MicroStation shaded render.

The view number chosen for export determines the initial view in NavisWorks, whether level symbology is used and which levels are hidden.

Note:

The exporter only exports from 3D dgn files - 2D files are not supported.

Quickly exporting files

If you want to export the current design file quickly, you can use the **batchnwcout** key-in. This will not display the export dialog box, and it will not prompt you to overwrite any existing files. It simply replaces the design file extension (usually .dgn) with .nwc when exporting.

Exporting from the command line

The MicroStation exporter can also be run from the command line. This is useful when you want to export lots of files using an automated script.

It uses the **msbatch.bat** batch file that comes with MicroStation. To export a file from the command line, you must first ensure that the MicroStation program directory is in your `PATH` environment variable.

The format of the command line exporter is:

msbatch nwexport6 [-f] FILE [OUTPUT]

FILE is the name of the DGN file you want to export. This is the only required option. If you want, you can specify the name of the output file with the **OUTPUT** argument.

The command line exporter will only convert a file if it has changed since the last time you exported it. This is useful for speeding up exporting of a large number of files. If you want to force the exporter to re-export a file, use the **-f** option.

If the exporter encounters any problems, it will produce an error log in a file called `nwdout.err`.

MicroStation .nwc Exporter Options

Available from the NWExport dialog box, this enables you to configure various elements of the exported file to your choosing.

See “[DGN File Reader Options](#)” for details on what each of the options does.

Once you have set the options, future exports of .nwc and publishes of .nwd files will use these settings.

Viz and Max .nwc Exporter

While NavisWorks cannot directly read .max files, there is a plugin for Viz versions from 3 to 2008 and Max versions from 5 to 2009 that will export the model to an .nwc cache file that can then be read into NavisWorks. Viz will be outlined here, although the process is exactly the same for Max.

As long as Viz is already installed on the computer when NavisWorks is installed, the plugin is installed with NavisWorks on a **Custom Install** or **Full Install** and ready for use.

Note:

If you install Viz after NavisWorks, then install NavisWorks again, choosing the **Custom Install** option and choose the relevant version of Viz. The NavisWorks installer will find the right place for the plugin and set up all relevant registry entries for you.

See “[3DS Files](#)” for information on the supported and unsupported entities for the Viz exporter.

Exporting .nwc files from Viz and Max:

1. Go to **File > Export**.
The **Export** dialog box is displayed.
2. Set the **File Type** to "NavisWorks File (*.nwc)" and choose the location and name of the .nwc file to be exported.
3. Click **OK** to export the file or **Cancel** to return to Viz without exporting it.

Note:


Any textures applied to the Viz model will be saved in a directory with the same name as the exported file, but with a "_presenter_maps" suffix. All textures will be converted into .bmp files and saved into this directory for use with NavisWorks.

Viz and Max .nwc Exporter Options

You have some control over the items that are exported from Viz to NavisWorks.


Setting the Viz and Max exporter options:

1. Go to the **Utilities** tab and click the **More** button.
2. Select **NavisWorks** from the list and click **OK**.
3. The NavisWorks command panel containing four buttons will open.

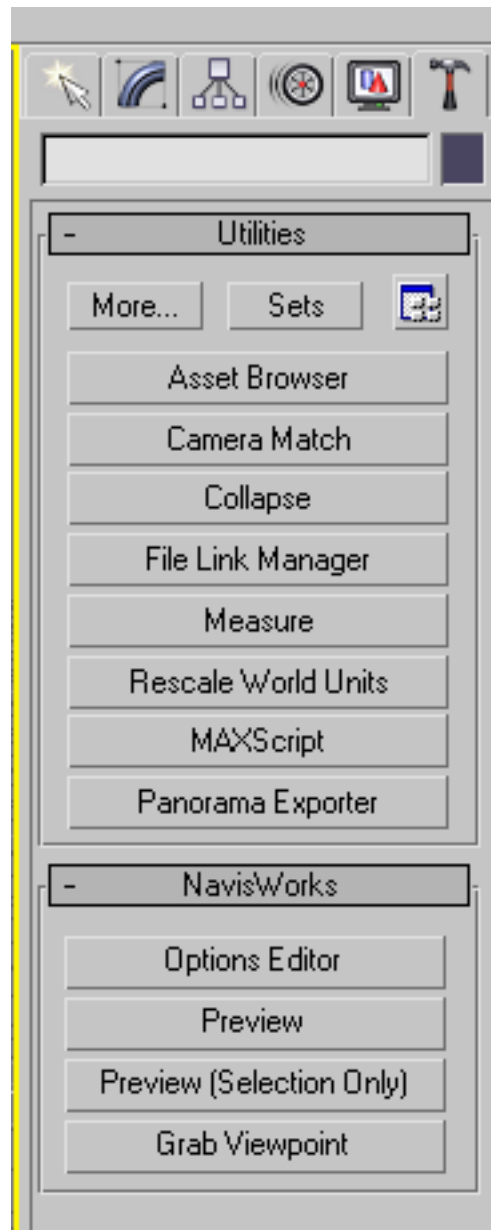

4. Click the **Options Editor** button.

The **NavisWorks Options** dialog box is displayed.

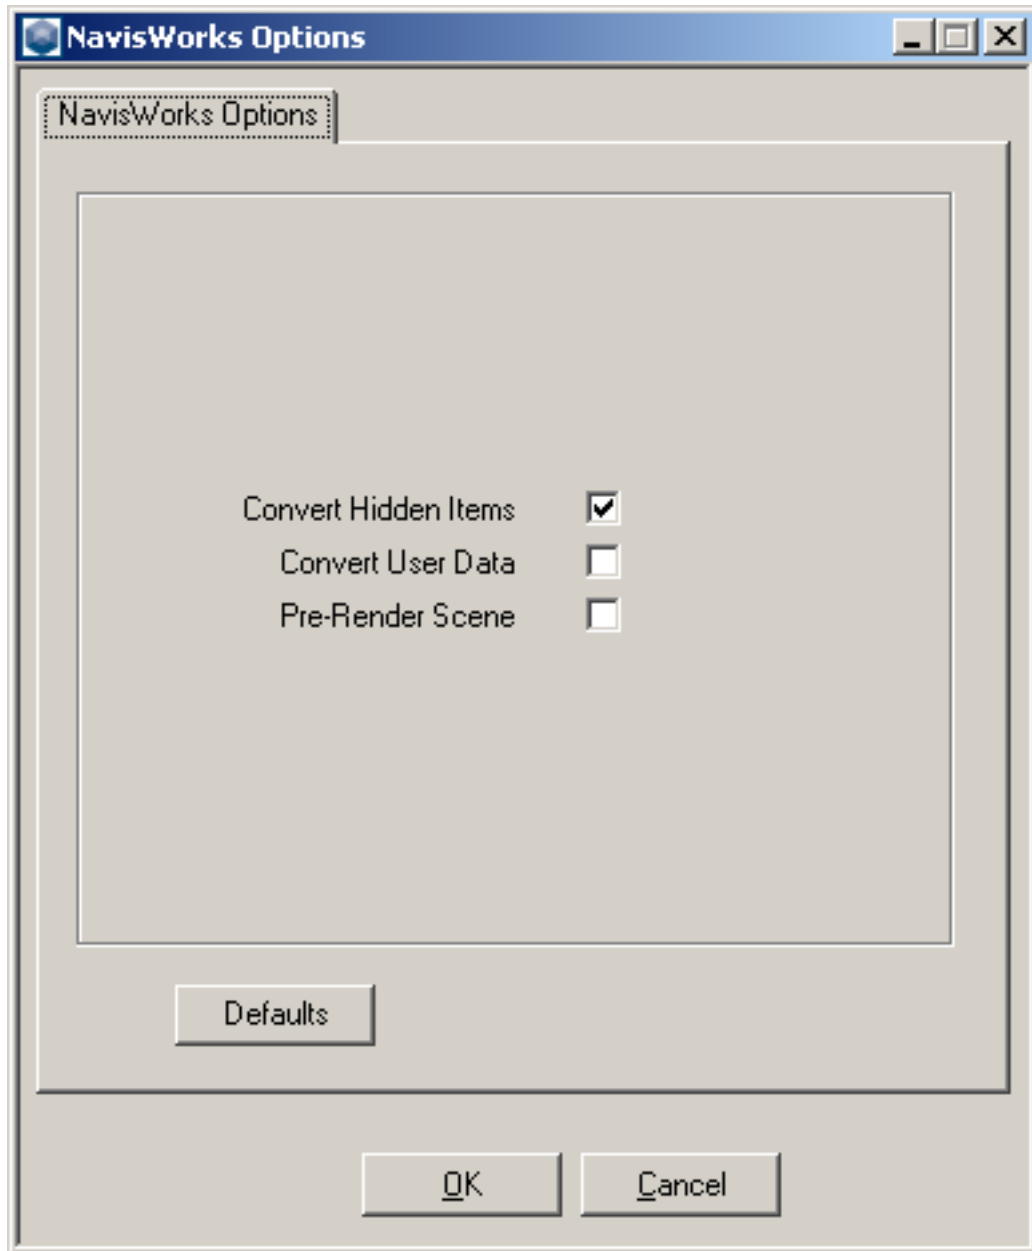

5. Select the **Convert Hidden Items** check box if you want to export hidden entities from the Viz scene. They will be exported but hidden in NavisWorks.
6. Select the **Convert User Properties** check box if you want to attach any user properties you have defined in Viz to the converted NavisWorks items.
7. Select the **Pre-Render Scene** check box if you want to ensure that all texture maps are exported with the model. In some rare cases, they can be missed, so if you experience this, try checking this box. It will force Viz to do an internal render and so cache all texture maps.

ArchiCAD .nwc Exporter

While NavisWorks cannot directly read ArchiCAD files, there is an add-on for ArchiCAD v6.5 through to v11.0 that will export the model to an .nwc cache file that can then be read into NavisWorks. The export add-on for ArchiCAD is available from both the 2D and 3D windows. All standard ArchiCAD elements and library parts can be exported as long as they have a 3D representation, and any others will be ignored. The exporter will save both standard materials and custom GDL script materials.

When saving from the 2D window the current story will be exported by default. An option may be set so that the whole model will be exported. A default view will be determined from the bounding box of the model.

When saving from the 3D window the view will become the default NavisWorks view (including window settings such as cutaway planes).

Note:

Only visible layers will be exported.

Cutaway plane settings does not set the NavisWorks section plane, but exports items that are physically reduced by the plane. It is advised to turn off the Enable library part instancing option since all instances will show the same sectioning as the original item (usually the first library part in the file), and this may lead to unexpected effects.

Exporting an .nwc file from ArchiCAD:

1. With a model loaded choose **File > Save As**. An options dialog box will allow you to change settings before the export process begins.
2. Select "NavisWorks (*.nwc)" as the file type and type in a file name.
3. Click **OK** to advance to the options dialog box.
4. Click **OK** in the options dialog box to export the file or click **Cancel** to return to ArchiCAD without saving anything.

Supported Entities

- Global Unique Identifiers (GUIDs)
- Custom parameters for library parts defined by GDL scripts
- Storeys.
- Library part instances
- Cameras
- Hotlinks
- Sun attributes


- Materials

Unsupported entities

- Section planes
- Points
- Lines
- Textures

ArchiCAD .nwc Exporter Options

The export options appear after choosing **OK** from the **File > Save As** menu.

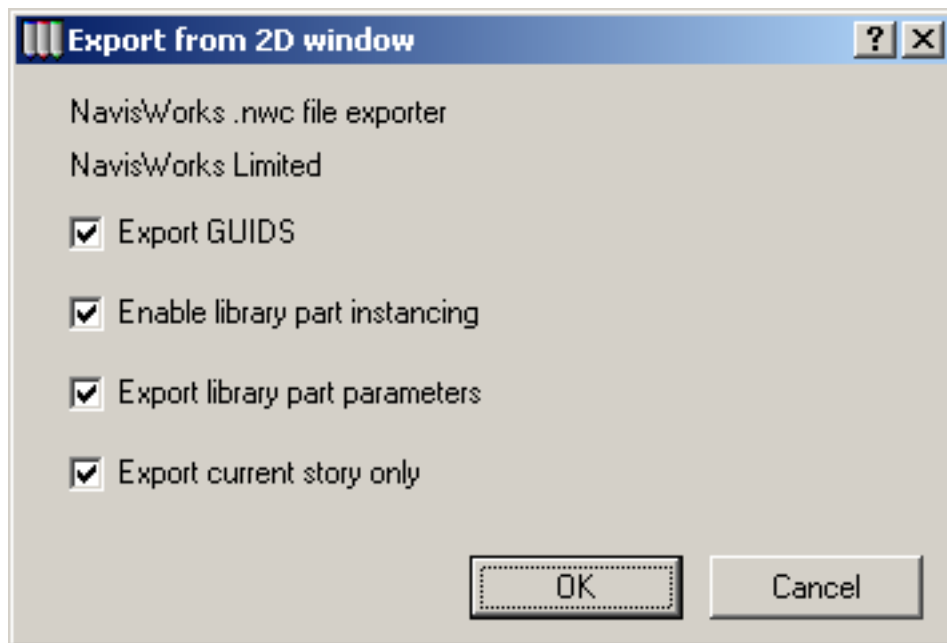

Setting the ArchiCAD exporter options:

1. Select the **Export GUIDs** check box if you want to attach a Globally Unique Identifier as a property to each item in the model. This is mainly useful for clash detection to track clashes.
2. Select the **Enable library part instancing** check box if you want to make instances of library parts rather than creating new items. This is only possible when multiple library part elements within the ArchiCAD model have exactly the same properties. Instancing these parts means a smaller .nwc file, and shorter export times.
3. Library parts defined in GDL scripts may have a number of user-defined custom parameters. Select the **Export library part parameters** check box if you want to save library part parameter values as item properties in NavisWorks.

4. Select the **Export current story only** check box if you want to only export the current story. Otherwise all stories will be exported. This is only applicable to exports from 2D views, as 3D views will export everything contained within the view.

CAD Previewing

NavisWorks comes with plugins for AutoCAD 2000 and above for quick and simple previewing of the models that are being built in those applications. These previews help in setting up viewpoints within the CAD application, and also for previewing what the model will look like inside NavisWorks Freedom™ once published.

NavisWorks Navigator for AutoCAD

NavisWorks comes with an ARX plugin for products based on AutoCAD 2000™ and above that enables you to walk through your model in real time inside a dockable dialog in the AutoCAD interface. Not only that, but it enables you to easily import and export viewpoints between Navigator and AutoCAD so that you can quickly and easily get to where you want in the model.

Note:


NavisWorks Navigator is not available for AutoCAD R14 or previous versions.


If you install AutoCAD after NavisWorks, then install NavisWorks again, choosing the **Custom Install** option and choose the relevant version of AutoCAD. The NavisWorks installer will find the right place for the plugin and set up all relevant registry entries for you.

Navigating AutoCAD models in real time:

1. Type **nwnavigator** at the command line, or go to **NavisWorks > Navigator**.

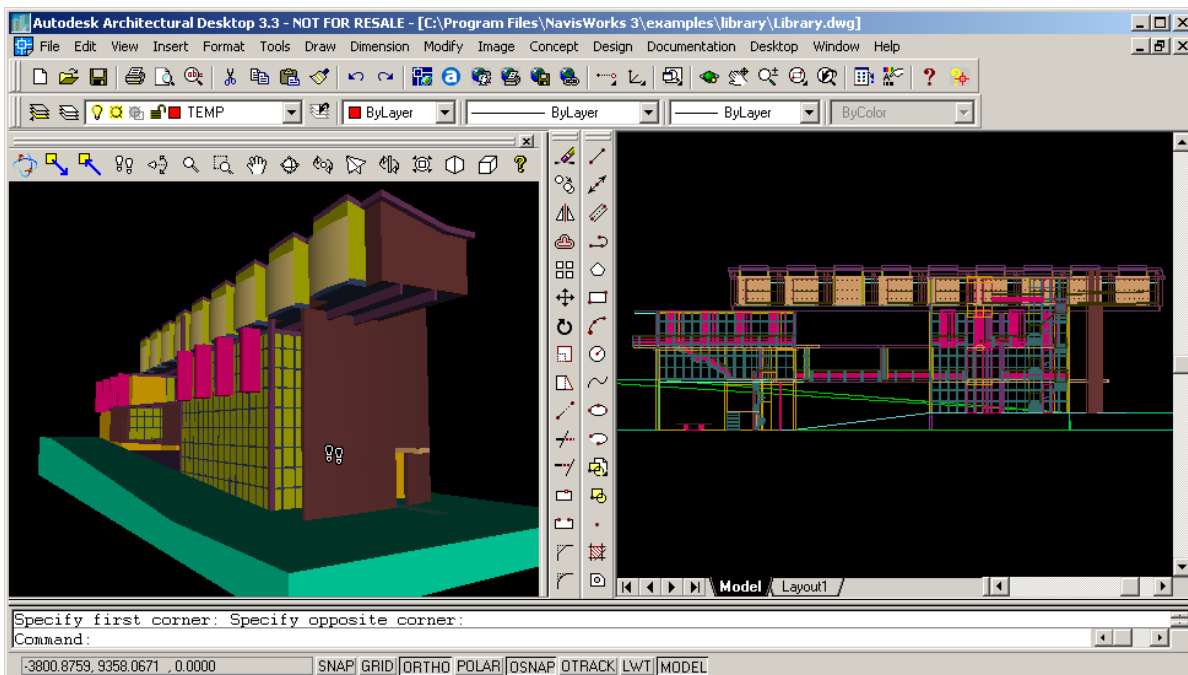

The Navigator dockable dialog box is displayed.



2. Navigator is very similar to NavisWorks Freedom™ (see “Freedom”, except that it has three extra buttons on the interface).
3. Click on the NavisWorks™ button  to update the Navigator window with what's in the AutoCAD window.

Note:

The Navigator window is not updated automatically when the AutoCAD model changes, so you have to click on this button manually every time you want to navigate around the latest model.

4. Click on the **Export Viewpoint** button  to update the current AutoCAD viewpoint with that in the Navigator window.
5. Click on the **Import Viewpoint** button  to update the Navigator viewpoint with that in the current AutoCAD window.

If, on typing **nwnavigator** at the command line, you get an error, you probably have to load the ARX plugin manually. See “Loading the NavisWorks ARX Plugin” for details on how to do this. You should only have to do this once.

If you prefer to work from menus, there is a partial menu available to run this command from, along with the other NavisWorks ARX plugins. See “The NavisWorks Partial Menu for AutoCAD” for more information on how to use this menu.

Chapter 11. Publishing

NavisWorks supports the creation of highly compressed NWD files, with options to embed object property information, and secure the files with password protection. The NWD file format can be viewed in the free NavisWorks viewer, NavisWorks Freedom, or opened in NavisWorks for full design review. You can publish files directly from NavisWorks or by exporting from AutoCAD™ or MicroStation™.


Publishing from NavisWorks

NavisWorks Publisher .nwd files are files published by NavisWorks Publisher and are snapshots of the model at a certain time.

Publishing a NavisWorks .nwd File:

1. On the **File** menu, click **Publish**.

The **Publish** dialog box is displayed

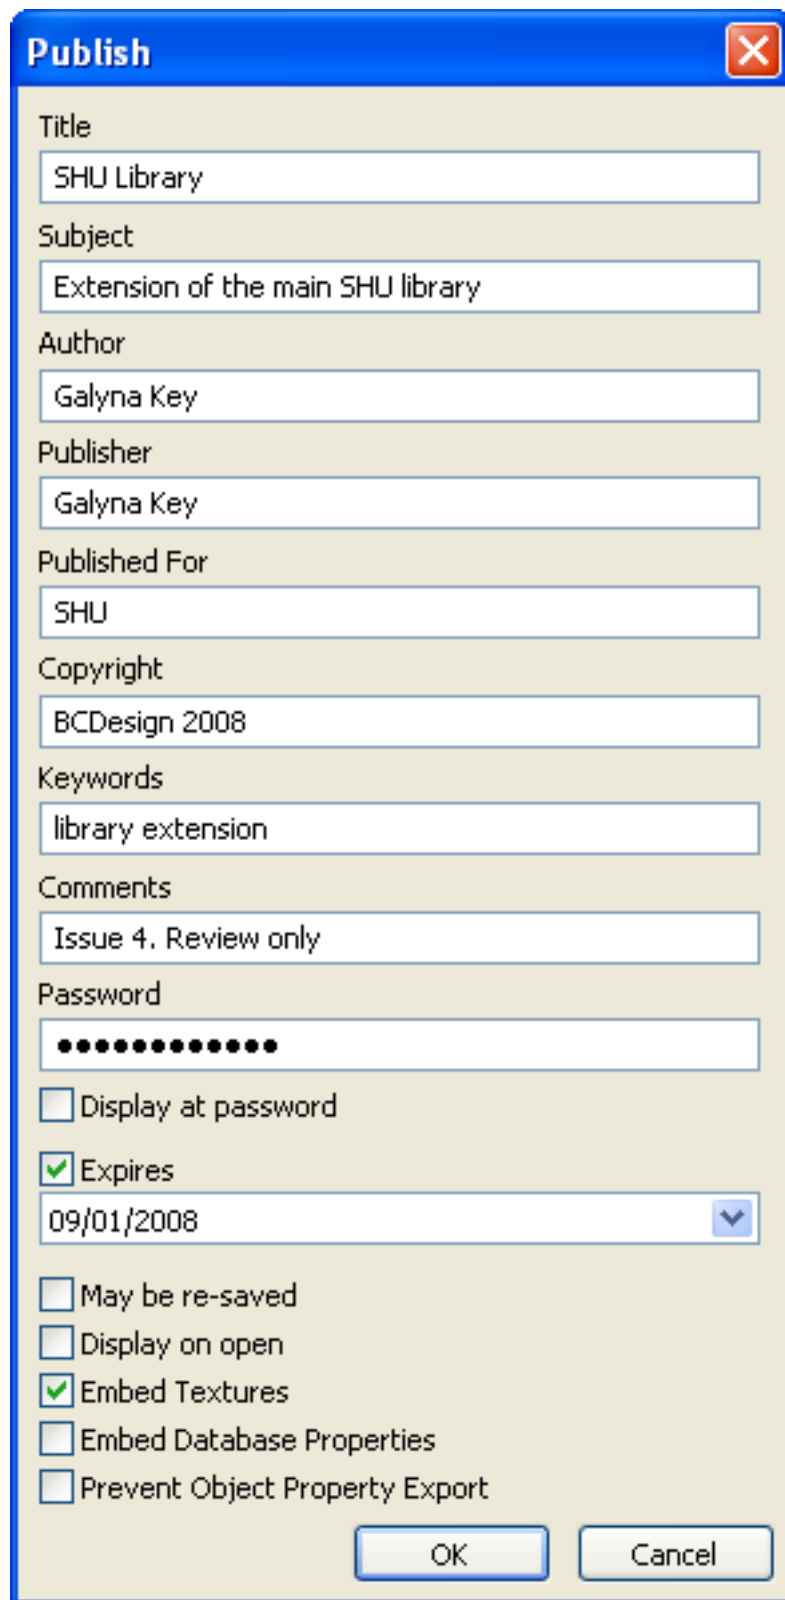A screenshot of a 'Publish' dialog box with a blue title bar and a close button (X) in the top right corner. The dialog contains several text input fields and a list of checkboxes. The fields are: Title (SHU Library), Subject (Extension of the main SHU library), Author (Galyna Key), Publisher (Galyna Key), Published For (SHU), Copyright (BCDesign 2008), Keywords (library extension), Comments (Issue 4. Review only), and Password (represented by 12 dots). The checkboxes are: Display at password (unchecked), Expires (checked), May be re-saved (unchecked), Display on open (unchecked), Embed Textures (checked), Embed Database Properties (unchecked), and Prevent Object Property Export (unchecked). At the bottom are 'OK' and 'Cancel' buttons.

Publish

Title
SHU Library

Subject
Extension of the main SHU library

Author
Galyna Key

Publisher
Galyna Key

Published For
SHU

Copyright
BCDesign 2008

Keywords
library extension

Comments
Issue 4. Review only

Password
●●●●●●●●●●●●

Display at password

Expires
09/01/2008

May be re-saved

Display on open

Embed Textures

Embed Database Properties

Prevent Object Property Export

OK Cancel

2. You can enter as much, or as little information as you wish. **Title, Subject, Author, Publisher,**

Published For, Copyright, Keywords and **Comments** are all optional boxes to be completed by you.

3. **Password** gives you the opportunity to password protect nwd files. On clicking **OK**, you will be asked to re-enter the password to ensure you have not mis-typed it.
4. If the **Display at password** check box is selected, this will force NavisWorks or NavisWorks Freedom to display the publication entries in a dialog on asking for the password so that the recipient is able to know whose password to enter.
5. If the **Expires** check box is selected, this will "time-bomb" the file so that it will not be openable in NavisWorks or NavisWorks Freedom™ after the date set.

Note:

Evaluation copies of NavisWorks can publish .nwd files, however these files will have a "time-bomb" set to the same expiry date as the evaluation software. To remove the expiry date from an .nwd file created by an evaluation copy, you must re-publish the file with a full NavisWorks license.

6. If the **May be re-saved** check box is selected, this will allow NavisWorks to re-publish the file with new publication information. If this check box is not selected, the publication information in the nwd file will never be changeable.
7. The check box **Display on open**, if selected, will force NavisWorks to display the publication entries in a dialog on opening the file.
8. If the **Embed Textures** check box is selected, all textures will be embedded in the published file; separate texture files will no longer be created.
9. The **Embed Database Properties** check box, if selected, force any properties accessed via an external database to be embedded in the NWD. No database links will be stored in the file from this point on.
10. The check box **Prevent Object Property Export**, if selected, will stop any native CAD package object properties from being exported into the published file.
11. Click **OK** to go to the **File Save** dialog box where you can type in the name and location of the published file, or **Cancel** to return to NavisWorks.

Note:

When publishing a scene, any RPCs included in that scene are not published to the Presenter_maps directory or embedded in the NWD file. The size of the files and the fact that most are licensed currently prohibits this.

Publishing from AutoCAD™

NavisWorks Publisher comes with ARX plugins for any AutoCAD™ based product, such as Architectural Desktop™, that enable you to publish an .nwd file directly from the CAD application in which it was created.

Note:

If you install AutoCAD after NavisWorks, then install NavisWorks again, choosing the **Custom Install** option and choose the relevant AutoCAD. The NavisWorks installer will find the right place for the plugin and set up all relevant registry entries for you.

The .nwd publisher is available for any AutoCAD based product between AutoCAD 14 and 2004 releases.

Publishing .nwd files from AutoCAD:

1. Type **nwdout** at the command line, or go to **NavisWorks > Publish .nwd**.
2. The standard Windows™ **Save As** dialog box is displayed, so choose the location and name of the .nwd file to be published.
3. Click **OK** to export the file or **Cancel** to return to AutoCAD without exporting it.

See “ [AutoCAD .nwc Exporter](#) ” for more information on publishing options, what to do if the menu is not already loaded or you get an error on typing **nwdout** at the command line.

Publishing from MicroStation™

NavisWorks Publisher comes with MDL plugins for MicroStation™ SE, 95, /J and v8 that enable you to publish .nwd files directly from the CAD application in which it was created. As long as MicroStation is already installed on the computer when NavisWorks is installed, this MDL plugin is installed with NavisWorks and ready for use.

Note:

If you install MicroStation after NavisWorks, then install NavisWorks again, choosing the **Custom Install** option and choose the relevant MicroStation. The NavisWorks installer will find the right place for the plugin and set up all relevant registry entries for you.

There are two steps to publishing .nwd files from MicroStation - first you have to load the MDL application into MicroStation and then you have to publish the file.

Loading the NWExport MDL plugin manually:

1. Go to the **Utilities > Key-in** dialog box to load the application manually.
2. Type "**mdl load nwexport**" (without the quotes) and press return.
3. An options dialog box can be opened from this export dialog box to configure the file output.

If you regularly publish .nwd files from MicroStation, then you will not want to load the NWExport plugin manually each time, so do the following.

Loading the NWExport MDL plugin automatically:


1. Go to **Workspace > Configuration**.
2. Choose **Design Applications** under **Category**.
3. Choose **NWExport** under **Available Applications**.
4. Click **Add** and confirm that you want NWExport added to your default configuration.
5. MicroStation will then automatically load NWExport in future sessions.
6. Click **OK**.

Once NWExport plugin is loaded, you can publish to .nwd using the **nwdout** command from the key-in command line.

Publishing .nwd files from MicroStation:

1. Type **nwdout** at the key-in prompt.

The MicroStation export dialog is displayed.

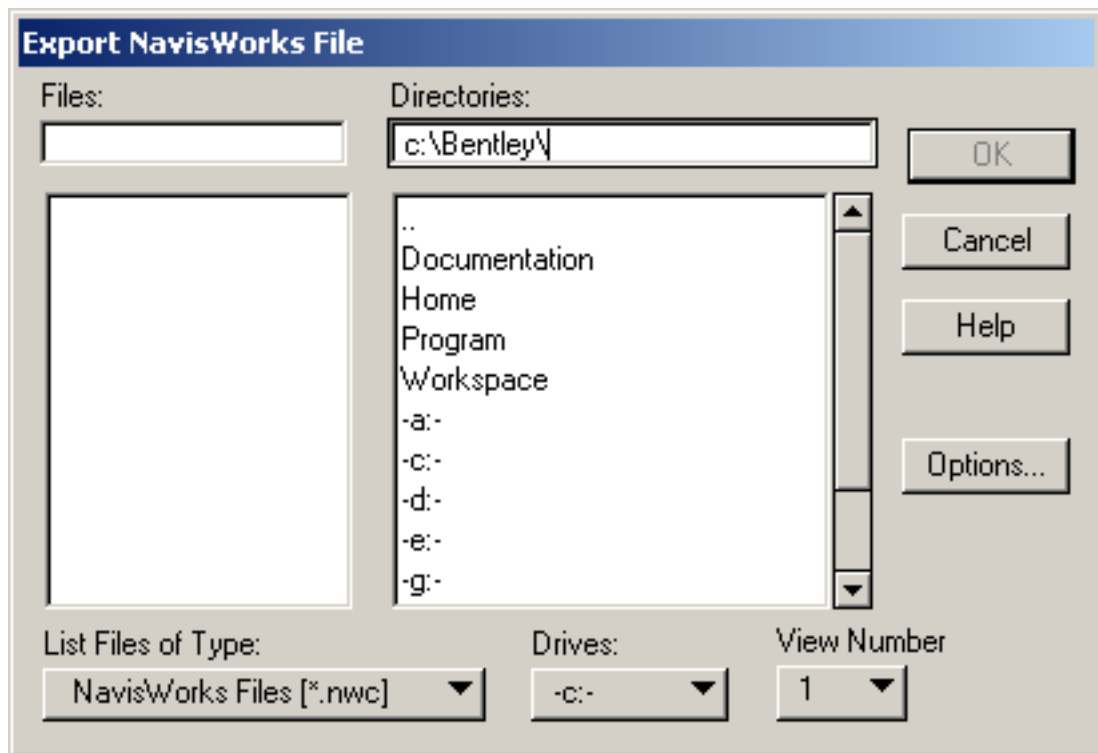

2. Enter the file name if it is to be different to the existing MicroStation file.

3. Enter the location you wish the file to be published to.
4. Select the view number you wish to the model to be published from.
5. Click the **Options** button if you want to change the export configuration. See “ [MicroStation .nwc Exporter Options](#) ” for more information on these options.
6. Click **OK** to publish the file or **Cancel** to return to MicroStation without publishing it.

Note:

MicroStation can also be customized to add NWExport commands to the menu bar using the **Workspace > Customize** dialog.

See “ [DGN and PRP Files](#) ” for what entities are and are not supported by the MicroStation exporter.

NavisWorks colors are derived from either MicroStation cell colors or MicroStation materials, depending on the export options set during **nwdout**. The appearance of objects in Publisher will match the appearance of a MicroStation shaded render.

The view number chosen for export determines the initial view in NavisWorks, whether level symbology is used and which levels are hidden.

Note:

The exporter only exports from 3D dgn files - 2D files are not supported.


Freedom

Freedom™ is a cut-down free version of NavisWorks. It is designed to work with NavisWorks Publisher by allowing you to distribute published .nwd files to your clients and other non-CAD users for free and easy viewing of your models. Simply publish the .nwd file, give them Freedom, and let them walk around your model.

Note:

Freedom supports all .nwd files from NavisWorks v3 onwards.

It is available as a stand-alone viewer, or as an ActiveX control for insertion into web pages. Once installed, Freedom looks like this:

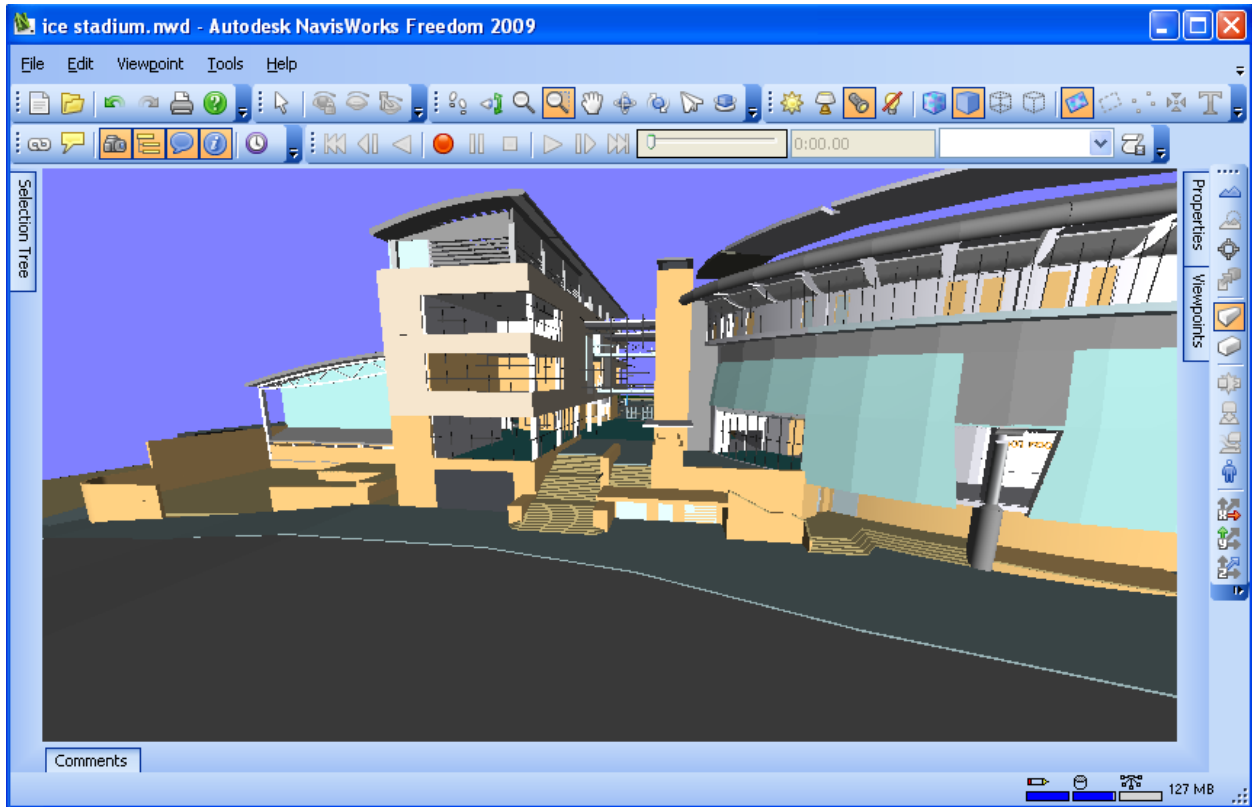

The available functionality includes all of the navigation modes; the view all, perspective and orthographic modes; collision detection, gravity, auto crouch and third person modes; display of hyperlinks; and restoring viewpoints and animation playback.

The buttons on the Freedom interface work in the same way as the NavisWorks buttons:

- Open 

Simply opens the standard Windows™ **Open** dialog box for you to choose an .nwd file to open into Freedom.

- Walk 

Puts Freedom into **Walk** navigation mode.

- Look Around 

Puts Freedom into **Look Around** navigation mode.

- Zoom 

Puts Freedom into **Zoom** navigation mode.

-



Puts Freedom into **Zoom to Box** navigation mode.

- Pan A square icon showing a hand with fingers spread, representing the Pan navigation mode.

Puts Freedom into **Pan** navigation mode.

- Orbit A square icon showing a blue sphere with a white crosshair, representing the Orbit navigation mode.

Puts Freedom into **Orbit** navigation mode.

- Examine A square icon showing a hand holding a magnifying glass over a small sphere, representing the Examine navigation mode.

Puts Freedom into **Examine** navigation mode.

- Fly A square icon showing a white mouse cursor arrow, representing the Fly navigation mode.

Puts Freedom into **Fly** navigation mode.

- Turntable A square icon showing a blue turntable, representing the Turntable navigation mode.

Puts Freedom into **Turntable** navigation mode.

- View All A square icon showing a blue mountain range, representing the View All navigation mode.

Zooms to extents so that the whole model is visible in the Freedom window.

- Perspective A square icon showing a 3D rectangular prism in perspective, representing the Perspective viewing mode.

Puts the Freedom view into perspective viewing mode. This is mutually exclusive with orthographic mode.

- Orthographic A square icon showing a 3D rectangular prism in orthographic projection, representing the Orthographic viewing mode.


Puts the Freedom view into orthographic viewing mode. This is mutually exclusive with perspective mode.

- Collision Detection A square icon showing a yellow gear with a lightning bolt, representing the Collision Detection toggle.


Toggles collision detection on/off.

- Gravity A square icon showing a yellow hourglass, representing the Gravity toggle.


Toggles gravity on/off.

- Auto Crouch 

Toggles automatic crouching on/off.

- Third Person 


Toggles the third person view on/off.

- Hyperlinks 

Toggles the display of hyperlinks on/off.

- Stop 


Stops the current animation playback.

- Pause 


Pauses the current animation playback.

- Play 

Plays the currently selected animation.

- Viewpoints 

This drop-down list shows all the viewpoints and animations that have been set up and published with the .nwd file. Click on one of the viewpoints from the drop-down list to recall that viewpoint into the Freedom window. Select an animation from the drop-down list and use the play, pause and stop buttons to control its playback.

- About 

Shows the **About** box, providing version details and offers a link to the NavisWorks web site.

Note:

Once installed, Freedom can be copied and run, without additional installation, on other machines running Windows 2000 or later. For this to work, the contents of the Freedom folder simply need to be copied to a new location, perhaps a CD or a network location, which other people can then have access to. An NWD file could be included to make it very simple to view the model. People would simply need to double-click on the Freedom executable and open the accompanying model file from that location.

Freedom is installed to:

```
C:\Program Files\Common Files\NavisWorks 6\DX\
```

The entire contents of this folder will need to be copied to the new location.

Chapter 12. Navigating

NavisWorks enables intuitive and interactive navigation around your 3D models at a guaranteed frame rate. The nine navigation modes give you complete flexibility to navigate around the model in real time. In addition to these navigation modes, there are selection and measuring tools that further facilitate the interrogation of model data.

The navigation tools allow you to do things such as focus on objects and change the view parameters. There are also options to look from predefined views, set the world up vector to a direction different than the one brought through from the CAD model.

The tilt bar enables you to tilt the model, or the camera (depending on if the navigation mode is camera-centric or model-centric) and has the same effect as spinning the wheel on a mouse. Two thumbnail views also give you a good overall view of the scene, allowing you to see whereabouts you are in the whole model and quickly jump from one end to the other.

Navigation Modes

There are nine navigation modes to control how you move around the main navigation view - six camera-centric modes and three model-centric modes. In a camera-centric mode, the camera moves within the scene, whereas in a model-centric mode, model moves inside the scene. For example, the **Orbit** and **Examine** modes essentially do the same thing, except that **Orbit** moves the *camera* around the focal point and **Examine** moves the *model* around the focal point. Movement in each mode is based on the cursor keys, the **Shift** and **Control** keys and mouse drags. The mouse wheel is also supported, allowing quick and easy zooming or tilting, depending on the current navigation mode.

Note:

Dragging with the left mouse button while holding down the **Control** key performs the same actions as dragging with the middle mouse button, which is useful if you only have a two-button mouse.

The **Shift** and **Control** keys modify the movement, for example holding down **Shift** in **Walk** mode speeds up movement, and holding down **Control** in this mode, glides the camera left/right and up/down.

Note:


Gliding the camera is opposite to panning the model. Gliding is a camera-centric motion and panning is a model-centric motion.

Right-clicking on any item in the main navigation view or selection tree displays a context menu that shows a list of commands relevant to a particular item.


Below is shown the **Navigation Mode** toolbar and the navigation modes available:



Walk 

Look Around 

Zoom 


Zoom Box 

Pan 

Orbit 

Examine 

Fly 

Turntable 

In addition to the **Navigation Mode** toolbar, you can use selection options on the **Selection Tools** toolbar. These options are mutually exclusive to navigation just as redlining and measuring are. See “[Select Mode](#)” for more information on the selection tools.


Walking

Walk mode enables you to walk through the model on a horizontal plane ensuring that "up" is always "up".

To walk through a model:

- On the **Viewpoint** menu, click **Navigation Mode > Walk**

or

- Click **Walk**  on the **Navigation Mode** toolbar.

Dragging the left mouse button, or using the cursor keys, spins the camera left and right and moves it forwards and backwards.

Holding down the **Shift** key speeds up this movement.

Holding down the **Control** key glides the camera left and right and up and down. As walk mode is camera-centric, this mode differs from the normal pan mode in that the camera is moved rather than the model.

Spinning the mouse wheel tilts the camera up and down.


Looking Around

Look around mode enables you to look around the model from the current camera position and gives the effect that you are moving your head around.

To look around a model:

- On the **Viewpoint** menu, click **Navigation Mode > Look Around**

or

- Click **Look Around**  on the **Navigation Mode** toolbar.

Dragging the left mouse button, or using the cursor keys, looks left, right, up or down.

Holding down the **Shift** key speeds up this movement.

Holding down the **Control** key rotates the camera around its viewing axis.


Zooming

Zoom mode enables you to zoom into and out of the model. Cursor up zooms in and cursor down zooms out.

To zoom:

- On the **Viewpoint** menu, click **Navigation Mode > Zoom**

or

- Click **Zoom**  on the **Navigation Mode** toolbar.

Dragging the left mouse button up and down, or using the up and down cursor keys, zooms in and out respectively.


Zooming to a Box

The zoom-to-a-box mode enables you to drag a box so that the contents of the box fill the view.

To use the zoom box:

- On the **Viewpoint** menu, click **Navigation Mode > Zoom Box**

or

- Click the **Zoom Box**  on the **Navigation Mode** toolbar.

Dragging a box with the left mouse button over the main navigation view fills the view with the contents of the box.

Holding down the **Shift** or **Control** keys, or spinning the mouse wheel, temporarily puts this mode into normal **Zoom** mode.


Panning

The pan mode enables you to pan the model rather than the camera.

To pan a model:

- On the **Viewpoint** menu, click **Navigation Mode > Pan**

or

- Click **Pan**  on the **Navigation Mode** toolbar.

Dragging the left mouse button pans the model up, down, left and right.

Holding down the **Shift** or **Control** keys, or spinning the mouse wheel, temporarily puts this mode into normal **Zoom** mode.


Orbiting

The orbit mode enables you to orbit the camera around the model, ensuring that "up" is always "up". The camera always orbits around the focal point of the model.

To orbit a model:

- On the **Viewpoint** menu, click **Navigation Mode > Orbit**

or

- Click **Orbit**  on the **Navigation Mode** toolbar.

Dragging the left mouse button, or using the cursor keys, rotates the camera around the model.

Holding down the **Shift** key or spinning the mouse wheel, temporarily puts this mode into normal **Zoom** mode.

Holding down the **Control** key glides the camera left and right and up and down. As orbit mode is camera-centric, this mode differs from the normal pan mode in that the camera is moved rather than the model.


Examining

The examine mode enables you to rotate the model about.

To examine a model:

- On the **Viewpoint** menu, click **Navigation Mode > Examine**

or

- Click **Examine**  on the **Navigation Mode** toolbar.

Dragging the left mouse button, or using the cursor keys, rotates the model about.

Holding down the **Shift** key or spinning the mouse wheel, temporarily puts this mode into normal **Zoom** mode.

Holding down the **Control** key, temporarily puts this mode into normal **Pan** mode.

If the mouse is moving when you let go of the button, the model keeps spinning! Click on it to stop. Holding the **Shift** key allows you to zoom in and out.

Flying

The fly mode enables you to fly around the model like in a flight simulator.

To fly through a model:

- On the **Viewpoint** menu, click **Navigation Mode > Fly**

or

- Click **Fly**  on the **Navigation Mode** toolbar.

Holding down the left mouse button moves the camera forward. As in a flight simulator, the left mouse button banks left/right when dragged left or right and tilts up/down when dragged up or down.

The up and down cursor keys will zoom in and out respectively and the left and right cursor keys will spin the camera left and right respectively.

Holding down the **Shift** key speeds up this movement.

Holding down the **Control** key rotates the camera around its viewing axis, while still moving forward.


Spinning on a Turntable

The turntable mode enables you to spin the model around the up vector. This navigation mode behaves as though the model is sitting on a turntable, ensuring that "up" is always "up".

To use the turntable:

- On the **Viewpoint** menu, click **Navigation Mode > Turntable**

or

- Click **Turntable**  on the **Navigation Mode** toolbar.

Dragging the left mouse button left and right, or using the left and right cursor keys, spins the turntable left and right respectively.

Holding down the **Shift** key or spinning the mouse wheel, temporarily puts this mode into normal **Zoom** mode.

Holding down the **Control** key, temporarily puts this mode into normal **Pan** mode.

Spinning the mouse wheel, or using the up and down cursor keys, tilts the turntable up and down, like the tilt bar.


Navigation Tools


Navigational tools are a number of handy tools for altering, resetting or changing the type of the camera, and the viewpoint displayed. These tools can be accessed from the **Viewpoint > Navigation Tools** menu, or from the **Navigation Tools** toolbar:





Navigation Tools comprises the following functions:


View All 


View Selected 

Focus 

Hold 


Perspective Camera 


Orthographic Camera 


Collision Detection 


Gravity 


Crouch 


Third Person 

Align With X-Axis 

Align With Y-Axis 

Align With Z-Axis 

Straighten Camera 

Set World Up to Current View 

Note:

The **Straighten** and **Set Up** buttons are not on the toolbar by default, but can be added by customizing it (see "[Customizing Toolbars](#)").

Viewing Everything


This function dollies and pans the camera so that the entire model is in view, which is very useful if you get lost inside a model or lose it completely.

Sometimes on doing a **View All**, you seem to just get a blank view. This is usually because there are items that are very small in comparison to the main model located a long way away from the main model. In these cases, it is best to click on an item in the selection tree and do a **View Selected** to at least find your way back to the model before trying to figure out which items are "lost".

To view everything:

- On the **Viewpoint** menu, click **Navigation Tools > View All**.

or

- Click **View All**  on the **Navigation Tools** toolbar.

Viewing Selected Items

This function zooms the camera so that the selected item fills the main navigation view.

To view a selected item:

- On the **Viewpoint** menu, click **Navigation Tools > View Selected**

or

- Click **View Selected**  on the **Navigation Tools** toolbar.


Focusing

This function puts the main navigation view into focus mode until the next click. Left-click on an item and the view swivels so that the point clicked is in the center of the view. The point clicked becomes the focal point for **examine**, **orbit**, **turntable** navigation modes.

To focus the camera:

- On the **Viewpoint** menu, click **Navigation Tools > Focus**

or

- Click **Focus**  on the **Navigation Tools** toolbar

or

- Right-click on an item in the NavisWorks scene or Selection Tree, then choose **Focus on Item** from the shortcut menu.


Perspective Camera

Uses a perspective camera to view with.

To select a perspective camera:

- On the **Viewpoint** menu, click **Navigation Tools > Perspective Camera**

or

- Click **Perspective**  on the **Navigation Tools** toolbar.


Orthographic Camera

Uses an orthographic camera to view with.

To select an orthographic camera:

- On the **Viewpoint** menu, click **Navigation Tools > Orthographic Camera**

or

- Click **Orthographic**  on the **Navigation Tools** toolbar.

Note:


Orthographic cameras are not available with **Walk** and **Fly** navigation modes.

Collision Detection

This function defines you as a collision volume - a 3D object that can navigate around and interact with the model, obeying certain physical rules that confine you within the model itself. In other words, you have a mass and as such, cannot pass through other objects, points or lines in the scene.

You can walk over, or climb over objects in the scene that are up to half the height of the collision volume, thus allowing you to walk up stairs, for example.

The collision volume, in its basic form, is a sphere (with radius = r), that can be extruded to give it height (with height = $h \geq r$). See diagram below:

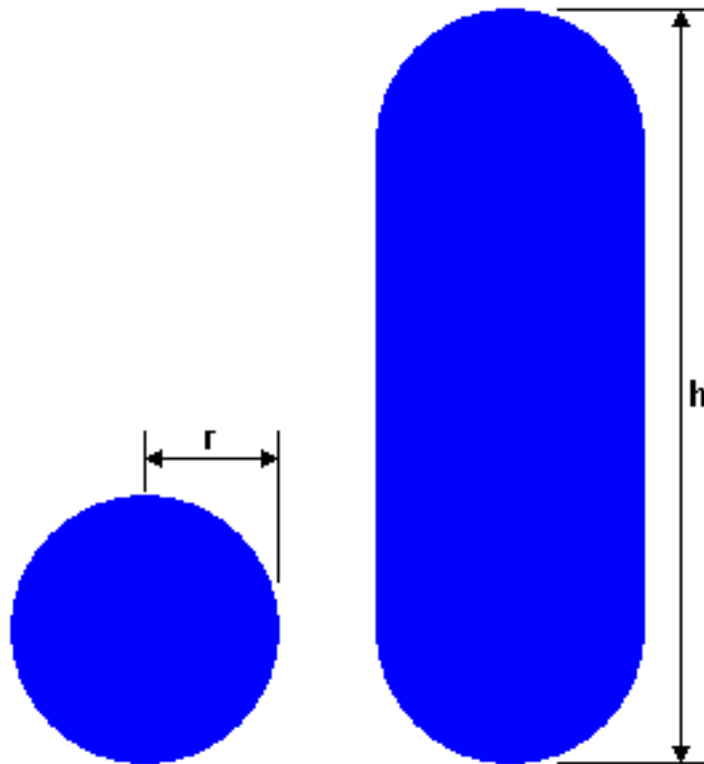

The dimensions of the collision volume are user-definable settings for the current view or as a global option. See “ [Editing Viewpoints](#) ” and “ [Viewpoints Options](#) ” for more information.

Collision detection is only available when in either the walk or fly navigation mode.

To activate collision detection:

- In **Walk** or **Fly** navigation mode, on the **Viewpoint** menu, click **Navigation Tools > Collision Detection**

or

- Click **Collision Detection**  on the **Navigation Tools** toolbar.

or

- Press **D** to toggle collision detection on/off.

Note:

When Collision Detection is turned on, rendering prioritization is changed so that objects around the camera or avatar are displayed with much higher detail than normal. The size of the region of high detail is based on collision volume radius and speed of movement (needing to see what is about to be walked into).

Gravity

This function only works in connection with collision detection.


Where collision detection gives you mass, gravity gives you weight. As such, you (as the collision volume) will be pulled downwards whilst walking through the model scene (gravity is only available when in the walk navigation mode).

This allows you to walk down stairs, for example, or follow terrain.

To activate gravity:

- In the **Walk** navigation mode, on the **Viewpoint** menu, click **Navigation Tools > Gravity**

or

- Click **Gravity**  on the **Navigation Tools** toolbar.

or

- Press **G** to toggle gravity on/off.

Crouching

This function only works in connection with collision detection.

When walking around the model with collision detection activated, you may encounter object that are too low to walk under, a low pipe for example. This function enables you to crouch under any such objects.


With crouching activated, you will automatically crouch under any objects that you cannot walk under at your specified height, thereby not impeding your navigation around the model.

If however, you are using collision detection to identify areas of the model that you cannot walk under, (again, using a low pipe for example) then there is also a temporary crouch function to allow navigation to proceed once the obstacle has been identified.

To activate crouching:

- In **Walk** or **Fly** navigation mode, on the **Viewpoint** menu, click **Navigation Tools > Crouch**

or

- Click **Crouch**  on the **Navigation Tools** toolbar.

or, if you only want to temporarily crouch

- Hold down the **Space bar** to turn crouching on. Releasing it will turn it off again.

Third Person View

This function allows you to view from a third person perspective.

When third person is activated, you will be able to see an **avatar** which is a representation of yourself within the 3D model. Whilst navigating you will be controlling the avatar's interaction with the current scene.


Using third person in connection with collision detection and gravity makes this a very powerful function, allowing you to visualize exactly how a person would interact with the intended design.

User definable settings are available for the current view and as global options, including avatar selection and dimensions and third person positioning. See "[Editing Viewpoints](#) " and "[Viewpoints Options](#) " for more information.

To view in third person:

- On the **Viewpoint** menu, click **Navigation Tools > Third Person**

or

- Click **Third Person**  on the **Navigation Tools** toolbar.

or

- Press **T** to toggle third person view on/off.

Note:

When Third Person mode is turned on, rendering prioritization is changed so that objects around the camera or avatar are displayed with much higher detail than normal. The size of the region of high detail is based on collision volume radius, speed of movement (needing to see what is about to be walked into) and the distance of the camera behind the avatar (in order to see what the avatar is interacting with).

Preset Viewpoints

The orthogonal viewpoints are preset inside NavisWorks and can be accessed from the **Navigation Tools** toolbar and the **Viewpoints** menu.


Aligning With The X-Axis

This function toggles between **Look From, Front** and **Look From, Back** views.

To align the viewpoint with the x-axis:

- On the **Viewpoint** menu, click **Navigation Tools > Align X**

or

- Click **Align X**  on the **Navigation Tools** toolbar.


Aligning With The Y-Axis

This function toggles between **Look From, Left** and **Look From, Right** views.

To align the viewpoint with the y-axis:

- On the **Viewpoint** menu, click **Navigation Tools > Align Y**

or

- Click **Align Y**  on the **Navigation Tools** toolbar.

Aligning With The Z-Axis

This function toggles between **Look From, Top** and **Look From, Bottom** views.

To align the viewpoint with the z-axis:

- On the **Viewpoint** menu, click **Navigation Tools > Align Z**

or

- Click **Align Z**  on the **Navigation Tools** toolbar.



Looking From a Preset Viewpoint

When this option is chosen the model is displayed from this viewpoint in the main navigation view. This is equivalent to toggling the **Align X**, **Align Y** and **Align Z** buttons on the **Navigation Tools** toolbar.

Looking from a preset viewpoint:

1. On the **Viewpoint** menu, click **Look From**.
2. Choose any direction from **Top**, **Bottom**, **Front**, **Left**, **Back** and **Right**.


Straighten

This function straightens the camera to align with the world up vector when it is already close to the world up vector.

To straighten the camera:

- On the **Viewpoint** menu, click **Navigation Tools > Straighten**

or

- Click **Straighten**  on the **Navigation Tools** toolbar.



Note:

This button is not on the toolbar by default, but can be added by customizing it (see “[Customizing Toolbars](#)”).


Set World Up

These functions set the world up vector to align with the selected orientation.

To set the world up vector to the current view:

- On the **Viewpoint** menu, click **Set World Up > Current View**.

or

- Click **Set Up**  on the **Navigation Tools** toolbar.

Alternatively, to set the world up vector to one of the orthogonal axes:

- On the **Viewpoint** menu, click **Set World Up** and choose one of the pre-defined axes (**+X Axis**, **-X Axis**, **+Y Axis**, **-Y Axis**, **+Z Axis**, or **-Z Axis**).

Note:

Navigation modes Walk, Turntable and Orbit all use the World Up vector, so navigation will occur at whatever angle is set using this function.

This button is not on the toolbar by default, but can be added by customizing it (see “[Customizing Toolbars](#)”).

Camera Tilt

The slider on this control bar provides direct control over the tilt angle of the camera, in degrees below (negative) or above (positive) the horizontal at the base of the tilt bar.

This is particularly useful in walk mode to look up and down. If your mouse has a wheel, this can be used to adjust the tilt angle.

To switch the Camera Tilt bar on and off:

- On the **View** menu, click **Control Bars > Camera Tilt**.

The **Camera Tilt** control bar is displayed



Thumbnail Views

Thumbnails are useful to get an overall view of where you are in the whole scene and to quickly move the camera to a location in a large model. There are two thumbnails available in NavisWorks so you can have one showing a section and another showing a plan view if you wish. The thumbnails show a fixed view of the model, with a triangular marker representing your current viewpoint. This marker moves as you navigate, showing the direction of your view. The marker may also be dragged by holding the left mouse button over it and dragging to move the camera in the main navigation view.

Note:

The marker changes to a small dot when the thumbnail view is in the same plane as the camera view.

To turn on the plan thumbnail:

- On the **View** menu, click **Control Bars > Plan Thumbnail**.

or

- Click **Plan Thumbnail**  on the **Workspace** toolbar.

The **Plan View** thumbnail is displayed



To turn on the section thumbnail:

- On the **View** menu, click **Control Bars > Section Thumbnail**.

or

- Click **Section Thumbnail**  on the **Workspace** toolbar.

By default the **Section Thumbnail** shows the view from the front of the model and the **Plan Thumbnail** shows a plan view. The thumbnail view can be manipulated by right-clicking on the view. You can select from the following options: **Look From**, **Edit Viewpoint**, **Update Viewpoint**, **Lock Aspect Ratio** and **Refresh**.

Manipulating a thumbnail's view:

1. Right-click anywhere in the thumbnail to open the shortcut menu.
2. Use the **Look From** menu item and choose from **Top**, **Bottom**, **Front**, **Back**, **Left** or **Right** to set the thumbnail view to any of these pre-set viewpoints. You can also choose **Current Viewpoint** to set the thumbnail view to the active navigation viewpoint.
3. Choose **Update Current Viewpoint** to set the current active navigation viewpoint to be the same as that of the thumbnail.
4. Choose **Edit Viewpoint** if you want to set up the thumbnail's viewpoint by hand using the **Edit**

Viewpoint dialog box(see “ [Editing Viewpoints](#) ” for more information on this).

5. Choose **Lock Aspect Ratio** if you want the aspect ratio of the thumbnail to match that of the main navigation view and remain matching even when the thumbnail dialog box is resized. This will usually give gray strips either to the top and bottom, or to either side of the thumbnail view. See [Aspect Ratio](#) for more information on aspect ratio.
6. Choose **Refresh** to redraw the thumbnail based on the current setting. Thumbnail drawing uses software OpenGL and so can take a couple of seconds for large models.

Using a SpaceBall

Note:

The term **SpaceBall** is used as a generic term for all 3D motion controllers from 3Dconnexion™, including the SpaceBall, SpaceMouse and SpaceTraveler.


A **SpaceBall** can be used as an alternative to the mouse to move around the main navigation view. The behavior of the SpaceBall corresponds to the currently selected Navigation Mode. If no mode is selected on the **Navigation Mode** toolbar or if the selected mode is not a valid mode for the SpaceBall, then a default navigation mode will be used. This enables the user to navigate with the SpaceBall whilst performing other operations with the mouse. The default navigation mode can be set in the Options Editor dialog box.

The speed of navigation is sensitive to the amount of force applied to the SpaceBall. However, the user can also adjust the speed of translation and rotation by applying a factor to each of these in the **Options Editor** dialog box. These options are offered in addition to the adjustments that can be made using the Control Panel for the device which is supplied by the SpaceBall manufacturer with the installation.

Setting the SpaceBall behavior:

1. On the **Tools** menu, click **Global Options**.
2. Expand the **Interface** node in the **Options Editor** dialog box, and click the **SpaceBall** option.

The SpaceBall page is displayed.

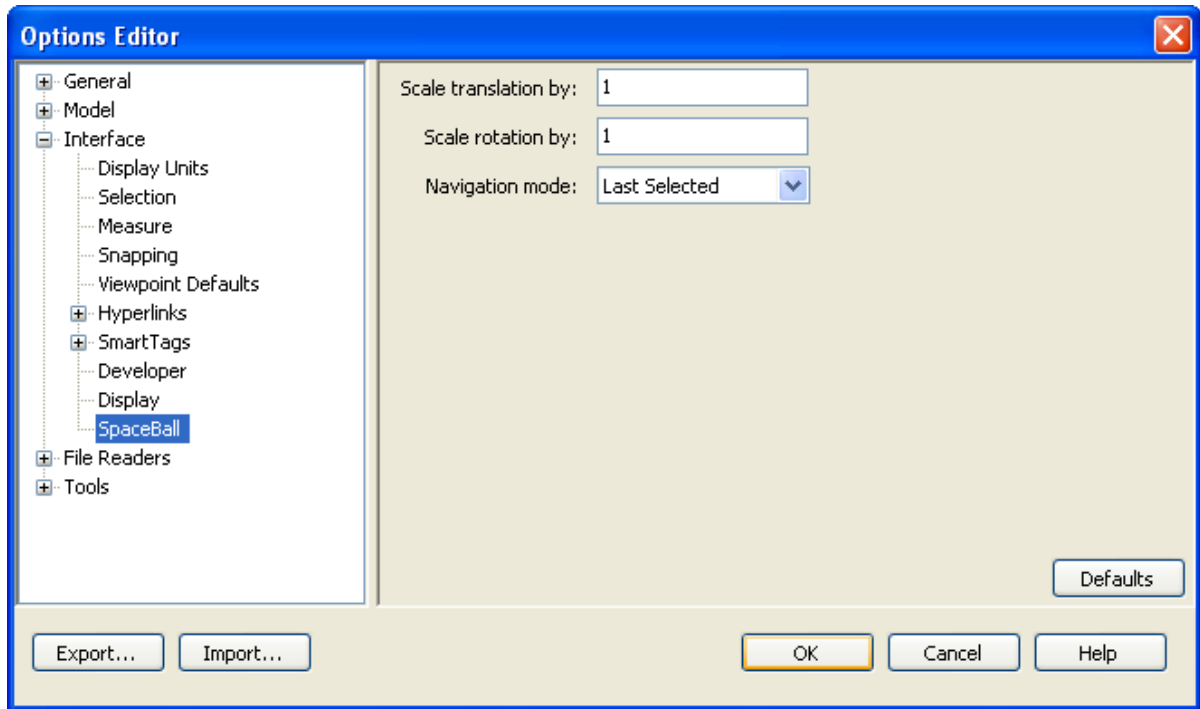

3. Modify the **Scale translation** value if you want to increase or decrease the speed of translation.
4. Modify the **Scale rotation** value if you want to increase or decrease the speed of rotation.
5. Select the **Default navigation mode** from the drop-down list. This will be used when no valid navigation mode is currently selected.

Chapter 13. Selecting Items

With large models it is potentially a very time-consuming process to select items of interest. NavisWorks makes this a much simpler task by providing a range of functions for quickly selecting items both interactively and by searching the model manually and automatically. The main groups of functionality concerned with selecting items are:

- The selection tree
- Interactive selection
- Selection sets


Also connected with selecting items is finding items, which is covered in [Chapter 14, Finding](#) .

In NavisWorks there is the concept of an active selection set (the currently selected items, or the current selection) and saved selections sets. Selecting and finding items makes them part of the current selection, so you can hide them or override their colors. At any time, the current selection can be saved and named for retrieval in later sessions.

Below is shown the **Selection Tools** toolbar and the selection modes available:



Select 

Select Box 

In addition to the selection modes, you can also use three editing options on the **Selection Tools** toolbar. See [Chapter 15, Editing](#) for more information on the editing tools.

Selection Trees

The selection tree is a tabbed control bar which displays a variety of hierarchical views of the structure of the model, as defined by the CAD application in which the model was created.



By default there are four tabs, called **Standard**, **Compact**, **Properties** and **Sets**:

- "Standard" displays the default tree hierarchy, including all instancing. The contents of this tab can be sorted alphabetically by right-clicking on any item in the tree and selecting **Scene > Sort**. It is not possible to undo this action.
- "Compact" displays a simplified version of the "Standard" hierarchy, omitting various items. You can control the level of complexity of this tree using the **Select** options (see "[Selection Options](#)" for more information).
- "Properties" displays the hierarchy based on the items' properties. This enables simple manual searching of the model by item property. See [Chapter 14, Finding](#) for a much more powerful way of searching the model for items with certain properties.
- "Sets" simply shows the same view as the selection sets control bar.

Naming of items reflects the names from the original CAD application, wherever possible.

There are several different tree icons representing the types of item that make up the structure of a model:



A model, such as a drawing file or design file.



A layer or level.



A group, such as a block definition from AutoCAD or cell definition from MicroStation.



An instanced group, such as an inserted block from AutoCAD or cell from MicroStation. If in the imported file the instance was unnamed, NavisWorks names the instance to match its child's name.



An item of geometry, such as a polygon.



An instanced item of geometry, such as an instance from 3D Studio.



A composite object. A single CAD object that is represented in NavisWorks by a group of geometry items.



A search. Behind the scenes, NavisWorks is searching the model for all items with a property of this type and sets up the find specification to repeat this search if the selection set is saved. See “[Selection and Search Sets](#)” for more information on this.

Each of these item types can be Hidden (gray), Unhidden (dark blue) or Required (red).

Note:

If a group is selected as Hidden or Required then all instances of that item will be hidden or required. If you wish to operate on a single occurrence of an item then you should make the instanced group (the level above, or the "parent", in the hierarchy) Hidden or Required.

You can use the selection tree in combination with the main navigation window to select items into the current selection, which is highlighted in both the selection tree and the main navigation window.

Note:

Using the **Shift** and **Control** keys while selecting items in a selection tree will do the standard Windows™ multiple selection: **Control** allows multiple selection item by item and **Shift** allows multiple selection between the first and last items selected.

If you have the Clash Detective tool, the selection trees will be used for selecting items for the clash tests.

The selection trees are also used inside the **Find Items** control bar for the ability to refine your searches better. See “[Finding Items](#)” for more information.

Note:

Additional customised selection tree tabs can be added by using the NavisWorks API.

Interactive Selection

NavisWorks provides several methods to interactively select items into the current selection. You can use the tabs in the selection tree, select items in the main navigation window with select and select box modes and you can select other items with similar properties to an existing selection using the selection commands.

Note:

Right-clicking on any item in the tree view or main view temporarily selects the item and displays a context menu. You can click on the topmost menu item to permanently select the item. Pressing **Esc** deselects everything.

Select Mode

As standard, this mode is mutually exclusive to the navigation modes so that when you are selecting, you cannot navigate and vice versa.

Note:

When using a SpaceBall in conjunction with the standard mouse control, the SpaceBall can be configured for navigation and the mouse for selecting. See “[Using a SpaceBall](#)” for more information.

Select mode allows you to click on an item in the main navigation window to select it. Once a single item is selected, its properties will be shown in the Properties control bar.


You can select multiple items in the main navigation window using the familiar Windows™ methods of holding down the **Control** key while selecting items. This will add them to the current selection. Alternatively, if the items are already in the current selection, holding down **Control** while selecting them again will remove them from the current selection.

Holding the **Shift** key whilst selecting items in the main navigation window will cycle through the selection resolution, allowing you to get more specific with your selections. See Selection Resolution for more information on this.

To select an item:

- On the **Edit** menu, click **Select > Select**

or

- Click **Select**  on the **Selection Tools** toolbar.

Select Box Mode

This mode, which can be used in conjunction with the normal select mode allows you to drag a box in the main navigation window to select multiple items at once. This mode is also mutually exclusive to the navigation modes so that when you are selecting, you cannot navigate and vice versa.


Dragging the box will select all items within the box. Holding down the **Shift** key while dragging the box will select all items within and that intersect the box.

You can select multiple items in the main navigation window using the familiar Windows™ methods of holding down the **Control** key while selecting items. This will add them to the current selection. Alternatively, if the items are already in the current selection, holding down **Control** while selecting them again will remove them from the current selection.

To select multiple items using a draggable box:

- On the **Edit** menu, click **Select > Select Box**

or

- Click **Select Box**  on the **Selection Tools** toolbar.

Selection Commands

Selection commands enable you to quickly alter the current selection using logic. You can select multiple items based on the currently selected items' properties, or quickly invert the set, select everything or nothing.

Selecting items with selection commands:

1. On the **Edit** menu, click **Select**.
2. Choose the required selection command.

Standard selections are:

- **Select All**
All items contained within the model are selected.
- **Select None**
Deselects everything in the model.
- **Invert Selection**
Every selected item becomes deselected and vice versa.
- **Selection Sets**
Provides you with options to save and recall sets. See “ [Selection and Search Sets](#) ”.
- **Select Multiple Instances**
Selecting an item then selecting **Multiple Instances** will select all instances (sometimes called insertions) of that geometry group that occur in the model.

- Select Same Name

Every item with the same name as the selected item will also be selected.

- Select Same Type

Every item of the same type as the selected item will also be selected.

- Select Same (property)

Every item with the same property as the selected item will also be selected. The property can be anything from **Material**, **Hyperlink** or any other searchable property attached to the item.

Note:

Selecting **Same** (property) works by comparing items' properties. If you have multiple items selected when you perform a selection command of same name or type etc., all the types, names and properties of the items in the current selection are compared with all items properties in the scene. Those matching any of the current items selected will be selected.

Selection and Search Sets

Selection sets are useful for saving a group of items that you might want to regularly perform some action on, such as hiding or changing transparency. They simply store a group of items for later retrieval. There is no intelligence behind this set - if the model changes at all, the same items will be selected (assuming they are still available in the model) when recalling the selection set.

Search sets work in a similar way, except that they save search criteria instead of the results of a selection, so that you can re-run the search at a later date as and when the model changes. See [Chapter 14, Finding](#) for information on searching the model for items.

Selection and search sets can be named and contain comments. They can also be highlighted with icons in the main navigation window, so that when you click on one, the selection set is restored to the active set and all the items within it are re-selected.

Saving Selection and Search Sets

Saving a selection set:

1. Select all the items you want saving.
2. On the **Edit** menu, click **Select > Selection Sets > Add Current Selection**.

or


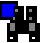
Right-click on the **Selection Sets** control bar and click **Save Current Selection** on the shortcut menu.

Saving a search:

1. Set up a search as explained in “ [Finding Items](#) ”.
2. On the **Edit** menu, click **Select > Selection Sets > Add Current Search**.

or

Right-click on the **Selection Sets** control bar and click **Save Current Search** on the shortcut menu.

New selection sets and search sets are named "Selection SetX" where 'X' is the next available number added to the list. A selection set is identified by this icon:  and a search set by this icon: 

Note:

Saved selection and search sets can be renamed by slow clicking (clicking and pausing without moving the mouse) on the set, or clicking on it and pressing **F2**.

Recalling Selection and Search Sets

To re-select items from a selection set:

- On the **Edit** menu, click **Select > Selection Sets** and click the saved selection or search set from the list.

or


- In the **Selection Sets** control bar, simply click on the selection or search set from the list.


Note:

On recalling a selection set, all the items that were selected when the set was saved are re-selected into the current selection.

On recalling a search set, the search that was saved into the set is re-run and any items matching the specification are selected into the current selection.

Managing Selection Sets

As well as a tab on the selection tree, there is also a control bar dedicated to selection sets. To activate it, click on  in the **Workspace** toolbar or on the **View** menu, click **Control Bars > Selection Sets**:

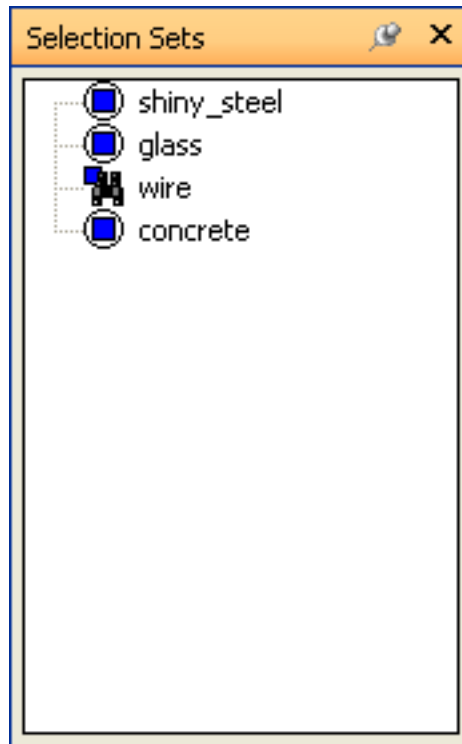

This is the main management center for selection sets. All actions concerning selection sets are available by right-clicking this control bar.

Right-clicking a blank space in the **Selection Sets** control bar opens a shortcut menu with the options to **Save Current Selection** or **Save Current Search**, as outlined in "[Saving Selection and Search Sets](#)". This also gives access to the **Add Folder** and **Sort** options as detailed below.

Managing Selection Sets:

1. Right-click a selection set.
2. Click **Add Folder** to create a new folder above the selected item.
3. Click **Save Current Selection** to save the current selection as a selection set in the list. This set will contain the currently selected items.
4. Click **Save Current Search** to save the current search as a selection set in the list. This set will contain the current search criteria.
5. Click **Make Visible** to make visible the items contained within the selected selection set.
6. Click **Add Comment** to add a comment to the selection set. This command will display the **Add Comment** dialog box. See "[Commenting](#)" for more information on comments.
7. Click **Edit Comment** to edit a comment attached to the selected selection set. This command will display the **Edit Comment** dialog box. See "[Commenting](#)" for more information on comments.
8. Click **Add Copy** to create a copy of the selection set to the list. The copy will be named the same as the selection set clicked on, but with a "- copy" suffix.

9. Click **Update** to set the selected selection set to the currently selected items, or if it's a search set, it will update it with the current search.
10. Click **Delete** to delete the selected selection set.
11. Click **Rename** to rename the selected selection set.
12. Click **Sort** to sort the contents of the Selection Sets window alphabetically.

Using Folders to Manage Selection Sets:

Folders in the Selection Sets control bar work in a similar way to how they do in Microsoft Windows. They can be created by right-clicking either on a blank space in the **Selection Sets** control, or on any visible item in the list and selecting **Add Folder** from the shortcut menu. If the item selected is a folder, then the new folder will be created inside, otherwise it will be created in the root of the control above the selected item.

Items in the list can also be dragged and dropped into and out of folders, including folders themselves as well as their contents, simply by selecting the item, holding the left mouse button down, moving over to where the item should be placed, and letting go of the left mouse button. In this way it is possible to create a variety of nested folders containing any number of folders, selection and search sets.

Selection Resolution

Selection resolution affects what geometry you select when selecting items in the main navigation window using **Select mode**.

When you click on an item in **Select** mode, NavisWorks doesn't know what level of item to start selecting at - do you mean the whole model, or the layer, or the instance, or group, or just the geometry? The selection resolution tells NavisWorks what level in the selection tree to start selecting items at by default.

The options are:

- Model
Selects the whole model.
- Layer
Selects all items on a layer.
- First Object
Selects the first item in the selection tree path that isn't a layer.
- Last Unique
Selects the most specific item (furthest along the selection tree path) that is unique (not multiply instanced).
- Last Object
Selects the most specific item (furthest along the selection tree path) that is marked as a composite object. If no composite object is found, the geometry is selected. This is the **Default** selection resolution setting.

- Geometry

Selects the last item in the selection tree path (most specific, but may be multiply instanced).

If you find you have selected the wrong level of item, you can interactively "cycle" through the selection resolution, without having to go to the options dialog or the selection tree. You do this by holding down the **Shift** key when selecting an item. This selects an item one level more specific each time you select the item until the resolution gets to "geometry", at which point it will revert back to "model". The selection resolution remains as set in options for the next selection.

As well as being able to set the default selection resolution on the Selection page in the **Options Editor**, a quicker way is to right-click on any item in the selection tree and choose the menu item **Set Selection Resolution to X**, where X is one of the above selection resolutions.


Selection Options

Use the **Selection** options to configure how you select items in the NavisWorks scene. You can set the level at which you select items (selection resolution), the distance from an item you have to be for it to be selected (useful for lines and points) and also the color in which selected items are displayed.

Setting selection options:

1. On the **Tools** menu, click **Global Options**.
2. Expand the **Interface** node in the **Options Editor** dialog box, and click the **Selection** option.

The **Selection** page is displayed.

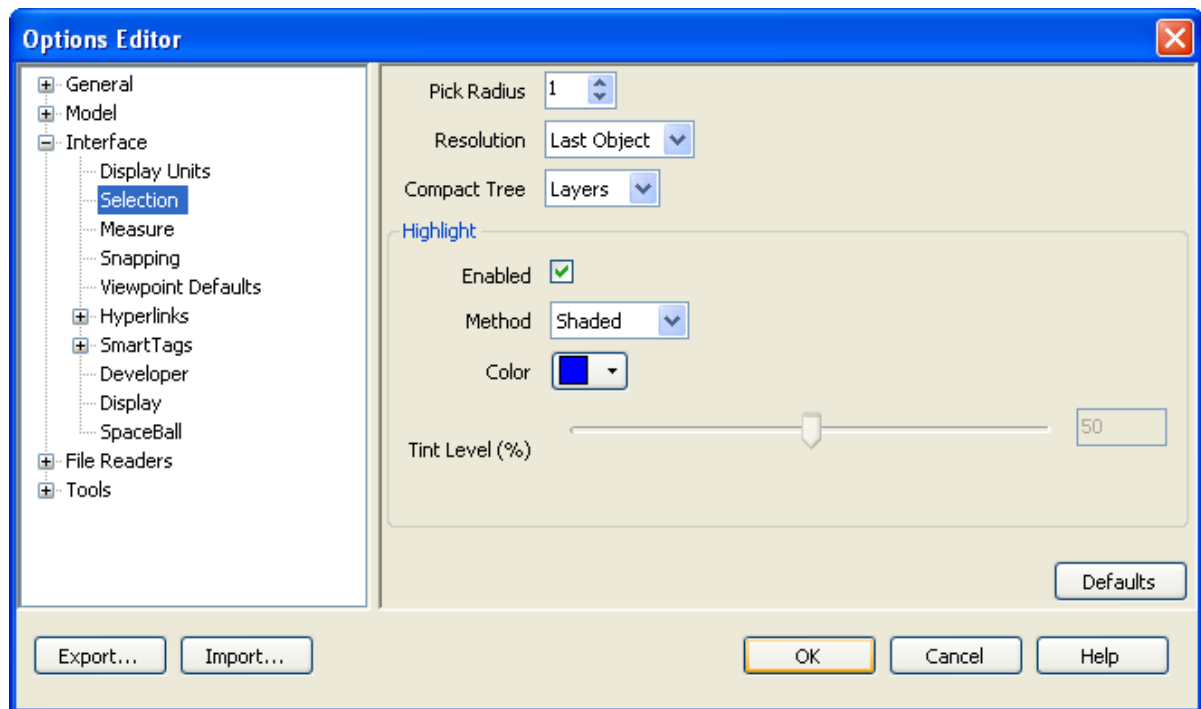

3. To set the color that selected items are displayed in, click the **Color** button. The default highlight color is blue. Alternatively, clear the **Enabled** check box to disable selected item highlighting (items won't change color when selected).
4. In the **Pick Radius** box, enter the radius, in pixels, that an item has to be within in order for it to be selected.
5. In the **Resolution** box, choose the level of selection that you wish to use as the default, see selection resolution.
6. In the **Compact Tree** box, choose what level of detail you wish to see in the selection tree. **Models** will restrict the tree to just displaying model files, **Layers** will restrict it down to the layer level and **Objects** will show a similar tree to the **Standard** tree, but without the levels of instancing inserted above an inserted block.
7. Click **OK** to set the options or **Cancel** to exit the dialog box without setting them.

Chapter 14. Finding

Finding is a quick and powerful way of selecting items into the current selection based on items' properties. These "searches" can then be saved (see "[Saving Selection and Search Sets](#)") and re-run in later sessions.

You can also find text inside comments using the Find Comments functionality.


Properties


The **Properties** control bar shows all the properties of a selected item. Properties are categorized into categories such as **Item** and **Material** and this control bar has a tab for each property category of the selected item. Whenever a single item is selected, this control bar will be updated to show the properties of that item.

Note:

If more than one item is selected the **Properties** bar will only show the number of items selected and won't show any property information.

The **Properties** control bar looks like this:

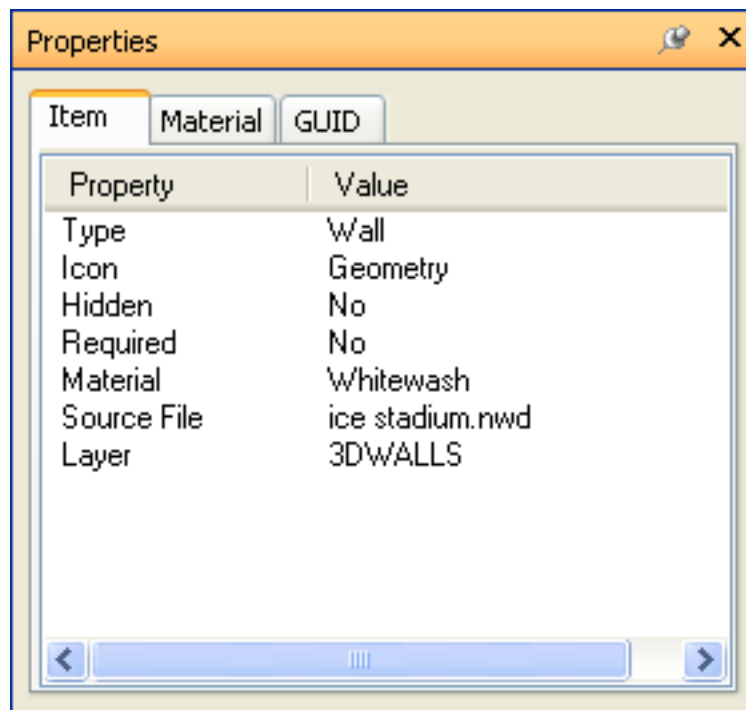

To activate it, click the **Properties** button  on the **Workspace** toolbar, or on the **View** menu, click

Control Bars > Properties.


Hyperlinks are also classed as a property category and so can be added and edited from this control bar using the shortcut menu. See "[Hyperlinks](#)" for more details on hyperlinks.

NavisWorks will also convert many different CAD application object properties, such as those from Architectural Desktop™ or MicroStation TriForma™.


Every property has a type associated with it, for example, an item's **Name** is a string, and so on. Internal file properties, such as transform and geometry properties, are not shown by default. If you want to view this information, use a developer profile by selecting the **Show Internal Properties** check box on the Developer page of the **Options Editor** dialog box.

Properties can be brought in from an external database and shown inside database-specific tabs in the **Properties** control bar. See [Chapter 25, DataTools](#) for more details on how to bring through object properties using DataTools.

Finding Items

In NavisWorks, searching the model for items based on their properties is quick and simple using the **Find Items** control bar. To access it, on the **View** menu, click **Control Bars > Find Items**, or click the **Find Items** button  on the **Workspace** toolbar. Alternatively, click **Edit > Find Items**.

The **Find Items** control bar looks like this:

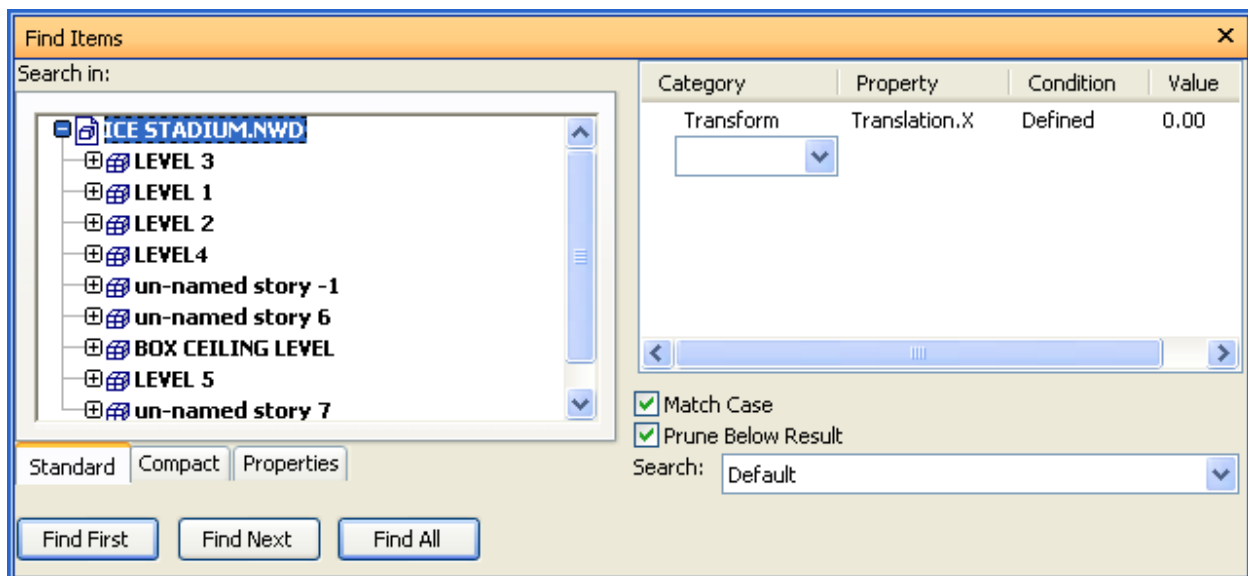

Notice that the selection trees occupy the left half of this bar, allowing you to refine your searches further within a specific hierarchy. See “[Selection Trees](#)” for more information on the selection trees. Simply click the selection tree tab that best suits your current search.

Finding items based on properties:

1. If it's not already open, open the **Find Items** control bar as outlined above.
2. Choose the selection tree tab that best suits your search. For example, if you know you are limiting your find to within a specific selection set, then click the **Sets** tab.
3. Choose the items where you want to start the find from. For example, if you know you want to search

the whole model, then choose the file or files from the **Standard** tab that comprise the model. You could also select several selection sets to limit your find to these items in the sets.

Note:

You can right-click the selection tree and choose from **Import Current Selection** to quickly select the items currently selected for the search, or conversely, **Set As Current Selection** to set the current selection to that you have already selected in the find selection tree.

4. The right-hand side of the bar contains a list box with four columns, **Category**, **Property**, **Condition**, and **Value**. This is where the find specification is set up. In this list box, you define a series of conditions which are, by default, logically ANDed together as follows:
 - Each condition is started by clicking the next available line under the **Category** column and from the ensuing drop-down list, choosing which category the property you wish to search for is in. Only the categories that are contained in the scene are available in the drop-down list.
 - After choosing the category, then choose the property you wish to test for in the **Property** drop-down list which will then be available. Again, only the properties in the scene within the category chosen will be available.
 - Then, from the following **Condition** drop-down list, choose the condition you wish to test for. This will depend on the type of property you are searching for. For example, you can choose **Contains** to search for a series of letters within a string. **Wildcard** means you can use wildcards in the **Value** field to allow matching against any character or an arbitrary sequence of characters. The symbol = means "exactly equals" and can be used for any type of property. The mathematical symbols, <, >, <= and >= apply to number types and mean "less than", "greater than", "less than or equal to", and "greater than or equal to" respectively. Also available are **Defined** and **Undefined** to mean "anything" (in other words, it's there) and "nothing" (in other words, it's not there) respectively.
 - Finally, if you didn't choose either **Defined** or **Undefined** in the **Condition** column, you have to define the **Value** you want to match in the find. You can either type in a value freely in the text box, or choose a pre-defined value from the drop-down list which shows all values in the model available within the category and property you defined earlier. If you chose **Wildcard** in the **Condition** column you can type in a value with wildcards. To match one single unspecified character use the symbol ?, for example, a **Value** field of "b??ck" will match "brick" and "block". To match any number of unspecified characters, use the symbol *, for example, a **Value** field of "b*k" will match "bench kiosk", "brick" and "block". Similarly, a **Value** field of "*b*k*" will match "bench kiosk", "brick" and "block" and also "Coarse bricks" and "block 2".
5. Continue to add conditions to the find specification. Each condition you add will by default be logically ANDed with the others. See the example below for a better explanation of the logic.
6. You can logically negate any condition by selecting the condition, then right-clicking the list box and choosing **Negate Condition**. See the example below for a better explanation of the logic.
7. Instead of the condition being logically ANDed, you can also logically OR a condition by selecting the condition, then right-clicking the list box and choosing **Or Condition**. All conditions following this condition are logically ANDed together and will be logically ORed with all conditions preceding this condition (which are in turn logically ANDed together). A small "plus" will appear next to an ORed condition. See the example below for a better explanation of the logic.
8. To delete the selected condition, right-click the list box and choose **Delete Condition** from the shortcut menu. Alternatively, to delete all the conditions in the find specification, choose **Delete All**

Conditions from the shortcut menu.

9. The shortcut menu that appears when right-clicking the list box also contains several **Ignore Category ...** and **Ignore Property ...** options. See [User Name and Internal Name](#) for details on what these mean.
10. Select the **Match Case** check box if you want the find to respect the upper and lower case letters in strings. You can also define case sensitivity at the condition level by selecting the condition, right-clicking the list box and choosing **Ignore String Value Case** from the shortcut menu. This will then ignore that condition's case when making comparisons. The **Match Case** check box should gray out, showing that some conditions are case sensitive and other are not.
11. Select the **Prune Below Result** check box if you want to stop searching a branch of the selection tree as soon as an item that matches the find specification is found.
12. From the **Search** drop-down list, select the type of search you want to perform.
 - **Default** searches all items selected in the selection tree, along with the paths below these items, for matches with the search.
 - **Below Selected Paths** only searches below the items selected in the selection tree for matches with the search.
 - **Selected Paths Only** only searches within the items selected in the selection tree for matches with the search.
13. Click **Find First** for the first item in the selection tree to match any of the find specification, **Find Next** to find the next item in the tree, and **Find All** to find all items matching the specification.
14. You can click **Abort Search** at any time during a lengthy search to cancel the search.
15. Any items found will be selected in the selection tree and main navigation window.

Note:

A small "star" will appear next to any condition that does not have the default settings, such as if you negate the condition or select one of the **Ignore...** items on the shortcut menu.

Find Item Example


Let's say, you have set up four conditions in the search called C1, C2, C3 and C4. If you want to search for (C1 AND C2) OR (C3 AND NOT C4), then you would select condition 3 and choose **Or Condition** from the shortcut menu, and then select condition 4 and choose **Negate Condition** from the shortcut menu. So all conditions following the OR are ANDed together and this group of conditions is ORed with the first group of conditions, which are also ANDed together. In other words, the precedence is NOT, then AND, then OR.

Quick Find

As well as the more comprehensive and powerful **Find Item** feature (see "[Finding Items](#)"), NavisWorks also offers a simpler and quicker **Quick Find**. This simply searches for a string (case insensitive) in all property names and values attached to items in the scene.

Quickly finding items from a string:

1. On the **Edit** menu, click **Quick Find** or press **Ctrl-F**. The **Quick Find** dialog box will appear:

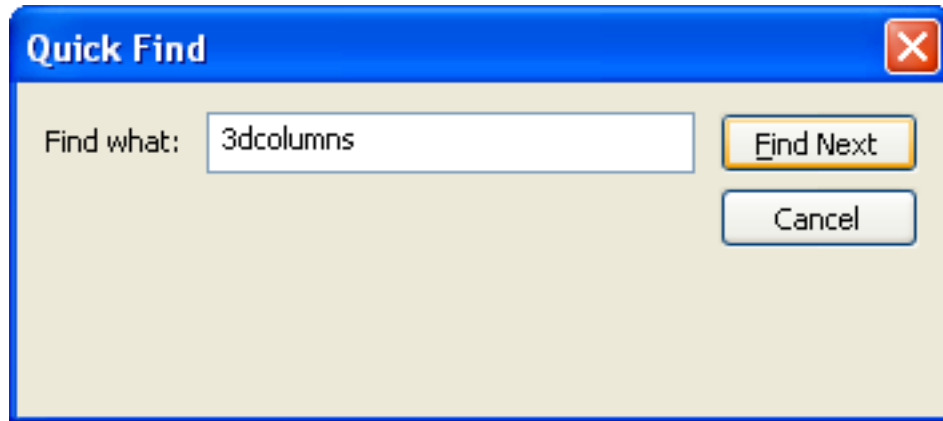

2. Type in the string you want to search for in all items' properties. This search is not case sensitive.
3. Click **Find Next** to find the next item in the selection tree containing this string or **Cancel** to return to NavisWorks.
4. If any items contain properties with the string being searched for, the next one in the selection tree will be highlighted and the search stopped.
5. To repeat the search, simply press **F3** or click **Quick Find Next** on the **Edit** menu. If any more items contain properties with the string, the next one in the selection tree will be highlighted and the search stopped.

Finding Comments

As well as finding items by property, you can also search the comments attached to items, clash results and selection sets using the **Find Comments** control bar. For more information on what comments are and how to attach them to items, see "[Commenting](#)".

To access it, on the **View** menu, click **Control Bars > Find Comments**, or click the **Find Comments** button  on the **Workspace** toolbar, or click **Edit > Find Comments**. Alternatively, on the **Review** menu, click **Comments > Find Comments**.

The **Find Comments** control bar looks like this:

Name	Comment	Date	Author	ID
Cafe	New comment	11:36:...	keyg	1

Finding comments:

1. If it's not already open, open the **Find Comments** control bar as outlined above.
2. Type in the text that you want to search for in the **Text** box.

Note:

You should use the "*" wildcard (without the quotes) to match an arbitrary series of letters either before or after the text you enter here. For example, if you want to find all comments containing the word "redline", you should enter "*redline*" in the box, otherwise you will only find comments that contain only the "redline" word, which probably won't be many!

3. If you want to restrict your search to comments made by a single author, then type in the name of that author in the **Author** box.
4. If you know the ID of the comment you want to find, enter this in the **ID** box.
5. If you want to restrict your search to comments of a particular status, select the required status from the **Status** drop-down list.
6. Select the **Match Case** check box if you want the search to respect lower and upper case characters in the search.
7. You can refine the search further by clicking the **Date Modified** tab to select a date range within which the comment must have been made.

8. You can click the **Source** tab and select the relevant check boxes for **Clash Detective**, **TimeLiner**, **Selection Sets**, **Viewpoints** or **Redline Tags** to restrict the search by the source that the comment is attached to.

Note:

If the **Text**, **Author**, **ID** and **Status** boxes are left empty, the search will return all comments within the **Date Modified** and **Source** restrictions.

9. Click **Find** to search for the comments.
10. If any comments are found, they will be listed in the box at the bottom of the control bar. Selecting a comment will also select the source of the comment. For example, selecting a comment which originated from a saved viewpoint will select that viewpoint.

If new comments are added, the results list will be cleared.

Chapter 15. Editing

As NavisWorks is a design review tool, editing is restricted to simple temporary "overrides" of items' properties, so that they can always be reset to the state they were in when imported from the CAD file. You can override an item's position by holding onto the item while navigating and then dropping it in a new position, or move it by overriding its transform. Also you can edit an item's color, transparency, and hyperlinks. In addition, you can hide and reveal items and make them required and unrequired to control their drop out during navigation. Finally, you can also edit a file's transform, or in other words, its origin location, scale, rotation and so on, so that it fits within the scene when appending multiple models from potentially different sources and CAD applications.

Most editing is done from the **Edit** menu, which includes the following items:



- Undo
- Redo
- Select
- Quick Find
- Quick Find Next
- Find Items
- Find Comments
- Hidden
- Required
- Unselected Hidden
- Override Item
- Reset Item
- Reset All
- File Units and Transform

The three main editing functionalities not available from the **Edit** menu are hyperlinks, holding items and object manipulation.

Holding and releasing objects

When navigating around a model in NavisWorks it is possible to "pick up" or hold selected items and move around with them in the model. For example you may be viewing a plan for a factory and would like to see different configurations of machine layouts.


Holding and releasing items:

1. Select the item(s) to be held for moving.
2. On the **Viewpoint** menu, click **Navigation Tools > Hold**
or
Click **Hold**  on the **Navigation Tools** toolbar.
3. The selected item(s) are now held and will move with you through the model when you use the normal navigation modes i.e. Walk, Pan etc.
4. To release the held item, click **Hold**  on the **Navigation Tools** toolbar again.


To reset the item to its original position, see “ [Resetting Items' Positions](#) ”.

Undo/Redo

You can undo or redo your actions in NavisWorks. The **Edit > Undo** and **Edit > Redo** menu item states what type of action you will undo/redo.

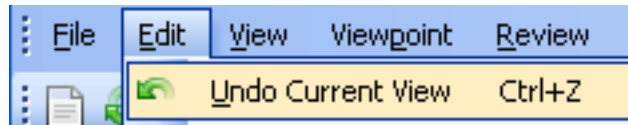

To undo an action:

- On the **Edit** menu, click **Undo**
- or
- Press **Ctrl-Z**
- or
- Click **Undo**  on the **Standard** toolbar

Repeat as many times as required or your options allow.

To redo an action:

- On the **Edit** menu, click **Redo**
- or

- Press **Ctrl-Y**

or

- Click **Redo**  on the **Standard** toolbar

Repeat as many times as required, or your options allow.


Undo Options

You can set the amount of space you wish to allocate to the undo buffer. The default settings should be adequate for most normal usage.

Setting undo options:

1. On the **Tools** menu, click **Global Options**.
2. Expand the **General** node in the **Options Editor** dialog box, and click the **Undo** option.

The **Undo** page is displayed:

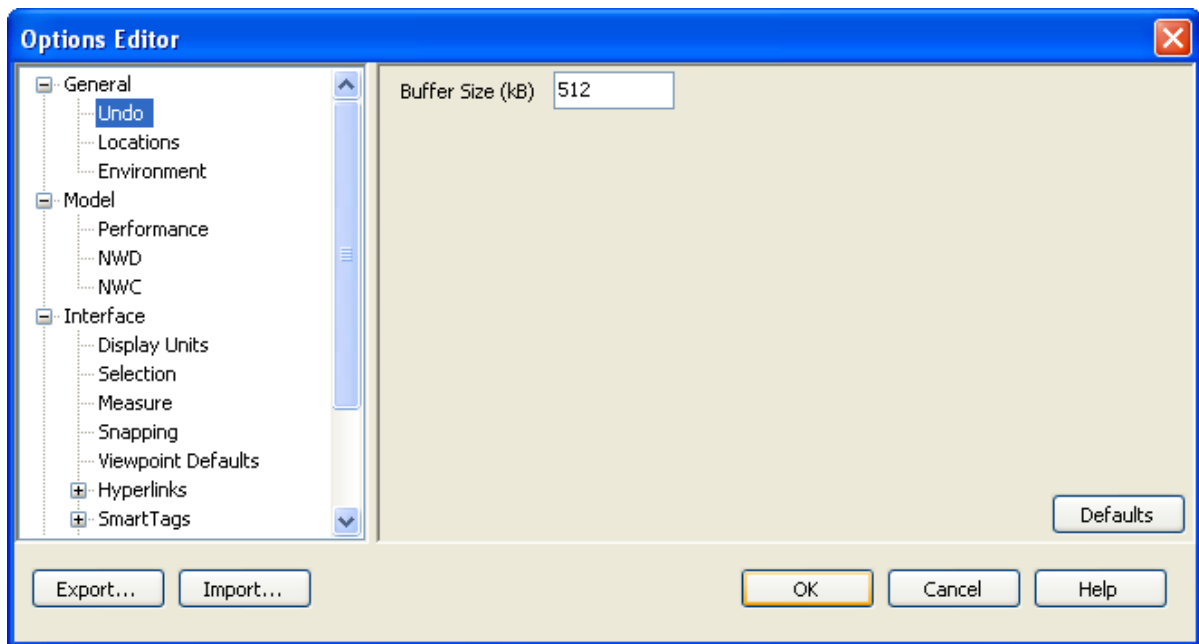

3. Set the amount of space you wish to allocate for saving undo/redo actions.
4. If you want to return to the system default values, click the **Defaults** button.
5. Click **OK** to set these options or **Cancel** to exit the dialog without setting them.

Hiding Items

This command hides the current selection and allows you to hide and reveal items by toggling on and off.

Note:

In the selection tree the object will appear gray when hidden.

Hiding an item:

1. Select the item(s) that you want to hide (see [Chapter 13, *Selecting Items*](#) for more information on how to do this).

2. On the **Edit** menu, click **Hidden**

or

Click **Hidden**  on the **Selection Tools** toolbar.

Making items required

This option makes the current selection required for rendering which means that they will always be rendered during navigation and not drop out. The command allows you to make an item required or unrequired by toggling on and off.

Note:

A *Required* item may also be *Hidden*. In the selection tree the object will appear red when required.

Making an item required:

1. Select the item(s) that you want to make required (see [Chapter 13, *Selecting Items*](#) for more information on how to do this).

2. On the **Edit** menu, click **Required**

or

Click **Required**  on the **Selection Tools** toolbar.

Hiding Unselected Items

This command hides all items except those currently selected so that they are not drawn in the main view.

The command allows you to hide and reveal the hidden items by toggling on and off.

Note:

In the selection tree the items will appear gray when hidden.

Hiding all non-selected items:

1. Select the item(s) that you want to remain visible (see [Chapter 13, *Selecting Items*](#) for more information on how to do this).
2. On the **Edit** menu, click **Unselected Hidden**.

or

Click **Unselected Hidden**  on the **Selection Tools** toolbar.

Overriding Item Properties

Various item properties, such as material (color and transparency) and hyperlinks, can be temporarily overridden in the scene for design review. These overrides are saved into .nwf files for future use and any material overrides can be optionally saved into viewpoints (see “[Viewpoints Options](#)”).

Overriding Color

This option allows a user-defined color to be added to an item in the scene. The old color is saved in case it needs to be reset later.

Overriding an item's color:

1. On the **Edit** menu, select **Override Item > Override Color**

or

Right-click the item and select **Override Color**.

2. Select a color from the color-chooser and click **OK**.

Note:

Any materials applied with the Presenter tool will supersede any color overrides.

Overriding Transparency

This option allows a user-defined transparency to be added to an item in the scene. The old color is saved in case it needs to be reset later.

Overriding an item's transparency:

1. On the **Edit** menu, select **Override Item > Override Transparency**

or

Right-click the item and select **Override Transparency**.

2. Use the slider to select level between opaque and transparent and click **OK**.

Note:

Any materials applied with the Presenter plugin will supersede any transparency overrides.

Overriding Transforms

This option allows a user-defined transform to be applied to the position of an item in the scene. The original position of the item is saved in case it needs to be reset later.

Overriding an item's transform:


1. Select the item(s) that you wish the transform to be applied to (see [Chapter 13, Selecting Items](#) for more information on how to do this).

2. On the **Edit** menu, select **Override Item > Override Transform**

or

Right click on the selected item(s) and select **Override Transform...** from the shortcut menu.

The **Override Transform** dialog box is displayed:

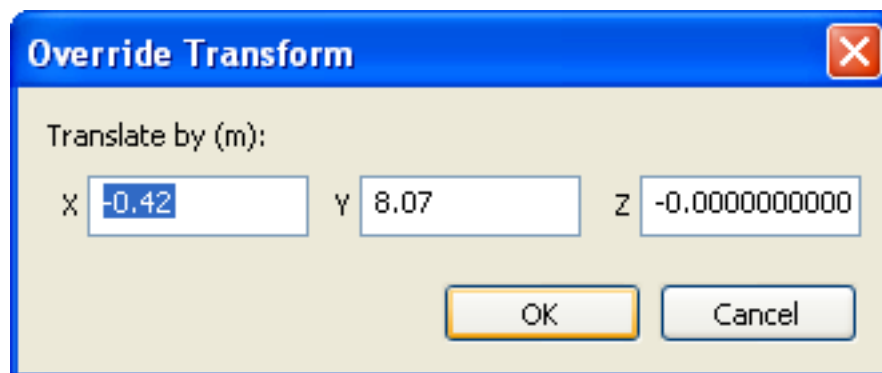

3. Enter the XYZ values of the transform to be applied to the item(s). For example, a transform of (0, 0, 1) will reposition an item by one unit in the Z direction.
4. Click **OK** to apply the transform, or **Cancel** to return to NavisWorks without applying it.

Also see “ [Transforming Objects](#) ” for more information on interactively transforming objects.

Overriding Hyperlinks

As well as hyperlinks being converted from the native CAD files you open in NavisWorks, you can also "override" an item's hyperlinks by attaching multiple additional hyperlinks to it. Because hyperlinks are treated as a property by NavisWorks, they can be searched on with the **Find Items** tool and displayed in the **Properties** bar. They are also saved into NavisWorks files so that as the model changes, the links remain for you and others to view.

See “ [Hyperlinks](#) ” for more information on overriding hyperlinks.

Resetting Overriden Properties

Once an override has been applied to an item, you simply reset that override to return it to the value that it had when the file was originally converted from the native CAD file.

Resetting Colors and Transparencies

This option restores the original items' color *and* transparency to the selected items.

Note:

You cannot reset an item's color separately from its transparency - they are always reset together.

To reset color and transparency:

- On the **Edit** menu, click **Reset Item > Colors and Transparencies**.

Resetting Hyperlinks

This option restores the original items' hyperlinks to the selected items and removes any hyperlinks that have been added in the model since.

To reset hyperlinks:

- On the **Edit** menu, click **Reset Item > Reset Hyperlinks**.

Resetting Items' Positions

This option restores the original items' positions to the selected items, after it has been moved using the Hold Item command, Transformed, or Repositioned.

To reset an item's position:

- On the **Edit** menu, click **Reset Item > Reset Transform**

or

- Right-click the item and choose **Reset Transform**.

Resetting All Overriden Properties

Once an override has been applied to several items, you can reset them all at once to return them to the values that they had when the file was originally converted from the native CAD file.

Resetting All Colors and Transparencies

This option restores all items in the scene to their original colors and transparencies.

Note:

Items' colors cannot be restored separately from their transparencies.

To reset all materials:

- On the **Edit** menu, click **Reset All > Colors and Transparencies**.

Resetting All Items' Hyperlinks

This option restores all items hyperlinks to the original state that they were in when the model was imported into NavisWorks.

To restore all items hyperlinks:

- On the **Edit** menu, click **Reset All > Reset All Hyperlinks**.

Revealing All Items

This option reveals (unhides) all items.

To reveal all items:

- On the **Edit** menu, click **Reset All > Unhide All**.

Making All Items Unrequired

This option makes all items unrequired so that no items are forced to be rendered during navigation.

To make all items unrequired:

- On the **Edit** menu, click **Reset All > Unrequire All**.

Resetting All Items' Positions

This option restores the original positions of any items that have previously been held, transformed and repositioned around the model.

To restore all items positions:

- On the **Edit** menu, click **Reset All > Reset Transforms**.


Custom Properties

Property information brought into NavisWorks from a CAD application cannot be edited, with the exception of color, transparency and hyperlinks, as described in the previous section. You can, however, add your own custom information to any item in the model scene.

Add User Data Tab

This option allows a user-definable tab to be added to the **Properties** control bar.


Adding a new user data tab:

1. If it's not already displayed, on the **View** menu, click **Control Bars > Properties**, or click **Properties**  on the **Workspace** toolbar, to open the **Properties** control bar.
2. Select the item in the NavisWorks scene to which you wish the new data tab to be associated with.
3. Right-click the **Properties** control bar and select **Add New User data Tab**.

Rename User Data Tab

This option allows a user-definable tab to be renamed in the **Properties** control bar.

Renaming a user data tab:

1. If it's not already displayed, on the **View** menu, click **Control Bars > Properties**, or click **Properties**  on the **Workspace** toolbar, to open the **Properties** control bar.
2. Select the user data tab you wish to rename.
3. Right-click the **Properties** control bar and select **Rename Tab**.
4. Enter a new name for the tab, then click **OK**, or click **Cancel** to return to NavisWorks without renaming the tab.

Add New Property

This option allows a custom property to be added to a user data tab in the **Properties** control bar.

Adding a new property to a user data tab:


1. If it's not already displayed, on the **View** menu, click **Control Bars > Properties**, or click **Properties**  on the **Workspace** toolbar, to open the **Properties** control bar.

2. Select the user data tab you wish to add the new property to.
3. Right-click the **Properties** control bar and select **Insert New Property**, then select the property type you wish to add:
 - **String**. Select this property type if the value you wish to add is a string.
 - **Boolean**. Select this property type if the value you wish to add is **Yes** or **No**.
 - **Float**. Select this property type if the value you wish to add is a decimal value, for example 1.234.
 - **Integer**. Select this property type if the value you wish to add is a positive whole number (1, 2, 3,...), a negative whole number (-1, -2, -3,...), or zero (0).

Edit Property Value

This option allows the value of a custom property to be edited in the **Properties** control bar.

Editing the value of a custom property:

1. If it's not already displayed, on the **View** menu, click **Control Bars > Properties**, or click **Properties**  on the **Workspace** toolbar, to open the **Properties** control bar.

2. Select the user data tab containing the custom property whose value you wish to edit.
3. Right-click the **Property** whose value is to be edited and select **Edit Property Value**.

Note:


For **Boolean** properties, select **Set Value** then **Yes** or **No** from the list.

4. Enter the new value for the property, ensuring it is valid for the property type.
5. Click **OK** to accept the edit, or **Cancel** to return to NavisWorks without editing the property value.

Rename Property

This option allows you to rename a custom property added to a user data tab in the **Properties** control bar.


Renaming a custom property:

1. If it's not already displayed, on the **View** menu, click **Control Bars > Properties**, or click **Properties**  on the **Workspace** toolbar, to open the **Properties** control bar.
2. Select the user data tab containing the custom property you wish to rename.
3. Right-click the **Property** to be renamed and select **Rename Property**.
4. Enter the new name for the property then click **OK**, or **Cancel** to return to NavisWorks without renaming the property.

Delete Property

This option allows you to delete a custom property added to a user data tab in the **Properties** control bar.


Deleting a custom property:

1. If it's not already displayed, on the **View** menu, click **Control Bars > Properties**, or click **Properties**  on the **Workspace** toolbar, to open the **Properties** control bar.
2. Select the user data tab containing the custom property you wish to delete.
3. Right-click the **Property** to be deleted and select **Delete Property**.

Delete User Data Tab

This option allows you to delete a user data tab from the **Properties** control bar.

Deleting a user data tab:

1. If it's not already displayed, on the **View** menu, click **Control Bars > Properties**, or click **Properties**  on the **Workspace** toolbar, to open the **Properties** control bar.
2. Select the user data tab you wish to delete.
3. Right-click the **Properties** control bar and select **Delete User Data Tab**.

Setting a File's Units and Transform

You may need to use this feature when working with Clash Detective and/or Presenter, where it's important to have the model in the correct units and scale, to ensure clash results are accurate and materials are applied correctly. You may also find this useful if you append several models from different sources into the same scene and the scale, rotation and origin of some models need amending to match the other models.

The first thing to try, however, before attempting to manually adjust the file's transform, is to check that the units are ok. See "[Units](#)" for a discussion of units and how to adjust them.

Note:


If you select an item that is inside the file and do a **File Transform** on it, the whole file will be transformed - not just the item selected. To transform a specific item within a file you will need to use the **Override Item Transform** function.

Also, only single files can be transformed at one time - this command is not available if multiple files/items are selected.

Setting a file's transform:

1. In the selection tree, select the file that you wish to transform the scale, origin or rotation of.
2. On the **Edit** menu, select **File Units and Transform**.

The **File Units and Transform** dialog box will appear:

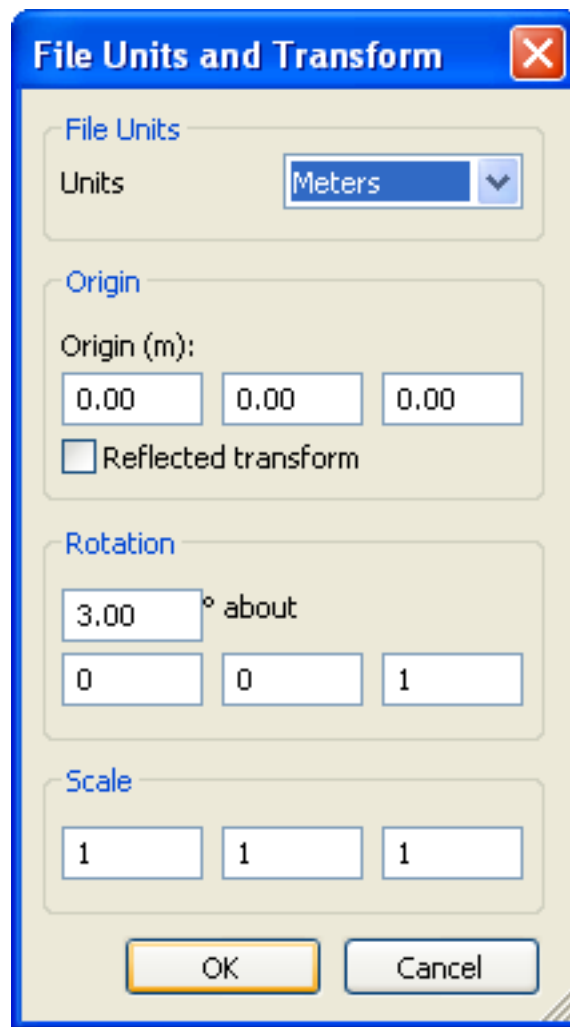

3. Move the model's location by entering model units for the x, y and z axis in **Origin**.
4. The **Reflected Transform** check box only needs to be selected if a negative scale has been set.
5. Change the rotation of an object by entering an angle of rotation and selecting the axis to rotate about (by entering a value greater than 0). The object rotates about its origin point.
6. Amend the size of the object by entering values greater than 0 (to proportionally scale an object ensure the x, y and z scale values are equal). A negative value will, in effect, flip the object inside out.
7. Click **OK**.

Chapter 16. Display Modes

The **Rendering Styles** toolbar controls the appearance of the model in the main navigation window. From here you can control the lighting effect, the rendering type and enable or disable the different types of primitives drawn. Linked with the display options (see “[Display Options](#)” later in this chapter) and file options (see “[File Options](#)”, this enables you to fully control the appearance of the NavisWorks main navigation window.

Rendering Styles

The rendering process interactively draws the scene's items in the main navigation window. You have a choice of one of four interactive lighting modes (full lights, scene lights, head light, or no lights), four rendering modes (full render, shaded render, wireframe or hidden line) and you can individually turn each of the five primitive types (surfaces, lines, points, snap points and text) on and off.

The **Rendering Style** toolbar looks like this:




To access it, right-click any toolbar (for example, **Standard**) in the main navigation window, and click **Rendering Style** on the shortcut menu.

Lighting

Lights come through from various CAD file formats as scene lights. The intensity of the head light and scene lights can be set using the **File Options** under the **Tools** menu (see “[File Options](#)” for details on this).

The spheres below demonstrate the effect the lighting styles have on them. In order from the left, these are full lights, scene lights, head light and no lights.

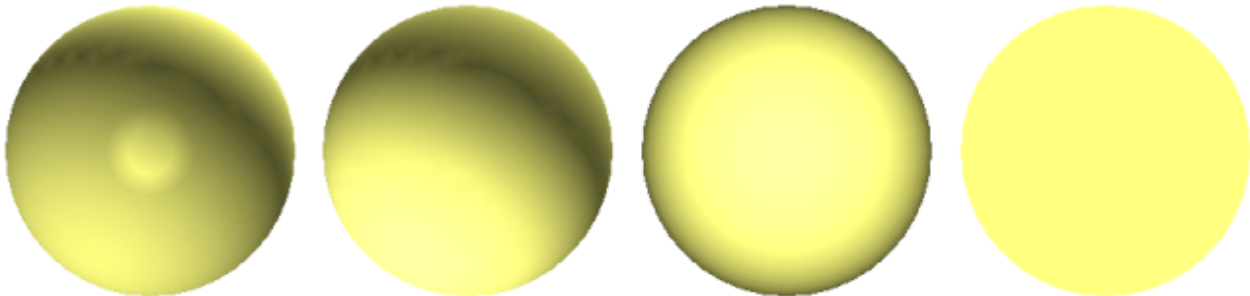


No Lights

This option turns off lighting. The models are shaded with flat rendering.

To turn off all lights:

- On the **Viewpoint** menu, click **Lighting > No Lights**

or

- Click **No Lights**  on the **Rendering Style** toolbar.


Head Light

This option uses a single directional light located at the camera that always points in the same direction as the camera. You can set the head lights properties using Head Light options.

To turn on the head light:

- On the **Viewpoint** menu, click **Lighting > Head Light**

or

- Click **Head light**  on the **Rendering Style** toolbar.

Head Light options

Sliders are available to change the intensity of the scene's ambient light and headlight.


The **Ambient** slider controls the general overall brightness of the scene while the **Headlight** slider controls the brightness of the light located at the viewpoint.

Note:

Changes made in Head Light options will not be visible unless you have selected the **Head Light** rendering style.

Changing head light intensity:

1. On the **Tools** menu, click **File Options**.
2. In the **File Options** dialog box, click the **Head Light** tab.

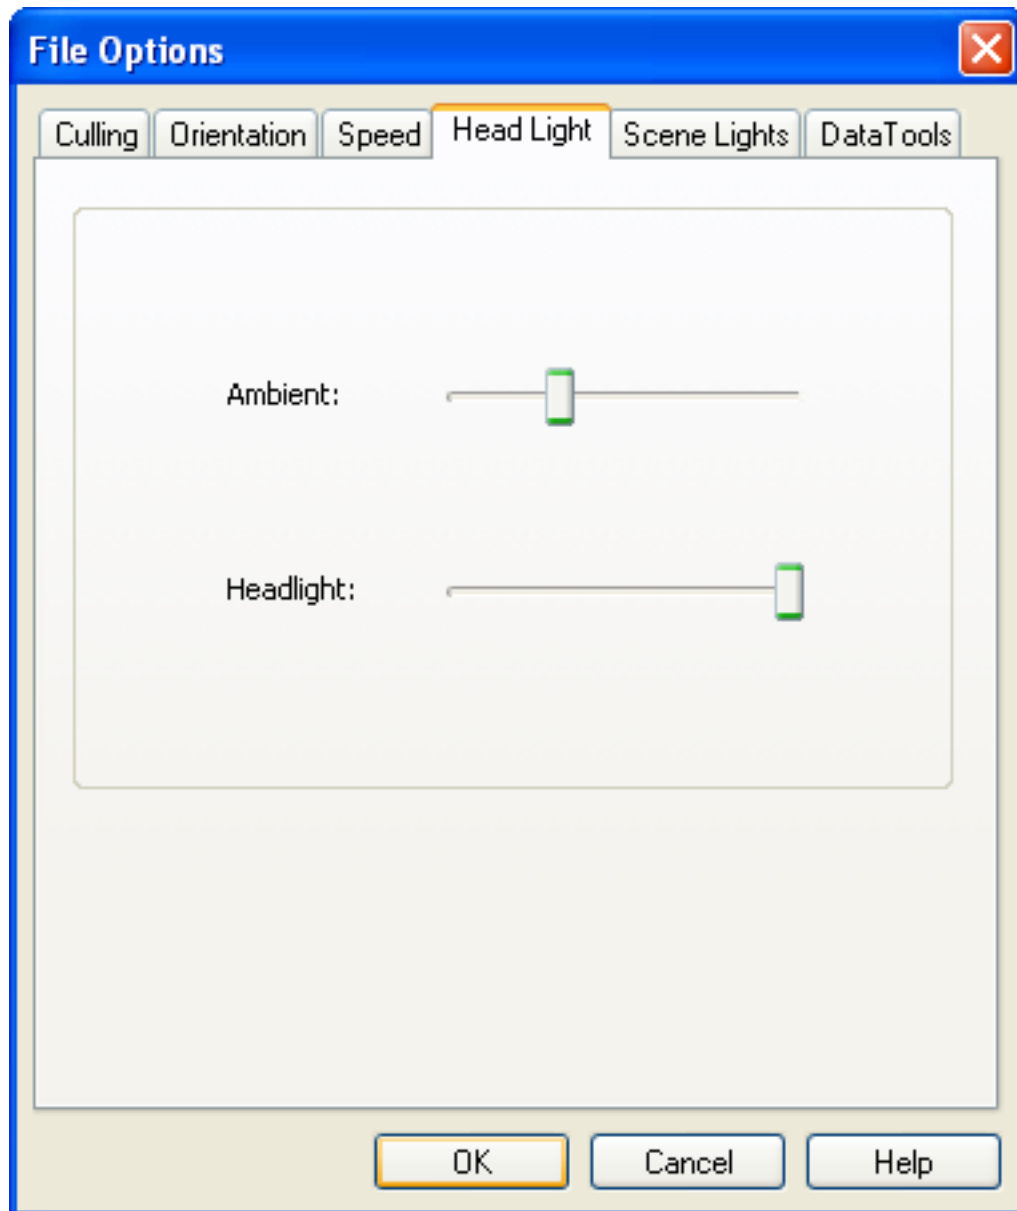

3. Move the sliders to affect the ambient and head light intensities. You will see the effect your changes have on the scene in the main navigation window, as long as head light is selected as the rendering style.
4. Click **OK** to set these options or **Cancel** to exit the dialog box without setting them.


Scene Lights

This option uses whatever lights are defined in the model, or two default opposing lights, if none are available. You can set the scene lights properties using Scene Lights options.

To turn on scene lights:

- On the **Viewpoint** menu, click **Lighting > Scene Lights**

or

- Click **Scene lights**  on the **Rendering Style** toolbar.

Scene Lights Options

Sliders are available to change the intensity of the scene's lights.


The **Ambient** slider controls the general overall brightness of the scene when scene lights is selected as the rendering style.

Note:

Changes made in Scene Lights options will not be visible unless you have selected the **Scene Lights** rendering style.

Changing scene light intensity:

1. On the **Tools** menu, click **File Options**.
2. In the **File Options** dialog box, click the **Scene Lights** tab.

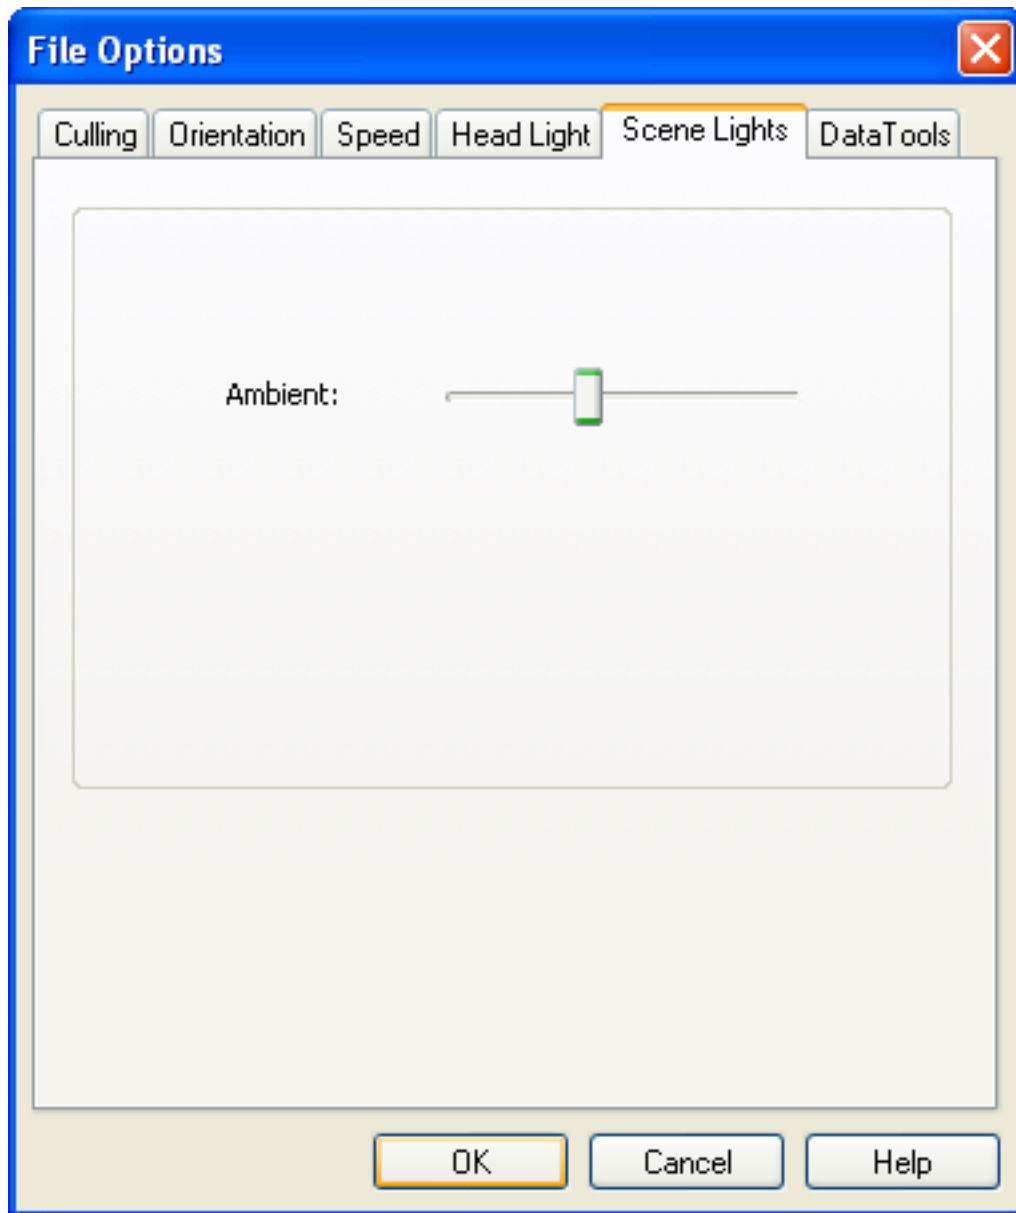

3. Move the slider to affect the ambient intensity. You will see the effect your changes have on the scene in the main navigation window, as long as scene lights is selected as the rendering style.
4. Click **OK** to set these options or **Cancel** to exit the dialog box without setting them.


Full Lights

This option uses lights that have been defined with the Presenter tool.

To turn on full lights:

- On the **Viewpoint** menu, click **Lighting > Full Lights**


or

- Click **Full lights**  on the **Rendering Style** toolbar.

Render Modes

The four render modes affect how the items are rendered in the main navigation window.

The spheres below demonstrate the effect that the render modes have on their appearance. In order from the left, these are full render, shaded, wireframe and hidden line.

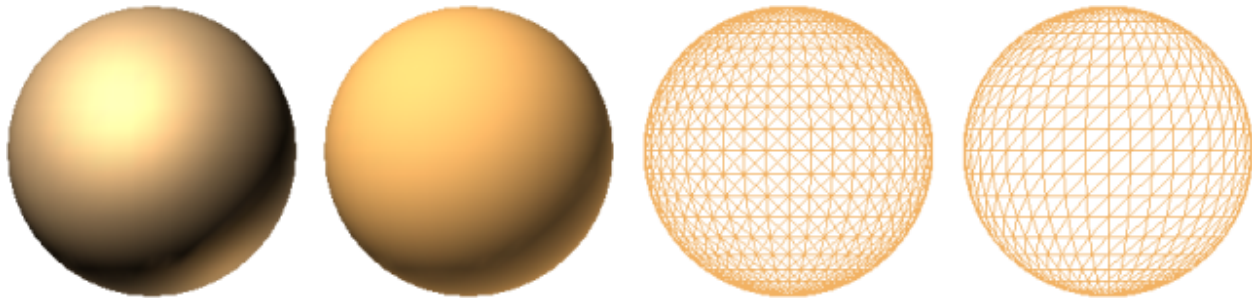


Full Render

This option renders the model with smooth shading including any Presenter materials that have been applied using NavisWorks Presenter or have been brought through from the native CAD file (although NavisWorks does not convert all native CAD file's textures - see [Chapter 10, Converting Files](#) for more details).

To select full render:

- On the **Viewpoint** menu, click **Rendering > Full Render**

or

- Click **Full Render**  on the **Rendering Style** toolbar.


Shaded Render

This option renders the model with smooth shading and without textures.

To select shaded render:

- On the **Viewpoint** menu, click **Rendering > Shaded**

or

- Click **Shaded**  on the **Rendering Style** toolbar.


Wireframe Render

This option renders the model in wireframe. As NavisWorks uses triangles to represent surfaces and solids, all triangle edges are visible in this mode.

To select wireframe render:

- On the **Viewpoint** menu, click **Rendering > Wireframe**

or

- Click **Wireframe**  on the **Rendering Style** toolbar.


Hidden Line Render

This option renders the model in hidden line. This requires a two pass rendering algorithm so is equivalent to rendering shaded and wireframe at the same time. The output is low quality as all the facet edges in the model are visible.

To select hidden line render:

- On the **Viewpoint** menu, click **Rendering > Hidden Line**

or

- Click **Hidden Line**  on the **Rendering Style** toolbar.

Display Primitives

The second part of the rendering style toolbar allows you enable and disable the drawing of surfaces, lines, points, snap points, and 3D text. Points are "real" points in the model, whereas snap points mark locations on other primitives, for example the center of a circle, and are useful for snapping to when measuring.


Surfaces

Surfaces are the triangles that make up the 2D and 3D items in the scene.

To toggle the rendering of surfaces on or off:

- On the **Viewpoint** menu, click **Display > Surfaces**

or

- Click **Surfaces**  on the **Rendering Style** toolbar.


Lines

As well as turning all lines on and off, it is possible to change the width of the lines. See “ [Display Options](#) ” for details on how to do this.

To toggle the rendering of lines on or off:

- On the **Viewpoint** menu, click **Display > Lines**

or

- Click **Lines**  on the **Rendering Style** toolbar.


Points

Points are real points in the model, for example, the points in a point cloud from a laser scan. As well as turning all points on and off, it is possible to change the number of pixels used to draw them. See “ [Display Options](#) ” for details on how to do this.

To toggle the rendering of points on or off:

- On the **Viewpoint** menu, click **Display > Points**

or

- Click **Points**  on the **Rendering Style** toolbar.


Snap Points

Snap points are implied points in the model, for example, the center point of a sphere or end points of a pipe. As well as turning all snap points on and off, it is possible to change the number of pixels used to draw them. See “ [Display Options](#) ” for details on how to do this.

To toggle the rendering of snap points on or off:

- On the **Viewpoint** menu, click **Display > Snap Points**

or

- Click **Snap Points**  on the **Rendering Style** toolbar.


Text

Text is the 3D text saved in the scene.

To toggle the rendering of text on or off:

- On the **Viewpoint** menu, click **Display > Text**

or

- Click **Text**  on the **Rendering Style** toolbar.

Background Color

This option allows you to select or mix a background color for the main view. Setting the background color is equivalent to setting a **Plain Background** on the **Effects** tab of the Presenter dialog box. This option is only available if you have the NavisWorks Presenter tool.

Setting the background color:

1. On the **Tools** menu, click **Background Color**.
2. Select the color from the Windows™ color palette.
3. Click **OK** to set the background color or **Cancel** to exit the dialog box without setting it.

Culling Options

There are three methods of culling objects in NavisWorks: backface, by area, and by near or far plane. All of these options are configurable using the **Culling** tab of the **File Options** dialog box.

Backface culling only draws the front face of every polygon in NavisWorks, which is clearly faster. Sometimes, however, the conversion process mixes up the front and back face of polygons and so you have to tell NavisWorks to draw both sides in order to not see right through some objects.


Area culling options allow you to set the size of objects within a model that will not be displayed. For example, if you were to set the value to 100 pixels any object within the model that would be drawn less than 10x10 pixels in size will not be displayed.

Culling options by near and far plane allows some degree of control over the resolution of the axis

perpendicular to the screen. NavisWorks uses the near and far clip plane to maximize the resolution of the model on screen. The near and far clip plane boxes dictate constraints for the near and far culling planes.

Setting culling options:

1. On the **Tools** menu, click **File Options**.
2. In the **File Options** dialog box, click the **Culling** tab.

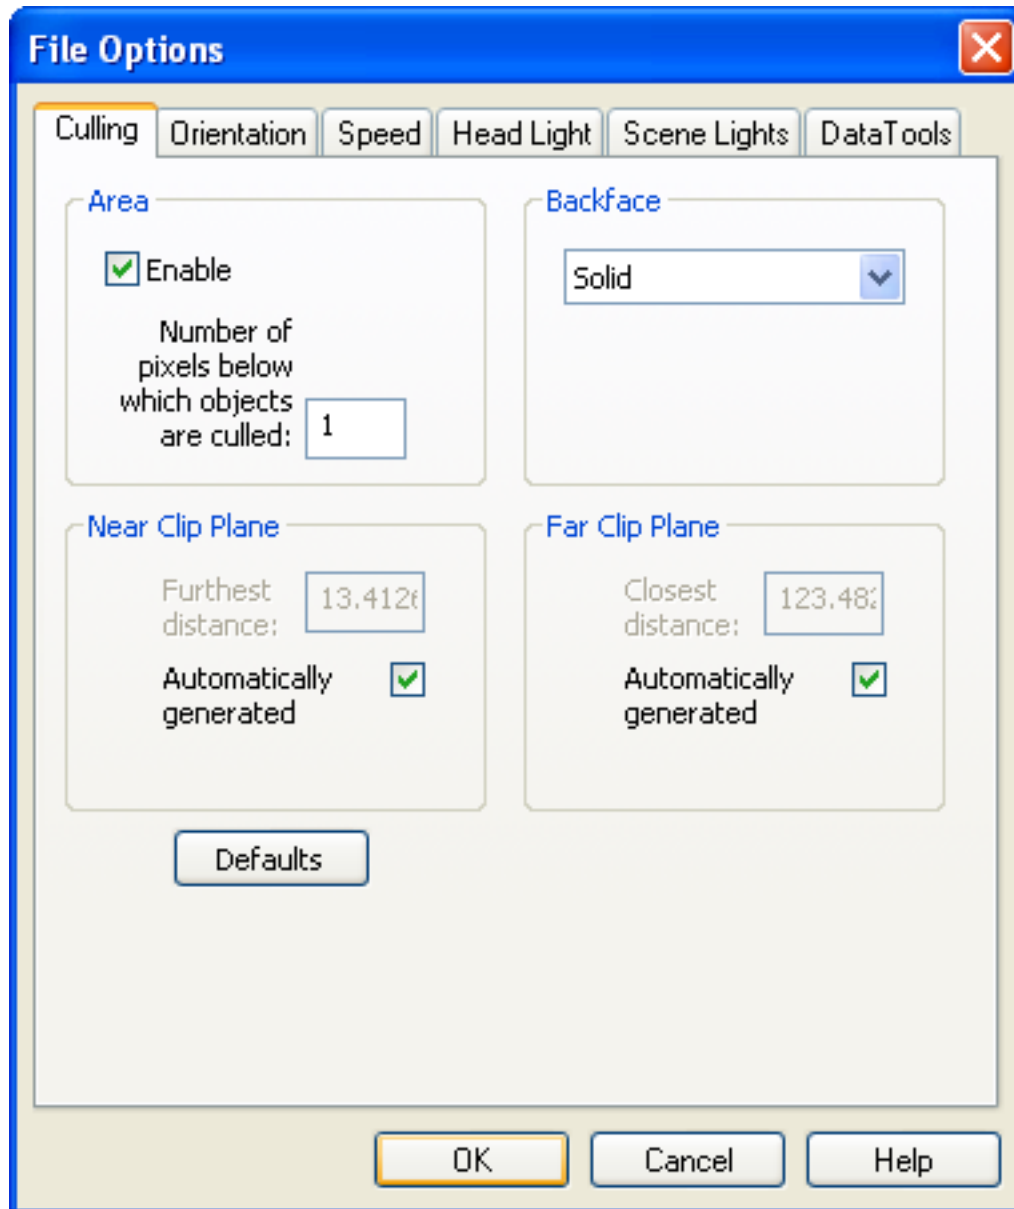

3. Select the **Enable** check box under **Area** to enable the definition of the screen area (in pixels) below which objects are culled and type in the number of pixels in the box.


4. In the **Near Clip Plane** area, check the **Automatically generated** check box to tell NavisWorks to constrain the near plane to give the best view of the model it possibly can. Alternatively, uncheck this box to manually constrain the near clip plane. NavisWorks will put the near clip plane no further than the value you type into the **Furthest distance** box.
5. Similarly, in the **Far Clip Plane** area, select the **Automatically generated** check box to tell NavisWorks to constrain the far plane to give the best view of the model it possibly can. Alternatively, clear this check box to manually constrain the far clip plane. NavisWorks will put the far clip plane no closer than the value you type into the **Closest distance** box.
6. From the **Backface** drop-down list, select **On** to enable backface culling of all objects. Select **Solid** to cull the backface of solid objects only. This is the **default** option and that which you are most likely to require. If you find that parts of items are missing in the NavisWorks scene, you might want to disable this option, by selecting **Off**.
7. Click **OK** to set these options or **Cancel** to exit the dialog box without setting them.

Orientation Options

NavisWorks has a concept of orientation and provides a heads up directional display. For this to work effectively, it is essential that the current model is orientated correctly.

To orientate the model:

1. On the **Tools** menu, click **File Options**.
2. In the **File Options** dialog box, click the **Orientation** tab.

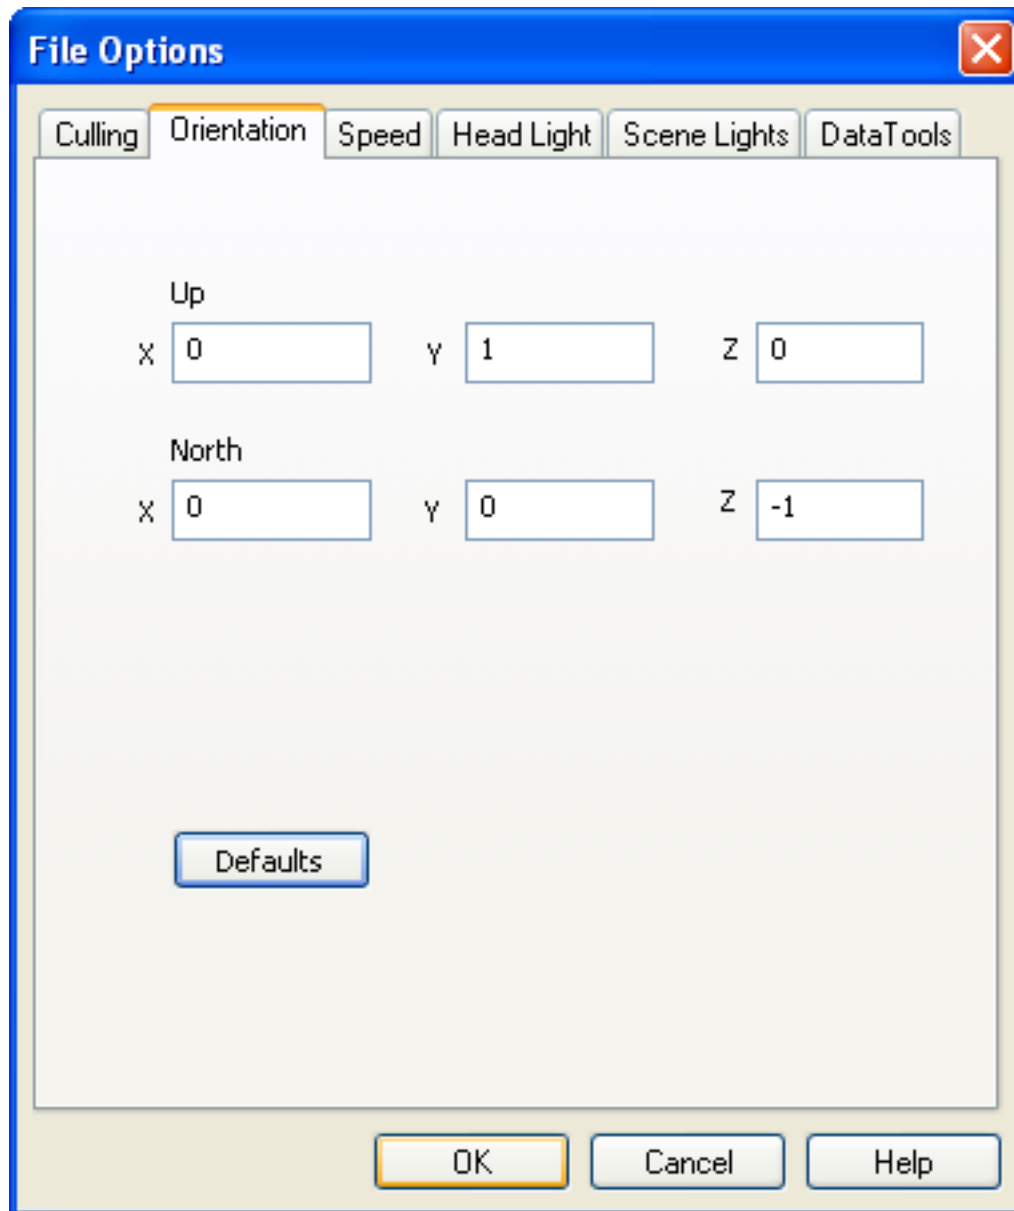

The defaults take the positive Z-axis as **Up** and the positive Y-axis as **North**.

3. If the models orientation is different to the defaults, enter XYZ values to correctly position the Up and North directions.
4. Click **OK** to accept your changes, or **Cancel** to return to NavisWorks without accepting them.


Speed Options

The basis of NavisWorks is its ability to walk through any size model in real time. NavisWorks guarantees a user-defined frame rate using a unique algorithm which automatically calculates which items to render first during navigation, based on the size of items and distance from the viewpoint. Items which

NavisWorks does not have time to render are therefore sacrificed or "dropped out" in the name of interactivity. These items are, of course, rendered when navigation ceases. The amount of drop-out depends on several factors including: hardware (in particular graphics card and driver performance), as well as the size of the NavisWorks navigation window and the size of the model. If you wish to reduce drop-out during navigation, you have the option to reduce frame rate and therefore trade it off against drop-out. You can set the frame rate anywhere between 1 and 60 frames per second.

Setting the frame rate:

1. On the **Tools** menu, click **File Options**.
2. In the **File Options** dialog box, click the **Speed** tab.

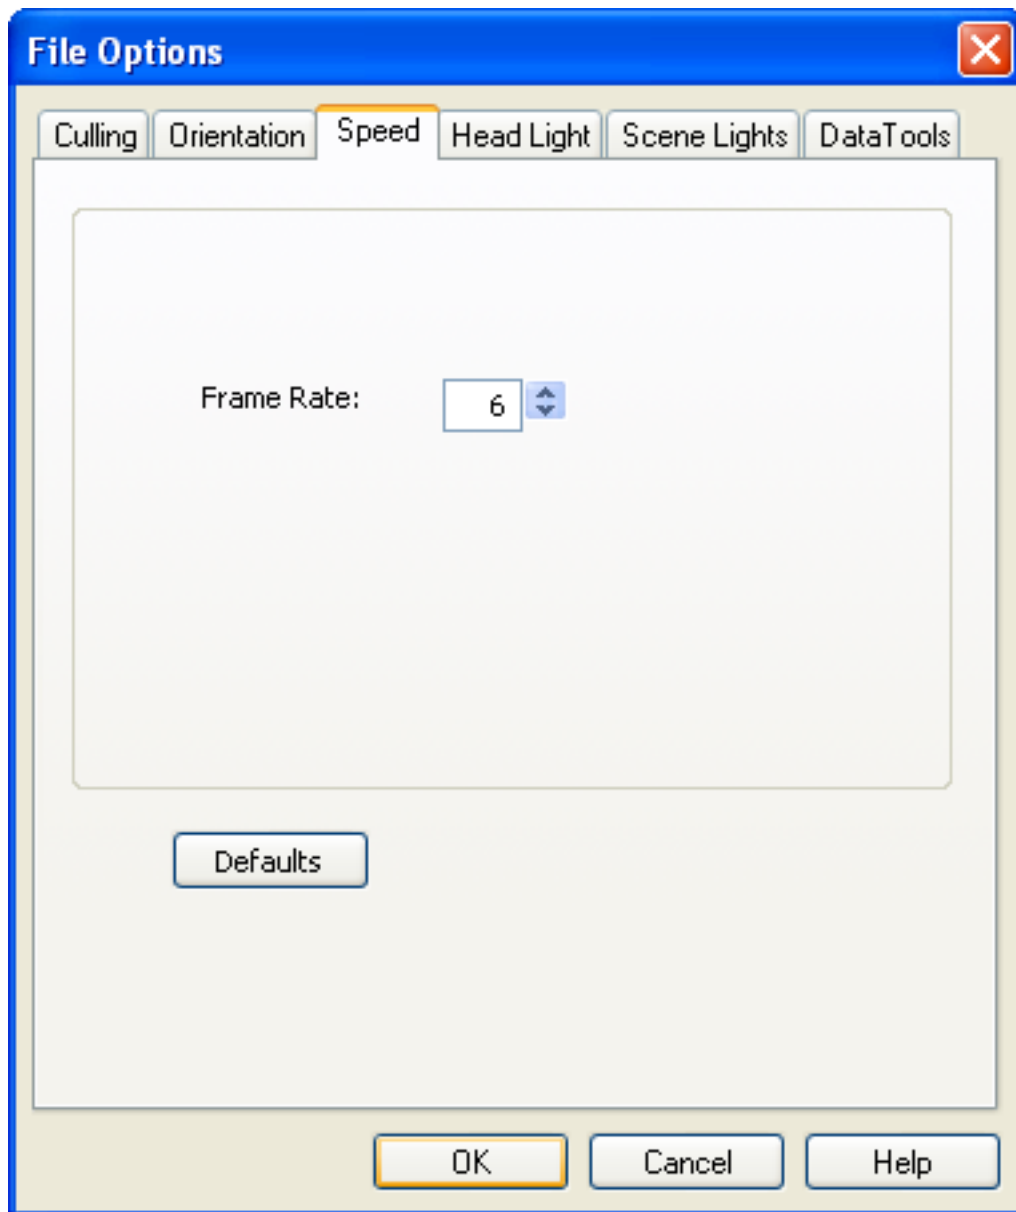

3. Select the number of frames per second to be applied to the rendered display of the model.
4. Click **OK** to set these options or **Cancel** to exit the dialog box without setting them.


Display Options

Use these options to control several aspects of the NavisWorks main navigation window display to suite your preferences and setup.

Setting display options:

1. On the **Tools** menu, click **Global Options**.
2. Expand the **Interface** node, and click the **Display** option.

The Display page opens.

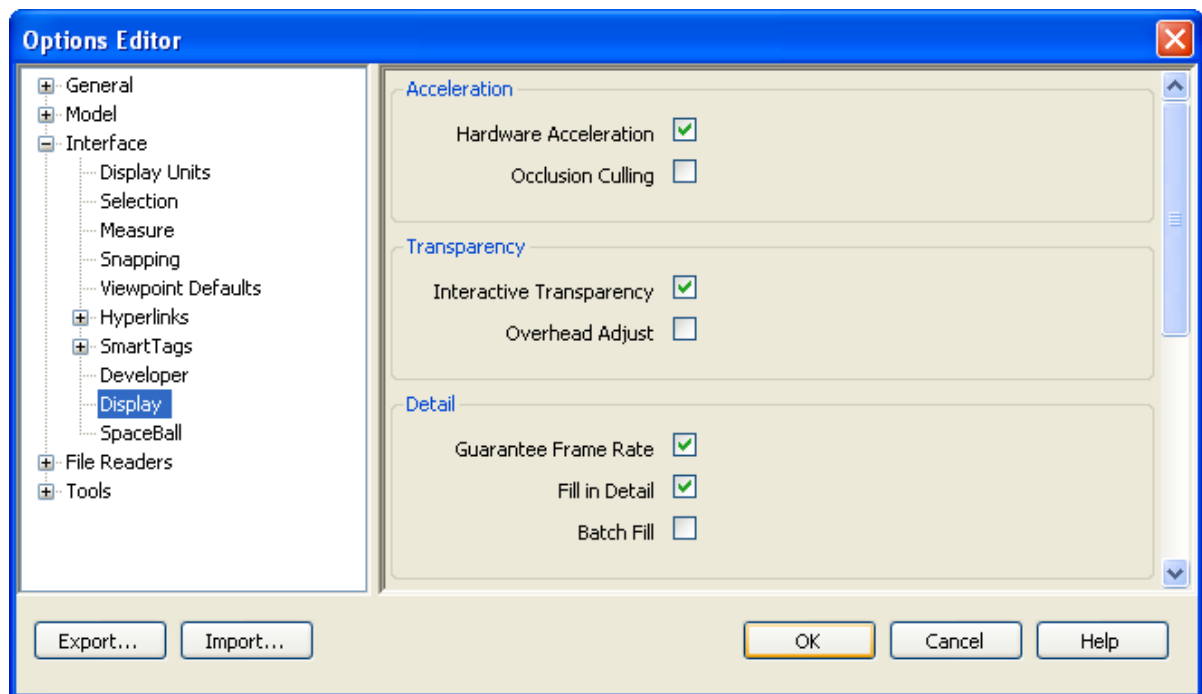

3. Select the **Hardware Acceleration** check box to allow NavisWorks to utilize any available OpenGL hardware acceleration on your video card. If your video card drivers do not function well with NavisWorks, then you may wish to disable this option. This option is grayed out if your video card does not support OpenGL hardware acceleration.
4. Select the **Occlusion Culling** check box to have NavisWorks only draw visible objects, i.e. ignores objects that are behind other objects. This option will improve the display performance when much of the model is not visible. For example, when you're walking down the corridor of a building. Occlusion culling can only be utilized on a machine with an OpenGL 1.5 compliant graphics card.
5. Select the **Interactive Transparency** check box to allow the rendering of transparent items during

interactive navigation. This may have an effect on performance - especially if your video card does not support hardware accelerated OpenGL - and so by default transparent items are only drawn when interaction has ceased.

6. Select the **Guarantee Frame Rate** check box to enable the NavisWorks engine to maintain the user defined frame rate set on the **Speed** tab of the **File Options** dialog box (see "[Speed Options](#)"). By default the target rate is maintained while moving. When movement stops the complete model is rendered. If the **Guarantee Frame Rate** check box is cleared, the complete model is always rendered during navigation, no matter how long it takes.
7. Select the **Fill In Detail** check box if you want NavisWorks to fill in any discarded detail when navigation has ceased.
8. Select the **Batch Fill** check box if you want NavisWorks to fill in detail in chunks rather than gradually. By default this is disabled as gradual rendering is generally better but some video cards may work better with batch fill enabled.
9. In the **Point Size** box, enter a number between 1 and 9 to set the size (in pixels) of points drawn in the main window. See "[Points](#)" for more information on points.
10. In the **Line Size** box, enter a number between 1 and 9 to set the width (in pixels) of lines drawn in the main window. See "[Lines](#)" for more information on lines.
11. In the **Snap Size** box, enter a number between 1 and 9 to set the size (in pixels) of snap points drawn in the main window. See "[Snap Points](#)" for more information on snap points.
12. Select the **Enable Parametric Primitives** check box to allow the dynamic rendering of parametric models during interactive navigation. When this check box is selected, the level of detail will be changed depending on the distance from the camera. When the check box is cleared, a default representation of the primitive is used, and the level of detail does not change. Modifying this option requires a restart of NavisWorks to take effect.
13. From the **Mode** drop-down list, select **XYZ** to turn on the XYZ indicator, or **Compass** to turn on the north-south indicator, or **Off** to display neither.
14. Select the **Show Position** check box to show the absolute X, Y, Z position of the camera (or the avatar's eye position if the avatar is visible). These position coordinates are shown at the bottom left of the main view, and can be shown with or without the other Heads Up elements.

Note:

See Orientation Options for more information on correctly orientating your model file.

15. Click **OK** to set these options or **Cancel** to exit the dialog box without setting them.

Performance Options


Use these options to customize the performance of NavisWorks.

Setting Performance options:

1. On the **Tools** menu, click **Global Options**.

- Expand the **Model** node, and click the **Performance** option.

The Performance page is displayed:

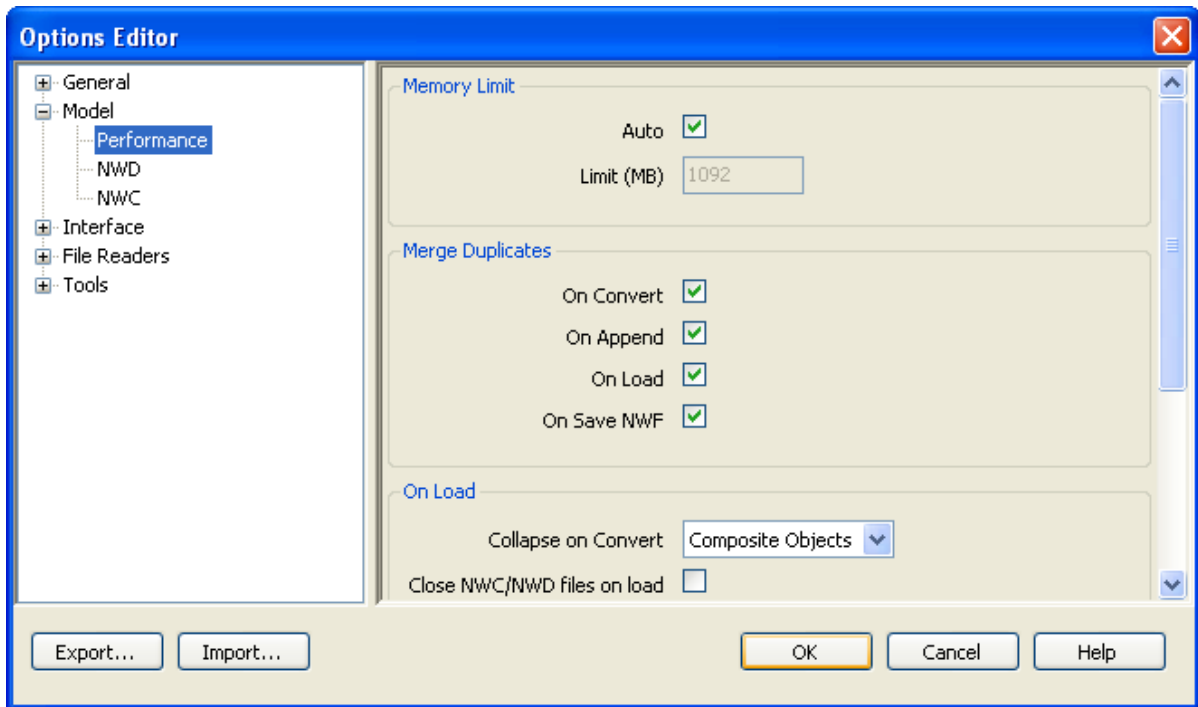

- Memory.** Select the **Auto** check box for NavisWorks to automatically calculate the maximum memory that may be used. This will take the lowest of your available physical memory or address space, less that required for your Windows operating system.

Alternatively, clear this option and manually enter the limit.

- Merge Duplicates.** These options improve performance by multiply instancing matching items. Rather than storing every item in memory, if any items are the same, NavisWorks can store one instance of them and 'copy' that instance into other positions. This is of particular benefit on larger models, where there are significant numbers of these duplicate geometries.

The options available determine when NavisWorks should perform this merging process:

- **On Convert.** Merge duplicates when converting a CAD file.
 - **On Append.** Merge duplicates when a new file is appended to the current scene.
 - **On Load.** Merge duplicates when loading a file into NavisWorks.
 - **On Save NWF.** Merge duplicates when saving the current scene out to .nwf.
- On Load.** The **Collapse on Convert** box can be set to alter layers shown in the Selection Set window on loading native CAD model files. Each type collapses the Selection Set tree up to the specified level. So **None** does not collapse the tree, **Composite Objects** collapses the tree up to the level of composite objects, etc. This enables performance to be prioritized over structure/properties and has the added benefit of improving streaming by cutting down the logical structure.

It should be noted that whilst NavisWorks will try to collapse items to the fewest number possible, it may be necessary to prevent collapsing in some cases to preserve model fidelity. For example if an item has properties or materials unique to itself, then collapsing would endanger this information, and therefore it will not be collapsed.

The **Close NWC/NWD files on load** check box, if selected, turns off any streaming on loaded NWC and NWD files, loading them into memory in their entirety, and then closing them. This allows other programs to write to these files whilst they are in use.

Select the **Create Parametric Primitives** check box to enable creation of parametric models (models described by formulae not vertices). Using this option allows you to get better looking visuals, faster rendering, smaller memory footprint (especially when loading DGN and RVM files that contain significant amounts of parametric data that will no longer need to be converted into vertices in NavisWorks. Modifying this option will take effect when you next load or refresh file.

6. **Temporary File Location.** Select the **Auto** check box for NavisWorks to automatically select your user Temp directory. Alternatively, if you prefer to select another location, clear this option and enter the path accordingly.


Presenter Options

Use these options to control the appearance of Presenter materials in the main navigation window during navigation. You may want to adjust these settings to get optimum performance from your graphics card when navigating around heavily textured scenes.

Setting Presenter options:

1. On the **Tools** menu, click **Global Options**.
2. Expand the **Tools** node, and click the **Presenter** option.

The **Presenter** page is displayed

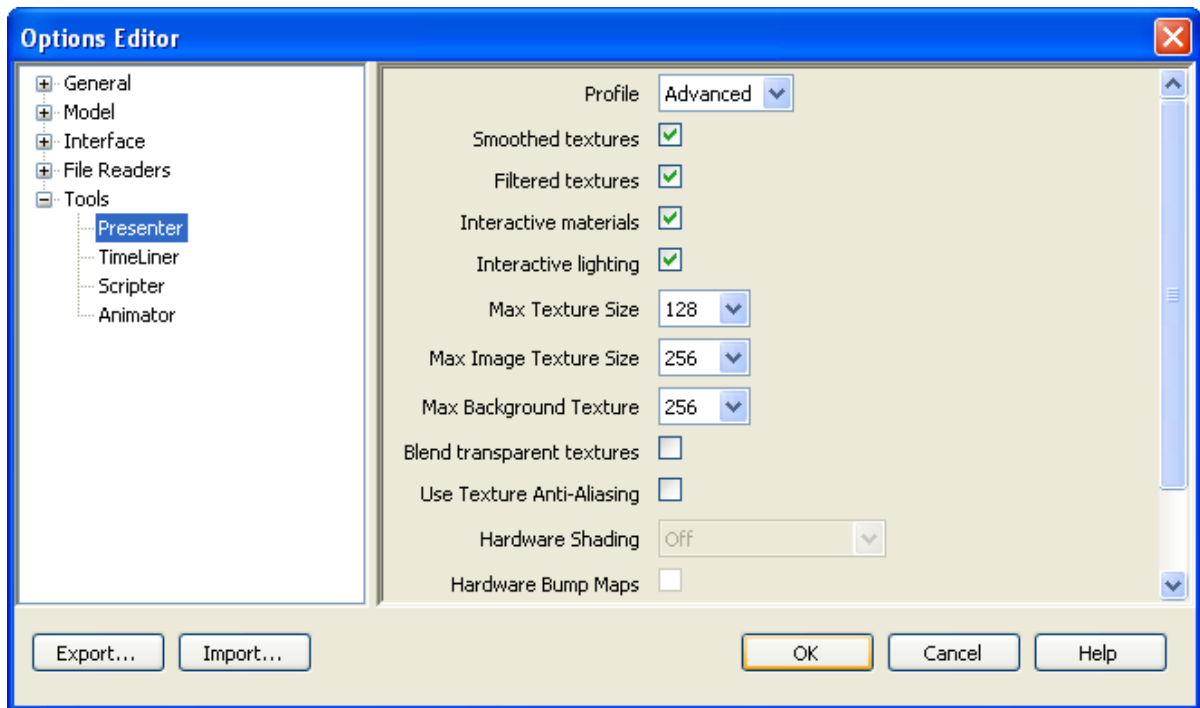

3. Use the **Profile** drop-down list to adjust the Presenter to your level of knowledge. Select **Advanced** to use the advanced Presenter features (e.g., extra materials, lights, render styles and so on). By default, the Basic profile is used.
4. Select the **Smoothed Textures** check box if you want textures to look smooth but take longer to render. Clear it if you want textures to appear pixelated but render faster.
5. Select the **Filtered Textures** check box if you want to turn on mipmapping. This will improve the appearance of textures in the distance.
6. Clear the **Interactive Materials** check box if you want to turn off texture display during navigation. The materials reappear automatically when navigation ceases, as long as the **Full Render** rendering style is on. Clearing this check box will ease the load on less capable graphics cards and give less drop out in heavily textured scenes.
7. Clear the **Interactive Lighting** check box if you want to turn off Presenter lights during navigation. The lights reappear automatically when navigation ceases, as long as the **Full Lights** lighting style is on. Clearing this option will ease the load on less capable graphics cards and give less drop out in heavily lit scenes.
8. Use the **Max Texture Size** drop-down list to set the maximum size that any texture can be (in pixels, e.g. 128 is 128 pixels x 128 pixels). The higher the value, the more MB in memory will be taken and thus performance could be affected on less capable graphics cards.
9. Use the **Max Image Texture Size** drop-down list to set the maximum size that any texture image can be (in pixels, e.g. 256 is 256 pixels x 256 pixels). The higher the value, the more MB in memory will be taken and thus performance could be affected on less capable graphics cards.
10. Similarly, use the **Max Background Texture** drop-down list to set the maximum size that the background texture can be (in pixels, e.g. 256 is 256 pixels x 256 pixels). The higher the value, the more MB in memory will be taken and thus performance could be affected on less capable graphics

cards.

11. Select the **Blend Transparent Textures** check box if you want better quality but slower rendering of transparent items in the main navigation window. With this option off, items with transparency of more than 50% are treated as completely transparent and not rendered at all.
12. Select the **Use Texture Anti-Aliasing** check box if you want procedural materials (such as some bricks and tiles - you can tell a procedural material in Presenter because it has a ball style preview icon) to be rendered using anti-aliasing. With this option on, it will take longer to open files containing procedural textures, but the quality will be better.
13. **Hardware Shading** can only be utilized on machines with OpenGL 1.5 compliant graphics cards.

From the **Hardware Shading** drop-down list, select:

- **Interactive Shadows.** Select this option to enable lights and shadows whilst navigating.
 - **Passive Shadows.** Select this option to disable lights and shadows whilst navigating, then turn them on when navigation ceases.
 - **Lighting.** Select this option to turn lighting on with no shadows.
 - **Off.** Select this option to have no hardware shading enabled.
14. Select **Hardware Bump Maps** check box to display bump map textures interactively, whilst navigating. This can only be utilized on a machine with an OpenGL 1.5 compliant graphics card. Hardware Shading also needs to be enabled.
 15. Select **Hardware Marble** check box to display hardware rendered marble materials in realtime. This can only be utilized on a machine with an OpenGL 1.5 compliant graphics card. Hardware Shading also needs to be enabled.
 16. Click **OK** to set the options or **Cancel** to exit the dialog box without setting them.

Chapter 17. Viewpoints

Viewpoints are an important feature of NavisWorks. They not only allow you to save and return to views of the model which are of importance, but they can also be used for design review audit trails and for setting up animations of the model.

Saving Viewpoints

Viewpoints contain more than just the camera information - each viewpoint can also contain redlines and comments. In fact, you can use viewpoints as a design review audit trail. They can be used as hyperlinks in the main navigation window to click on and zoom to the viewpoint, which will also bring up the redline and comments associated with it. The viewpoints, redlines and comments are all saved into an .nwf file from NavisWorks, so even if the native CAD files are changing, the saved viewpoints remain the same over the top, so you can see how the design has evolved. See [Chapter 20, Reviewing](#) for more information on hyperlinks, comments and redlines and [“NWF Files”](#) for more information on the .nwf file format.

Viewpoints also retain the section planes active at the time of viewpoint creation, which can be useful in animating sliding sections. See [“Sectioning a model”](#) for more information on sections. Viewpoints can optionally retain saved attributes too, so that on returning to a viewpoint, overridden colors, transparencies and hidden items are reinstated. This can be used to great effect to create animations where items appear and disappear from the scene in time. See [“Viewpoints Options”](#) for more information on options, and [Chapter 19, Animation](#) for more information on animations.

To save a viewpoint:

- On the **Viewpoint** menu, click **Saved Viewpoints > Save Viewpoint**.

or

- Right-click the **Viewpoints** control bar and choose **Save Viewpoint**.

New viewpoints are named "ViewX" where 'X' is the next available number added to the list. This new viewpoint will take all the attributes of the current viewpoint in the main navigation window.

Recalling Viewpoints

To return to a viewpoint

- Click **Viewpoint > Saved Viewpoints**, and choose the saved viewpoint from the list.

or


- In the **Viewpoints** control bar, simply click on the viewpoint from the list.

Note:

On recalling viewpoints the navigation mode that was active when the viewpoint was created will be re-selected. Any redlines and comments associated with the viewpoint will also be reinstated.

The Viewpoints Control Bar

Viewpoints allow you to keep a record of all the different views of a model so that you can jump to preset viewpoints without having to navigate each time to reach an item. Viewpoint animations are also saved with the viewpoints, as they are simply a list of viewpoints treated as keyframes. In fact, viewpoint animations can be made by simply dragging preset viewpoints onto an empty viewpoint animation. See “[Creating Viewpoint Animations](#)” for more information on viewpoint animations. You can also organize your viewpoints and viewpoint animations using folders.

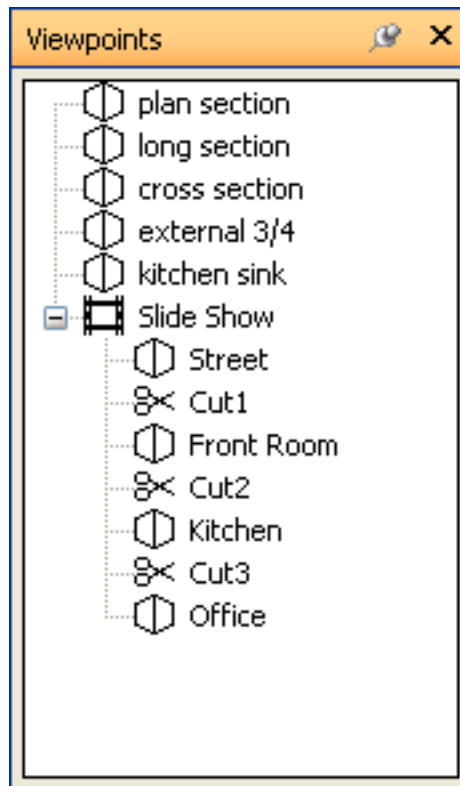

The **Viewpoints** control bar is shown above. To open it,

- On the **View** menu, click **Control Bars > Viewpoints**


or


- Click **Viewpoints**  on the **Workspace** toolbar.


Icons are used to represent different elements:




represents a folder which may contain all other elements (including other folders).

 represents a viewpoint saved in orthographic mode.

 represents a viewpoint saved in perspective mode.

 represents a viewpont animation clip.

 represents a cut inserted into a viewpoint animation clip.

You can select more than one viewpoint by either holding down the **Control** key and left-clicking, or by left-clicking on the first item, and then clicking on the last item while holding down the **Shift** key. You can drag viewpoints around the **Viewpoints** control bar, and reorganize into folders or animations.

There are no buttons on this control bar, and commands are actioned through context menus. Through these menus, you can save and update viewpoints, create and manage viewpoint animations and create folders to organize these viewpoints and viewpoint animations. You can also drag and drop viewpoints or viewpoint animations onto viewpoint animations or folders, and holding down the **Control** key during this operation will copy the element being dragged. This allows fairly complex hierarchies of viewpoint animations and folders to be easily composed.

Viewpoints, folders and viewpoint animations can all be renamed by slow clicking (clicking and pausing without moving the mouse) on the element, or clicking on it and hitting **F2**. Right-clicking on an element in the **Viewpoints** control bar gives you a different shortcut menu, depending on the element, or if you've right-clicked a blank space. The following section explains the different shortcut menus.

The Viewpoint Shortcut Menus

You get a different shortcut menu, depending on what element you right-click on in the **Viewpoints** control bar:

- Blank space
- A saved viewpoint
- A viewpoint animation
- A folder

All shorcut menus share the **Sort** option, which sorts the contents of the **Viewpoints** control bar alphabetically, including folders and their contents.

The Viewpoints Control Bar Shorcut Menu

Saving viewpoints, adding viewpoint animations and folders

1. Right-click a blank space in the **Viewpoints** control bar.
2. Choose **Add Folder** if you want to add another folder. A new folder will be created with its default name ("FolderX") editable.

Choose **Save Viewpoint** if you want to save the current viewpoint. A new viewpoint will be created with its default name ("ViewX") editable.

Choose **Add Empty Animation** if you want to create a new viewpoint animation, ready for dragging viewpoints onto. A new viewpoint animation will be created with its default name ("AnimationX") editable. See [“Creating Viewpoint Animations”](#) for more information on viewpoint animations.

Viewpoints

Managing Viewpoints

1. Right-click the viewpoint in the **Viewpoints** control bar.
2. Choose **Edit** to manually edit the viewpoint's attributes (see [“Editing Viewpoints”](#)).

Choose **Add Copy** to create a copy of the viewpoint in the saved viewpoints list. The copy will be named the same as the viewpoint clicked on, but with a "- copy" suffix. The main navigation window will jump to this viewpoint.

Choose **Add Comment** to add a comment regarding this viewpoint. See [“Commenting”](#) for more information on comments.

Choose **Update** to make the saved viewpoint the same as the current viewpoint.

Choose **Delete** to remove the viewpoint from the list of saved viewpoints.

Viewpoint Animations

Managing Viewpoint Animations

1. Right-click the viewpoint animation, or any of its keyframes, in the **Viewpoints** control bar.
2. Choose **Save Viewpoint** to add the current viewpoint as the last keyframe in the selected viewpoint animation.

Choose **Add Cut** to add a cut to the end of the viewpoint animation. Cuts are pauses in the viewpoint animation and are 1 second long by default.

Choose **Add Copy** to add a copy of the element. If you've right-clicked a viewpoint animation, the whole animation will be copied and named the same but with a "- copy" suffix. If you've right-clicked a cut or a keyframe, then the cut or keyframe will be copied.

Choose **Add Comment** to add a comment regarding this viewpoint. See [“Commenting”](#) for more information on comments.

Choose **Edit** to edit the element. Editing a keyframe will open the Edit Viewpoint dialog box. See [“Editing Viewpoint Animations”](#) for more information on editing viewpoint animations, keyframes and

cuts.

Choose **Update** to update all keyframes in the viewpoint animation with the current render style, lighting and navigation mode. Choosing **Update** on a single keyframe will only update that frame with the current modes.

Choose **Delete** to remove the viewpoint animation from the list of saved viewpoints, or in the case of a keyframe or cut, to remove the keyframe or cut from the viewpoint animation.

If you've right clicked on a keyframe, you can also choose **Update** to make the keyframe the same as the current viewpoint.

Folders

Managing Folders

1. Right-click the folder in the **Viewpoints** control bar.
2. Choose **Save Viewpoint** if you want to save the current viewpoint. A new viewpoint will be created in the folder with its default name ("ViewX") editable.

Choose **Add Animation** if you want to create a new viewpoint animation, ready for dragging viewpoints onto, in this folder. A new viewpoint animation will be created with its default name ("AnimationX") editable. See “ [Creating Viewpoint Animations](#) ” for more information on viewpoint animations.

Choose **Add Copy** to create a copy of the folder in the saved viewpoints list. The copy will be named the same as the folder clicked on, but with a " - copy" suffix.

Choose **Add Folder** if you want to add another folder underneath the selected folder. A new folder will be created with its default name ("FolderX") editable.

Choose **Add Comment** to add a comment regarding this folder. See “ [Commenting](#) ” for more information on comments.

Choose **Update** to update all viewpoints in the folder with the current render style, lighting and navigation mode. Choosing **Update** on a single viewpoint will only update that viewpoint with the current modes.

Choose **Delete** to remove the folder and all its contents from the list of saved viewpoints.

Editing Viewpoints

You can edit by hand any viewpoints attributes, including camera position, field of view, speed of motion and saved attributes. All entries are measured in scene units (see “ [Units](#) ”).

If accessed from **Viewpoint > Edit Current Viewpoint**, the **Edit Viewpoint** dialog box allows editing of the current viewpoint's attributes. Alternatively, if accessed via the saved viewpoints list by right-clicking on a viewpoint or a keyframe and choosing edit, this dialog allows editing of the currently selected viewpoint's or keyframe's attributes as outlined below:

Editing a viewpoint

1. To edit a saved viewpoint, right-click the viewpoint on the **Viewpoints** control bar and choose **Edit** from the shortcut menu.

Alternatively, to edit the current main navigation viewpoint, go to **Viewpoint > Edit Current Viewpoint**.

Or to edit a thumbnail's viewpoint, right-click on the thumbnail and choose **Edit Viewpoint** from the shortcut menu.

The **Edit Viewpoint** dialog box is displayed.

	X	Y	Z
Position (m):	5207.04	-3286.34	16492.71
Look At (m):	5207.04	-3286.34	-444.01
Vertical Field Of View (°):			45.00
Horizontal Field Of View (°):			52.92
Roll (°):			0.00

Linear Speed (m/sec):	553.49
Angular Speed (°/sec):	45.00

Saved Attributes	Collision Detection
<input checked="" type="checkbox"/> Hide/Required	Settings...
<input checked="" type="checkbox"/> Override Material	

OK Cancel Help

2. Set the camera position's x-, y- and z- coordinates using the **Position** boxes.
3. Set the focal point's x-, y- and z- coordinates of the camera using the **Look At** boxes.
4. Enter the **Vertical Field Of View** and **Horizontal Field Of View**. If the units are set to degrees, then these numbers should be between 0.1 and 90 and if in radians, between 0.002 and 3.124. See [Field Of View](#) for more details on what field of view means.
5. Enter the **Roll** of the camera about its viewing axis. This value is not editable where the world up vector stays upright (i.e. in walk, orbit and turntable modes).
6. Enter the speed of motion in a straight line for the viewpoint in the **Linear Speed** box (the minimum value is 0 and the maximum is based on the size of the scene's bounding box).
7. Enter the speed of turning for the viewpoint in the **Angular Speed** box.
8. If the viewpoint being edited is a saved viewpoint (i.e., selected from the **Viewpoint** control bar), selecting the check box of a saved attribute will store that attribute with the viewpoint. See "[Viewpoints Options](#)" for more details.
9. Click the **Settings** button to open the **Collision Detection** dialog box:

Collision Detection

Collision Detection
 Gravity
 Auto Crouch

Viewer

Radius (m) 0.25
Height (m) 1.70
Eye Offset (m) 0.15

Third Person

Enable
 Auto Zoom

Avatar Human 1
Angle (°) 15.00
Distance (m) 4.00

Defaults OK Cancel

- Select the **Collision Detection** check box to activate collision detection.
 - Select the **Gravity** check box to activate gravity.
 - Select the **Auto Crouch** check box to activate crouching.
 - In the **Viewer, Radius** text box, enter a value for the radius of the collision volume. See “ [Collision Detection](#) ”.
 - In the **Viewer, Height** text box, enter a value for the height of the collision volume. See “ [Collision Detection](#) ”.
 - In the **Viewer, Eye Offset** text box, enter a value for the distance below the top of the collision volume, where the camera will focus upon when **auto zoom** is activated.
 - Select the **Third Person, Enable** check box to view from a third person perspective.
 - Select the **Auto Zoom** check box to automatically zoom from third person view into first person view, whenever the line of vision is obscured by an item in the model scene.
 - From the **Third Person, Avatar** drop-down, select the avatar you wish to represent yourself as. See “ [Third Person View](#) ”.
 - In the **Third Person, Angle** text box, enter the angle at which you wish to look at the avatar. For example, zero degrees will be directly behind and 15 degrees will be looking down on the avatar at a 15 degree angle.
 - In the **Third Person, Distance** text box, enter the distance behind the avatar, from which you wish to view from.
 - Click **OK** to accept the settings, or **Cancel** to return to the **Edit Viewpoint** dialog without changing the settings.
10. Click **OK** to set the viewpoint or **Cancel** to exit the dialog without setting it.

Viewpoints Options

Two view attributes can be saved with a viewpoint:

- Hide/Required - whether items are hidden or required.
- Override Materials - the color and transparency of items.


You can set a viewpoint to save either attribute by editing the viewpoint. To update changes to overridden material or hide/required, use **Update** on the viewpoints shortcut menu. Be careful, though, as this also updates the point of view as well, which may disrupt any redline information stored with the viewpoint.

By default these attributes are not stored with new saved viewpoints. If you do wish them to be saved by default, then this can set in the **Options Editor**.

Setting the default viewpoints options:

1. On the **Tools** menu, click **Global Options**.
2. Expand the **Interface** node, and click the **Viewpoint Defaults** option.

The Viewpoints page opens.

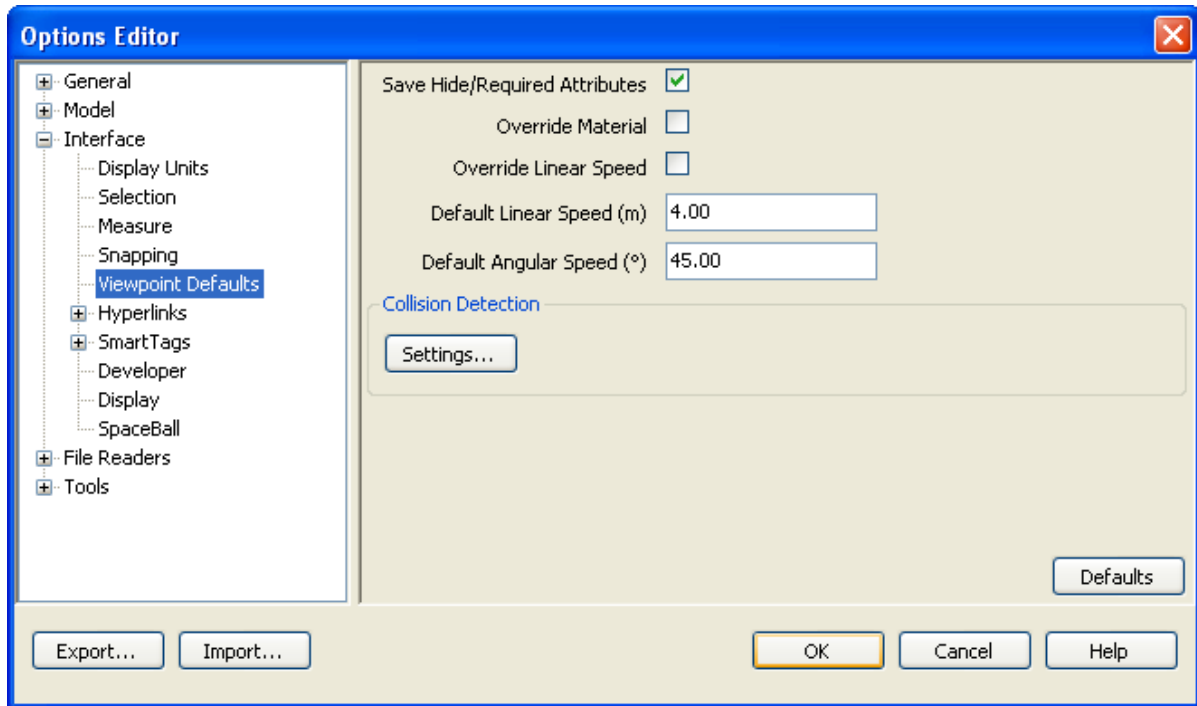

3. Select the **Save Hide/Required Attributes** check box if you want to save the hidden and required items with the viewpoints you save. This means that when returning to those viewpoints, the items that were hidden when the viewpoint was saved will be hidden again and those that were drawn will be drawn again. By default, this check box is clear, as it requires a relatively large amount of memory to save this state information with each viewpoint. See "[Hiding Items](#)" for more information on hidden items and "[Making items required](#)" for more information on making items required.
4. Select the **Override Material** check box if you want to save the material overrides with the viewpoints you save. This means that when returning to those viewpoints, the material overrides set when the viewpoint was saved will be reinstated. By default, this check box is clear as it requires a relatively large amount of memory to save this state information with each viewpoint. See "[Overriding Item Properties](#)" for more information on overriding materials.
5. Select the **Override Model Linear Speed** check box to be able to set a specific speed to navigate on loading a model. Without this selected, the linear navigation speed is directly related to the size of the model loaded.
6. The **Default Angular Speed** can be set to any number of degrees per second. This affects the speed at which the camera turns.
7. Click **OK** to set the profile or **Cancel** to exit the dialog without setting it.

Collision detection settings can also be saved with a viewpoint, including whether collision detection, gravity, crouching and third person view are enabled.


You can set a viewpoint to save any of these settings by editing the viewpoint, in the same way as the view attributes, above.

By default, all of the collision detection settings are disabled. If you wish to save your preferred collision detection setting defaults, which will be used each time you open a model or a new NavisWorks session, then these can be set in the **Options Editor**.

Setting the default collision detection options:

1. On the **Tools** menu, click **Global Options**.
2. Expand the **Interface** node, and click the **Viewpoint Defaults** option.
3. Click the **Settings** button on the Viewpoints page.

The **Default Collision Detection** dialog box opens.

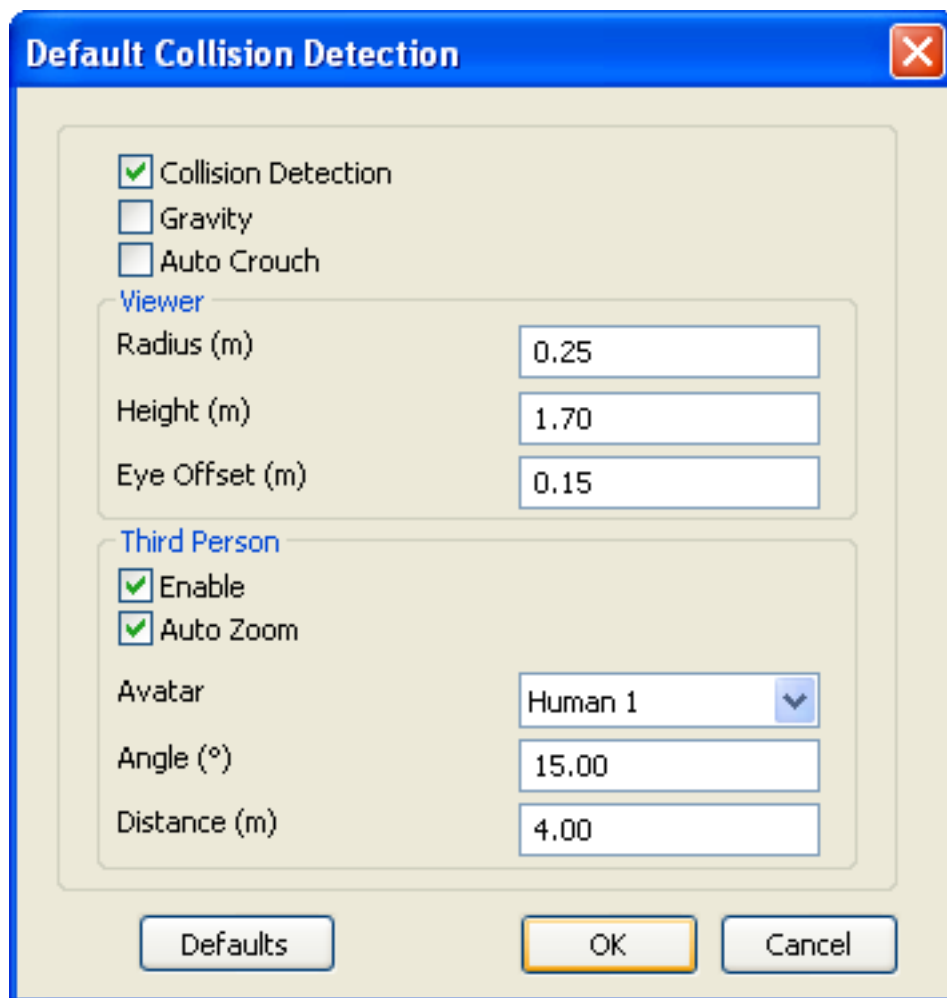

4. Select the default options you wish NavisWorks to initialize with. See **Editing Viewpoints** for a description of each of the available options.

Note:

These **default** collision detection settings differ from the **current viewpoint** settings, in that these do not alter the current scene. These settings will only be used when starting NavisWorks, or opening a new model. To edit the collision detection settings in the current scene, see “[Editing Viewpoints](#)”.

Chapter 18. Sectioning

Sectioning allows you to make up to 6 sectional cuts in any plane while still being able to navigate around the scene, enabling you to see inside models without hiding any item. Section planes are stored inside viewpoints and so can also be used within viewpoint animations and object animations to show a dynamically sectioned model. See “[The Viewpoints Control Bar](#)” for more information on viewpoints, and [Chapter 19, Animation](#) for more information on animations.

Slices can also be created using two opposing section planes and linking them. In this way you can move a slice through the scene in real time and can again link this to viewpoint animations, object animations, and viewpoints.

Sectioning a model

There are up to 6 section planes enabled at one time, but there is only one that is active. The section plane that is active is numbered in the drop-down box. However, you can link section planes together to form slices.




The **Sectioning** toolbar is shown above. To open it,


- Right-click anywhere in the toolbar area of the screen, and click **Sectioning** on the shortcut menu.

or

- Click **Sectioning**  on the **Workspace** toolbar.





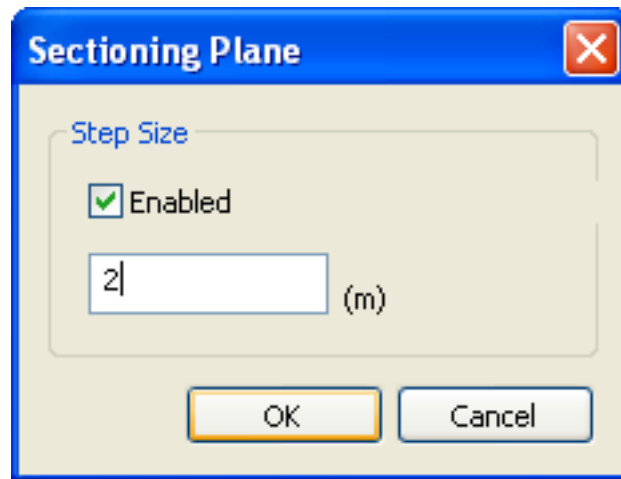



Manipulating the active section plane:

1. Choose the plane that you wish to manipulate using the numbered drop-down box. In this drop-down box, there will always be one more than the number of enabled section planes in the scene, up to a maximum of 6.
2. Set the **Step Size** by clicking **Step Size** . This opens the **Sectioning Plane** dialog box.



Select the **Step Size** check box, and enter the step value in the box below. This value is then used when moving the section planes. If the **Step Size** check box is left clear, the section planes will move at percentage intervals.

Click **OK** to close the dialog box, and save the changes.

- To switch the plane on, click **Enable/Disable**  on the **Sectioning** toolbar. Clicking it again, switches the plane off.
- Once the plane is switched on, choose one of the 7 planes that this section plane will cut:
 - Align View**  - aligns section plane with camera view plane.
 - Align Bottom**  - aligns section plane with bottom of model.
 - Align Top**  - aligns section plane with top of model.
 - Align Front**  - aligns section plane with front of model.
 - Align Back**  - aligns section plane with back of model.
 - Align Left**  - aligns section plane with left of model.
 - Align Right**  - aligns section plane with right of model.

Note:


Each plane for each section remembers its position, so the slider will move when you choose

another plane.


5. Move the slider to interactively position the section plane to the required location. The number in the edit box shows the position of the section plane from the origin and will be updated when moving the section plane. You can also type in the location of the origin in this edit box for exact positioning of the plane.

Note:

You can also use the cursor keys and mouse wheel for simple sliding of the section plane through the model.

6. Clicking the **Set Range**  button helps you to set a finer resolution for sectioning large models.

What this button does is limit the range of the section planes to the bounding box limits of the currently selected items. For more information on selecting items, see [Chapter 13, *Selecting Items*](#). Clicking this button with nothing selected resets the section range to the limits of the whole model, which is the default.

7. If you have more than one section plane enabled, you can delete the currently active plane using the delete  button. The next enabled plane will then become the active plane.


Linking Sections


You can add up to 6 section planes to the scene at once using the sectioning procedure. Once more than one plane is enabled, you can then link them together. Linking opposing planes, such as top and bottom, enables you to quickly 'slice' your model in real time. The slices can be used in viewpoints, viewpoint animations, and object animations. The procedure below is an example of creating a horizontal slice using the top and bottom section planes.


To slice the model:

1. Set up the bottom section plane:

Select **1** in the drop-down list on the **Sectioning** toolbar.

Click  to enable the plane.


Click  to align the section plane with bottom of model.

Click  to set up the step size.

Use the slider bar to adjust the level of sectioning.


2. Set up the top section plane:

Select **2** in the drop-down list on the the **Sectioning** toolbar.

Repeat the steps for creating the bottom section plane, but this time, click  to align the section plane with top of model.

Note:

The model may disappear completely at this stage. If this happens, move the slider bar until it becomes apparent where the plane is.

3. If necessary, keep switching between planes 1 and 2 using the drop-down box, and configure the planes' position to how far you want them separated in the slice.
4. When happy with their separation, select section plane 2 and click the **Link**  button. This links planes 2 and 1 together to form a slice.
5. Use the slider bar to move the horizontal slice through the model.
6. If you want, you can save this slice configuration into a viewpoint. See “ [Saving Viewpoints](#) ” for more information on how to do this.

Thinking about linked sections and slices can be confusing. Just remember that when linking sections together, the section plane direction currently in operation effectively moves the whole "box" around the scene, keeping the other section planes relative to it.

Chapter 19. Animation

In NavisWorks there are two types of animation:

- Object animation
- Viewpoint animation

Viewpoint Animation

Viewpoint animation is a quick and efficient way of recording both your movement through the model and views of the model. There are two ways to produce a viewpoint animation in NavisWorks:

- By recording interactive navigation
- By creating animated transitions between saved views.

You can also create slide show animations, which are, essentially, viewpoint transitions with a number of cuts (pauses) added between viewpoints.

Object Animation

In addition to viewpoint animation, you can also animate and interact with 3D geometry in your model. Although the ability to record animations and produce scripts necessary to interact with animated objects is limited to users with access to the Animator and Scripter functionality, any user can actually play them back once they have been recorded.

See the Object Animation section for step-by-step instructions on how to record animations and scripts.

The Animation Toolbar

The **Animation** toolbar in NavisWorks enables you to record, play and edit viewpoint animations. It can also be used to play back object animations and enable/disable scripting.


Note:


Creating object animations and scripts is limited to users with access to the Animator and Scripter functionality.


The **Animation** toolbar is shown below.





To open it, right-click anywhere in the toolbar area of the screen, and click **Animation** on the shortcut menu.


Rewind  - rewinds the animation back to the beginning.


 - steps back a single keyframe.


Reverse Play  - plays the animation backwards.


Record  - records the viewpoint animation.

Pause  - pauses the animation at the frame you press it at. You can then look around and wonder off in the model, or step forwards and backwards through the animation. To continue playing from where you paused, just press **Play** again.

Stop  - stops the animation playing and rewinds it back to the beginning.

Play  - plays the currently selected animation.


Step Forward  - steps one keyframe forwards.

Fast Forward  - fast forwards the animation to the end.


Animation Position slider  - controls the current playback position.

Animation Position - indicates the current playback position in seconds.

Available Animations  - allows you to choose the animation to play.

Toggle Scripts  - enables/disables animation scripts in your file.

The Viewpoints Control Bar

The viewpoint animations can be instantly recorded by pressing  on the **Animation** toolbar, and then navigating through the model. Alternatively, you can build viewpoint animations frame by frame (viewpoint by viewpoint) on the **Viewpoints** control bar, and then use it to save, edit, rearrange and manage your viewpoint animations in folders, including inserting cuts and dragging and dropping viewpoint animations onto other animations to build up a more complex viewpoint animation from simpler ones. At any time during an animation playback, you can stop the viewpoint animation and have a real time look around before restarting it. Once you are happy with the viewpoint animation, you can export it as an .avi file.

It is worth remembering that you can hide items in viewpoints, override colors and transparencies and set




multiple section planes and these will all be respected by a viewpoint animation. This way you can easily create powerful viewpoint animations.

Creating Viewpoint Animations

There are two ways to create viewpoint animations in NavisWorks. You can either simply record your real-time walk through, or you can assemble specific viewpoints for NavisWorks to interpolate into a viewpoint animation later.

Viewpoint animation is controlled through the **Tools > Animation** menu, the Viewpoints control bar, and the Animation toolbar.

Creating a viewpoint animation in real time:

1. Click the **Record** button  on the **Animation** toolbar.
2. Navigate around in the main navigation window while NavisWorks records your movement. You can even move the section planes through the model during your navigation, and this will be recorded into the viewpoint animation too.
3. At any point during the navigation, you can click the **Pause** button . This will pause the recording while you maneuver into a new position. Click the **Pause** button again to continue recording the viewpoint animation. The resulting viewpoint animation will contain a cut for the duration of the pause.
4. When finished, click the **Stop** button .
5. A new viewpoint animation called "AnimationX", where 'X' is the latest available number, will be added to the **Viewpoints** control bar. The name will be editable at this point if you want to name it yourself. This viewpoint animation will also become the current active animation in the **Available Animations** drop-down box on the **Animation** toolbar.

While the above method is useful for creating quick viewpoint animations on the fly, sometimes you need more control over the viewpoint camera. To do this in NavisWorks, you need to set up several viewpoints and add them to an empty viewpoint animation. When playing back the animation, NavisWorks will then interpolate between these viewpoints.

Creating an animation frame by frame:

1. Right-click the **Viewpoints** control bar and select **Add Empty Animation** from the shortcut menu.
2. A new viewpoint animation called "AnimationX", where 'X' is the latest available number, will be added to the **Viewpoints** control bar. The name will be editable at this point if you want to name it yourself. There will be no plus sign next to the viewpoint animation, showing that the viewpoint animation is indeed empty.
3. Create the viewpoints where you want the camera to move through during the animation and save

these into the **Viewpoints** control bar. These will become the frames for the animation. The more frames you have, the smoother and more predictable the viewpoint animation will be. See “[Saving Viewpoints](#)” for more information on creating viewpoints.

4. When you have all the viewpoints, simply drag them onto the empty viewpoint animation you just created. You can drag them on one-by-one, or select multiple viewpoints using the **Control** and **Shift** keys and drag several on at once. If you drop them onto the viewpoint animation icon itself, then the viewpoints will become frames at the end of the animation, but you can drop the viewpoints anywhere on the expanded animation to put them where you wish.
5. At this point, you can use the **Animation Position** slider on the **Animation** toolbar to move backward and forward through the viewpoint animation to see how it looks.
6. You can edit any of the viewpoints inside the viewpoint animation (see “[Editing Viewpoints](#)” for details on this), or you can add more viewpoints, delete them, move them around, add cuts and edit the animation itself (see “[Editing Viewpoint Animations](#)”) until you are happy with the viewpoint animation.
7. Once you have several viewpoint animations, you can drag and drop them onto a master viewpoint animation to compose more complex combinations of animations, just like dragging and dropping viewpoints onto an animation as a frame.


Editing Viewpoint Animations

Once a viewpoint animation is recorded, you can edit it to set the duration, the type of smoothing and whether it loops or not.

Editing a viewpoint animation:

1. Right-click the viewpoint animation you want to modify on the **Viewpoints** control bar, and click **Edit** on the shortcut menu.

The **Edit Animation** dialog is displayed.

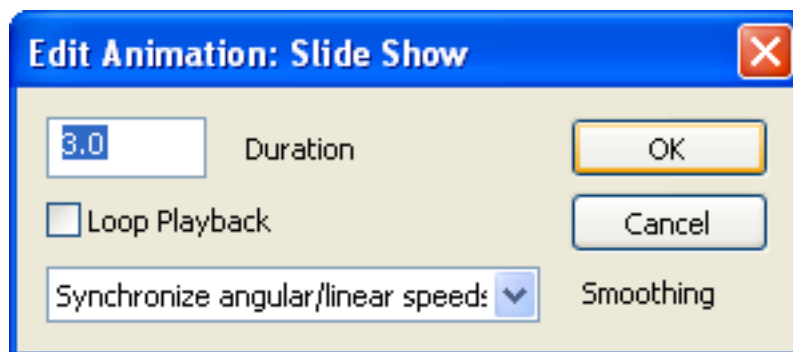

2. Type in the duration in seconds in the **Duration** box.
3. If you want the viewpoint animation to play back continuously, select the **Loop Playback** check box.
4. From the **Smoothing** drop-down list, select the type of smoothing you want the viewpoint animation

to use. **None** means that the camera will move from one frame to the next without any attempt at smoothing out the corners. The speed of movement between frames of an animation is dictated by the angular and linear speeds of the individual frames and so choosing **Synchronise angular/linear speeds** will smooth the differences between the speeds of each frame in the animation, resulting in a less jerky animation.

5. Click **OK** to set these options, or **Cancel** to return to NavisWorks leaving the viewpoint animation as it was.

There is also nothing to stop you copying viewpoint animations (hold down the **Control** key when dragging an animation on the **Viewpoints** control bar), dragging frames off the animation into a blank space on the **Viewpoints** control bar to remove them from the viewpoint animation, editing individual frames attributes, inserting cuts or dragging other viewpoints or viewpoint animations onto the existing one, to continue developing your animations.


Animation Cuts

Cuts in a viewpoint animation are simply points where the camera pauses for a while. They are inserted automatically when you click on **Pause** during the interactive recording of a viewpoint animation, or you can insert them manually into an existing viewpoint animation.

Inserting pauses into a viewpoint animation:

1. Right-click the frame below where you want to insert the cut, and click **Add Cut** on the shortcut menu.
2. Type in the name of the cut, or hit **Enter** to accept the default name, which will be "CutX", where 'X' is the next available number.
3. This default duration of a cut is 1 second. To alter the duration of this pause, right-click the cut, and click **Edit** on the shortcut menu.

The **Edit Animation Cut** dialog is displayed

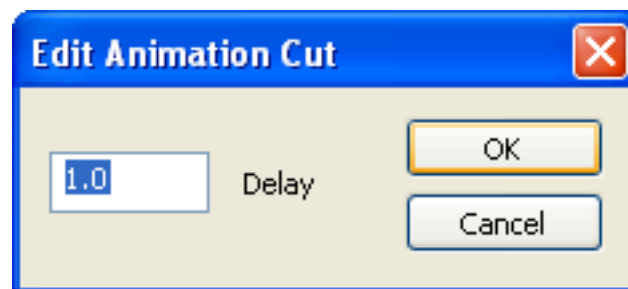

4. Type in the duration of the pause in seconds.
5. Click **OK** to set the duration or **Cancel** to return to NavisWorks without setting it.


Playing Back Animations

You can play back both pre-recorded object animation and viewpoint animation in the main navigation window. The animation plays in real time; this means that the NavisWorks engine is still attempting to maintain the guaranteed frame rate so some drop-out may still occur, just as in real-time navigation. However, you can export the animations to an .avi file for playback with Windows Media Player™ and this will render each frame without any drop-out. Of course, you don't have the option of pausing the playback half way through to look around the mode using this method! See “ [Exporting an Animation](#) ” for details on how to export an animation to .avi.

Playing back an animation:

1. Select the animation you wish to play back from either the **Viewpoints** control bar, or from the **Available Animations** drop-down list on the **Animation** toolbar.
2. You can use the **Animation Position** slider to quickly move forwards and backwards through the animation. Full left is at the beginning and full right is at the end. The text box next to the slider shows the point in time (in seconds) through the animation that the camera is. You can type a number into this box to set the camera at a certain point in the animation and play back from that point.
3. For viewpoint animations, you may notice that the frame in the animation in the **Viewpoints** control bar is highlighted when the animation is playing. You can click on any frame to set the camera to that point in time in the viewpoint animation and continue playing back from there.
4. Use the VCR buttons on the Animation toolbar to step and play forwards and backwards through the animation.

Enabling Scripting:

- To enable animation scripts in your file, click the **Toggle Scripts**  button on the **Animation** toolbar.

You can now interact with your model. For example, if there is a script to open a door on pressing a specific key on the keyboard, pressing this key will open the door.

Chapter 20. Reviewing

NavisWorks offers several design review tools to help you review a model and communicate those reviews to others. Any reviewing you save in the model can also be saved into an .nwf file so that you can reload the reviews into a later session when the model has changed, or to pass onto colleagues to communicate design intent or problems.


The reviewing tools available in NavisWorks are:


- Commenting
- Redlining (including tagging)
- Measuring
- Hyperlinks
- Smart Tags
- Collaboration
- SwitchBack

Commenting


Multiple comments can be attached to any item in the **Viewpoints** control bar (see “[The Viewpoints Control Bar](#)”), or to Clash Detective results (see [Chapter 52, Clash Results](#)), or to TimeLiner tasks (see [Chapter 42, TimeLiner Tasks](#)), or to any item in the **Selection Sets** control bar (see “[Selection and Search Sets](#)”).


The **Comments** control bar allows you to view all comments attached to one of these sources.


To open it, click  on the **Workspace** toolbar, or on the **View** menu, click **Control Bars > Comments**.

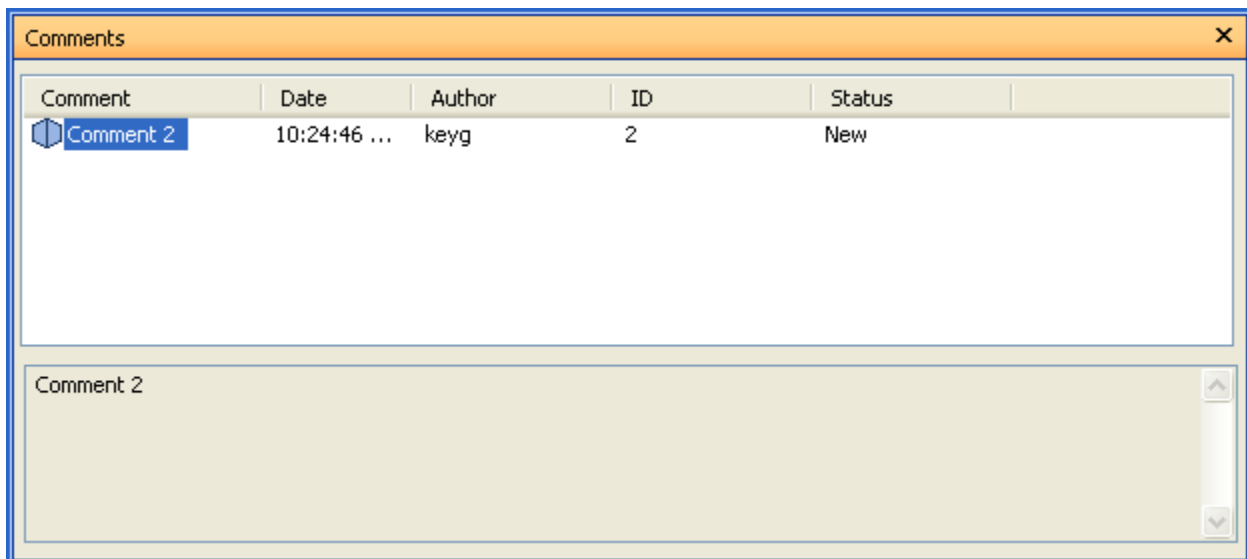


When the source of the comments is recalled, such as a viewpoint, all comments attached to it appear in the **Comments** control bar, showing the time and date, author, ID and status of each comment. The icon on the far left represents the source type:


 - selection set.

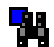
 - search set.

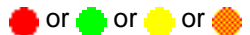 - Clash Detective result.

 - viewpoint.

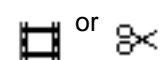 - viewpoint animation.

 - tag.

 - TimeLiner.

With many comments attached to many sources in a model, you may want to find a particular comment without having to manually search each possible source. See "[Finding Comments](#)" for details on how to achieve this.

Note:

The first line of a comment is what is displayed in the top half of the **Comments** control bar and can be treated like its "subject". To get multiple lines in a comment, hold down **Control** and press **Enter**. This will give you a carriage return in the text box, rather than simulating a press of the **OK** button.


Any new comments will automatically be given a unique ID, along with the date and author of the comment and a status can be set. All of these are searchable criteria.

Once a comment is added, it can be edited or deleted.


Adding Comments

You can add as many comments as you wish to a source, either from the **Comments** control bar, or from the source itself.

Adding a comment from the Comments control bar:

1. Go to the source of the comment, be it a viewpoint, selection set or Clash Detective result.
2. Open the **Comments** control bar by clicking  on the **Workspace** toolbar.
3. Right-click the **Comments** control bar, and click **Add Comment** on the shortcut menu.

An empty **Add Comment** resizable dialog is displayed.

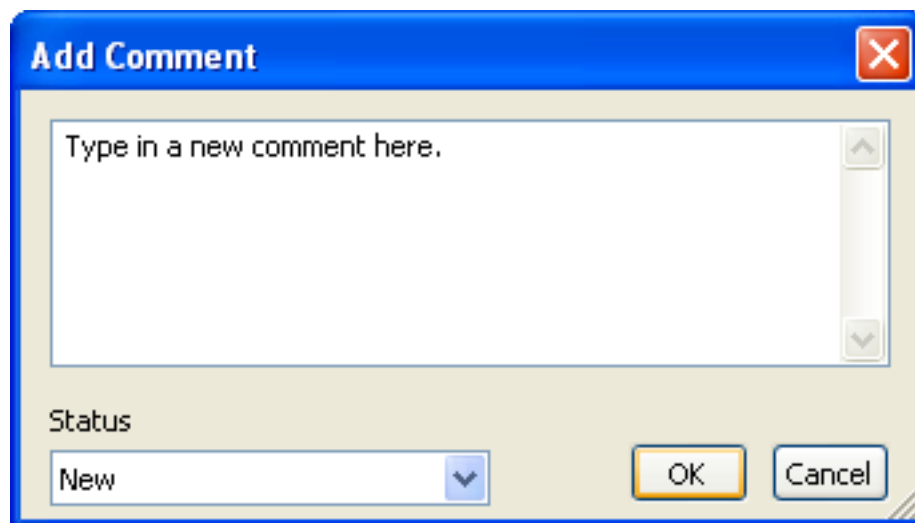


4. Type in the comment.
5. To assign a **status**, select either **New**, **Active**, **Approved** or **Resolved** from the drop-down list.
6. Click **OK** to save the comment or **Cancel** to return to NavisWorks without saving it.

Adding a comment from the source (viewpoint, selection set or Clash Detective result):

1. Go to the source of the comment, be it a viewpoint, selection set or Clash Detective result.
2. Right-click the source, and click **Add Comment** on the shortcut menu.
Alternatively, on the **Review** menu, click **Comments > Add Comment**.

An empty **Add Comment** resizable dialog is displayed.

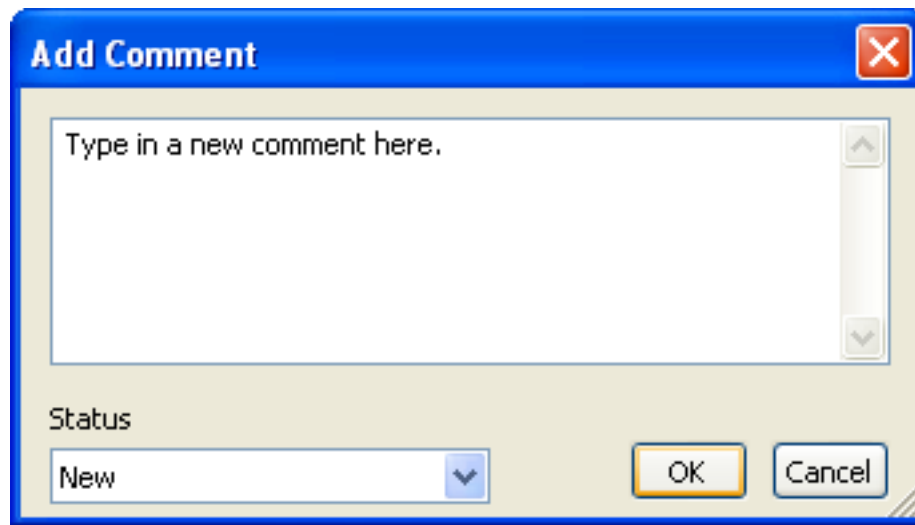

3. Type in the comment.
4. To assign a **status**, select either **New**, **Active**, **Approved** or **Resolved** from the drop-down list.
5. Click **OK** to save the comment or **Cancel** to return to NavisWorks without saving it.

Editing Comments

Once a comment is saved, you can edit it either from the **Comments** control bar, or from the source itself. You can also renumber both tag and comment IDs.


When adding a new tag or comment to a NavisWorks scene, it will automatically be assigned a unique ID. If however, you are Appending or Merging multiple NavisWorks files together, then there is the possibility for the same ID to be used more than once. In this situation, you may choose to renumber all of the IDs, making them unique to the scene, once again.

Editing a comment:

1. Go to the source of the comment, be it a viewpoint, selection set or Clash Detective result.
2. Open the **Comments** control bar by clicking  on the **Workspace** toolbar.
3. Right-click the comment, and click **Edit Comment** on the shortcut menu.

Alternatively, on the **Review** menu, click **Comments > Edit Comment**.

The **Edit Comment** resizable dialog is displayed.

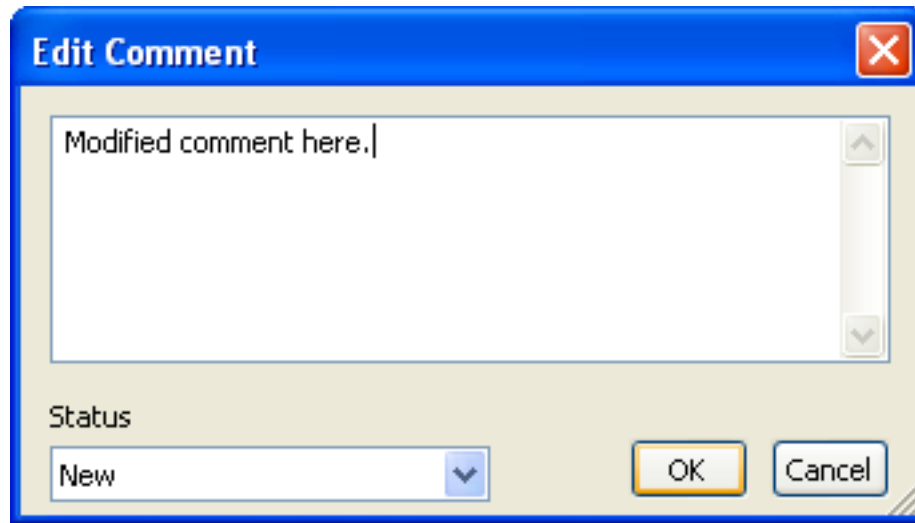

4. Edit the comment and/or status accordingly.
5. Click **OK** to save the comment or **Cancel** to return to NavisWorks without saving it.

To renumber tag and comment IDs:

1. To renumber tag IDs, on the **Review** menu, click **Renumber Tag IDs**.

Note:

There may be a situation where two sessions are merged that contain identically numbered Tags and corresponding Tag Views. In this situation, **Renumber Tag IDs** will also attempt, wherever possible, to rename the associated Tag Views in line with the new tag numbers.

2. To renumber comment IDs, on the **Review** menu, click **Renumber Comment IDs**.

Deleting Comments

To delete a comment:

1. Go to the source of the comment, be it a viewpoint, selection set or Clash Detective result.
2. Open the **Comments** control bar by clicking  on the **Workspace** toolbar.
3. Right-click the comment, and click **Delete Comment** on the shortcut menu.

Alternatively, on the **Review** menu, click **Comments > Delete Comment**.

Redlining

Redlining allows you to add annotation directly over a viewpoint. It is mutually exclusive to the navigation modes so that when you are redlining, you cannot navigate and vice versa.

You can also associate redlining with saved viewpoints in the Clash Detective results.

The redline tools, which can all be accessed from the **Redline Tools** control bar or from the **Review > Redline** menu, are:



Text - adds text over a viewpoint.



Tag - adds a tag over a viewpoint.



Freehand - enables you to sketch over a viewpoint.



Line - draws a single line over a viewpoint.



Line String - draws a string of lines over a viewpoint.



Ellipse - draws an ellipse over a viewpoint.




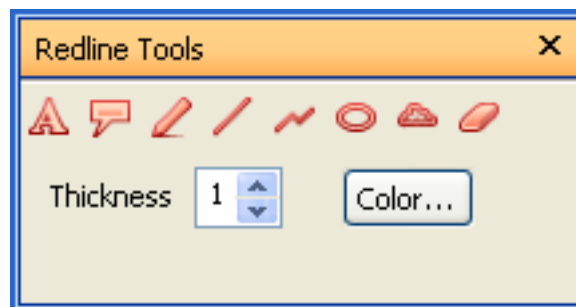
Cloud - draws a cloud over a viewpoint



Erase - erases the selected redline.

Adding Redlines

The **Redline Tools** control bar is a dockable bar like all others in NavisWorks. It can be accessed by clicking  on the **Workspace** toolbar or by clicking **Tools > Redline**.



Note:

Redlines can only be added to a saved viewpoint or to a clash result which has a saved viewpoint. If a viewpoint is not selected, a warning is given if a redline tool is selected.

Redline Tags are the exception to this rule. If a viewpoint is not already saved, then adding a tag will automatically save a viewpoint. See “ [Adding Redline Tags](#) ” for more information.


Adding a redline to a saved viewpoint:

1. Go to a saved viewpoint, or a Clash Detective result with the **Save Viewpoint** check box selected on the **Results** tab of the **Clash Detective** window.
2. Ensure the **Redline Tools** control bar is displayed as outlined above.
3. Type the thickness of the redlines into the **Thickness** edit box. The thickness applies to the redlines you are about to draw and will not change any existing redline thicknesses.


Note:

Thickness does not affect redline text. This is a default size and weight.

4. To change the color of the redline (they don't have to be red!), click on the **Color** button to open the standard Windows™ color chooser. This color applies to the redlines you are about to draw and will not change any existing redline colors.
5. Click the icon with the desired type of redline to create it:

- Choose the **Text**  redline tool to add text over the viewpoint. Click in the main navigation window where you wish to start entering text.

The redline text dialog will be displayed.

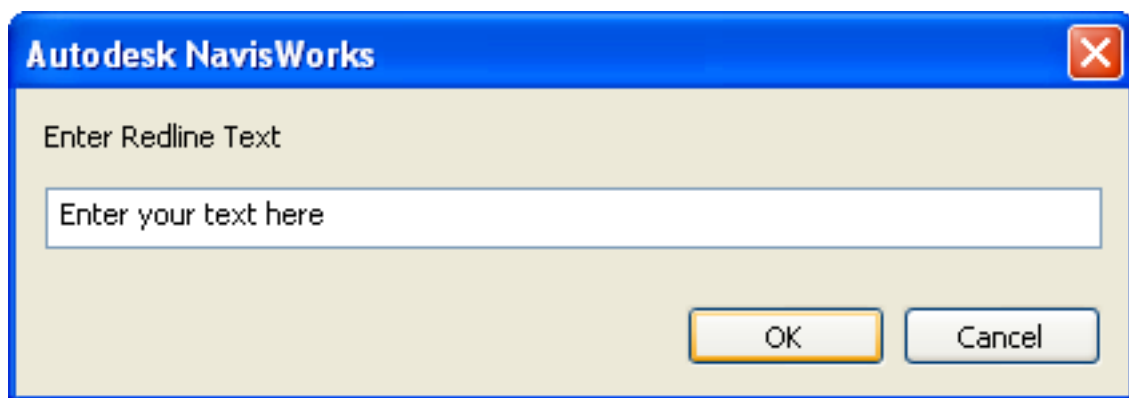

Enter the text you wish to add, then click **OK** to add the text, or **Cancel** to return to NavisWorks without adding it.







Note:

Text can only be added in a single line with this redline tool. To display text on multiple lines, you will need to write each line individually.

-



redline tool to add a tag on the current view. See “ [Adding Redline Tags](#) ” for more information.

- Choose the **Freehand**  redline tool to sketch over the viewpoint. Simply click and drag the left mouse button in the main navigation window to interactively sketch a redline.
 - Choose the **Line**  redline tool to draw single lines over the viewpoint. Alternately click the start and end points of lines with the left mouse button in the main navigation window.
 - Choose the **Line String**  redline tool to draw a string of lines over the viewpoint. Clicking the left mouse button in the main navigation window to add a new point in the line string. When the string is complete, click the right mouse button to end the line and you can then start a new line string.
 - Choose the **Ellipse**  redline tool to draw ellipses over the viewpoint. Click and drag a box in the main navigation window with the left mouse button to outline the ellipse.
 - Choose the **Cloud**  redline tool to draw clouds over the viewpoint. With the left mouse button, click points in the main navigation window in a clockwise direction to draw the arcs of the cloud (if you go counter-clockwise, the arcs will be inverted!). Right click with the mouse button to automatically close the cloud.
6. Choose the **Erase**  redline tool to erase all redlines from the viewpoint.


Note:

You can also access all the redline tools from the **Review > Redline** menu.

Adding Redline Tags


Redline Tags combine the features of redlining, viewpoints and comments into a single, easy to use review tool. This allows you to tag anything you want to identify in the model scene. A viewpoint will be created and you can add a comment and status to the tag. For example, during a review session, you may observe an item in the scene that is incorrectly sized or positioned. You can then tag this item, identifying the problem. This tag information can be saved into a NavisWorks review file (*.nwf) and distributed to the design team. The design team may then search the file, say for any tags of status 'new'. Once any necessary modifications are made to the drawing files, these can be reloaded into the *.nwf file and the tag status changed accordingly. You can review this latest version of the review file, ensure all tags have been resolved and finally 'approve' them.

Adding a redline tag to the current viewpoint:

1. Ensure the **Redline Tools** control bar is displayed as outlined in the previous section.
2. Choose the **Tag**  redline tool.
3. Click in the navigation window where you wish the tag to be attached to.
4. Click again in the navigation window where you wish the tag ID to be positioned. Both points will be joined by a leader line.

If the current viewpoint is not already saved, then it will be saved automatically and named 'Tag View X', where X is the tag ID.

The **Add Comment** dialog will be displayed.

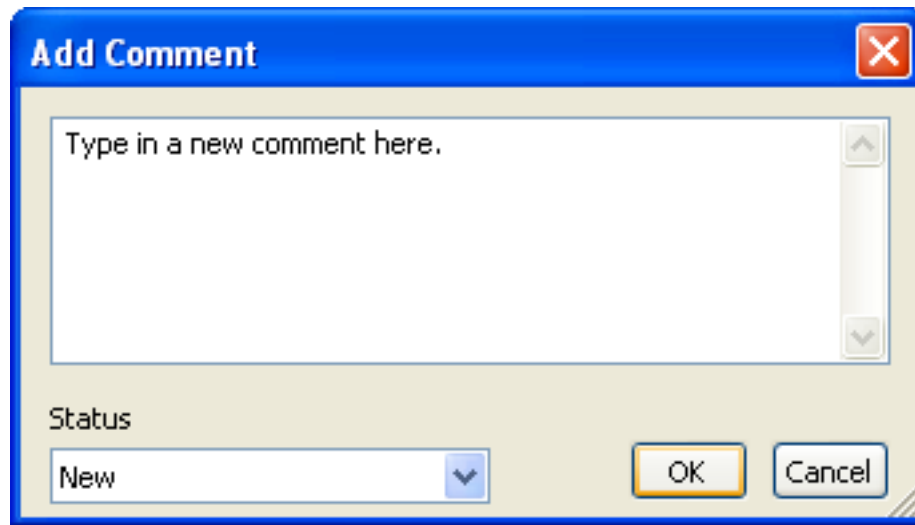

5. Enter the text to be associated with the tag and set the **tag status** from the drop-down list.
6. Click **OK** to save the tag, or **Cancel** to return to NavisWorks without saving it.

Finding Redline Tags

During a review session you may create tens, or hundreds of tags which are communicated and referred to amongst the review team. It may therefore be necessary to locate tags by ID, status or author.


As redline tags utilize the **Comments** dialog, this allows you to use the **Find Comments** dialog to search for tags with specific text or ID, of a particular status, or by author or date created. See "[Finding Comments](#)" for more information on this search method.

NavisWorks also has additional review features specifically for finding tags.

Quick finding of redline tags:

1. On the **Review** menu, click **Tags > Find Tag By ID** if you know the ID of the tag you wish to find.

The **Find Tag** dialog will be displayed.

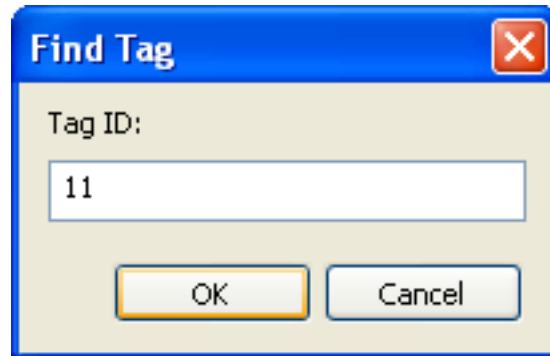

Enter the tag ID, then click **OK** to find the tag, or **Cancel** to return to NavisWorks.

2. Go to **Review, Tags, Current Tag** to select the current tag.
3. Go to **Review, Tags, First Tag** to find the first tag.
4. Go to **Review, Tags, Last Tag** to find the last tag.
5. Go to **Review, Tags, Previous Tag** to find the tag preceding the current tag.
6. Go to **Review, Tags, Next Tag** to find the tag following the current tag.

Editing Redline Tags

The comments and status assigned to a tag can be edited. As redline tags utilize the **Comments** dialog, editing tags is the same as editing a comment. See [Editing a Comment](#) for more information.

If different users have been reviewing and redline tagging the same model file, each saving their own .nwf, it is likely that some of their tag ID's will be the same. Using the Merge command to merge the different .nwf files together, only one copy of the geometry would be loaded and any tag viewpoints of the same name would be suffixed with the .nwf filename in brackets. All tag ID's however would be retained. In this situation, it is possible to renumber all of the ID's to make them unique. Again, as redline tags utilize the **Comments** dialog, renumbering tag ID's is the same as renumbering comment ID's. See [Renumbering Tag and Comment IDs](#) for more information.

Measuring

Measuring allows you to measure between points on items in the model. All measurements are made in the scene's units. For information on how to set the units, see "[Units Options](#)".

Like redlining and selecting, it is mutually exclusive to the navigation modes so that when you are measuring, you cannot navigate and vice versa.

The measure tools, which can all be accessed from the **Measure Tools** control bar or from the **Review > Measure** menu, are:



Point to point - measures the distance between two points.



Point to multiple points - measures the distance between a base point and various other points.



Point line - measures a total distance between multiple points along a route.



Accumulate - calculates the sum total of several point-to-point measurements.



Angle - calculates an angle between two lines.



Area - calculates an area on a plane.




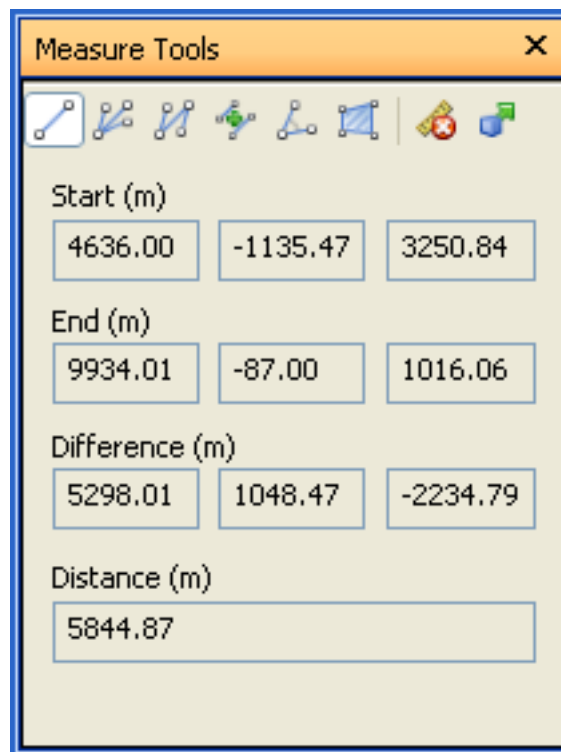
Clear - clears the view of all measurement lines and restarts the measurement.



Transform objects - enables you to reposition or rotate an object.

Measuring Tools

The **Measure Tools** control bar is a dockable bar like all others in NavisWorks. It can be accessed by clicking  on the **Workspace** toolbar or by clicking **Tools > Measure**.



Use the buttons at the top to select the type of measurement you want to do.

For all measurements, the x-, y-, and z- coordinates of the **Start** point and **End** point are displayed in the







text boxes underneath the buttons, as are the **Difference** and the absolute **Distance**. If an accumulative measure is being used, such as **Point Line** or **Accumulate**, **Distance** will show the accumulated distance for all points registered in the measurement. All these measurements are shown in scene units. All points will be represented in the main navigation window with a small cross, and all lines being measured, by a simple line between points. You can use the Measure Options to choose how these are displayed.

Note:

It goes without saying that you must click on a point on an item to register a point - clicking on the background will not register anything, but it is worth noting that you can *snap* to certain points on items - see "[Snapping](#)" for more details.

You can reset a measure command at any time by right clicking instead of left clicking in the main navigation window. This will start the measure command again with no points registered, just as if you had chosen a new measurement type.

Measuring between points on items:

1. Ensure the **Measure Tools** control bar is displayed as outlined above.
2. Click the icon with the desired option to start measuring geometry objects:
 - To simply measure the distance between two points, choose the **Point to Point** measurement type  on the **Measure Tools** control bar and click on the start point and then the end point with the left mouse button.
 - To lock the start point and then click on multiple different end points, choose the **Point to Multiple Points** measurement type  on the **Measure Tools** control bar and click on the start point. Every other click after the start point will then register a new end point, but you can right click to reselect a start point.
 - To measure the distance along a path or route, choose the **Point Line** measurement type  on the **Measure Tools** control bar and simply click on a series of points along the path. The **Distance** will display the total distance along the path from the start point. Right clicking will enable you to select a new start point.
 - To calculate the sum total of several point-to-point measurements, choose the **Accumulate** measurement type  on the **Measure Tools** control bar and click on start and end points alternately. The **Distance** will show the sum of all point-to-point measurements since the first start point. Right clicking will enable you to reset the distance to zero and restart the calculation.
 - To calculate an angle between two lines, choose the **Measure Angle** measurement type  on the **Measure Tools** control bar and click on a point on the first line, followed by the intersection of the two lines, followed by a point on the second line. The **Angle** will show the angle between the three points. Right clicking will enable you to select a new first point.
 - To calculate an area on a plane, choose the **Measure Area** measurement type  on the

Measure Tools control bar and simply click on a series of points to describe the perimeter of the area you wish to calculate. The **Area** will show the area of the perimeter described since the first point, as projected onto the plane of the viewpoint. This means that all your points should lie on the same plane for your area calculation to be perfectly accurate. Right clicking will enable you to select a new first point.

- To clear the view of all measurement lines and restart the measurement, choose the **Clear** button



on the **Measure Tools** control bar. This is the same as right clicking during a measurement.

Snapping

The **Options Editor** allows you to set the cursor to snap to the nearest vertex, edge or line end. Points and snap points are automatically snapped to. Different cursors feed back what is being snapped to:



No snap, but a point on a surface is found.



A vertex, point, snap point or line end is found to snap to.



An edge is found to snap to.


Note:

The geometry in NavisWorks is tessellated with triangles, and therefore the cursor will snap to edges that may appear to be in the middle of a face. Viewing the model in hidden line mode will make it clear which vertex or edge the cursor is snapping to.

To adjust snapping:

1. On the **Tools** menu, click **Global Options**.
2. Expand the **Interface** node in the **Options Editor** dialog box, and click the **Snapping** option.

The Snapping page is displayed.

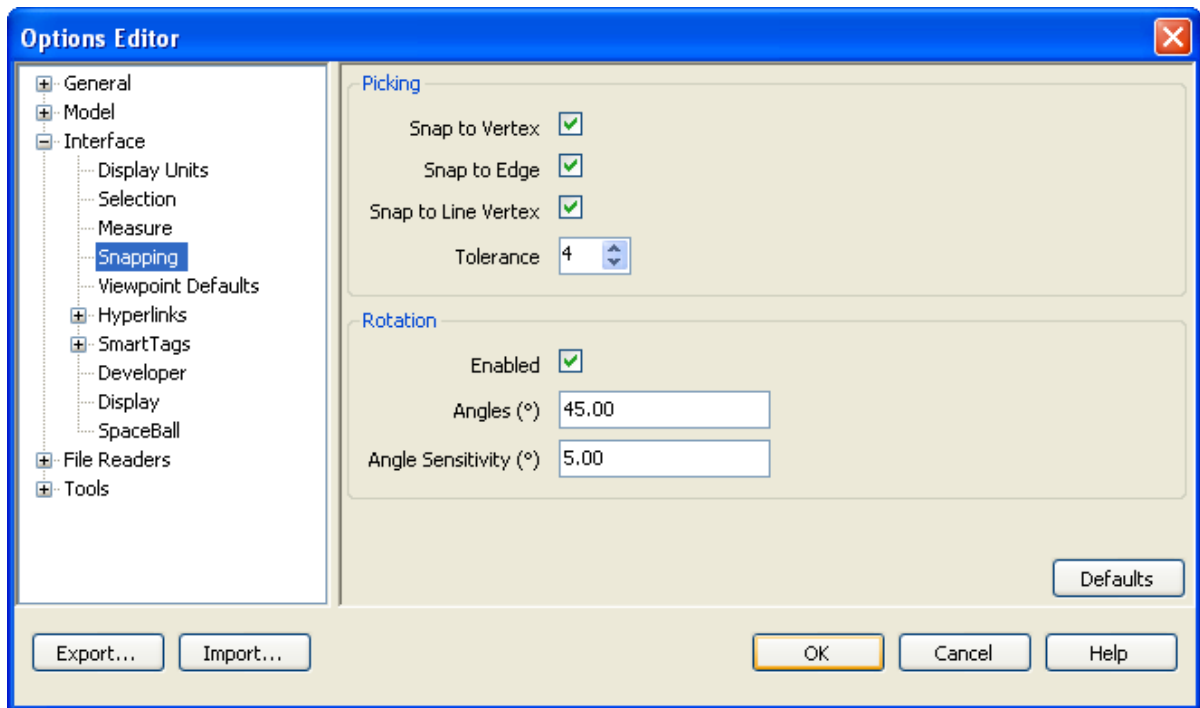

3. Set the picking style by selecting the **Snap to Vertex**, **Snap to Edge** and **Snap to Line Vertex** check boxes. The cursor will snap to the nearest vertex, triangle edge or line end respectively, depending on the options chosen.
4. Set the snapping **Tolerance**. The smaller the tolerance, the closer the cursor needs to be to a vertex or edge before it snaps to it.
5. Select the **Enabled** check box, if you want to turn on snapping for angular rotation.

Enter the multiplier for the snapping angle, for example 45, in the **Angles** box. In this example, the cursor is set to snap to 45, 90, 135 degrees, and so on.

Enter the snapping tolerance, for example 5, in the **Angle Sensitivity** box. This determines how close to the snapping angle the cursor needs to be for snap to take effect. In this example, the cursor snaps within 5 degrees of a given angle.

6. Click **OK** to set these options or **Cancel** to exit the dialog box without setting them.

Transforming Objects

The transform objects tool allows you to reposition or rotate an object, defined by points selected with the measure tools. You can also manipulate geometry objects by using the **Object Manipulation** toolbar. For more information, see [Chapter 21, Object Manipulation](#)

Repositioning objects:


1. Select the object to be repositioned (see [Chapter 13, Selecting Items](#) for more information on how to

do this).

2. Choose one of the measure tools, from **Point to Point**, **Point Line** or **Accumulate**.
3. Select a **base point** on the selected object. This is the reference point on the object from which the repositioning will be calculated.
4. Select another point in the scene (or multiple points, depending on which measure tool you selected). This is the point (or points) which the **base point** will be repositioned to.


Note:


You can only select a point on another object in the scene. Selecting a point in 'space' is not a valid option. To reposition an object into 'space', you can override the items **Transform**. See "[Overriding Transforms](#)" for details on how to do this.

5. Click **Transform Objects**  to reposition the object at the second point. If you used one of the multiple point measure tools and selected multiple points in the scene, clicking **Transform Objects** again will reposition the object to the next point, and so on.


NavisWorks also provides the ability to rotate an object.

Rotating objects:

1. Select the object to be rotated (see [Chapter 13, Selecting Items](#) for more information on how to do this).
2. Choose the **Measure Angle**  measure tool.
3. See diagram below:

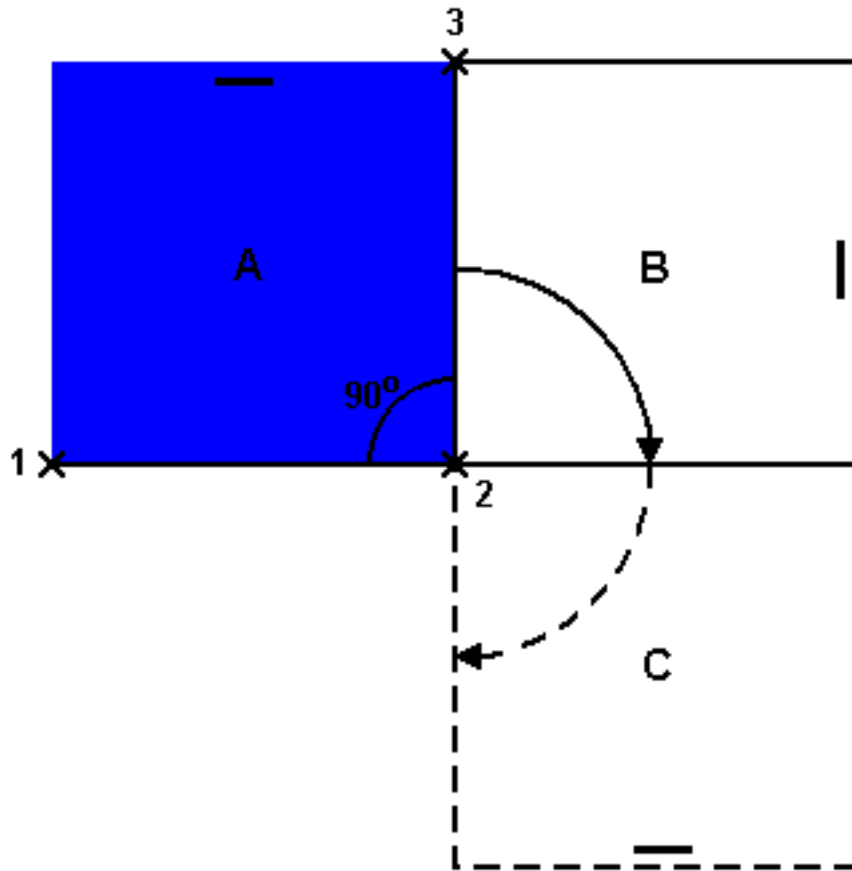

Select three points (1, 2, 3). The second point (2) will be the position about which the selected object (A) will be rotated. Lines from the first to the second point (1 to 2) and from the second to third point (2 to 3) will define the angle by which the object will be rotated (in the above case, 90 degrees).

4. Click **Transform Objects**  to rotate the object about the second point (rotate selected object by 90 degrees about point 2, which results in object rotating from point A to B).
5. Click **Transform Objects** again to continue rotating the object about point 2, by the specified angle (rotate selected object by 90 degrees about point 2 again, which results in object rotating from point B to C).

See “ [Resetting Items' Positions](#) ” for information on returning an object back to its original position.


Measure Options

NavisWorks allows you to configure the appearance and selection style of the measure tools and the measurement drawing in the main navigation window.

Setting measure options:

1. On the **Tools** menu, click **Global Options**.
2. Expand the **Interface** node in the **Options Editor** dialog box, and click the **Measure** option.

The **Measure** page is displayed:

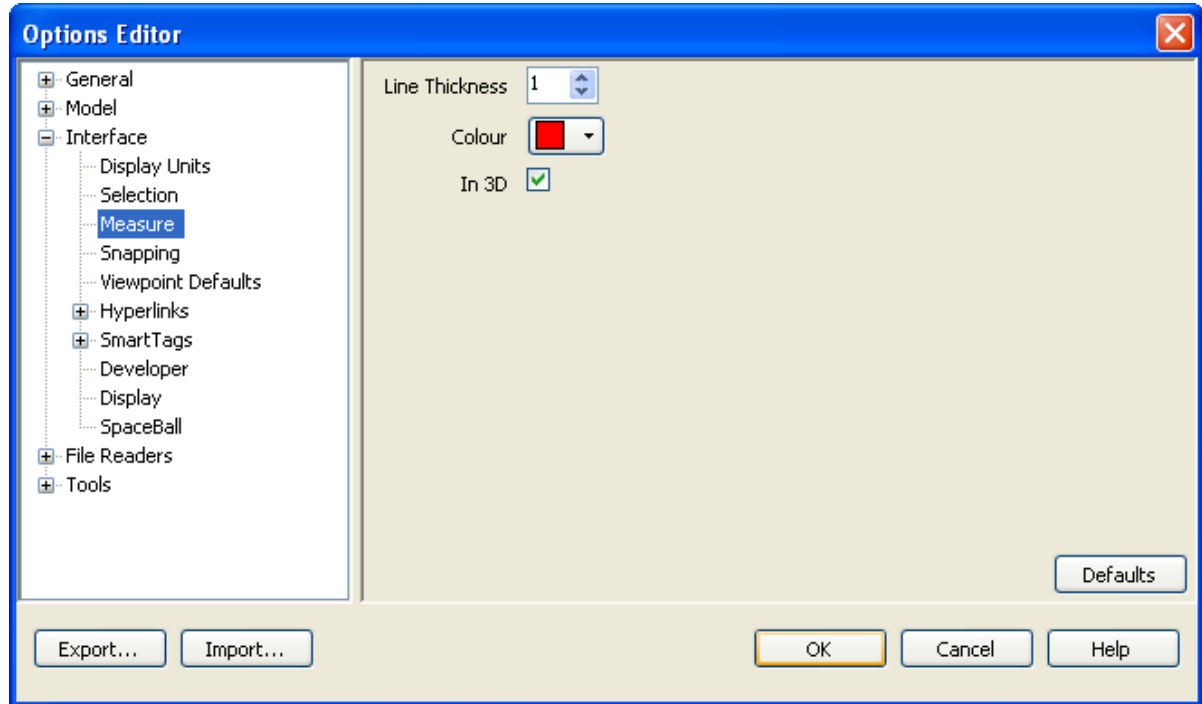

3. Set the **Color** and **Line Thickness** of the measure lines.
4. Check the **In 3D** check box if you want to draw the measurements in 3D in the main view. They then act as 3D lines in the scene which can be obscured by other geometry. If this box is unchecked, then all measurement lines are drawn in 2D over the top of the all geometry.
5. Click **OK** to set the options or **Cancel** to exit the dialog without setting them.

Hyperlinks

Hyperlinks are an extremely useful review tool to allow you to access non-graphical information through the graphical interface of NavisWorks. As well as hyperlinks being converted from the native CAD files you open in NavisWorks, you can also "override" an item's hyperlinks by attaching multiple additional hyperlinks to it. Because hyperlinks are treated as a property by NavisWorks, they can be searched on with the **Find Items** tool and displayed in the **Properties** bar. They are also saved into NavisWorks files so that as the model changes, the links remain for you and others to view.

Hyperlinks are categorized so that you can switch them on and off by category, and they can be anything internal (such as a viewpoints or selection set) or external (such as a web page, script, or spreadsheet) to NavisWorks. By turning on hyperlinks in the main navigation window, you can simply click on the link to activate it. Hyperlinks can be displayed as a text description, or as an icon and can also optionally have leader lines pointing to points on the item to help you identify which item has the link attached.

To turn on hyperlinks:

- Click **Hyperlinks**  on the **Workspace** toolbar

or

- On the **Tools** menu, click **Hyperlinks**.

Adding Hyperlinks


An item can have multiple hyperlinks attached to it, although only the default hyperlink (the one at the top of the list) can be displayed in the navigation window at one time. The default is the link that will be followed when clicked.

Adding hyperlinks to an item

1. Select a single item (see [Chapter 13, *Selecting Items*](#) for more details on how to do this) to which you want to attach a hyperlink and click **Review > Hyperlinks > Add Hyperlink** on the menu.

Alternatively, right-click the item to which you want to attach a hyperlink and click **Hyperlinks > Add Hyperlink** on the shortcut menu.

The **Add Hyperlink** resizable dialog is displayed

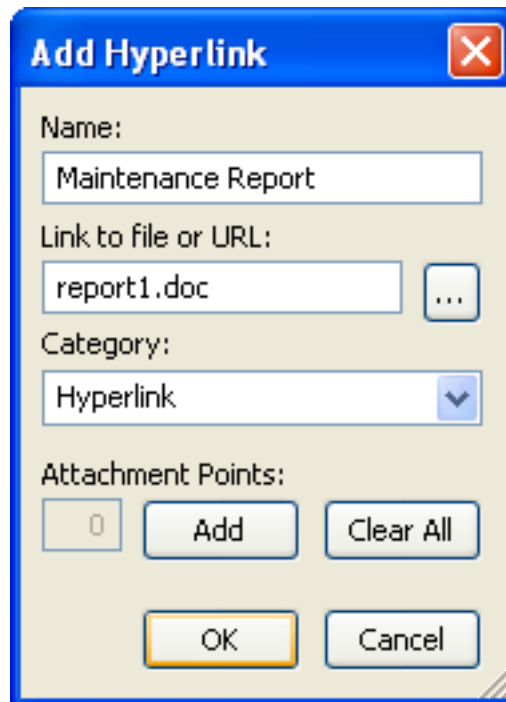

2. Type in the name of the hyperlink into the **Name** text box.
3. Type in, or browse to, the actual hyperlink value in the **Link to file or URL**. This is what will be linked to when the hyperlink is clicked on.

4. Choose the category that the hyperlink will belong to from the **Category** drop down. You can add more categories than the default **Hyperlink** and **Tag** categories by simply typing in the name of your category into this box. See “ [Hyperlinks Categories](#) ” for more information on categories.
5. If you want the hyperlink to be attached to a specific point on the item, instead of the default center of the item's bounding box, then click the **Add** button. A cross-hair cursor will appear in the main navigation window, allowing you to select a point on the item where the hyperlink will be attached to. See “ [Attachment Points](#) ” for more information on attachment points.
6. Click the **Clear All** button if you want to delete all attachment points associated with this hyperlink and revert to the hyperlink being attached to the center of the item's bounding box.
7. Click **OK** to add this hyperlink to the item or **Cancel** to return to NavisWorks without attaching anything.

Hyperlinks Categories

Hyperlinks can be categorized so that you can group them to distinctly display or not display in the main navigation window at one time. The seven default categories are:

- **Hyperlink**
- **Tag**
- **Viewpoints**
- **Clash Detective**
- **TimeLiner**
- **Selection sets**
- **Redline tags**

Tags are just hyperlinks that are displayed by name rather than by icon in the navigation window. The last three of these categories are defined by NavisWorks and so you cannot assign a hyperlink to one of these categories, other than by setting up a viewpoint, a selection set, or a Clash Detective result.

To add a new category, simply type in the name of the category into the **Category** box in the **Add Hyperlink** dialog when you are adding or editing a hyperlink.

You can customize the display of both standard and user-defined categories in the **Options Editor**.

Displaying Hyperlinks

To turn on hyperlinks:

- Click **Hyperlinks**  on the **Workspace** toolbar

or

- Click **Tools > Hyperlinks** on the menu bar.

Hyperlinks are drawn as icons in the main navigation window and tags as text. Clicking a hyperlink in the main navigation window will follow the link and right-clicking it will open a shortcut menu offering you the options of **Follow Hyperlink**, **Edit Hyperlink** (see “[Editing Hyperlinks](#)”) or **Select item containing hyperlink**, which will select the item onto which the hyperlink is attached.

Attachment Points

Hyperlinks and tags are by default attached to the center of their owner's bounding box, but you can override this with more convenient attachment points. When adding or editing a hyperlink, you have the option of adding attachment points, as described in “[Adding Hyperlinks](#)”. If you add more than one attachment point, the hyperlink will be displayed attached to the *closest* attachment point to the camera during navigation. This allows you to set up hyperlinks so that they are always available for following when drawn in 3D mode during navigation, rather than disappearing behind objects. Leader lines will be drawn from the attachment point to the hyperlink. The size of these lines can be defined in Hyperlinks Options.

Following Hyperlinks

To follow a hyperlink, simply click on it in the main navigation window. If multiple hyperlinks are attached to an item, the default hyperlink will be followed.

You can also follow one of the non-default hyperlinks attached to an item by selecting the item and clicking **Review > Hyperlinks** and selecting the hyperlink from the list.

The default hyperlink can also be followed from the Properties control bar by selecting the item, right-clicking any tab in the bar and clicking **Follow Default Hyperlink** on the shortcut menu.


Editing Hyperlinks

To edit a hyperlink:

1. Select a single item (see [Chapter 13, Selecting Items](#) for more details on how to do this) from which you want to edit a hyperlink, and click **Review > Hyperlinks > Edit Hyperlinks** on the menu bar.


Alternatively, right-click the item from which you want to edit a hyperlink, and click **Hyperlinks > Edit Hyperlinks** on the shortcut menu.

The **Edit Hyperlinks** dialog is displayed.

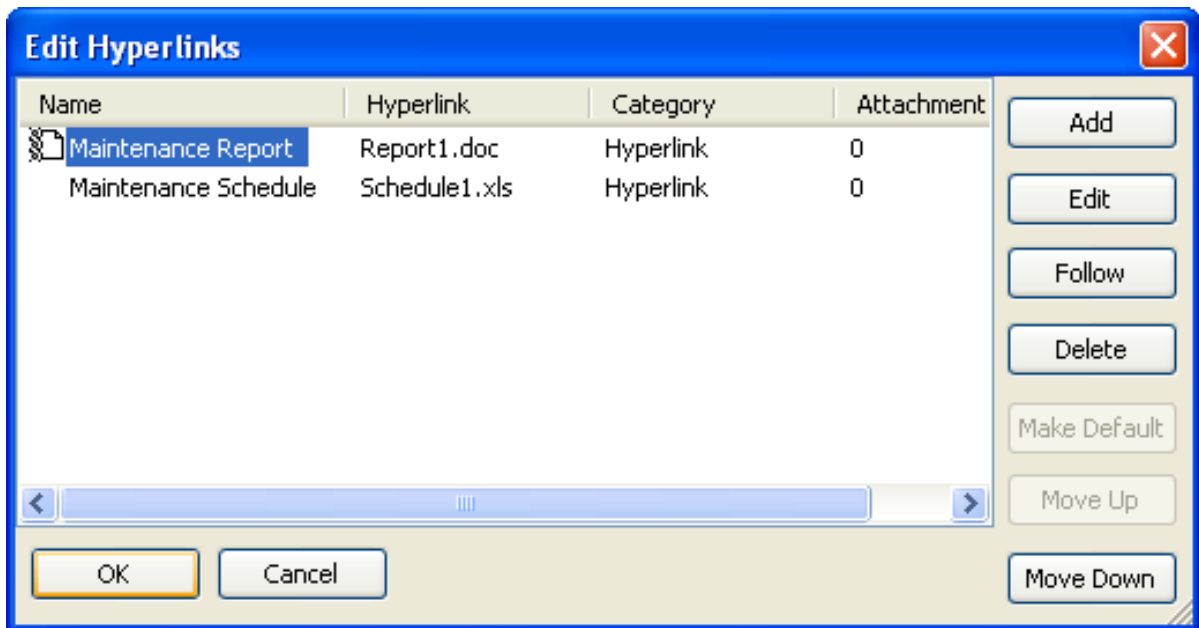

2. Select the hyperlink under the **Name** column.
3. Click the **Edit** button.

The **Edit Hyperlink** dialog is displayed.

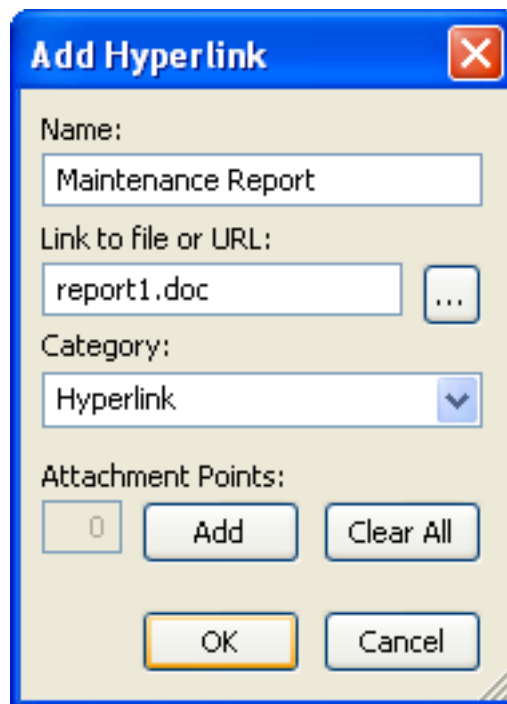

4. Complete this dialog as outlined in “ [Adding Hyperlinks](#) ”.
5. Move hyperlinks up and down the list using the **Move Up** and **Move Down** buttons, or by dragging

them to their new position in the list. This way you can prioritize a hyperlink to become the default hyperlink that is followed when click on in the main navigation window.

6. Click **OK** to confirm the edit or **Cancel** to return to NavisWorks leaving the hyperlink as it was.

Note:

You can also edit any original hyperlinks that have been converted from the native CAD files. If you do this, save the changes in an .nwf file, then change the hyperlink in the original CAD file, and reopen the .nwf file in NavisWorks, then your edit "overrides" will remain. If you haven't edited the hyperlinks in NavisWorks, however, the updated links from the CAD file will appear.

Deleting Hyperlinks

You can delete *all* hyperlinks from the selected item by right-clicking any tab in the Properties control bar and choosing **Delete Hyperlinks** on the shortcut menu.


You can reset all the hyperlinks on an item to those that were originally converted from the CAD file, by clicking **Edit > Reset Item > Reset Hyperlinks** with an item selected. Likewise, you can reset all the hyperlinks on *all* items in the scene to their original state by clicking **Edit > Reset All > Reset All Hyperlinks**.

Deleting a single hyperlink from an item:

1. Select a single item (see [Chapter 13, Selecting Items](#) for more details on how to do this) from which you want to delete a hyperlink and click **Review > Hyperlinks > Edit Hyperlinks** on the menu bar.

Alternatively, right-click the item from which you want to delete a hyperlink and click **Hyperlinks > Edit Hyperlinks** on the shortcut menu.

The **Edit Hyperlinks** dialog is displayed.

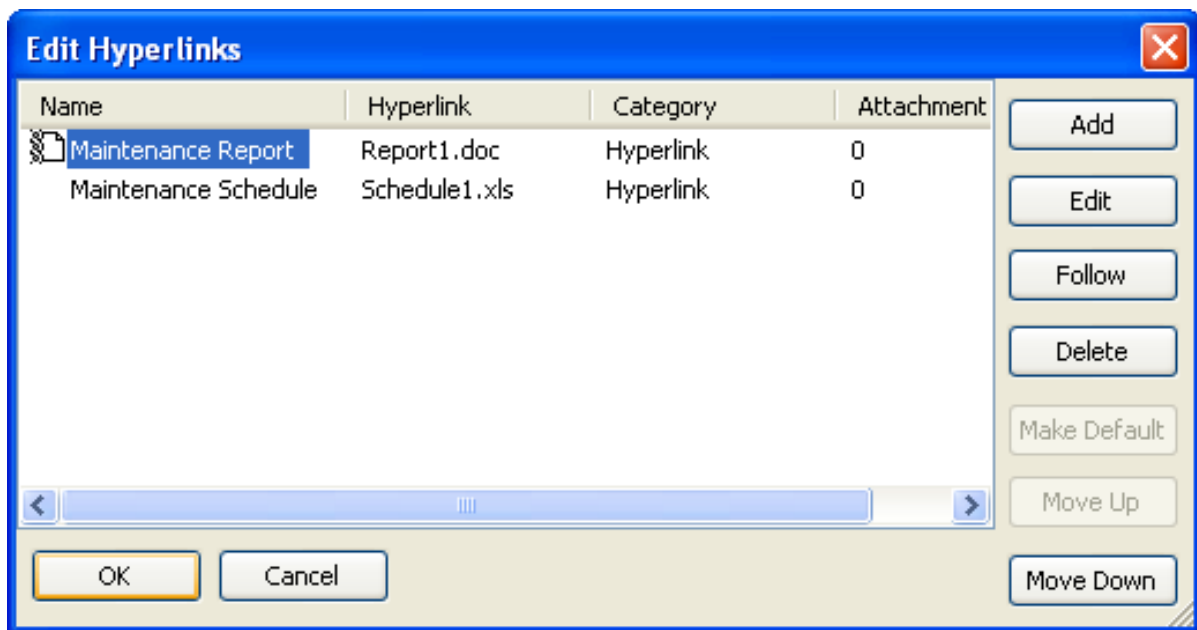


2. Select the hyperlink under the **Name** column.
3. Click the **Delete** button.
4. Click **OK** to confirm deletion or **Cancel** to return to NavisWorks without the hyperlink deleted.

Hyperlinks Options

Setting hyperlinks options:

1. On the **Tools** menu, click **Global Options**.
2. Expand the **Interface** node, and click the **Hyperlinks** option.

The Hyperlinks page is displayed:

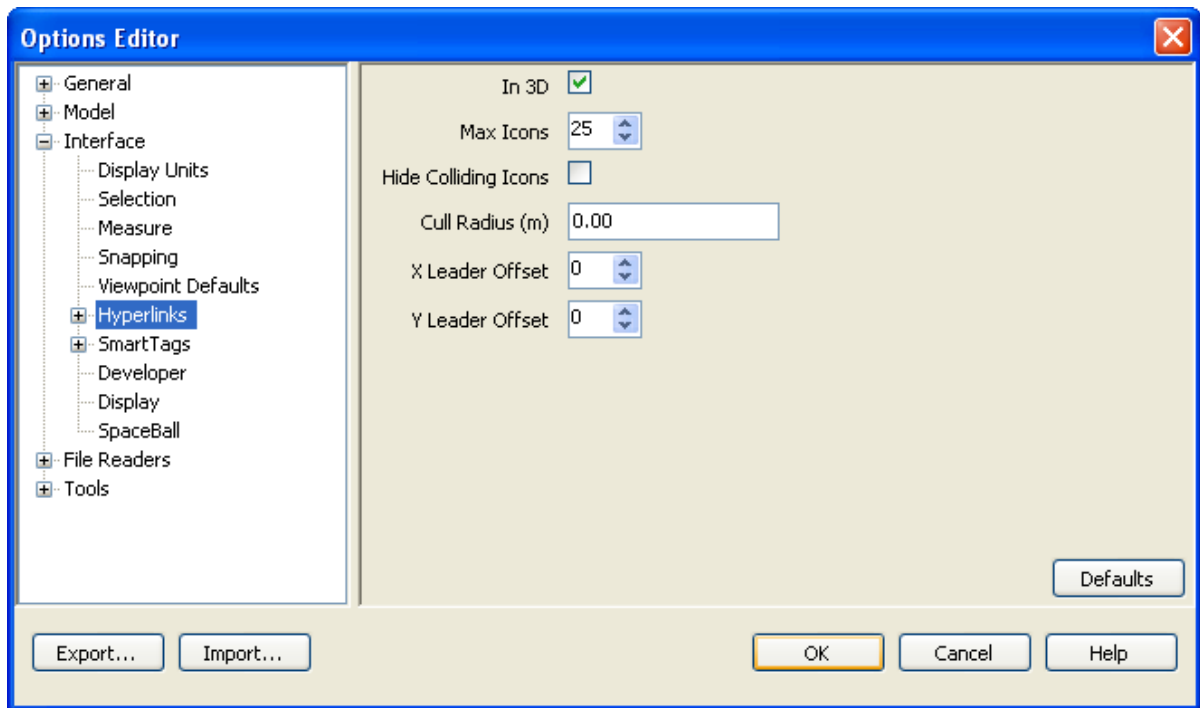

3. Icons that appear overlapped in the main view can be hidden if the **Hide Colliding Icons** check box is selected.
4. Enter the distance in the **Cull Radius** box for how close hyperlinks have to be in order to be drawn in the main view. Any hyperlinks further away than this distance will not be drawn. The default value of 0 means that all hyperlinks will be drawn.
5. Select the **In 3D** check box if you want to draw the hyperlinks icons in 3D in the main view. They then float in 3D space just in front of their attachment points to the items. If this box is unchecked, then all hyperlink icons are drawn in 2D over the top of the all geometry.

Note:


In 3D mode hyperlinks can become hidden by other objects in the scene when you are navigating.

6. Enter the maximum number of icons to draw in the main view in the **Max Icons** box.
7. Hyperlinks can be drawn with leader lines (arrows) pointing to the attachment point on the item that the hyperlink is attached to. Enter the X- and Y- distance in **Leader Offset** for the number of pixels to the right and up that these leader lines will use.
8. Click **OK** to set the options or **Cancel** to exit the dialog without setting them.

Configuring standard hyperlinks categories:


1. On the **Tools** menu, click **Global Options**.
2. Expand the **Interface** node, expand the **Hyperlinks** option, and click **Standard Categories**.

The Categories page is displayed:

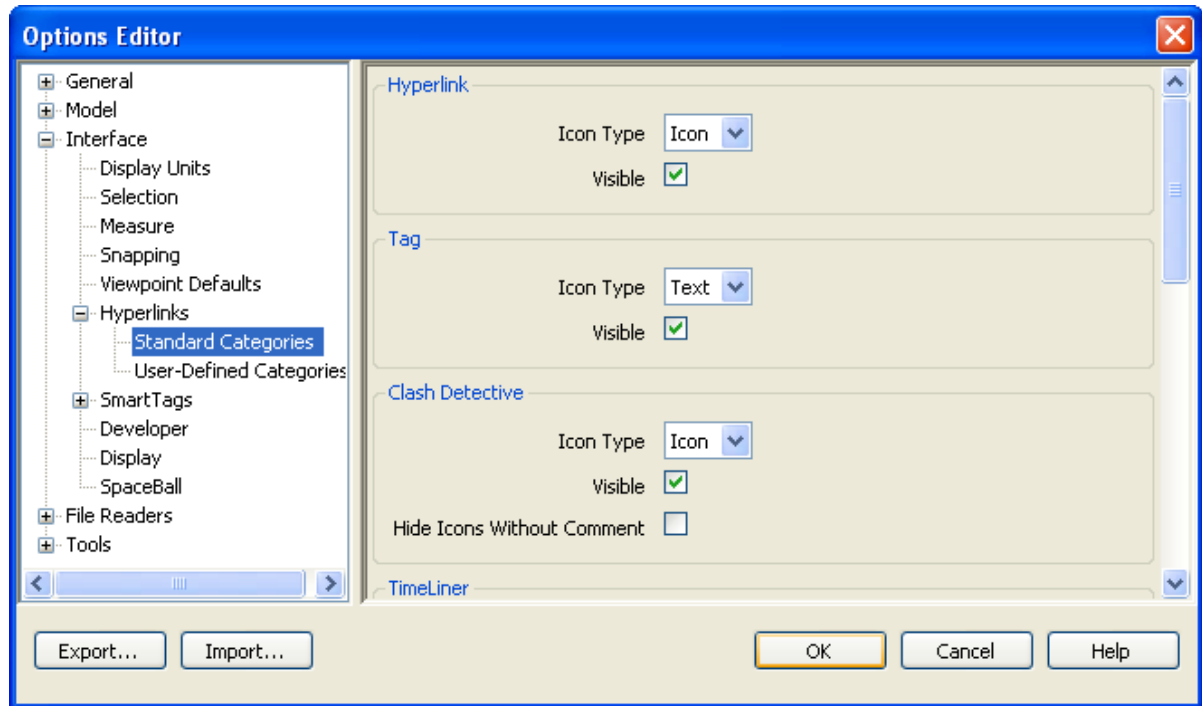

3. Each hyperlink is a member of a category. This enables you to easily manage sets of hyperlinks. Use the **Visible** check box to switch a category on or off in the main view. Some categories also have comments associated with them. Use the **Hide Icons Without Comments** check box, if available, to do exactly that - only draw hyperlinks that have a comment attached to it, so that you can see any areas of issue in the model. See “ [Commenting](#) ” for more information on comments.

4. Use the **Icon Type** field to specify how to display the hyperlink.

Select **Icon** to use a default hyperlink  icon in the main view.


Select **Text** to use the hyperlinks description as a tooltip style text box in the main view instead of an icon.


5. Click **OK** to set the options or **Cancel** to exit the dialog without setting them.

Configuring user-defined hyperlinks categories:

1. On the **Tools** menu, click **Global Options**.
2. Expand the **Interface** node, expand the **Hyperlinks** option, and click **User-Defined Categories**.


The Categories page is displayed:

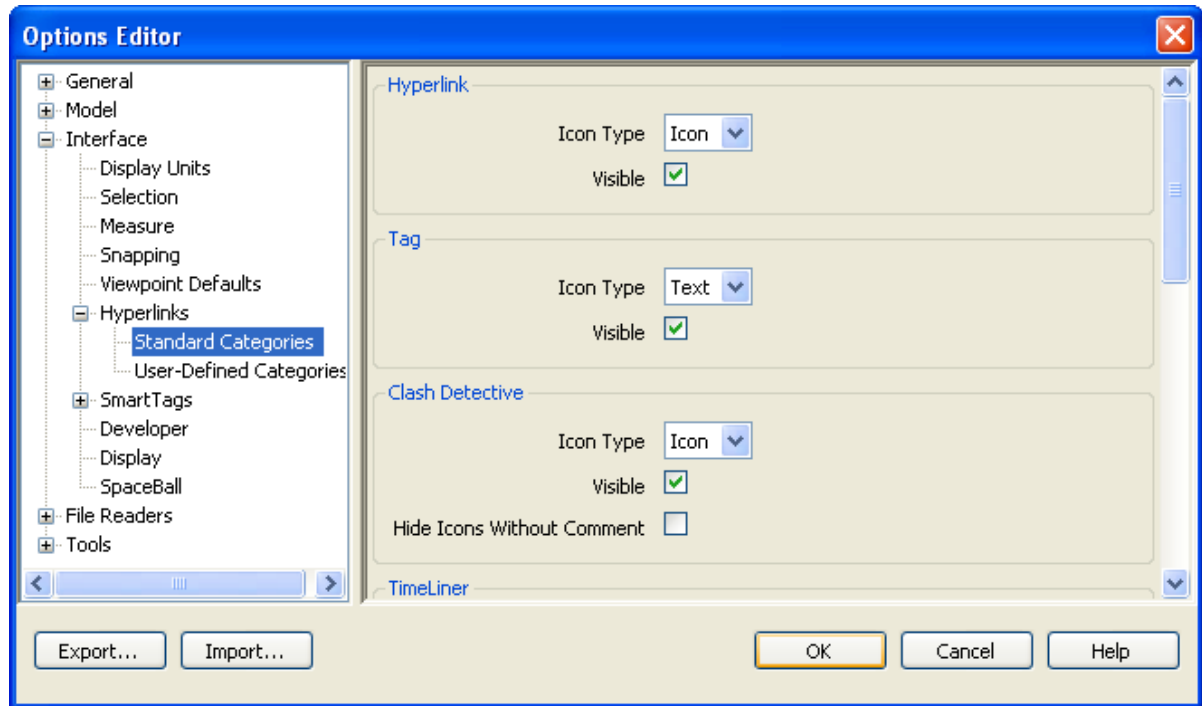




Only the custom hyperlink categories are shown here. The padlock  icon indicates that you cannot add or remove categories directly from here.

3. Choose the way categories are shown in the **Options Editor**:

Click **Grid View**  to display categories in a tabular format.

Click **List View**  to display categories in a list format (the same way as the standard categories are shown).

Click **Records View**  to display categories as records.

4. Use  and  to navigate between the categories. If you selected **Records View**, this is the only way to move between the records.

5. Use the **Visible** check box to switch a category on or off in the main view.

6. Use the **Icon Type** field to specify how to display the hyperlink.

Select **Icon** to use a default hyperlink  icon in the main view.

Select **Text** to use the hyperlinks description as a tooltip style text box in the main view

instead of an icon.

7. Click **OK** to set the options or **Cancel** to exit the dialog without setting them.

Smart Tags

Smart tags pop up information on the item hovered over by the cursor in a tooltip style window, without having to select the item itself. The smart tag will disappear after a few seconds. This is a useful way to quickly get information about an item in the main navigation window when navigation has ceased. The default information shown is the name and type of the item, but you can define which properties to show using the smart tags options.

Note:

If the item hovered over doesn't have the property requested, smart tags will search up the selection tree for a parent that does, so maximising the useful information you get.

To turn on smart tags:

- Click **Smart Tags**  on the **Workspace** toolbar

or


- On the **Tools** menu, click **Smart Tags**.

Smart Tags Options

Setting smart tags options:

1. On the **Tools** menu, click **Global Options**.
2. Expand the **Interface** node, and click the **Smart Tags** option.

The Smart Tags page is displayed.

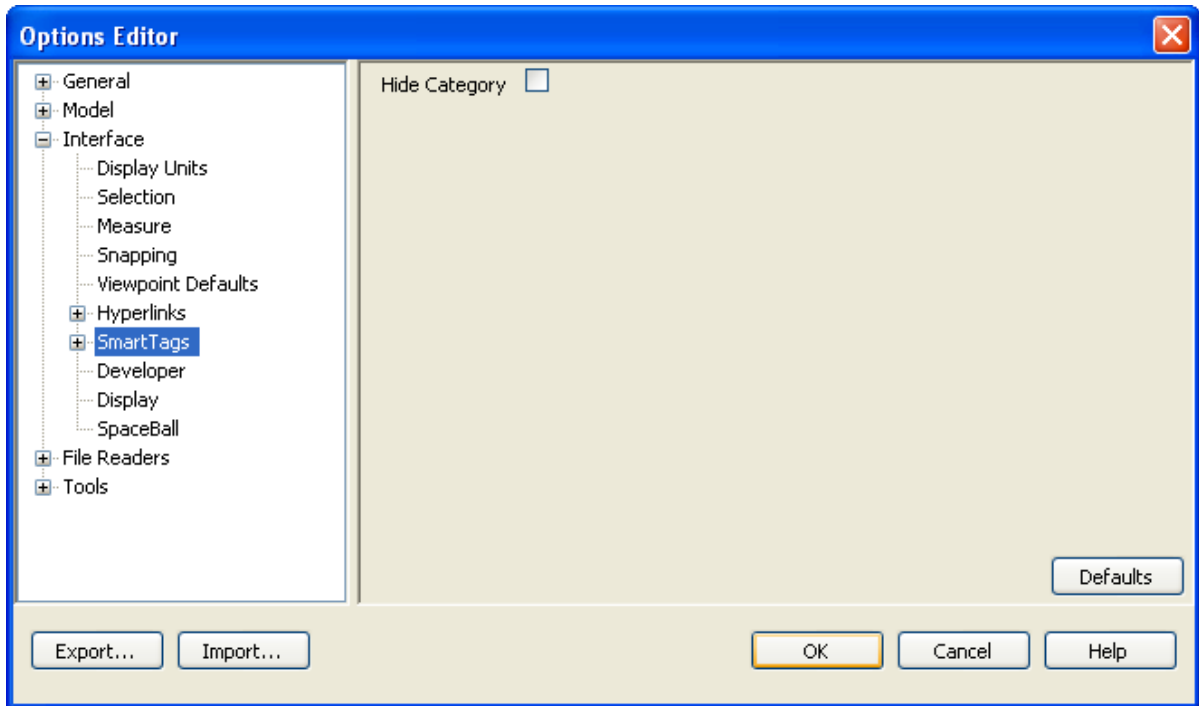


3. Select the **Hide Category** check box if you do not want to see category names included in the smart tags tooltip.
4. Click **OK** to set the options or **Cancel** to exit the dialog without setting them.

The default information displayed is the name and type of the item, but the actual information displayed can be customized.


Customizing smart tags:

1. On the **Tools** menu, click **Global Options**.
2. Expand the **Interface** node, expand the **Smart Tags** option, and click **Definitions**.


The Definitions page is displayed.

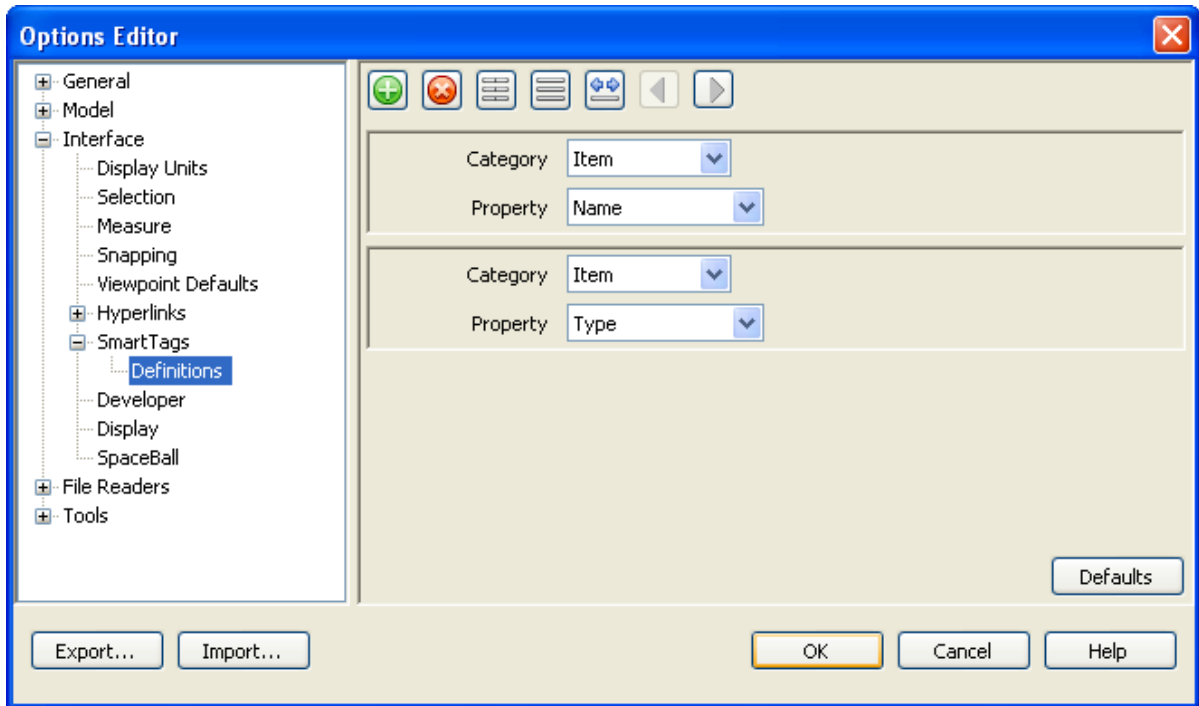



3. Choose the way smart tag definitions are shown in the **Options Editor**:


Click **Grid View**  to display definitions in a tabular format.


Click **List View**  to display definitions in a list format.

Click **Records View**  to display definitions as records.

4. Use  and  to navigate between the definitions. If you selected **Records View**, this is the only way to move between the records.

5. For every smart tag definition, you can change the **Category** and **Property** by clicking on the item and choosing the relevant entry from the drop-down list.

6. To add a smart tag definition, click .

7. To delete a smart tag definition, select it, and click .

8. Click **OK** to set the options or **Cancel** to exit the dialog without setting them.

Collaboration

The NavisWorks **Collaborate Bar** enables multiple users to participate in a single design review session across a Local Area Network (LAN). This utilizes the shared program features of Windows NetMeeting, available to all Windows users.


To get access to the collaboration tools, right-click anywhere in the toolbar area of the screen, and click **Collaborate Bar** on the shortcut menu.

All meeting participants require access to a NavisWorks .nwf or .nwd file, in a shared location. One of the participants will 'host' the meeting and place a call to invite the others to join the meeting. Any of the participants who have joined the meeting can take control and **drive** the session. All navigation performed by the driver will be displayed in the main NavisWorks window on each participants machine. Any viewpoints or markup (for example) added during the session can be updated on all participants machines at the click of a button.


Note:

If a collaborative review session, as outlined here, is not conducted in single room, then additional tele-conferencing provisions could be necessary. This may be using the NetMeeting Whiteboard, or your own telephone system.

To start a collaboration session:

- Open the NavisWorks file that you wish to collaborate on from a shared directory (see “ [Opening Files](#) ”).
- Click **Collaborate**  on the **Collaborate** toolbar.

This will initialize Windows NetMeeting:

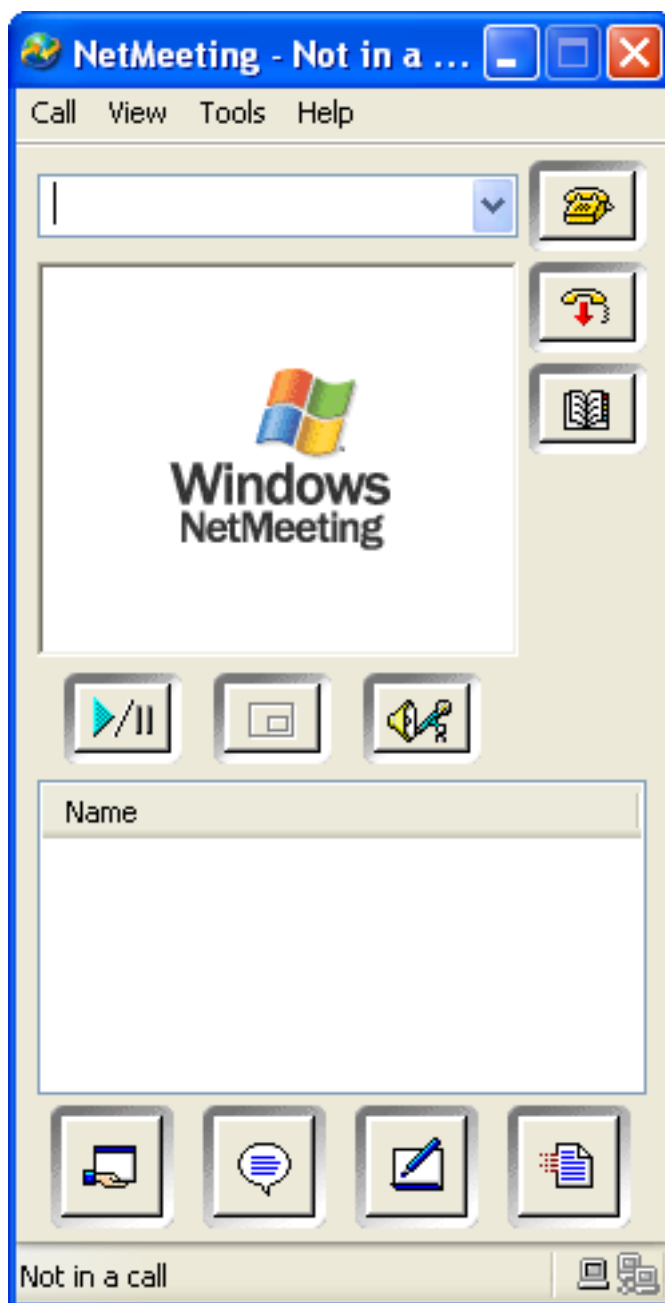

Note:

The first time Windows NetMeeting initializes, a setup wizard will take you through the setup process. You will need to enter your name and email address. When using NetMeeting on a LAN you do not need to log onto a directory server, as these will not be available to you.


To place a call, inviting attendees to join:

-



on the **NetMeeting** dialog.

The **Place a call** dialog is displayed:

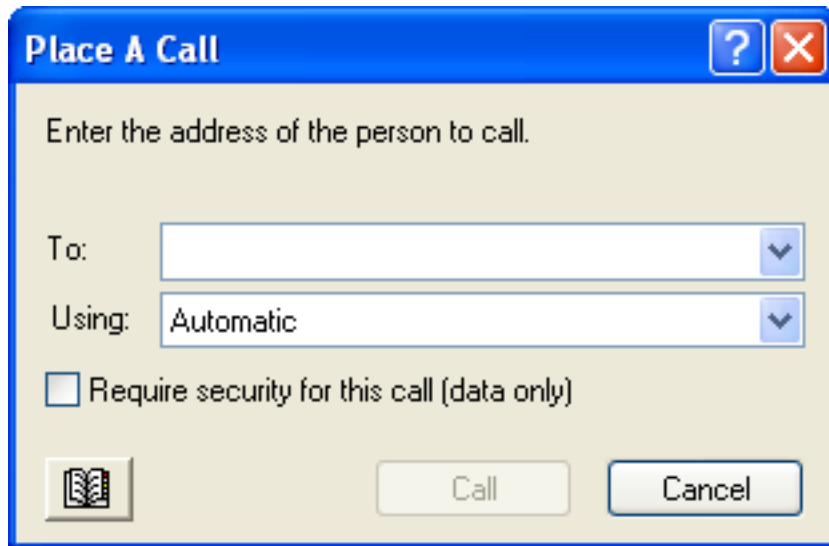

- In the **To:** box, enter the machine name or IP address of the machine you wish to join the meeting, then click **Call** to send the invite, or **Cancel** to return to NetMeeting.


Once the person receiving the invite accepts this, both their name and yours will be listed in the NetMeeting dialog.

Note:

The above can be repeated to invite additional people to the meeting.

To accept an invitation:

- When you are invited to join a meeting, the **incoming call** dialog is displayed:

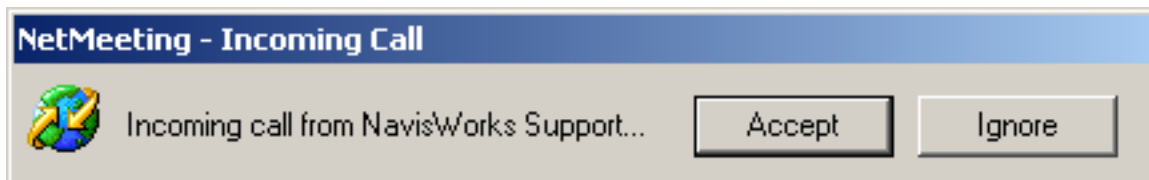


- Click **Accept** to join the meeting, or **Ignore** to decline the invitation.

Note:

Once you have accepted a call, you will need to start your own collaboration session. See “[Collaboration](#)” on p. 257 for more information.

During a collaboration meeting, anyone in the call can take control of the session and become the 'driver'. The driver will control navigation of the shared model on all machines in the call.

To become the driver:


- Click **Drive**  on the **Collaborate** toolbar.

Note:

Upon clicking the **drive** button, all other users in the call will receive a message advising that you are requesting control. They will have to answer **Yes** to this message if you are to drive NavisWorks on their machine.

Although real-time navigation in NavisWorks can be performed on all machines in a call by one user, it is not possible for review data such as saved viewpoints, comments and redlines, to be automatically updated on all users' machines. This information can however be updated on their machines by refreshing the model. This **refresh** process can be performed on one users machine and refresh all machines in the call.

To refresh all attendees machines:

- Click **Refresh**  on the **Collaborate** toolbar.

SwitchBack

SwitchBack allows the current view of the currently loaded file to be sent back to AutoCAD (version 2004 or later) or MicroStation-based CAD products.

Note:

The native CAD package must be installed on the same machine as NavisWorks for **SwitchBack** to work.

AutoCAD (version 2004 or later)

- For AutoCAD (version 2004 or later) or products based on it, first open the product in the usual manner and load the **nwexport** application. This can be done easily by running the **nwload** command in the command line. If **SwitchBack** needs to be available whenever AutoCAD is run, nwexport can be added to the set of startup applications in AutoCAD.
- Once the CAD package is running, and nwexport has been started, selecting an object in the scene will allow the **SwitchBack** command to be selected either from the **Review** menu, from the right-click shortcut menu of the object, or, if a Clash Detective tool is available, via the **SwitchBack** button on the **Results** tab. Selecting **SwitchBack** then takes the current NavisWorks camera view back to the CAD package.

Note:

See [Chapter 52, Clash Results](#) for more information on taking clash results back to the originating CAD package.

- **Switching back** to AutoCAD whilst an object is selected will not only set the view in AutoCAD, but also select the object. Selection of objects is done by entity handle, therefore, you must have **Convert Entity Handles** option enabled when files are loaded into NavisWorks.
- Some objects cannot be selected in AutoCAD (for example, blocks) which may mean that running SwitchBack may be unsuccessful with a given selected object. If this is the case try selecting further up the object tree and trying again.

MicroStation (/J and v8)

- For MicroStation (/J and v8) or products based on it, first prepare MicroStation by loading the NavisWorks exporter "**mdl load nwexport6**".
- To get nwexport to load automatically when MicroStation is run, add "**nwexport6**" to the list of mdl applications run automatically on startup.
- Once the NavisWorks exporter has been run, selecting an object in the scene will allow the **SwitchBack** command to be selected either from the **Review** menu, from the right-click shortcut menu of the object, or, if a Clash Detective tool is available, via the **SwitchBack** button on the **Results** tab. Selecting **SwitchBack** then takes the current NavisWorks camera view back to the first visible view in MicroStation.


Note:

See [Chapter 52, Clash Results](#) for more information on taking clash results back to MicroStation.

- If you wish to override the view used by **SwitchBack**, use the "**nwview <view number>**" key-in where **view number** is the visible window in MicroStation. This view setting is not saved between sessions.
- **Switching back** to MicroStation whilst an object is selected will not only set the view in MicroStation, but also select the object. Selection of objects is done by element id (MicroStation v8) or DMRS value (MicroStation /J).

Chapter 21. Object Manipulation

In this section you will learn how to modify position, rotation, size, color and transparency of geometry objects in your model by using the **Object Manipulation** toolbar.

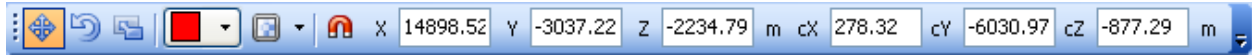







To open it, right-click anywhere in the toolbar area of the screen, and click **Object Manipulation** on the shortcut menu.

All object manipulation is carried out the in the main NavisWorks window.


Note:

If objects are moved through the **Object Manipulation** toolbar, they are considered to be globally moved, as if they'd been changed in the original CAD model.

-  Translate Item
-  Rotate Item
-  Scale Item
-  Modify Item Color
-  Modify Item Transparency
-  Snap Item

Manual Entry boxes

Using Snapping

When you manipulate geometry objects by changing their position, rotation or size you can use snapping to control the precision of your operations in the main NavisWorks window. To turn on snapping mode, click the **Toggle Snapping**  button on the **Object Manipulation** toolbar.

The snap works like a 'gravity' around the snap points. This enables you to snap the start position of the selected visual tool to a relevant point on the screen, such as center, corner of bounding box, vertex of geometry. Similarly, the end point of the translation, rotation or scale operation can also be snapped to a desired point on the screen (for example, center of another geometry object).


You can adjust the way snapping works by using the **Options Editor**. For more information, see ["Snapping"](#).

Highlighting Objects


To get a clearer view of geometry objects in the main NavisWorks window, you can use the **Options Editor** to adjust the way in which the current selection is highlighted.

You can use three different highlighting methods:


- Shaded

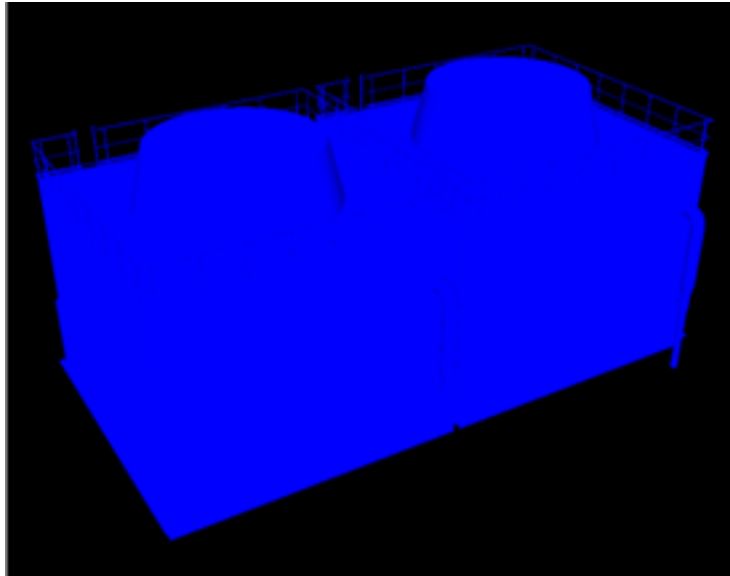

- Wireframe

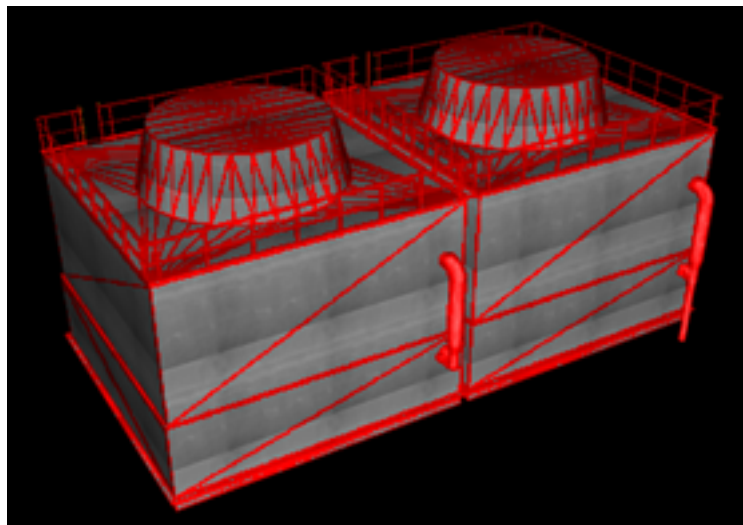


- Tinted

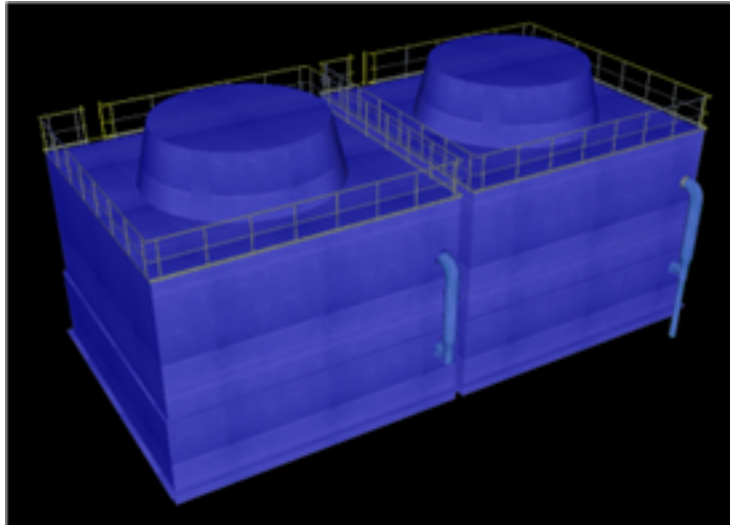

To adjust highlighting:

1. On the **Tools** menu, click **Global Options**.
2. Expand the **Interface** node in the **Options Editor** dialog box, and click the **Selection** option.

The Selection page is displayed.

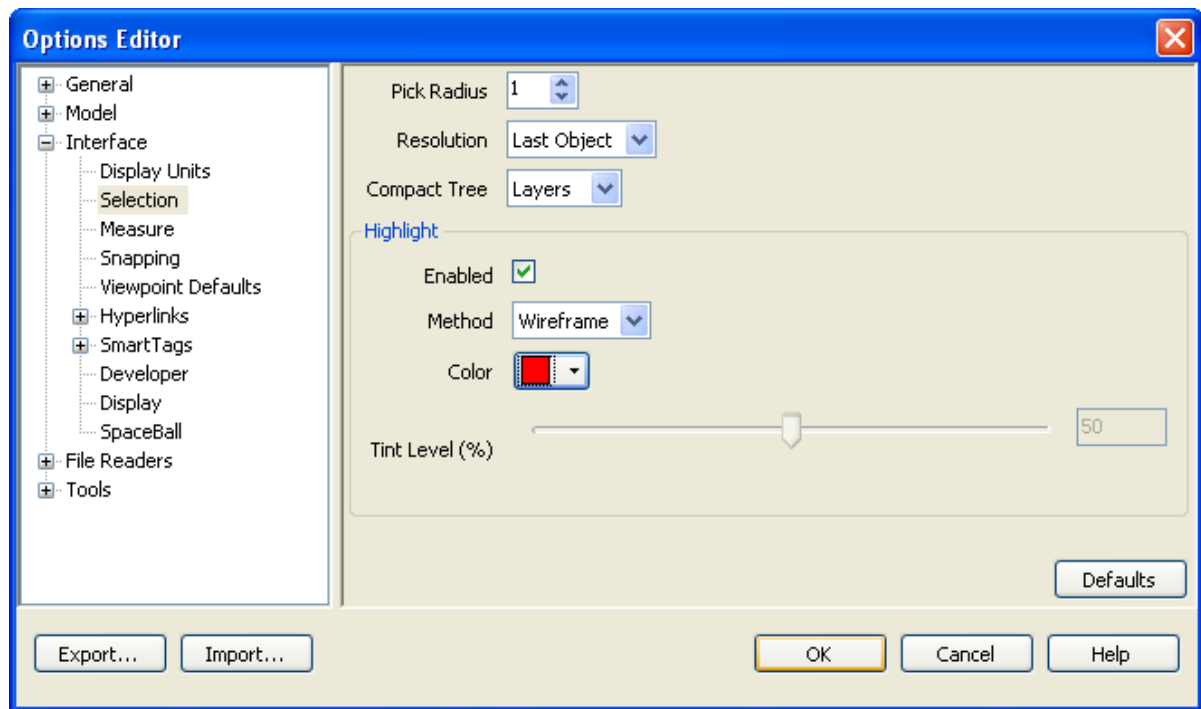


3. Locate the **Highlight** area, and select the **Enabled** check box to turn on highlighting of the selected

items.


4. Use the **Method** drop-down list to select the type of highlighting you want (Shaded, Wireframe or Tinted).
5. Click the **Color** button to select the highlight color.
6. If you selected **Tinted** in the **Method** box, use the slider to adjust the **Tint Level**.
7. Click **OK** to set these options or **Cancel** to exit the dialog box without setting them.


Moving Objects

To move an object:

1. Select the object you want to move in the main NavisWorks window.
2. Click the **Translate Item**  button on the **Object Manipulation** toolbar.

The translation tool is displayed with three colored axes at the correct angles relevant to the current camera position.

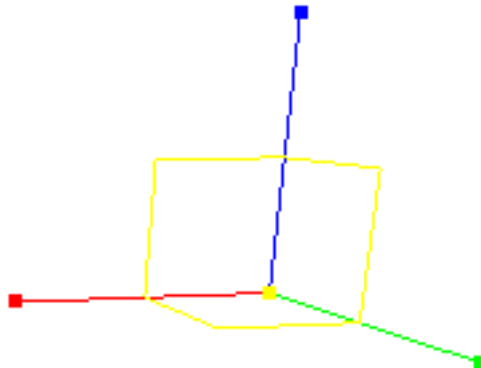

3. Use the translation tool to change the position of the selected object:
 - To move the currently selected object, place the mouse over the square at the end of the desired axis. When the cursor changes to , drag the square on the screen to increase/decrease the translation along that axis.
 - To move the object along several axes at the same time, drag the square frame between the desired axes.
 - Dragging the yellow square in the middle of the translation tool enables you to snap this center point to other geometry in the model.


Note:

You can adjust snapping to increase your precision.


- To move the translation tool itself rather than the selected object, hold down the CTRL key while dragging the square at the end of the desired axis.
- To snap the tool to other objects, hold down the CTRL key while dragging the yellow square in the middle of the tool.
- For the point-to-point translation, hold down the CTRL key, and use the center square to drag the tool to the start point. Then, with CTRL released, drag the square again to move the object to the end point.


Rotating Objects

To rotate an object:

1. Select the object you want to rotate in the main NavisWorks window.
2. Click the **Rotate Item**  button on the **Object Manipulation** toolbar.

The rotation tool is displayed with three colored axes at the correct angles relevant to the current camera position.

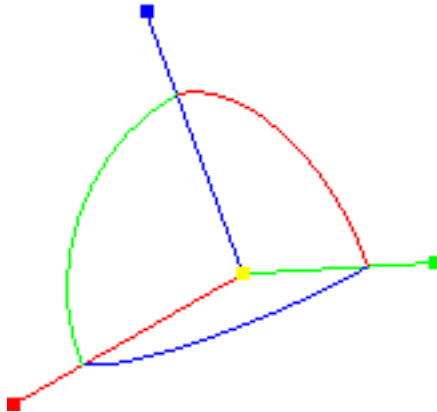

3. Use the rotation tool to rotate the selected object:
 - Before you can rotate the selected objects, you need to position the origin (center point) of the rotation. To do this, place the mouse over the square at the end of the desired axis. When the cursor changes to , drag the square on the screen to increase/decrease the translation along that axis. This will move the rotation tool itself.
 - Dragging the yellow square in the middle of the rotation tool enables you to move it around, and snap it to points on other geometry objects.


Note:

You can adjust snapping to increase your precision.


- Once the rotation tool is positioned correctly, place the mouse over one of the curves in the middle, and drag it on the screen to rotate the object. The curves are color-coded, and match the color of the axis used to rotate the object around. So, for example, dragging the blue curve between the X and Y axes, rotates the object around the blue Z axis.
- To rotate the orientation of the rotation tool to an arbitrary position, hold down the CTRL key while dragging one of the three curves in the middle.
- To snap the tool to other objects, hold the CTRL key while dragging the yellow square in the middle of the tool.


Scaling Objects

To change an object's size:

1. Select the object you want to scale in the main NavisWorks window.
2. Click the **Scale Item**  button on the **Object Manipulation** toolbar.

The scale tool displays three colored axes at the correct angles relevant to the current camera position.

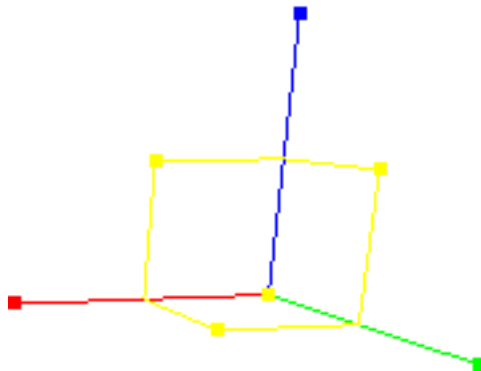


3. Use the scale tool to resize the selected object:
 - To resize the selected object, place the mouse over one of seven squares. When the cursor changes to  drag the square on the screen to modify the size of the object. Typically, dragging a square up or right increases the size, dragging it down or left decreases the size.
 - To resize the object across a single axis only, use colored squares at the end of the axes. To

resize the object across two axes at the same time, use yellow squares in the middle of the axes. Finally, to resize the object across all three axes at the same time, use the square in the center of the tool.

- You can modify the center of scaling. To do this, place the mouse over the square in the middle of the tool, and hold down the CTRL key while dragging the square on the screen.


Changing Color

To change an object's color:

1. Select the object you want to modify in the main NavisWorks window.
2. Click the **Modify Item Color**  button on the **Object Manipulation** toolbar, and choose the desired color.

Changing Transparency

To change an object's transparency:

1. Select the object you want to modify in the main NavisWorks window.
2. Click the **Modify Item Transparency**  button on the **Object Manipulation** toolbar.
3. Use the slider to adjust how transparent or opaque the selected object is.

Using the Manual Entry Boxes


The manual entry boxes enable you to translate, rotate, and scale geometry objects by typing in numerical values, instead of using the visual tools in the main NavisWorks window. The boxes are context-sensitive, and change depending on the currently selected manipulation tool.

- Translation:
X, Y, Z represent translation distance in the current model unit, and cX, cY, cZ represent the translation center point.
- Rotation:
X, Y, Z represent degrees of rotation around that axis, and cX, cY, cZ represent the rotation center

point.


- Scaling:

X, Y, Z represent a scaling factor (1 being the current size, 0.5 half, 2 being double, and so on), and cX, cY, cZ represent the scaling center point.

So, for example, selecting , and typing some numbers into the Manual Entry boxes will move the object along the axis by the amount entered.

Chapter 22. Interface

The NavisWorks interface is intuitive and easy to learn and use. It contains a number of traditional Windows elements, such as toolbars, control bars, dialog boxes, shortcut menus and so on.

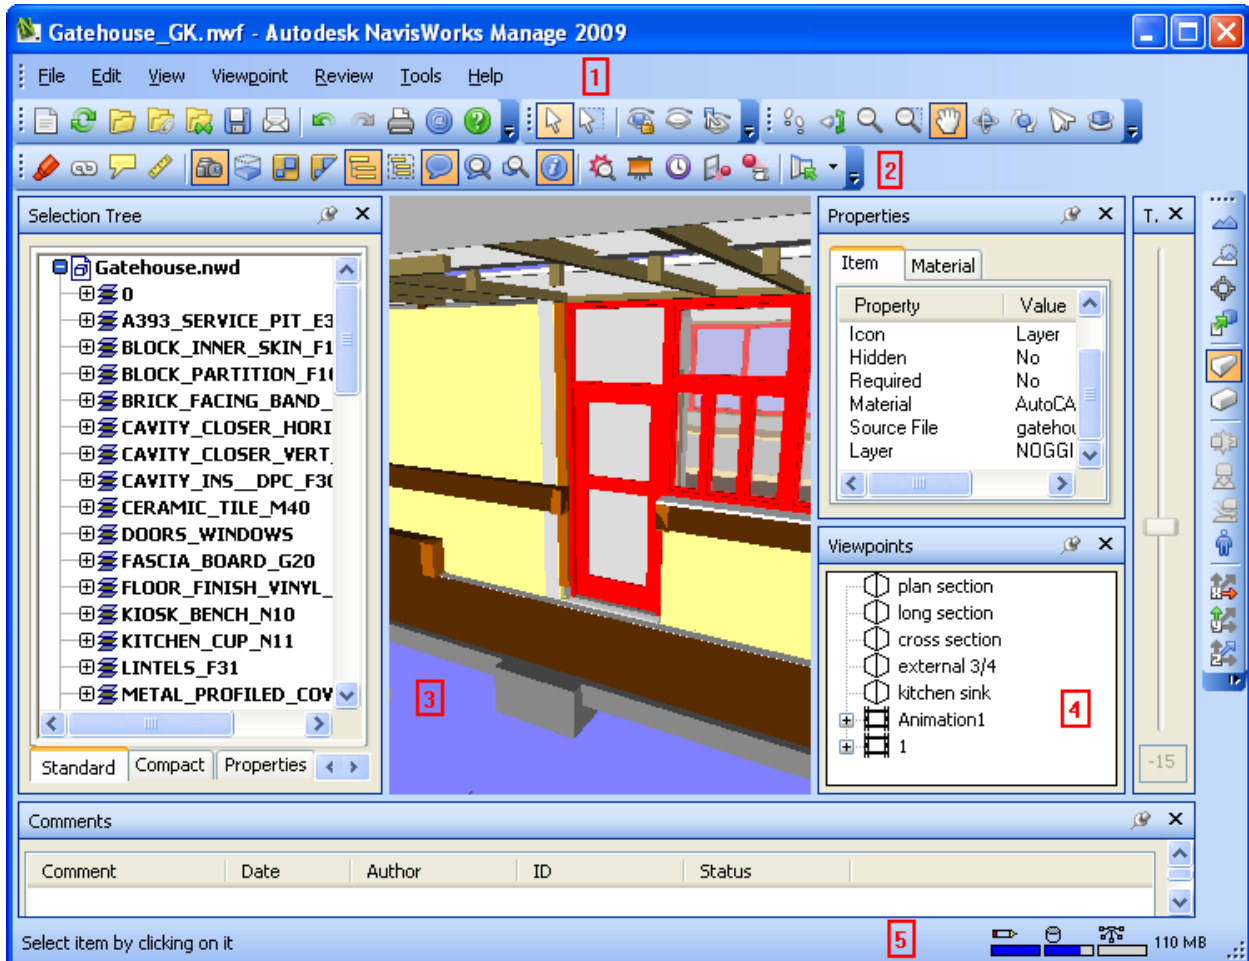


- 1 - Menu bar
- 2 - Toolbars
- 3 - Navigation window
- 4 - Control bars
- 5 - Status bar


The Main Interface Components

This section briefly describes the main interface components.

The Menu Bar

The **Menu** bar contains all commands available in NavisWorks, grouped together by similar or 'like' functionality. For example, all commands related to review functionality are located under the **Review** menu, all commands related to user assistance are located under the **Help** menu and so on.

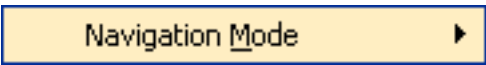When a menu has a right-pointing arrow, such as , there is a submenu associated with that choice.

When a menu item is followed by a series of dots, such as , there is a dialog box associated with that choice.

The Toolbars

NavisWorks toolbars provide quick access to frequently used commands. Every button on a toolbar includes a tooltip, which describes the function the button activates. Placing the mouse over a button displays a brief instruction on how to use this feature in the **Status** bar.


You can rearrange, open and close toolbars:

- To move a toolbar, click the dotted line at the edge of the toolbar, and drag it to a different location.
- To open or close toolbars, right-click an empty area next to the last toolbar on the screen, and choose from the list of available toolbars on the shortcut menu.

In addition to rearranging the existing NavisWorks toolbars, you can customize their appearance and content, and create your own toolbars.

Note:

To quickly personalize a toolbar, click the **Toolbar Options**  button on the right, and click **Add** or **Remove Buttons** on the shortcut menu.

When a NavisWorks toolbar button has a down-pointing arrow, such as , a submenu toolbar is associated with that choice. Click the triangle to open the menu, and select a specific option. As you move through the menu, additional help is displayed in the **Status** bar. When the option is selected, it becomes the current command and is displayed as a button in the toolbar. To repeat the command, click the button in the toolbar. To choose a different command, click the triangle again.


Some toolbar buttons enable you to choose a program mode. For example, to look around your model, you need to be in look around mode. To rotate the model, you need to be in examine mode and so on. NavisWorks remains in the selected mode until instructed otherwise. To identify the mode you are in, look at the buttons. If a button is highlighted and has a dark blue border around it, the corresponding mode is currently active.



To leave the mode, either click the same button again or choose a different mode.


Some buttons are used to toggle the display of control bars, dialog boxes, and window panes (for

example, the Presenter window, the Animator window etc.). Again, if a button is highlighted and has a dark blue boarder around it, it means that the corresponding display element is currently open.

As you open more toolbars on the screen, or resize the NavisWorks window, the toolbars may get overlapped with each other to reduce the screen clutter. When this happens, some buttons will be hidden under the overlaps. To quickly access the entire set of commands on a toolbar, click the chevron  button at the right end of the toolbar. The remaining commands available for that toolbar will appear.

The Main Navigation Window

The main navigation window (also referred to as 'main NavisWorks window' and 'main 3D navigation view') is used to interact with 3D models.

You can control how much space the main navigation window uses compared to the control bars by moving the  sliders from side to side. Alternatively, you could auto hide the control bars, or switch on full screen mode.

The main navigation window can be split vertically, horizontally, or into four segments. For more information, see “ [Splitting the Main View](#) ”.

Right-clicking in the main navigation window displays a shortcut menu of available commands. If you right-click a single item, or select one or more items and right-click, this menu contains commands related to the items. If you right-click an area that contains no items or data, the menu contains commands related to the main navigation window.

The Control Bars

Most features are accessible from the control bars (also referred to as 'palettes'). To display a control bar, click **View > Control Bars** on the menu bar, and then choose from the list of available control bars. Alternatively, click the desired control bar button on the **Workspace** toolbar.


All control bars are dockable and resizable, and will automatically lock to specific locations near to where they are moved.

Note:

Holding down the CTRL key when moving a control bar prevents it from auto docking.

Using the Docking Tool

When you drag a control bar or a window pane from its current location towards a new destination on the interface, a docking tool appears.

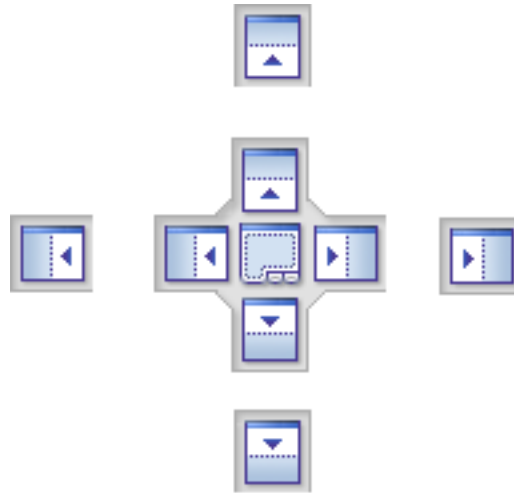

The docking stickers point towards the four edges of the interface.



When the control bar you are dragging is close to the place where you want it to dock, move the mouse over the corresponding area of the docking tool. You will see an outline of the control bar appear on the interface. To dock the control bar there, release the mouse button.

Tiling Control Bars

You can tile control bars and window panes on the interface. To do this, drag a control bar you want to tile over the control bar where you want it to be placed. When a rectangular outline appears, release the mouse button.

Auto Hiding Control Bars

You can **auto hide** control bars and window panes; this keeps the control bars active while maximizing the amount of available screen space. If auto-hide is active, the body of the control bar disappears when you move the cursor out of it, leaving only the title bar visible. Move the cursor over the title bar to display the entire control bar again.

To switch auto-hide on, click  on the title bar. To switch auto-hide off, click  on the title bar.

The Shortcut Menu

Right-clicking a control bar displays a shortcut menu of available commands. If you right-click a single item, or select one or more items and right-click, this menu contains commands related to the items. If you right-click an area that contains no items or data, the menu contains commands related to the control bar.

The Status Bar

The **Status** bar appears at the bottom of the NavisWorks screen. As this is not a toolbar, it cannot be customized or moved around.

The left-hand corner of the **Status** bar is used to display short instructions on how to use the NavisWorks features.

In the right-hand corner of the **Status** bar there are four performance indicators, that give you constant

feedback as to how NavisWorks is performing on your machine.



- The progress bar under the left hand icon (pencil) indicates how much of the current view is drawn, i.e. how much drop-out there is in the current viewpoint. When the progress bar is at 100%, the scene is completely drawn, with no drop-out. The icon will change color when it is working. Whilst the scene is being drawn, the pencil will change to yellow. If there is too much data to handle and your machine cannot process this quickly enough for NavisWorks, then the pencil will change to red, indicating a bottleneck.
- The progress bar under the central icon (disk) indicates how much of the current model is loaded from disk, i.e. how much is loaded into memory. When the progress bar is at 100%, the entire model, including geometry and property information, is loaded into memory. The icon will change color when it is working. Whilst data is being read, the disk will change to yellow. If there is too much data to handle and your machine cannot process this quickly enough for NavisWorks, then the disk will change to red, indicating a bottleneck.
- The progress bar under the right hand icon (web server) indicates how much of the current model is downloaded, i.e. how much has been downloaded from a web server. When the progress bar is at 100%, the entire model has been downloaded. The icon will change color when it is working. Whilst data is being downloaded, the web server will change to yellow. If there is too much data to handle and your machine cannot process this quickly enough for NavisWorks, then the web server will change to red, indicating a bottleneck.
- The field to the right of the icons reports the amount of memory currently being used by NavisWorks. This is reported in Megabytes (MB).

View Menu

The **View** menu gives you control over the NavisWorks interface. It allows you to hide or reveal control bars, use workspaces, and split the current view into several smaller views. It also allows you to display statistics about the currently loaded scene.

The **View** menu includes the following items:

- Control Bars
- Workspaces
- Split Vertical
- Split Horizontal
- Toggle Title Bars
- Full Screen
- Window Size
- Stereo
- Stereo Options

- Scene Statistics

Control Bars

To display a control bar:

- On the **View** menu, click **Control Bars**, and click one of the following:


Camera Tilt, Plan Thumbnail, Section Thumbnail, Viewpoints, Selection Tree, Selection Sets, Find Items, Comments, Find Comments, or Properties.

Alternatively, use the buttons on the **Workspace** toolbar.

Workspaces

NavisWorks comes with several default workspaces. You can use these workspaces as-is or modify them in accordance to your requirements.


Workspaces enable you to work in a custom, task-oriented design review environment. Each workspace contains sets of toolbars and control bars with the tools required to perform a certain job, making it easy to switch between layouts as necessary. For example, 'file aggregation', 'project review', 'object animation' and 'Clash Detective' workspaces could be set up, saved and used as appropriate. The workspaces can also be shared with other users. You could, for example, create separate workspaces for occasional and 'heavy-weight' NavisWorks users, or setup your own corporate standard.

When you first start NavisWorks a default workspace is used. You can choose a different workspace at any time by clicking **View > Workspaces**, and then selecting the required workspace from the list. Alternatively, click  on the **Workspace** toolbar, and click the desired workspace to open it.



To save the current interface layout to a new workspace:


1. Configure your workspace. For example, you can close all toolbars except the **Standard, Selection Tools, Navigation Mode**, and **Workspace**.
2. On the **View** menu, click **Workspaces > Save Workspace**.
3. In the **Save Current Workspace** dialog box, enter a name for the new workspace. You can also select the name of an existing workspace to overwrite it with your modified configuration.

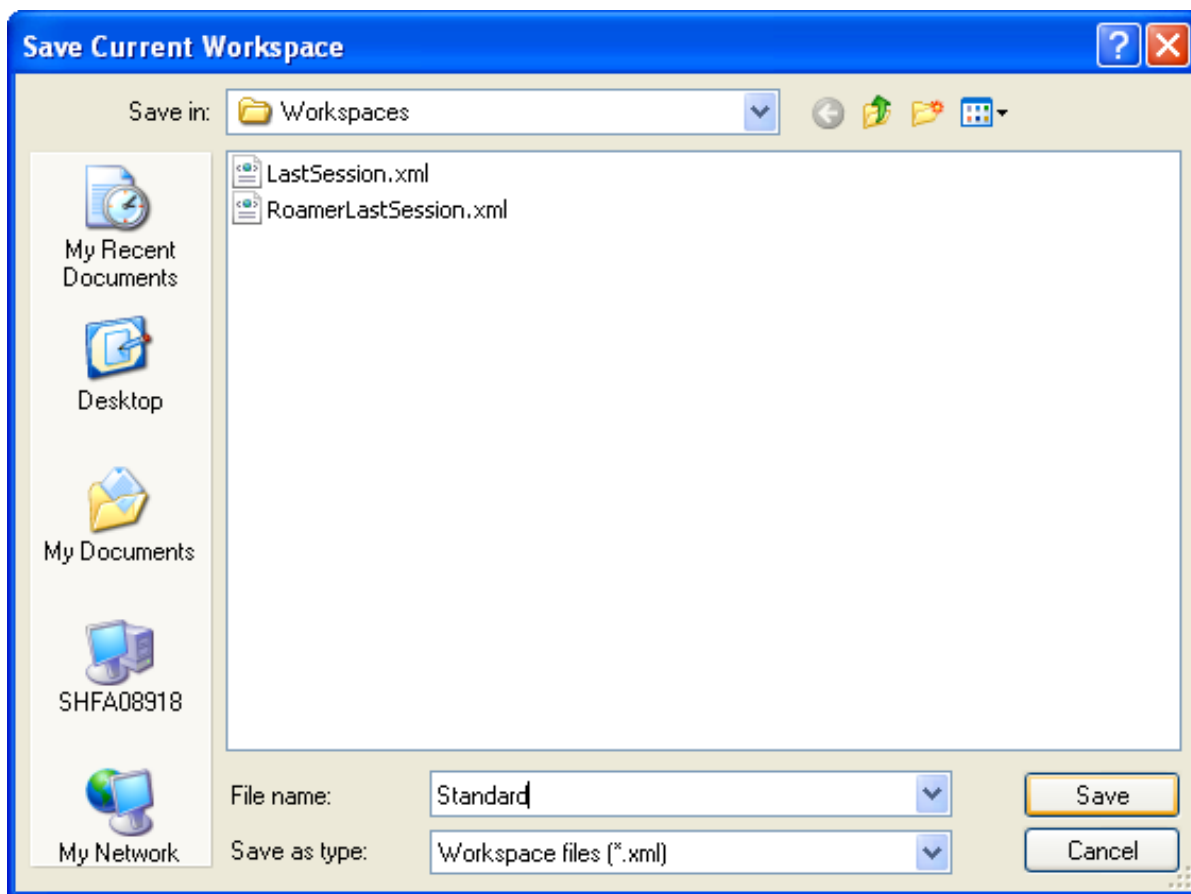

4. Click **Save**.

To load a saved workspace into NavisWorks:

1. On the **View** menu, click **Workspaces > Load Workspace**.
2. In the **Load Workspace** dialog box, browse to the folder containing the workspace, select the workspace, and click **Open**.

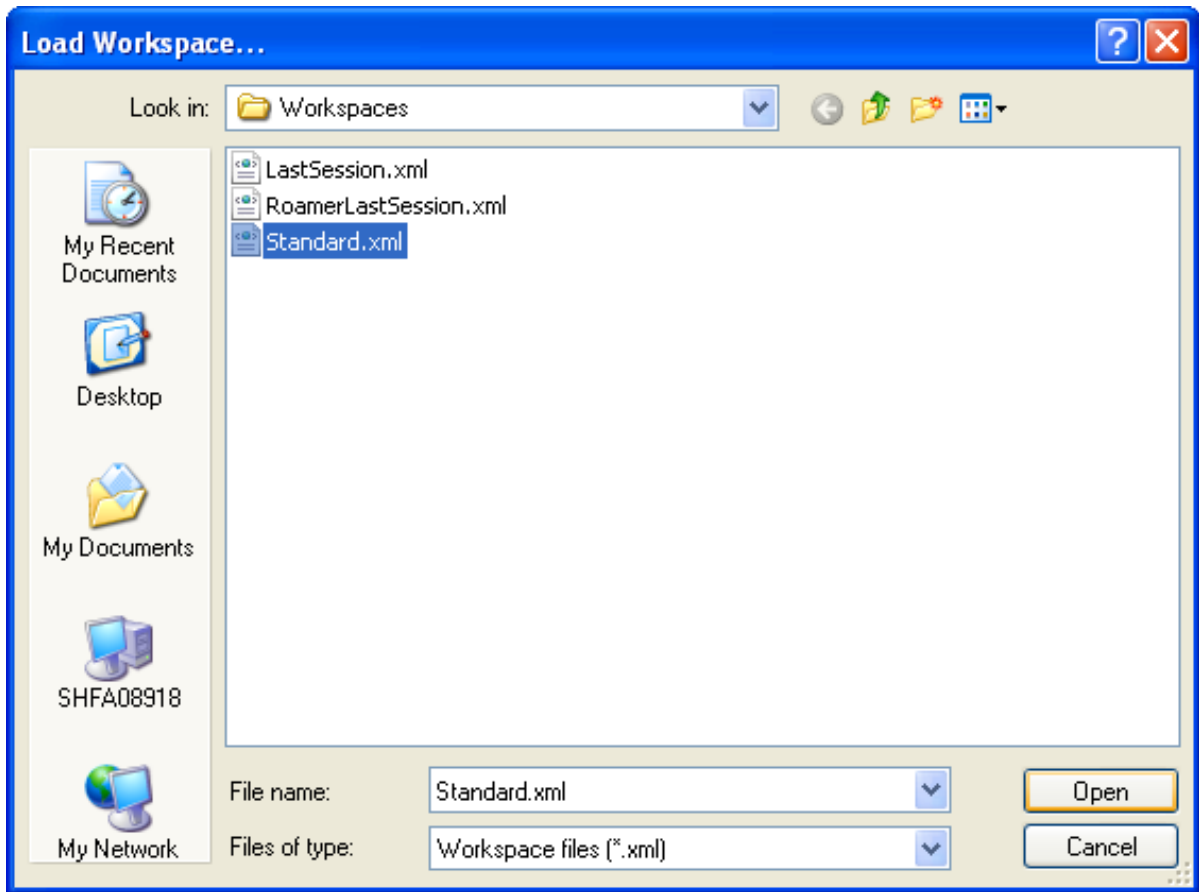

Customizing Toolbars

You can customize appearance and contents of the NavisWorks toolbars by using the **Customize** dialog box.


To open the **Customize** dialog box:

- Right-click any toolbar on the screen, and click **Customize** on the shortcut menu.

or

- On the **Tools** menu, click **Customize**.

The **Customize** dialog box is displayed.

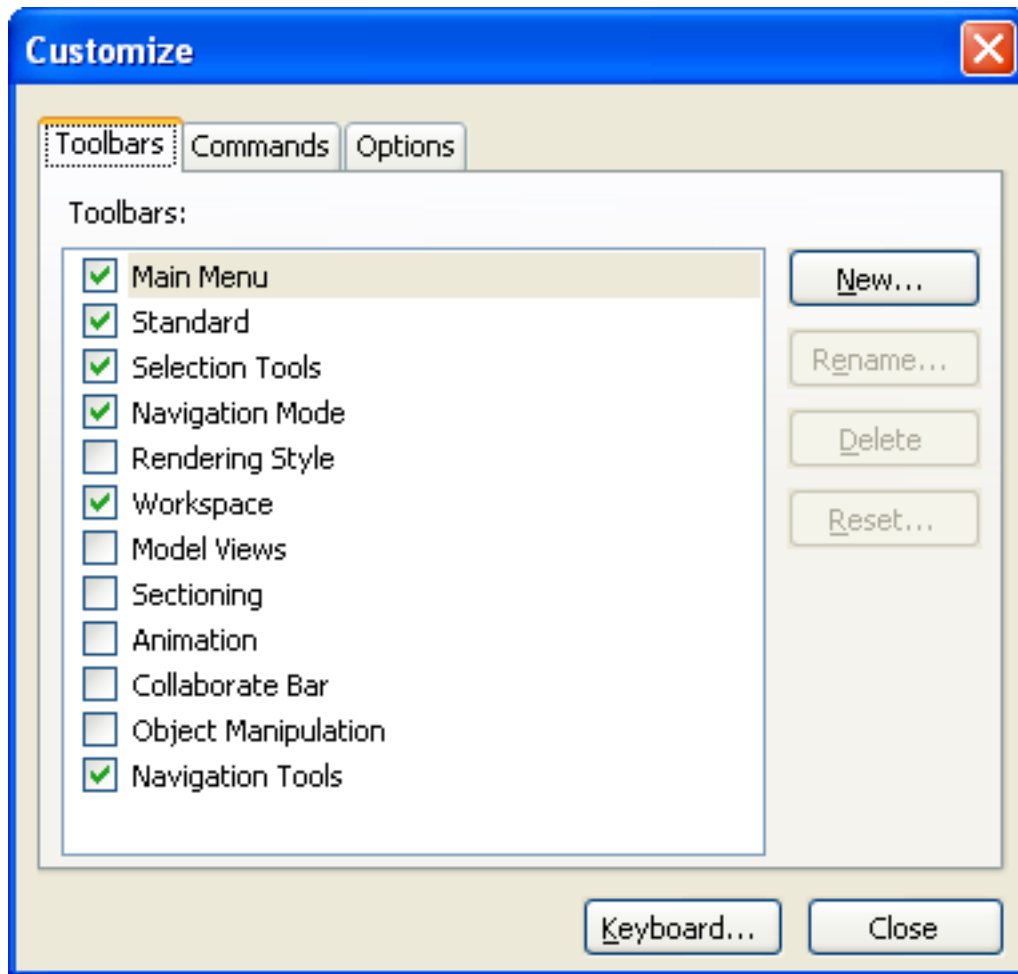


This dialog box has the following purposes:

- Displaying/hiding toolbars. On the **Toolbars** tab, select the check box in front of a toolbar's name to display it. Clear the check box to hide the toolbar.
- Changing appearance of toolbars and menus.
- Changing contents of toolbars and menus.
- Customizing keyboard shortcuts.

Personalizing Appearance of Toolbars and Menus

To personalize appearance of toolbars and menus:

1. In the **Customize** dialog box, click the **Options** tab.

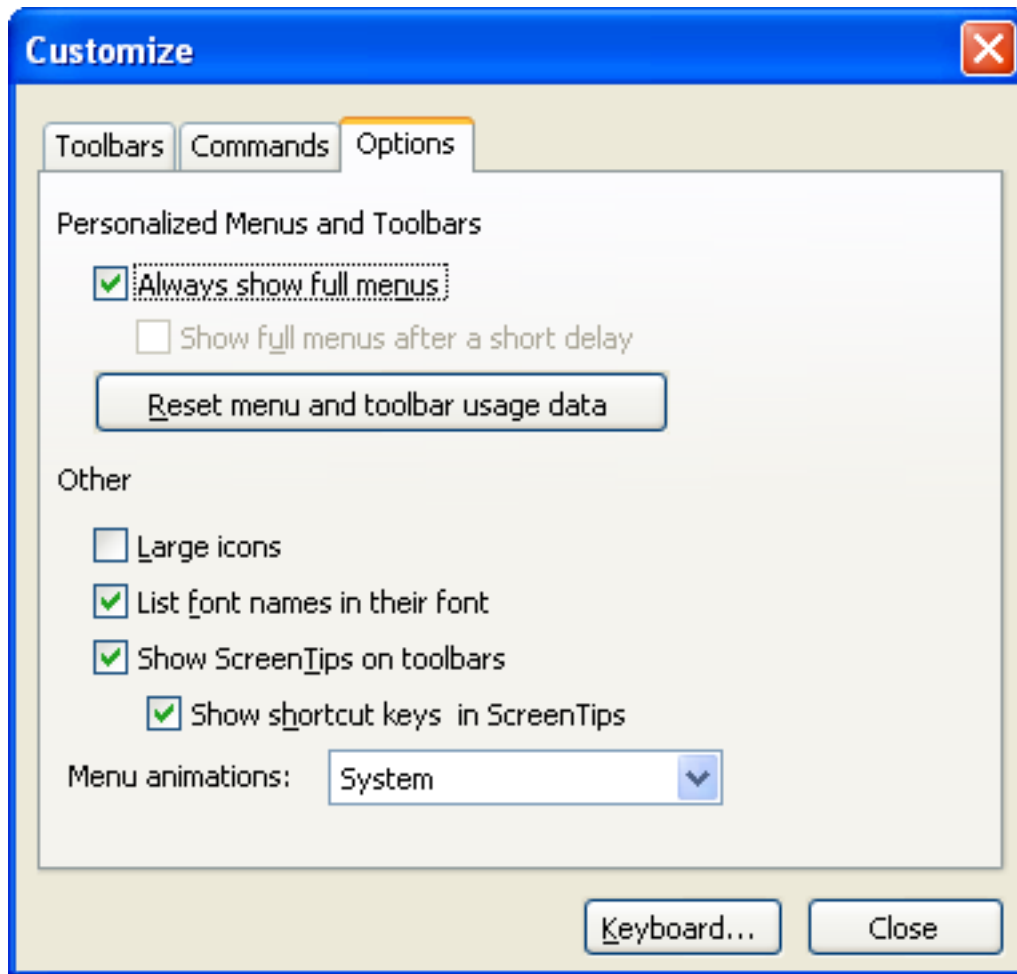

2. By default, the NavisWorks menus display all commands. If you want to show only basic and frequently used commands on short versions of the menus, clear the **Always Show Full Menu** check box.

If you want to show all commands on the menu after a brief delay when you rest the mouse pointer on an open menu, select the **Show Full Menu After a Short Delay** check box.

3. Click **Large Icons** to toggle the size of the toolbar buttons.
4. Click **List Font Names in Their Font** to toggle the way the font names are shown in font lists.
5. Click **Show ScreenTips on Toolbars** to toggle the display of tooltips when the mouse is over a toolbar button.

If the tooltips are on, you can click **Show Shortcut Keys in Screen Tips** to toggle the display of shortcut keys in tooltips.

6. To modify the way menus are animated, click the drop-down button in the **Menu Animations** field, and select one of the options.
7. Optionally, click the **Reset Menu and Toolbar Usage Data** button to restore default settings.
8. Close the dialog box.


Changing Toolbar and Menu Contents

Note:

You cannot use the procedures below to add/remove commands from shortcut menus.

To add commands:

1. In the **Customize** dialog box, click the **Commands** tab.
2. In the **Categories** field, click the group of commands you want to rearrange, for example 'Tools'.

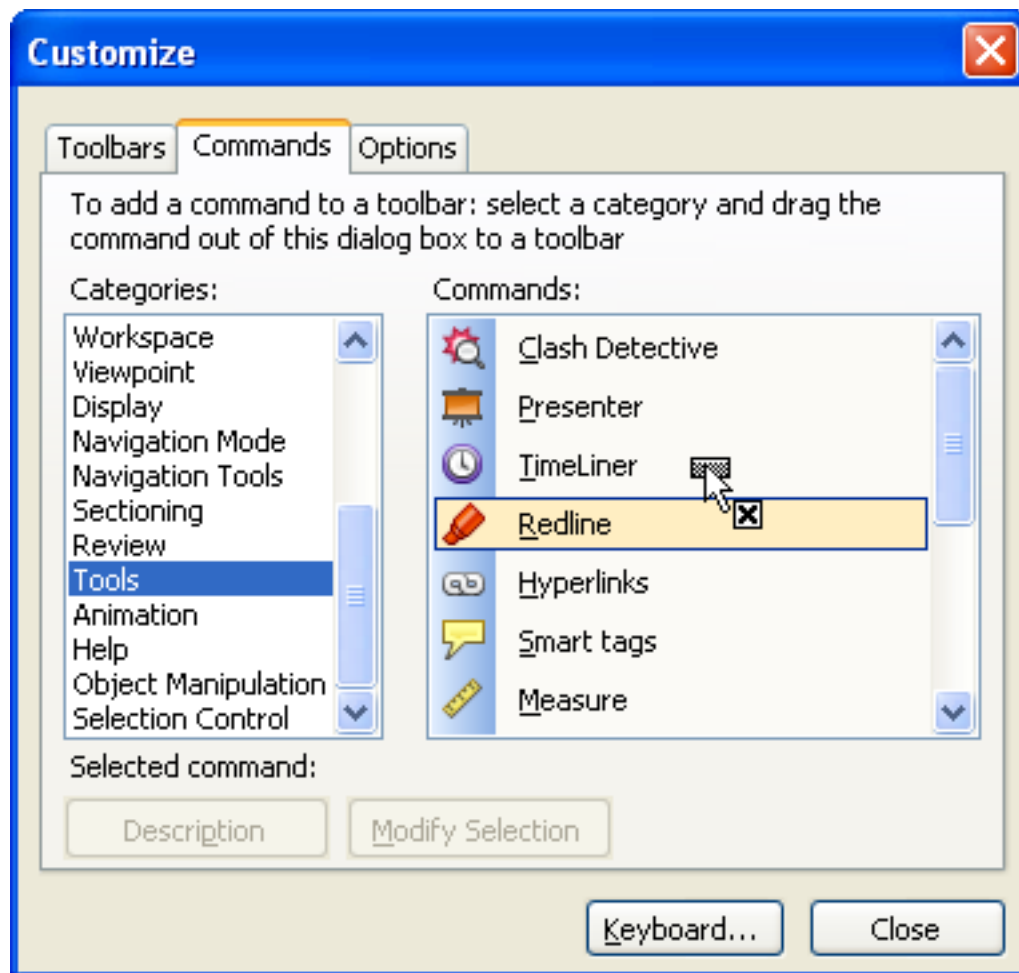

3. Drag the command from the **Commands** field to the desired location. You can either place it on one of the NavisWorks toolbars or inside one of the menus on the menu bar.

Once you've dropped the command onto a toolbar or a menu, clicking the **Description** button gives you more information about it.


4. If you want to edit the command's appearance, click the **Modify Selection** button, and then click the required option on the shortcut menu:

- **Reset** - resets the selected command to its default appearance.
- **Delete** - deletes the selected command.
- **Name** - specifies the name of the command. Place & (ampersand) in front of a letter you want to use as a keyboard shortcut. Pressing ALT together with this letter will activate the command.
- **Default Style** - uses the default style for the command.
- **Text Only** - the command is shown as text (as it's entered in the **Name** field).
- **Image and Text** - the command will use both text and image.
- **Begin a Group** - adds a separator to the left of the command if it's added to a toolbar, or above the command, if it's added to a menu.

5. Close the dialog box.

To delete commands:

1. Open the **Customize** dialog box.
2. Drag the command you want to remove from a menu or a toolbar until a cursor displays a small cross.

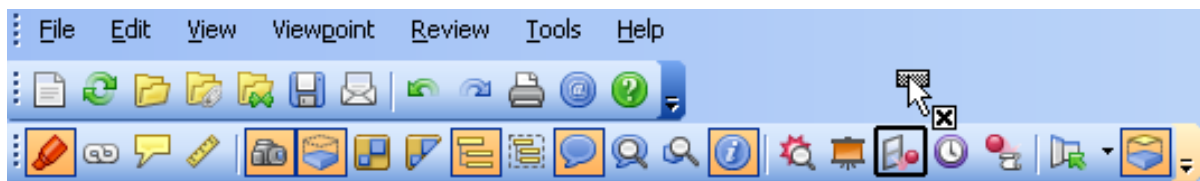

3. Release the left mouse button to delete the command.
4. Close the dialog box.

To edit commands:

1. Open the **Customize** dialog box.
2. Select the command on a menu or on a toolbar.
3. To change the command's position, simply drag it to a new place.
4. To change the command's appearance:

In the **Customize** dialog box, click the **Commands** tab.


Click the **Modify Selection** button, and click the desired option on the shortcut menu.

5. Close the dialog box.

To add a custom toolbar:

1. In the **Customize** dialog box, click the **Toolbars** tab.
2. Click the **New** button.

The **New Toolbar** dialog box is displayed.

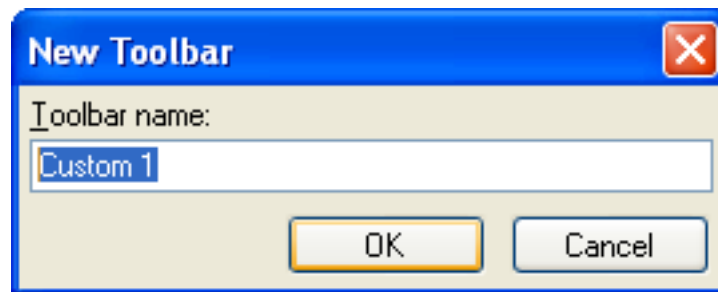

3. Enter a name for the toolbar in the **Toolbar Name** field and click **OK**. By default, new toolbars are named "Custom X" where 'X' is the next available number added to the list.

If you need a more descriptive name, you can rename your toolbar later by clicking the **Rename** button.

4. In the **Customize** dialog box, click the **Commands** tab, and drag the desired commands to your new toolbar. Alternatively, you can simply drag commands from other menus and toolbars.
5. Close the dialog box.

To delete a custom toolbar:

1. In the **Customize** dialog box, click the **Toolbars** tab.
2. Select the toolbar you don't need, and press the **Delete** button.
3. Close the dialog box.

Customizing Keyboard Shortcuts

To customize keyboard shortcuts:

1. In the **Customize** dialog box, click the **Toolbars** tab.
2. Click the **Keyboard** button.

The **Customize Keyboard** dialog box is displayed.



3. In the **Categories** field, click the group that contains the command to which you want to assign a shortcut.
4. In the **Commands** field, click the actual command.
If the command has a shortcut assigned to it, it is displayed in the **Current Shortcut** field.
5. In the **Select a New Shortcut** drop-down list, click the shortcut key combination you want to use.
6. Click the **Assign** button.

Note:













Clicking **Remove** removes the shortcut assignment for the selected command, and clicking **Reset All** restores the default shortcut assignments.









7. Close the dialog box.

Workspace Toolbar

The **Workspace** toolbar gives you control over the NavisWorks interface. You can personalize this toolbar, if you want.



-  Redline
-  Hyperlinks
-  Smart Tags
-  Measure
-  Viewpoints
-  Sectioning
-  Plan Thumbnail
-  Section Thumbnail
-  Selection Tree
-  Selection Sets
-  Comments
-  Find Comments

-  Find Items
-  Properties
-  Clash Detective
-  Presenter
-  TimeLiner
-  Animator
-  Scripter
-  Workspaces

Customizing the Main Window

You can split the main scene into a number of segments, each of which can be navigated separately. You may find this useful when comparing lighting and rendering styles, or animating different parts of your model etc.

You can also adjust the size of the main window, or view the model in full screen mode.


Splitting the Main View

You can look at several views of your model simultaneously by splitting the main NavisWorks window.

To create a view and make it dockable:

1. To split your current view horizontally, click **View > Split Horizontal** on the menu.
2. To split your current view vertically, click **View > Split Vertical** on the menu.
3. To adjust the default window split, hover the mouse over a vertical or a horizontal dividing line, and drag the black sliders into the desired position.
4. Click **View > Toggle Title Bars** on the menu.

All of your custom views now have title bars. By default, new views are named "ViewX" where 'X' is the next available number.

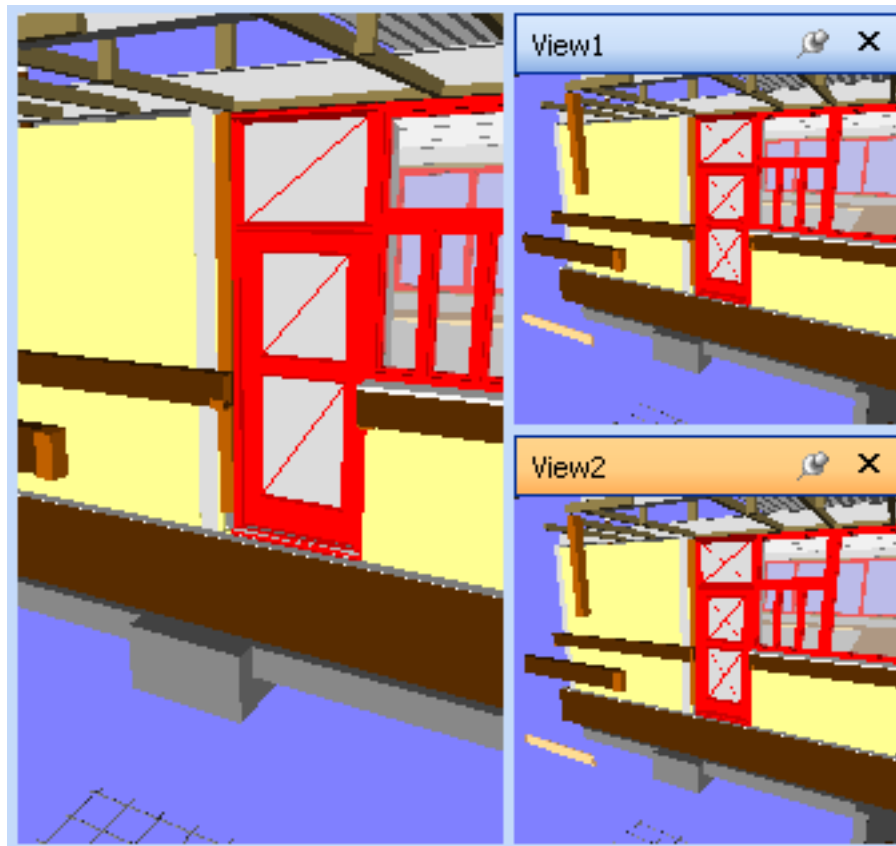


The view windows with title bars are resizable, and can be docked and auto hidden the same way as control bars.

Note:

The recording and playback of animations will occur in the most recently used view. Each separate view remembers the navigation mode being used.

To delete views:

- To delete views, switch on the title bars, and click  to close each window.

If you need to use different views, but don't want to have any splits in the main NavisWorks window, consider moving your views elsewhere, for example, you can tile them on the **Viewpoints** control bar.

Full Screen Mode

Selecting **Full Screen** or pressing the **F11** key puts NavisWorks into Full Screen mode; the main 3D


navigation view takes up the full screen with no interface showing. Pressing the **F11** key for a second time turns full-screen mode off. Full screen mode will always go to full screen on the primary display. If two monitors are available, the interface can be placed on one whilst the main 3D view renders in full screen on the other.

Sizing of Navigation Window

NavisWorks allows you to specify the size of the main navigation window. This can be of particular use if you are composing a scene for image or animation export. By setting the window size to the same proportions as your intended output, you can visualize exactly how it will result.

Explicit sizing of the main navigation window:

1. On the **View** menu, click **Window Size**. The **Window Size** dialog box is displayed.

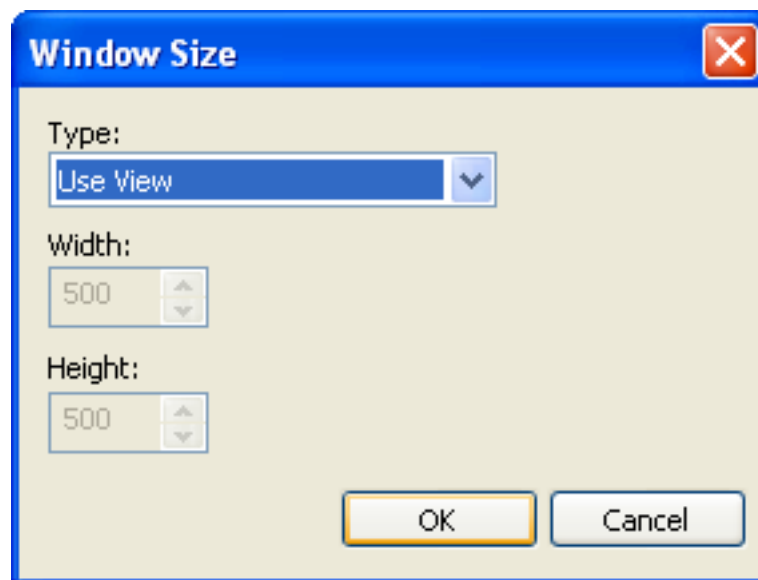

2. From the **Type** drop-down list, select the sizing type you wish to specify:
 - Select **Use View** to maximise the window size.

Or

 - Select **Explicit** and enter the exact width and height you wish the window to be.

Or

 - Select **Use Aspect Ratio** and enter the height you require and the width will be automatically calculated from the aspect ratio of the current view.
3. Click **OK** to set the window size, or **Cancel** to return to NavisWorks without changing it.

Stereo Rendering

Stereoscopic viewing in NavisWorks allows the viewing of the 3D model through stereo-enabled hardware, including active and passive stereo viewing glasses in conjunction with both CRT screens and dedicated projectors.

This feature requires the host computer have an OpenGL graphics card with stereo support. If this hardware is available, and has the correct driver and display settings, stereo can be turned on by selecting the **View, Stereo** menu option, otherwise this option will be greyed-out.

Note:

Some drivers require stereo to be explicitly enabled in the driver and may require lower color or resolution settings before stereo becomes available.


Selecting this menu option puts the video output into stereo mode; the view will look blurred without the correct glasses being worn. If the camera is in orthographic mode, it will need to be set to perspective for the effect to work correctly.

Note:

As the view for each eye has to be rendered separately it is not possible to support incremental filling in of detail in stereo mode. The detail appears when rendering is complete. Progress can be seen using the bar in the status area, and it is still possible to interrupt and start interacting again at any time.

Stereo Options

1. Go to **View, Stereo Options....** The options dialog will be displayed.

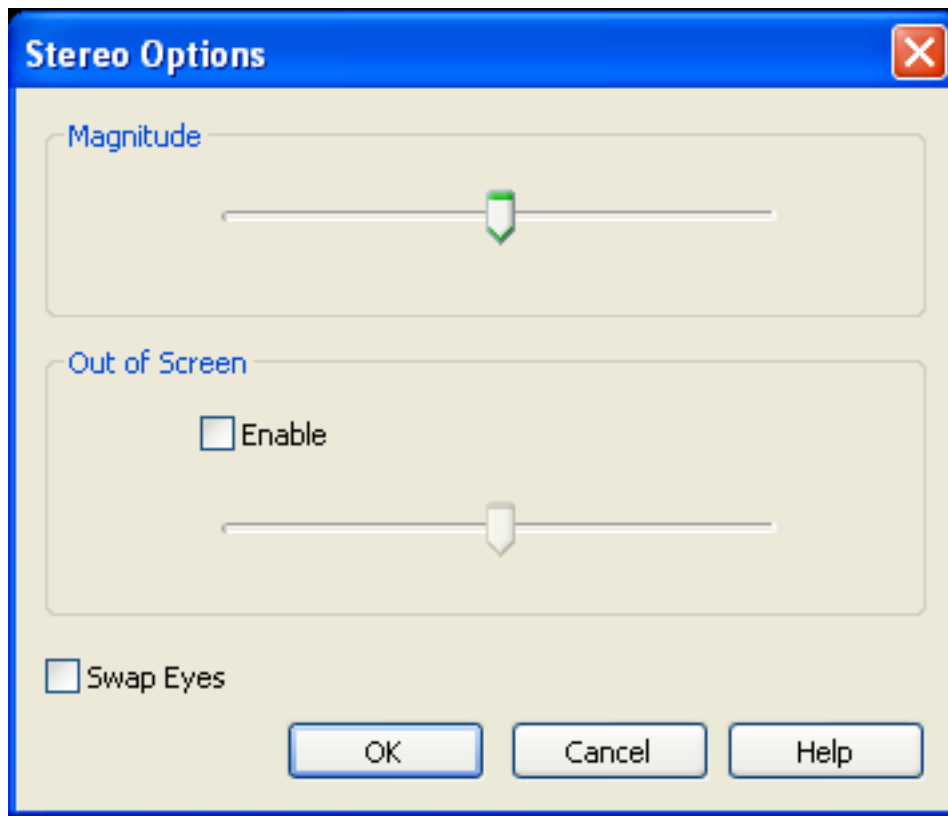

2. Slide the **Magnitude** bar to vary the strength of the stereo effect.
3. Sliding the **Out of screen** bar, when enabled, and when using a focal point based navigation mode (examine, orbit, turntable, etc.), will position the model so that parts closer than the focal point appear in front of the screen, with the rest behind. The slider controls the balance, moving objects more or less out of the screen. When using any other navigation mode (walk, fly, etc.), the focal point is set so that any avatar will be level with the screen. Objects between you and the avatar will appear in front of the screen.
4. Check the **Swap Eyes** check box to swap the left and right eyes over. This can be useful when moving from CRT to a large screen projector and back.
5. Click **OK** to set the options or **Cancel** to exit the dialog without setting them.

Scene Statistics

This displays a list of the files contributing to the scene, and the different graphic elements that make up the scene, along with which of these have been processed or ignored when loaded.

Other useful statistics are the bounding box of the entire scene and the total number of primitives (triangles, lines, points) in the scene.

To view scene statistics:

- Go to **View, Scene Statistics** to display all the statistics about the current scene.

The number of each type of element is listed together with which have been ignored or processed in creating the scene.

Units

NavisWorks has the concept of what unit the scene is presented in. This is most useful when measuring items, setting tolerances for clash detection, or sizes of textures. There is a single scene unit that is set from the **Global Options** dialog and this unit is used throughout the interface whenever appropriate.


There is a default unit setting for each file type so that when files are opened, they are scaled appropriately to the scene's units. They can, of course, be rescaled after if the units turn out to be wrong for the scene.

Units Options

Setting units options:

1. On the **Tools** menu, click **Global Options**.
2. Expand the **Interface** node in the **Options Editor** dialog box, and click the **Display Units** option.

The Display Units page is displayed.

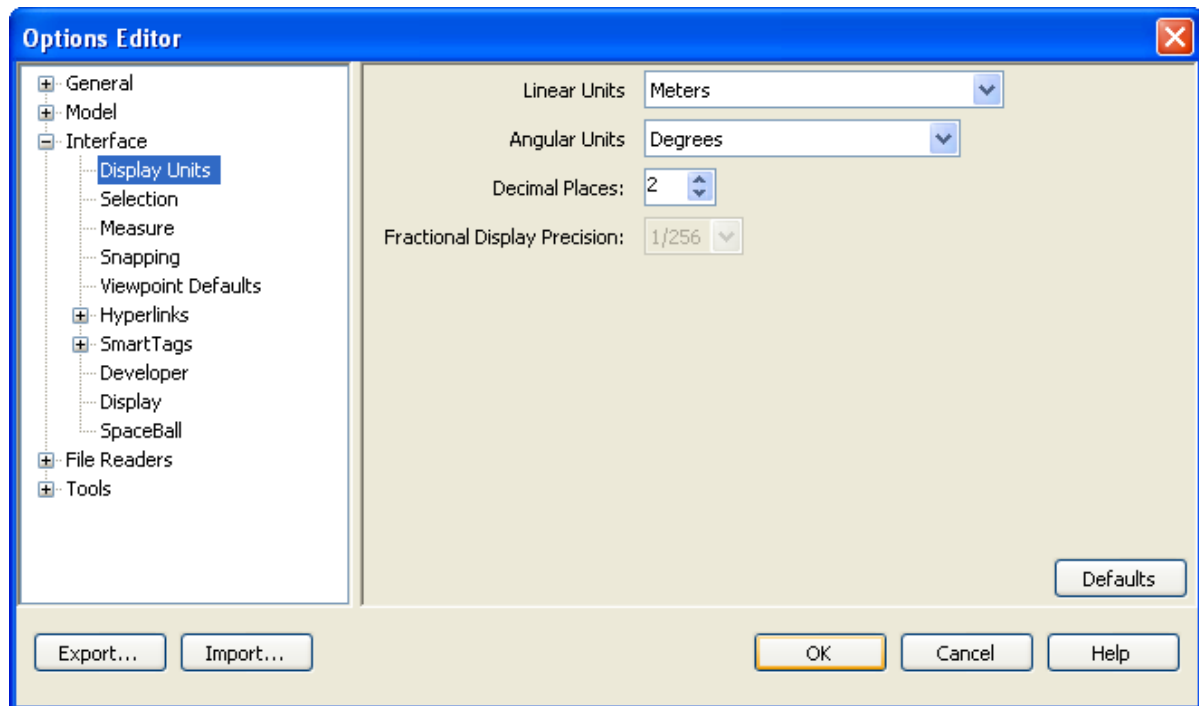

3. Choose the **Linear Units** from the list. You should be able to choose the exact format you wish.
4. Choose the **Angular Units** from the list.
5. Enter the number of decimal places you want to see throughout the interface for your units in the **Decimal Places** box. If the unit chosen is a fractional unit, rather than decimal unit, then you have

the choice of what level of fraction to display the units from the **Fractional Display Precision** drop-down list.

6. Click **OK** to set the options or **Cancel** to exit the dialog without setting them.


Profiles

NavisWorks can be adjusted to your level of CAD technical knowledge. By default, a standard profile is used. If necessary, you can use a developer profile to display additional object properties.

Using a developer profile:

1. On the **Tools** menu, click **Global Options**.
2. Expand the **Interface** node, and click the **Developer** option.

The Developer page is displayed

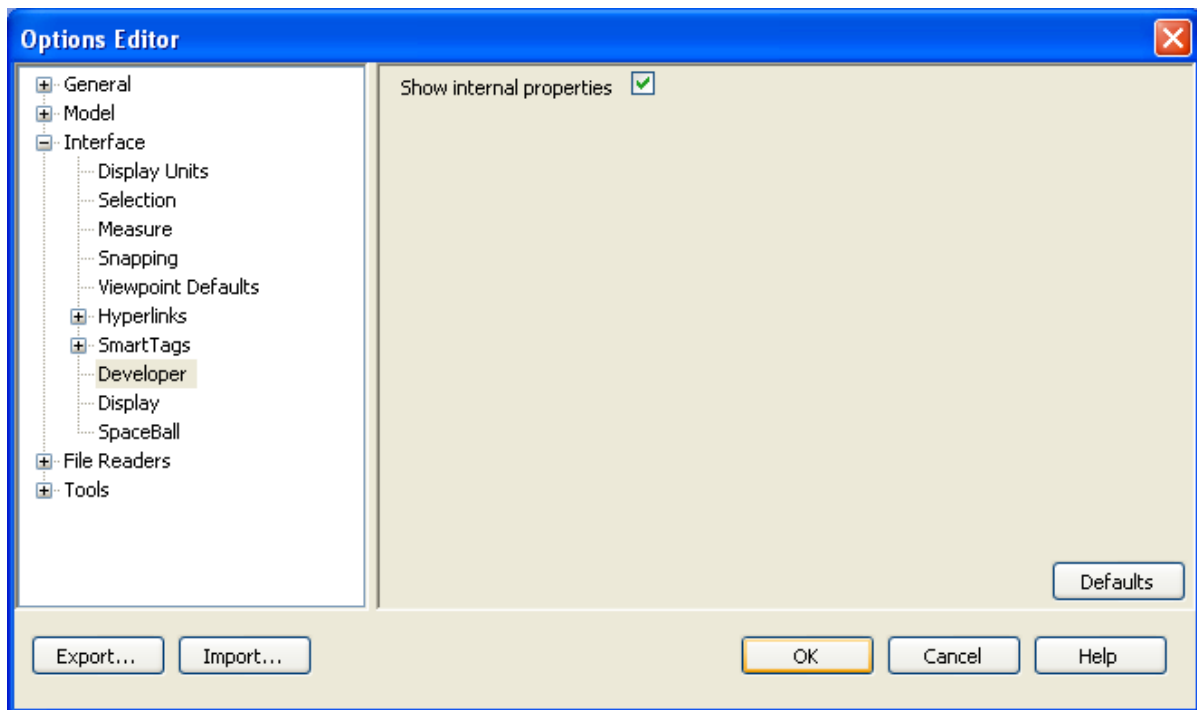

3. Select the **Show Internal Properties** check box to display additional object properties.

Note:

Now the **Geometry** tab and **Transform** tab will be shown in the **Properties** control bar for the associated models and items.

4. Click **OK** to set the profile or **Cancel** to exit the dialog box without setting it.

Search Directories

NavisWorks searches for a variety of configuration files in subdirectories of three standard directories. These files can be overridden on a per user, all users or per installation basis. The search directories are :

- Application Data\Autodesk NavisWorks Manage 2009 **within the current user profile.**
Usually C:\Documents and Settings\user\Application Data\Autodesk NavisWorks Manage 2009 where user is the name of the current user.
- Application Data\Autodesk NavisWorks Manage 2009 **within the all users default profile.**
Usually C:\Documents and Settings\All Users\Application Data\Autodesk NavisWorks Manage 2009.
- **Within the NavisWorks install directory.** Usually C:\Program Files\Autodesk NavisWorks Manage 2009.

Chapter 23. Tools

The **Tools** menu in NavisWorks gives access to a series of useful tools and options.

The **Tools** menu includes the following items:

- Clash Detective
- Presenter
- TimeLiner
- Data Tools
- Animator
- Scripter
- Compare
- Redline
- Hyperlinks
- Smart Tags
- Measure
- Animation
- Background Color
- File Options
- Customize
- Global Options

Comparing Models

The **Compare** tool becomes available when *exactly* two items are selected. These can be any types of item, but the compare tool is most useful when comparing two versions of the same model. During the comparison, NavisWorks will start at each item and recursively travel down each path, as seen in the standard selection tree, comparing each item it comes across in terms of the criteria requested.


When the comparison has finished, you have the option of saving the differences as Selection Sets with comments describing the differences in more detail.

Comparing two items

1. Select exactly two items in the scene (see [Chapter 13, *Selecting Items*](#) for more information on how to do this).

2. On the **Tools** menu, click **Compare**.

The **Compare** dialog box is displayed.

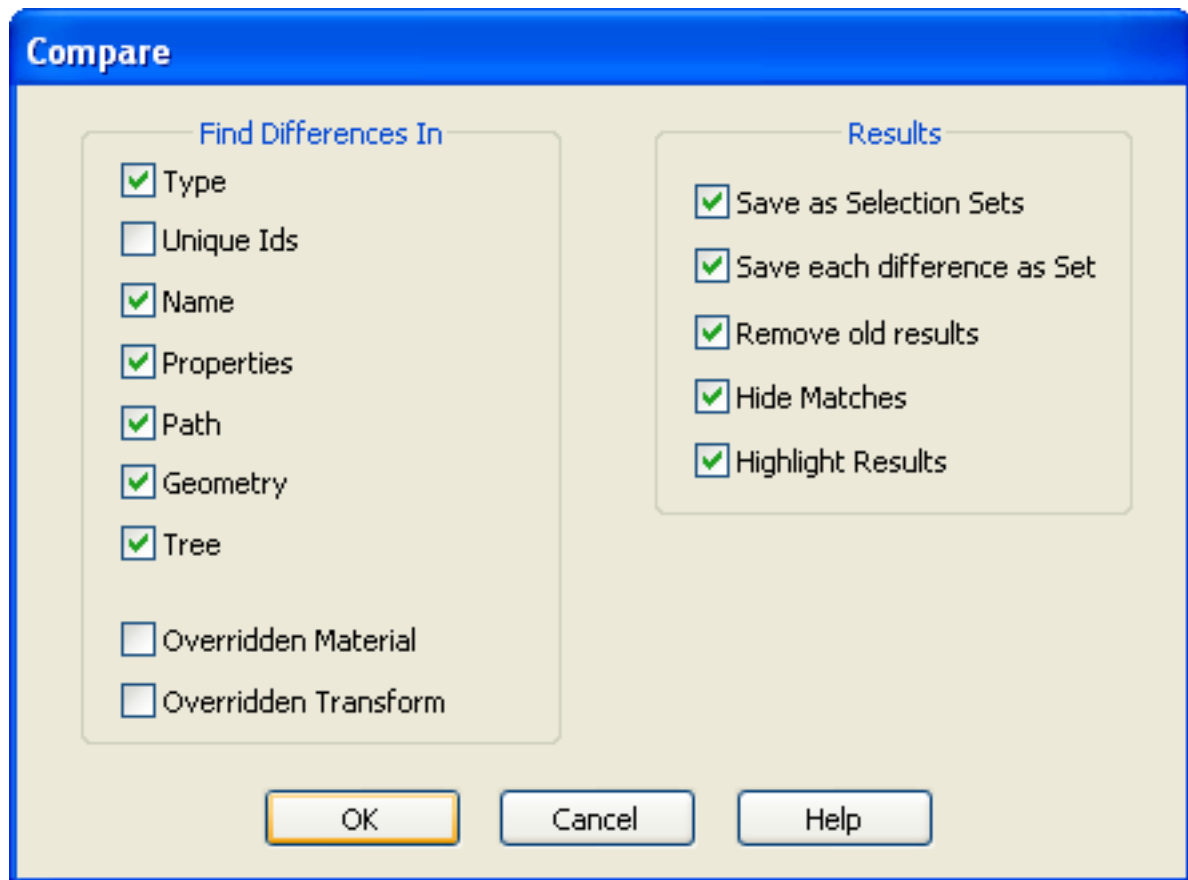

3. In the **Find Differences In** section of the dialog, check all the boxes of the criteria that you want NavisWorks to compare for differences between the two items. **Overridden Material** and **Overridden Transform** relate to changing the color and/or transparency in NavisWorks and changing a file's origin, scale or rotation since loading into NavisWorks, so these are unchecked by default. All the other criteria relate to properties of items from the original CAD model.
4. Check **Save as selection set** if you want to save the selected items that you are comparing between as a selection set. You can then use this for later comparisons between the same items.
5. Check **Save each difference as set** if you want to save the resulting differences found in the comparison between the two items as a selection set for later analysis. The selection set will also have a comment attached detailing the differences in more depth.
6. Check **Remove old results** if you want to remove any selection sets resulting from a previous comparison, in order to reduce confusion when looking at the results.
7. Check **Hide matches** if you want to hide all items that turn out to be the same in the comparison, when the comparison finishes. To show them again, reset all hidden items.
8. Check **Highlight results** if you want to highlight each resulting difference with a color override, when the comparison finishes. Reset the color using the reset material command.
9. Click **OK** to start the comparison, or **Cancel** to return to NavisWorks without making any comparison.

At any time during the comparison, you can click on **Cancel** on the **Exporting** dialog to abort the comparison.

The colors of the resulting highlights are as follows:

- White for items that match;
- Red for differences between items;
- Yellow for things found in the first item that aren't in the second;
- Cyan for things found in the second item that aren't in the first.

Chapter 24. Options

There are two types of options: File Options and Global Options. These are both accessed from the **Tools** menu. File options are saved in NavisWorks files (.nwf or .nwd) and reinstated when opening it. Global options, on the other hand, are set for *all* NavisWorks sessions.

File Options

These options are saved into NavisWorks files and re-loaded when opening these files into NavisWorks. They are predominantly concerned with the appearance of the model and the speed of navigation around it.

To get to the File Options dialog, go to **Tools, File Options**. You will get a tabbed dialog box offering one of the following five file options:

- Culling. See “ [Culling Options](#) ”.
- Orientation. See “ [Orientation Options](#) ”.
- Speed. See “ [Speed Options](#) ”.
- Head light. See “ [Head Light options](#) ”.
- Scene lights. See “ [Scene Lights Options](#) ”.
- DataTools. See “ [Adding Database Links](#) ”.


Location Options

These options enable centralized sharing of global NavisWorks settings, workspaces, datatools, avatars, Clash Detective rules, Presenter archives, custom Clash Detective tests, object animation scripts etc. The settings can be shared across an entire project site, or across a specific project group depending on the required level of granularity.

Setting location options:

1. On the **Tools** menu, click **Global Options**.
2. Expand the **General** node in the **Options Editor** dialog box, and click the **Locations** option.

The Locations page is displayed:

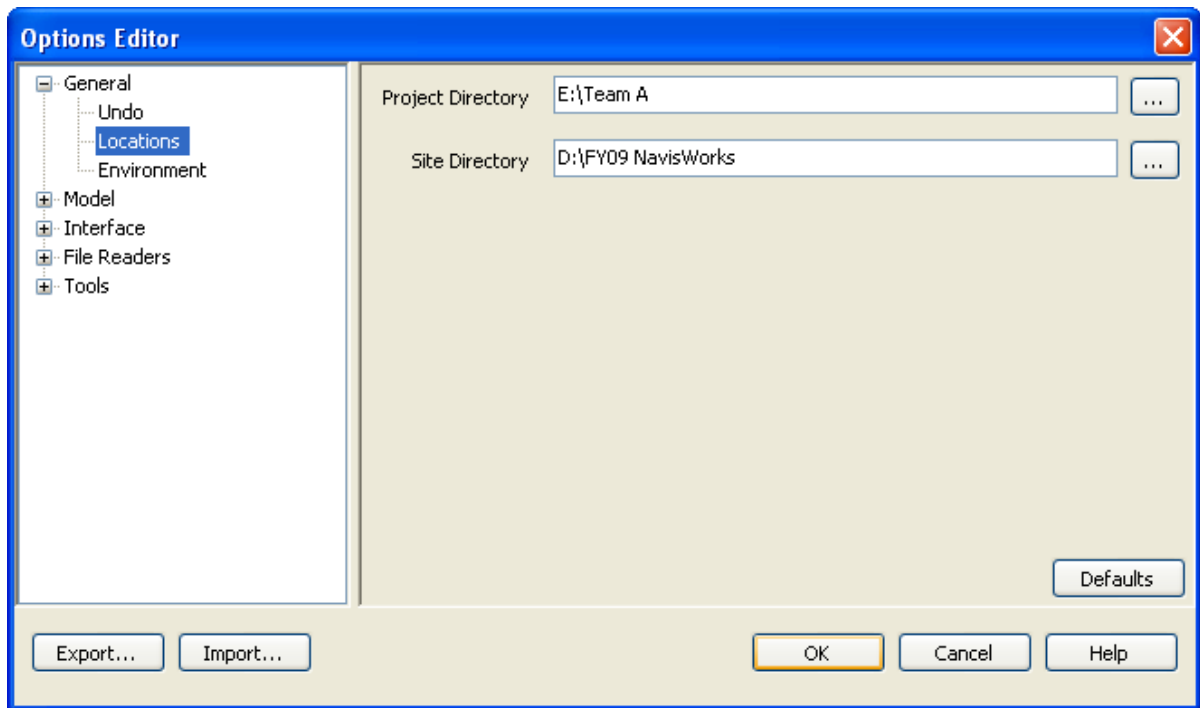

3. In the **Project Directory** field, browse to the directory that contains the NavisWorks settings specific to your project group.
4. In the **Site Directory** field, browse to the directory that contains the NavisWorks settings standard across the entire project site.
5. Click **OK** to save the changes or **Cancel** to exit the dialog without saving them.

Note:


When you run NavisWorks for the first time, the settings are picked up from the installation directory. Subsequently, NavisWorks examines the current user profile and the all users profile on the local machine, and then checks the settings in the **Project** directory and the **Site** directory. The files in the **Project** directory take precedence.

Environment Options

Setting environment options:

1. On the **Tools** menu, click **Global Options**.
2. Expand the **General** node in the **Options Editor** dialog box, and click the **Environment** option.

The Environment page is displayed:

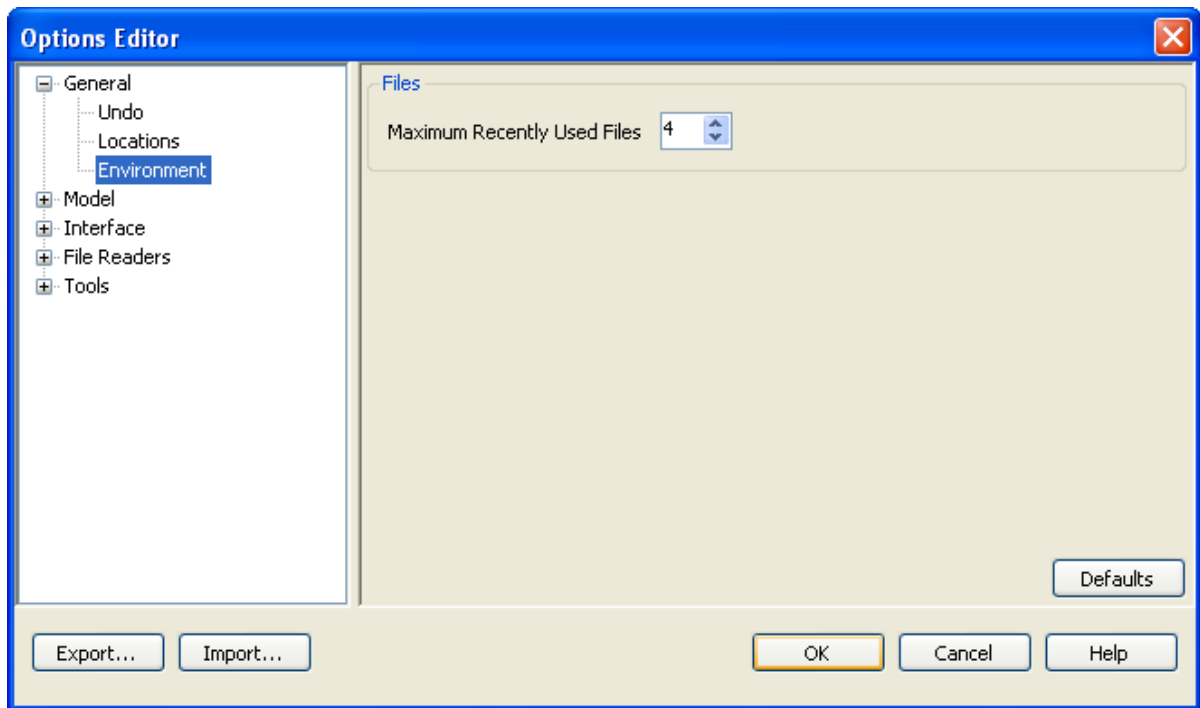


3. Enter the desired number into the **Maximum Recently Used Files** to specify how many file shortcuts NavisWorks can remember. By default, shortcuts to the 4 most recently opened files can be displayed.
4. Click **OK** to save the changes or **Cancel** to exit the dialog without saving them.

Global Options

These options are persistent across NavisWorks sessions and are not saved into NavisWorks files.

The **Options Editor** can be accessed via the **Tools** menu, or it can be launched as a separate application. To do this, go to **Start > Programs > Autodesk > Autodesk NavisWorks Manage 2009 > Options Editor**. The options are grouped together, and presented in a tree structure, making it quicker to find and change them.

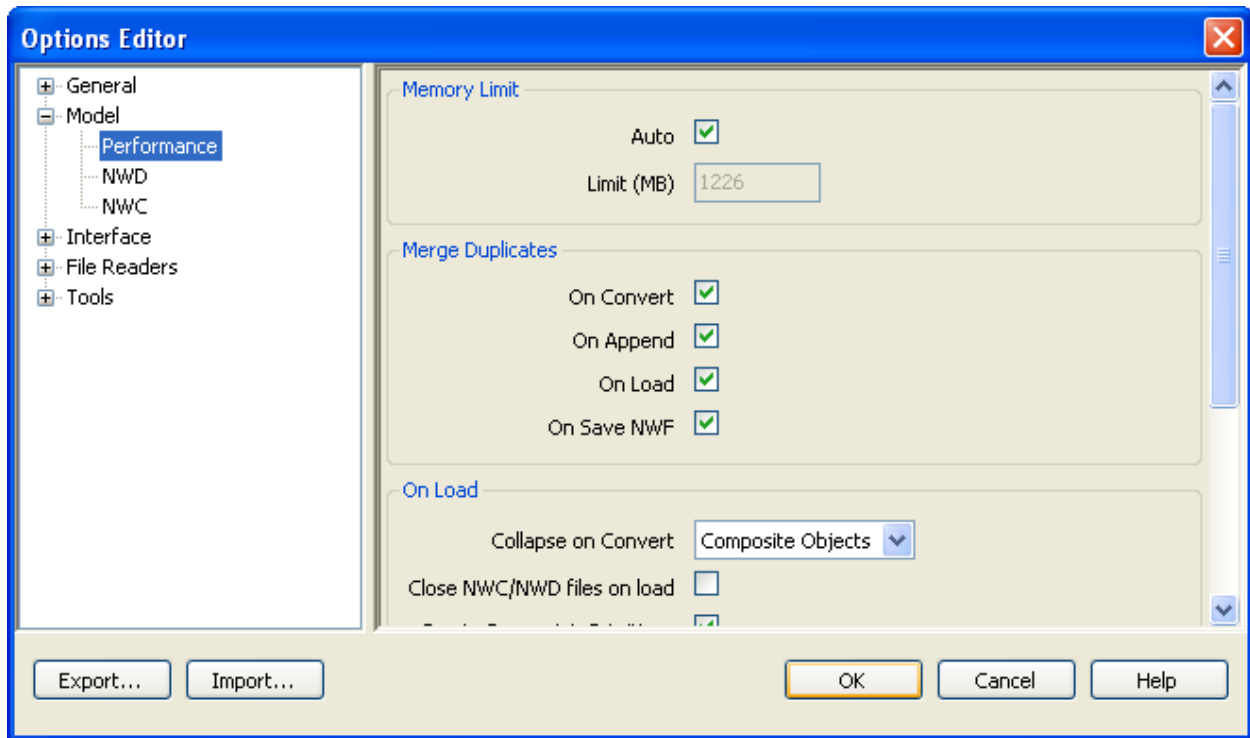

Options can be exported and imported, making it quick and easy for project managers, or systems administrators, to ensure the NavisWorks settings on all machines are identical.

Configuring Global Options

The options are presented in the dialog box in a hierarchical tree structure. The following categories are available:

- General
- Model
- Interface
- File Readers
- Tools

General Options

You can configure:

- Buffer Size. See “[Undo Options](#)”.
- File Locations. See “[Location Options](#)”.
- Number of Recent File Shortcuts to Store. See “[Environment Options](#)”.

Model Options

You can configure:

- NavisWorks Performance. See “ [Performance Options](#) ”.
- NWD File Parameters. See “ [NWD Options](#) ”.
- NWC File Parameters. See “ [NWC Options](#) ”.

Interface Options

You can configure:

- Display Units. See “ [Units Options](#) ”.
- Selection and Highlighting Parameters. See “ [Selection Options](#) ”, and “[Highlighting Objects](#)”.
- Measurement Parameters. See “ [Measure Options](#) ”.
- Snapping. See “[Snapping](#)”.
- Viewpoints. See “ [Viewpoints Options](#) ”.
- Hyperlinks. See “ [Hyperlinks Options](#) ”.
- Smart Tags. See “ [Smart Tags Options](#) ”.
- Profiles. See “ [Profiles](#) ”.
- Display Parameters. See “ [Display Options](#) ”.
- SpaceBall Parameters. See “ [Using a SpaceBall](#) ”

File Readers Options

You can configure:

- 3DS. See “ [3DS File Reader Options](#) ”.
- ASCII Laser Scan. See “ [ASCII Laser Scan File Reader Options](#) ”.
- DGN. See “ [DGN File Reader Options](#) ”.
- DWF. See “ [DWF File Reader Options](#) ”.
- DWG/DXF/SAT. See “ [DWG and DXF File Reader Options](#) ”.
- Faro Scan. See “ [Faro Scan File Reader Options](#) ”.
- IFC. See “ [IFC File Reader Options](#) ”.
- IGES. See “ [IGES File Reader Options](#) ”.

- Inventor. See “ [Inventor File Reader Options](#) ”.
- Leica Scan. See “ [Leica Scan File Reader Options](#) ”.
- MAN. See “ [MAN File Reader Options](#) ”.
- PDS. See “ [PDS Files](#) ”.
- Riegl Scan. See “ [Riegl Scan File Reader Options](#) ”.
- RVM. See “ [RVM File Reader Options](#) ”.
- SKP. See “ [Sketchup SKP File Reader Options](#) ”.
- STEP. See “ [STEP File Reader Options](#) ”.
- STL. See “ [STL File Reader Options](#) ”.
- VRML. See “ [VRML File Reader Options](#) ”.
- Z+F. See “ [Z+F Scan File Reader Options](#) ”.

Tools Options


- Presenter. See “ [Presenter Options](#) ”.
- TimeLiner. See [Chapter 46, TimeLiner Options](#) .
- Scripter. See “ [Send Message](#) ”.
- Animator. See “ [The Manual Entry Bar](#) ”.

Importing and Exporting Global Options

To export Global Options:

1. On the **Tools** menu, click **Global Options**.
2. In the **Options Editor** dialog box, click the **Export** button.

The **Select Options to Export** dialog box is displayed:

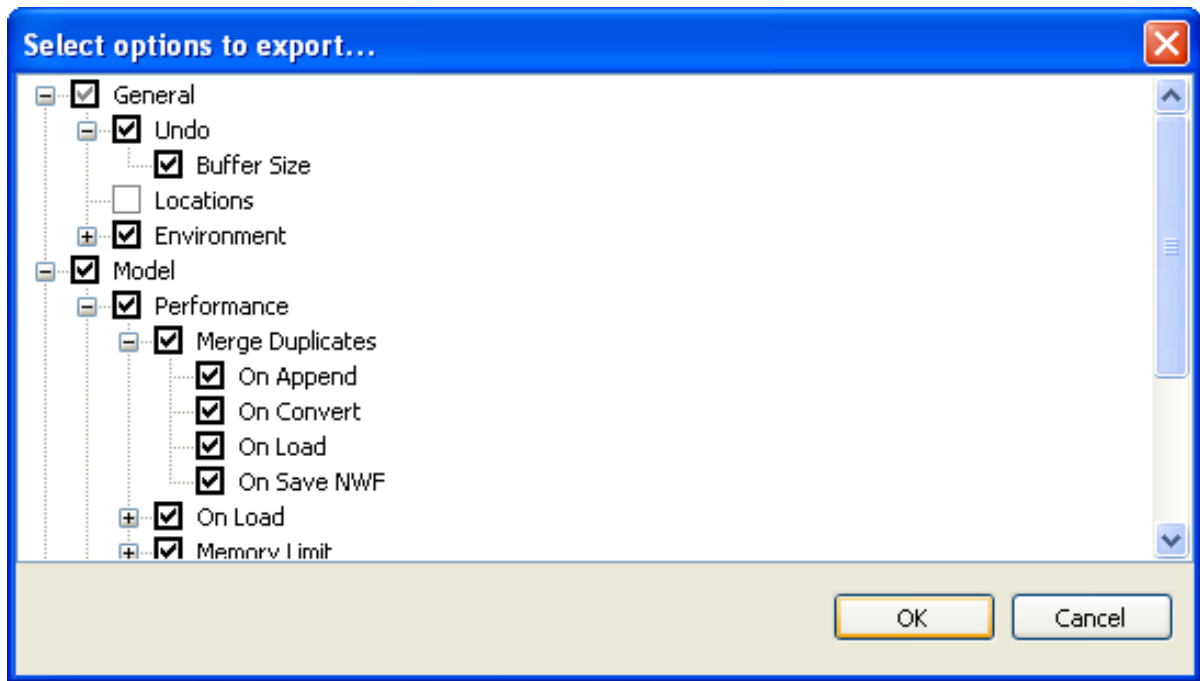


3. Select the check boxes for all options you want to be exported (or 'serialized'). If an option cannot be exported, it is greyed out.

Note:

To quickly select/deselect all options for a given category, use the top-level check boxes. For example, selecting the **General** check box, instantly selects all options under this node.


4. Click **OK** to export the settings.
5. In the **Save As** dialog box, enter a name for the settings file. You can also select the name of an existing settings file to overwrite it with your modified configuration.

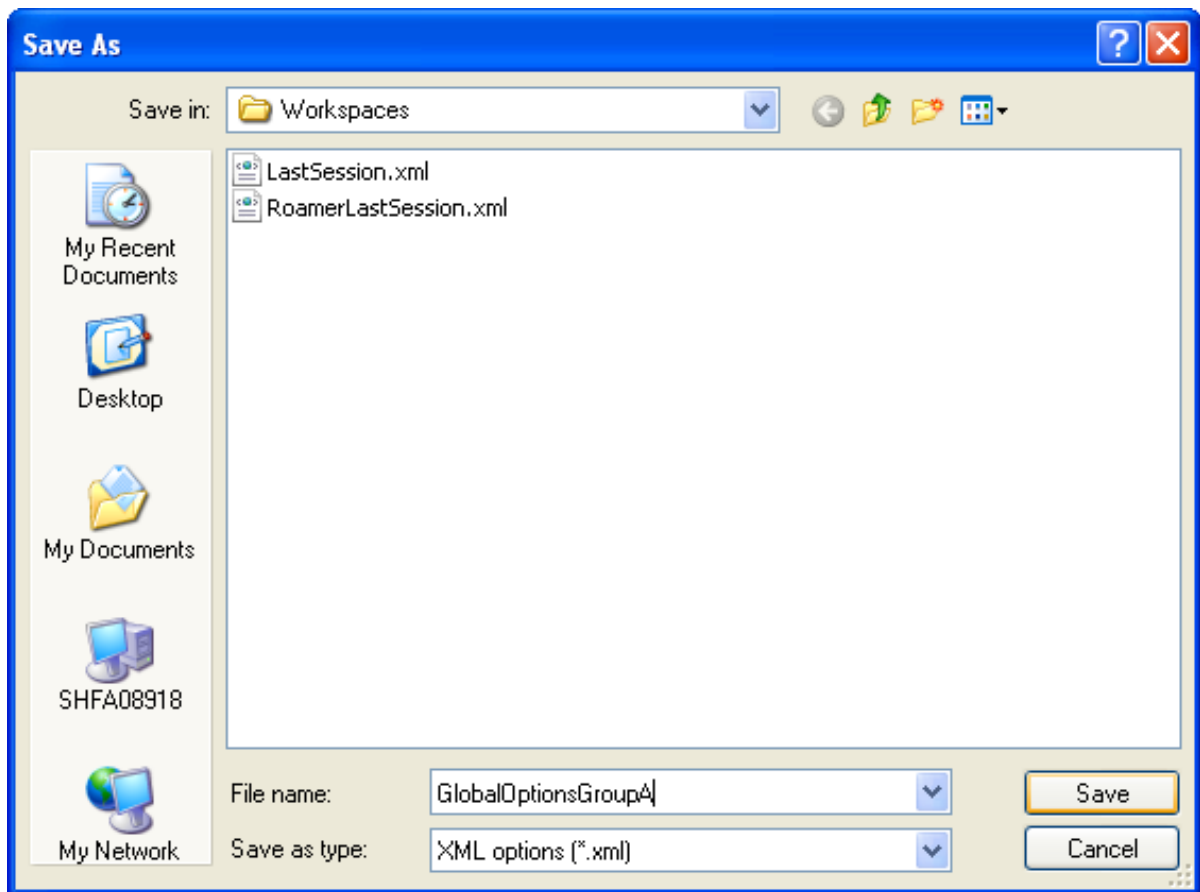

6. Click **Save**.
7. Click **OK** to close the **Options Editor**.

To import Global Options:

1. On the **Tools** menu, click **Global Options**.
2. In the **Options Editor** dialog box, click the **Import** button.
3. In the **Open** dialog box, browse to the folder containing the settings file, select it, and click **Open**.

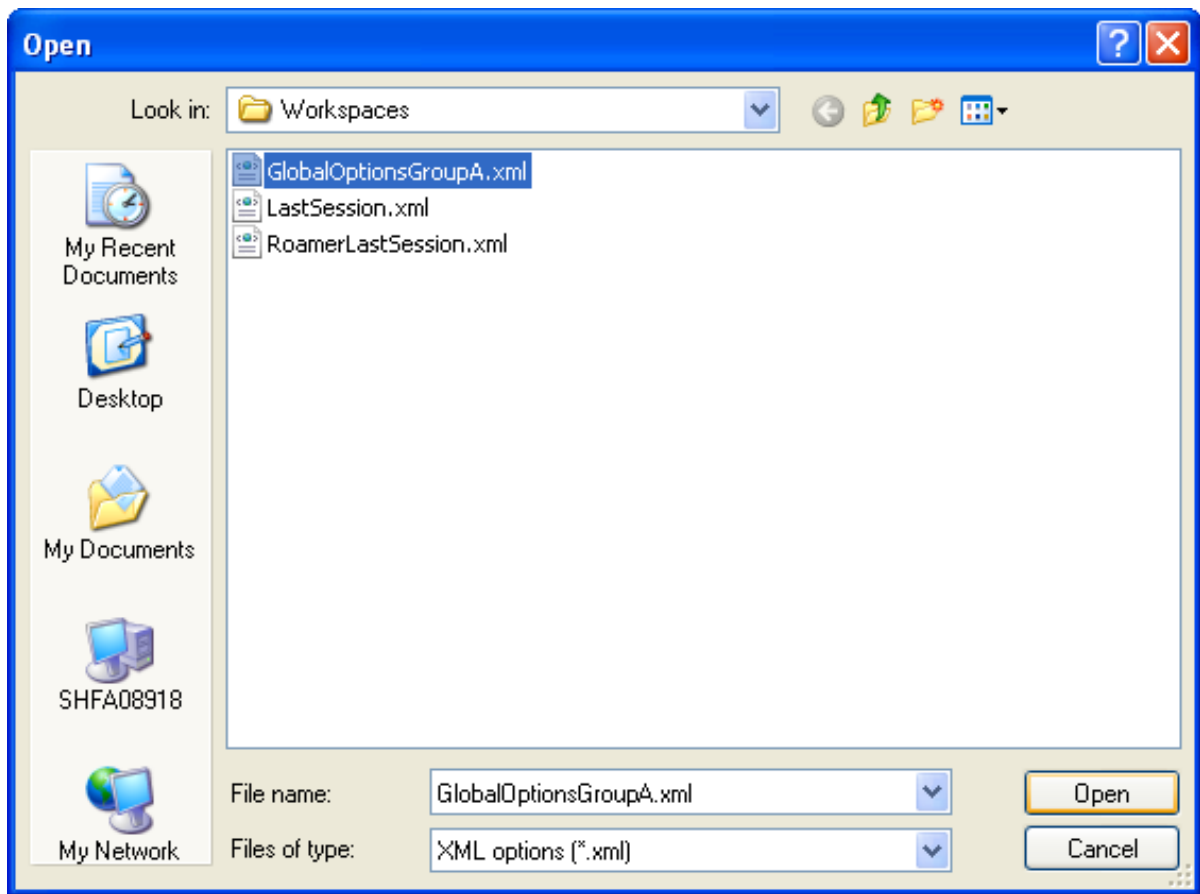

4. Click **OK** to close the **Options Editor**.

Chapter 25. DataTools

This feature is used to link Object Property elements in NavisWorks to fields that exist in a table within a database. Any database with a suitable ODBC driver is supported, and properties contained within database tables can be brought through and shown on the **Properties** control bar. If an object in a scene has associated database properties, clicking on that object will show the properties in a separate tab.

Data linked from a database can also be included in any searches using the **Find** tool, and can also be used within **Clash Detective** as part of the clash criteria. See “[Finding Items](#)” for more details on how to use the **Find** tool, and the **Using Clash Detective** section for more information on clashes and clash criteria.


Adding Database Links

Databases are commonly used to store large amount of data, such as equipment specifications, catalogue data, and maintenance manuals.


The **DataTools** functionality enables you to create and configure links between the stored data files, and the model files. You can have as many links as you wish, but they all should have unique names.

Adding a database link:

1. On the **Tools** menu, click **File Options**.
2. In the **File Options** dialog box, **DataTools** tab, click the **New** button.

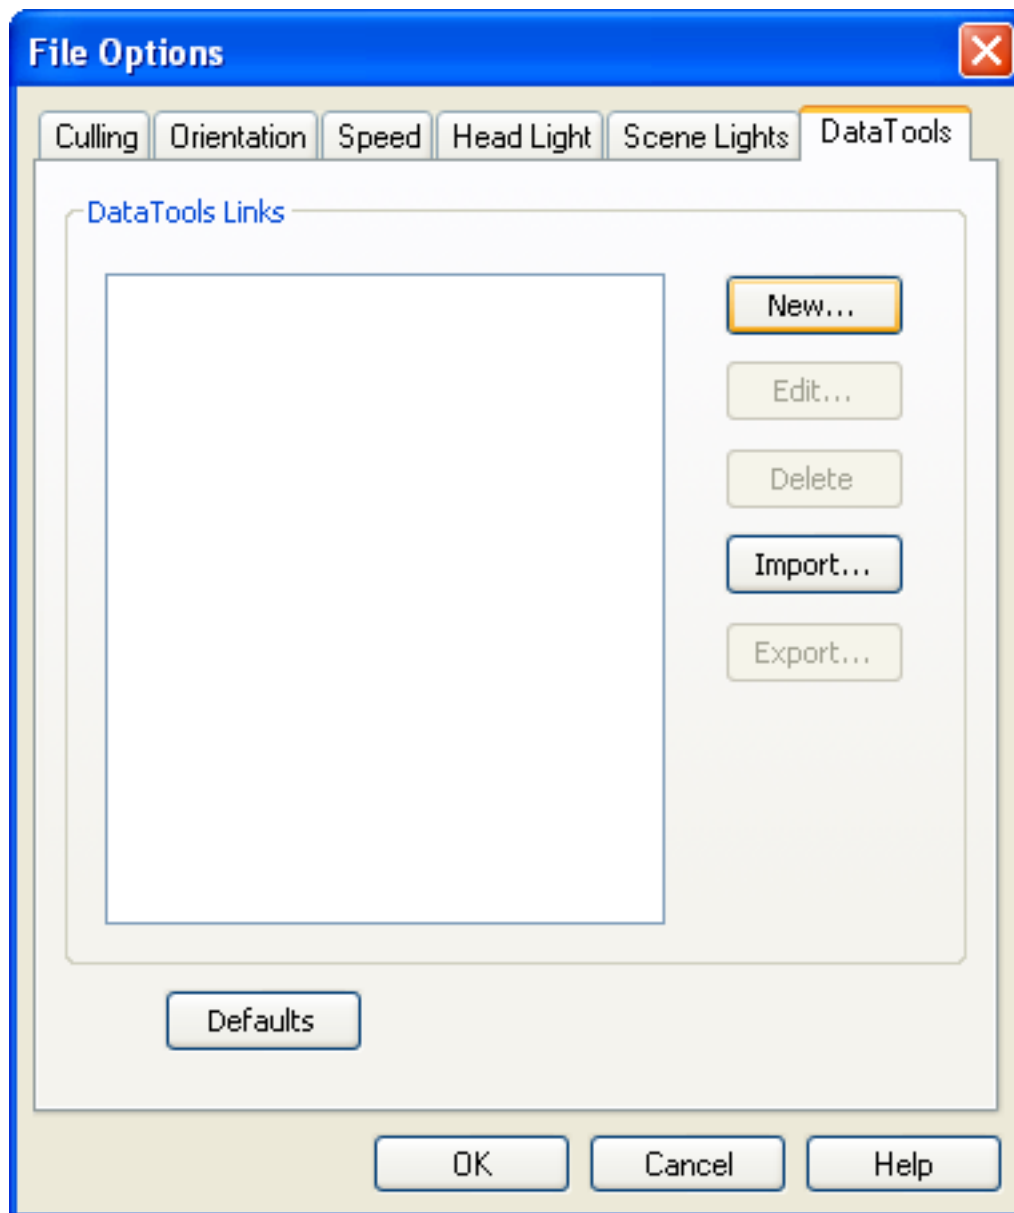

3. In the **New Link** dialog box, enter a **Name** for the new link, e.g., 'Service Information'. This is the name of the tab that will appear on the **Properties** control bar.

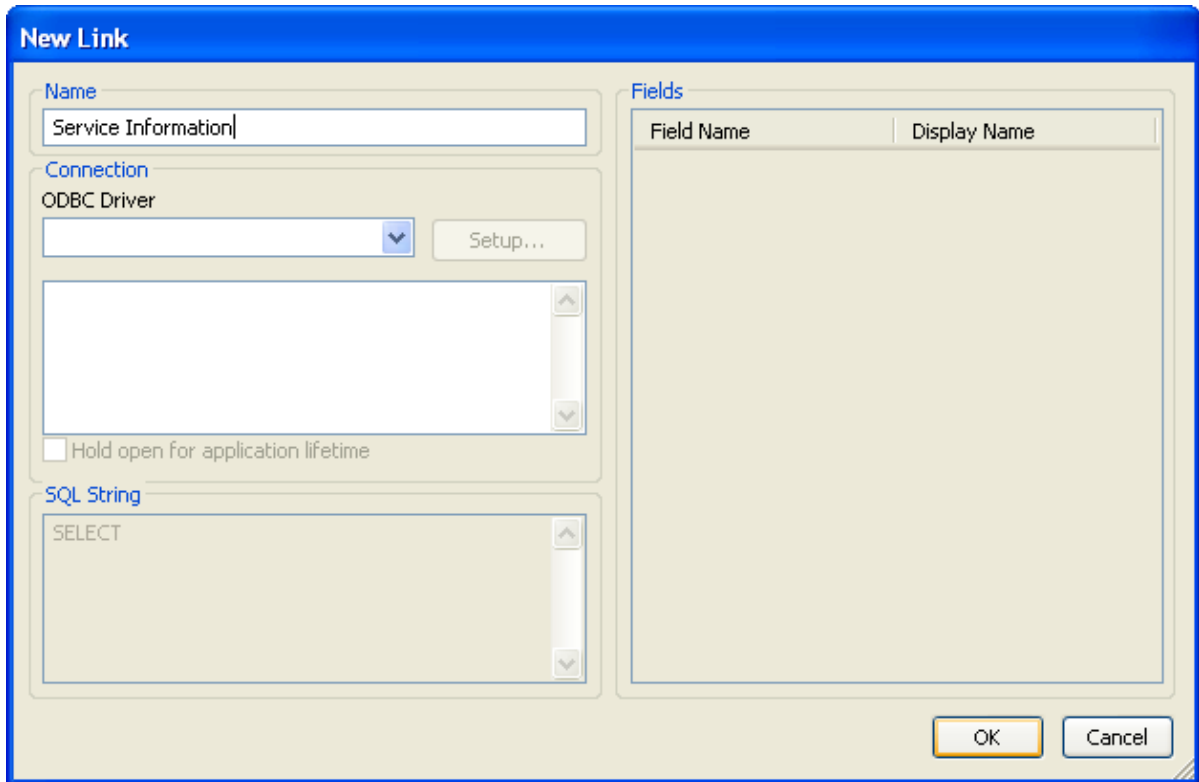


You are now ready to configure the database link.

4. Click **OK** to save the link and return to the **File Options** dialog box.

Configuring Database Links

To configure a database link:

1. On the **Tools** menu, click **File Options**.
2. In the **File Options** dialog box, **DataTools** tab, select the link you want to configure in the **DataTool Links** area, and click the **Edit** button.

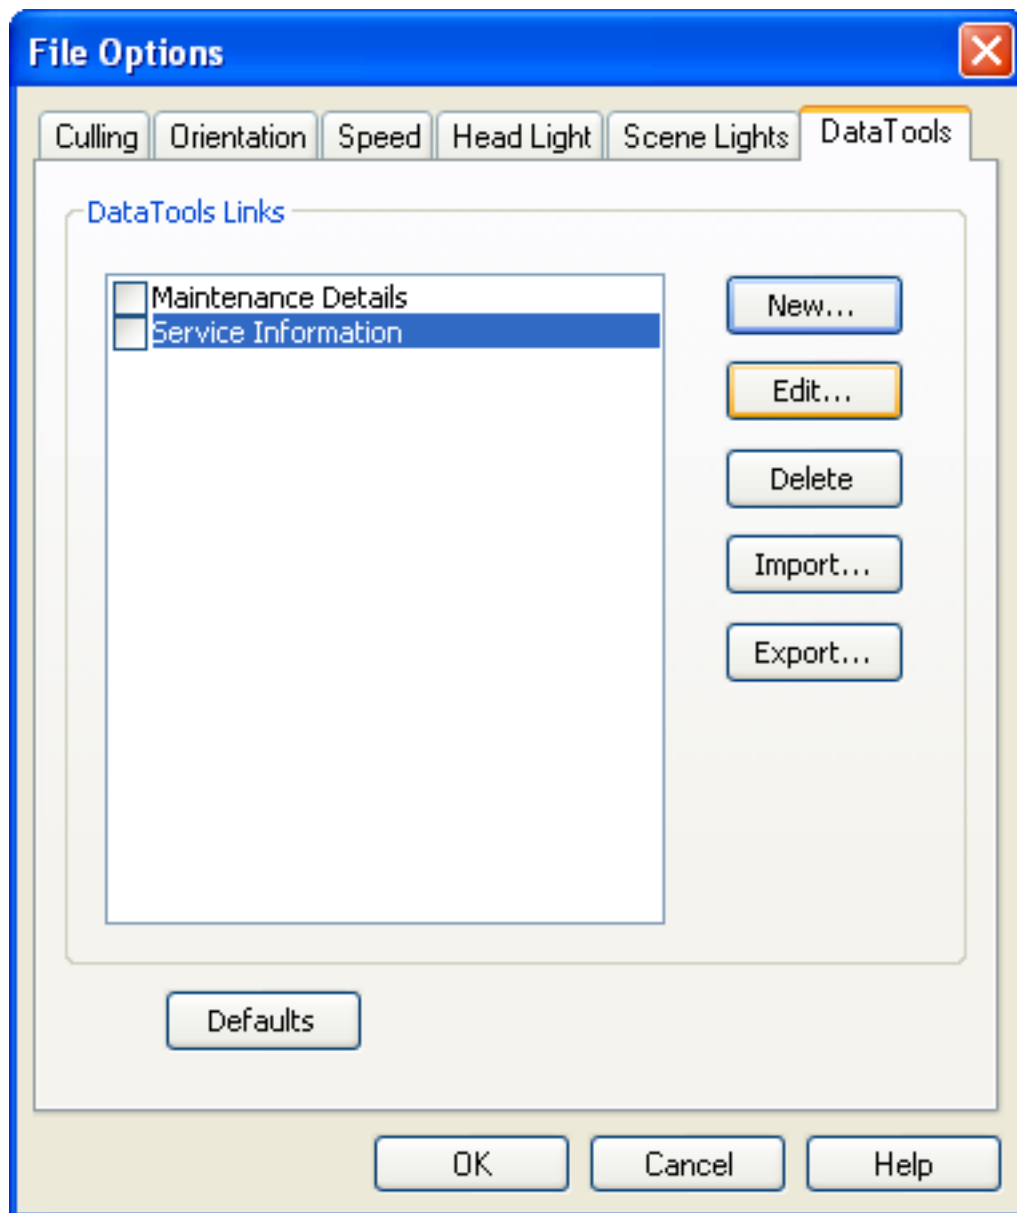**Note:**

If you haven't added any links yet, click the **New** button, and follow the procedure for adding database links first.

3. Configure the ODBC Driver:

In the **Edit Link** dialog box, select the appropriate **ODBC Driver** to define the type of the database to link to, for example 'Microsoft Access Driver (*.mdb).

Click the **Setup** button. The driver wizard will open, and guide you through the setup options. If you have difficulties setting up your connection details, contact your database administrator. When you finish, the box underneath will show the connection string. This string can be modified, if necessary. For the list of tags you can use in the string, see “

Full Tag List ”.

For example, if you want to select a database with a certain name (say, test.mdb) that is always next to the model file (as in the resultant NWD/NWF not the original), type in:

```
DBQ=%pushpath(%poppath(%currentpath), "test.mdb");  
DRIVER={Microsoft Access Driver (*.mdb)};
```

If you want to select a database with the same name as the original model file (say, AutoPlant), type in:

```
DBQ=%join(%removeext(%removepath(%sourcepath)), ".mdb");  
DRIVER={Microsoft Access Driver (*.mdb)};
```

4. Select the **Hold Open for Application Lifetime** check box, if you want to keep the database link open until you exit NavisWorks.
5. Specify which table in the database to query:

In the **SQL String** field, click after SELECT, and enter the selection statement, for example: `SELECT * FROM tblBoilerData WHERE "NWUniqueID" = %prop("Entity Handle", "Value");`


This statement instructs NavisWorks to select all columns from the tblBoilerData table, whilst requiring that the column called NWUniqueID matches a category/property pair called Entity Handle/Value. For the list of tags you can use in the SQL statement, see “[Full Tag List](#)”.

6. Select which columns you want to display as link categories on the **Properties** control box:

Double-click the **Fields Name** field, type the exact name of the database column, for example: "PartName", and press **Enter**.

The **Display Name** is automatically completed for you, but you can click it, and enter a different name, if you want. The text entered here is the category name shown on the link tab of the **Properties** control bar.

Repeat the above process to list all required categories in the **Fields** area of the dialog box.

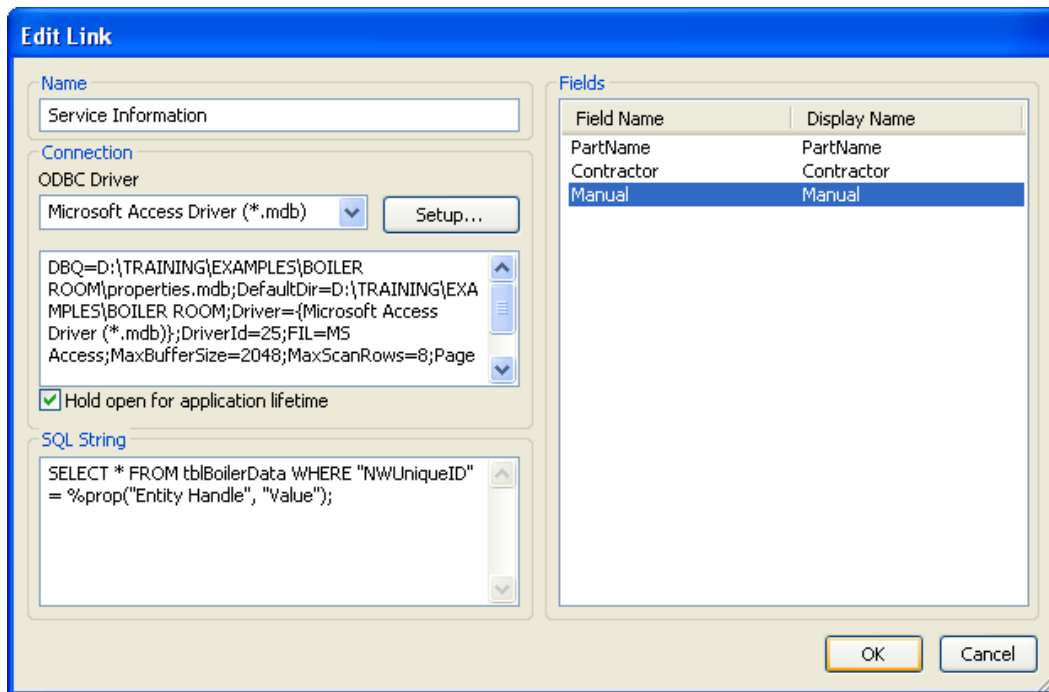

- Click **OK** to save the changes.

Note:

The model is not linked to the external data source until you have activated the link.

Managing Database Links

All file-based connection information is saved inside the project NWF or NWD. The global connection information is saved on the local machine. If the associated database is available on loading the NWF/NWD file, the link will automatically establish itself when an object is selected. On selecting an object, if the database is available, and there is data associated with the object, NavisWorks will create an appropriate database tab in the Properties control and show the appropriate data as set up in the connection details.

Object Properties can be extracted from a database connection and embedded as static data within the published NWD file. See "[Publishing from NavisWorks](#)" for more information.

Activating Database Links

To use a database link, you need to activate it. To do this, click **Tools > File Options**, open the **DataTools** tab, select the check boxes for all links you want to activate, and click **OK**.


Note:

You cannot activate links with insufficient or invalid configuration information.


Exporting Database Links

To export a database link:

1. On the **Tools** menu, click **File Options**.
2. In the **File Options** dialog box, **DataTools** tab, select the link you want to export, and click the **Export** button.

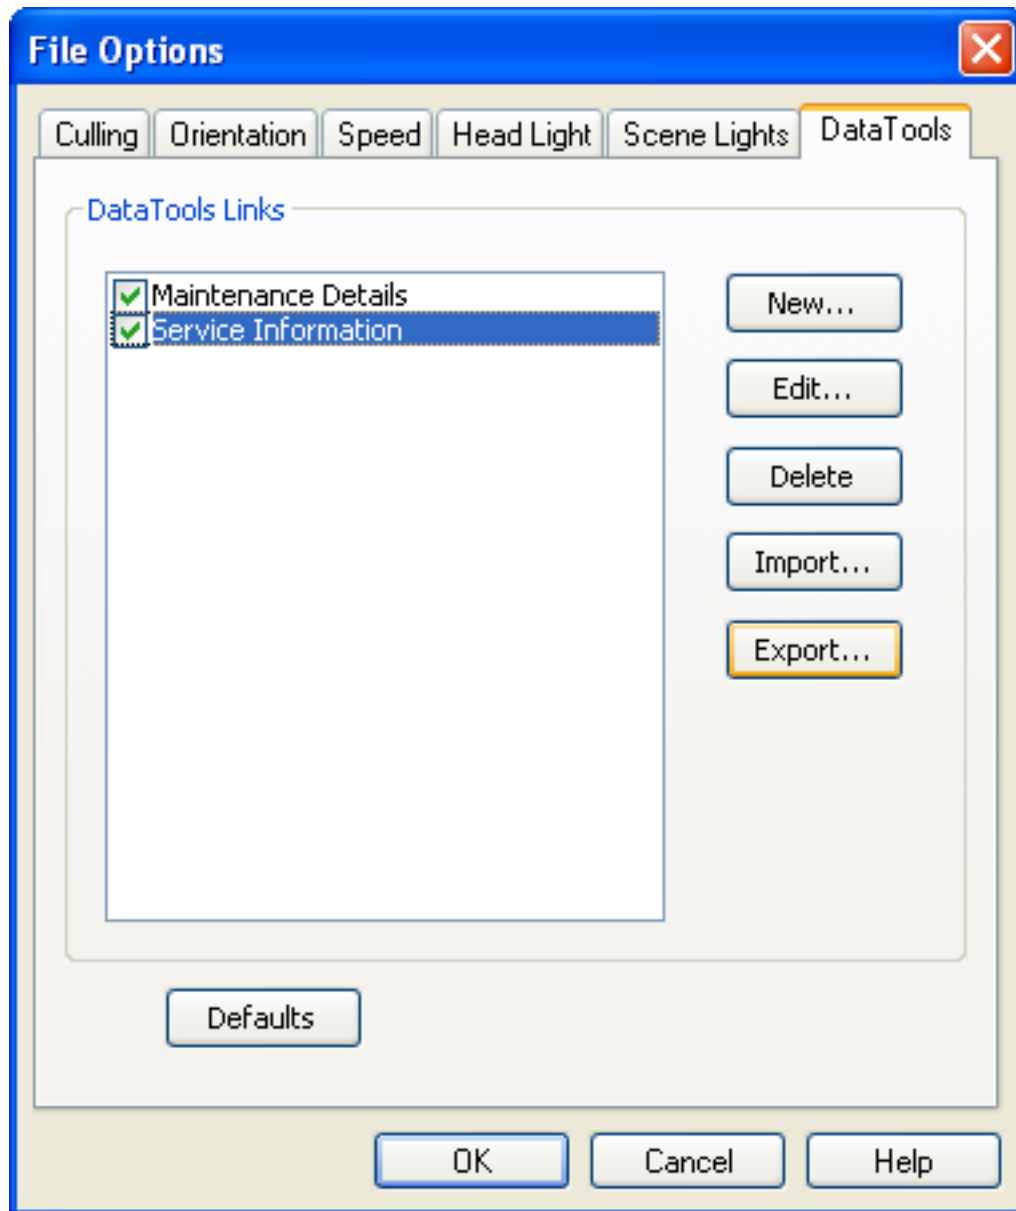

3. In the **Save As** dialog box, browse to the desired folder, and enter a name for the datatools file. You can also select the name of an existing datatools file to overwrite it with your modified configuration.

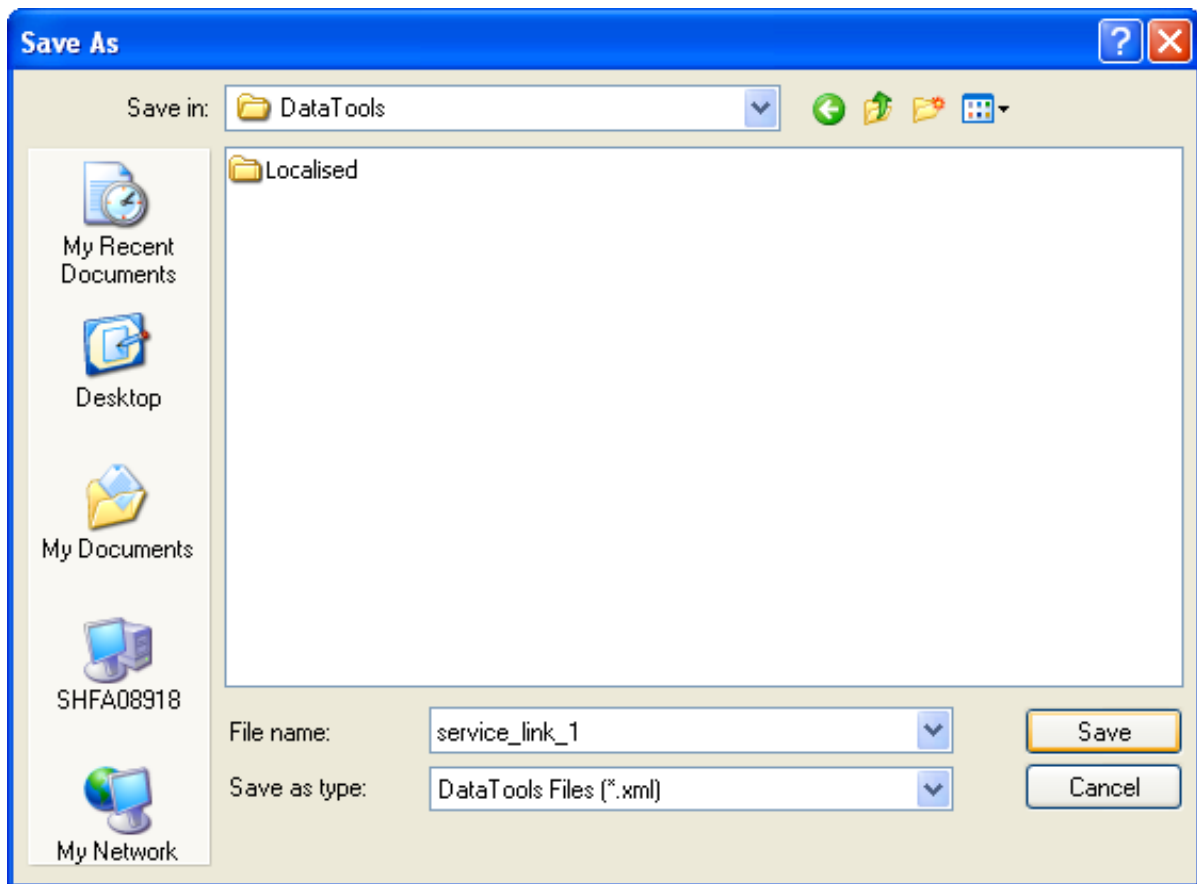


4. Click **Save**.
5. Click **OK** to close the **File Options** dialog box.


Importing Database Links

To import a database link:

1. On the **Tools** menu, click **File Options**.
2. In the **File Options** dialog box, **DataTools** tab, and click the **Import** button.

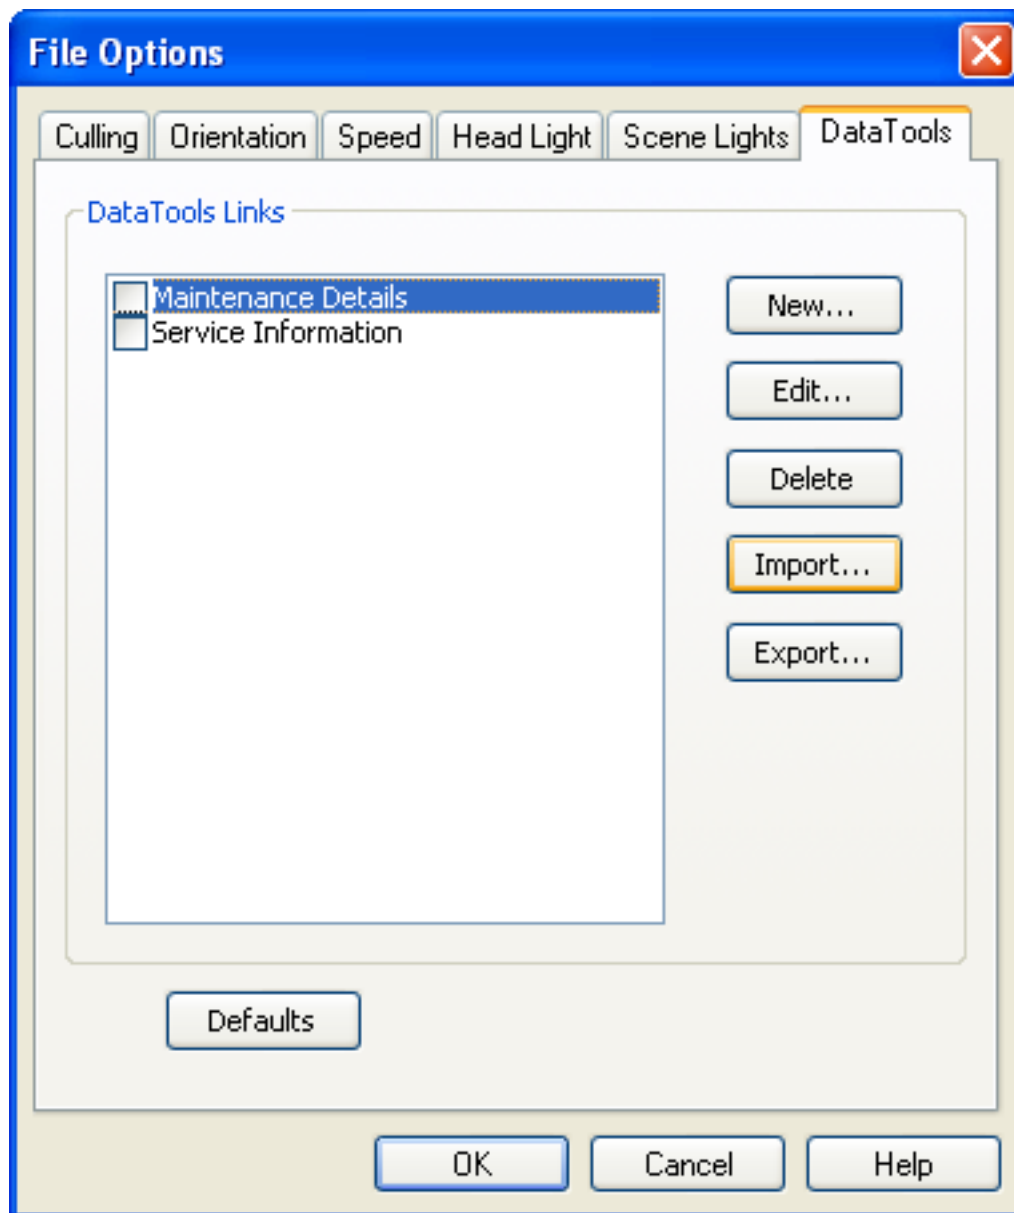

3. In the **Open** dialog box, browse to the folder containing the datatools file, select it, and click **Open**.

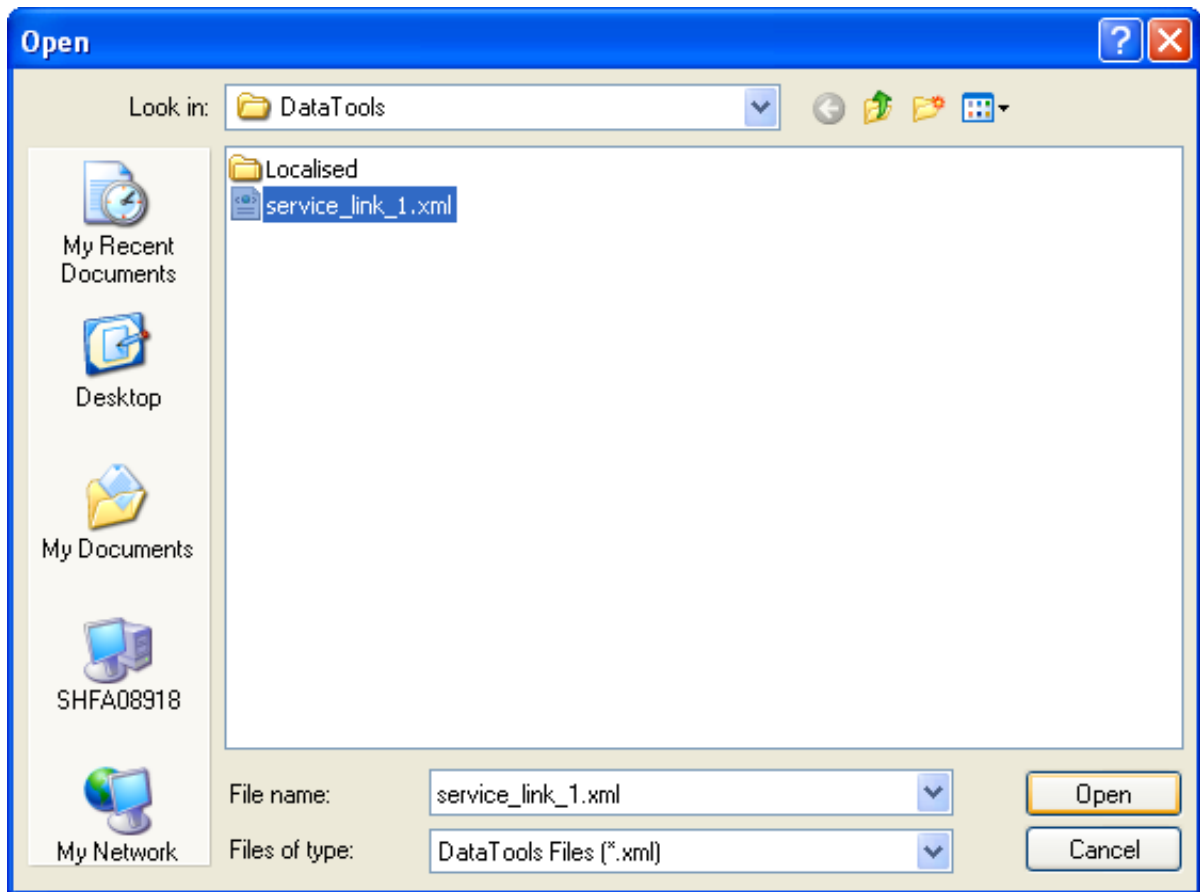

4. Click **OK** to close the **File Options** dialog box.

Full Tag List

This section lists all NavisWorks tags you can use.

Property Tags

- **%prop("category","property")** - Property of the currently selected object. Category is the name of the tab in the property windows (e.g. Item or Entity Handle) and property is the name of the property in that tab (e.g. Value or Layer).
- **%intprop("category","property")** - Property of the currently selected object. This is the same as the previous tag except instead of using the publicly visible category and property name use the internal NavisWorks names. The benefit of using internal names is that they are not language dependent. This is advanced tag suitable for users familiar with the NavisWorks API.

File/Path Tags

- **%sourcepath** – This tag represents the full path and filename that the currently selected object comes from. Even when a collection of model files have been combined into a single NWD file this tag will still remember the path and filename of the original model file.
- **%currentpath** - This tag represents the full path and filename of the currently loaded model. If you currently have an NWF or NWD loaded that contains many other models it will just return the path and filename of the top level NWF/NWD.

File/Path Manipulation Tags

- **%removeext("text")** – If the provided text includes a filename with an extension this tag will remove the extension.
- **%removepath("text")** – If the provided text includes a path and filename this tag will remove the path and just return the filename.
- **%poppath("text")** – If the provided text includes a path this tag will remove the top level. If it the text also includes a filename that will count as the top level and be removed. For example, `%poppath("c:\temp")` becomes `c:\` and `%popath("c:\temp\readme.txt")` becomes `c:\temp`.
- **%pushpath("text1","text2")** – If text1 is a path and text2 is a file or folder name then text2 will be added onto the path in text1. For example, `%pushpath("c:\test","model.nwd")` becomes `c:\test\model.nwd`.

String Manipulation Tags

- **%join("text","text")** – This tag simply joins the two pieces of text together. For example, `%join("c:\","model.nwd")` would return `c:\model.nwd`.

Note:

Tags must not contain white space between the brackets (unless enclosed by quote marks), so

```
%prop("EntityHandle","Value")
```

works, but

```
%prop("EntityHandle", "Value")
```

does not.

Examples

The examples below illustrate how tags could be used with SQL queries.

- Selecting all columns from table Test whilst requiring that the column called Entity Handles matches a category/property pair called Entity Handle/Value and the column called File Name matches the original filename of the drawing:

```
SELECT * FROM Test WHERE "Entity Handle" = %prop("Entity Handle", "Value")
AND "File Name" = $removeext(%removepath(%sourcepath));
```

Here the path and the extension of the file name are being stripped, so a file like
c:\model\3rdFloorDucts.dwg would come out as 3rdFloorDucts.

- Selecting two columns from table Test whilst requiring that the column called Entity Handle matches a category/property pair called Entity Handle/Value:

```
SELECT Name,Part FROM Test WHERE "Entity Handle" = %prop("Entity
Handle", "Value");
```

- Selecting all columns from table Test whilst requiring that the column called Value is within a certain range given by two category/property pairs:

```
SELECT * FROM Test WHERE Value BETWEEN %prop("Pressure", "Minimum") AND
%prop("Pressure", "Maximum");
```

Chapter 26. Getting Help

The **Help** menu gives you access to useful resources about your system, your product and the documentation. NavisWorks comes with full context-sensitive help as well as user guides in Adobe Acrobat™ .pdf format. The **Help** menu contains:

- Help Topics
- What's This?
- NavisWorks on the Web
- License
- Customer Involvement Program
- System Info
- About NavisWorks


If the online documentation and help does not answer your query, try www.autodesk.com/support. If the website does not help answer your problem, you should contact the reseller from whom you purchased the software.

Help Topics

NavisWorks contains full help documentation. This is structured in chapters, sections and procedures which can be easily navigated on the **Contents** tab.

To open the NavisWorks help documentation, click **Help > Help Topics** on the menu bar.

The **NavisWorks** help window is displayed:

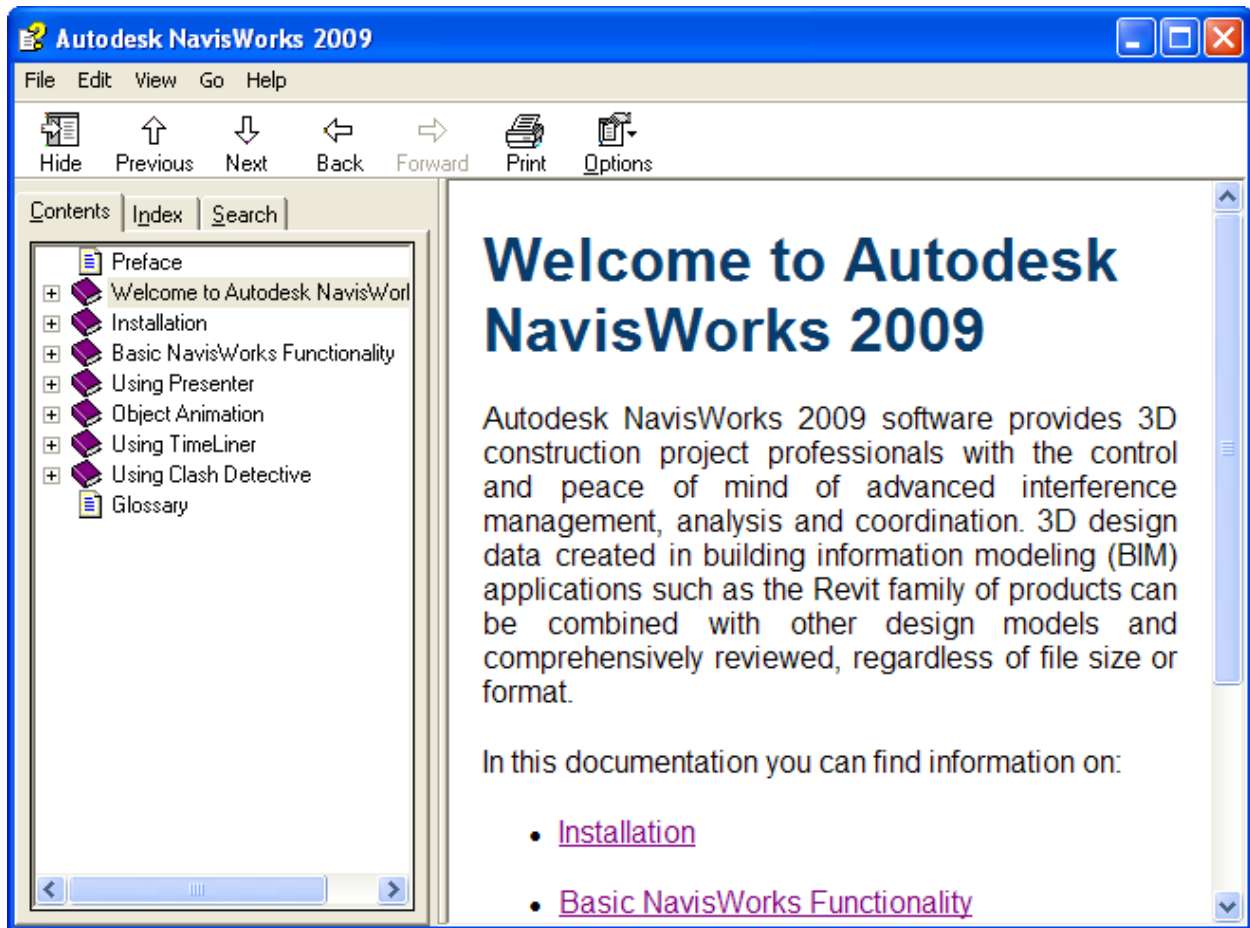


In the **Contents** tab, select an item to view its contents. Expand and contract the chapters and sections (identified with a book icon) using the plus and minus icons to the left of them. The contents of the selected item will be displayed in the right hand pane.

The **Index** tab has a full index of all NavisWorks help topics. Select the topic you are interested in learning more about from the list, then click **Display**. The selected topic will be displayed in the right hand pane.

Should you not be sure of the topic name that you are interested in learning more about, use the **Search** tab to search on any keyword. Enter the keyword to be found, then click **List Topics**. Any topics within the NavisWorks help containing the keyword you entered, will be listed. Select the topic you are interested in and then click **Display**. The selected topic will be displayed in the right hand pane.

You can enclose a phrase in quotation marks to search on that exact phrase.

What's This?

NavisWorks contains full context-sensitive help. If you want to find out more about any item in the interface. Click  and click over the toolbar button, window or menu command that you want to know more about. The appropriate **Help** topic will then be displayed.

NavisWorks on the Web

To visit the NavisWorks pages on the Internet, click **Help > NavisWorks on the Web** on the menu bar.

License

Opens the **Product Information** dialog box, which enables you to view and manage your license information:

Product name:	Autodesk NavisWorks Manage 2009	Product version:	main.41684
Product service pack:	0	Product serial number:	347-60453411
License type:	Network	License expiration date:	None
License behavior:	Permanent	License usage type:	Commercial
License ID:	62900NAVMAN_2009_OF	Computer host name:	SHFCOTTERPIN
License server:	shfa06191		

Buttons: License Agreement, Borrow License..., Save As..., Close, Update...

License Agreement - opens the Autodesk Software License Agreement.

Update - enables you to update the serial number.

Save As - enables you to save the license information as a .txt file.

Activate - enables you to activate the product.

For network license installations, it also allows you to borrow/return license (see the procedures below).

To borrow a license:


1. Start NavisWorks, and click **Help > License**.
2. In the **Product Information** dialog box, click the **Borrow License** button.

Note:

This allows you to use license while not connected to the network (e.g. site visit) but means that the license is not available to anyone else. If not explicitly returned the license will be automatically returned on the date you specify.

3. In the **Borrow a License for Autodesk NavisWorks Manage 2009** dialog box, use the Calendar to select the date you want to borrow the license until, and click the **Borrow License** button.


This date should be the longest time you will be unable to reach the network for.

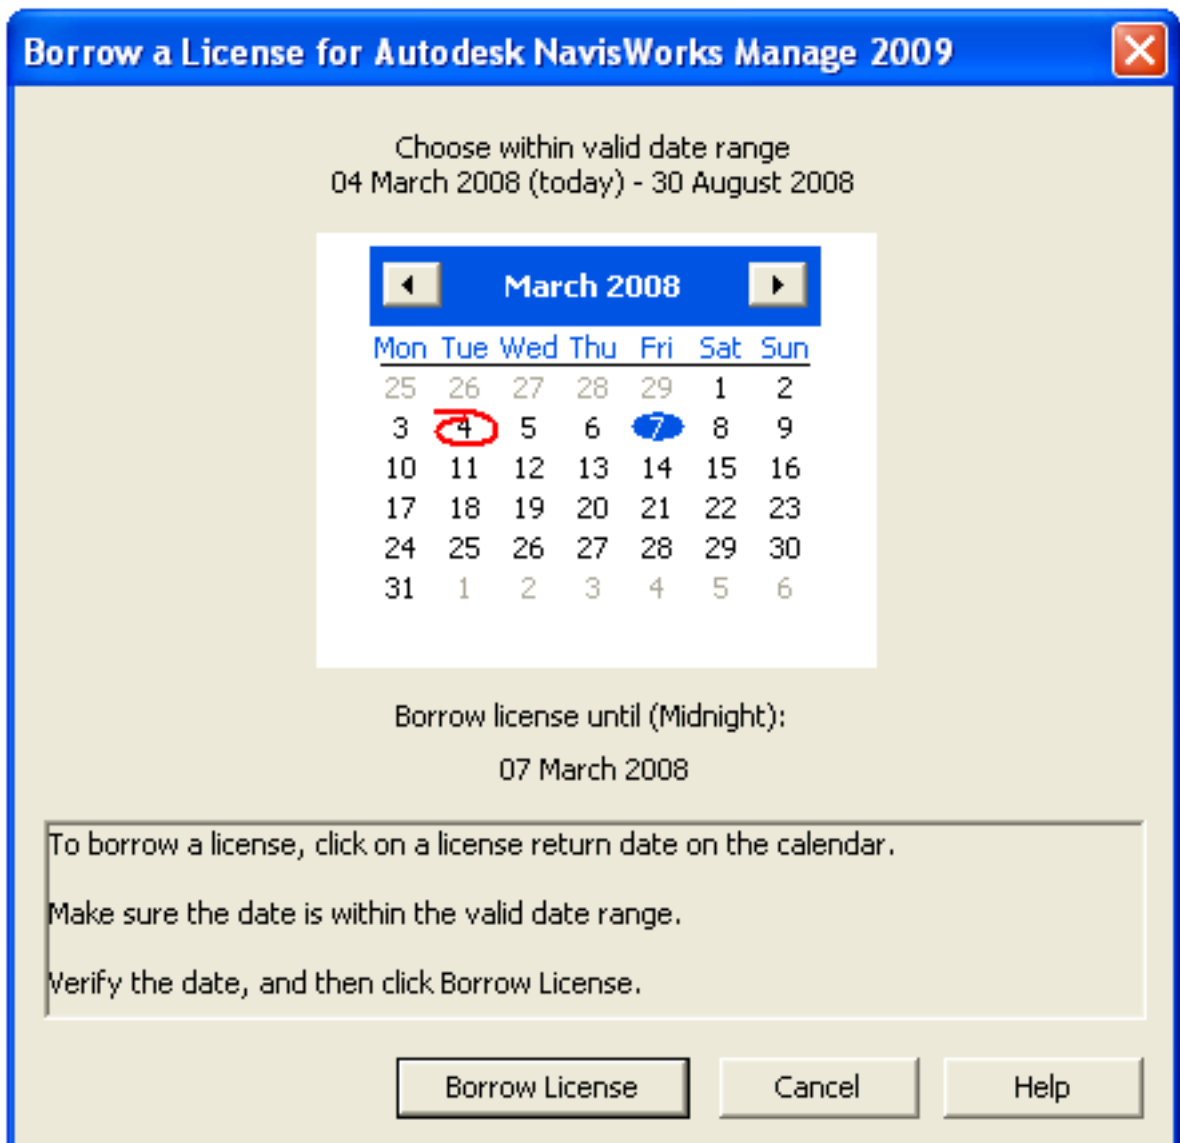

4. Click **OK**. Your license is now borrowed. Once borrowed, you can return the license whenever you want or simply wait for it to expire.

To return a borrowed license:

1. Start NavisWorks, and click **Help > License**.
2. In the **Product Information** dialog box, click the **Return License** button.

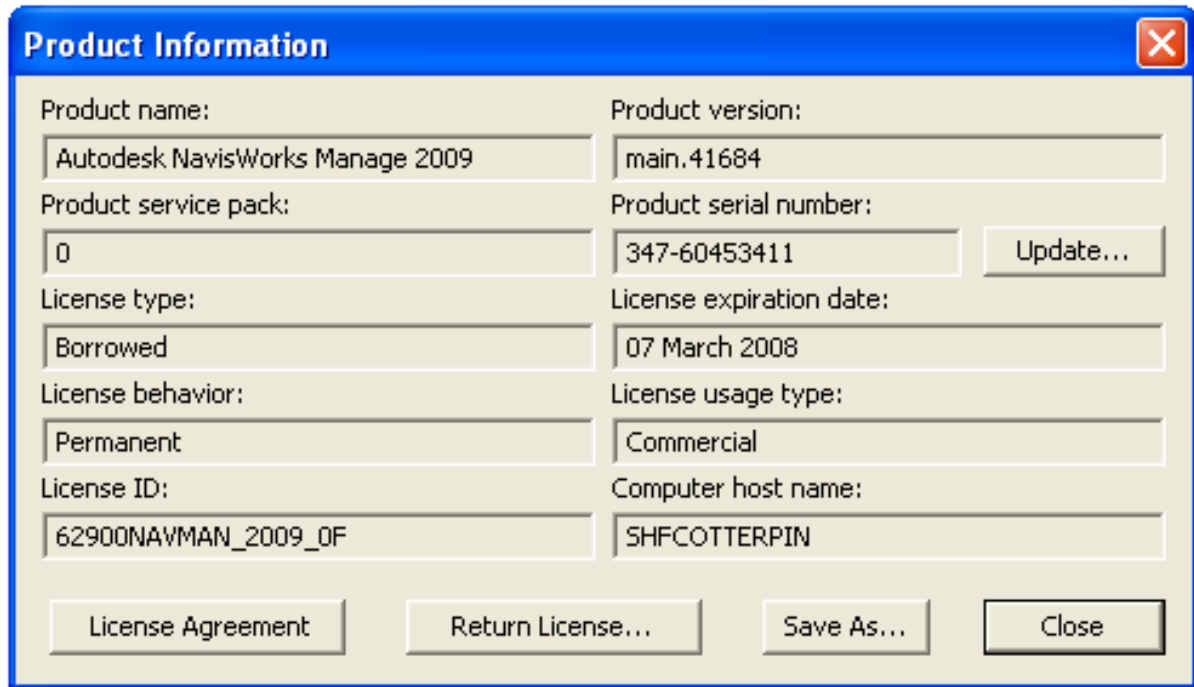

3. Click the **Return License** button, and then **Yes** when asked if you want to return it.

You have now returned to the original state.

Note:

Refer to the Autodesk Network Licensing Guide and Autodesk Standalone Licensing Guide for more information (accessible from the installer).

Customer Involvement Program

The Customer Involvement Program (CIP) is a program that dramatically improves the way Autodesk designs software and measures performance and quality. It lets customers be involved in helping make Autodesk products better meet their needs and the needs of the larger community of users.


CIP automatically collects information about software features usage, system configuration and software errors from those customers that choose to participate. About once a day, a small file containing CIP information is sent to Autodesk's servers. The CIP program DOES NOT send actual design information to Autodesk so it is not possible for Autodesk to replicate your actual drawings or design information using the CIP information.

If you'd like to join the Customer Involvement Program, click **Help > Customer Involvement Program** on the menu, select the participation option in the dialog box, and click **OK**.

You can stop your participation in the CIP program at any time by accessing the CIP dialog box again.


System Info

Opens a dialog giving you detailed information about your system, which can be helpful in support situations.

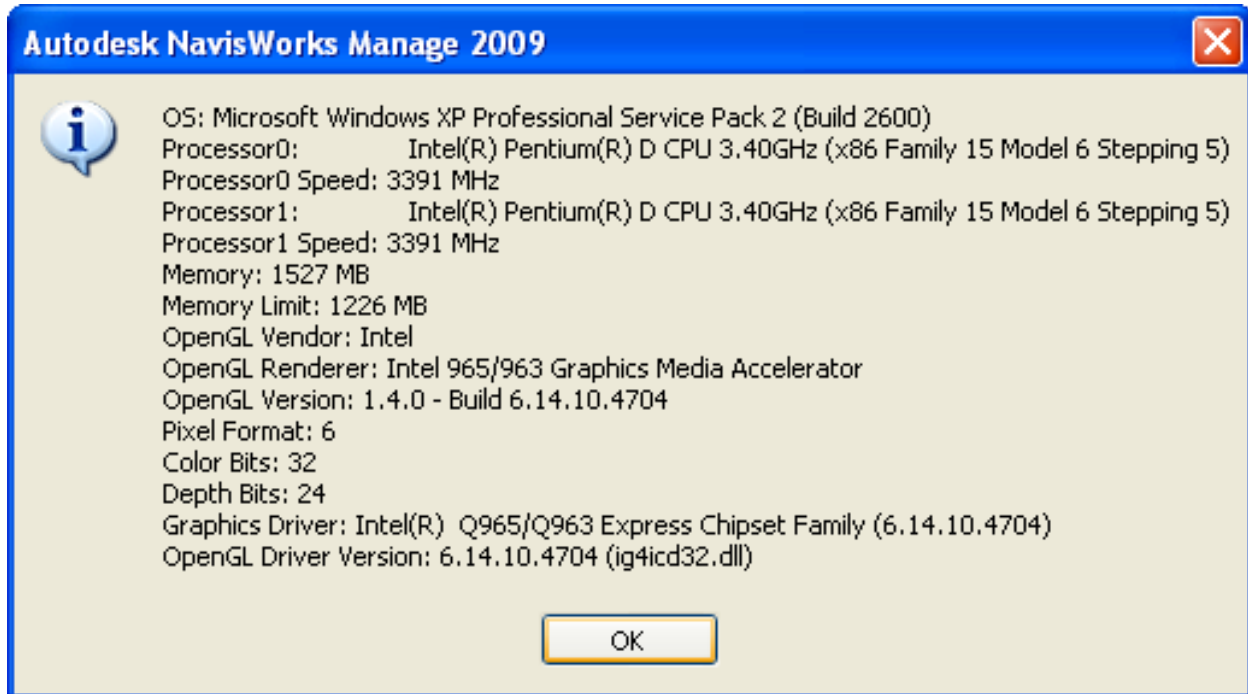

About NavisWorks

Opens a dialog giving you information about your product, including version and build number, which can be helpful in support situations.

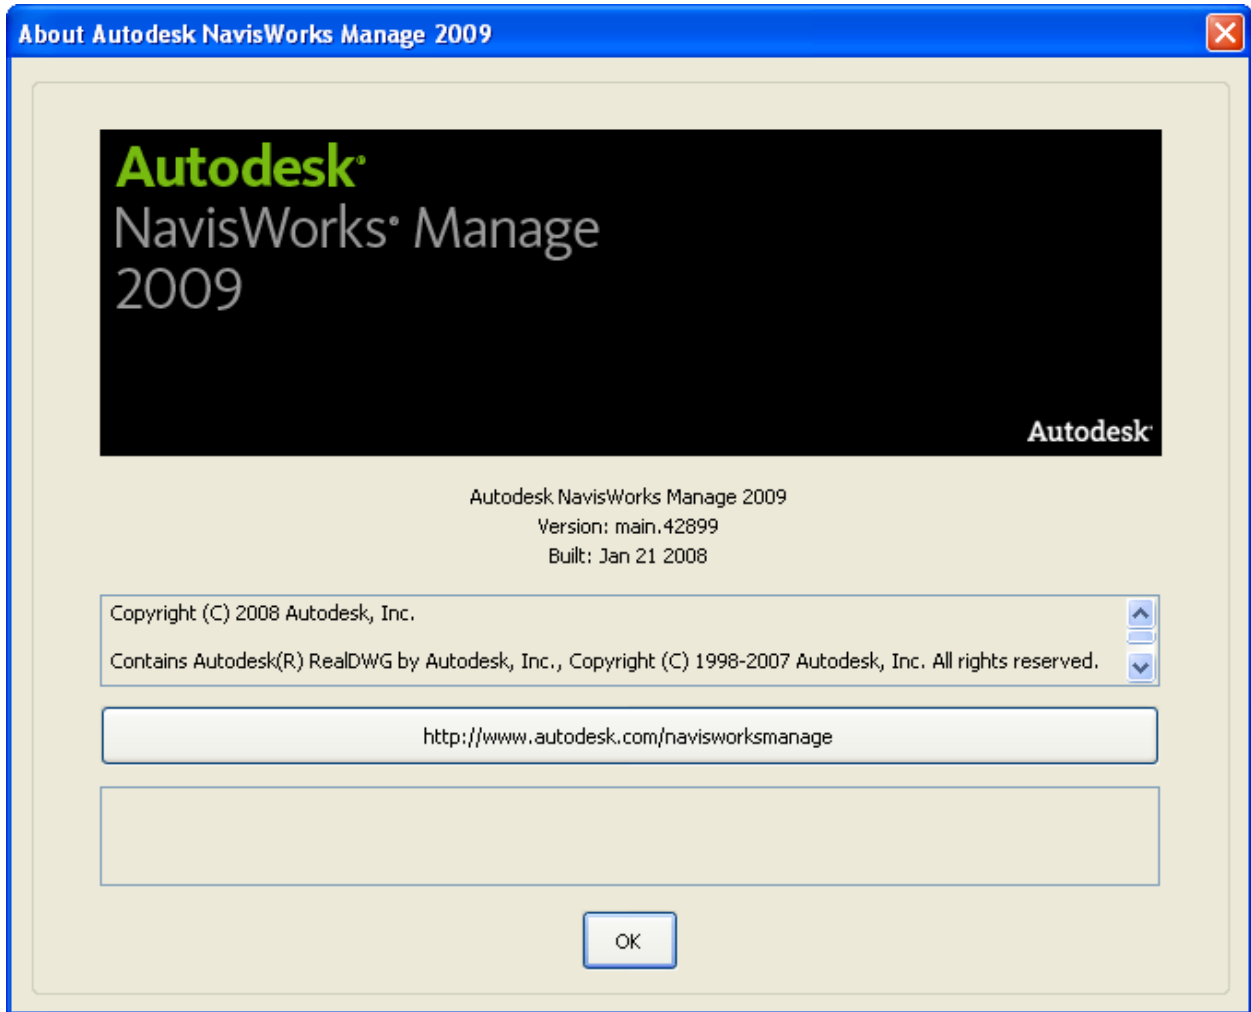

Part 4. Using Presenter

Presenter enables texture materials, lighting, Rich Photorealistic Content (RPC) and background effects to be applied to your project model to enhance the real-time experience and export compelling renderings. In this section, you will learn how to:

- Render and output scenes
 - Apply and manage Presenter materials
 - Use lighting
 - Apply and manage RPC's
 - Use rendering effects
 - Use rendering styles
 - Manage textures
 - Set up rendering rules to apply materials to models
-

Chapter 27. Overview of Presenter

Presenter enables a great level of realism to be added to a design model by applying textures and materials, backgrounds, lighting and effects.

Working with the Presenter Window


The Presenter window is used to set up materials and lights in your scene and render it with more realism and effects. You can also use it to edit pre-defined materials and apply them to items in the scene, add lights to the scene and set up rules for applying the materials to other files in the same project set up with the same parameters. You can define and apply your materials and lights to a model and save the settings into a NavisWorks .nwf file so that as the model is updated, the materials and lights remain the same. Materials can also be brought through from CAD applications via the .3DS, .dwg and .dgn file formats, or by exporting from 3D Studio Viz or Max. See [Chapter 10, Converting Files](#) for more details on this.

By default, the Presenter window floats in the main NavisWorks window. Like all other floating windows, Presenter window is dockable and resizable, and will automatically lock to specific locations near to where it is moved. You can prevent it from docking while you drag it, by holding down Ctrl.

Note:

You can quickly dock and undock any floating window by double-clicking the window's control bar.

To open the Presenter window, select **Presenter** from the **Tools** menu.

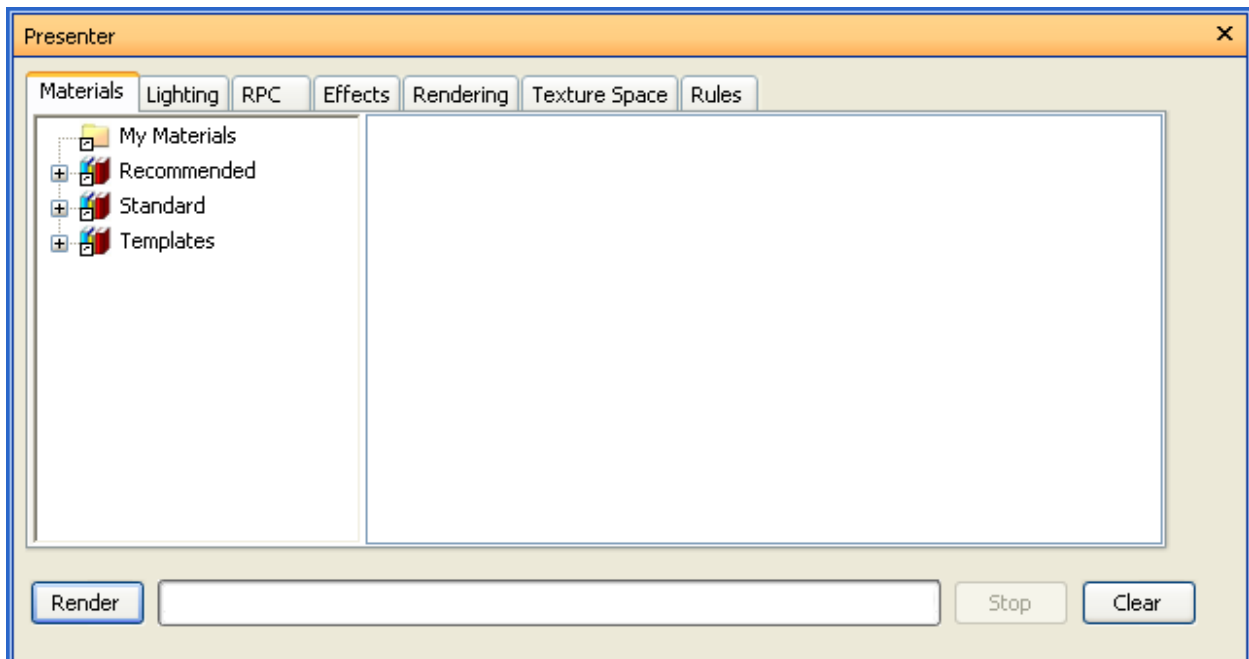

The Presenter window contains the following tabs:

- **Material** - includes a variety of materials, which can be selected and applied to individual or groups of

model items. You can also use this tab to create new materials, or customize existing materials.

- **Lighting** - includes a variety of lighting options, which can be selected and applied to the model. You can also customize lighting options, if you want.
- **RPC** - Rich Photorealistic Content, RPC, can be added from various sources, including websites. RPC's include images of people, trees, cars etc.
- **Effects**- includes a variety of backgrounds and environments, which can be selected and applied to the model scene. Some existing backgrounds can be customized, or new backgrounds can be created. You can also add backgrounds and environments from other sources, such as websites.
- **Rendering** - includes a variety of rendering styles, which can be selected and applied to the model. A render style affects the way a scene is rendered. You can also use this tab to create new render styles, or customize existing render styles.
- **Texture Space** - defines the way in which a texture is applied to a model item, for example, applying a cylindrical texture space to a pipe will provide a more natural effect.
- **Rules** - enables materials to be applied to models according to user-define criteria. This can be used, for example, to speed up the application of materials to groups of items.

The **Materials**, **Lighting**, **Effects** and **Rendering** tabs are divided into two panes. The left hand pane contains the archives and the right hand pane contains the scene's palette, which defines what materials, lighting, effects and render styles are used in the scene. Archives are shown in a tree structure and are defined in the LightWorks Archive (.lwa) format.

The Rendering Style Toolbar

While Presenter can be used for photorealistic renderings, it can also be used for OpenGL interactive rendering and once you've set up the scene with Presenter, you can view the materials and lights in NavisWorks. There are special rendering styles to interactively preview the Presenter materials and lights called **Full Lights** and **Full Render** on the **Rendering Style** toolbar:



For more information, see [Chapter 16, Display Modes](#)

Using the Presenter Archives

There are three pre-defined archives that are installed with Presenter:

- The **Recommended** archives contain materials, lighting, effects and rendering styles that are recommended for most users. These include materials, lights and effects that can be seen during interactive navigation in NavisWorks and can be fully rendered with OpenGL. Of course, they will look better when rendered photorealistically.
- Additional materials, light studios, effects and render styles are available in the **Standard** archive. These include materials that cannot be fully reproduced using OpenGL and therefore will not be seen properly in interactive mode, or until a full photorealistic render is done.
- Any materials, lights, effects and render styles from any archive can be used as a template starter for your own definitions, but the **Templates** archive contains instances of each type of material, light,

effect and render style, giving you quicker access.

Additional .lwa archives can be downloaded from <http://www.lightworks-user.com>. Although materials, lights, effects and render styles cannot be edited in archives, once dragged into the scene's palette, they can be edited and saved with the scene in a NavisWorks .nwf file, or published as a NavisWorks .nwd file.

You can save your own edits to materials into an .nwp file - see “ [Organizing and Managing Materials](#) ” for more information on how to do this. Also, there is a **User** archive, which allow you to save your own edited materials, lights, effects and render styles, for use in other scenes.

The User Archive

The **User** archive is accessible from each of the **Materials**, **Lighting**, **Effects** and **Rendering** tabs. On each of the tabs the archives are named **My Materials**, **My Lighting**, **My Effects** and **My Render Styles**, respectively. The principles are the same for each and will all be referred to as **User** archive, for the purposes of this guide.

Managing the user archive

1. To save a material, light, effect or render style to the user archive for use in other scenes, simply drag that item from the scene's palette (right hand pane) onto the respective **User** archive.
2. To create a new sub-folder in the **User** archive, right-click the archive and click **New Directory** on the shortcut menu. You can rename this new folder by right-clicking it and choosing **Rename** from that shortcut menu. You can make as many nested sub-folders as you wish in the **User** archive.
3. To save the **User** archive to disk, right-click it and click **Save Archives** on the shortcut menu. This will save any modified archives. You will also be prompted to save any modified archives when you close NavisWorks.
4. To remove a material, light, effect or render style from the respective **User** archive, right-click the item to be removed, then click **Delete** on the shortcut menu.
5. To remove a sub-folder you've created from the respective **User** archive, right-click the folder to be removed, then click **Delete** on the shortcut menu.

Note:

You cannot delete the default **User** archive.

Additional Archives

Archives can be added within each of the **Materials**, **Lighting**, **Effects** and **Rendering** tabs. The principles are the same for each.

Adding archives

1. To download an archive from the LightWorks-User web site, right-click any archive (in the left hand

pane) and click **Download Archive** on the shortcut menu. Then follow the instructions given on their site.

2. To import a downloaded archive into Presenter, right-click any archive (in the left hand pane) and click **Import Archive** on the shortcut menu. The normal Windows™ **Open File** dialog will appear for you to browse to and choose the .lwa file to import.

Deleting archives

- To remove an archive that you have previously added, right-click the archive, then click **Delete Archive** on the shortcut menu. Click **Yes** in the message box to confirm you wish to delete the archive.

Note:

The archive will remain amongst your list of archives until you restart NavisWorks.

Chapter 28. Rendering Scenes

While the OpenGL rendering in the main navigation window is adequate for interactive walkthrough and previewing renders, you will no doubt want to render your scenes and animations with full photorealistic rendering at some point. You can render directly into the main window by simply clicking on the **Render** button at the bottom of the Presenter window at any time.

Setting Up And Rendering A Scene

1. Click **Tools > Presenter** on the menu bar to open the Presenter window.
2. Drag and drop materials onto items in the model.

You can use the pre-defined materials, or create your own from the templates in the **Materials** tab (see [Chapter 29, Presenter Materials](#) for more details on how to do this).

Or

Use the **Rules** tab to set up rules which define project-wide material application (see [Chapter 35, Presenter Rules](#) for more details on this).

3. Use the **Texture Space** tab to more accurately map materials onto items in the scene (see [Chapter 34, Texture Space](#) for more details on this).
4. Set up additional lighting using the **Lighting** tab (see [Chapter 30, Presenter Lighting](#) for more details on how to do this).
5. Background and foreground effects can be added to the scene with the **Effects** tab (see [Chapter 32, Rendering Effects](#) for more details on these).
6. Use the **Rendering** tab to select a rendering style for the render (see [Chapter 33, Rendering Styles](#) for more details on these).
7. At any point, you can click on the **Render** button to start NavisWorks Presenter rendering the scene in the main navigation window. The rendering process can be stopped at any point by clicking on the **Stop** button.
8. Click on the **Clear** button to clear the render in the main navigation window and return to an OpenGL interactive view.

Exporting Rendered Output


Scenes rendered in Presenter can be exported out as images, so they can be used in presentations, on websites, in print and so on.

You can also export animated AVI presentations and instructional movies, in which the animated objects move in photo-realistically rendered scenes.

Exporting a rendered image

1. Apply materials and lighting effects to the required scene, and click the **Render** button to achieve the desired effect.
2. When the scene is rendered, on the **File** menu, click **Export > Rendered Image**.

The **Export Rendered Image** dialog will appear:

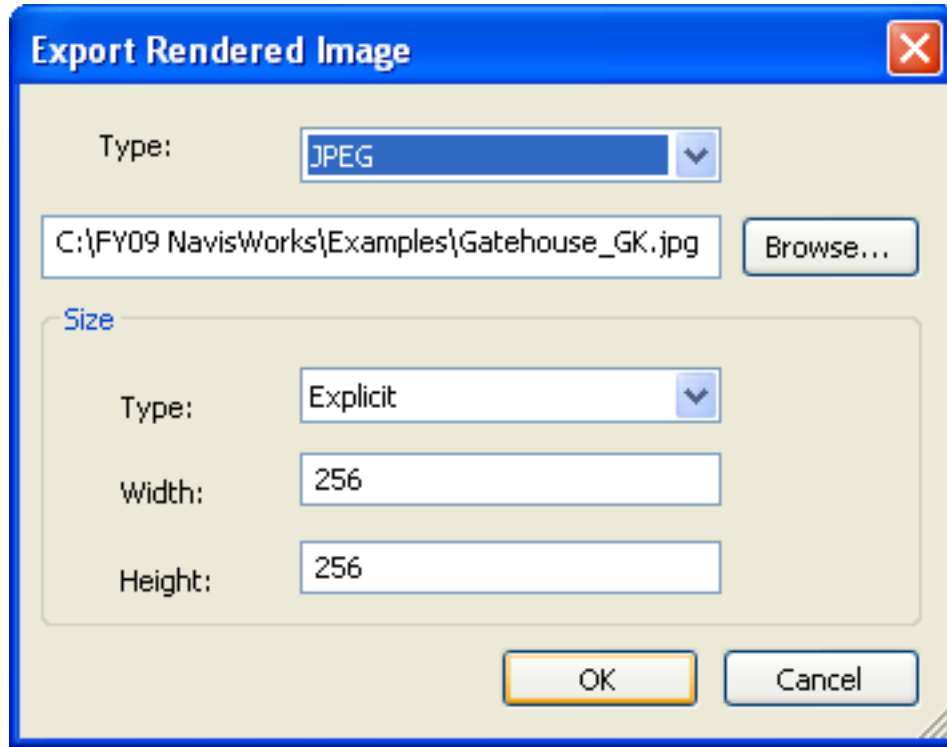

3. To print directly to a printer, choose **Printer** from the **Type** drop down list.

The **Browse** button and box will be grayed out and you will get the standard Windows™ print dialog to set up the printer and options on clicking **OK**.

4. To save to one of the file types supported by NavisWorks Presenter, choose the file type from the **Type** drop down list.

NavisWorks Presenter supports the following file types:

- **Targa.**
- **Tiff.**
- **JPEG.**
- **Windows Bitmap.**
- **EPix.**
- **PostScript.**
- **LWI.**

- **HDR (High Dynamic Range Image).**
- **OpenEXR (High Dynamic Range Image).**
- **QuickTime VR Panoramic Movie.**

Note:


The QTVR Panoramic Movie will effectively export 32 images, rotating about the current camera position to form a 360 degree panorama. Best results are achieved when the camera has zero tilt and is located in a position that has a 360 degree panoramic view, for example, in the center of a room.

- **QuickTime VR Object Movie.**

Note:

The QTVR Object Movie will effectively export an extensive number of images, (based on number of pan frames x number of tilt frames, see **QTVR Object Movie Settings** dialog below) pivoting the model about it's center point. Best results are achieved when the model is relatively small or compact.

When choosing this file type, you will be required to enter a number of settings. See the **QTVR Object Movie Settings** dialog below:

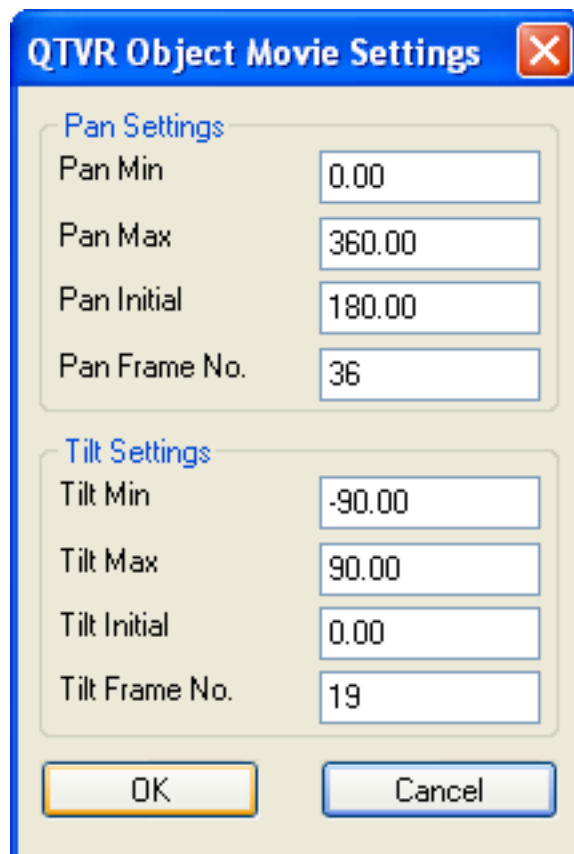

The **Pan Min** and **Pan Max** settings define how far the model can be revolved (as though on a turntable). The **Pan Initial** setting defines where you view the model from at the start (again, as though on a turntable, 0 or 360 would be the same point at the opposite side and 180 would be where the camera is now). The **Pan Frame No.** is the number of frames to be used to revolve the model from **Pan Min** to **Pan Max**.

The **Tilt Min** and **Tilt Max** settings define how far the model can be tilted (backwards and forwards from its current position). The **Tilt Initial** setting defines where you view the model from at the start (assuming you are looking at the model straight, -90 would be from the bottom and 90 from the top). The **Tilt Frame No.** is the number of frames to be used to tilt the model from **Tilt Min** to **Tilt Max**.

5. **Browse** to a location and enter the name of the file you want to render to.
6. See “ [Controlling the Size of an Image](#) ” for details on how to set the size of the rendered file. The only difference between those options and the size options on this dialog is that you have a **Use Printer Page** option here, which will size the image to the page setup size of the default printer.

If you choose **Use View** as the **Size** of the image file, then NavisWorks will save any existing render from the main window, without having to render again from scratch.

7. Click **OK** to export the rendered output, or click **Cancel** to return to NavisWorks without exporting it.

Once you have set up and rendered a scene as you wish, you can additionally create animation in that scene. For more information, see [Chapter 19, Animation](#) . The rendering that you have set up will be applied to each frame of the animation.

Exporting rendered animations

1. On the **File** menu, click **Export > Animation**.

The **Animation Export** dialog box opens.

2. To export a viewpoint animation, select **Current Animation** in the **Source** field.
To export a TimeLiner sequence, select **TimeLiner Simulation** in the **Source** field.
To export an object animation, select **Current Animator Scene** in the **Source** field.
3. Set up the rest of the fields in the **Animation Export** dialog box, and click **OK**.

Note:


For more information on how to use this dialog, see “ [Exporting an Animation](#) ”.

Chapter 29. Presenter Materials

In this section you will learn how to apply, remove, and manage materials.

Materials Tab

Like the Lights, Effects and Rendering tabs, the **Materials** tab is divided into two panes. The left-hand pane describes the pre-defined archives of materials that are installed and the right-hand pane shows the current palette of materials that have been defined and are being used in the scene. The palette also shows a small thumbnail of the material as it will appear when rendered.

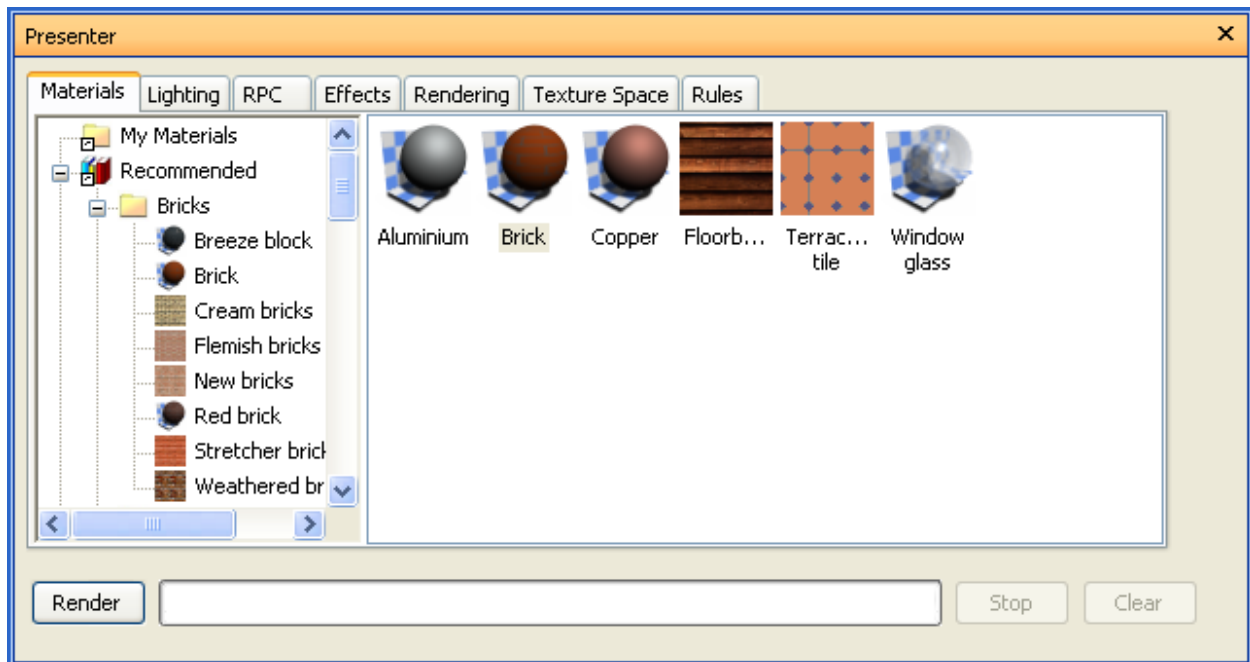

Applying Presenter Materials

Materials can be applied to items in the scene by dragging-and-dropping the material onto:

- an item in the scene;
- an item in the selection tree;
- a selection set.

If you drag the material from an archive then it will appear in the palette where it can be edited and saved with the scene if necessary.

Presenter uses NavisWorks's selection resolution to decide which items to apply the material to when dragging from an archive or palette onto the main view. When hovering over any item in the main view, the proposed selection will turn the selection color (blue by default). When you drop the material onto the current selection, it will be applied to all the items selected. If you drop the material onto an item that is not currently selected, it will be applied to just that item.

You can also apply materials to items by selecting the items in the NavisWorks selection tree or scene and then right-clicking the material in the palette and clicking **Apply to selected items** on the shortcut menu.

Rules can also be used to apply materials to items based on their layer or color or selection set names, for example. See [Chapter 35, Presenter Rules](#) for more information on this.

Applying a material to items

1. Select the items directly in the main navigation window, or in the selection tree.
2. Choose your material from an archive or palette, right-click this material and click **Apply to selected items** on the shortcut menu to assign the material to those items selected. Note that the material will only be applied to those items and not to every instance of the item, if it is a multiply instanced block or cell. To assign the material to all instances of a multiply instanced block or cell in the scene, you need to click **Apply to all instances of selection** on the shortcut menu.
3. Alternatively, you can simply drag-and-drop a material from an archive or palette onto items in the selection tree or main navigation window to assign those materials to the items. Note that the selection resolution determines which items will receive the materials. See “ [Selection Resolution](#) ” for more information on selection resolution.

Removing Presenter Materials

You can remove materials assigned to items either from the material or from the item:

Removing a material from items

1. Right-click the item in the main navigation window, or in the selection tree and click **Presenter > Remove Material** on the shortcut menu. This item on the menu will only be available if the right-clicked item has any material assigned to it at that selection resolution in the tree - see the section on Inheritance below.

Alternatively, right-click the material in the palette that you want to remove from items in the scene.
2. On the shortcut menu, click **Remove from all items** to remove all assignments of the material from all items in the scene.
3. If you have items selected in the main navigation window or selection tree, then you can click the **Remove from selected items** option on the shortcut menu to remove that material from only those items you have selected in the scene.

Note:

Deleting the material from the palette will automatically remove that material from any items in the scene which it was applied to.

Inheritance

Layers can have colors, just as geometry can. If a layer has a material, all its children in the selection tree inherit this material, until one of the children is assigned its own material, at which point, all *its* children in the selection tree inherit this material, and so on.

If you drag-and-drop materials onto layers, this works fine because only the layer picks up the material and although its children inherit the material, they do not have it explicitly assigned to them.

Therefore, right-clicking on such a child will not allow you to remove the material because one was not explicitly assigned in the first place.

However, if you use a rule to assign a material to a certain color, then all objects in the scene will get this material explicitly assigned to them, including parent layers and child objects. If, with a selection resolution of something like **Geometry** (which is more specific than a resolution of **Layer**), you right-click a child object and click **Remove Materials** on the shortcut menu, then the material will be removed from the child object, but not from the parent layer and there won't be any apparent difference.

To remove the material, you will therefore have to remove it from the parent object, in the above situation this would be the layer.

Organizing and Managing Materials

In this section you will learn how to organize materials into folders, and how to manage the material palettes.

Custom Folders

You can organize materials into custom folders for easy reference and management. By doing this, you are, effectively, customizing a user archive.

To add a custom folder:


1. Open the Presenter window, and click the **Materials** tab.
2. Right-click the **My Materials** folder on the left pane, and click **New Directory** on the shortcut menu.
3. Expand the **My Materials** folder, right-click the new folder, and click **Rename** on the shortcut menu.
4. Type in the new name, for example 'GGK Project'.

To delete a custom folder:

1. In the Presenter window, **Materials** tab, expand the **My Materials** folder on the left pane, and right-click the folder you want to delete.
2. Click **Delete** on the shortcut menu.

To copy materials into a custom folder:

1. In the Presenter window, **Materials** tab, click a material on the right pane, and drag it to the desired location under the **My Materials** folder on the left pane until a cursor displays a small plus.
2. Release the left mouse button to drop the material into the folder.

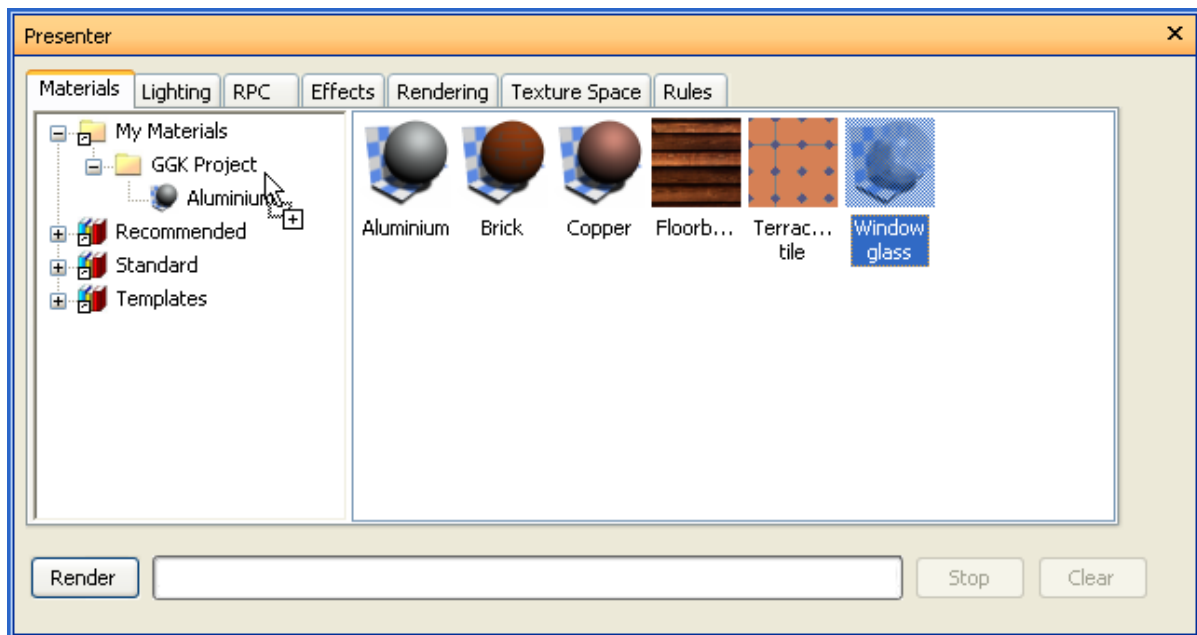

Note:

You can also copy materials between the folders on the left pane by either dragging and dropping them, or using the **Copy** and **Paste** options on the shortcut menu.

The Material Palette

The material palette is where you edit and manage your materials for your scene. Materials are taken from the archives into the palette where they are edited. You can then save the palette into a NavisWorks Palette file (.nwp) for use in other scenes too.

To manage palette materials:

1. Right-click a material in the right-hand pane of the **Materials** tab (the palette).
2. Click **Delete** on the shortcut menu to delete the material from the palette. This will also remove the material from all items in the scene.
3. Click **Copy** to copy the material to the clipboard. Right-click an empty space in the palette and click

Paste to paste a copy of the material with the same name suffixed with the next number in the list. This process is useful if you want to test small tweaks to a material.

4. Click **Rename** to rename the material. You can also select the material and press **F2** to rename it.
5. Click **Regenerate Image** to regenerate the thumbnail of the material in the palette with the current attributes.
6. Click **Select all instances** to select the items in the scene which have this particular material assigned to them.
7. Depending on whether items are selected in the scene and whether the material has been assigned to any items, there will also be a couple of **Apply** and **Remove** items on the shortcut menu. See “[Applying Presenter Materials](#)” and “[Removing Presenter Materials](#)” for more details on these.
8. Click **Clear Palette** to delete all the materials from the palette and also from all items in the scene.
9. Click **Load Palette** to load a previously saved palette of materials into the current scene. This will delete any materials currently in the palette. The standard **File Open** dialog box will appear, allowing you to browse to an .nwp file.
10. Click **Append Palette** to load a palette from an .nwp file, while keeping all the existing materials in the current palette. Any materials that are duplicated will be renamed with the .nwp file as an extension.
11. Click **Merge Palette** to merge a palette from an .nwp file into the current scene. This is like appending, but instead of adding and renaming any duplicate materials, merging will overwrite existing materials of the same name.
12. Click **Save Palette As** to save your current palette of materials into a NavisWorks Palette (.nwp) file. If you save the current scene using the usual **File > Save** method into an .nwf or .nwd file, the palette will be saved too, but the independent .nwp file is useful if you want to transfer materials you've made in one scene into other scenes.

Note:


If you publish an .nwd file, using the **File > Publish** command a **_Presenter_Maps** folder will be created along with the .nwd file. This folder will contain any materials that are not contained in **Presenter runtime**, which is used by both NavisWorks and NavisWorks Freedom, to view materials.

13. Click **Edit** or simply double-click a material to open the **Material Editor** dialog box, allowing you to edit its parameters. See “[Editing Presenter Materials](#)” for more information on this.

Editing Presenter Materials




Installed archive materials cannot be edited whilst they are in the archives, but you can edit materials in the scene's palette. Edited materials will be saved with the NavisWorks model in an .nwd or .nwf file, or in an .nwp palette file, or they can be added to your user archive, **My Materials** (see “[Custom Folders](#)”).

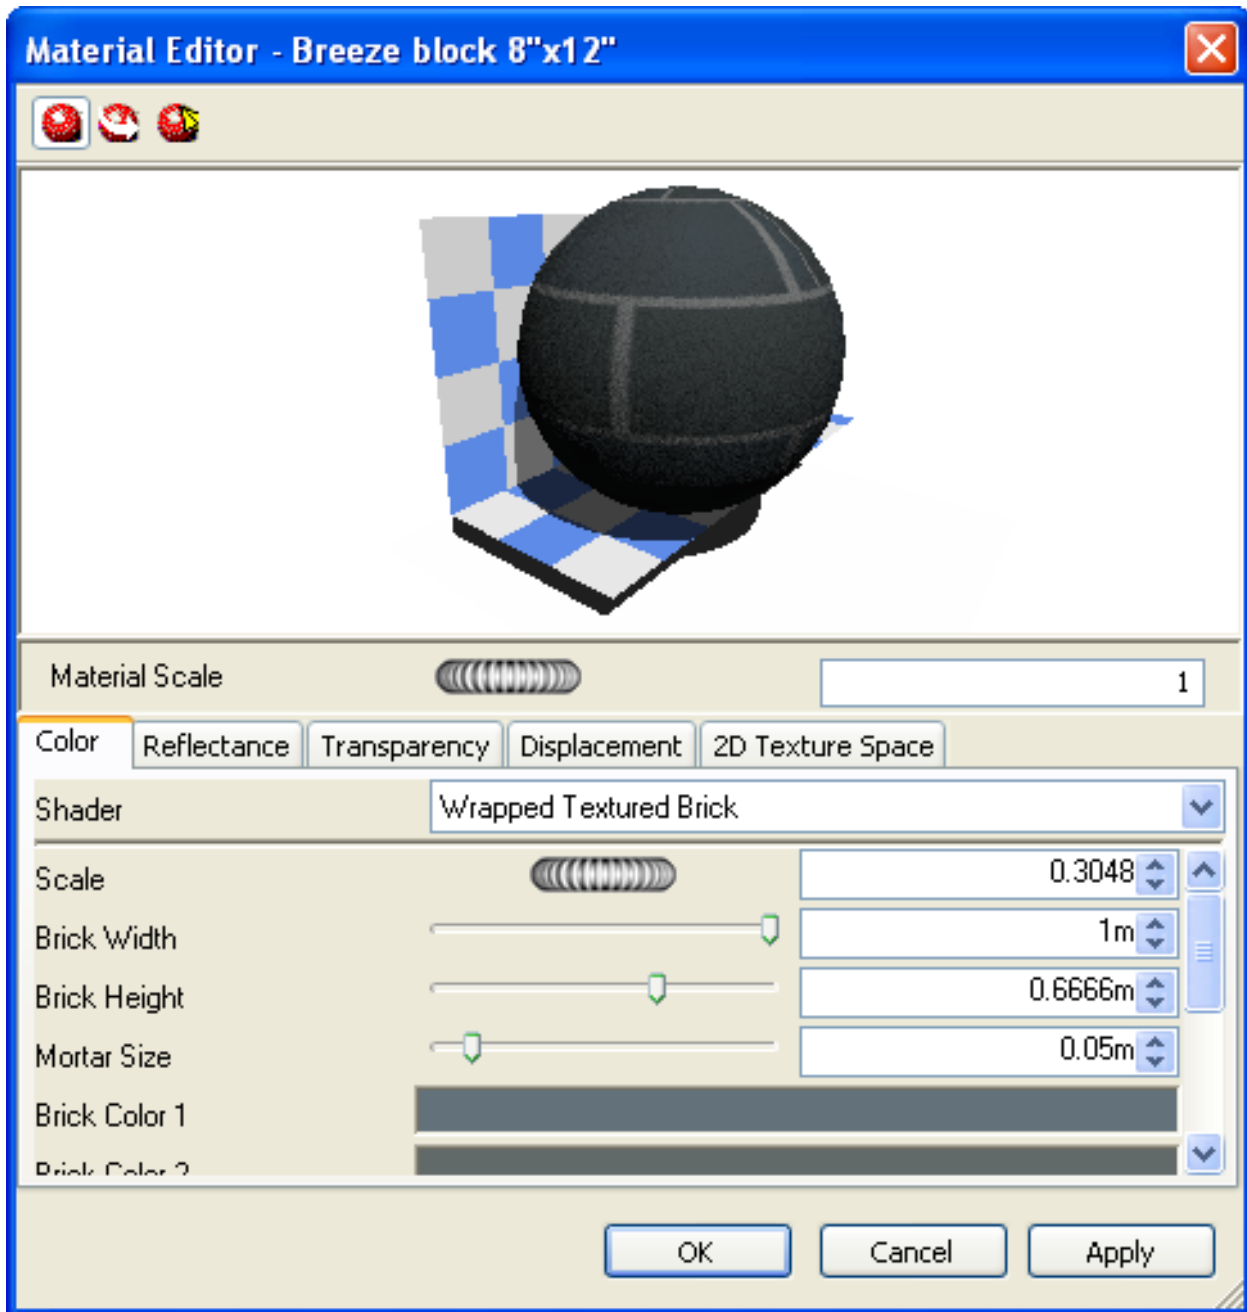To edit a material, double-click it in the palette, or right-click it and click **Edit** on the shortcut menu. The **Material Editor** dialog will appear, which will vary for different types of material. You can't add or remove parameters on a material - merely edit those existing, so it is important to use the right type of material template for the material you want to edit. The dialog for the **Breeze block** procedural texture is shown below and this will be used as an example of how to edit a material.

**Note:**

If the Presenter profile (see "[Presenter Options](#)" for more information on this) is set to **Advanced**, there are more tabs and parameters to edit in this dialog. In particular, there are **Reflectance**, **Transparency**, **Displacement**, and **2D Texture Space** tabs and at the top of each tab is a **Shader** type which allows you to completely change the type of material and all other parameters.

Editing the breeze block texture

1. The three buttons at the top determine what sort of material preview you get:
 - Click on the **Standard Preview** button  to get a software generated photorealistic preview of the material on the standard ball against checkered background, which is not interactive but will show how the material will look when rendered photorealistically.
 - Click on the **Active Preview** button  to get an OpenGL interactive preview of the material on the standard ball against checkered background. This is updated interactively while you change the parameters and will resemble the quality of material shown in NavisWorks during navigation, but will not be as high a quality as the photorealistic render.
 - Click on the **Main Window Preview** button  to close the preview window in the material editor and instead preview the material on the item in the scene in NavisWorks's main navigation window. This is updated interactively while you change the parameters and will be exactly the material shown in NavisWorks during navigation, but will not be as high a quality as the photorealistic render.
2. For a simple material, there is only a single **Material** tab on the material editor, whereas for a texture material, whether procedural (generated from an algorithm) or bitmap (generated from an image), there is an extra tab called **Texture**.


The **Material** tab contains simple parameters that affect the material's color, scale, shininess and so on. In the case of the breeze block, there are parameters for the overall scale of the material as well as a block's width and height, the blocks' color and mortar color, its roughness and reflectivity. On a bitmap texture, you would also define where the image is that becomes the texture map in the **Image File Name** text box (see [Creating a texture using your own image](#)). On a glassy material, other factors would affect the transparency and refraction properties of the glass. Some of these factors will not be apparent in the interactive OpenGL window and will have to be rendered with the **Render** button to be seen.

The **Texture** tab contains parameters that specifically affect a texture material's texture mapping properties, such as its rotation, offset (origin) and S- and T- (sometimes called U- and V-) scales. These parameter values are applied in relation to an origin point, (see ["Advanced Materials"](#) for more information). There are S- and T- Reflect check boxes, which will show the reflection of the image in either (or both) of these axis. Finally there is an Offset Center check box, that repositions the origin to the center of the image (again, see ["Advanced Materials"](#) for more information). When using the **Main Window Preview**, texture changes can be made instantly allowing interactive positioning of materials on an object.


3. At any time, click on the **Apply** button to apply the parameter edits to the material in the scene.
4. Click **OK** to keep the changes made or **Cancel** to discard any changes made (since the last time you clicked **Apply** at least).

Creating a texture using your own image

1. From the **Templates** material archive, double click on the **Plain Texture** material. This will add the material to the scene's palette and open the **Material Editor**.

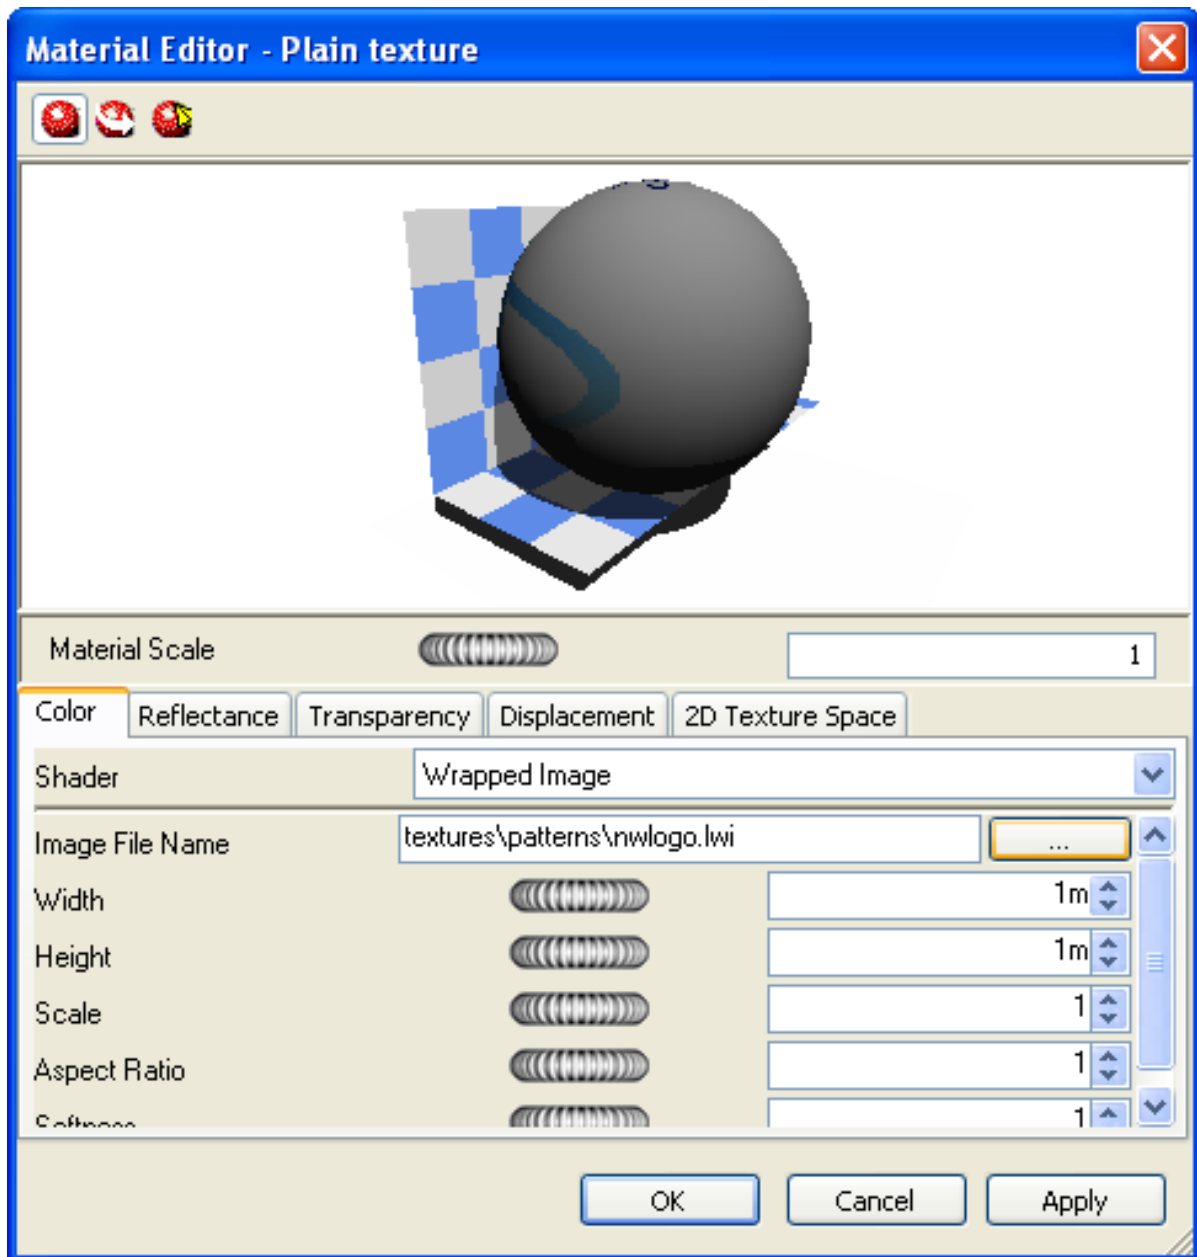

2. On the **Material** tab (or **Color** tab, if in **Developer** profile) click the **Browse (...)** button next to the **Image File Name** text box. The **Open Image File** dialog is displayed:

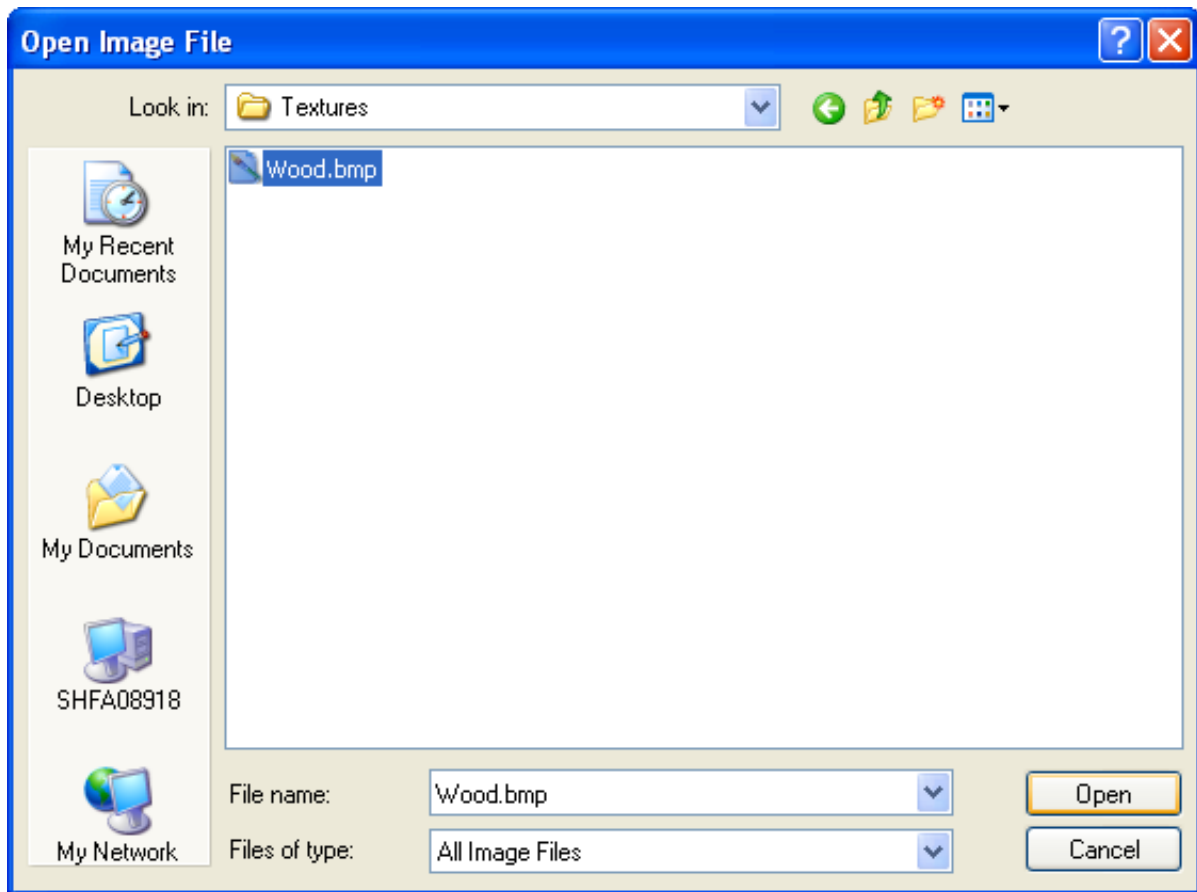

3. Browse to the location of and select your image file, then click **Open**.
4. You may then need to adjust some of the texture parameters of the new material, for example its scale, rotation, offset or reflection (if it's back to front). These may all be edited in the **Texture** tab. See "[Editing Presenter Materials](#)" for more information on editing materials.

Advanced Materials

Internally a material is defined by four shaders from different classes - Color, Transparency, Reflectance and Displacement. Each class of shader controls a different aspect of a material's behavior. There are many types of shader in each class, each type being defined by its own set of parameters.


- A **color** shader is used to define the color of a surface at any point in space. It may be as simple as a plain color which specifies all parts of the surface to have a uniform color, or it may define complex surface patterns such as marble or wood. Every material *must* have a color shader.
- A **transparency** shader is used to define how transparent or opaque a surface is, and thus how much light is able to pass through it. Transparency shaders range from a simple uniform transparency to more complex regular or irregular eroded patterns that would be more difficult to represent using modelling techniques. A material without a transparency shader is completely opaque.
- The behavior of a surface in the presence light is represented by a **reflectance** shader which defines

how much light is reflected by the surface towards the viewer. Shaders of this class may be thought of as defining a surface's "finish", and are used to model properties such as matte, metal and plastic.

- Small surface perturbations can be supported by means of **displacement** shaders. Typically, a displacement shader will give an otherwise smooth surface an irregular or indented appearance. Displacement shaders are used to represent features that would be difficult, impossible, or inefficient if conventional modelling techniques were used. For example, rough metal castings and the regular indentations produced by pressed sheet metal can be simulated.

Normally the material editor displays a selection of the most important parameters from all shaders within the material tab. If the user profile (see "Profiles" under "Interface" in the Basic NavisWorks Functionality section for more information on this) is set to **Developer**, then all four shaders can be edited and changed individually.

Some shaders are described as "wrapped". These define a flat, two dimensional material, like wall paper. Wrapped materials need a **texture space** shader to define how they should be applied to (wrapped around) a three dimensional object. Materials that include a wrapped shader can also include a texture space shader. A special type of texture space shader, called a layout shader, can be used to transform (rotate, stretch, offset) the two dimensional material before it is applied to the three dimensional object. Transforms are based around an origin point, which by default, is the top left hand corner of the image (refer to the diagram below, where the image is enscribed in the red square, which is then repeated. The default origin is **Point 1**). Checking the **Offset Center** check box will reposition the origin to the center of the image (**Point 2**). Finally, in **Developer** profile, you can edit the **Decal Mode**, choosing from either **Default** or **Normalized**. Selecting **Normalized** will move the origin to the lower left corner of the image (**Point 3**, with the **Offset Center** option un-checked). With both **Normalized** and **Offset Center** selected, the origin will be repositioned in the center of the repeated image, directly below (**Point 4**).

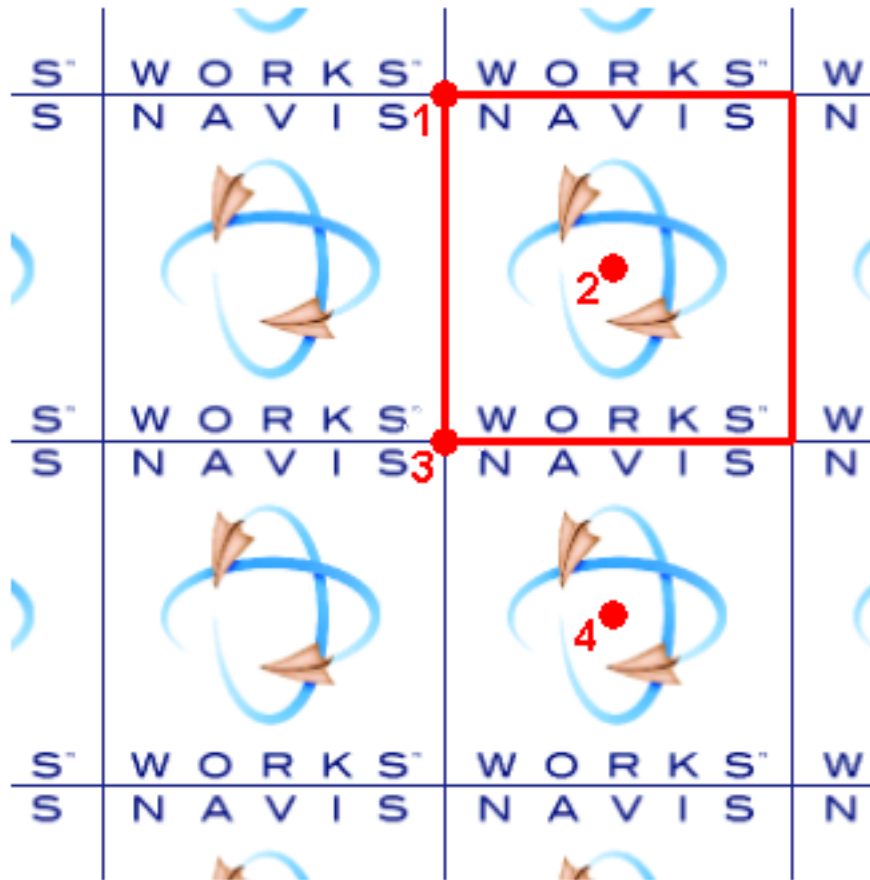

In Presenter, materials that include a wrapped shader also have a layout texture space shader associated with them. Normal texture space shaders are associated with objects.

Note:

A complete reference manual for all types of rendering styles is included with the NavisWorks API, (see \API\COM\documentation\shaders.chm). The NavisWorks API is included with NavisWorks and can be accessed via the NavisWorks installer menu.

Chapter 30. Presenter Lighting

In this section you will learn how to apply, remove, and manage lights.


Lighting Tab

Like the Materials, Effects and Rendering tabs, the **Lighting** tab is divided into two panes - the archive on the left and the palette on the right. The archive contains individual lights, as well as light studios. A light studio is a combination of lights that work well together. The palette contains all the lights that are active in the scene.

To apply a light to the scene, you drag it from an archive into the palette, at which point you can edit its parameters if required. The light is added to those already in the scene.

To apply a light studio to the scene, you drag it from an archive into the palette. All the lights in the light studio *replace* those already in the scene. Light Studios are applied to the scene intelligently. The light studio is oriented and scaled to match the scene to which it is being applied. You can also expand a light studio in the archive and drag the lights into the palette individually. If you do this the lights are *not* oriented or scaled to match the scene.

Each light in the palette has a check box, which can be used to turn the light on or off in the scene.

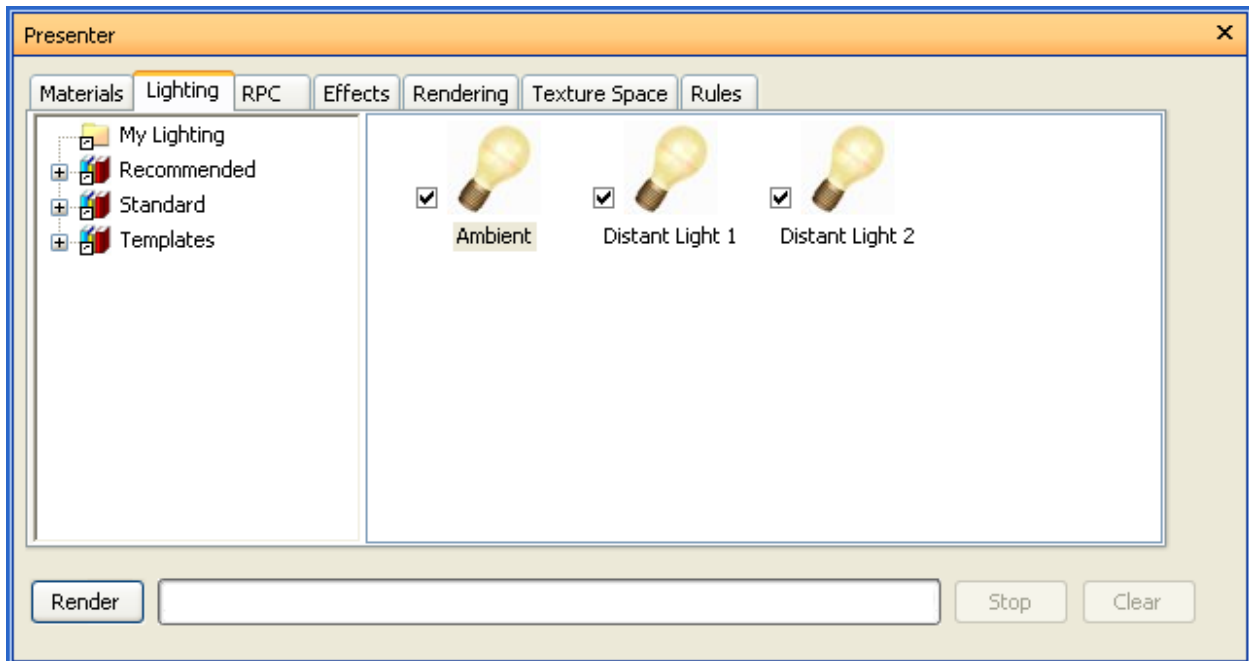

The following sections will describe how to manage and edit lights for insertion into the scene.

Adding and Positioning Lights

Lights and light studios can be taken directly from the archives and applied to the scene by simply dropping them into the palette. These can then be repositioned as you wish.

The **Recommended** archive contains five lights (**Ambient**, **Distant**, **Eye**, **Point** and **Spot**), a **Standard Light Studio**, an **Environment Light Studio**, an **Environment** folder containing two Environment lights

utilising HDRI-based light sources (see “ [Image-based Lighting](#) ” for more information), and an **Exterior** folder, that contains three light studios for different city locations around the World (**Clear Sky**, **Overcast Sky** and **Sun Study**).

If you are creating an external render of a building, for example, then you may find that one of the **Environment** light studios can give a very realistic effect, using Image-based lighting to light the scene. Alternatively, **Exterior** light studios may give you the effect you require. These do use physically accurate lights however, which generally take longer to render the scene.

Alternatively, you may prefer to use the **Standard Light Studio** as a starting point and build up your lighting from there, adding combinations of the basic recommended lights to create the desired effect..

The **Standard** archive contains a **Default Eye Light** studio (which is effectively rendering with a head light); a folder of **Exterior** light studios which predominantly consist of studios that use a number of lights to replicate the effect of a **Sky** light. Not using physically accurate lights means you don't have to turn on **Auto Exposure** (see “ [Auto Exposure](#) ”) which can negatively impact on the basic recommended light settings; a folder of **Interior** light studios for use in internal scenes; a folder of **Object** light studios which are best suited to lighting smaller models, such as a vehicle or piece of machinery, for example; and a folder of **Projector** light studios, which can be used to project an image onto an object in the scene.

The **Templates** archive contains all of the basic light shaders that are available. These can then be edited (as can all lights) to create the exact lighting you require (see “ [Editing Lights](#) ” for more information on editing lights).

Adding lights to the scene:

1. From one of the archives in the left hand pane of the **Lighting** tab, choose the light you wish to add to the scene.
2. Drag the light and drop it into the palette (right hand pane of the **Lighting** tab). This will automatically be added to the scene. To reposition the light within the scene, see Positioning lights in the scene.

Note:

If you drag a light studio into the palette, this will replace any existing lights with those that make up the light studio.

As a general guide, the more lights there are in a scene, the longer it will take to render it photorealistically. For external rendered scenes, you may consider using the **Standard Light Studio**, (from the **Recommended** archive) as a starting point, then strategically add a couple of **Point** and **Spot** lights around the scene, (Point lights are good to light up a dark area of the scene, whilst Spot lights can add an element of drama and enhance realism).

Positioning lights in the scene:

1. Having added a light to the scene (see Adding lights to the scene, double-click it, or right-click and click **Edit** on the shortcut menu, to open the **Light Editor**, (see “ [Editing Lights](#) ”).
2. Point, distant, spot and projector lights have a **Location** parameter. Distant and spot lights additionally have a **To** parameter. You can type in x-, y-, and z- coordinates for these, or alternatively

use the **Pick** button to interactively pick a point in the scene where the light and/or target is located. The light is represented by a 3D wireframe sun icon in the scene and the target by a wireframe sphere. The currently selected light is drawn in the selection color (see “ [Selection Options](#) ” for more information on this).

Note:

NavisWorks does not allow you to pick a point in empty space so you must pick a point on the model.

3. Lights can be positioned interactively. The 3D wireframe sun icon, representing the light, has six bars extending out along the x- axis, y- axis and z- axis. Hover the mouse cursor over one of the bars. The cursor will change to a hand and the bars will extend further along that axis. Hold the left mouse button down to hold on to the light and move it in either direction, along the extended bar. Release the left mouse button to release the light in its new position. This can be performed for all three axis.
4. Lights can also be positioned in the current location of the camera, which can be anywhere in the scene. Navigate to the location where you wish the light to be positioned. Right-click the light in the palette (right-hand pane of the **Lighting** tab) and click **Position as Camera** on the shortcut menu.

Note:

Not only will this position the light in the same location as the camera, if the light has a **To** parameter, this will also be set to the focal (or **Look At**) point of the camera.

Organizing and Managing Lights

In this section you will learn how to organize lights into folders, and how to manage the lights palettes.

Managing Folders

You can organize lights into custom folders for easy reference and management. By doing this, you are, effectively, customizing a user archive.

To add a custom folder:


1. Open the Presenter window, and click the **Lighting** tab.
2. Right-click the **My Lighting** folder on the left pane, and click **New Directory** on the shortcut menu.
3. Expand the **My Lighting** folder, right-click the new folder, and click **Rename** on the shortcut menu.
4. Type in the new name, for example 'GGK Project'.

To delete a custom folder:

1. In the Presenter window, **Lighting** tab, expand the **My Lighting** folder on the left pane, and right-click the folder you want to delete.
2. Click **Delete** on the shortcut menu.

To copy lighting effects into a custom folder:

1. In the Presenter window, **Lighting** tab, click a lighting effect on the right pane, and drag it to the desired location under the **My Lighting** folder on the left pane until a cursor displays a small plus.
2. Release the left mouse button to drop the lighting effect into the folder.

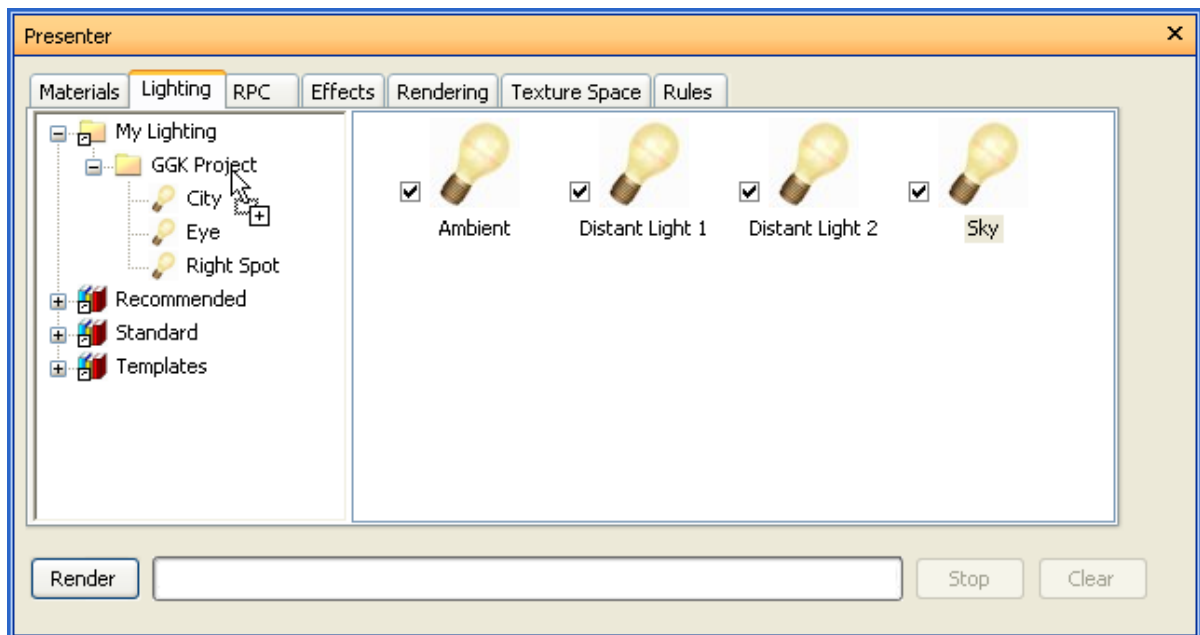

Note:

You can also copy lighting effects between the folders on the left pane by either dragging and dropping them, or using the **Copy** and **Paste** options on the shortcut menu.

The Lighting Palette

The palette is where you edit and manage your lights for your scene. Lights are taken from the archives into the palette where they are edited.

To manage palette lights:

1. Right-click a light in the right hand pane of the **Lighting** tab (the palette).

2. Click **Delete** to delete the light from the palette. This will also remove the light from the scene.
3. Click **Copy** to copy the light to the clipboard. Right-click an empty space in the palette and click **Paste** to paste a copy of the light with the same name suffixed with the next number in the list.
4. Click **Rename** to rename the light. You can also select the light and press **F2** to rename it.
5. Click **Clear Palette** to delete all the lights from the palette and hence from the scene.
6. Click **Edit** or simply double-click a light to open the **Light Editor** dialog box, allowing you to edit its parameters. See "[Editing Lights](#)" for more information on this.

Editing Lights

You can edit a light in the palette by double-clicking it, or right-clicking and choosing **Edit** on the shortcut menu.

There are six types of light visible in both OpenGL interactive renders and photorealistic renders:

1. **Ambient** lights give a general background light to the scene and therefore only have intensity and color parameters.
2. **Eye** lights are located at the viewpoint and also only have intensity and color parameters.
3. **Point** lights have a location but shine in all directions. They also have an intensity and color and additionally can cast shadows (only available in a full photorealistic render).
4. **Distant** lights are directional and so have a location and target. However, the location and target merely set up an axis down which the light shines, as these light types are infinitely far away and their beams are parallel. As well as intensity and color parameters, they can also cast shadows in a photorealistic render.
5. **Spot** lights are also directional and therefore have a location and target, as well as intensity, color and shadow parameters. In addition, they also have parameters for affecting the light's fall off and cone angle, as these light types are not infinitely far away, so do spread their light over a cone and the intensity does diminish away from the light.
6. **Sun** simulates the sun's light. The orientation of your model is defined by north and up directions. The position of the sun is specified as azimuth and altitude. If the sun's mode includes "Position", you can input your location on earth, the time (using local time zone) and date and Presenter will calculate the sun's azimuth and altitude for you. If the sun's mode includes "Intensity", Presenter will also calculate an accurate intensity for the sun based on position, time of year and atmospheric conditions.

There are an additional three types of light visible only in photorealistic renders:

1. **Projector** lights are used to project an image onto surfaces. You can define the file of the image to be projected.
2. **Sky** simulates the illumination from the sky (but not the direct contribution due to the sun itself). The orientation of your model is defined by north and up directions. The position of the sun is specified as "sun altitude" and "sun azimuth". Whilst the direct contribution of the sun is not included, its location will determine the appearance of the sky hemisphere. If the intensity is left at 0, Presenter will


calculate an accurate intensity for you based on the sun's position.

3. A **Goniometric** light is one which can emit widely varying amounts of light energy in different directions. One goniometric source could behave exactly like a point light, another could behave exactly like a spot light, and a third could look nothing like either of those. A goniometric light gets its intensity distribution function (how much light goes in any one direction) from an industry-standard file. Presenter supports CIE (*.cie), IESNA (*.ies), CIBSE (*.cib) and ILUMDAT (*.ldt) files.

Note:

A complete reference manual for all light types is included with the NavisWorks API (see \API\COM\documentation\shaders.chm). The NavisWorks API is included with NavisWorks and can accessed via the NavisWorks installer menu.

Each light type has its own parameters, and the editor for a **Point Light** is shown here:

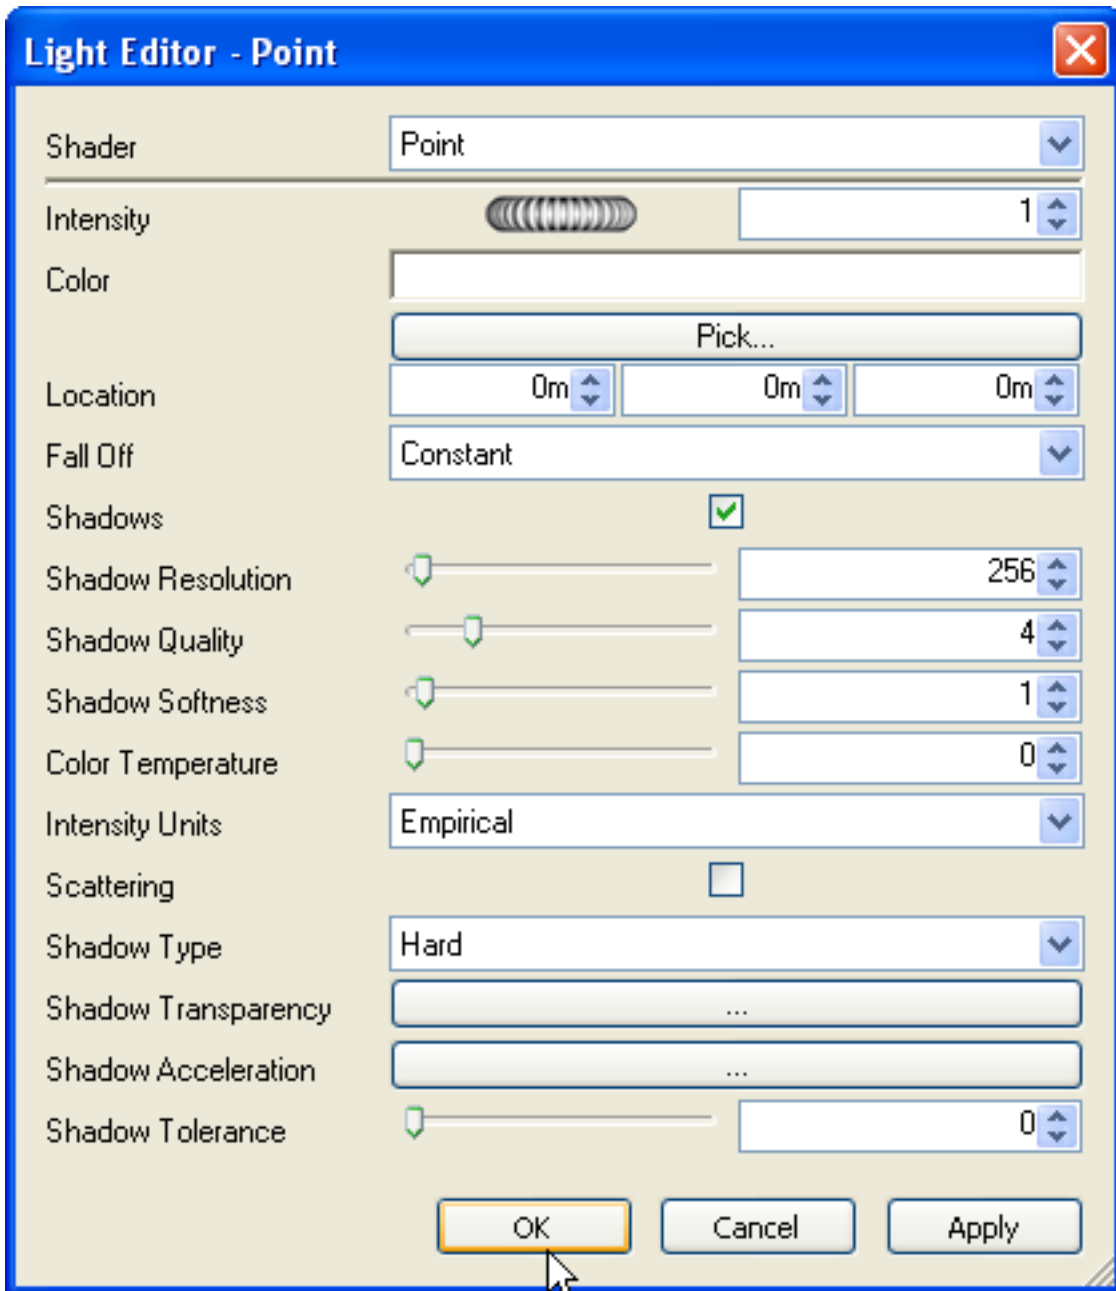

Point, distant, spot and projector lights have a **Location** parameter. Distant and spot lights additionally have a **To** parameter. See Positioning lights in the scene for more information.

Note:

If the Presenter profile (see “ [Presenter Options](#) ” for more information on this) is set to **Advanced**, the dialog will include a full list of available parameters and allow you to change the type of a light.

Point, distant, spot, sky, sun, projector and goniometric lights have a **Shadows** parameter. See Shadow Casting for more information.

Editing parameters in the dialog will interactively alter the scene with those changes.

At any time, click the **Apply** button to apply the parameter edits to the light in the scene.

You can save an edited light for use in other scenes by simply dragging it onto the **My Lighting** user archive.

Click **OK** to keep the changes made or **Cancel** to discard any changes made (since the last time you clicked **Apply** at least).

Shadow Casting

Checking the **Shadows** check box in the **Light Editor** of a light that supports shadows (Point, distant, spot, sky, sun, projector and goniometric) result in the selected light casting shadows in the scene. Shadows will only be visible in photorealistic renders; unless you are using a Hardware accelerated OpenGL 1.5 compliant graphics card, in which case you can preview **Interactive Shadows**. See “[Presenter Options](#)” for details on how to display interactive shadows and lighting.

Note:

Enabling shadows on lights should be given due consideration. If you turn on shadows on all lights, then you may find the effect very confusing and somewhat un-natural, especially if there are many lights in a small scene. This will also have an affect on performance, during navigation and general refreshing of the navigation window. You may wish to consider only enabling shadows on a few strategically positioned lights, to create the effect you require.

In addition to choosing which *lights* in your scene will cast shadows, you may also select which **items** in the scene should cast a shadow. Each item in the scene has its own shadow casting option.

The available shadow casting options available for an item, are:

- **Off**. Choose this to disable shadows. The selected item will not cast a shadow from any light source.
- **On**. Choose this to enable shadows. The selected item will cast a shadow from any light source that has shadows enabled.
- **Inherit**. Choose this to inherit the shadow casting option from the parent item. i.e. the selected item will use the same option as the item directly above it in the Selection Tree path (see “[Selection Trees](#)” for more information on the selection tree and its structure). For example, if you turn shadow casting **On** for a Group and the Geometry contained within that Layer is set to **Inherit**, then the Geometry will cast shadows also, as it inherits the **On** option from its parent (the Group).

Note:

If all items in the scene are set to **Inherit** then the default setting is **On**.

To set an items shadow casting option:

- Right-click an item in the scene, click **Presenter** on the shortcut menu and then choose the shadow casting option you require.

Note:

The item selected will depend on your Selection Resolution setting. See “ [Selection Resolution](#) ” for more information.

or

- Right-click an item in the Selection Tree (see “ [Selection Trees](#) ” for more information), click **Presenter** on the shortcut menu, and then choose the shadow casting option you require.

Advanced Lighting

NavisWorks Presenter is capable of many advanced lighting effects, including soft shadows, physically accurate lighting simulation, volumetric lighting effects and Image-based lighting.

Soft Shadows

NavisWorks Presenter includes shadows generated from pre-calculated shadow-maps for each shadow casting light source. The use of shadow maps enables rapid rendering of shadows with soft or graduated edges. The shadow resolution can be controlled to balance performance and image quality.

Soft shadows are only suitable for use with small models and are disabled by default. For large models the generation of the shadow maps can use excessive amounts of time and memory. Soft shadows generated for large models are often too vague and dispersed without using an excessively high resolution, which uses even more memory and time.

Physically Accurate Lights

By default Presenter uses lights with unitless, or empirical intensities. These are physically meaningless and are just chosen to give a visually pleasing result. Presenter can also use physically accurate intensities. These are defined in real world units such as Candela, Lumen or Lux. However, once we start using lights with real world intensities, we start to produce images with a real world variation in luminance values.

By default Presenter uses lights whose intensity remains constant as you move further from the light. In the real world intensity is reduced proportional to the inverse square of the distance from the light. Changing a light's "Fall Off" parameter to "Inverse Square Law" will more accurately model a light's fall off in intensity. However, once we start using lights with real world fall off, we start to produce images with a real world variation in luminance values.

In the real world, the human eye is capable of resolving images in extremely varied lighting conditions, ranging from bright sunshine reflecting off snow to a room lit only by a single candle. In computer graphics on the other hand, we need to produce an image on a display device which has a very limited range of luminance values. Therefore it is necessary to compress the range of luminance values found in a real world scene into the displayable range in such a way as to produce a realistic looking image.

Photography, of course, has exactly the same problem. If a photographer (or camera) does not take into account the light levels in a scene before calculating the exposure of the shot, the likely result will be an image which is either over-exposed (everything is too bright) or under-exposed (everything is too dark). A professional photographer will also use different speeds of film for different lighting conditions. The aim is to produce an image on film that is representative of how that scene would have looked to a human observer.

Presenter includes an "Auto Exposure" option (see “ [Auto Exposure](#) ”). When enabled, Presenter will

render the image twice. Once to sample the range of luminance values in the output image, then a second time to render the actual image with the luminance values adjusted to match the behavior of the human eye.

In general, when using physically accurate lights, "Auto Exposure" should be on.

Volumetric Lights

Volumetric lighting allows effects such as the scattering of light, by fog or smoke, in a scene. Enable the "Scattering" check box on each light. A "Scattering Medium" foreground effect must also be in use (see "[Foreground Effects](#)" for more information on how to setup foreground effects).

You may need to adjust the "Medium Density" and "Medium Ambient" parameters of the "Scattering Medium" foreground effect to suit your model. If no volumetric effects are visible, the "Medium Density" is too low. If the rendered image is entirely white, the "Medium Density" is too high.

The default medium is plain white. Optionally, a "density shader" may be set to any solid (not wrapped) color shader, to create the effect of a non-uniform (inhomogeneous) medium. Examples of shaders that can be used are "Blue Marble" and "Solid Clouds". A shader that has been designed explicitly for this purpose is the "Turbulent" shader.

The key points when using volumetric lighting are:


- Remember to turn the "Scattering" parameter of light sources on if you want to see their volumetric effects.
- Use "Medium Density" and "Medium Colour" to define brightness and colour of the lit medium.
- Use a solid color shader set as "Density Shader" for simulation of density variations in the medium.
- Decrease "Error Bound" if image appears spotty outside shadow areas.
- Increase "Min LOD" parameter if areas with volumetric shadows appear spotty.
- Set high "Error Bound" and small "Min LOD" for fast previews.
- Use "Inverse Square Law" for your light's "Fall Off", together with auto exposure, for best results.

Image-based Lighting


Image-based lighting, simply put, is where an image is used to light a scene. In the real world, every object is lit not only by light sources like the sun, lamps etc, but also by everything around. Standing in the middle of a street, a person will be lit by the sun, the blue sky, the brown buildings and the grey floor. Emulating this form of lighting clearly has the potential to create incredibly realistic images.

Images used in this lighting method are a special kind of image called a High Dynamic Range Image or HDRI. This type of image has the capability of lighting a scene with incredible accuracy. In Presenter an HDRI is wrapped around the scene as a sphere, and colour and brightness from the HDRI are cast onto the 3D model to light it.

To give an example of the difference this can make, this is a before shot using normal lights

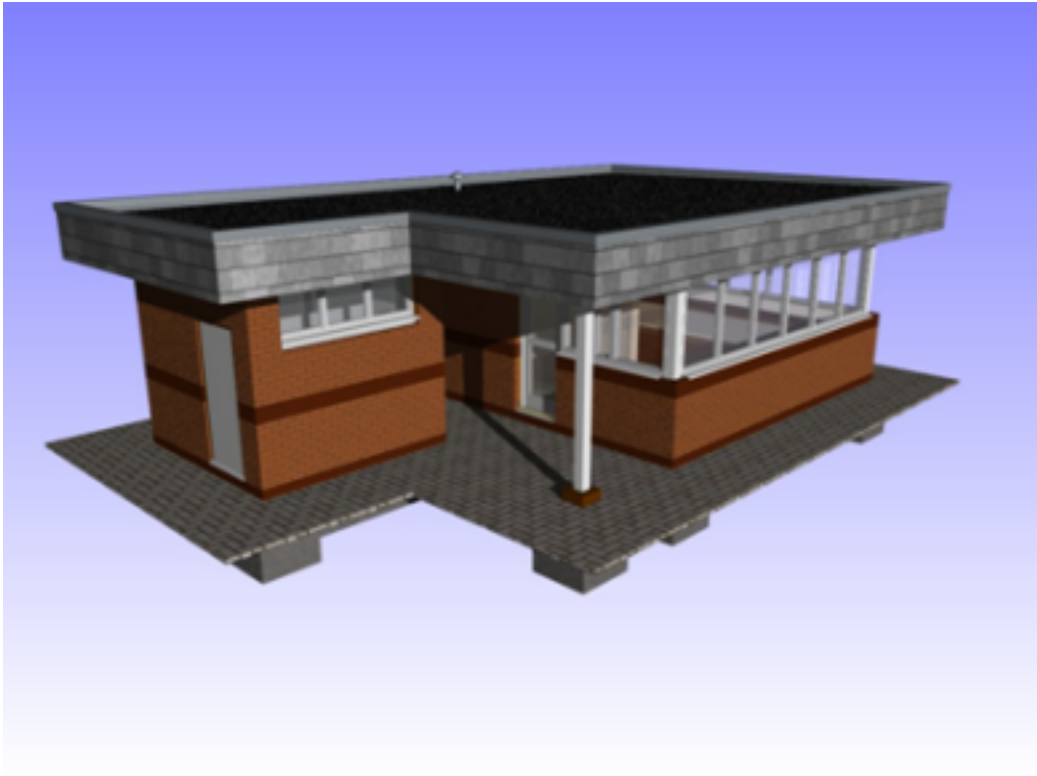

and this is the same model lit with Image-based Lighting

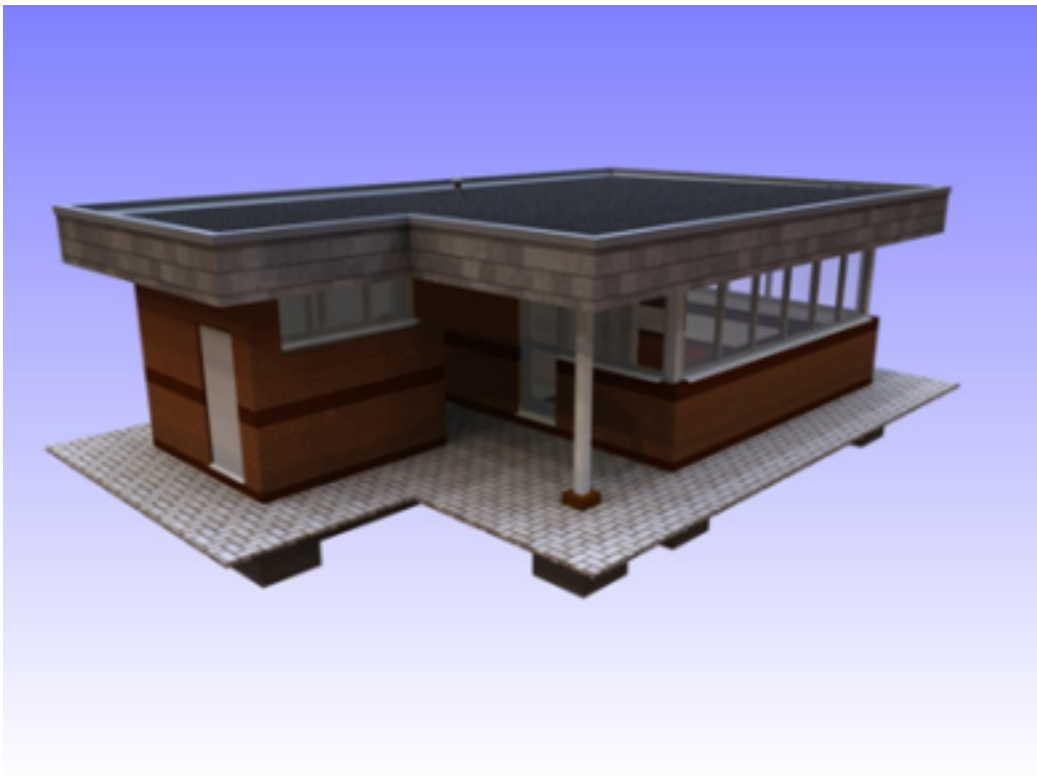

It is clear the difference this form of lighting can make to rendered images. And the enormous advantage here is that it is much easier to set up than traditional lighting.

Image-based Lighting Setup

1. On the Lighting Tab, click on the **Recommended** folder in the left hand side of the palette.
2. Drag the **Environment Light Studio** into the palette on the right. This replaces all lights that were in the palette with an Ambient and an Environment light containing our High Dynamic Range Image.
3. Click on **Render** to render the scene using the default image contained in this Environment light. This type of render can take slightly longer than traditional lighting methods, but the results are worth the extra time invested.
4. To use an alternative sample image, click on the Environment folder on the left to show another two example environment lights; a Sky (used in the example above) and a City. Drag the City light over to the right to replace the Environment light in the palette (which should be deleted before rendering).
5. To manually insert a new HDRI, double click on the Environment icon in the palette, select the **Edit...** button next to Environment, click on the "... " button next to Filename, and browse to the .hdr file required. For this to work correctly, this HDRI must be a **Light Probe** HDRI. (Additional Light Probe HDRIs are available from a variety of places on the Internet, including [Dosch Design](#).) Click on **OK** in both dialogs to set the new image to be the light source, and click **Render** to produce a newly lit rendered scene.

Chapter 31. Presenter RPCs

In this section you will learn how to setup and apply rich photorealistic content.


RPC Tab

Presenter RPC (Rich Photorealistic Content) support enables the addition of photographic scenery into any 3D project. RPC files can be bought directly from [ArchVision](#), and typically come in libraries of content ranging from trees and plants to people. They also come in a variety of types.

- **2D** RPCs are single-direction 2D photographs that always face the camera, and are a single frame, looking the same from every angle, and not animating.
- **3D** RPCs are objects that have a high number of frames allowing the camera to move around the object and see it from all angles.
- **2.5D** RPCs are single-direction 2D photographs, but are animated. Animated RPCs will only animate visually when exported as a rendered animation.
- **3.5D** RPCs include animation and views from all around the object.
- **3D+** RPCs, often called "Smart Content" are not currently supported by Presenter.


The key benefit to using RPC content is that it only takes a short amount of time to fill a scene with realistic content and it adds very little to the rendering time.

Like the Materials, Lights and Rendering tabs, the RPC tab is divided into two panes for archives and palette. This tab is where you set up RPCs (Rich Photorealistic Content).

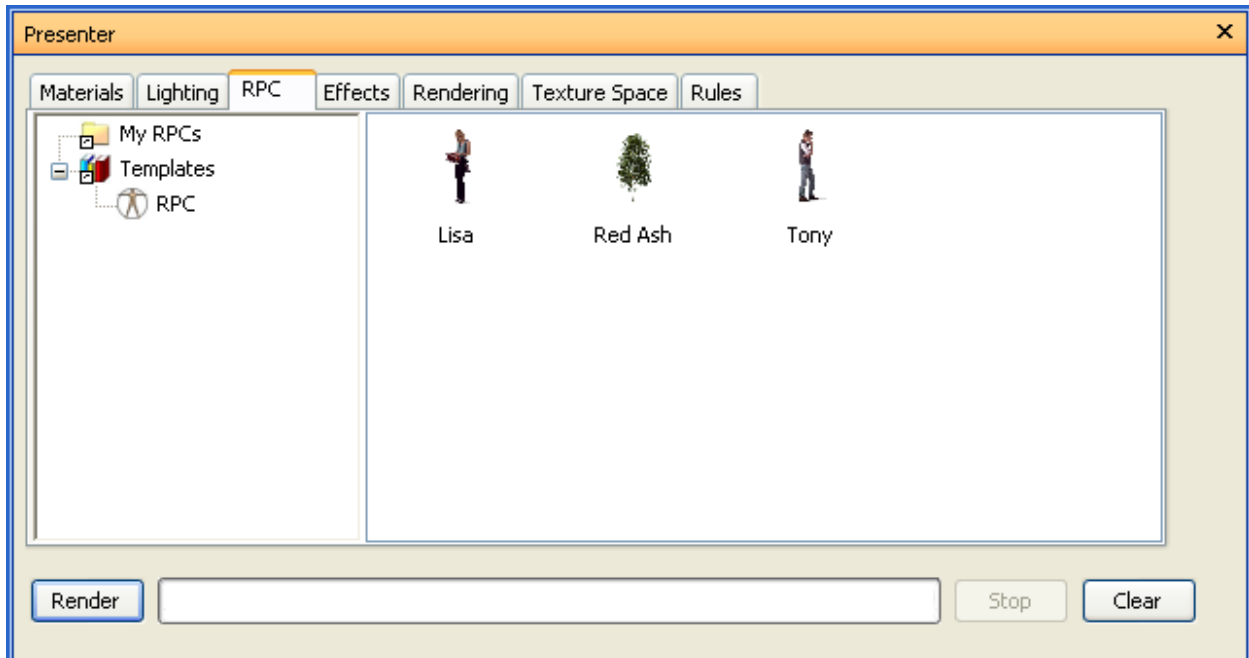

RPC Setup

1. Drag the RPC symbol from the Templates archive to the palette on the right.
2. Double click on the symbol in the palette, which should bring up the options dialog.

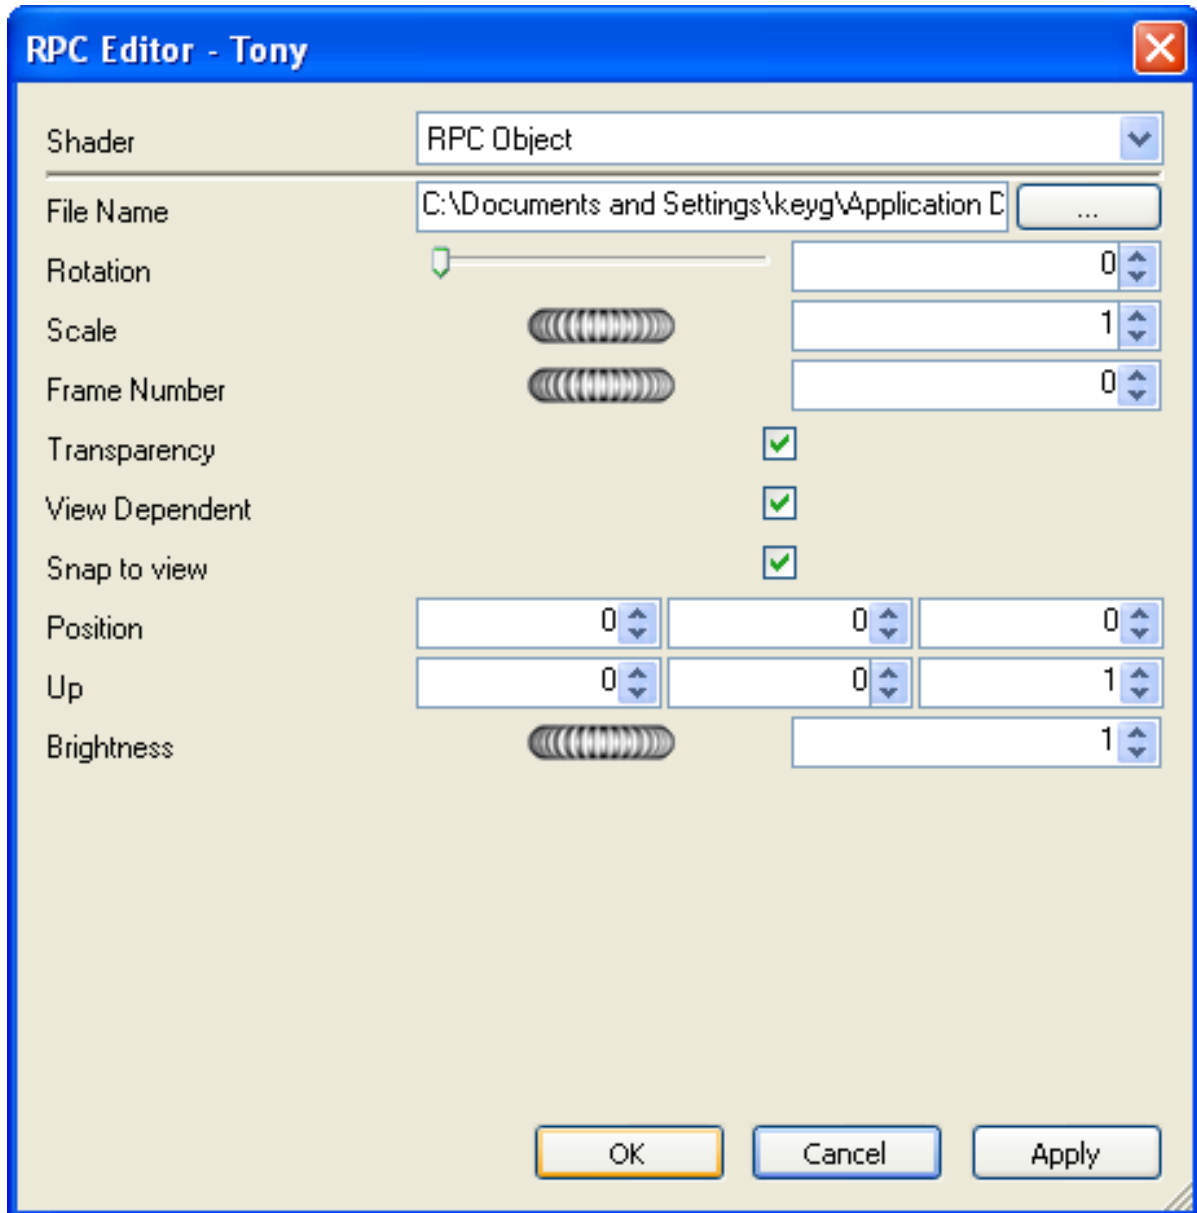

3. To select an RPC for use, click on the "..." button. This brings up a load dialog to browse to the location of the RPC file. NavisWorks has a number of free example RPC files in the resources area of the product CD. Once the file has been selected, click on **OK**.
4. Make sure the settings on the options dialog are what is required. Often these will not need to be altered, though they are self explanatory and can be experimented with at any time. If they require

adjusting, simply double click on the RPC symbol in the palette again and alter them until correct.

5. Click **OK** to continue.

This scene shows an example of some RPC people on and around a building.



RPC Manipulation

- To position the RPC in the scene, either right-click the RPC in the palette and select **Add Instance** which gives a target cursor with which to then click on a location in the 3D scene, or left-click and drag the RPC icon from the palette on to the required position in the 3D scene.
- To move an RPC within the scene, right-click it in the main view and select **Pick Position**. This changes the cursor to a target for selection of an alternative location.
- To delete an RPC from the scene, right-click it in the main view and select **Remove**.
- Whilst navigating through the scene, RPCs will always turn to face the camera. If the RPC is 3D or 3.5D right-clicking and selecting **Refresh** will set it to the correct frame based on the current camera position. Rendering the scene using the **Render** button will always refresh all RPCs.

Note:

When publishing a scene using Publisher, any RPCs included in that scene are not published to the Presenter_maps directory or embedded in the NWD file. The size of the files and the fact that


most are licensed currently prohibits this.

Chapter 32. Rendering Effects

In this section you will learn how to apply, remove, and manage background and foreground effects.

Effects Tab

Like the Materials, Lights and Rendering tabs, the effects tab is divided into two panes for archives and palette. This tab is where you set up different background and foreground effects.

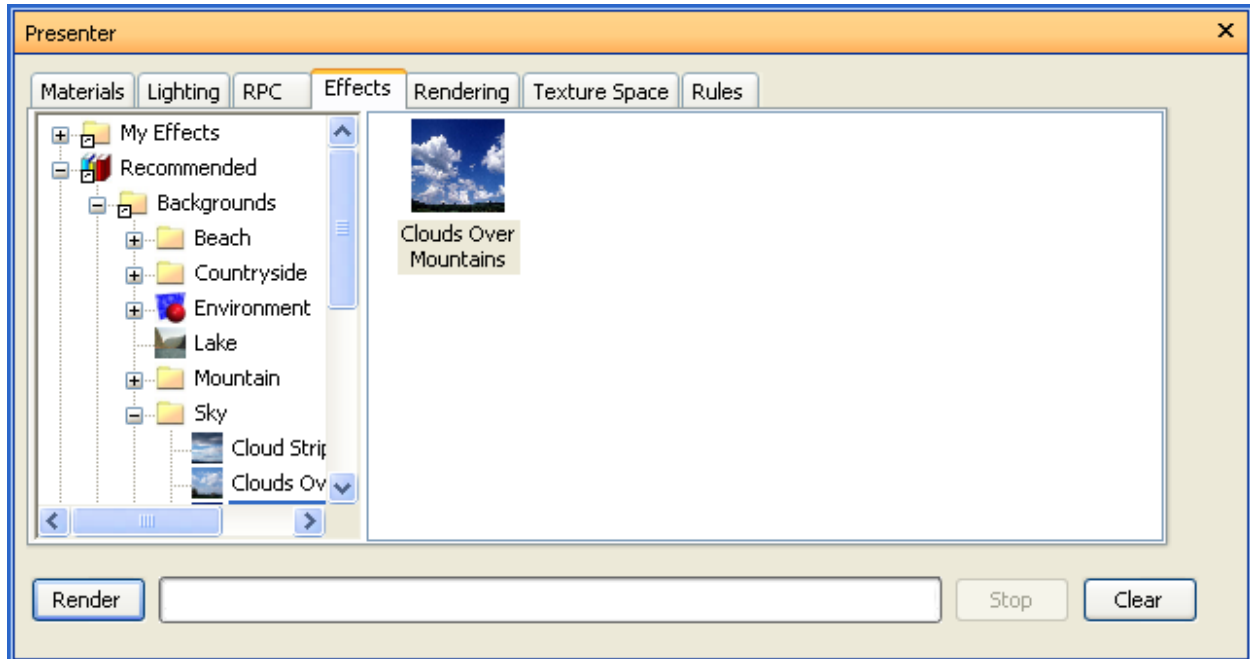

To set up an effect for the render, you simply drag a style from the archive to the palette. You can only have one of each type of effect at once in the palette: that is, one background and one foreground style.

Note:


A complete reference manual for all types of foregrounds, backgrounds and rendering styles is included with the NavisWorks API (see \COM\documentation\shaders.chm). The NavisWorks API is included with NavisWorks and can be accessed via the NavisWorks installer menu.

Background Effects

Background effects affect the background of the image when rendered and include plain colors, graduated colors, procedural clouds and image files (tiled or scaled).

To set up a background for your render, simply drag your chosen background onto the palette on the right hand side of the tab. Most backgrounds can be rendered interactively in OpenGL so you have a good preview of how the background will be fully rendered.

To edit your chosen background effect, simply double-click the effect in the palette. The **Background Editor** dialog will appear. Each editor will be different for each type of background. The **Scaled Image** editor is shown here:

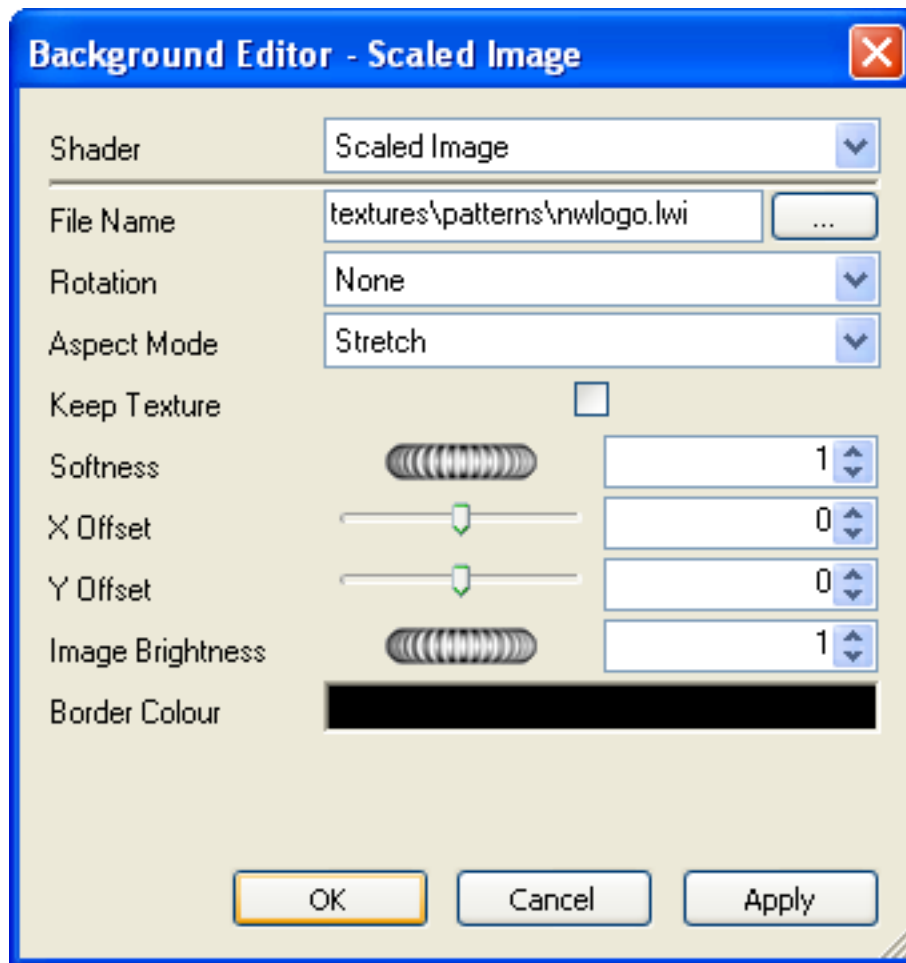

Note:

If the Presenter profile (see “ [Presenter Options](#) ” for more information on this) is set to **Advanced**, the dialog will include the full list of parameters and allow you to change the type of background.

In the **Background Editor**, click the Browse button (...) next to the **File Name** box to display the **Open Image File** dialog. From here, browse to an image file and click **Open** to use that image as the background.

Editing parameters in the dialog will interactively alter the scene with those changes.

At any time, click the **Apply** button to apply the parameter edits to the scene.

You can save an edited background for use in other scenes by simply dragging it onto the **User, Backgrounds** archive.

Click **OK** to keep the changes made or **Cancel** to discard any changes made (since the last time you clicked **Apply** at least).

Environment Backgrounds


Environment backgrounds are a special kind of background that move with the model and allow reflections from reflective model parts. There are a number of different types of environment image types; we recommend using **Vertical Cross** maps. These images are automatically placed on the inside of a cube that then surrounds the scene. Due to the nature of the feature, edges and corners become indistinguishable. A wide variety of environment maps are available for purchase on the internet.

The additional realism accessible through Environment backgrounds is possible through two drag and drops.

1. Load a model into NavisWorks and set the view to be outside so that the external scene is visible.
2. Open the Presenter window and select the **Effects** tab.
3. In the left-hand window, open the **Recommended** folder, open the **Environments** sub-folder and then open the **Panorama** sub-folder. In here will be two environments, City and Sky. Drag Sky from the left over to the palette on the right.
4. Back in the **Recommended** folder, open the **Backgrounds** sub-folder, and drag the **Environment** over to the palette on the right. Because this type of background is made up of two parts, the Sky image and the background Environment shader that points at the image, these two elements will link together automatically.

Once this is complete, moving around the model will see the background moving appropriately in real-time. With a modern graphics card, if there are reflective surfaces in the scene, opening **Tools, Global Options, Presenter** and setting **Hardware to Lighting** will show the newly set up background reflected in all such surfaces.

Pressing the **Render** button will also show this background in the photorealistic output.

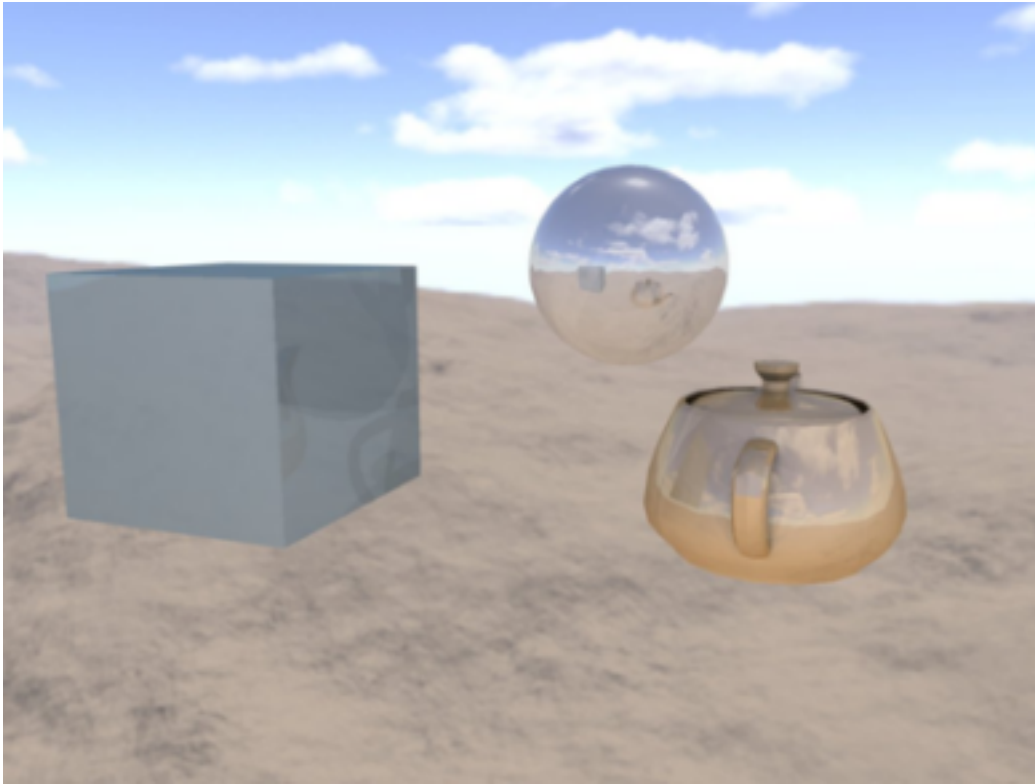

Foreground Effects

Foreground effects affect the foreground of the image when rendered and include fog and snow effect. None of these effects are available as an interactive preview and can only be seen when a full render is done.

To set up a foreground for your render, simply drag your chosen foreground onto the palette on the right hand side of the tab.

To edit your chosen foreground effect, simply double click the effect in the palette. The **Foreground Editor** dialog will appear. Each editor will be different for each foreground type. The **Fog** editor is shown here:



Note:

If the Presenter profile (see “ [Presenter Options](#) ” for more information on this) is set to **Advanced**, the dialog will include the full list of parameters and allow you to change the type of foreground.

At any time, click the **Apply** button to apply the parameter edits to the scene.

You can save an edited foreground for use in other scenes by simply dragging it onto the **User, Foreground** archive.


Click **OK** to keep the changes made or **Cancel** to discard any changes made (since the last time you clicked **Apply** at least).

Chapter 33. Rendering Styles

In this section you will learn how to choose and apply rendering styles.

Rendering Tab

Like the Materials, Lights and Effects tabs, the **Rendering** tab is divided into two panes for archives and palette. This tab is where you select in which style and how you wish the scene to be rendered. Each archive has a number of different render styles to choose from.

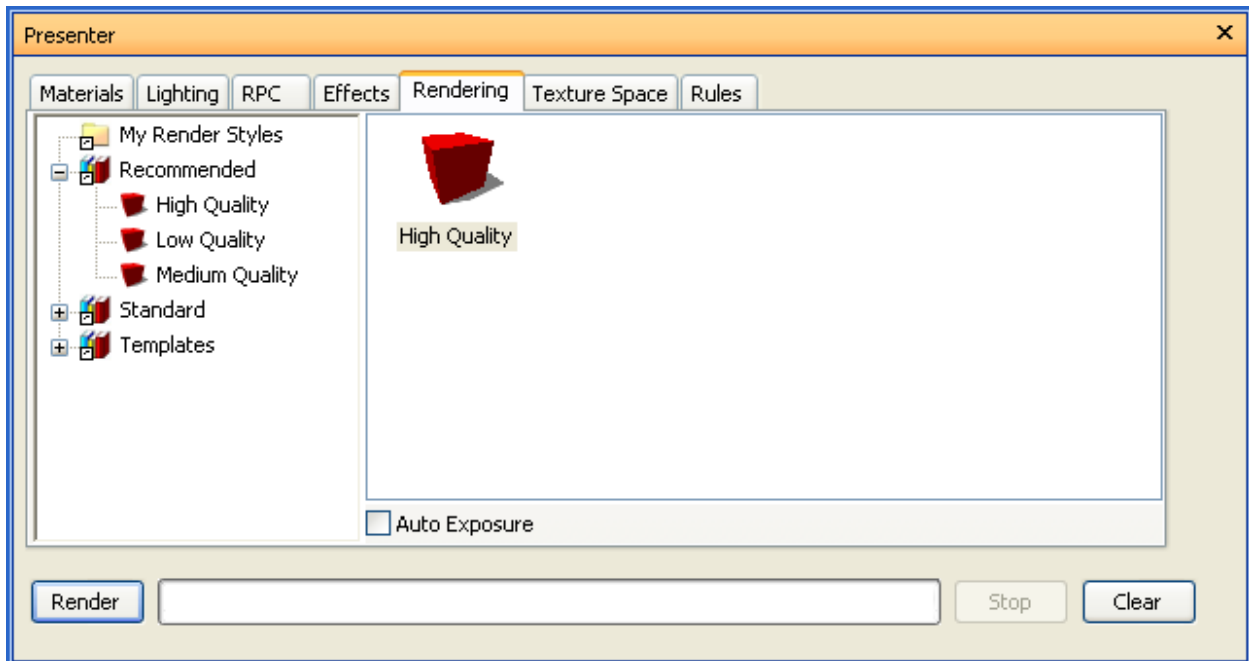

Note:


A complete reference manual for all types of rendering styles is included with the NavisWorks API, (see \\API\COM\documentation\shaders.chm). The NavisWorks API is included with NavisWorks and can be accessed via the NavisWorks installer menu.

Rendering Styles

Rendering styles affect the way that the scene is rendered when a full photorealistic render is done (by clicking on the **Render** button). None of these effects are available as an interactive preview.

To set up a rendering style, simply drag your chosen style onto the palette on the right-hand side of the tab.

To edit your chosen rendering style, simply double-click the style in the palette. The **Render Editor** dialog will appear. Each editor will be different for each type of rendering style. The **High Quality** editor is shown here:

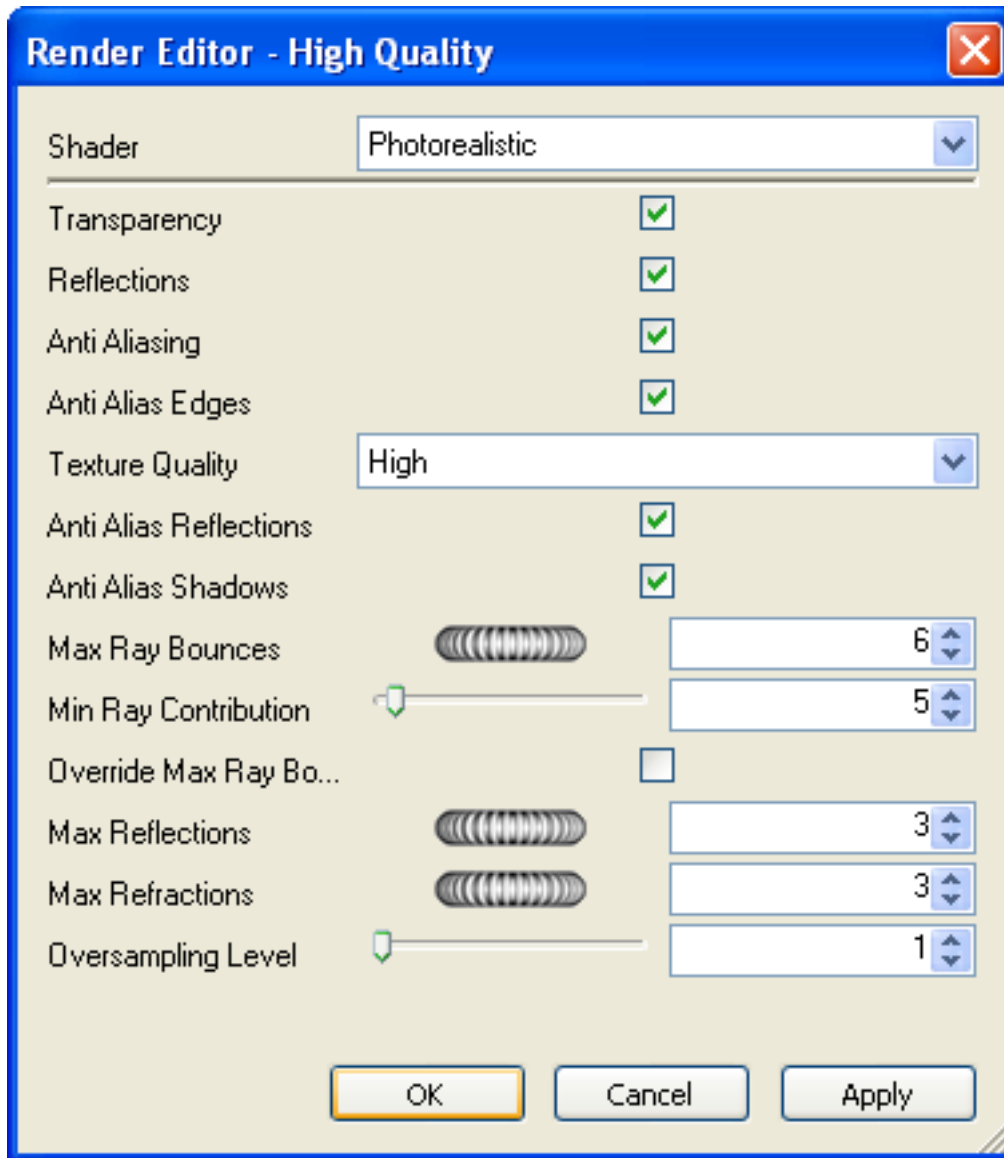

Note:

If the Presenter profile (see “ [Presenter Options](#) ” for more information on this) is set to **Advanced**, the dialog box will include the full list of available parameters and allow you to change the type of render style.

At any time, click the **Apply** button to apply the parameter edits to the scene.

Click **OK** to keep the changes made or **Cancel** to discard any changes made (since the last time you clicked **Apply** at least).

You can save an edited rendering style for use in other scenes by simply dragging it onto the **My Render Styles** archive.

Predefined Rendering Styles

The **Recommended** archive contains three predefined rendering styles:

- **High Quality.** Choose this rendering style for the highest quality rendered output. This includes all reflections and transparencies and anti aliasing on edges, reflections and shadows. Of the three recommended rendering styles, this will take the longest to render. This is also the rendering style used if no other is chosen. Use this style for the final export of your rendered output.
- **Low Quality.** Choose this rendering style for a quick, low quality render. This includes no reflections or anti aliasing. Use this style if you wish to quickly see the affects of materials and lighting you have applied to the scene.
- **Medium Quality.** Choose this rendering style for a medium quality render. This includes all reflections and transparencies and anti aliasing only on shadows. You may use this style for a final preview of the scene, prior to exporting your final rendered output.

The **Standard** archive contains twenty three rendering styles that simulate hand drawing and other non-photorealistic styles. These styles use a mixture of shaded, vector and image based rendering techniques. They are generally best suited to small models and small output images.

Note:

The **Standard** rendering styles require multiple stages to render a scene. These can therefore often take a considerable time to render.

The **Templates** archive contains five main types of rendering style, which can be used to define your own rendering styles:

- **Photorealistic (Raytrace).** This archive contains photorealistic rendering styles, including **High Quality, Low Quality** and **Medium Quality** as per the **Recommended** archive. These rendering styles are fastest and use least memory where large parts of the model are obscured from any particular viewpoint. For example, when inside a room within a building, the walls of the room will obscure the rest of the building from view.
- **Photorealistic (Scanline).** This archive contains photorealistic rendering styles, including **High Quality, Low Quality** and **Medium Quality** as per the **Recommended** archive. These rendering styles are fastest and use least memory where most of the model is visible from any particular viewpoint. For example, when rendering an overview of a plant and process model, the majority of the model can be seen as there are fewer walls, or similar, to obscure your view.
- **Simple Shaded.** This template is a simple shaded rendering style, where advanced features such as textures and transparency are not required.
- **Sketch.** This archive contains twelve basic sketch rendering styles.

Note:

Sketch rendering styles require multiple stages to render a scene. These can therefore often take a considerable time to render.


- **Vector.** This template is a vector rendering style, which will render the scene in wireframe.

Auto Exposure

Check the **Auto Exposure** check box to render the scene with balanced brightness and contrast. This is essential when using physically accurate lighting, such as a **Sky** or **Sun** light. If adding either of these lights to your scene, you will be prompted to turn auto exposure on, if it is not already.

Chapter 34. Texture Space

Texture space describes the way in which a texture is applied to an item. For example, applying a cylindrical texture space to a pipe will cause textures on the pipe to be rendered more naturally. An item's texture space may have been assigned from the original CAD application and brought through from the native CAD file, or set up within Presenter with the options of **Box**, **Plane**, **Cylinder**, or **Sphere**. The **Explicit** option allows a user-defined texture space to be applied and will be available if the item had a texture space applied to it in the original CAD application. Each texture space option applies some imaginary bounding geometry around the item and "shrink-wraps" the texture as best it can to the geometry underneath this bounding geometry.

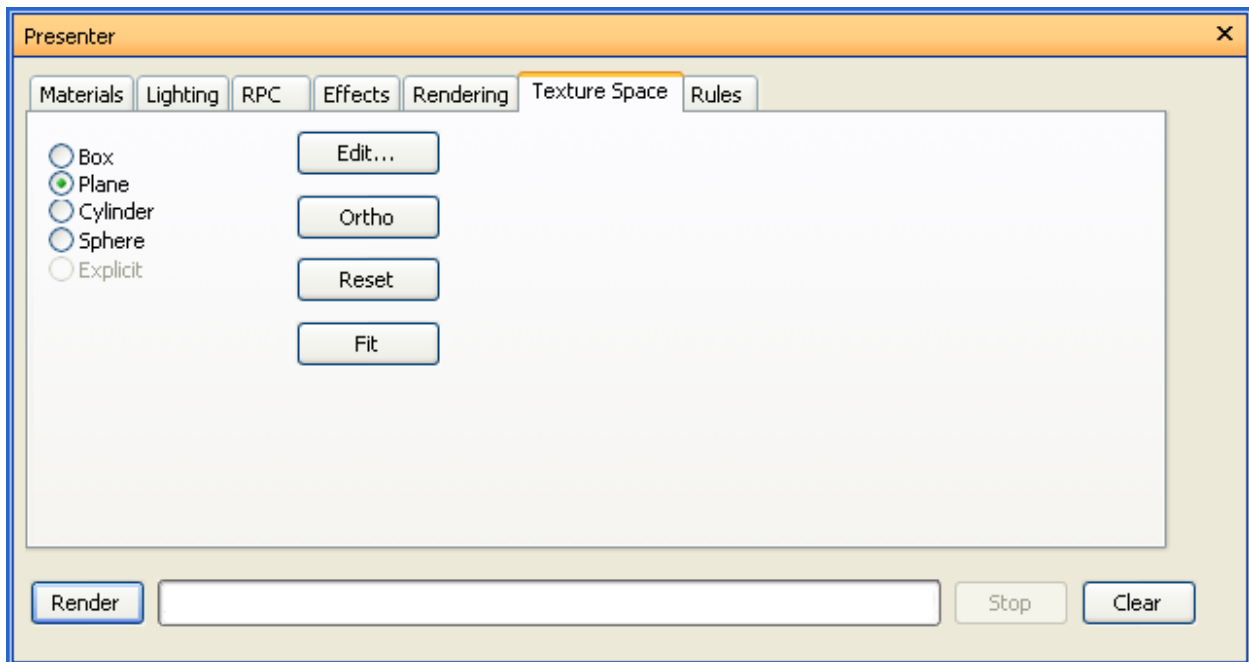

If you've applied a texture to an item, Presenter will attempt to work out the best fit from the four texture spaces available. If this isn't what you intended, then you can then edit this texture space:


Editing Texture Space

1. Select the item (see "[Interactive Selection](#)" for more information on selecting items) and go to the **Texture Space** tab in the Presenter window to choose another texture space.


Alternatively, right-click an item which has a texture applied to it and click a new texture space on the **Presenter > Texture Space** shortcut menu.

2. You can fine-tune an item's texture space further by clicking the **Edit** button on the **Texture Space** tab of the Presenter window. The relevant texture space edit dialog will appear:


Either the plane texture space editor:

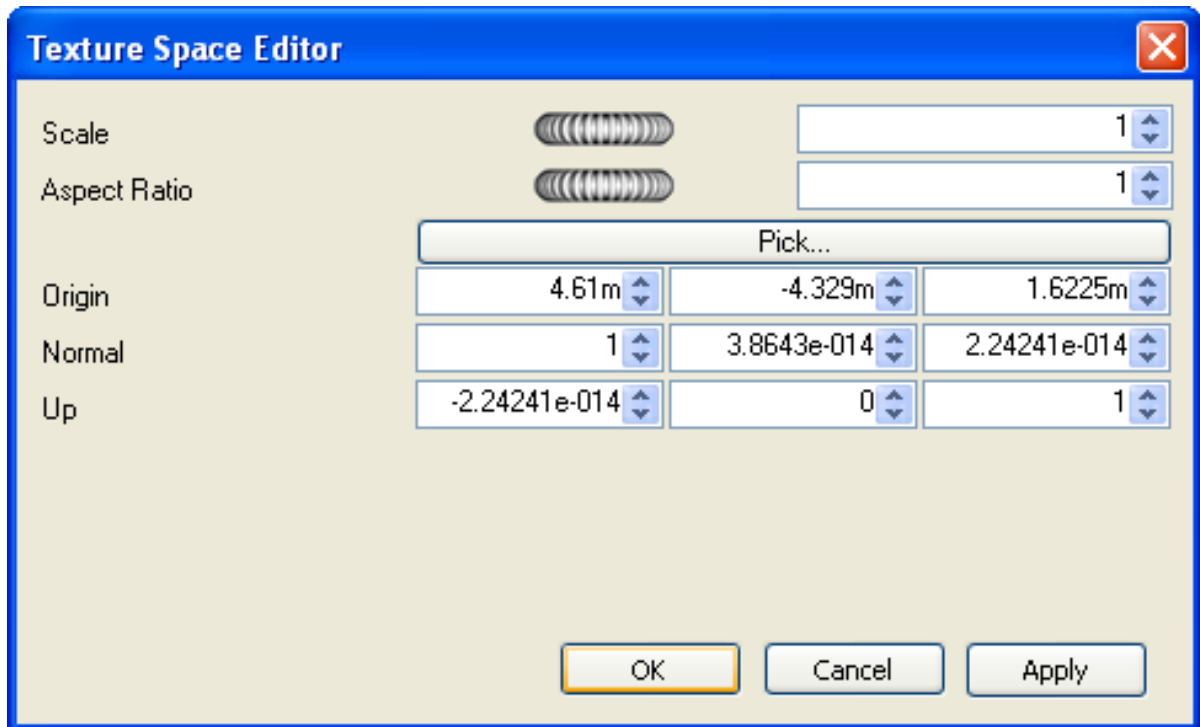

Or the cylindrical texture space editor:

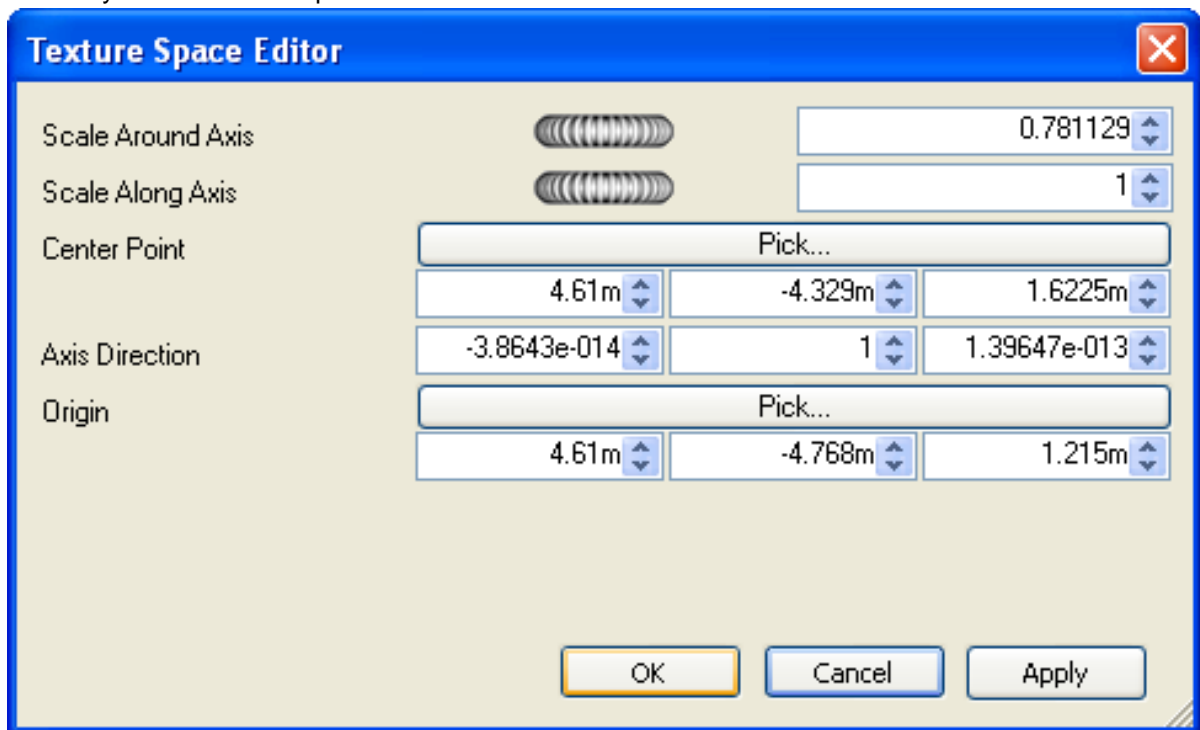

Or the spherical texture space editor:

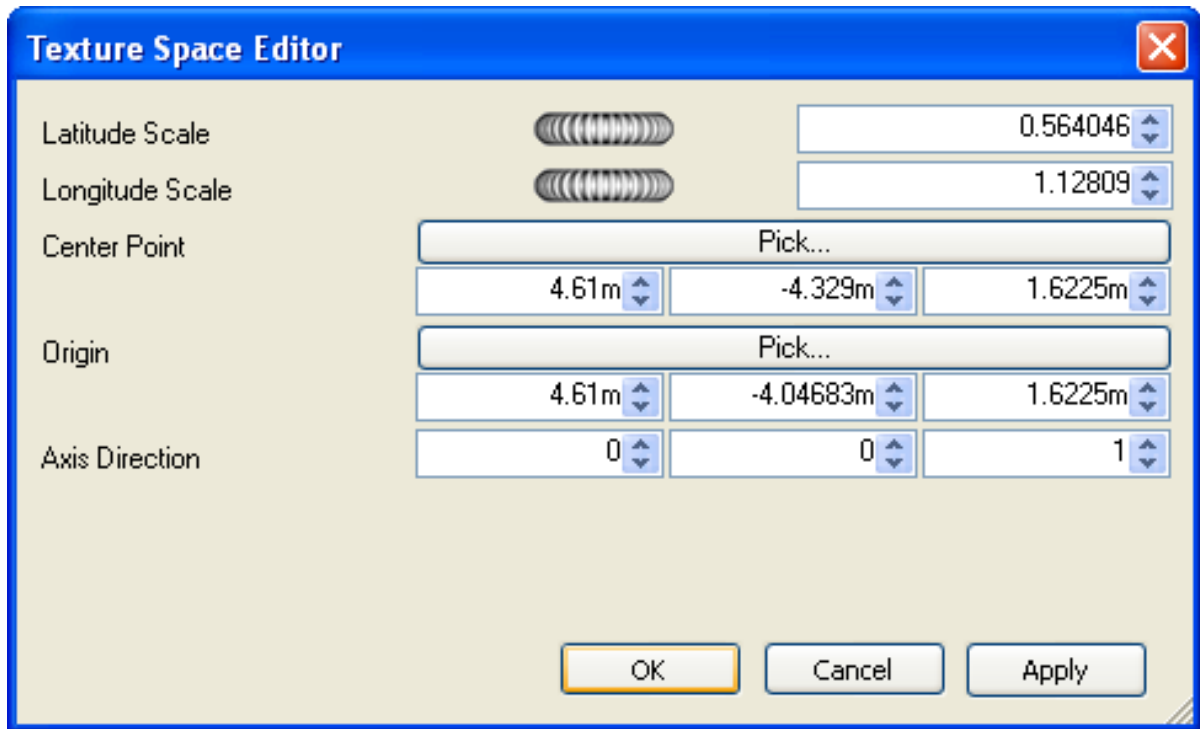


3. Edit each of the individual parameters and click **Apply** to see the results of the edit. Clicking the **Pick** button allows you to interactively pick a point in the model rather than individually typing in x-, y-, and z- coordinates.
4. Click **OK** to apply the edits and return to NavisWorks or click **Cancel** to return to NavisWorks without applying the edits (any clicks on **Apply** will have already applied the edits however).
5. Once edited, you can always reset a texture space to the NavisWorks-defined version by clicking the **Reset** button.
6. Click the **Ortho** button if you want NavisWorks to align the texture space with the nearest axis.
7. Click the **Fit** button if you want NavisWorks to fit a single repeat of the texture to the item. This is of particular use when you are mapping an image to the exact size of the item it's being applied to.

Chapter 35. Presenter Rules

In this section you will learn how to use predefined and custom rules to apply materials to your model faster.

Rules Tab

The **Rules** tab of the Presenter window allows you to apply materials to models according to certain user-defined criteria, rather than by dragging and dropping onto individual layers, groups or components. For example, all layers that are floors can be assigned a material called "floorboards", without having to manually drag-and-drop the material on to each floorboard. Each time the model is updated, the rules then just need re-applying, rather than manually re-applying them to all items.

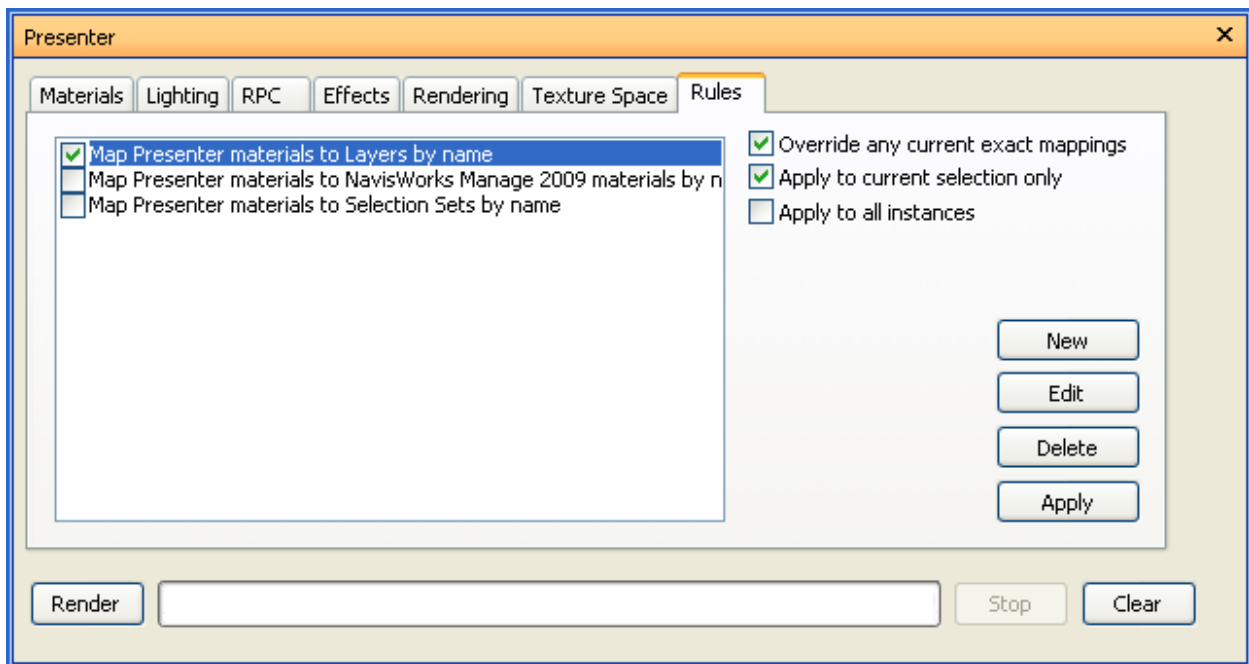

All materials can be saved in a NavisWorks "palette" (.nwp) file, which allows you to set up a palette of materials once for a project and re-apply them to a model as it evolves, or to another model in the same project that has been set up with the same layer names, colors, selection sets and/or properties.

See “ [Organizing and Managing Materials](#) ” for more information.

Predefined Rules

You can apply as many rules at once, as all rules depend on material names. Rules can be defined using the NavisWorks API, but three predefined rules are:

- **Layers by name** rule enables you to apply a material to named layers.

As an example, if a layer is called "Doors" and you rename a material to "Doors" (the spelling and case must be exactly the same as the layer's name) then all layers named "Doors" will appear with the properties of that material when you check the rule **Layers by name**, and click **Apply Rules**.

You can give multiple materials the name of different layers and apply this rule to all of the layers.

- **NavisWorks materials by name** rule enables you to apply a material to named NavisWorks materials. NavisWorks materials are *not* the same as NavisWorks Presenter materials - NavisWorks materials merely refers to the color and transparency of the item as it comes through from the original CAD file, whereas Presenter materials are those materials applied using the Presenter window, or are more complex materials such as bitmaps converted from the original CAD file.

If a Presenter material has the same name as a NavisWorks material in the model (for example, "AutoCAD Color Index 7"), then all items with this original NavisWorks material name in the scene receive this Presenter material from the palette when you check the rule **NavisWorks materials by name**, and click **Apply Rules**.

- **Selection Sets by name** rule enables you to apply a material to selection sets. See “ [Selection and Search Sets](#) ” for more information on setting up selection sets.

If a material has the same name as a selection set in the model, then all items in this selection set receive this material from the palette when you check the rule **Selection Sets by name**, and click **Apply Rules**.


Custom Rules

New custom rules may also be added and defined, using the Rules Editor:

Adding custom Presenter rules

1. From the **Rules** tab of the Presenter window, click the **New** button.

The **Rules Editor** dialog is displayed:

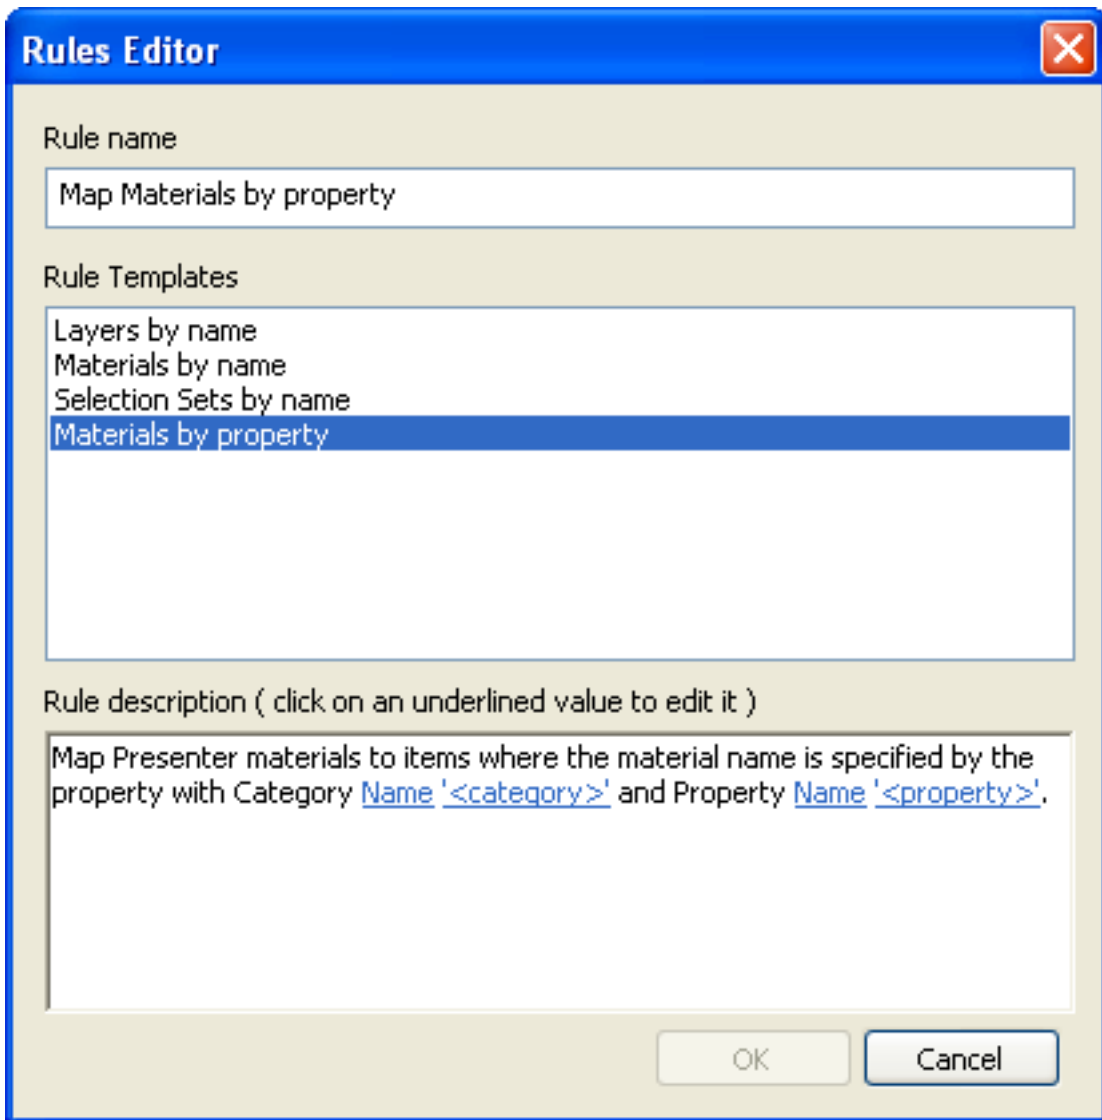

2. Enter a new name for your rule in the **Rule name** box.

Note:

If you choose not to enter a name, upon selecting a **rule template** the name of that template will be used.

3. From the **Rule templates** list, choose a template from which your rule will be based upon.

Note:

The **Layers by name**, **Materials by name** and **Selection Sets by name** templates are those used for the predefined Presenter rules.

The **Materials by property** template enables you to specify a property within the model scene. If a material has the same name as the specified property value in the model, then all items having that

property will receive this material from the palette when you check the rule **Materials by property**, and click **Apply Rules**.

4. In the **Rule description** box, click on each of the **underlined values** to define your custom rule. The customizable values available with the built in templates are:
 - **Name**. Use the name of the category or property as it is displayed in the interface (recommended). You can also choose **Internal Name** which is that accessed via the API (for advanced use only).
 - **'<category>'**. Choose from the available list, which category the property you wish to define is in. Only the categories that are contained in the scene are available in the drop down.
 - **'<property>'**. Choose from the available list, which property you wish to define. Again, only the properties in the scene within the chosen category will be available.
5. Click **OK** to add the new ignore rule, or **Cancel** to return to NavisWorks.

Applying Presenter Rules

To apply Presenter rules:

1. Open the Presenter window, and click the **Rules** tab.
2. Select the check boxes for all rules you want to apply . You can apply as many rules as you want, as all rules depend on material names.
3. The three check boxes on the right-hand side of the Presenter window, **Rules** tab, affect how these rules are applied to the scene:

Select the **Override current mappings** check box if you want to override any existing mappings from Presenter materials to items in the selection tree.

Select the **Apply to current selection** check box if you want to apply this rule only to the currently selected items in the scene. Be aware that this is the default setting, so if your rule seems not to have worked, check that you don't have this option checked with nothing selected in the scene.

Select the **Apply to all instances** check box if you want to apply this rule to all instances of any multiply-instanced item affected by the rule.

4. Click the **Apply** button.

The Presenter Rules Example

To follow this procedure, open the file called **gatehouse_pub.nwd** located under the **Examples\Gatehouse** folder in the NavisWorks installation directory.

Let's assume, you wish to apply window glass material to all gatehouse items with material property of

'AutoCAD Color Index 9', and red brick material to all gatehouse items with material property of 'AutoCAD Color Index 32'. The following procedure describes the necessary steps to achieve this, using the Presenter rules.

To apply materials with the custom Presenter rules:

1. Create a rule called 'Color Index 9', based on the materials by property template:

From the **Rules** tab of the Presenter window, click the **New** button.


Enter a name for the rule, **Color Index 9**.

Choose the **Materials by property** template.

Click on '<category>' and choose **Material** from the drop-down list.

Click on '<property>' and choose **Name** from the drop-down list.

Click **OK** to save the custom rule.

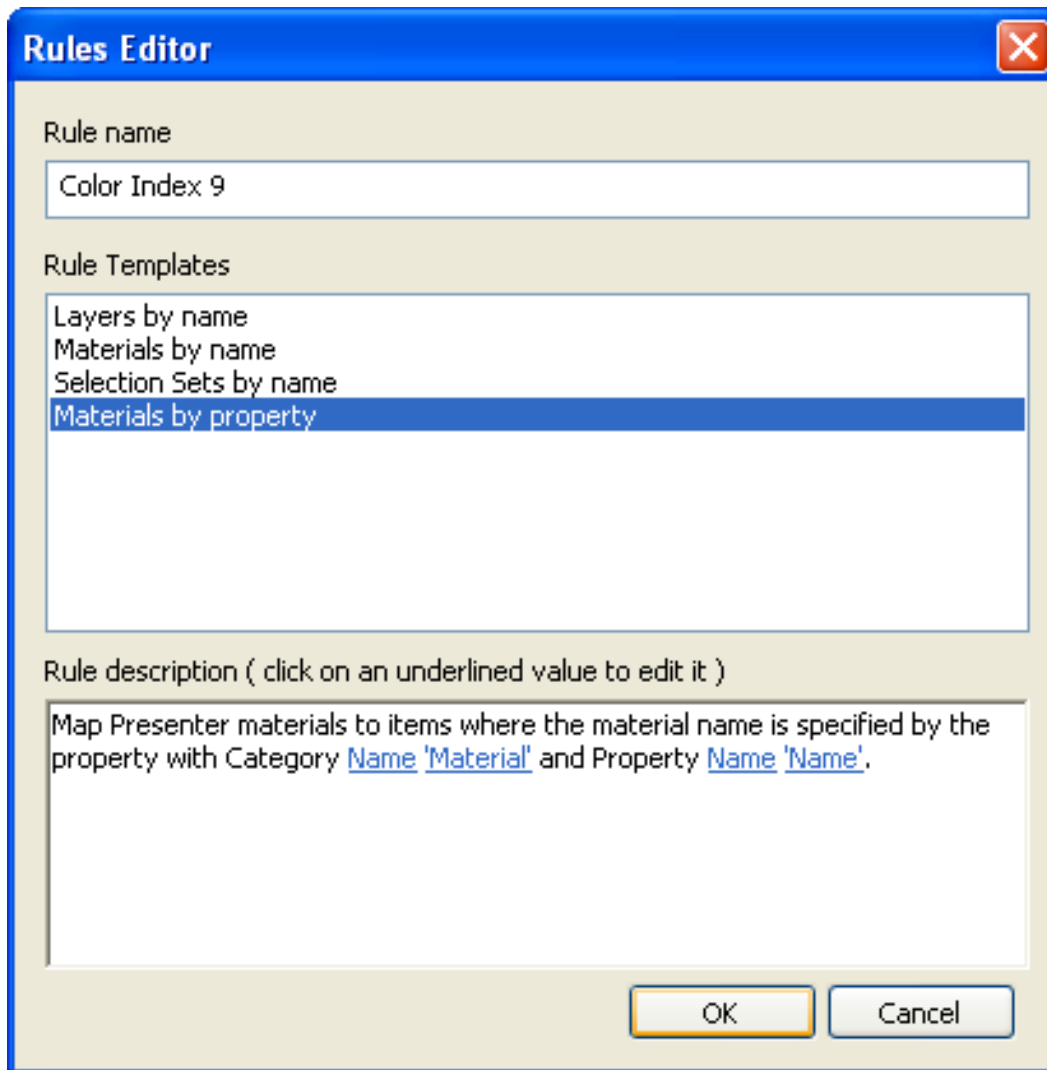

2. Create another rule called 'Color Index 32' using the same settings as before.

3. Set up the necessary materials:

From the **Recommended, Glass** archive on the **Materials** tab, drag the **Window Glass** material into the palette (right-hand pane).

Select the **Window Glass** material and press **F2** and rename it to **AutoCAD Color Index 9**. Press **Enter** to save the new name.


From the **Recommended, Bricks** archive on the **Materials** tab, drag the **Red Brick** material into the palette, and rename it to **AutoCAD Color Index 32**.

Note:

The name of the Presenter material must match the name of the material as it comes through from the original CAD file. You can view the material properties on the **Properties** control bar, or

on the **Properties** tab of the **Selection Tree**.

4. Go to the **Rules** tab and select the check boxes for the **Color Index 9** and **Color Index 32** rules.
5. Ensure only the **Override any current exact mappings** check box is selected and then click the **Apply** button, to apply the rules.

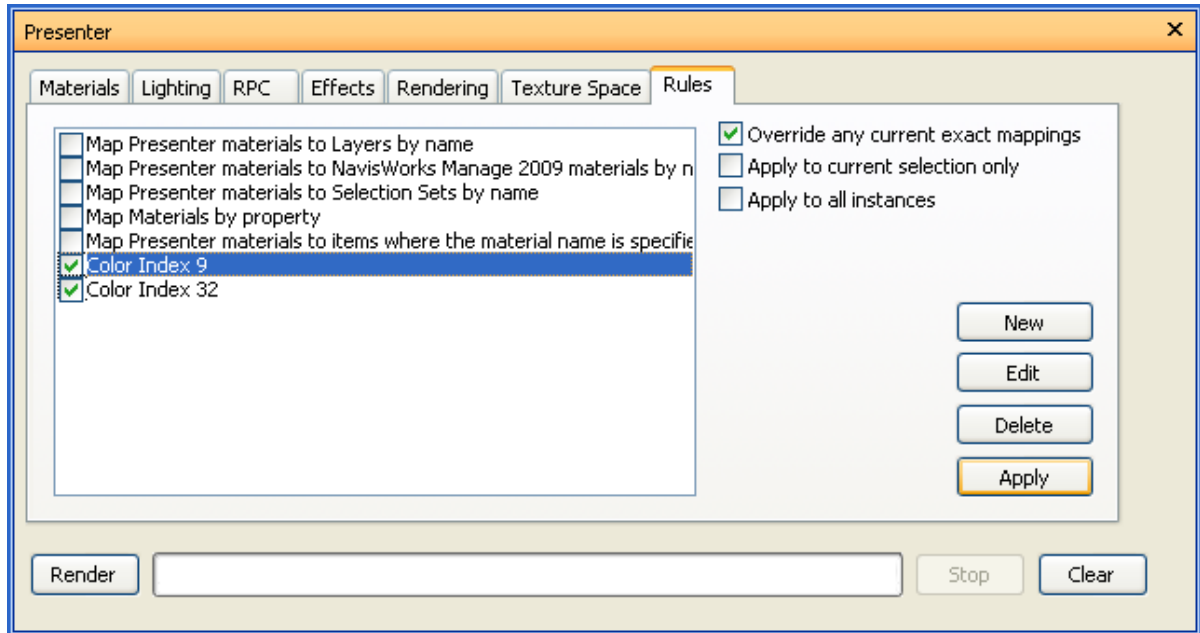

All items within the model scene that have the color index 9 and color index 32 properties should now have the corresponding Presenter materials applied to them.

Part 5. Object Animation

With Object Animation you can make your 3D geometry move and interact with you. In this section, you will learn how to:

- Work with Object Animation windows
- Create animations
- Create interaction scripts

Chapter 36. Overview

In Autodesk NavisWorks Manage 2009 you can animate your model and interact with it. For example, you could animate how a crane moves around a site, or how a car is assembled or dismantled, and so on. With a few mouse clicks, you can also create interaction scripts, which link your animations to specific events, such as 'On Key Press' or 'On Collision'. So, for example, a conveyor belt will move when you press a button on your keyboard, the doors will open as you approach them in your model.

Animations created in Autodesk NavisWorks Manage 2009 can be played in all NavisWorks 2009 products, including Freedom.

Combining the Presenter functionality with Object Animation enables you to greatly enhance the realism of your exported AVI movies, whether for marketing purposes or for instructional training.

Linking TimeLiner and Object Animation together enables the triggering and scheduling of object movement based on start time and duration of project tasks, and can help you with workspace and process planning. For example, a TimeLiner sequence may indicate that when a particular site crane moves from its start point to its end point over the course of a particular afternoon, a workgroup working nearby causes an obstruction along its route. This potential obstruction problem can be resolved before going to site (e.g., the crane can be moved along a different route, the workgroup moved out of the way, or the project schedule altered).

Linking Clash Detective and Object Animation together enables the checking of animated versus animated or animated versus static object clashes. For example, linking a Clash Detective test to an existing animation scene would automatically highlight clashes for both static and moving objects during the animation, e.g. a crane rotating through the top of a building, a delivery lorry colliding with a workgroup, etc.

It is also possible to link Clash Detective, TimeLiner, and Object Animation together to enable clash testing of fully animated TimeLiner schedules. So, instead of visually inspecting a TimeLiner sequence to make sure, for example, that the moving crane didn't collide with a workgroup, you can run a Clash Detective test.

Basic terminology

An **animation** is a prepared sequence of changes to the model. The changes you can make in Autodesk NavisWorks Manage 2009 are:

- Manipulating geometry objects by modifying their position, rotation, size, color, and transparency. This type of change is referred to as an **animation set**.
- Manipulating viewpoints by using different navigation modes (such as orbiting or flying), or by using existing viewpoint animations. This type of change is referred to as a **camera**.
- Manipulating section planes either by moving them, or by turning them on and off. This type of change is referred to as a **section plane set**.

A **script** is a collection of actions that you want to happen when certain event conditions are met.

Scope

Autodesk NavisWorks Manage 2009 supports both object animation and object interaction as follows:

- Animation specified by keyframes with linear interpolation between keyframes (similar to viewpoints animation).
- Camera, section plane, object animation.
- Multiple independently moving objects independently started.
- Multiple animations of the same object in the same scene (for example, moving a crane, and then lifting its arm).
- Simple scripts (for example, to open and close a specified door).
- Linking to TimeLiner to trigger off independent animations as tasks start.
- Linking to TimeLiner with different TimeLiner tasks play to specific points in an animation (e.g. have one animation that moves crane between all points on a site, any task can trigger animation to move from current point to desired point).
- Linking to Clash Detective to run clash tests at specific steps through an animation to check for animated versus animated or animated versus static object clashes.

The following is **not** currently supported in NavisWorks:

- Animation specified by anything other than objects, for example spline or path.
- Animation of lights.
- Moving a whole object and then creating an independent trigger to move part of object (e.g. move whole crane and have button that triggers arm moving at any point).
- Opening/closing of multiple doors without having to create a separate script and animation for each door. Currently there are no cut-and-paste capabilities in scripting.
- Linking to TimeLiner to have different TimeLiner tasks trigger animations that depend on each other (e.g. one task moves crane to a specific point, another task moves arm of crane).
- Real-time collision checking where you turn it on, play an animation and have animation stop when moving object first hits something.

Chapter 37. Working with Object Animation Windows

The Animator and Scriptor windows are the two main floating windows that are used to create and edit object animation in NavisWorks. The Animator window enables you to add animations to your model, while the Scriptor window enables you to make these animations interactive.


The floating windows can be moved and resized, and either floated in the main NavisWorks window or docked. A docked window shares one or more edges with adjacent windows and toolbars. If a shared edge is moved, the windows change shape to compensate. To undock and relocate a window, click and drag the control bars at the top or side of the window. To prevent a window from docking while you drag it, hold down Ctrl.

Note:

You can quickly dock and undock a window by double-clicking the window's control bar.

The Animator Window


To open the Animator window, select **Animator** from the **Tools** menu.

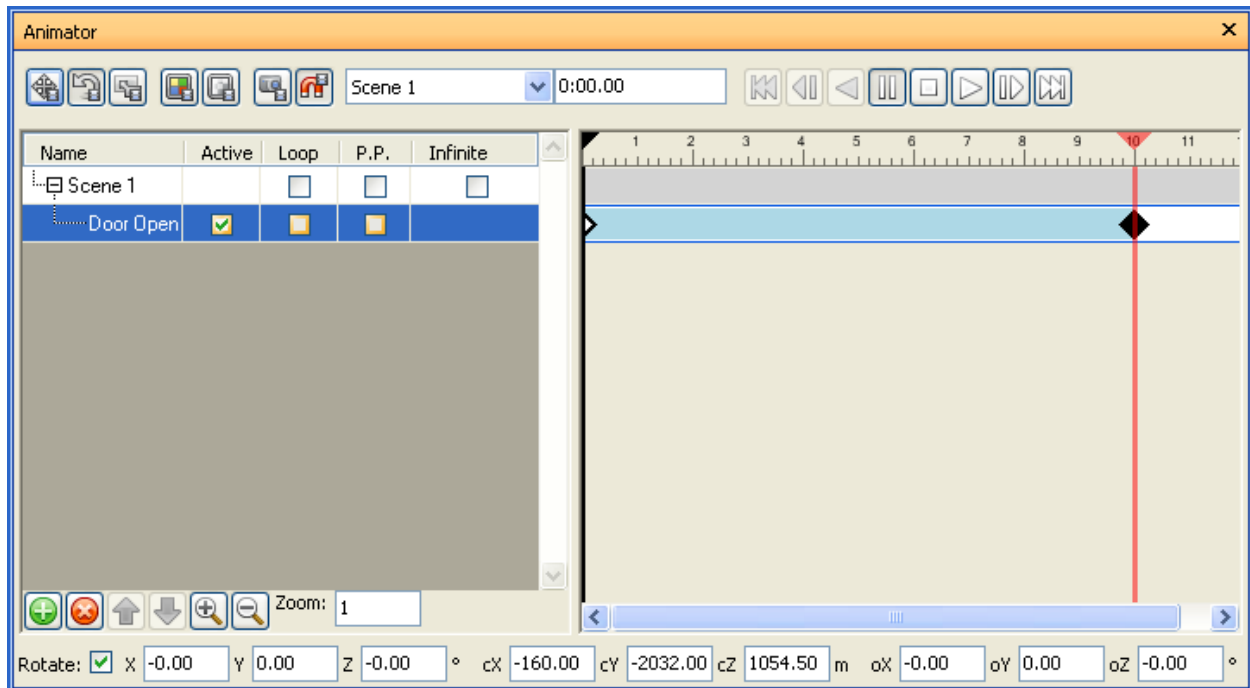


The Animator window contains the following components: the toolbar, the scene view, the timeline view, and the manual entry bar.

The Animator Toolbar


The **Animator** toolbar is located at the top of the Animator window.

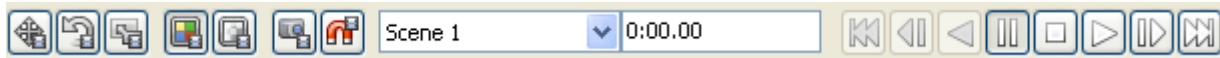


Use the toolbar buttons to create, edit and play animations.

Translate Animation Set  - puts Animator into translation mode. A visual tool for


controlling translation operations is displayed in the main NavisWorks window, and enables you to modify the position of the geometry objects. This mode remains active until you select a different manipulation mode from the toolbar.

Rotate Animation Set  - puts Animator into rotation mode. A visual tool for


controlling rotation operations is displayed in the main NavisWorks window, and enables you to modify the rotation of the geometry objects. This mode remains active until you select a different manipulation mode from the toolbar.

Scale Animation Set  - puts Animator into scale mode. A visual tool for controlling


scale operations is displayed in the main NavisWorks window, and enables you to modify the size of the geometry objects. This mode remains active until you select a different manipulation mode from the toolbar.

Change Color  - puts Animator into color mode. A color palette is shown in the


Manual Entry bar, and enables you to modify the color of the geometry objects.

Change Transparency  - puts Animator into transparency mode. A transparency

slider is shown in the **Manual Entry** bar, and enables you to modify the transparency of the geometry objects.

Capture Keyframe  - allows you to take a snapshot of the current change to the


model as a new keyframe in the timeline view.


Toggle Snapping  - allows you to snap the start and end positions of the


translation, rotation, or scale operation to a relevant point in the animation set. The snap only comes into effect when moving objects by dragging the visual tools in the main NavisWorks window, and has no effect on numerical entry or keyboard control.


Scene Picker  - allows you to choose the active scene.


Time Position - controls the current position of the time slider in the timeline view.


Rewind  - rewinds the animation back to the beginning.


Step Back  - steps one second backwards.


Reverse Play  - plays the animation backwards.

Pause  - pauses the animation at the point you press it at. To continue playing from where you paused, just press Play again.

Stop  - stops the animation playing and rewinds it back to the beginning.


Play  - plays the animation in the currently active scene.

Step Forward  - steps one second forwards.

Fast Forward  - fast forwards the animation to the end.

The Scene View

The scene view lists all scenes and scene components in a hierarchical list view. Use it to create and organize animation scenes.

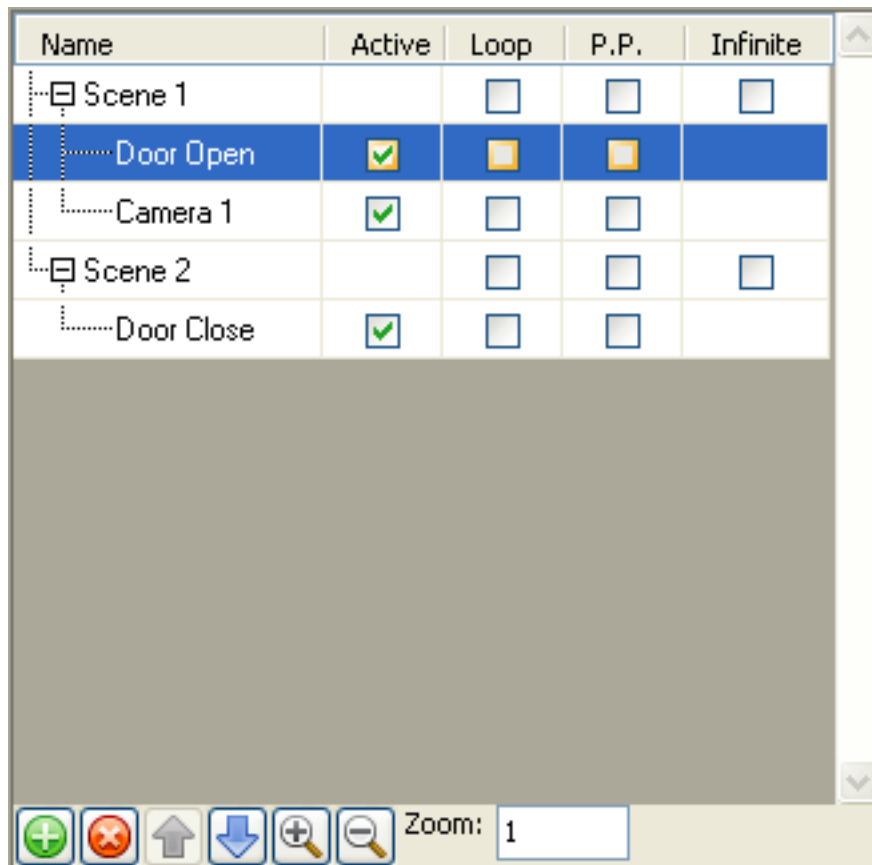

The Hierarchical List

You can use the list view to create and manage your animation scenes. The scene trees display the scene components such as animation sets, cameras, and section planes in a hierarchical structure.

To work with an item in the list view, you must first select it. You can display a shortcut menu for any item in the tree by right-clicking the item.

Selecting a scene component in the list view selects all the elements contained within that component in the main NavisWorks window. For example, selecting an animation set in the list view automatically selects all geometry objects contained within that animation set.

You can quickly copy and move items in the list view by dragging them. To do this, click the item you want to copy or move, hold down the right mouse button, and drag the item to the desired location. When the cursor changes to a black arrow, release the mouse button to display a shortcut menu. Click **copy** or **move**, as appropriate.

Icons


Use the icons at the bottom of the scene view to add new items to the list view, to delete items from the list view, and to reorder items.

Add  - opens a shortcut menu that enables you to add new items to the list view

with commands such as **Add Scene**, **Add Camera** and so on.

Delete  - deletes the currently selected item in the list view.

Note:

If you made a mistake, use the  button on the **Standard** toolbar to restore the deleted item.

Move Up  - moves the currently selected item up in the list view.

Move Down  - moves the currently selected item down in the list view.

Check Boxes

Use the check boxes in the scene view to control whether the corresponding item is active, whether it loops, ping-pongs, and if it should run infinitely.

The **Active** check box enables you to specify the animations you want to be active in your scene. Only active animations will play.


Note:

To make a scene active, select it in the **Scene Picker** on the Animator toolbar.

The **Loop** check box is available for scenes and scene animations. It enables you to control the playback mode. Select this check box to use loop mode. When the animation

reaches the end, it will reset back to the start and run again.

The **P.P.** check box is available for scenes and scene animations. It enables you to control the playback mode. Select this check box to use ping-pong mode. When the animation reaches the end, it will run backwards until it reaches the start. Unless looping mode is also selected, this will only happen once.


The **Infinite** check box is only available for scenes. Select this check box to make the scene play indefinitely (i.e., until the **Stop**  button is pressed). If this check box is clear, the scene will play until its end point is reached.

Note:

If a scene is set to infinite, it can not also loop or ping-pong; so if you select this check box, the **Loop** and **P.P.** check boxes are not available for your scene.



The Timeline View

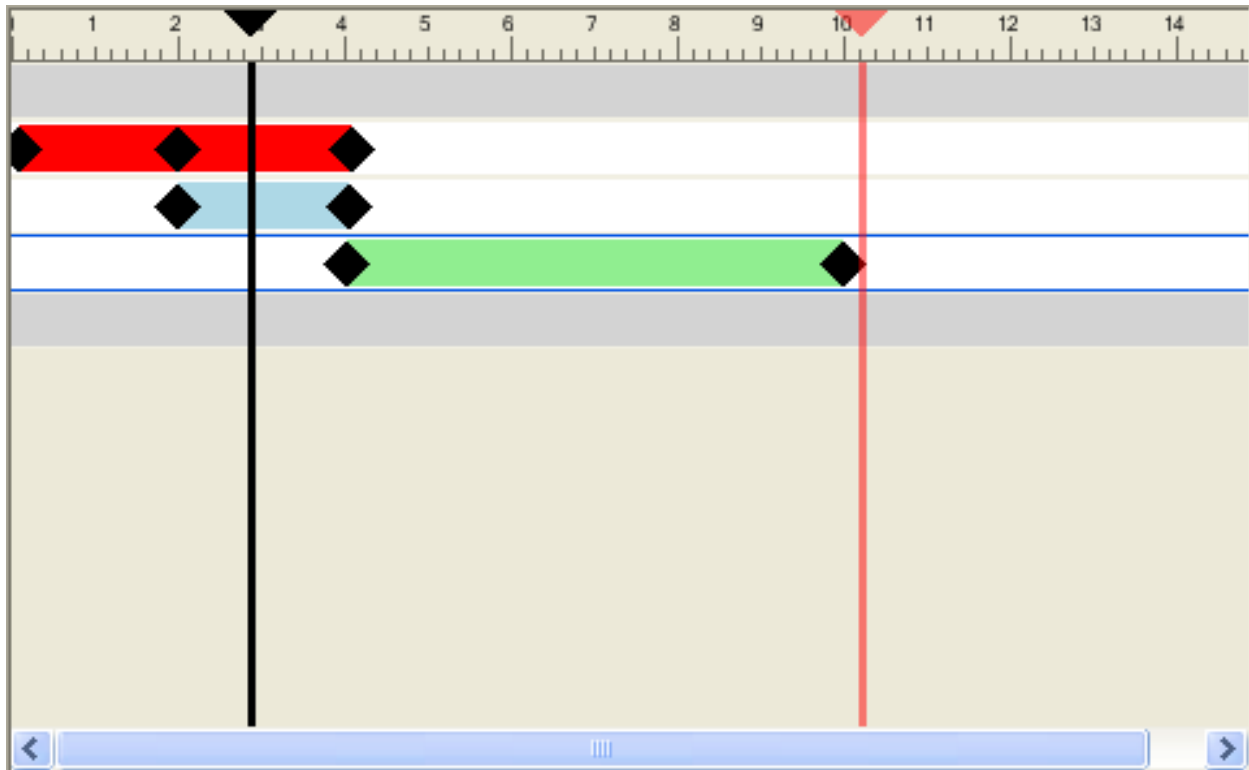The timeline view shows the timelines with keyframes for animation sets, cameras, and section planes in your scenes. Use it to visualize and edit the animations.



The Timescale Bar

At the top of the timeline view is the **timescale** bar in seconds. All timelines start at 0.

Use the  and  icons at the bottom of the scene view to zoom in and out on the timescale bar.

The default timescale shows around 10 seconds of animation on a standard screen resolution, zooming in and out has an effect of doubling or halving the visible area. So, for example, zooming in will show around 5 seconds of animation, and zooming out will show around 20 seconds.

Note:


You can also zoom in and out with mouse wheel while hovering over the timeline.

Another way of changing the timescale is to use the **Zoom** box. For example, type in '1/4', and press Enter to quarter the visible area. The value you enter is halved when you zoom in, and doubled when you zoom out. You can return to the default timescale by clearing the box, and pressing Enter.

Keyframes

The keyframes are shown as black diamonds in the timelines. Right-clicking a keyframe displays a shortcut menu that allows you to create and edit keyframes using commands such as **Cut**, **Copy**, **Paste**, and **Edit**.

You can also change the time when a keyframe occurs by dragging the black diamond left or right in the timeline view. As you drag a keyframe, it changes the color from black to a lighter grey.

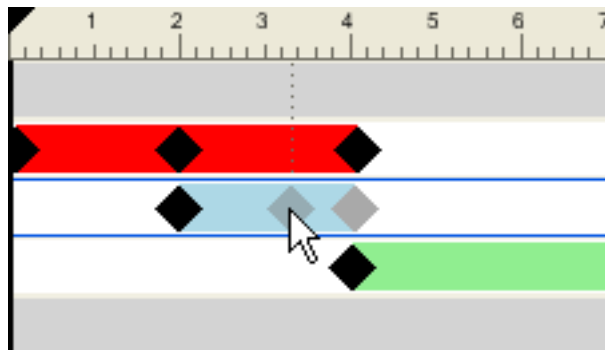

Left-clicking a keyframe moves the time slider to that position.

Right-clicking a keyframe opens the shortcut menu with the following options:

- **Edit** - enables you to edit the selected keyframe.
- **Go to Keyframe** - moves the black time slider to this keyframe.
- **Cut, Copy, Paste** - standard cut, copy, and paste commands. They only work inside the selected timeline.
- **Delete** - deletes the selected keyframe.
- **Interpolate** - determines whether NavisWorks will automatically interpolate between the current and the last keyframes. This is the default option. When disabled, there will be no gradual movement between the two keyframes; instead the animation will instantly jump to the position/view of the second keyframe when it's reached. Also, there will be no colored animation bar between the keyframes.

Note:

If you right-click an area without a keyframe in it, the shortcut menu will contain only the **Edit** and **Paste** options; and to use the **paste** option, you must have the keyframe data on the clipboard.

Animation Bars

The colored animation bars are used to visualise the keyframes in a timeline, and cannot be edited. Each animation type is shown in a different color, and the animation bars for the scenes are grey. Typically, the animation bar ends with the last keyframe. If an animation bar carries on in a faded color after the last keyframe, this indicates that the animation will play indefinitely (e.g., loop animation).

Sliders

You can use two sliders in the timeline view:


- **Time Slider**


The black vertical line is the time slider, representing the current position in the playback. This can be adjusted by either using the VCR controls on the toolbar or by dragging the slider left or right in the timeline view, or by selecting a timeline in the timeline view and using the left and right cursor keys. As the time slider is moved, the model in the main NavisWorks window updates to reflect movements caused by keyframes in the current scene as if the animation were playing back.

- **End Slider**

The red vertical line is the end slider, representing the end point of the current active scene. It is hidden if you selected the **Infinite** check box for the current scene in the scene view. By default, the end slider set to the last keyframe in the scene and can't be moved. You can switch on manual control of the end slider in a scene by right-clicking it, and selecting the **Manually Position Endbar** option from the shortcut menu. To manually adjust the slider, drag it left or right. This end marker will be used as the animation end point when scenes are set to loop or ping-pong.

The Manual Entry Bar

The optional **Manual Entry** bar is located at the bottom of the Animator window, and enables you to manipulate geometry objects by typing in numerical values, instead of using the visual tools in the main NavisWorks window. The contents of the bar change depending on the button last selected from the Animator toolbar. For example, if you clicked , the **Manual Entry** bar will look something like this:

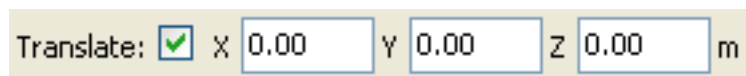


You can toggle the **Manual Entry** bar on and off by using the **Options Editor**.

To toggle the display of the Manual Entry bar:

1. On the **Tools** menu, click **Global Options**.
2. Expand the **Tools** node, and click the **Animator** option.


The Animator page is displayed:

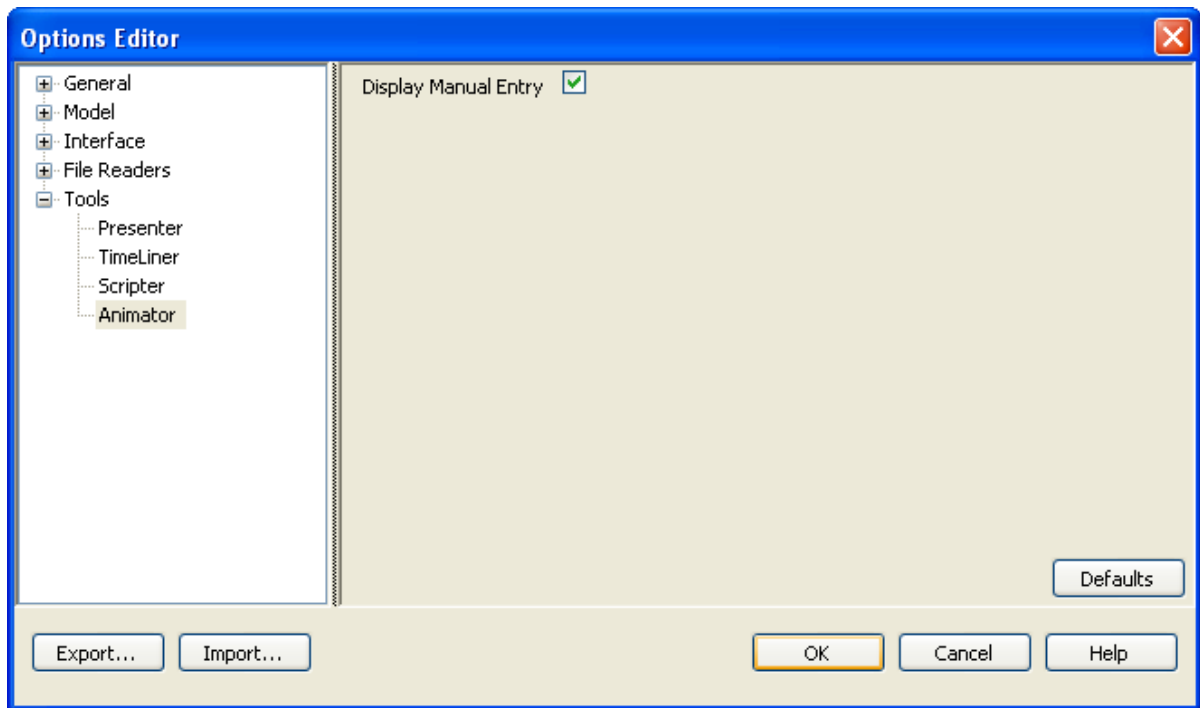

3. Use the **Display Manual Entry** check box to control whether the **Manual Entry** bar is shown in the Animator window.
4. Click **OK** to accept your changes, or **Cancel** to return to NavisWorks without accepting them.

The Scripter Window

To open the Scripter window, select **Scripter** from the **Tools** menu.

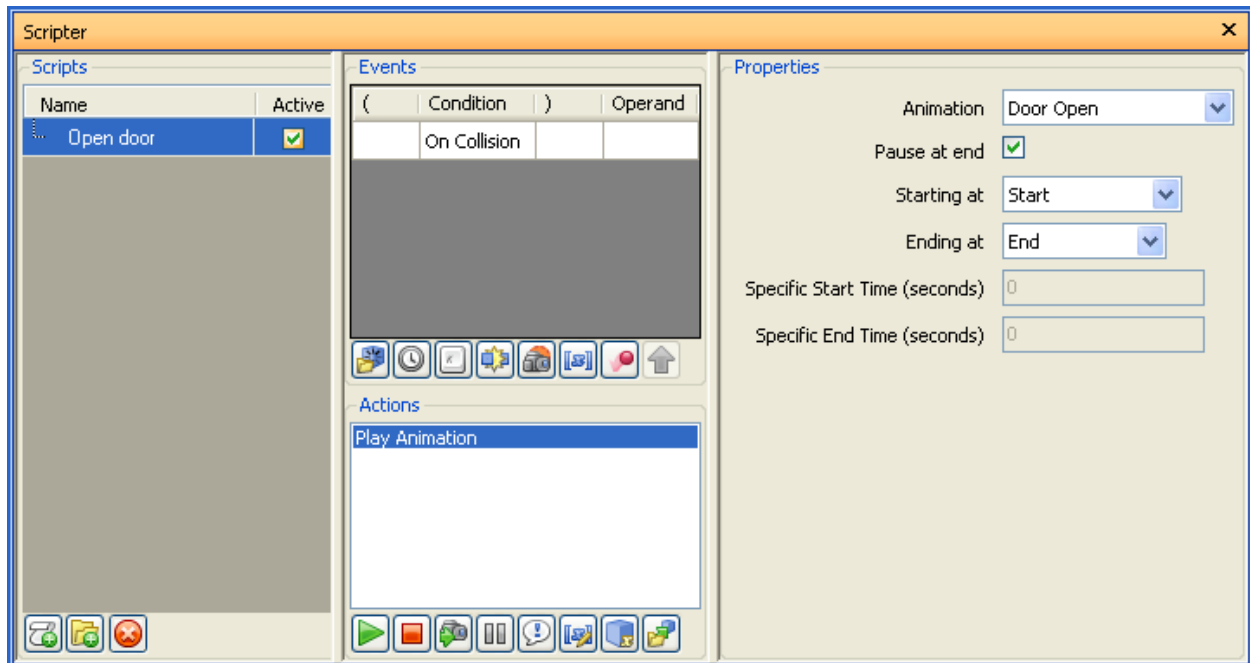


The Scripter window contains the following components: the script view, the event view, the action view, and the properties view.

Note:

If you can't use any of the controls in the Scripter window, it means that you are in interaction mode. To exit the mode, click the **Toggle Scripts**  button on the **Animation** toolbar.

The Script View

The script view contains animation scripts in your NavisWorks file. Use the script view to create and organize animation scripts.

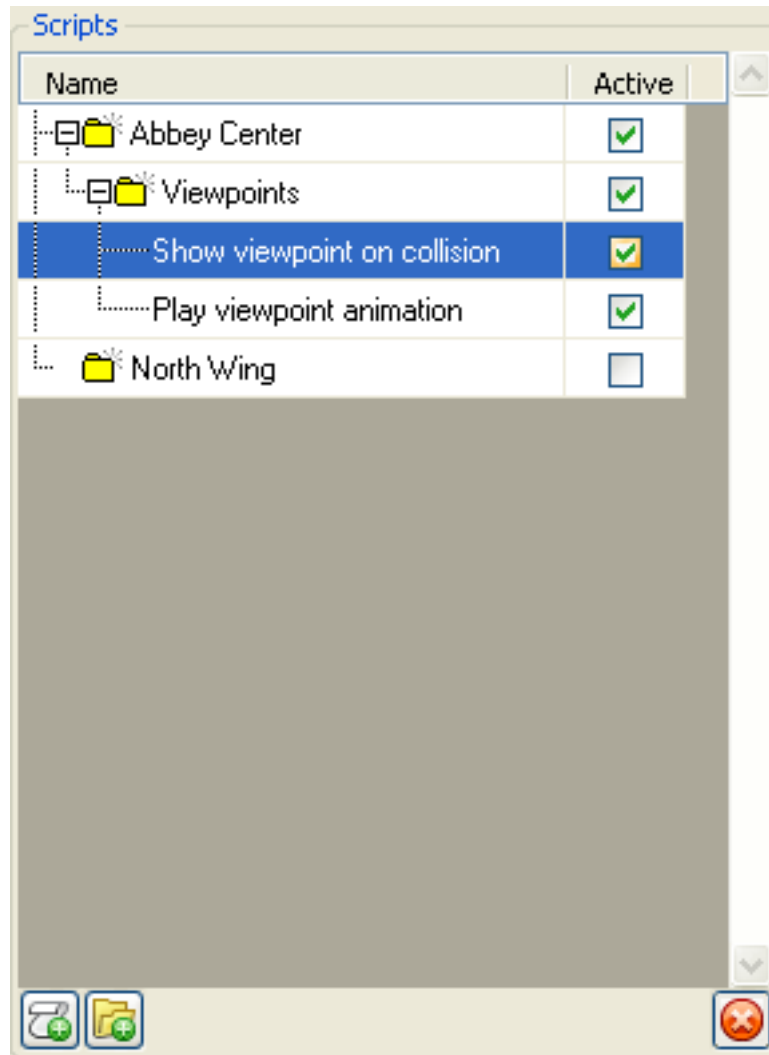

The Script Tree

The script tree displays all available scripts. The scripts can be organized into folders. This has no effect on the way scripts are run in NavisWorks.


To work with an item in the script tree, you must first select it. You can display a shortcut menu for any item in the tree by right-clicking the item.


Selecting a script in the tree displays the associated events, actions and properties information.


You can quickly copy and move items in the script tree. To do this, click the item you want to copy or move, hold down the right mouse button, and drag the item to the desired location. When the cursor changes to a black arrow, release the mouse button to display a shortcut menu. Click **copy** or **move**, as appropriate.

Icons


Use the icons at the bottom of the script view to add new items to the tree and to delete items from the tree.

Add New Script  - adds new scripts to the script tree.

Add New Folder  - adds new folders to the script tree.

Delete Item  - deletes the currently selected item in the script tree.

Note:


If you made a mistake, use the  button on the **Standard** toolbar to restore the deleted item.

Check Boxes

Use the **Active** check box in the script view to specify the scripts you want to use. If you organized your scripts into folders, you can quickly turn the scripts on and off by using the **Active** check box next to the top-level folder.

The Event View

The event view shows all events associated with the currently selected script. Use the event view to define, manage, and test events.

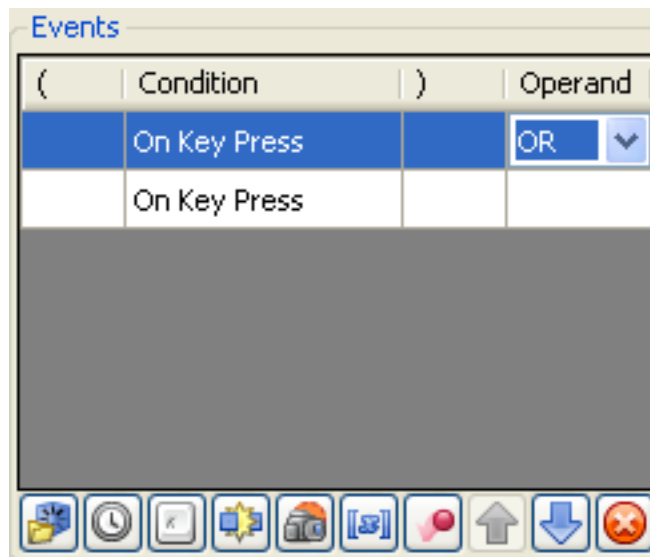

Event Conditions


Events can be combined with a simple Boolean logic. To create an event condition you can use a combination of brackets and AND/OR operators. The brackets and logic operators can be added by right-clicking an event, and selecting the option from the shortcut menu. Alternatively, you can click in the corresponding field in the event view, and use the drop-down button to select the desired option.


If you have more than one event in your script, by default the AND operator will be used. This means the


script only runs if all events have occurred.


Icons


Use the icons at the bottom of the event view to add, order, and delete events in the selected script.


On Start  - adds start events.


On Timer  - adds timer events.


On Key Press  - adds key press events.


On Collision  - adds collision events.


On Hotspot  - adds hotspot events.

On Variable  - adds variable events.


On Animation  - adds animation events.

Move Up  - moves the currently selected event up in the event view.

Move Down  - moves the currently selected event down in the event view.

Delete Event  - deletes the currently selected event.

Note:


If you made a mistake, use the  button on the **Standard** toolbar to restore the deleted item.

The Event View Shortcut Menu

Right-click in the event view to display a shortcut menu. The menu contains commands that apply to the selected item, plus the commands that enable you to add new events.

The Action View

The action view shows the actions associated with the currently selected script. Use it to define, manage, and test actions.

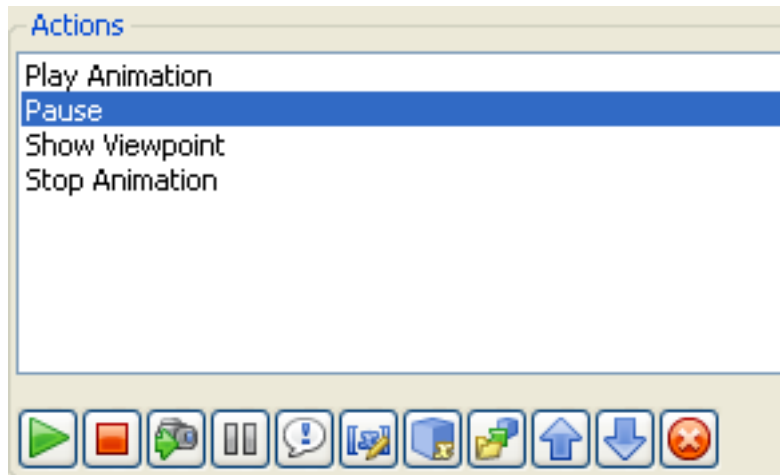

Actions are executed one after another in a script, so it is important to get the action sequence right. However, Scripter does not wait for the current action to be completed before moving on to the next action. So, for example, if there are two actions, one to start an animation, and the second one to show a viewpoint, Scripter will execute both actions almost at the same time.

Note:

Using a pause action will stop the script for a specified amount of time before executing the next action. Alternatively, you can create several scripts to execute actions separately.

Icons

Use the icons at the bottom of the action view to add, order, and delete actions in the selected script.

Play Animation  - adds play animation actions.


Stop Animation  - adds stop animation actions.

Show Viewpoint  - adds show viewpoint actions.


Pause  - adds pause actions.


Send Message  - adds send message actions.


Set Variable  - adds set variable actions.

Store Property  - adds store property actions.


Load Model  - adds load model actions.

Move Up  - moves the currently selected action up in the action view.

Move Down  - moves the currently selected action down in the action view.

Delete Action  - deletes the currently selected action.

Note:


If you made a mistake, use the  button on the **Standard** toolbar to restore the deleted item.

The Action View Shortcut Menu

Right-click in the action view to display a shortcut menu. The menu contains commands that apply to the selected item, plus the commands that enable you to add new actions.

The Properties View

The properties view shows the properties for the currently selected event or action. Use it to configure the behavior of events and actions in your scripts.

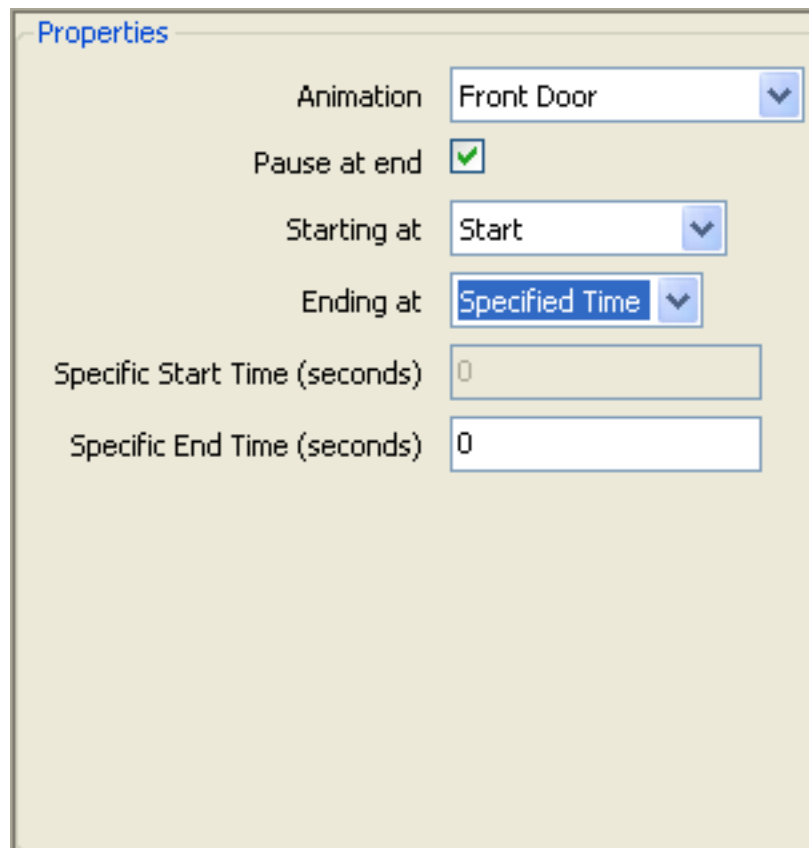

Chapter 38. Creating Animations

To animate your model, you need to create at least one scene, which will act as a container for your animations.

Each scene can contain the following components:

- One or more animation sets
- A single camera animation
- A single section plane set animation

Animation Scenes

In this section you will learn how to create, delete and organize animation scenes.

Adding Scenes

To add a scene:

1. If the Animator window is not already open, select **Tools > Animator** from the menu bar.
2. Right-click in the scene view, and click **Add Scene** on the shortcut menu.

Alternatively, click , and click **Add Scene** on the shortcut menu.

3. Click the default scene name, and type in a new name, for example 'Gatehouse Entrance'.


This will help you to identify the scene in future.

Deleting Scenes


To delete a scene:

1. If the Animator window is not already open, select **Tools > Animator** from the menu bar.

Deleting a scene also deletes all of its components.

2. Select the scene you want to delete, and click .

Note:


If you made a mistake, use the  button on the **Standard** toolbar to restore the deleted scene.

Organizing Scenes

You can group the scenes and the scene elements into folders. This has no effect on playback, except that the contents of a folder can be easily switched on/off to save time.


To add a scene folder:

1. If the Animator window is not already open, select **Tools > Animator** from the menu bar.
2. Right-click in the scene view, and click **Add Scene Folder** on the shortcut menu.
3. Click the default folder name, and type in a new name, for example 'Gatehouse'.
4. Select the scene you want to add to your new folder. Hold down the left mouse button, and drag the mouse to the folder name. When the cursor changes to a black arrow, release the mouse button to drop the scene into the folder.

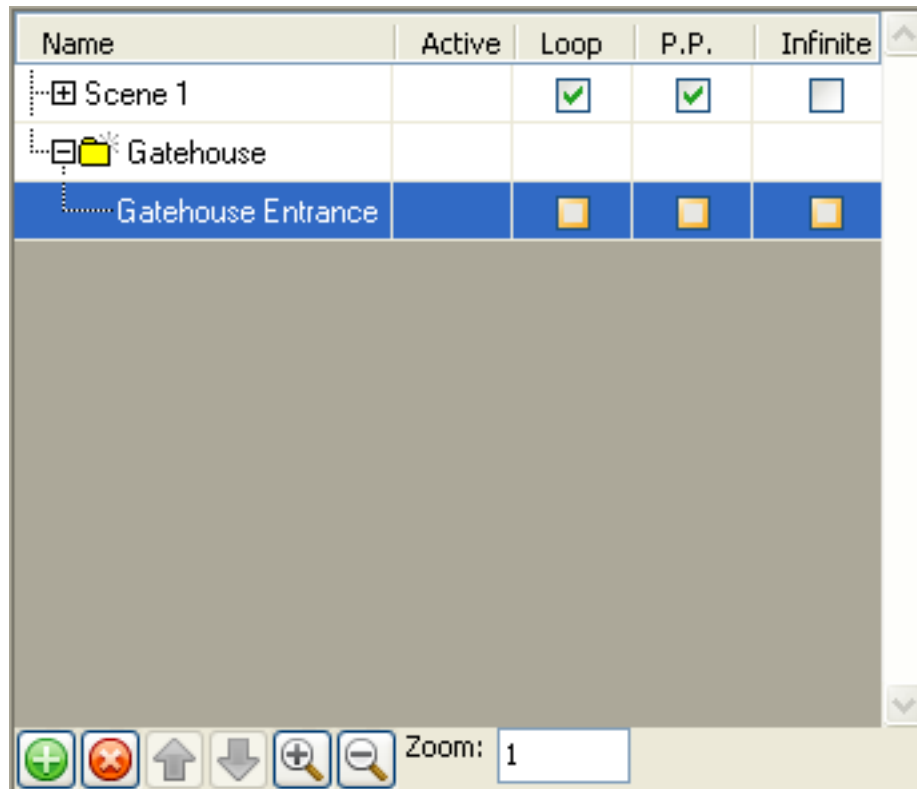

To organize scene components into folders:

1. If the Animator window is not already open, select **Tools > Animator** from the menu bar.
2. To add a subfolder to a scene, right-click it, and click **Add Folder** on the shortcut menu.
To add a subfolder to a scene element, right-click it, and click **Add Folder** on the shortcut menu.
3. To rename a folder, click on it, and type in a new name, for example 'Doors'.

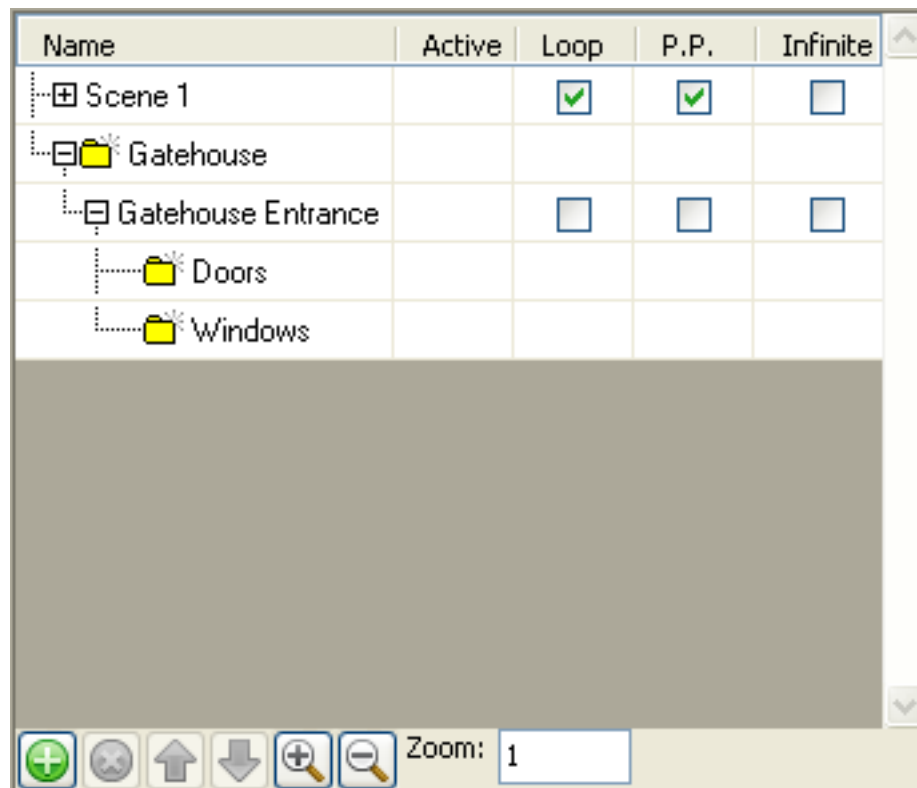

Animation Sets

An animation set contains a list of geometry objects to be animated, and a list of keyframes that describe how it is to be animated. Your scene can have as many animation sets as you want, and you can also have the same geometry objects in different animation sets within the same scene. The order of animation sets within a scene is important, and can be used to control the final object position when the same object is used in multiple animation sets.

Adding Animation Sets

An animation set can be based on the current selection in the main NavisWorks window, or on the current selection set or current search set.

To add an animation set based on current selection:

1. If the Animator window is not already open, select **Tools > Animator** from the menu bar.
2. Select the desired geometry objects in the main NavisWorks window, or from the **Selection Tree** control bar.
3. Right-click the scene name, and click **Add Animation Set > From Current Selection** on the shortcut menu.

To add an animation set based on current search set or selection set:

1. If the Animator window is not already open, select **Tools > Animator** from the menu bar.
2. Select the desired search set or selection set from the **Selection Sets** control bar.
3. Right-click the scene name, and click **Add Animation Set > From Current Search/Selection Set** on the shortcut menu.

If you are adding an animation set based on a selection set, the contents of the animation set is automatically updated if the contents of the source selection set change.

If you are adding an animation set based on a search set, the contents of the animation set will be updated each time the model changes to include everything in the search set.

Note:

Any changes to search/selection sets during the animation playback are ignored.

If the model changes so that objects in a particular animation are missing, they will be automatically removed from the animation set when the .nwd or .nwf is resaved.

Finally, if the selection or search sets are deleted rather than being lost, the corresponding animation set will become a static selection of objects based on what it last contained.

Updating Animation Sets

An animation set can be manually updated; that is you can modify your current selection in the main NavisWorks window, or the current selection set or current search set, and change the contents of your animation set to reflect this. The keyframes are not affected by this operation.

To update an animation set based on current selection:

1. If the Animator window is not already open, select **Tools > Animator** from the menu bar.

2. Select the desired geometry objects in the main NavisWorks window, or from the **Selection Tree** control bar.
3. Right-click the scene name, and click **Update Animation Set > From Current Selection** on the shortcut menu.

To update an animation set based on current search set or selection set:

1. If the Animator window is not already open, select **Tools > Animator** from the menu bar.
2. Select the desired search set or selection set from the **Selection Sets** control bar.
3. Right-click the scene name, and click **Update Animation Set > From Current Search/Selection Set** on the shortcut menu.

Manipulating Geometry Objects

In this section you will learn how to modify position, rotation, size, color and transparency of geometry objects in animation sets, and how to capture these changes in keyframes.

All object manipulation is carried out in the main NavisWorks window. To change an object's position, rotation and size, three visual manipulation tools are provided. These tools act like 3D objects in that the axis rotate with the viewpoint. However, they are overlaid over the top of the 3D scene, and can't be obscured by other objects. When you hover over a grabable part of the tool, the cursor changes to a hand icon.



Using Snapping

When you manipulate geometry objects by changing their position, rotation or size you can use snapping to control the precision of your operations in the main NavisWorks window. To turn on snapping mode, click the **Toggle Snapping**  button on the **Animator** toolbar.




The snap works like a 'gravity' around the snap points. This enables you to snap the start position of the selected visual tool to a relevant point in the animation set, such as center, corner of bounding box, vertex of geometry. Similarly, the end point of the translation, rotation or scale operation can also be snapped to a desired point on the screen (for example, center of another geometry object).

You can adjust the way snapping works by using the **Options Editor**.

To adjust snapping:

1. On the **Tools** menu, click **Global Options**.
2. Expand the **Interface** node in the **Options Editor** dialog box, and click the **Snapping** option.

The Snapping page is displayed.

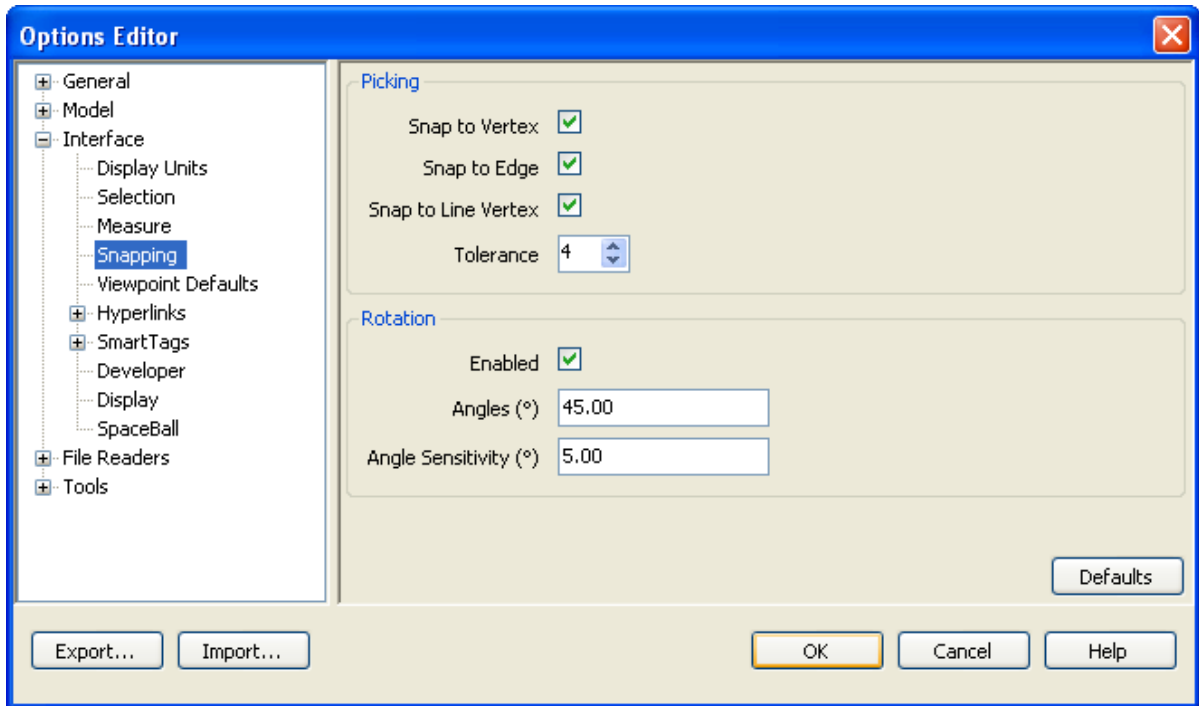

3. Set the picking style by selecting the **Snap to Vertex**, **Snap to Edge** and **Snap to Line Vertex** check boxes. The cursor will snap to the nearest vertex, triangle edge or line end respectively, depending on the options chosen.
4. Set the snapping **Tolerance**. The smaller the tolerance, the closer the cursor needs to be to a vertex or edge before it snaps to it.
5. Select the **Enabled** check box, if you want to turn on snapping for angular rotation.

Enter the multiplier for the snapping angle, for example 45, in the **Angles** box. In this example, the cursor is set to snap to 45, 90, 135 degrees, and so on.

Enter the snapping tolerance, for example 5, in the **Angle Sensitivity** box. This determines how close to the snapping angle the cursor needs to be for snap to take effect. In this example, the cursor snaps within 5 degrees of a given angle.

6. Click **OK** to set these options or **Cancel** to exit the dialog box without setting them.


Highlighting Objects

When animation sets are selected in the scene view, they are also highlighted in the main NavisWorks window.


To get a clearer view of an object as you animating it, you can use the **Options Editor** to adjust the way in which the current selection is highlighted.

You can use three different highlighting methods:


- Shaded

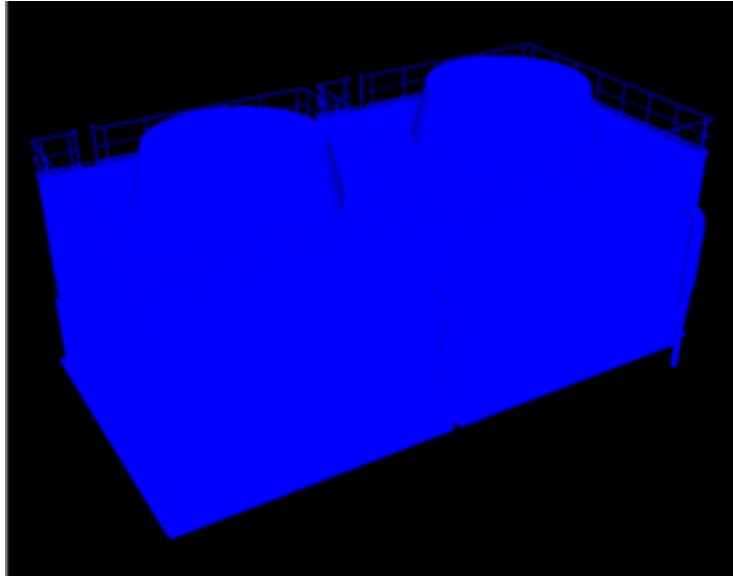

- Wireframe

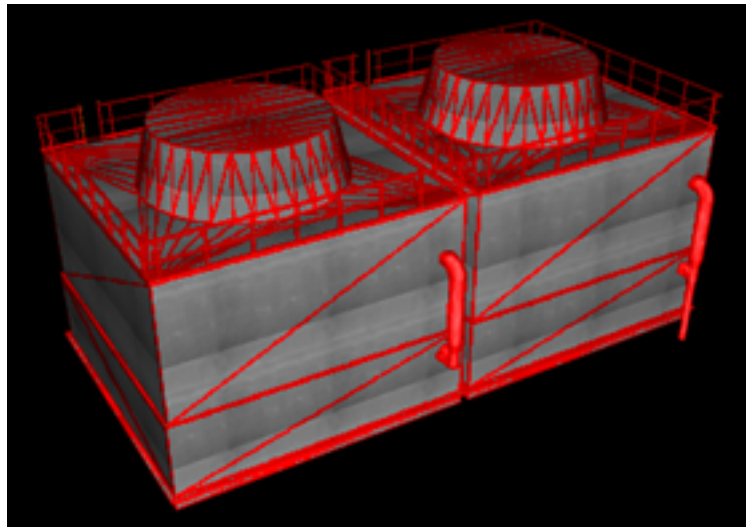


- Tinted

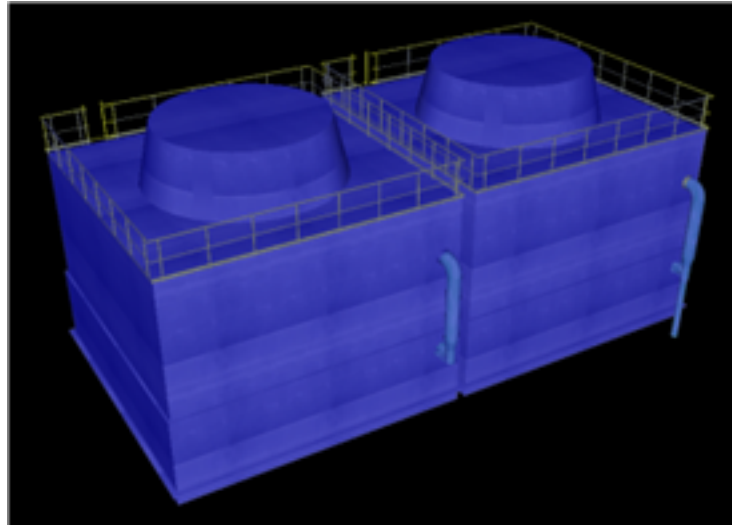

To adjust highlighting:

1. On the **Tools** menu, click **Global Options**.
2. Expand the **Interface** node in the **Options Editor** dialog box, and click the **Selection** option.

The Selection page is displayed.

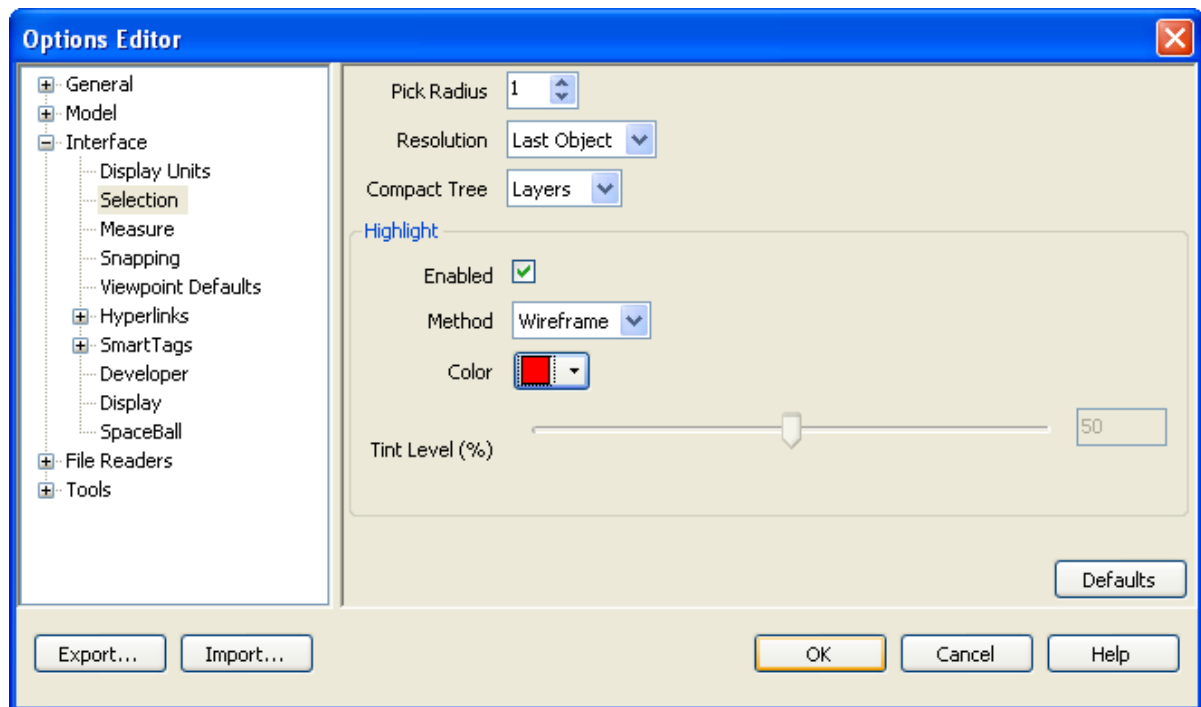

3. Locate the **Highlight** area, and select the **Enabled** check box to turn on highlighting of the selected

items.

4. Use the **Method** drop-down list to select the type of highlighting you want (Shaded, Wireframe or Tinted).
5. Click the **Color** button to select the highlight color.
6. If you selected **Tinted** in the **Method** box, use the slider to adjust the **Tint Level**.
7. Click **OK** to set these options or **Cancel** to exit the dialog box without setting them.

Object Movement



To capture object movement:

1. If the Animator window is not already open, select **Tools > Animator** from the menu bar.
2. Select the desired animation set in the scene view.


The corresponding geometry objects are highlighted in the main NavisWorks window.


Note:

You can change the way the objects are highlighted.

3. Click the **Capture Keyframe**  button on the **Animator** toolbar to create a keyframe with the initial object state.
4. In the timeline view, move the black time slider to the right to set the desired time.
5. Click the **Translate Animation Set**  button on the **Animator** toolbar.
6. Use the translation tool to change the position of the selected objects.

The translation tool displays three colored axes at the correct angles relevant to the current camera position.

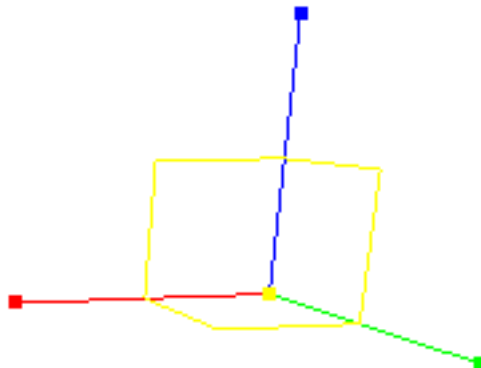

To move all objects in the currently selected animation set, place the mouse over the square at the end of the desired axis. When the cursor changes to , drag the square on the screen to increase/decrease the translation along that axis.

To move the objects along several axes at the same time, drag the square frame between the desired axes.

Dragging the yellow square in the middle of the translation tool enables you to snap this center point to other geometry in the model.


Note:

You can adjust snapping to increase your precision.

To move the translation tool itself rather than the actual animation set, hold down the CTRL key while dragging the square at the end of the desired axis.

To snap the tool to other objects, hold down the CTRL key while dragging the yellow square in the middle of the tool.

For the point-to-point translation, hold down the CTRL key, and use the center square to drag the tool to the start point. Then, with CTRL released, drag the square again to move the object to the end point.

7. To capture the current object changes in a keyframe, click the **Capture Keyframe**  button on the **Animator** toolbar.

Object Rotation


To capture object rotation:

1. If the Animator window is not already open, select **Tools > Animator** from the menu bar.
2. Select the desired animation set in the scene view.

The corresponding geometry objects are highlighted in the main NavisWorks window.

Note:

You can change the way the objects are highlighted.


3. Click the **Capture Keyframe**  button on the **Animator** toolbar to create a keyframe with the initial object state.
4. In the timeline view, move the black time slider to the right to set the desired time.
- 5.




button on the **Animator** toolbar.

6. Use the rotation tool to rotate the selected objects.

The rotation tool displays three colored axes at the correct angles relevant to the current camera position.

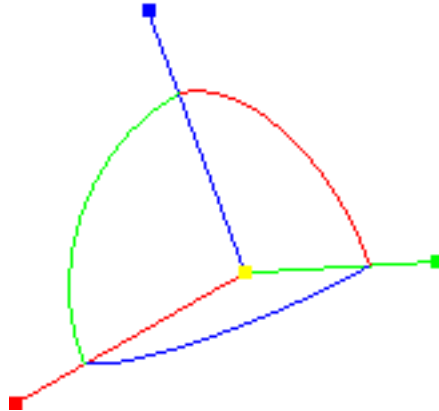

Before you can rotate the objects in the currently selected animation set, you need to position the origin (center point) of the rotation. To do this, place the mouse over the square at the end of the desired axis. When the cursor changes to , drag the square on the screen to increase/decrease the translation along that axis. This will move the rotation tool itself.

Dragging the yellow square in the middle of the rotation tool enables you to move it around, and snap it to points on other geometry objects.


Note:

You can adjust snapping to increase your precision.

Once the rotation tool is positioned correctly, place the mouse over one of the curves in the middle, and drag it on the screen to rotate the objects in the selected animation set. The curves are color-coded, and match the color of the axis used to rotate the object around. So, for example, dragging the blue curve between the X and Y axes, rotates the object around the blue Z axis.

To rotate the orientation of the rotation tool to an arbitrary position, hold down the CTRL key while dragging one of the three curves in the middle.

To snap the tool to other objects, hold the CTRL key while dragging the yellow square in the middle of the tool.

7. To capture the current object changes in a keyframe, click the **Capture Keyframe**  button on the **Animator** toolbar.

Scaling Objects



To capture scaling changes:

1. If the Animator window is not already open, select **Tools > Animator** from the menu bar.
2. Select the desired animation set in the scene view.

The corresponding geometry objects are highlighted in the main NavisWorks window.


Note:


You can change the way the objects are highlighted.

3. Click the **Capture Keyframe**  button on the **Animator** toolbar to create a keyframe with the initial object state.
4. In the timeline view, move the black time slider to the right to set the desired time.
5. Click the **Scale Animation Set**  button on the **Animator** toolbar.

6. Use the scale tool to resize the selected objects.


The scale tool displays three colored axes at the correct angles relevant to the current camera position.

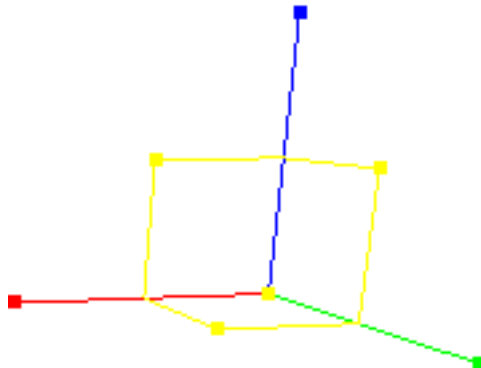

To resize all objects in the currently selected animation set, place the mouse over one of seven squares. When the cursor changes to , drag the square on the screen to modify the size of the objects. Typically, dragging a square up or right increases the size, dragging it down or left decreases the size.

To resize the objects across a single axis only, use colored squares at the end of the axes. To resize the objects across two axes at the same time, use yellow squares in the middle of the axes. Finally, to resize the objects across all three axes at the same time, use the square in the center of the tool.

You can modify the center of scaling. To do this, place the mouse over the square in the middle of the tool, and hold down the CTRL key while dragging the square on the screen.

7. To capture the current object changes in a keyframe, click the **Capture Keyframe**  button on

the **Animator** toolbar.

Changing Color




To capture color changes:

1. If the Animator window is not already open, select **Tools > Animator** from the menu bar.
2. Select the desired animation set in the scene view.

The corresponding geometry objects are highlighted in the main NavisWorks window.

Note:

You can change the way the objects are highlighted.

3. Click the **Capture Keyframe**  button on the **Animator** toolbar to create a keyframe with the initial object state.
4. In the timeline view, move the black time slider to the right to set the desired time.
5. Click the **Change Color**  button on the **Animator** toolbar.
6. Press the **Color** button on the **Manual Entry** bar, and choose the desired color.
7. To capture the current object changes in a keyframe, click the **Capture Keyframe**  button on the **Animator** toolbar.

Changing Transparency

To capture transparency changes:

1. If the Animator window is not already open, select **Tools > Animator** from the menu bar.
2. Select the desired animation set in the scene view.

The corresponding geometry objects are highlighted in the main NavisWorks window.



Note:

You can change the way objects are highlighted.

- 3.



button on the **Animator** toolbar to create a keyframe with the initial object state.

4. In the timeline view, move the black time slider to the right to set the desired time.
5. Click the **Change Transparency**  button on the **Animator** toolbar.
6. Use the **Transparency** slider on the **Manual Entry** bar to adjust how transparent or opaque the selected objects are.
7. To capture the current object changes in a keyframe, click the **Capture Keyframe**  button on the **Animator** toolbar.

Cameras

A camera contains a list of viewpoints, and an optional list of keyframes to describe how the viewpoints move. If no camera keyframes are defined, then the scene will use the current views in the main NavisWorks window. If a single keyframe is defined, the camera will move to that viewpoint, and then remain static throughout the scene. Finally, if multiple keyframes are defined, the camera is animated accordingly.

Each scene can only have one camera in it.

Adding Cameras

You can add a blank camera, and then manipulate the viewpoints, or you can copy an existing viewpoint animation straight into your camera.

To add a blank camera:

1. If the Animator window is not already open, select **Tools > Animator** from the menu bar.
2. Right-click the desired scene name, and click **Add Camera > Blank Camera** on the shortcut menu.

You are now ready to manipulate camera viewpoints.



To add a camera with existing viewpoint animation:

1. If the Animator window is not already open, select **Tools > Animator** from the menu bar.
2. Select the desired viewpoint animation from the **Viewpoints** control bar.
3. Right-click the desired scene name, and click **Add Camera > From Current Viewpoint Animation** on the shortcut menu.

NavisWorks automatically adds all necessary keyframes to the timeline view.

Manipulating Camera Viewpoints

To capture camera viewpoints:

1. If the Animator window is not already open, select **Tools > Animator** from the menu bar.
2. Select the desired camera in the scene view.
3. Click the **Capture Keyframe**  button on the **Animator** toolbar to create a keyframe with the current viewpoint.
4. In the timeline view, move the black time slider to the right to set the desired time.
5. Use the buttons on the **Navigation Mode** toolbar to change your current viewpoint.
Alternatively, select one of the saved viewpoints from the **Viewpoints** control bar.
6. To capture the current viewpoint changes in a keyframe, click the **Capture Keyframe**  button on the **Animator** toolbar.

Section Plane Set

A section plane set contains a list of sectional cuts, and a list of keyframes to describe how they move.

Each scene can only have one section plane set in it.

Adding Section Plane Sets





To add a section plane set:

1. If the Animator window is not already open, select **Tools > Animator** from the menu bar.
2. Right-click the desired scene name, and click **Add Section Plane** on the shortcut menu.

You are now ready to manipulate sectional cuts.


Manipulating Sectional Cuts

To capture sectional cuts:

1. If the Animator window is not already open, select **Tools > Animator** from the menu bar.
2. Select the desired section plane set in the scene view.
3. Select the plane that you wish to manipulate from the drop-down list on the **Sectioning** toolbar.
Make sure it's not yet enabled.
4. Set the step size by clicking on the **Step Size**  button on the **Sectioning** toolbar.
5. Click the **Capture Keyframe**  button on the **Animator** toolbar to create a keyframe with the current section cut.
6. In the timeline view, move the black time slider to the right to set the desired time.
7. Switch the section plane on by clicking the **Enable/Disable** button  on the **Sectioning** toolbar.
8. Use the **Sectioning** toolbar to choose one of the seven planes that this section plane will cut.
For example, click the **Align Right**  button.
9. Move the slider on the **Sectioning** toolbar to adjust the depth of your section cut.

Note:


You can find more information on how to create plane cuts in "Sectioning a Model" under "Sectioning" in the Basic NavisWorks Functionality section.

10. To capture the current plane changes in a keyframe, click the **Capture Keyframe**  button on the **Animator** toolbar.

Keyframes

In this section, you will learn how to capture and edit keyframes.

Capturing Keyframes

Keyframes are used to define position and properties of the changes to the model. New keyframes are created by clicking the **Capture Keyframe**  button on the **Animator** toolbar. Every time you click

this button, NavisWorks will add a keyframe of the currently selected animation set, camera, or section plane set at the current position of the black time slider.

Conceptually, keyframes represent relative translations, rotations and scaling operations from the previous keyframe or, in the case of the first keyframe, the model's starting position. Keyframes are relative to each other and to the model's starting position. This means that if an object is moved in the scene (when, for example, a new version of the model is opened, or if movement tools are used in NavisWorks) the animation will be done relative to the new starting location rather than the animation's original start position.

The translation, scaling and rotation operations are cumulative. This means if a particular object is in two animation sets at the same time, both sets of operations are carried out. So if both are translating across the X axis, for example, the object will move twice as far.

If there is no keyframe at the start of the timeline for an animation set, camera, or section plane set, then the very start of the timeline acts like a hidden keyframe. So, for example, if you have a keyframe a few seconds in, and the frame has the **Interpolate** option enabled, then over those first few seconds objects would interpolate between their default starting position and those defined in the first keyframe.


Editing Keyframes

To edit a keyframe, you need to right-click it in the timeline view, and select the **Edit** option on the shortcut menu. The procedures for editing keyframes for animation sets, cameras, and section planes follow.

Editing Animation Sets

To edit a keyframe for an animation set:

1. If the Animator window is not already open, select **Tools > Animator** from the menu bar.
2. Right-click the desired keyframe in the timeline view, and select **Edit** on the shortcut menu.
3. Use the **Edit Key Frame** dialog box to adjust the animation.

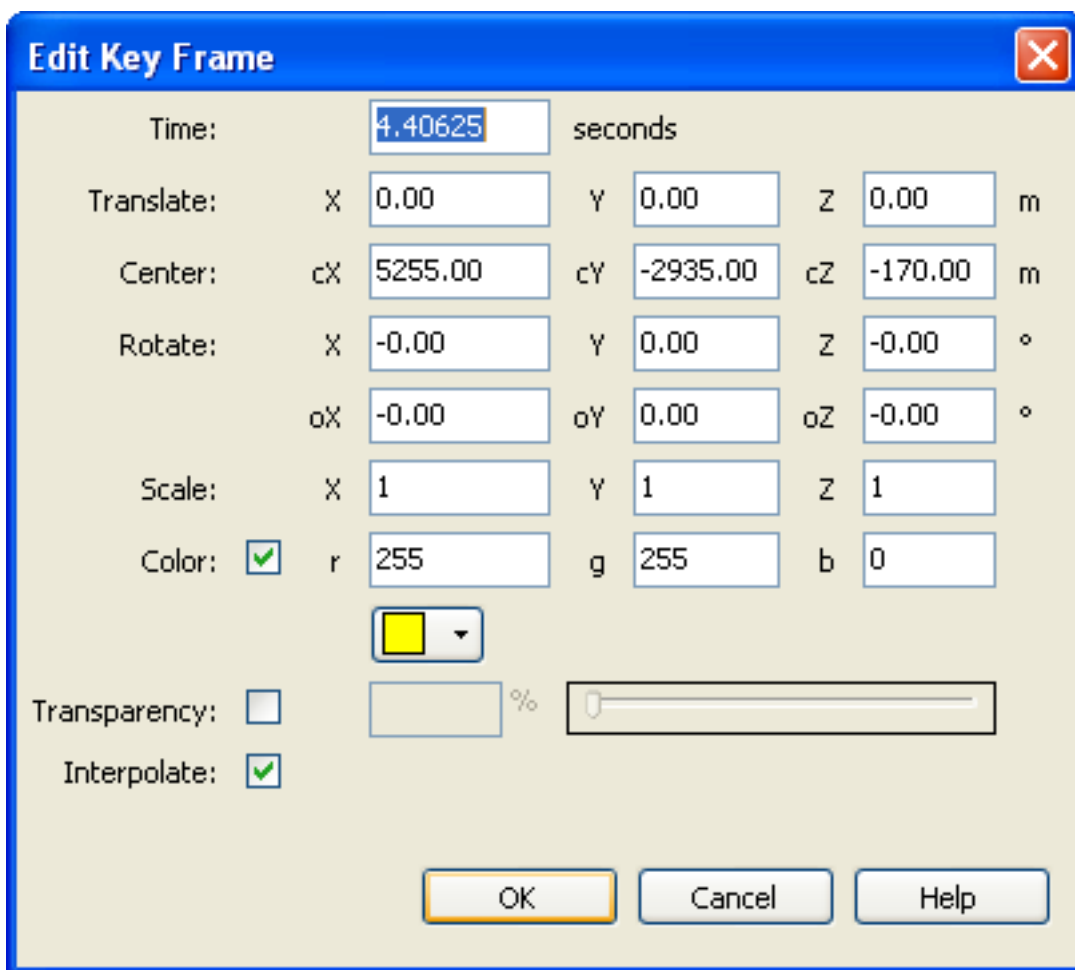

The **Time** box enables you to reposition the time of this keyframe. The value is the number of seconds since the start of the scene; it is not relative to the last keyframe.

The **Interpolate** check box determines whether NavisWorks will automatically interpolate between the current and the last keyframes. This is the default option. When disabled, there will be no gradual movement between the two keyframes; instead the animation will instantly jump to the position/view of the second keyframe when it's reached. Also, there will be no colored animation bar between the keyframes.


The rest of the boxes are similar to the controls on the **Manual Entry** bar, and enable you to edit the animation operations the keyframe represents. All values are relative to the previous keyframe, or, if it's the first keyframe, relative to the model's starting position.

4. Click **OK** to save your changes or **Cancel** to exit the dialog box.

Editing Cameras

To edit a keyframe for a camera:

1. If the Animator window is not already open, select **Tools > Animator** from the menu bar.
2. Right-click the desired keyframe in the timeline view, and select **Edit** on the shortcut menu.
3. Use the **Edit Key Frame** dialog box to adjust the animation.

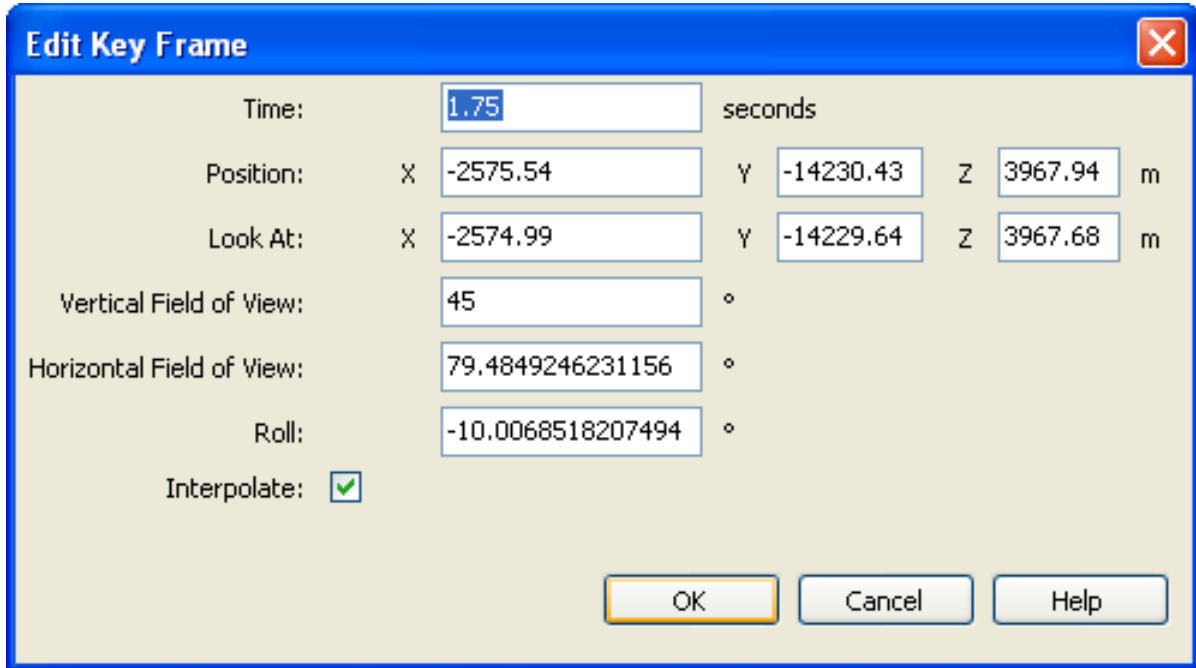

The **Time** box enables you to reposition the time of this keyframe. The value is the number of seconds since the start of the scene; it is not relative to the last keyframe.

The **Interpolate** check box determines whether NavisWorks will automatically interpolate between the current and the last keyframes. This is the default option. When disabled, there will be no gradual movement between the two keyframes; instead the animation will instantly jump to the position/view of the second keyframe when it's reached. Also, there will be no colored animation bar between the keyframes.

The rest of the boxes control position, orientation, etc. of the camera viewpoint. When you are adjusting the vertical field of view, the horizontal field of view will be automatically adjusted, and vice versa to match the aspect ratio in NavisWorks.


4. Click **OK** to save your changes or **Cancel** to exit the dialog box.

Editing Section Planes

To edit a keyframe for a section plane set:



1. If the Animator window is not already open, select **Tools > Animator** from the menu bar.
2. Right-click the desired keyframe in the timeline view, and select **Edit** on the shortcut menu.

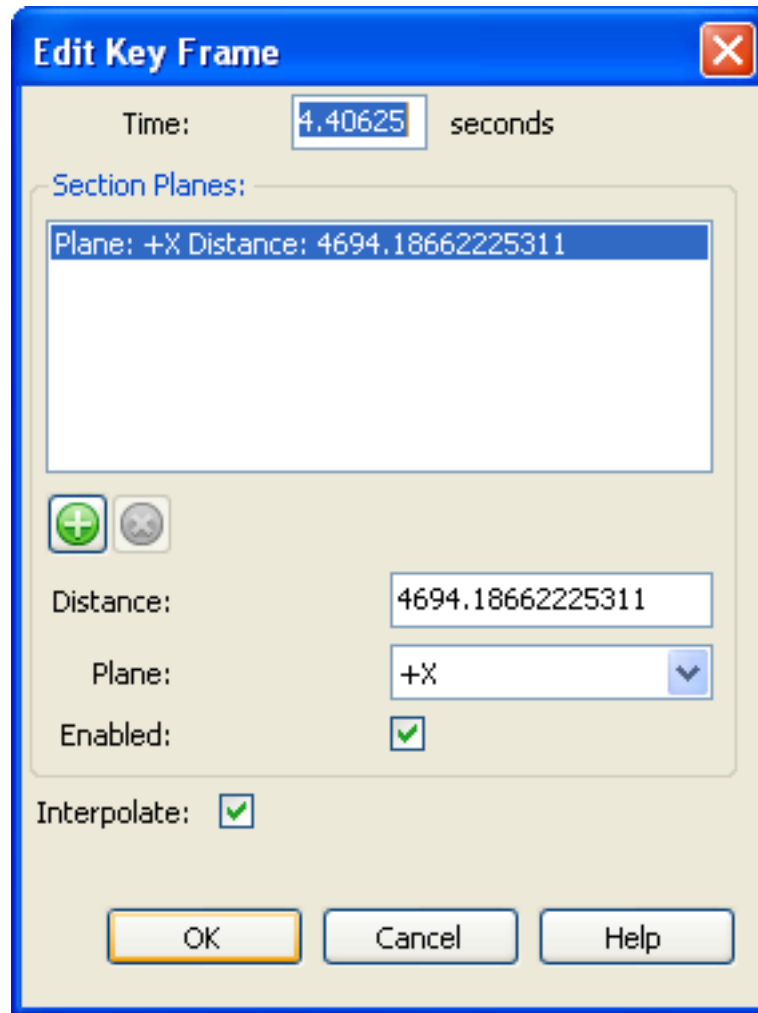- Use the **Edit Key Frame** dialog box to adjust the animation.



The **Time** box enables you to reposition the time of this keyframe. The value is the number of seconds since the start of the scene; it is not relative to the last keyframe.

The **Interpolate** check box determines whether NavisWorks will automatically interpolate between the current and the last keyframes. This is the default option. When disabled, there will be no gradual movement between the two keyframes; instead the animation will instantly jump to the position/view of the second keyframe when it's reached. Also, there will be no colored animation bar between the keyframes.


The rest of the boxes enable you to manipulate the section plane manually. Active section planes are listed in the center. The  and  icons enable you to add and delete section planes.

Distance is the distance of that section plane across the model. The **Plane** drop-down list enables you to select the predefined vector that represents the angle of the section plane. If you select the **Define Custom** option, you will be able to manually define the 'up' vector for the plane. The **Enable** check box toggles the section plane on/off.


- Click **OK** to save your changes or **Cancel** to exit the dialog box.

Playing Animation Scenes

To play a scene:

1. If the Animator window is not already open, select **Tools > Animator** from the menu bar.
2. Select the scene you want to play in the scene view, and click the **Play**  button on the **Animator** toolbar.
toolbar.

Note:


You can also click the **Play**  button on the **Animation** toolbar to play back your animation scenes.

To adjust the animation playback:

1. If the Animator window is not already open, select **Tools > Animator** from the menu bar.
2. Select the desired scene in the scene view.
3. Use the **Loop**, **P.P.**, and **Infinite** check boxes to adjust the way your scene will play.

If you want the scene to play back continuously, select the **Loop** check box. When the animation reaches the end, it will reset back to the start and run again.

If you want the scene to play in ping-pong mode, select the **P.P.** check box. When the animation reaches the end, it will run backwards until it reaches the start. This will only happen once, unless you also select the **Loop** check box.

If you want the scene to play indefinitely (i.e., until the **Stop**  button is pressed), select the **Infinite** check box. If this check box is clear, the scene will play until its end point is reached.

Note:

Selecting this check box disables the **Loop** and **P.P.** check boxes.

4. If necessary, use the **Active**, **Loop**, and **P.P.** check boxes to adjust the playback of the individual scene components.

Note:

Only active animations will play.

Chapter 39. Adding Interactivity

To add interactivity to your model, you need to create at least one animation script, in which you configure certain events and the actions that are carried out when those events happen.

Each script can contain the following components:

- One or more events
- One or more actions


Animation Scripts

In this section you will learn how to create, delete and organize animation scripts.

Adding Scripts

To add a script:

1. If the Scripter window is not already open, select **Tools > Scripter** from the menu bar.
2. Right-click in the script view, and click **Add New Script** on the shortcut menu.


Alternatively, click  at the bottom of the script view.

3. Click the default script name, and type in a new name, for example 'Abbey Entrance'.


This will help you to identify the script in future.

Deleting Scripts

To delete a script:

1. If the Scripter window is not already open, select **Tools > Scripter** from the menu bar.
2. Select the script you want to delete, and click .

Note:


If you made a mistake, use the  button on the **Standard** toolbar to restore the deleted script.

Organizing Scripts

You can group the scripts into folders. This has no effect on their execution, except that the contents of a folder can be easily switched on/off to save time.

To add a script folder:

1. If the Scripter window is not already open, select **Tools > Scripter** from the menu bar.
2. Right-click in the script view, and click **Add New Folder** on the shortcut menu.
3. Click the default folder name, and type in a new name, for example 'Doors'.
4. Select the script you want to move into your new folder. Hold down the right mouse button, and drag the mouse to the folder name. When the cursor changes to a black arrow, release the mouse button, and click **Move Here** on the shortcut menu.

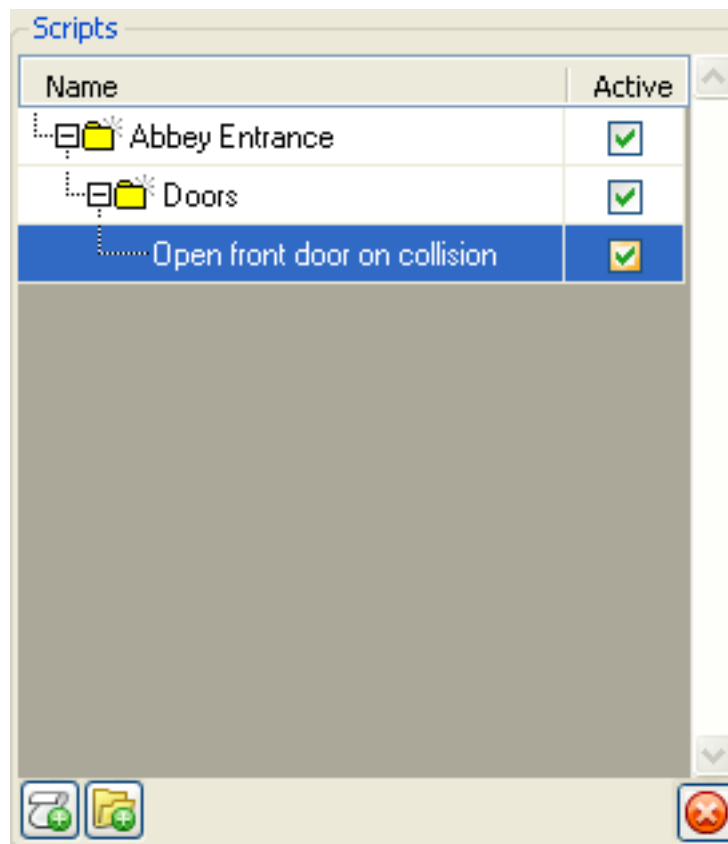


Events

An **event** is the occurrence of an incident or a situation, such as a mouse click, key press or collision, which determines whether your script is run or not. Your script can have more than one event in it. When you use several events in the same script, you need to ensure the Boolean logic makes sense, and the brackets are properly closed. Additionally, until the combination of all event conditions in the script is

satisfied, your script will not be executed.

Adding Events

To add an event:

1. If the Scripter window is not already open, select **Tools > Scripter** from the menu bar.
2. Select the desired script in the script view.
3. Click the desired event type icon at the bottom of the event view. For example, click  to create a start event.

Testing Events

To test an event:

1. If the Scripter window is not already open, select **Tools > Scripter** from the menu bar.
2. Select the desired script in the script view.
3. Right-click the event you want to test in the event view, and click **Test Event** on the shortcut menu.

Configuring Events

To configure an event, select it in the event view, and then specify its properties in the properties view.

Start

A start event triggers a script as soon as scripting is enabled. If scripting is enabled when a file is loaded, then any start events in the file will be triggered immediately. This is useful for setting up the initial conditions of your script, such as giving initial values to variables, or moving the camera to a defined start point.

You don't need to configure any properties for this event type.

Timer

A timer event triggers a script at predefined time intervals.

You can specify the following properties for this event type:

Interval - enter the length of time in seconds between timer triggering.

Regularity - select the event frequency from the drop-down list:

- **Once After** - an event will happen once only. Use this option when you want to have an event that starts after a certain length of time.
- **Continuous** - an event will be continuously repeated at specified time intervals. You can use this, for example, to simulate cyclic work of a factory machine.

Key Press

A key press event triggers a script with a specific button on the keyboard.

You can specify the following properties for this event type:

Key - this is a read-only box showing the currently selected keyboard key.

Press Key - click this button, and then press a key on the keyboard to link the key to your event. The **Key** box indicates the key you selected.

Trigger On - select how the event will be triggered from the drop-down list:

- **Key Up** - an event is triggered after you press the key, and let go (that is, when your finger releases the key).
- **Key Down** - an event is triggered the moment you press the key (that is, when your finger hits the key).
- **Key Pressed** - an event is triggered while the key is pressed. This option allows you to use a key press event together with Boolean operators. For example, you can AND this event to a timer event.

Collision

A collision event triggers a script when the camera collides with a specific object.

You can specify the following properties for this event type:

Set - click this button, and use the shortcut menu to define the collision objects:

- **Clear** - clears your currently selected collision objects.
- **Set From Current Selection** - sets the collision objects to your current object selection in the main NavisWorks window.
- **Set From Current Selection Set** - sets the collision objects to your current search set or selection set.

Show - this is a read-only box, showing the number of geometry objects selected as collision objects.

Include the Effects of Gravity - select this check box if you want to include gravity in collision detection. If this option is used, hitting floor when walking across it, for example, will trigger your event.

Hotspot

A hotspot event triggers a script when the camera is within a specific range of a hotspot.

You can specify the following properties for this event type:

Hotspot - select the hotspot type from the drop-down list:

- **Sphere** - simple sphere from a given point in space.
- **Sphere on Selection** - a sphere around a given selection. This option doesn't require you to define the given point in space. This hotspot will move as the selected objects move in the model.

Trigger When - select how the event will be triggered from the drop-down list:

- **Entering** - an event is triggered when you cross into the hotspot. This is useful for opening doors, for example.
- **Leaving** - an event is triggered when you leave the hotspot. This is useful for closing doors, for example.
- **In Range** - an event is triggered when you are inside the hotspot. This option allows you to use a hotspot event together with Boolean operators. For example, you can AND this event to a timer event.

Position - the position of the hotspot point in millimeters. If the hotspot type you select is Sphere on Selection, this field is not available.

Pick - enables you to pick the position of the hotspot point. If the hotspot type you select is Sphere on Selection, this button is not available. Click the button, and then pick a point for the hotspot in the main NavisWorks window.

Selection - the hotspot objects. If the hotspot type you select is Sphere, this button is not available. Click the **Set** button, and choose an option on the shortcut menu:

- **Clear** - clears the current selection.
- **Set From Current Selection** - the hotspot is set to your current object selection in the main NavisWorks window.
- **Set From Current Selection Set** - the hotspot is set to your current search set or selection set.

Show - this is a read-only field, which displays the number of geometry objects linked to the hotspot. If the hotspot type you select is Sphere, this field is not available.

Radius - radius of hotspot, in millimeters.

Variable

A variable event triggers a script when a variable meets a predefined criterion.

You can specify the following properties for this event type:

Variable - the alphanumeric name of the variable to be evaluated.

Value - an operand to use. Enter a value to be tested against your variable. Alternatively, enter a name of another variable. Its value will be tested against the value in your variable.

- If you enter a number (for example 0, 400, 5.3), the value is treated as a numeric value. If it's got a decimal place, the floating-point formatting is preserved up to the user-defined decimal places.
- If you enter an alphanumeric string between single or double quote marks, such as "hello" or 'testing', the value is treated as a sting.
- If you enter an alphanumeric string without single or double quote marks, such as counter1 or testing, the value is treated as another variable. If this variable has never been used before, it's assigned a numerical value of 0.
- If you enter the word true or false without any quotes, the value is treated as a boolean (true = 1, false = 0).

Evaluation - operators used for variable comparison. You can use any of the following operators with numbers and boolean values. However, comparing strings is limited to the 'Equals' and 'Not Equal To' operators only.

- Equals
- Greater Than
- Greater Than or Equal To
- Less Than
- Less Than or Equal To
- Not Equal To

Animation

An animation event triggers a script when a specific animation starts or stops.

You can specify the following properties for this event type:

Animation - animation that will trigger the event.

Trigger On - select how the event will be triggered from the drop-down list:


- **Starting** - an event is triggered when the animation starts.
- **Ending** - an event is triggered when the animation ends. This is useful for chaining animations together.

Actions

Your script can have more than one action in it. Actions are executed one after another, so it is important to get the action sequence right. However, the Scripter does not wait for the current action to be completed before moving on to the next action.

Adding Actions

To add an action:

1. If the Scripter window is not already open, select **Tools > Scripter** from the menu bar.
2. Select the desired script in the script view.
3. Click the desired action type icon at the bottom of the action view. For example, click  to add a play animation action.

Testing Actions

To test an action:

1. If the Scripter window is not already open, select **Tools > Scripter** from the menu bar.
2. Select the desired script in the script view.
3. Right-click the action you want to test in the action view, and click **Test Action** on the shortcut menu.

Note:

When you test actions, all events are ignored.

Configuring Actions

To configure an action, select it in the action view, and then specify its properties in the properties view.

Play Animation

A play animation action specifies which animation to play back when a script is triggered.

You can specify the following properties for this action type:

Animation - select the animation to play from the drop-down list. If you don't have any object animation in your NavisWorks file, this field is not available.

Pause at End - select this check box if you want the animation to stop at the end. If this

check box is clear, the animation will snap back to the starting point when it ends.

Starting At - select the playback start from the drop-down list:

- **Start** - the animation plays forwards from the beginning.
- **End** - the animation plays backwards from the end.
- **Current Position** - the animation plays from its current position, if the playback has already started. Otherwise, the animation plays forwards from the beginning.
- **Specified Time** - the animation plays from the segment defined in the **Specific Start Time** field.

Ending At - select the playback end from the drop-down list:

- **Start** - the playback ends at the beginning of the animation.
- **End** - the playback ends at the end of the animation.
- **Specified Time** - the playback ends at the segment defined in the **Specific End Time** field.

Specific Start Time - the start position of a playback segment.

Specific End Time - the end position of a playback segment.

Stop Animation

A stop animation action specifies which currently playing animation to stop when a script is triggered.

You can specify the following properties for this action type:

Animation - select the animation to stop from the drop-down list. If you don't have any object animation in your NavisWorks file, this field is not available.

Reset To - select the position of the stopped animation from the drop-down list:

- **Default Position** - the animation returns to its starting point.
- **Current Position** - the animation remains at its end position.

Show Viewpoint

A show viewpoint action specifies which viewpoint to use when a script is triggered.

You can specify the following property for this action type:

- **Viewpoint** - select the viewpoint to show from the drop-down list. If you don't have any viewpoints in your NavisWorks file, this field is not available.

Pause Script

Actions are executed one after another in a script; however, Scripter does not wait for the current action to be completed before moving on to the next. A pause action enables you to stop the script for a specified amount of time before the next action is run. Alternatively, you can create several scripts to execute actions separately.

You can specify the following property for this action type:

- **Delay** - enter the time period in seconds.

Send Message

A send message action writes a message in a text file when a script is triggered.

You can specify the following property for this action type:


- **Message** - enter the message that will be sent to a text file defined in the **Options Editor**.

You can output the Scripter variables in your message. To do this, use %variable_name% style.

To configure the message file:

1. On the **Tools** menu, click **Global Options**.
2. Expand the **Tools** node in the **Options Editor** dialog box, and click the **Scripter** option.

The Scripter page is displayed.

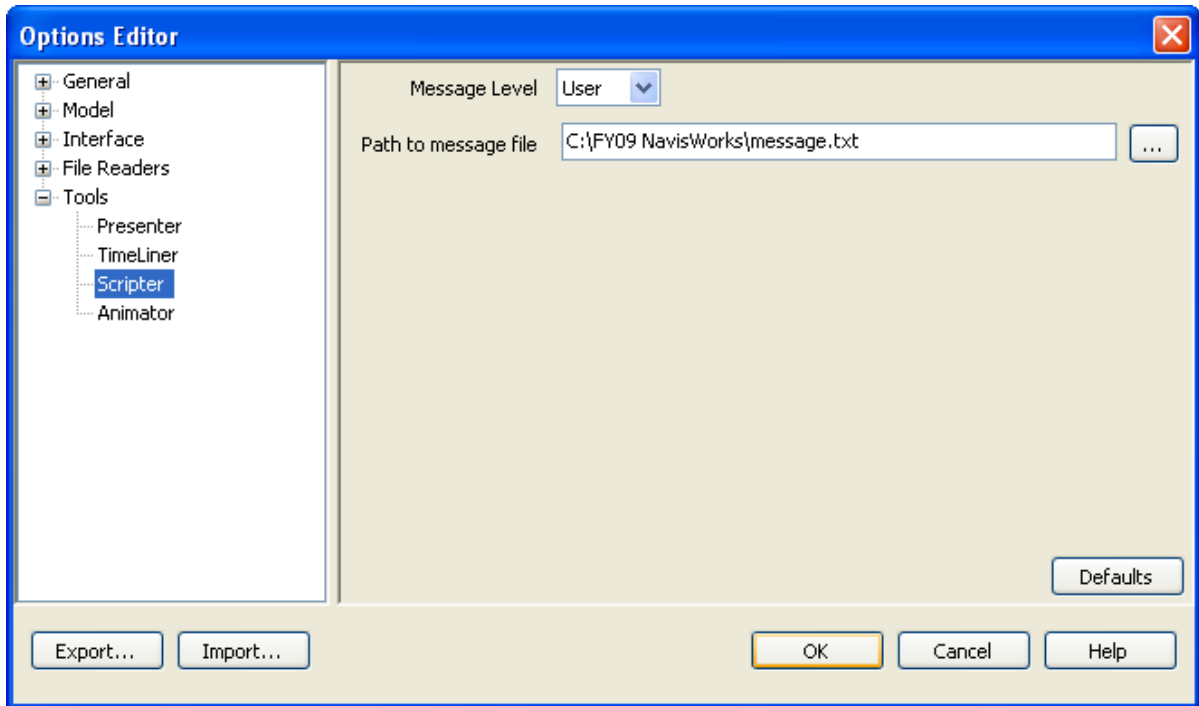

3. Use the **Message Level** drop-down box to select the contents of the message file.
 - **User** - the message file only contains user messages (i.e., messages generated by message actions).
 - **Debug** - the message file contains both user messages and debug messages (i.e., messages generated internally by Scripter). Debugging enables you to see what is going on in more complex scripts.
4. Enter the **Path to Message File**. If a message file doesn't exist yet, NavisWorks will attempt to create one for you.

Note:

You can't use variables in the path.

5. Click **OK** to accept your changes, or **Cancel** to return to NavisWorks without accepting them.

Set Variable

A set variable action assigns, increases or decreases a variable value when a script is triggered.

You can specify the following properties for this action type:

Variable Name - the alphanumeric name for the variable.

Value - an operand to assign.

- If you enter a number (for example 0, 400, 5.3), the value is treated as a numeric value. If it's got a decimal place, the floating-point formatting is preserved up to the user-defined decimal places.
- If you enter an alphanumeric string between single or double quote marks, such as "hello" or 'testing', the value is treated as a sting.
- If you enter the word true or false without any quotes, the value is treated as a boolean (true = 1, false = 0).

Modifier - assignment operators for your variable. You can use any of the following operators with numbers and boolean values. However, using strings is limited to the 'Set Equal To' operator only.

- Set Equal To
- Increment By
- Decrement By

Store Property

A store property action stores an object property in a variable when a script is triggered. This can be useful if you need to trigger events based on embedded object properties or live data in a linked database.

You can specify the following properties for this action type:

Set - click this button, and use the shortcut menu to define the objects, which are used to get the property from:

- **Clear** - clears the current selection.
- **Set From Current Selection** - the objects are set to your current object selection in the main NavisWorks window.
- **Set From Current Selection Set** - the objects are set to your current search set or selection set.

Note:

If your selection contains a hierarchy of objects, the top-level object will be automatically used to get the property from. So, for example, if you selected a group called "Wheel", which includes two subgroups called "Rim", and "Tyre", only the properties that relate to "Wheel" can be stored.

Variable to Set - the name of the variable to receive the property.

Category - the property category. The values in this drop-down box depend on the selected objects.

Property - the property type. The values in this drop-down box depend on the chosen property category.

Note:

For more information about object properties, see "Properties" under "Finding" in the **Basic NavisWorks Functionality** section.


Load Model

A load model action opens a specified file when a script is triggered.

You can specify the following property for this action type:


- **File to Load** - enter the path to the file that will be loaded to replace the current one. You may find it useful if you want to present a selection of animated scenes contained in a range of different model files.

Enabling Scripting

To enable animation scripts in your file, you need to click the **Toggle Scripts**  button on the **Animation** toolbar.

You can now interact with your model.

Note:

When the scripts are enabled, you can't create or edit scripts in the Scriptor window. To disable scripting, click  again.

Chapter 40. Animation Exercise

To follow the procedures in this section, you need to open the file called *gatehouse_pub.nwd* located under the **Examples\Gatehouse** folder in the NavisWorks installation directory.

Note:



If you can't see the **Examples** folder, it means that it's not been installed with NavisWorks. You can use the **Add/Remove Programs** option in the **Control Panel** to change the installation parameters.


Opening a Gatehouse Door

In this exercise you will animate a door in the Gatehouse model, and make it open and close when you press a button on the keyboard.

Animating a Door


To create an animation of a door:

1. Select **Tools > Animator** from the menu bar, and dock the Animator window at the bottom of the screen.
2. In the Animator window, click , and click **Add Scene** on the shortcut menu.
3. Click the added scene, and rename it to 'Gatehouse Door'.
4. In the main NavisWorks window, select the front red door. You may need to adjust the view of the gatehouse slightly. In the example below, a portion of the Gatehouse was selected first, and then the rest of the model was hidden by pressing  on the **Selection Tools** toolbar.

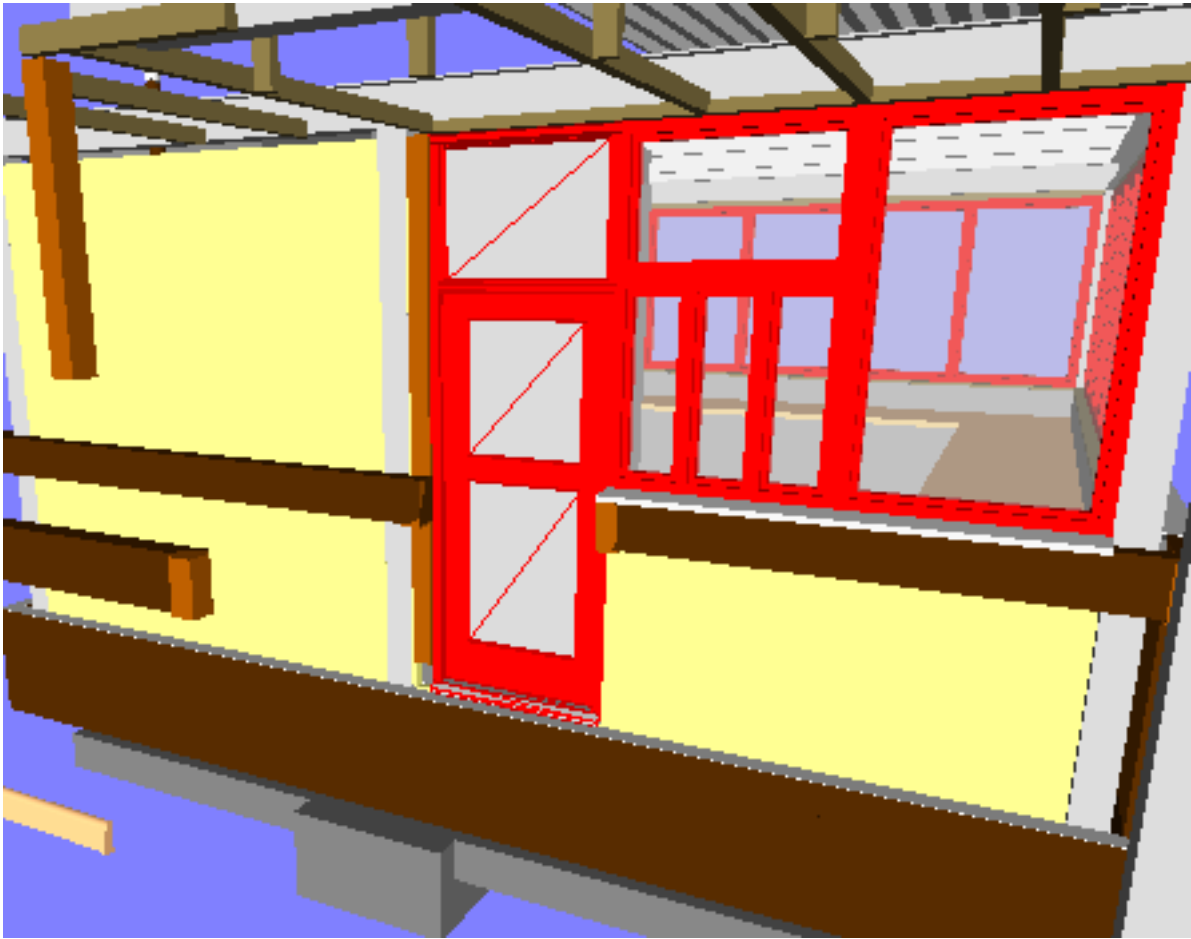


5. In the Animator window, click , and click **Add Animation Set > From Current Selection** on the shortcut menu.

6. Rename the animation set to 'Door 1'.


7. With the animation set selected in the scene view, click  on the **Animator** toolbar.

This captures the initial position of the door as a keyframe.


8. In the timeline view, move the black time slider 3 seconds to the right.


9. Click  on the **Animator** toolbar.

10. Place the mouse over the yellow square in the center of the rotation tool, and drag it to the left-hand side of the door to act as a hinge.

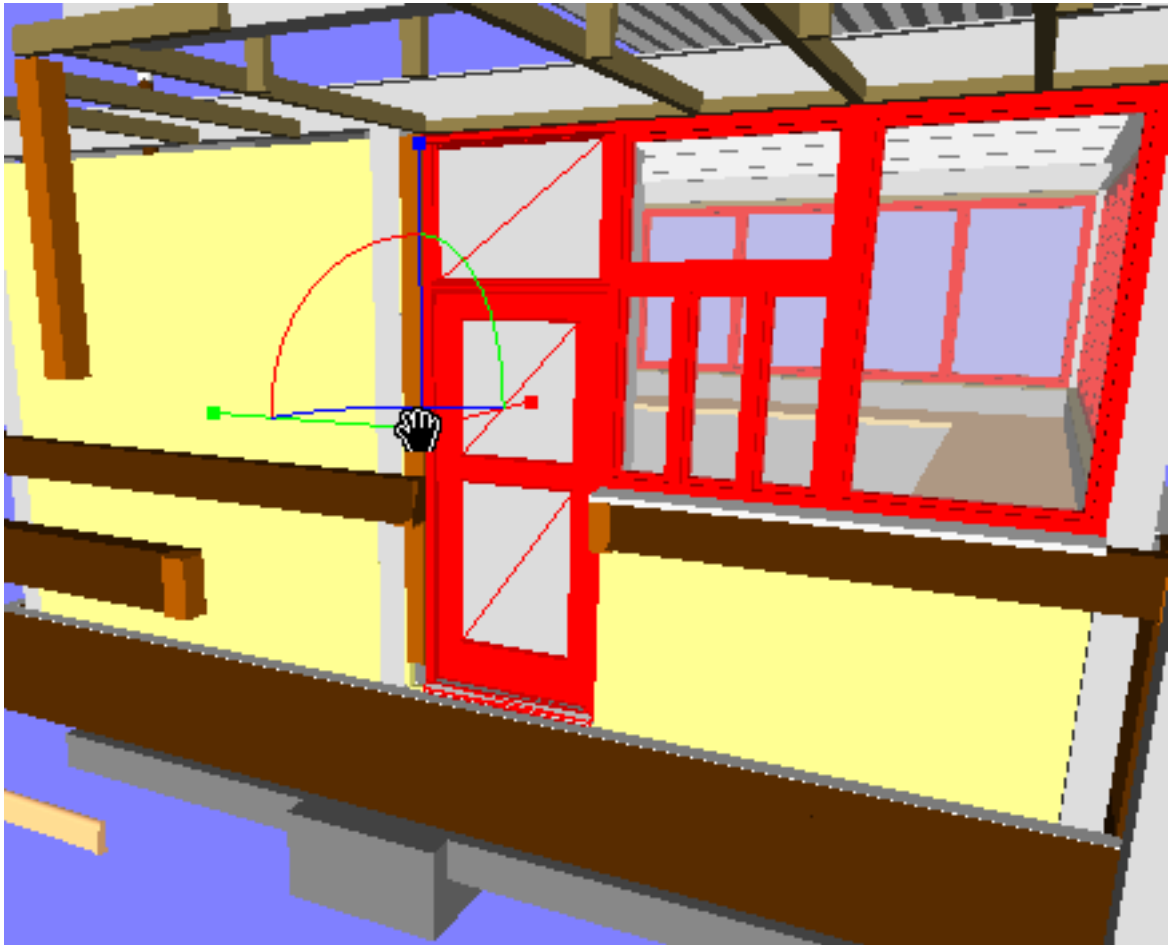

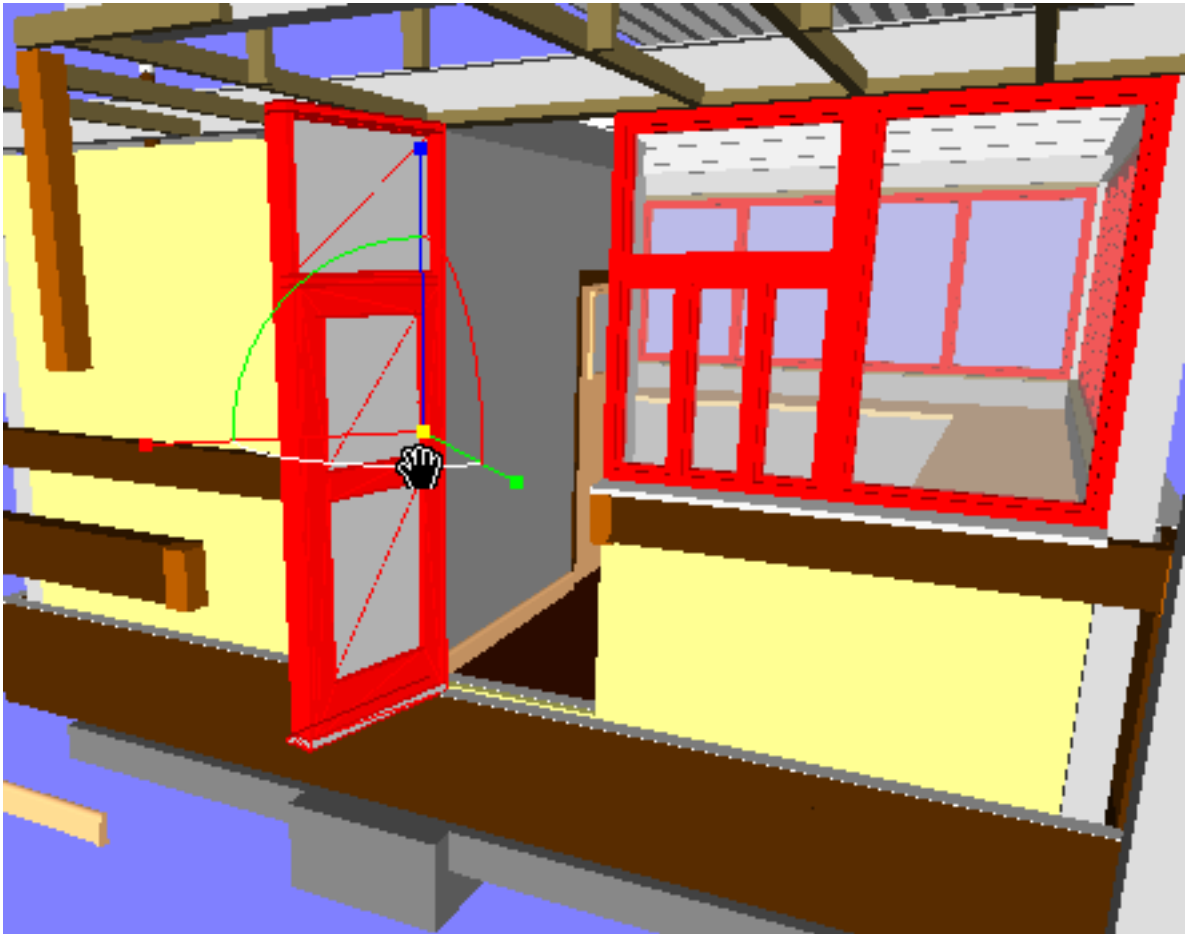

11. Place the mouse over the blue curve in the middle of the rotation tool, and drag it to rotate the door along the X axis until it looks open. In the example below, the door opens outside. You can make it open inside, instead.




12. Click  on the **Animator** toolbar.

This captures the current position of the door as a keyframe.


13. Click , and then click . You should see the door in the Gatehouse model open.

Creating Scripts

To create a script to open a door:

1. Select **Tools > Scripter** from the menu bar, and dock the Scripter window at the bottom of the screen.
2. In the Scripter window, click , and rename the added script to 'Open Door'.


3. Add a key press event:

In the events view, click .

In the properties view, select the **Key Up** option in the **Trigger On** field.

Click the **Press Key** button, and press **1** on your keyboard.


4. Add a set variable action:

In the actions view, click .


In the properties view, enter **door_open** in the **Variable Name** field.

Type **1** in the **Value** field.

5. Add a pause action:

In the actions view, click .

6. Add a play animation action:

In the actions view, click .


In the properties view, select **Door 1** in the **Animation** field.

Select the **Pause at End** check box.


Select **Start** in the **Starting At** field.

Select **End** in the **Ending At** field.

To create a script to close a door:

1. In the Scripter window, click , and rename the added script to 'Close Door'.


2. Add a variable event:

In the event view, click .

In the properties view, enter **door_open** in the **Variable** field.

Type **1** in the **Value** field.


3. Add a key press event:

In the events view, click .

In the properties view, select the **Key Pressed** option in the **Trigger On** field.

Click the **Press Key** button, and press **1** on your keyboard.

4. Add a play animation action:

In the actions view, click .

In the properties view, select **Door 1** in the **Animation** field.

Select the **Pause at End** check box.

End in the **Starting At** field.


Start in the **Ending At** field.

5. In the events view, right-click the first event (On Variable), and click **Logic > End** on the shortcut menu.

When this script runs, if the door was previously opened, it will close when you press '1' on the keyboard.

Testing the Results

To open and close your door:

1. Click the **Toggle Scripts**  button on the **Animation** toolbar.
2. Press '1' to open the Gatehouse door.
3. Press '1' again to close the Gatehouse door.

Part 6. Using TimeLiner

TimeLiner enables you to link your 3D model to an external construction schedule for visual 4D planning. In this section, you will learn how to:

- Create and attach tasks
 - Link to external project files
 - Configure and play simulations
 - Use rules to map tasks to model geometry
 - Simulate your TimeLiner sequence throughout the duration of the project schedule
 - Export static images during a simulation
 - Control general TimeLiner options
 - Add object and viewpoint animations
-

Chapter 41. Overview of TimeLiner

The TimeLiner tool adds 4D schedule simulation to Autodesk NavisWorks Manage 2009. TimeLiner imports schedules from a variety of sources; allows you to connect objects in the model with tasks in the schedule; simulate the schedule showing the effects on the model, including planned against actual schedules; and export images and animations based on the results of the simulation. TimeLiner will automatically update the simulation if the model or schedule changes.

You can combine the functionality of the TimeLiner with other NavisWorks tools:

- Linking TimeLiner and Object Animation together enables the triggering and scheduling of object movement based on start time and duration of project tasks, and can help you with workspace and process planning. For example, a TimeLiner sequence may indicate that when a particular site crane moves from its start point to its end point over the course of a particular afternoon, a workgroup working nearby causes an obstruction along its route. This potential obstruction problem can be resolved before going to site (e.g., the crane can be moved along a different route, the workgroup moved out of the way, or the project schedule altered). See [Chapter 47, *Adding Animation*](#) for more information.
- Linking TimeLiner and Clash Detective together enables the time-based clash checks on the project. See [Chapter 51, *Selecting Items for Testing*](#) for further details on **Time-based Clashing**.
- Linking TimeLiner, Object Animation, and Clash Detective together enables clash testing of fully animated TimeLiner schedules. So, instead of visually inspecting a TimeLiner sequence to make sure, for example, that the moving crane didn't collide with a workgroup, you can run a Clash Detective test.

Working with the TimeLiner Window


The TimeLiner window enables you to link items in the model to project tasks, and simulate project schedules.

By default, the TimeLiner window floats in the main NavisWorks window. Like all other floating windows, TimeLiner window is dockable and resizable, and will automatically lock to specific locations near to where it is moved. You can prevent it from docking while you drag it, by holding down Ctrl.

Note:

You can quickly dock and undock any floating window by double-clicking the window's control bar.

To open the TimeLiner window, select **TimeLiner** from the **Tools** menu.

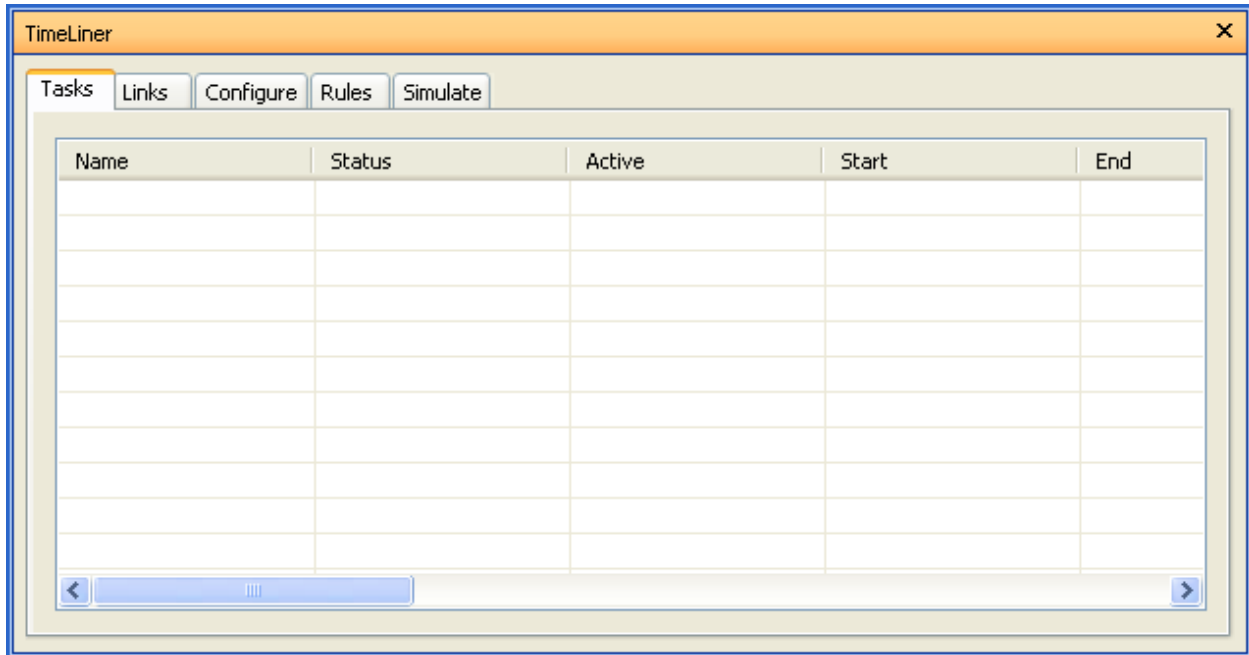


The TimeLiner window contains the following:

- Tasks tab - enables you to create and manage project tasks.
- Links tab - enables you to import tasks from a third-party scheduling software, such as MS Project, Asta, and Primavera.
- Configure tab - enables you to set up the task parameters, such as task types, appearance definitions for tasks, and the default model appearance at start of the simulation.
- Rules tab - enables you to create and manage TimeLiner rules. This can be used to automatically attach all tasks to objects in your model according to user-defined criteria.
- Simulate tab - enables you to set up and play simulations.

The Tasks Tab

The **Tasks** tab shows all of the tasks in your schedule, listed in a table format. You can use the scroll bars at the right and at the bottom of the tab to move through the task records.

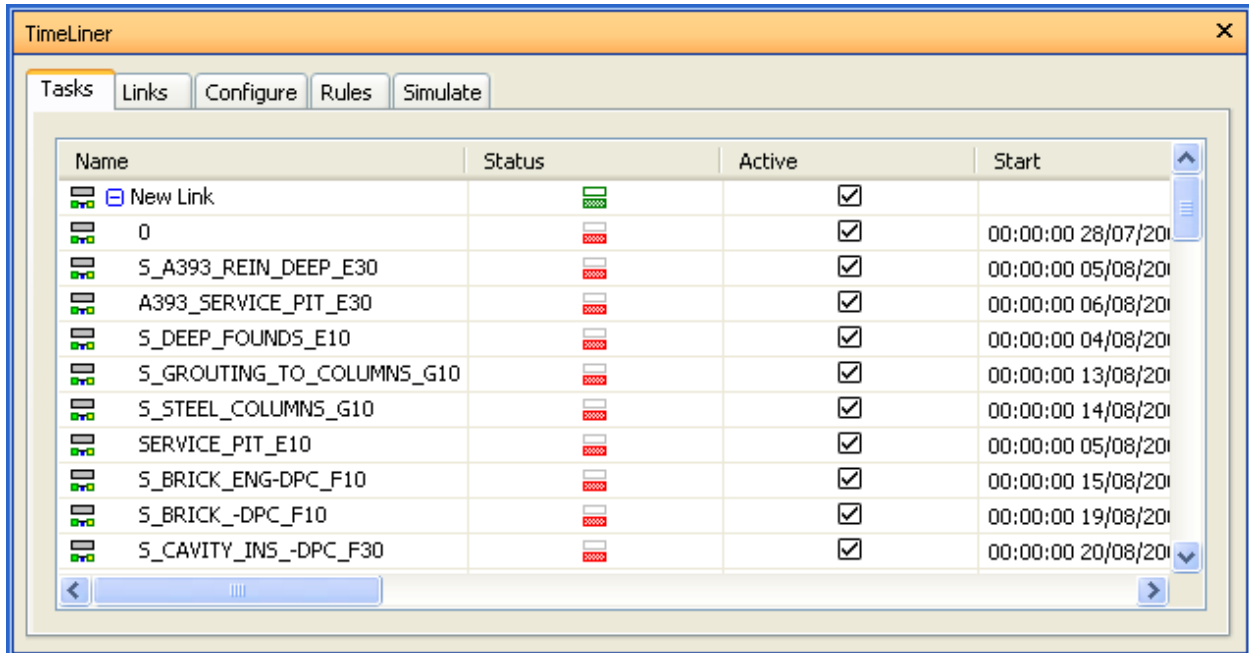

The Task View

The tasks are shown in a multi-column table, which provides some flexibility in how records are displayed. You can:

- Move or resize columns
- Sort column data in ascending or descending order
- Add new user columns to the default column set

It is possible to move between entries in a manually editable task using the keyboard. Simply select a task that has been set to be manually editable, and use **Tab** and **Shift-Tab** to move forwards and backwards between fields. The keyboard can then be used to edit and set each entry where necessary.




The Task Hierarchy

NavisWorks TimeLiner supports a hierarchical task structure, as brought through from a link to your scheduling software, e.g. Microsoft Project™ (see the Links tab for more information). The hierarchy can be expanded or contracted by clicking on the plus or minus sign, respectively, to the left of the task.

The Task Icons













An icon is displayed to the left of each task name. These identify the current status of the task, with relation to attached items and links to external schedules:

- Task with no attached items.
- Task with attached items.

-  Task with link synchronized to external schedule.
-  Task with link synchronized to external schedule, including Task Type.
-  Task with link to external schedule that is either broken or old (unsynchronized).

The Status Icons

Each task has its own **Status** identified by an icon, representing planned against actual relationships. Each icon shows two bars. The top bar represents the **Planned** dates, and the bottom bar represents the **Actual** dates. If the Actual start and finish dates are the same as the Planned start and finish dates, the bars are displayed in green. Any variations between Planned and Actual dates are displayed in red. Missing Planned or Actual dates are shown in grey.

-  Actual start and end dates equal Planned start and end dates.
-  Actual end date before Planned start date.
-  Actual start date after Planned end date.
-  Actual start date before Planned start date and Actual end date after Planned end date.
-  Actual start date before Planned start date and Actual end date equals Planned end date.
-  Actual start date equals Planned start date and Actual end date after Planned end date.
-  Actual start date equals Planned start date and Actual end date before Planned end date.
-  Actual start date after Planned start date and Actual end date equals Planned end date.
-  Actual start date before Planned start date and Actual end date before Planned end date.
-  Actual start date after Planned start date and Actual end date after Planned end date.
-  Actual start and end dates only.
-  Planned start and end dates only.

The Active Check Box

The check box in the **Active** column enables you to turn a task on/off. If a task is turned off, then it will not appear in the simulation. For hierarchical tasks, turning off the parent task will automatically turn off all child tasks.

The Shortcut Menus

Right-clicking any column header, opens a shortcut menu that enables you to create and manage custom columns, and change the sort order of tasks.

Add User Column - enables you to insert a custom column into the tasks table. You can add as many custom columns as you want, but you can only have up to 10 different input types.

Delete User Column - deletes the selected custom column from the tasks table.

Rename User Column - renames the selected custom column. By default, the column has the same name as its input type. Changing the column name does not change the input type.

Order - controls the tasks' sort order.

Right-clicking within the tasks area on the tab, opens a shortcut menu that enables you to work with tasks in your schedule.

Add Task - adds a new task to the schedule.

Deletes Task - deletes the selected tasks from the schedule.

Detach Selection - detaches the currently selected items in the scene from the selected tasks.

Attach Selection - attaches the currently selected items in the scene to the selected tasks.

Append Selection - appends the currently selected items in the scene to the items already attached to the selected tasks.

Note:

See [Chapter 13, *Selecting Items*](#) for more information on how to select items in NavisWorks.

Attach Search - attaches all items selected by the current **Search** to the selected tasks. See "[Finding Items](#)" for more information on searching.

Attach Named Search - attaches all items selected by the named search currently selected in the selection tree. For example, anything on the **Sets** or **Properties** tabs of the **Selection Tree**.

Attach Selection Set - attaches all items contained within a **Selection Set**, to the selected tasks. When you choose this option a list of all Selection and Search Sets saved in the current scene is displayed. Choose the Selection or Search Set you wish to attach to the tasks. See "[Selection and Search Sets](#)" for more information on using Selection and Search Sets.

Display Attached Items - selects all items attached to the selected tasks in the main

NavisWorks window and on the **Selection Tree**. The items will be highlighted based on the selection options you have defined. See “ [Selection Options](#) ” for more information on selection options.

Relink - relinks the selected task with your scheduling software. You will only be able to relink the parent task, i.e. the task with the same name as the link. You will be prompted to choose the link to attach the task to, as you may have more than one link set up. Linked tasks are synchronized with the external schedule, and you cannot edit start and end dates. See the Select Link dialog box for more information on linking tasks.

Unlink - breaks the link between the selected task and an external schedule, enabling you to manually edit start and end dates. You will only be able to unlink the parent task, i.e. the task with the same name as the link. However, your task is no longer synchronized with the external schedule.

Note:

For editing of dates, it is recommended to do this in the scheduling software and then **Synchronize Tasks from Link**.

Check - validates the schedule, by identifying items that have not been included in any task, are duplicated in multiple tasks or, are in overlapping tasks.

Tools - enables you to quickly create your own schedule, based on model layers, topmost items, or selection sets.


Add Comment - adds a comment to the task. See “ [Commenting](#) ” for more information on comments.

Rename - renames the task. When the text field becomes active, enter the new name then press Enter to save it.

You can use multi-selection (i.e. holding down Shift or Ctrl) to perform most commands on several tasks at once. For example, should you need to delete all tasks, **select** the first task, then hold down **Shift** and **select** the last task, then press **Delete**.

The Links Tab

The **Links** tab shows all of the links to external schedules in your project, listed in a table format.

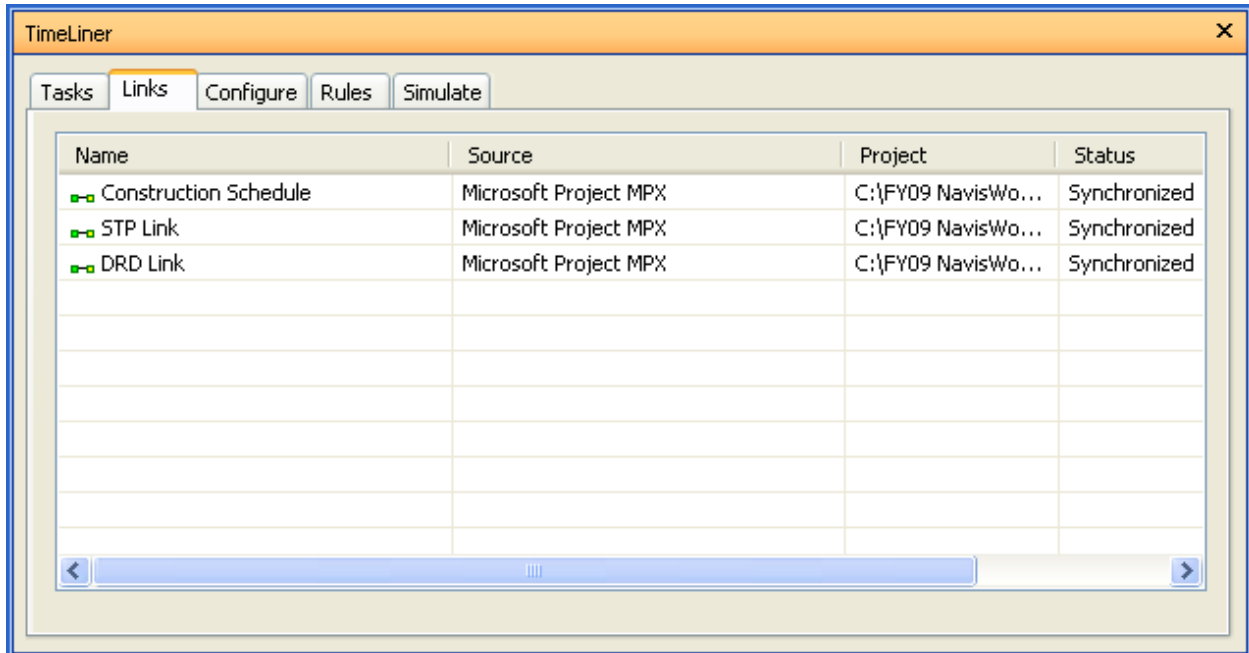

The Link View

The links are shown in a multi-column table. The columns show link name, source (e.g. Microsoft Project™), project (e.g. my_schedule.mpp, and link status. Any further columns (there maybe none) identify the fields from the external schedule which specify the task type, unique id, start date and end date for each linked task.

You can move and resize columns, if necessary.

The Link Status

Synchronized

All linked tasks have the same values as the external schedule.

Old

Linked tasks have values that are out of date compared to the external schedule. Synchronize Tasks from Link to update the tasks.

Status Not Available

Its not possible to determine whether tasks are Synchronized or Old. This value only occurs for schedule sources that don't provide any way of determining when a schedule was last updated.

Broken

The external schedule can not be accessed. The file may have been moved or deleted, or required software may be missing or not functioning correctly. TimeLiner will still function using the task values determined when the link was last synchronized.

The Shortcut Menus

Right-clicking within the links area on the tab, opens a shortcut menu that enables you to add and manage links to external project files.

Add Link - creates a new link to an external project file. Selecting this option will display

a further menu, listing all project sources that may be connected to on the current machine. See “[Supported Scheduling Software](#)” for more information on which sources are available.

Delete Link - deletes the currently selected link.

Note:

Deleting the link to an external project file will not delete any tasks that have previously been rebuilt in the TimeLiner Tasks tab.

Rebuild Task Hierarchy from Link - reads all of the tasks and associated data (as defined in the Field Selector dialog) from the selected project file and adds these to the **Tasks** tab.

Choose this option also to synchronize with the selected project file when new tasks have been added to the project file. This will rebuild the task hierarchy in TimeLiner, containing all of the latest tasks and data.

Synchronize Tasks from Link - updates all existing tasks in the **Tasks** tab, with the latest associated data from the selected project file (e.g. Start and End dates).

Rebuild Task Hierarchy from All Links - reads all of the tasks and associated data (as defined in the Field Selector dialog) from all project files listed in the **Links** tab and adds these to the **Tasks** tab.

Choose this option also to synchronize with all project files when new tasks have been added to the project files. This will rebuild the task hierarchy in TimeLiner, containing all of the latest tasks and data.

Edit Link - enables you to edit the selected link. This will display the **Field Selector** dialog, from which you can define new fields or re-define existing ones.


Rename - enables you to rename the link to something more appropriate. When the text field becomes highlighted, enter the new name, then press **Enter** to save it.

Note:

Tasks in the external schedule will be ignored if they do not include both start and end dates, with the start date being less than or equal to the end date.

The Configure Tab

The **Configure** tab allows you to define **Task Types**, **Appearance Definitions** and an **Overall Start Appearance** for the simulation.

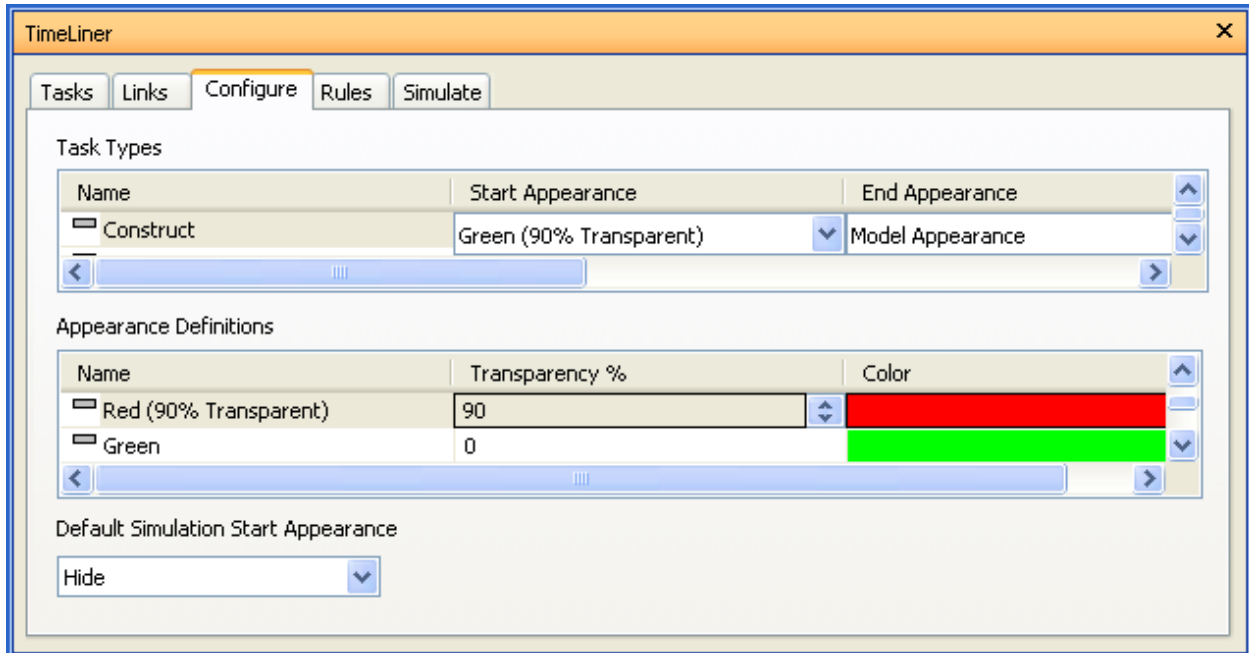

The Task Types

The tasks types are shown in a multi-column table. You can move and resize table columns, if necessary.

TimeLiner comes with three predefined task types:

Construct - for tasks where the attached items are to be constructed. By default, during a simulation, the objects are highlighted in green at the start of the task and are reset to Model Appearance at the end of the task.

Demolish - for tasks where the attached items are to be demolished. By default, during a simulation, the objects are highlighted in red at the start of the task and are hidden at the end of the task.

Temporary - for tasks where the attached items are only temporary. By default, during a simulation, the objects are highlighted in yellow at the start of the task and are hidden at the end of the task.

You can customize the default task types, or create new ones, as necessary.

The Appearance Definitions

The appearance definitions are shown in a multi-column table. You can move and resize table columns, if necessary.

TimeLiner comes with a set of ten predefined **Appearance Definitions** that you can use to configure the task types. Appearances define a level of transparency and a color.

You can customize the default appearance definitions, or create new ones, as necessary.

The Shortcut Menus

Right-clicking in the **Task Types** table opens a shortcut menu that enables you to manage task types:

Add - adds a new task type.

Delete - deletes the selected task type.

Rename - enables you to rename the selected task type.

Right-clicking in the **Appearance Definitions** table opens a shortcut menu that enables you to manage appearance definitions:

Add - adds a new appearance definition.

Delete - deletes the selected appearance definition.


Rename - enables you to rename the selected appearance definition.

The Default Simulation Start Appearance

This drop-down box specifies a default appearance to apply to all objects in the model at the start of the simulation. The default is **Hide**, which is ideal for simulating most construction sequences.


The Rules Tab

The **Rules** tab lists all currently available rules. These can be used to map Tasks to items in the model. Each of the default rules can be edited and new rules may be added as necessary:

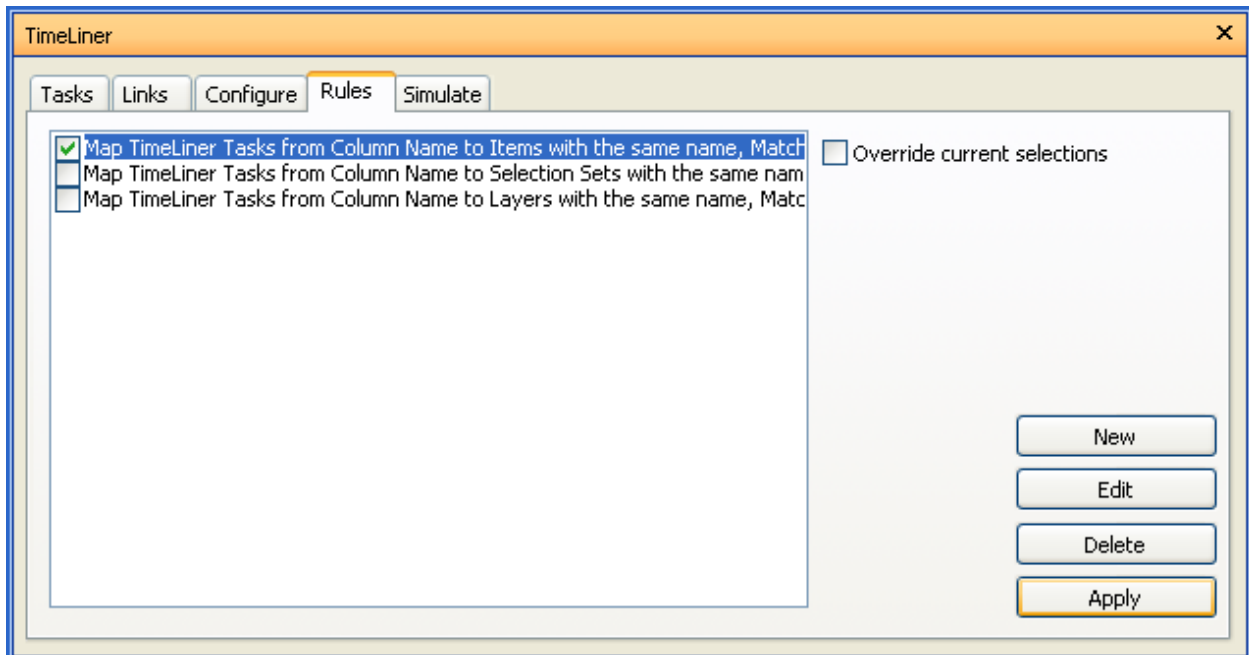


The Simulate Tab


The **Simulate** tab enables you to simulate your TimeLiner sequence throughout the duration of the project schedule.

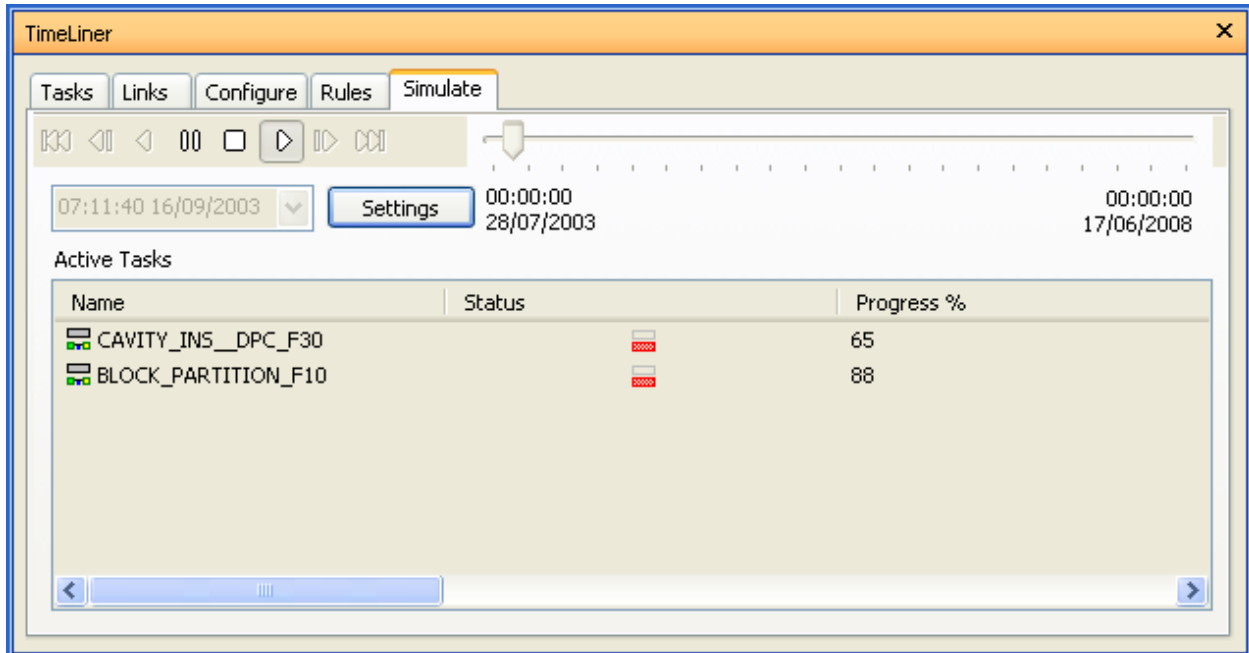

The Playback Controls


Use the standard VCR buttons to step and play forwards and backwards through the simulation:


Rewind  will rewind the simulation back to the beginning.


Step Back  will step back a single step size.


Note:


See Setting the step size for more information.


Reverse Play  will play the simulation backwards.

Pause  will pause the simulation at the time you press it at. You can then look around and interrogate the model, or step forwards and backwards through the simulation. To continue playing from where you paused, just press **Play** again.

Stop  will stop the simulation playing and rewind back to the beginning.

Play  will play the simulation from the currently selected time.

Step Forwards  will step forwards a single step size.

Forward  will fast forward the simulation to the end.

You can use the **Simulation Position** slider to quickly move forwards and backwards through the simulation. Full left is at the beginning and full right is at the end.



The **Date/Time** box below the VCR buttons shows the point in time through the simulation. You can click on the drop-down icon to the right of the date to display a calendar, from which you can select a date to 'jump' to.

The Settings Button

The **Settings** button opens the Simulation Settings dialog that enables you to define how the schedule is simulated.


The Active Tasks

All **Active Tasks** are show in a multi-column table. You can move and resize table columns, if necessary.

You can view the current simulation time for each of the active tasks, and how close to completion they are (**Progress** is displayed as a percentage). The **Status** of each active task is also displayed as an icon. For simulations where Planned and Actual dates are available, the status provides a visual representation as to whether there is any variance between the planned and actual dates. See TimeLiner task status for more information.


The Select Link Dialog

When you relink a task to an external schedule you will be prompted to select which link to use, as your project may be linked to multiple schedules.

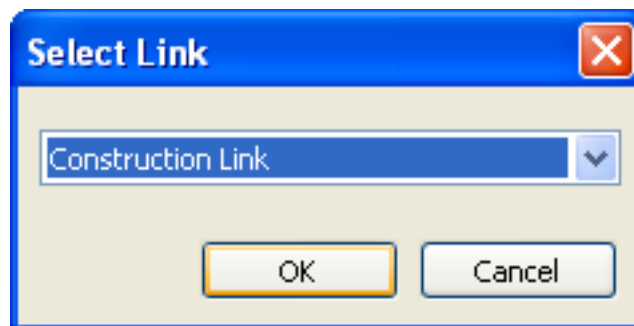

Field Selector Dialog

The **Field Selector** dialog determines various options used when importing data from a Link. The options available may be different for each type of link source.

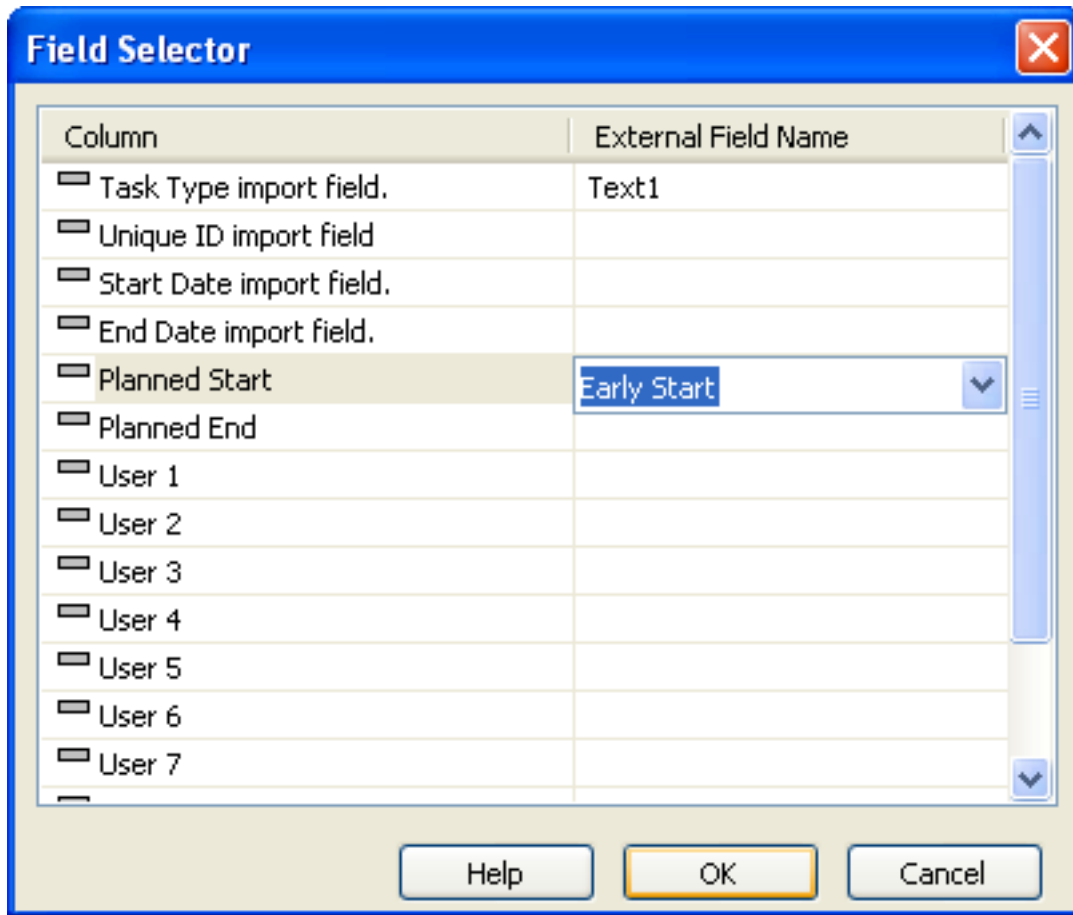


Options

- Task Type import field** The field is used to automatically assign Task Types to each imported Task.
- Unique ID import field** The field is used to uniquely identify each imported Task. This allows synchronization to work even if major changes are made to the external schedule in the scheduling software. The default behaviour is to use the most appropriate field for each source. Some sources do not have a well defined unique id, in which case you may need to choose a field manually.
- Start Date import field** Some project sources support multiple start dates for different purposes. The default behaviour is to use the most appropriate available date for each source. This field may be used to define an **Actual Start** date, should it be different to that selected by default.
- End Date import field** Some project sources support multiple end dates for different purposes. The default behaviour is to use the most appropriate available date for each source. This field may be used to specifically define an **Actual End** date, should it be different to that selected by default.
- Planned Start** The field is used to identify a planned start date. This allows planned against actual comparisons to be made and simulated.

Planned End	The field is used to identify a planned end date. This allows planned against actual comparisons to be made and simulated.
User 1 to 10	Ten user fields are available to link any custom data fields from the project source.

The Simulation Settings Dialog

The **Settings** button provides access to the **Simulation Settings** dialog.

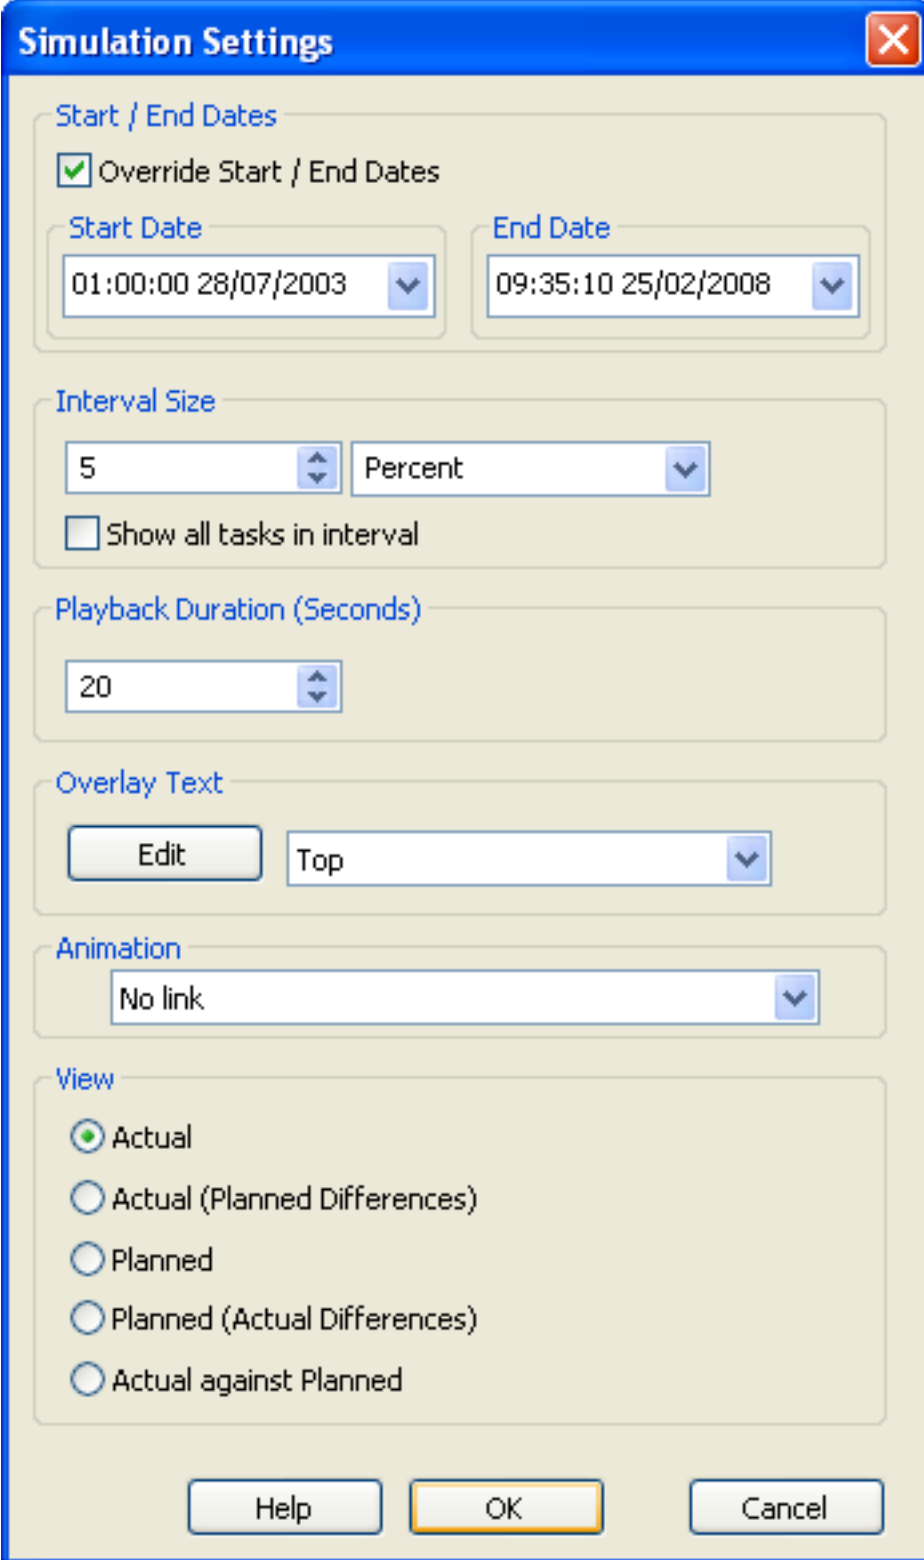

The image shows a 'Simulation Settings' dialog box with a blue title bar and a close button (X) in the top right corner. The dialog is divided into several sections:

- Start / End Dates:** Contains a checked checkbox 'Override Start / End Dates'. Below it are two date pickers: 'Start Date' (01:00:00 28/07/2003) and 'End Date' (09:35:10 25/02/2008).
- Interval Size:** Features a spinner box set to '5' and a dropdown menu set to 'Percent'. Below this is an unchecked checkbox 'Show all tasks in interval'.
- Playback Duration (Seconds):** A spinner box set to '20'.
- Overlay Text:** Includes an 'Edit' button and a dropdown menu set to 'Top'.
- Animation:** A dropdown menu set to 'No link'.
- View:** A group of radio buttons with the following options: 'Actual' (selected), 'Actual (Planned Differences)', 'Planned', 'Planned (Actual Differences)', and 'Actual against Planned'.


At the bottom of the dialog are three buttons: 'Help', 'OK', and 'Cancel'.

It is possible to override the Start and End dates that the simulation runs between. Selecting the **Override Start / End dates** check box enables the date boxes and allows you to choose the start and end dates. By doing this, you can simulate small sub-section of the overall project. The dates will be shown on the

Simulate tab. These dates will also be used when exporting animations.

You can define the **Interval Size** to use when stepping through the simulation using the playback controls. The interval size can be set either as a percentage of the overall simulation duration or to an absolute number of days or weeks, etc.

Use the drop-down list to select the interval unit, then use the Up and Down arrow buttons to increase or decrease the interval size.

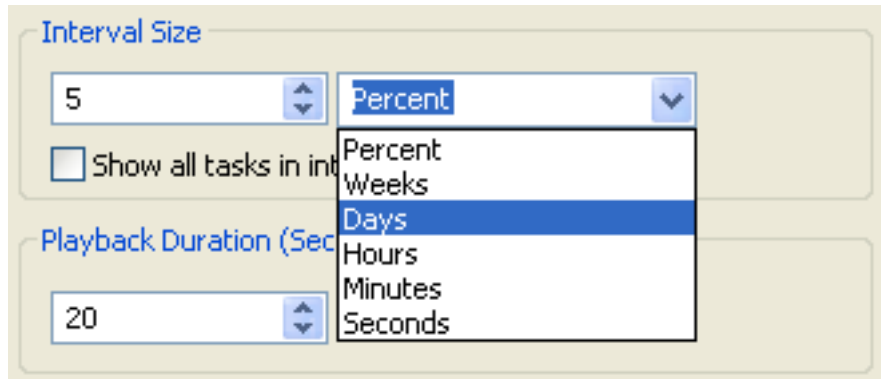


It is also possible to highlight all the tasks that are being worked on during the interval. By checking the **Show all tasks in interval** check box, and for example setting the **Interval Size** to 5 Days, all tasks being worked on during those 5 days will be set to their Start Appearance in the main view, including those that begin and end within the bounds of the interval. The Simulation slider will show this by drawing a blue line under the slider. If un-checked, tasks that begin and end within the bounds of the interval will not be highlighted in this manner, and will need to overlap with the current date in order to be highlighted in the main view.


You can define the overall **Playback Duration** for the complete simulation (the time needed to play it through from start to finish). Use the Up and Down arrow buttons to increase or decrease the duration (in seconds). You may also enter a duration directly into this field.

You can define whether the current simulation date should be overlaid on the main window, and if so whether it should appear at the top or bottom of the screen. From the drop down, choose from **None** (to display no overlay text), **Top** (to display the text at the top of the window), or **Bottom** (to display the text at the bottom of the window).

You can **Edit** the information displayed in the overlay text using the Overlay Text dialog. This dialog also makes it possible to alter the Font **Type**, **Style** and **Size** by clicking on the contained **Font** button.

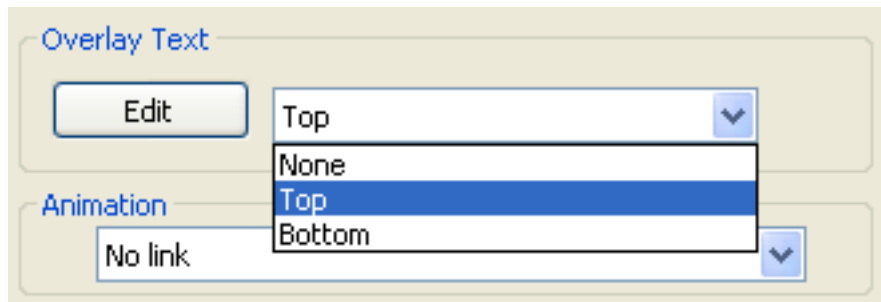

You can add animation to an entire schedule, so that during the TimeLiner sequence playback, NavisWorks will also play the specified viewpoint animation or camera.

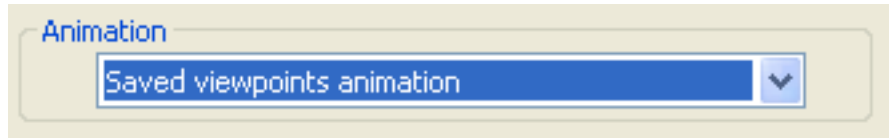


The following options can be selected in the **Animation** field:


- **No Link** - no viewpoint animation or camera animation will be played.
- **Saved Viewpoints Animation** - links your schedule to the currently selected viewpoint or viewpoint animation.
- **Scene X - > Camera** - links your schedule to a camera animation in the selected animation scene.

You can pre-record suitable animations for use with the TimeLiner simulation (see [Chapter 19, Animation](#)). Using animation also affects the Animation Export.


TimeLiner supports Planned and Actual dates and provides five simulation **Views**. Each view will playback the schedule depicting Planned and Actual relationships:


- **Actual**. Choose this view to simulate the **Actual** schedule only (i.e. only use the Actual start and Actual end dates).
- **Actual (Planned Differences)**. Choose this view to simulate the **Actual** schedule against the **Planned** schedule. This view will only highlight the items attached to the task over the Actual date range (i.e. between Actual Start and Actual End. See diagram below for graphical representation). For time periods where the Actual dates are within the Planned dates (on schedule), the items attached to the task will be displayed in the Task Type Start Appearance. For time periods where the Actual dates are early, or late in comparison to the Planned dates (there is a variance), then the items attached to the task will be displayed in the Task Type Early or Late Appearance, respectively.

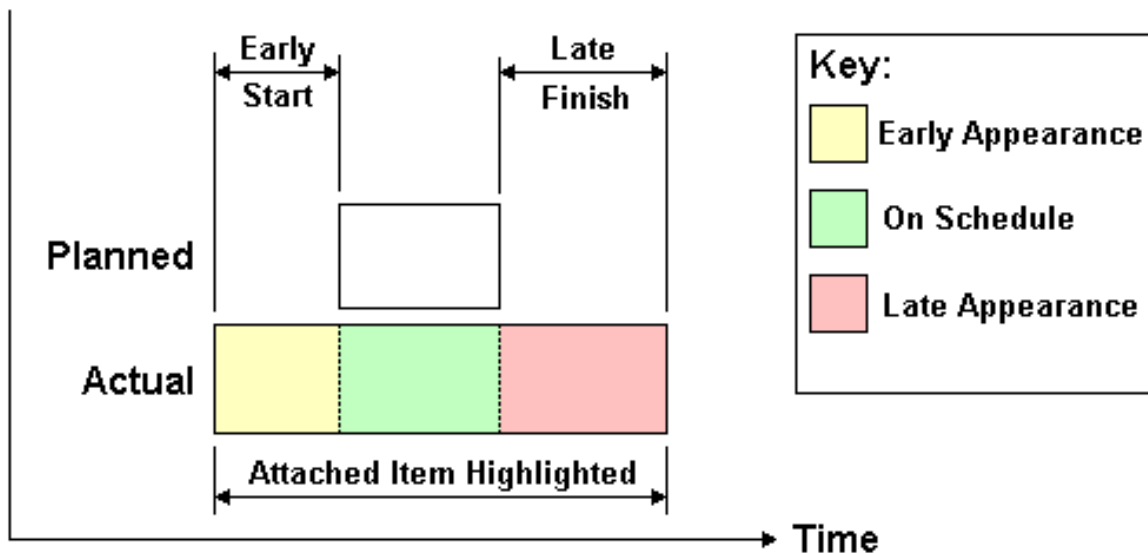

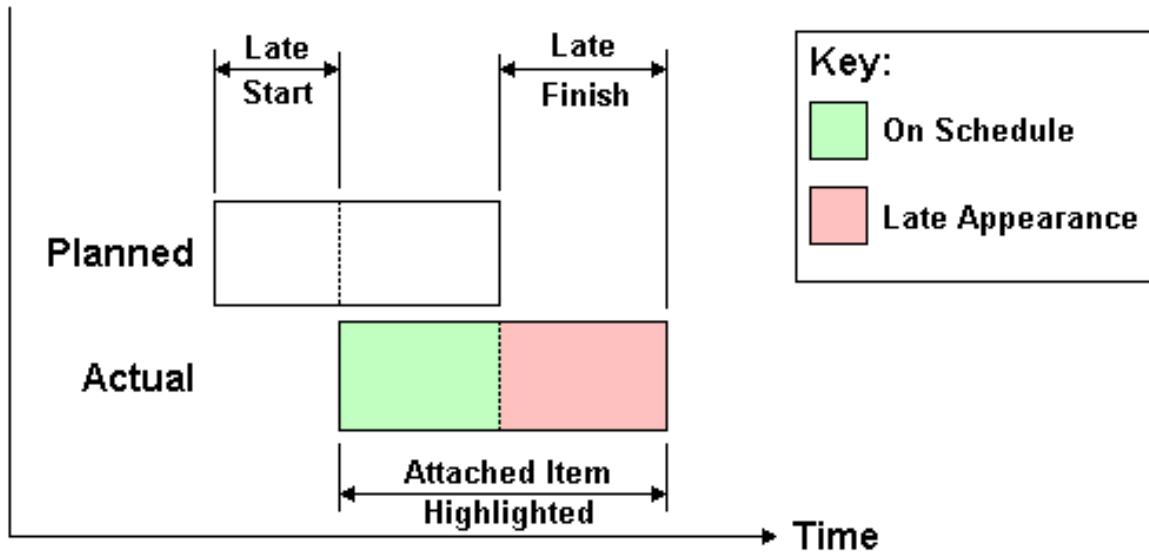



- **Planned.** Choose this view to simulate the **Planned** schedule only (i.e. only use the Planned start and Planned end dates).
- **Planned (Actual Differences).** Choose this view to simulate the **Actual** schedule against the **Planned** schedule. This view will only highlight the items attached to the task over the Planned date range (i.e. between Planned Start and Planned End. See diagram below for graphical representation). For time periods where the Actual dates are within the Planned dates (on schedule), the items attached to the task will be displayed in the Task Type Start Appearance. For time periods where the Actual dates are early, or late in comparison to the Planned dates (there is a variance), then the items attached to the task will be displayed in the Task Type Early or Late Appearance, respectively.

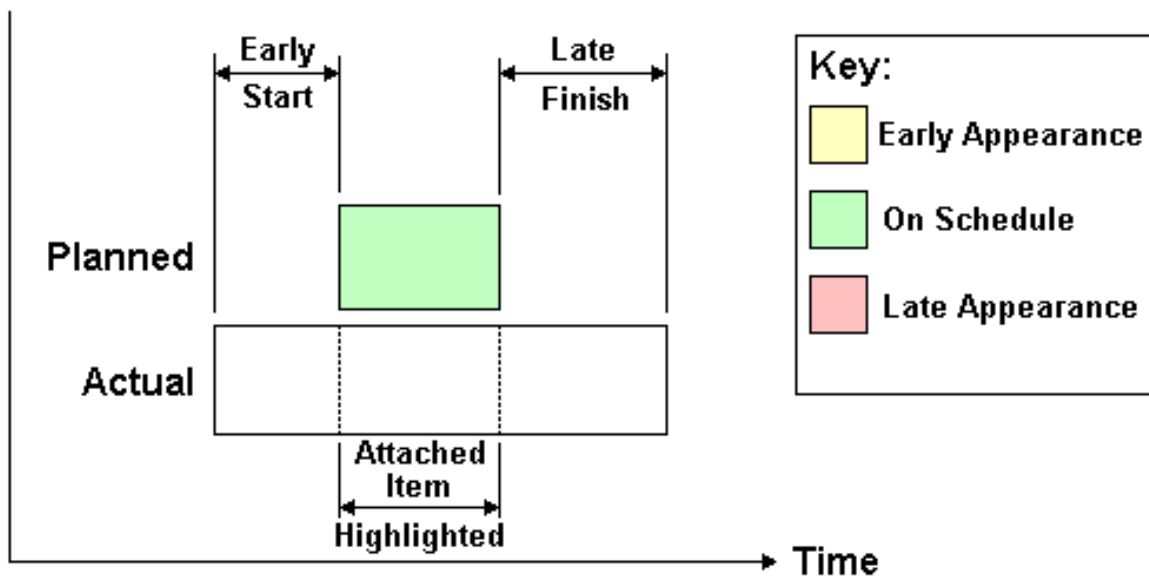

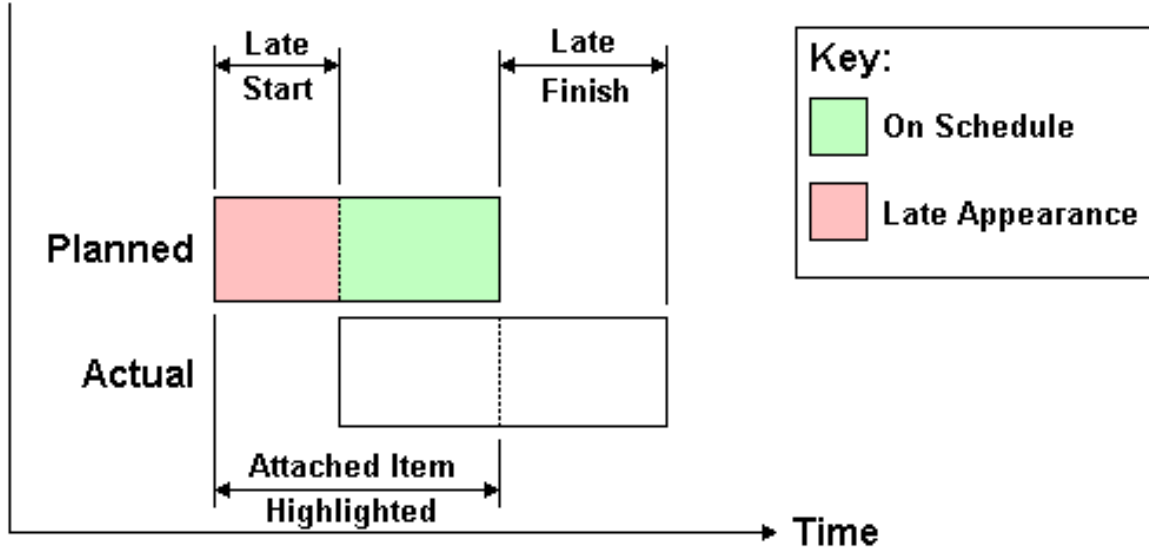


- Actual against Planned.** Choose this view to simulate the **Actual** schedule against the **Planned** schedule. This will highlight the items attached to the task over the entire Planned and Actual date range (i.e. between the earliest of Actual and Planned start dates and the latest of Actual and Planned End dates. See diagrams below for graphical representation). For time periods where the Actual dates are within the Planned dates (on schedule), the items attached to the task will be displayed in the Task Type Start Appearance. For time periods where the Actual dates are early, or late in comparison to the Planned dates (there is a variance), then the items attached to the task will be displayed in the Task Type Early or Late Appearance, respectively.

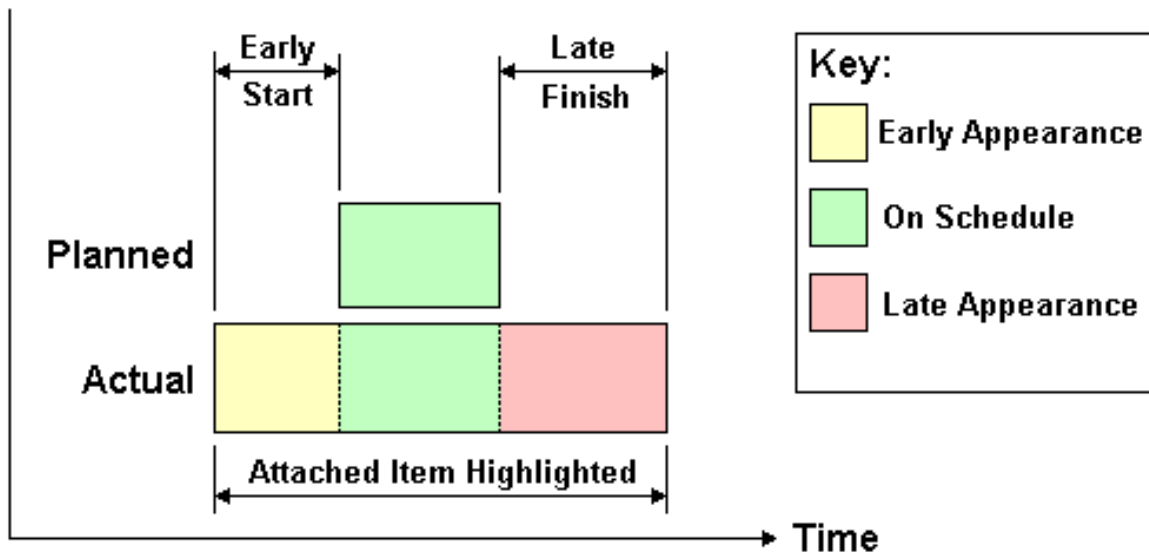

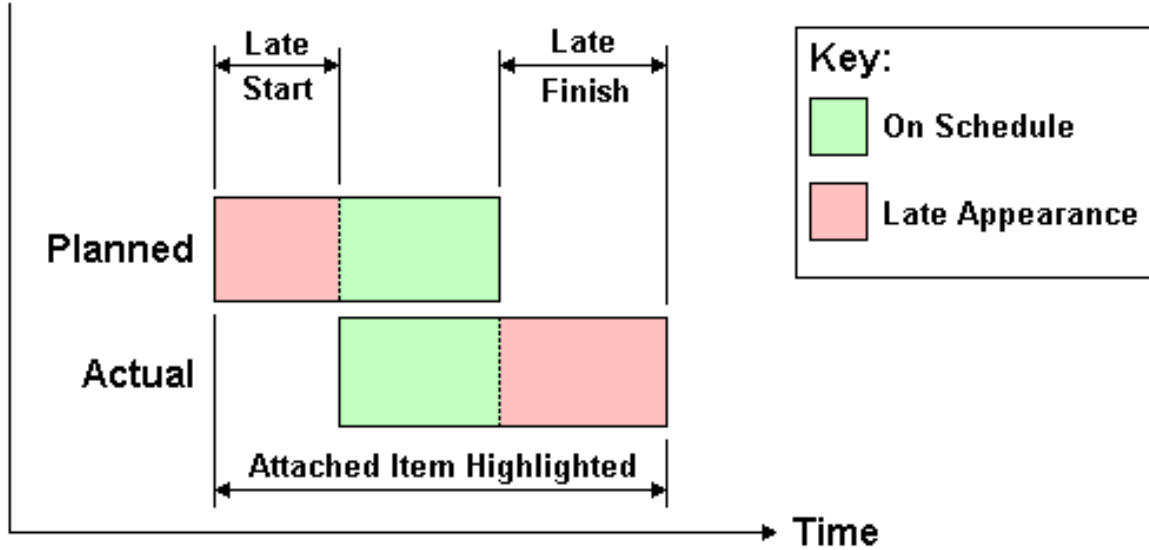

The Overlay Text Dialog

You have the option to define the text overlaid on the main window during simulation, by clicking **Edit** in the Simulation Settings dialog.

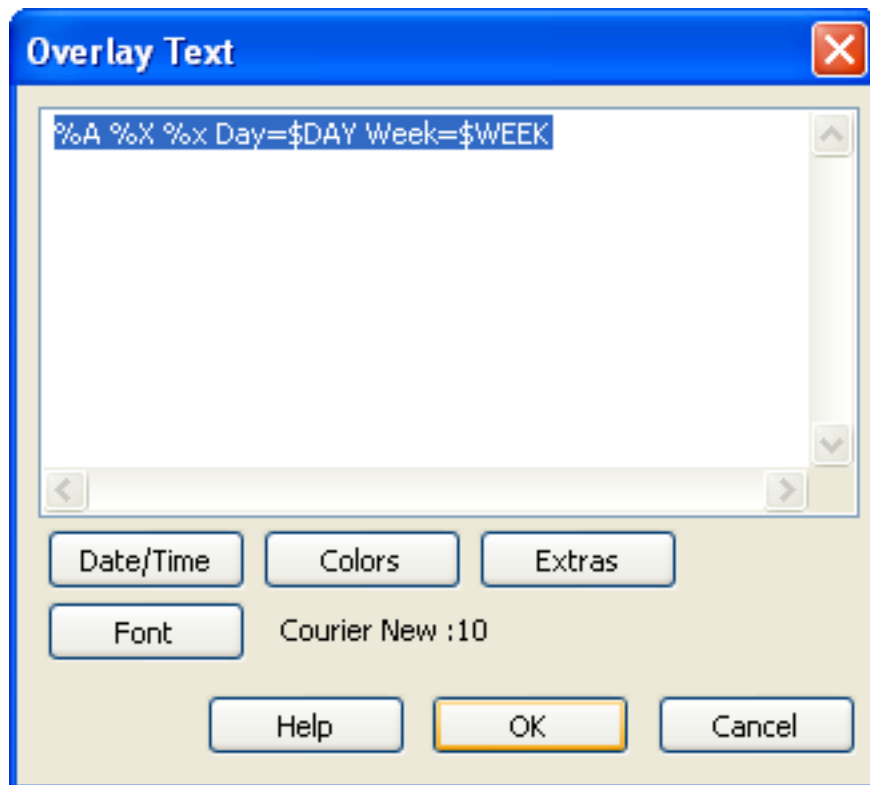

By default the date and time are displayed using the format specified in **Control Panel, Regional**

Settings. You can specify the exact format to use by entering text into the text box. Most text will appear as entered, except that words prefixed with a % or \$ character act as keywords and are replaced with various values. The **Date/Time** and **Extras** buttons can be used to select and insert all possible keywords. The **Colors** button can be used to define the color of the Overlay Text.

The **Font** button brings up the standard Microsoft Windows font picker dialog box. Once the correct font, font style and point size have been selected, press **OK** to return to the **Overlay Text** dialog box. The current font selection is shown next to the Font button, and during the TimeLiner simulation, all text on the overlay will be shown using this font.

Date/Time Keywords

%a	Abbreviated weekday name
%A	Full weekday name
%b	Abbreviated month name
%B	Full month name
%c	Date and time representation appropriate for locale
%d	Day of month as decimal number (01 - 31)
%H	Hour in 24-hour format (00 - 23)
%I	Hour in 12-hour format (01 - 12)
%j	Day of year as decimal number (001 - 366)
%m	Month as decimal number (01 - 12)
%M	Minute as decimal number (00 - 59)
%p	Current locale's A.M./P.M. indicator for 12-hour clock
%S	Second as decimal number (00 - 59)
%U	Week of year as decimal number, with Sunday as first day of week (00 - 53)
%w	Weekday as decimal number (0 - 6; Sunday is 0)
%W	Week of year as decimal number, with Monday as first day of week (00 - 53)
%x	Date representation for current locale
%X	Time representation for current locale
%y	Year without century, as decimal number (00 - 99)
%Y	Year with century, as decimal number
%z	Time-zone abbreviation; no characters if time zone is unknown
%Z	Time-zone name; no characters if time zone is unknown

Color Keywords

\$COLOR_RED	Sets the overlay display text color to be red.
\$COLOR_BLUE	Sets the overlay display text color to be blue.
\$COLOR_GREEN	Sets the overlay display text color to be green.
\$COLOR_WHITE	Sets the overlay display text color to be white.
\$COLOR_BLACK	Sets the overlay display text color to be black.
\$RGBr,g,b\$RGB	Sets the overlay display text to any color specified using explicit rgb values between 0 and 255. For example, \$RGB127,127,127\$RGB sets the color to grey.

Extra Keywords

\$TASKS	Adds the name of each currently active task to the overlay display text. Each task is displayed on a new line.
\$DAY	Days since start of first task in project (starting from 1)
\$WEEK	Weeks since start of first task in project (starting from 1)
Ctrl+Enter	Type Ctrl+Enter to insert a newline into the overlay display text.
%%	Percent sign

Getting Started


To get started:

1. Load a model into NavisWorks in the usual way (see “ [Opening Files](#) ” for more information on opening files) and then click **TimeLiner** on the **Tools** menu.


Note:

Although the ability to create 4D simulations is limited to users with access to the TimeLiner functionality, any user can actually play them back once they have been setup.


2. Create some tasks, each having a name, start and end date and a task type. You can enter tasks by hand on the Tasks tab. Alternatively, the **Tools** shortcut menu on the Tasks tab will create an initial set of tasks based on layer, item, or selection set names. TimeLiner defines some default task types for you (Construct, Demolish and Temporary), or you can define your own using the Configure tab.

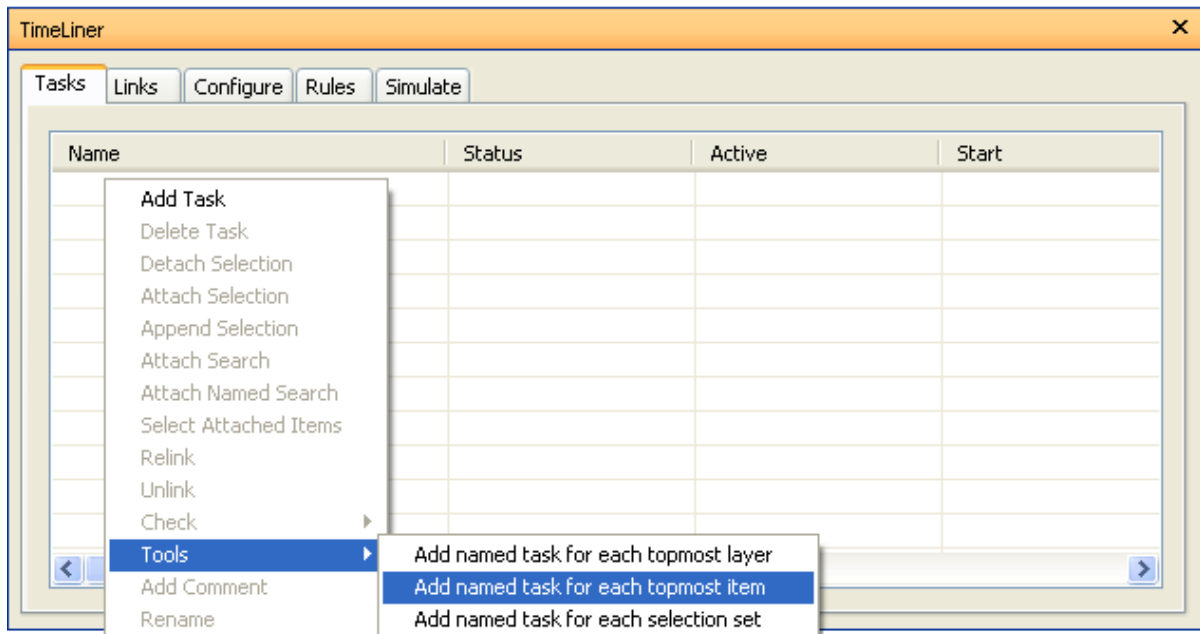


You can use the Links tab to import tasks from an external source, such as Microsoft Project™. You can choose a field from the external schedule to define the types of the imported tasks, or you can set task types by hand. Linked fields cannot be edited directly in TimeLiner. You can, of course, update the schedule externally and **synchronize** the tasks in TimeLiner with those from the external source.

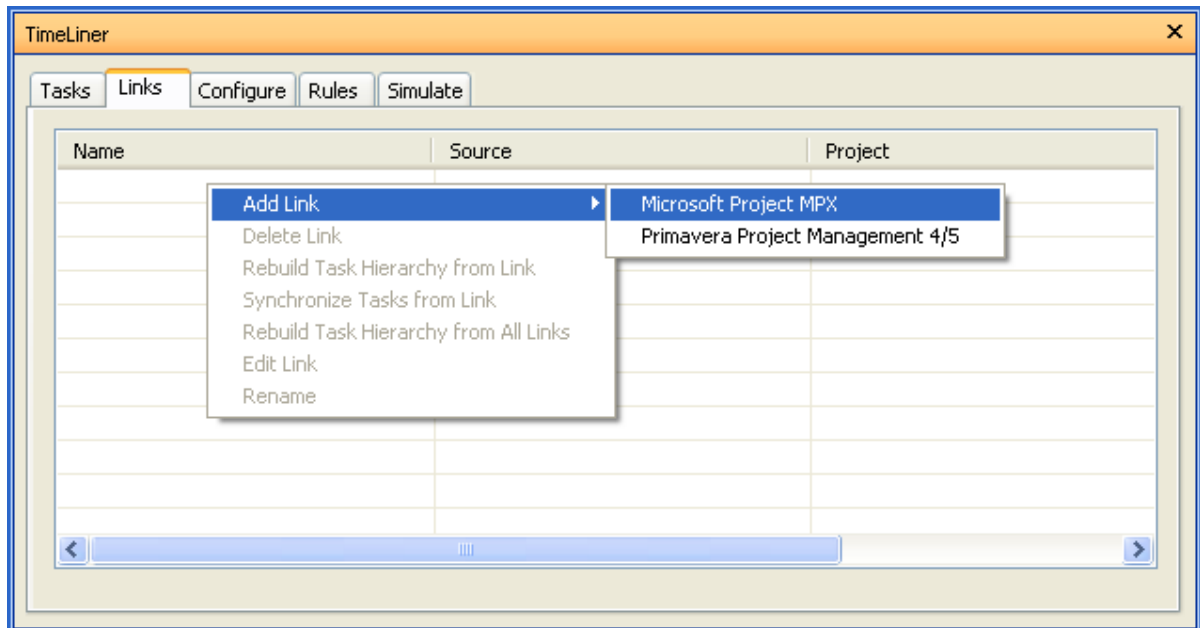


3. Attach objects in the model to tasks. You do this by hand on the Tasks tab, using the shortcut menu to attach selections, searches or selection sets.

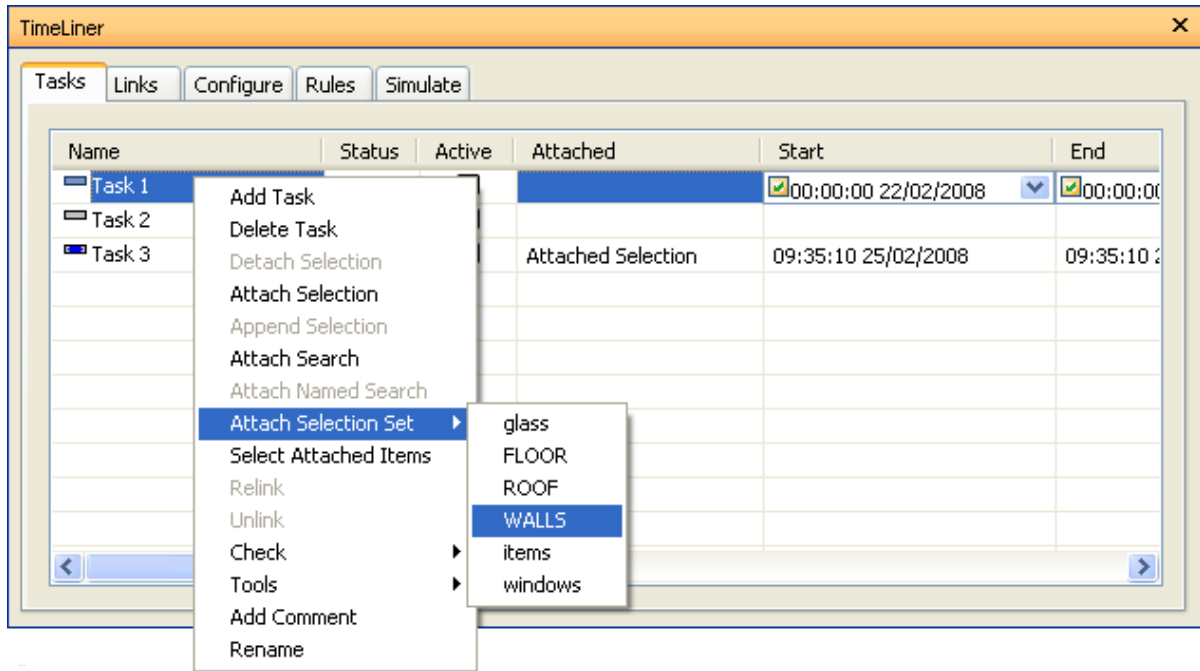


If you used the **Tools** menu on the Tasks tab to create an initial set of tasks based on layer, item or selection set names, then the corresponding layers, items or selection sets will already be attached for you. Alternatively, you can use the Rules tab to automatically attach objects.

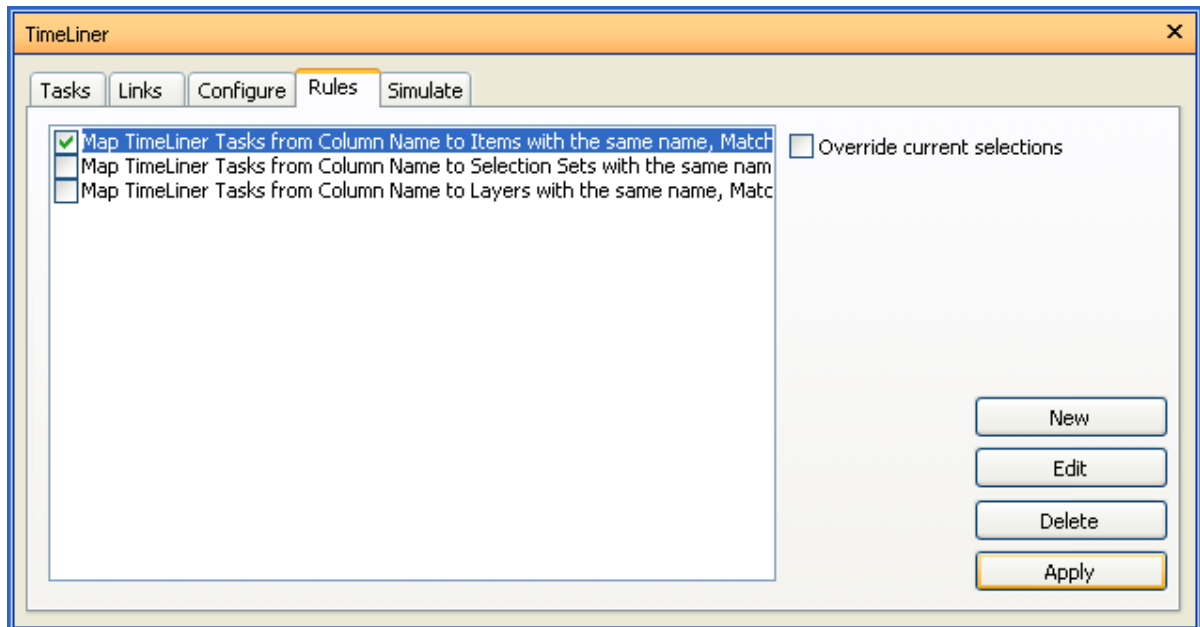


4. Simulate your schedule. Use the Simulate tab to visualise your model at any date in your schedule with the currently active tasks highlighted. Run through the entire schedule using familiar VCR controls. You can add object and viewpoint animations to your construction schedules, and enhance the quality of simulations.

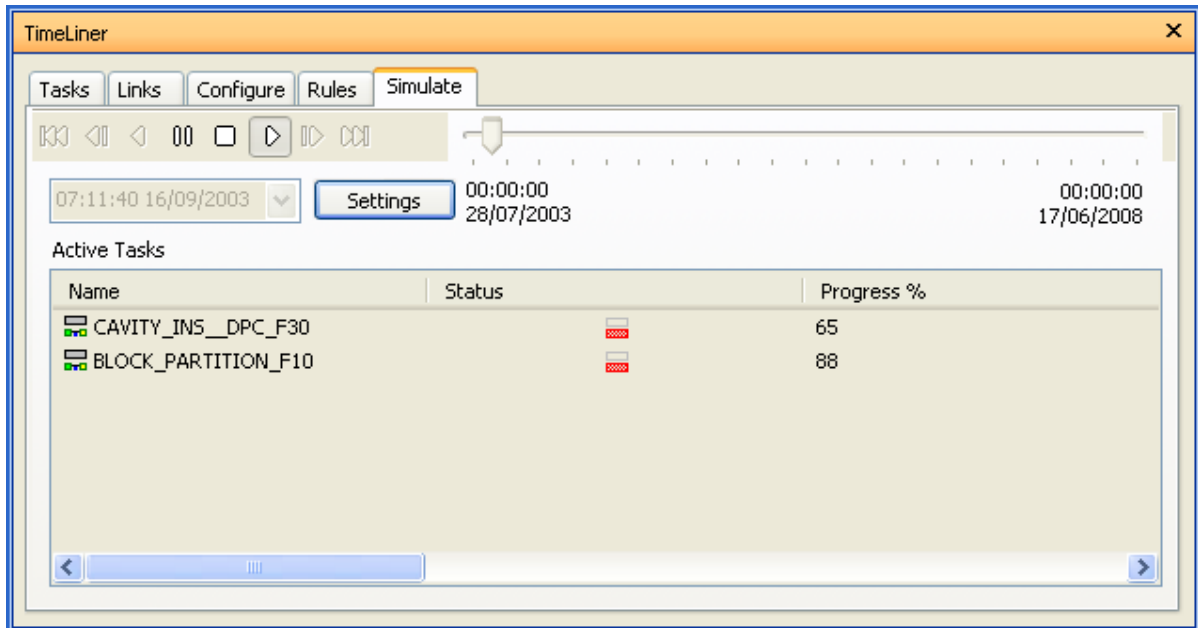

- Configure the behaviour of the simulation. Use the Configure tab to create new task types and edit old ones. The task type defines what happens at the start and end of each task of that type. You can hide attached objects, change their appearance or reset them to the appearance specified in the model.

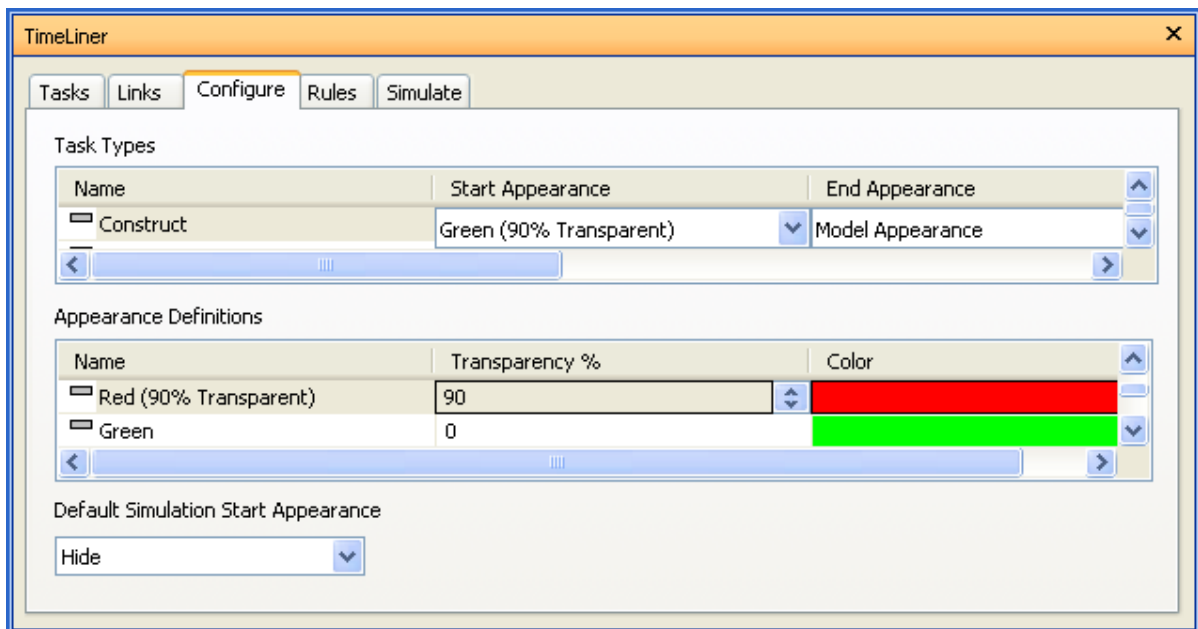

- Create image and AVI files. Export the current simulation view as an image, or the entire simulation as an AVI.
- Keep up to date with changes in your project. Save your project as a NavisWorks .nwf file. Open the .nwf and use **Synchronize Tasks from Link** from the Links Tab. NavisWorks will update the project based on any changes to the model and external schedule. Use **Rebuild Task Hierarchy from all Links** to add any newly created tasks from your external schedules.

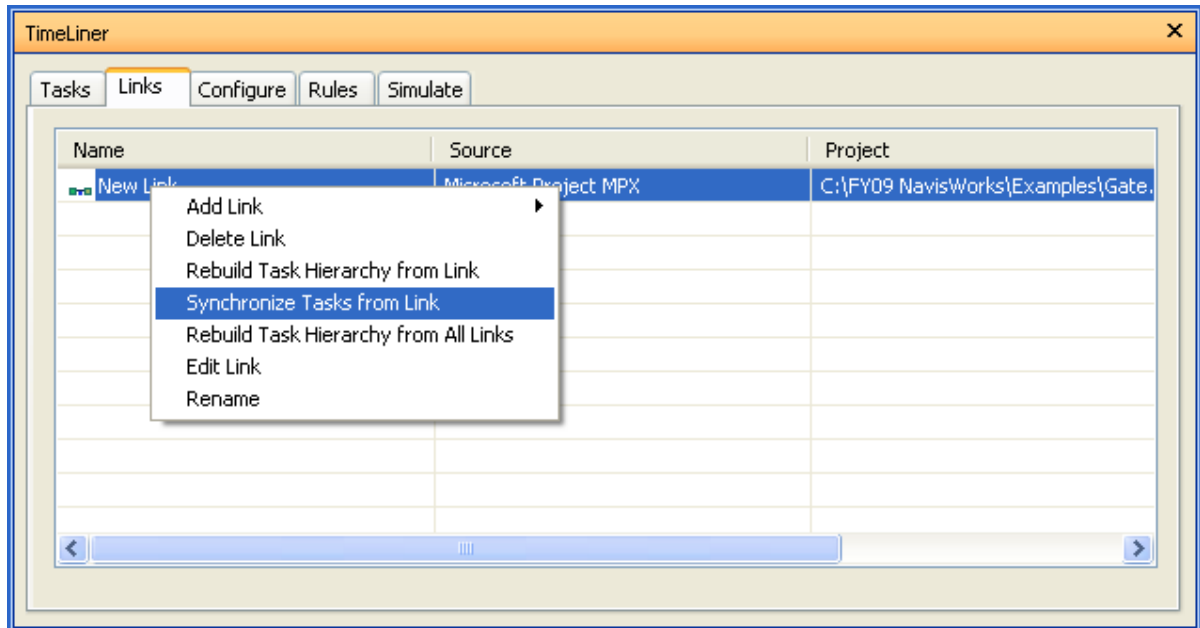

Chapter 42. TimeLiner Tasks

In this section, you will learn how to create and edit tasks, how to attach tasks to geometry items, and how to validate your schedule.

Adjusting the Task View

To move a column:

1. Position the mouse over the header of the column you want to move, and press the left mouse button.
2. Drag the column header to the desired location, and release the left mouse button.

To resize a column:

1. Select the grid line at the right border of the column header of the column you want to resize.
2. Drag to the right to enlarge the column, or to the left to shrink it.

To specify a sort order:

1. Right-click the header of the column you want to use, and click **Sort** to open the shortcut menu.
2. Select **Ascending** or **Descending** to specify a sort order.

Ascending order sorts the column starting with the smallest value and ending with the largest value (for example: a-z, 0-9, Monday-Friday). Descending order sorts the column starting with the largest value and ending with the smallest value.

Note:

If sorting is selected on the **Status** column, activities will be sorted from early through to late start for ascending, and vice-versa for descending.

3. By default, NavisWorks preserves the task hierarchy during the sorting process, that is tasks are sorted first by container, then by container contents. If you want to turn this option off, right-click any column header, and click **Sort > Maintain Hierarchy**. The tasks and containers will be treated as unrelated items.

Note:

You can only sort by one column at a time. Instead of using the shortcut menu to change the sort order, you can click the heading of the desired column. This alternates the sort order between ascending and descending.

User Columns

You can add new user columns to the default column set. This is useful when you create links to external project files that contain more fields than TimeLiner.

To add a user column:

1. In the TimeLiner window, the **Tasks** tab, right-click any column header and click **Add User Column** on the shortcut menu.
2. Click one of the ten available user fields, e.g. **User 1**.

The custom user column has been added to TimeLiner. By default, it's got the same name as the option you clicked on the shortcut menu.

3. Right-click the added column, click **Rename User Column**, and type in a new name, for example 'Cost'.

Note:

To populate this column with data, you must map the user field (in this case, User 1) to the corresponding data field in each of the linked project files. For more information, see “ [Field Selector Dialog](#) ”.

To delete a user column:

1. In the TimeLiner window, the **Tasks** tab, right-click the header of the column you want to delete.
2. Click **Delete User Column** on the shortcut menu.

Creating Tasks


In TimeLiner tasks can be created in one of the following ways:

- Manually, one at a time.
- Automatically, based on object structure in the **Selection Tree**, or the selection and search sets.
- Automatically, built from links to external project files.

Adding Tasks Manually

To add a task:

1. Load your model into NavisWorks (see “[Opening Files](#)” if you need help).
2. Click **TimeLiner** on the **Tools** menu, and click the **Tasks** tab in the TimeLiner window.
3. Right-click anywhere in the task view, and click **Add Task** on the shortcut menu.
4. Enter the name for your task, and press Enter. The task is now added to your schedule.

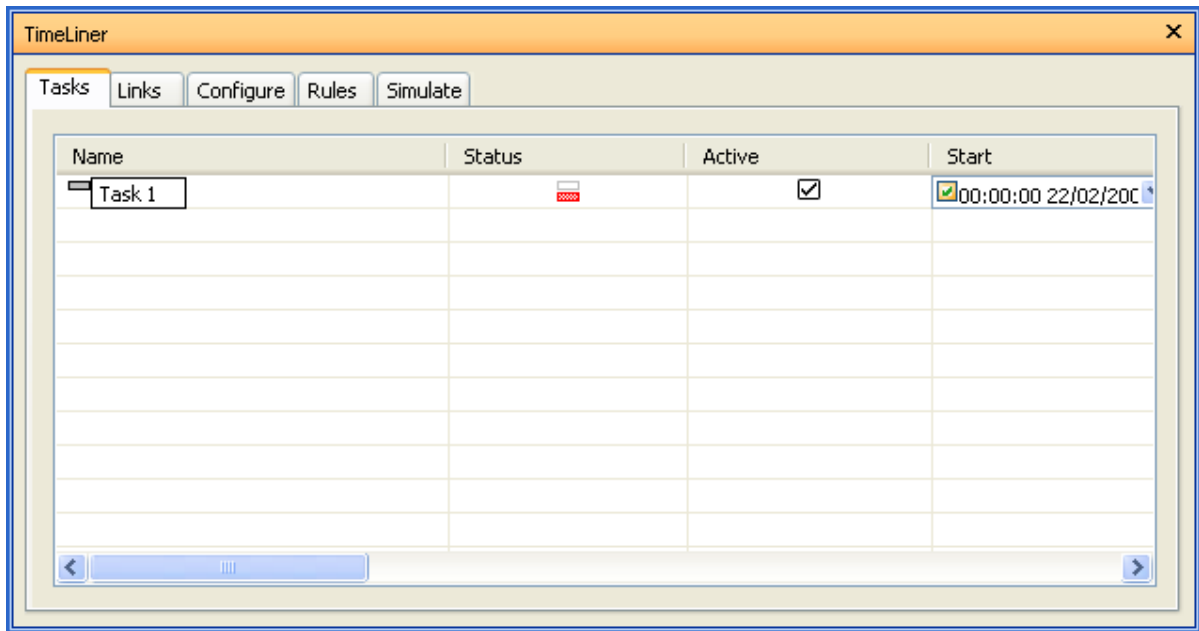

Note:

Added tasks are automatically assigned the **Actual** start and end dates (the current system date is used by default), which be modified. You can also assign the **Planned** start and end dates to your tasks, if necessary.

Adding Tasks Automatically

Unlike manual tasks, which need to be attached to geometry in your model, automatic tasks will be attached to the corresponding geometry as soon as they are created.

To add tasks based on the Selection Tree structure:

1. If the TimeLiner window is not already open, select **Tools > TimeLiner** from the menu bar.

2. In the TimeLiner window, the **Tasks** tab, right-click in the task view, and click **Tools** on the shortcut menu.
3. Select **Add Named Task for Each Topmost Layer** if you want to create tasks with the same names as each topmost layer in the **Selection Tree**.

Select **Add Named Task for Each Topmost Item** if you want to create tasks with the same names as each topmost item in the **Selection Tree**. This can be a layer, a group, block or cell, or geometry, depending on how the model is constructed.

To add tasks based on search or selection sets:

1. If the TimeLiner window is not already open, select **Tools > TimeLiner** from the menu bar.
2. In the TimeLiner window, the **Tasks** tab, right-click in the task view, and click **Tools** on the shortcut menu.
3. Click **Add Named Task for Each Selection Set** to create tasks with the same names as each selection and search set in the **Selection Sets** control bar.

Note:

Actual start and end dates will be automatically created, starting from the current system date and incrementing by one day for each subsequent end and start date. Planned start and end dates will also be automatically created and these will be the same as the Actual dates. Finally, the task type will be set to **Construct**.

Editing Tasks

When you work with tasks created from links, you may not be able to edit certain task parameters. For obvious reasons, you will not be able to change the task name, or date and time unless you unlink the tasks. However, unlinked tasks are no longer synchronized with the external schedule; therefore, to edit linked tasks, modify the external project file, and then either synchronize or rebuild your tasks in TimeLiner.

To change the task name:


1. In the TimeLiner window, the **Tasks** tab, double-click the name of the task you want to modify.
2. Type in the new name for the task, and press Enter.

To change the task date and time:

1. In the TimeLiner window, the **Tasks** tab, click the task you want to modify.
2. Modify the task's date:

Clicking the drop-down button in the **Start** and **End** field opens the calendar, and lets you set the Actual start/end dates.

Clicking the drop-down button in the **Planned Start** and **Planned End** field opens the calendar, and lets you set the Planned start/end dates.

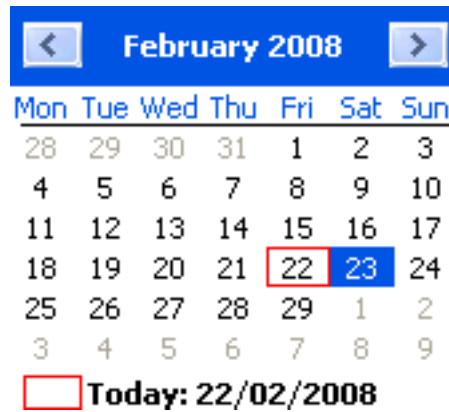

Use the left and right arrow buttons at the top of the calendar to move backwards and forwards a month, respectively, then click on the day you require.

3. To change the start or end time, click the time unit you want to modify (hours, minutes or seconds), and enter the value. You can use the left and right arrow keys to move between the units in the time field.



Note:

When you edit a date/time field, the check box appears on the left. Select it to use the new value. Clearing the check box resets the field to its default value.

To set or modify the task type:

1. In the TimeLiner window, the **Tasks** tab, click the task you want to modify.
2. From the **Task Type** drop-down list, select the type of task you wish this task to be.

There are three pre-defined task types: **Construct**, **Demolish** and **Temporary**. The task type defines how the items attached to the task will be displayed during simulation. For example, a default construction sequence would start with all items hidden, as the task starts the attached items will be displayed in transparent green, then as the task ends the attached items will be displayed as they are in the normal model display (this may be with materials applied if previously set up in NavisWorks Presenter). Task types themselves can be defined and new types created on the Configure tab.

Note:


If you want all tasks to have the same task type, click the **Task Type** field for the first task, then press Shift, and click the **Task Type** field for the last task. The task type you select for the last field will be used for all tasks in the range.

Deleting Tasks

To delete a task:

1. If the TimeLiner window is not already open, select **Tools > TimeLiner** from the menu bar.
2. In the TimeLiner window, the **Task** tab, right-click the task you want to delete, and click **Delete Task** on the shortcut menu.


Note:

Deleting the root-level task deletes all tasks in the hierarchy. If you made a mistake, use the  button on the **Standard** toolbar to restore the deleted item.

Attaching Tasks to Geometry

Each task needs to be attached to items in the model before 4D simulation can work. You can create and attach tasks at the same time, or you can create all tasks first, and then attach them, either separately, or in rule-defined batches.

Tasks can be attached to the current selection in the main NavisWorks window, or any of the selection sets, or any of the search sets. You can view the type of attachments in the **Attached** column. By default, this column is located after **Task Type**, but you can move it, for example, in front of the **Start** column:

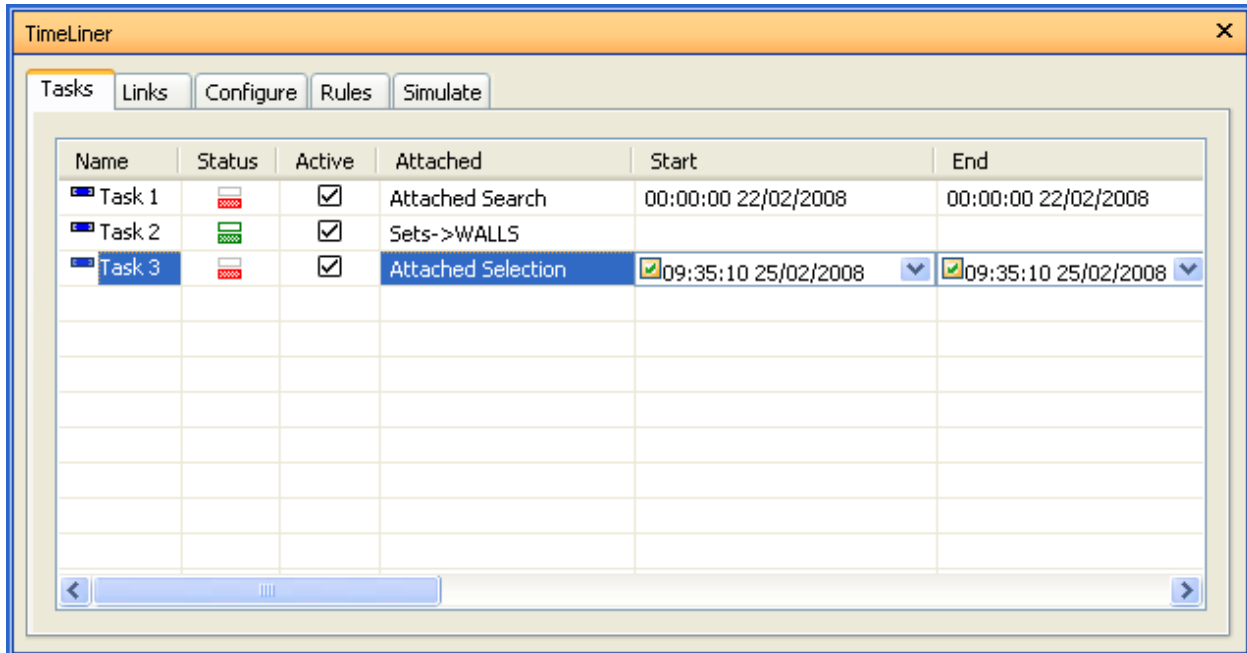

Attaching Tasks Manually

To attach a task to a current selection:

1. If the TimeLiner window is not already open, select **Tools > TimeLiner** from the menu bar.
2. Select the desired geometry objects in the main NavisWorks window, or from the **Selection Tree** control bar.
3. In the TimeLiner window, the **Tasks** tab, right-click the required task, and click **Attach Selection** on the shortcut menu.

The task icon has changed indicating that this task now contains attached items. Look under the **Attached** column to get information on the attachment type.

Note:

If you need to add additional items to an already attached task, click the **Append Selection** option on the shortcut menu, otherwise any previous task attachments will be overridden.

To attach a task to a selection set or a search set:

1. If the TimeLiner window is not already open, select **Tools > TimeLiner** from the menu bar.
2. In the TimeLiner window, the **Tasks** tab, right-click the required task, click **Attach Selection Set**, and click the required selection set or a search set.

The task icon has changed indicating that this task now contains attached items. Look under the **Attached** column to get information on the attachment type.

To attach a task to a current search:

1. If the TimeLiner window is not already open, select **Tools > TimeLiner** from the menu bar.
2. Run the desired search from the **Find Items** control bar.
3. In the TimeLiner window, the **Tasks** tab, right-click the required task, and click **Attach Search**.

The task icon has changed indicating that this task now contains attached items. Look under the **Attached** column to get information on the attachment type.

Using Rules to Attach Tasks

Attaching tasks manually could take a long time. It is a good practice to either use task names, which correspond to **Selection Tree** layers, or create selection and search sets that correspond to the task names. If this is the case, then you can apply predefined and custom-made rules to instantly attach tasks to objects in the model.

Predefined Rules

Items By Task Name. Choose this rule to attach each Item in the model to each task with the same name in the specified column. The default is to use the **Task Name** column.

Selection Sets By Task Name. Choose this rule to attach each Selection and Search Set in the model to each task with the same name in the specified column. The default is to use the **Task Name** column.


Layers By Task Name. Choose this rule to attach each layer in the model to each task with the same name in the specified column. The default is to use the **Task Name** column.

Attach Items to Task by Category/Property. Choose this rule to attach each item in the model with the defined property, to each task with the same name in the specified column. The default is to use the **Task Name** column; however, you will also need to define the '<category>' and '<property>' values.

Adding custom TimeLiner rules:

1. From the **Rules** tab of the TimeLiner window, click the **New** button.

The **Rules Editor** dialog is displayed:

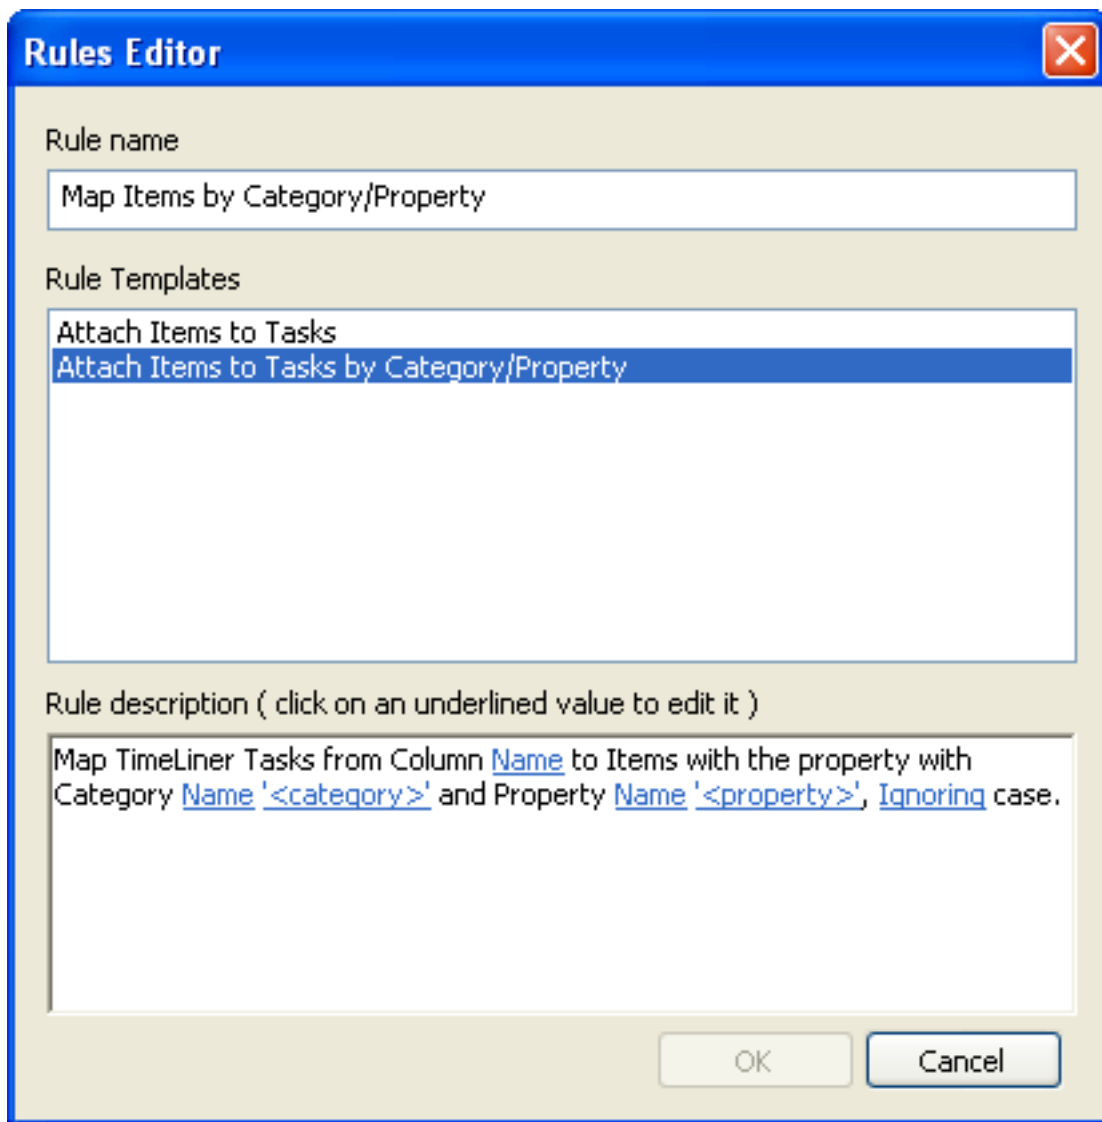

2. Enter a new name for your rule in the **Rule name** box.

Note:

If you choose not to enter a name, upon selecting a **rule template** the name of that template will be used.

3. From the **Rule templates** list, choose a template from which your rule will be based upon.

Note:

The **Attach Items to Tasks** template is the one used for the first three pre-defined TimeLiner rules, i.e. Items, Selection Sets and Layers By Task Name.

The **Attach Items to Tasks by Category/Property** template enables you to specify a property within the model scene. If a task has the same name as the specified property value in the model, then all

items having that property will be attached to that task when you check the rule **Attach Items to Tasks by Category/Property**, and click **Apply Rules**.

4. In the **Rule description** box, click on each of the **underlined values** to define your custom rule. The customizable values available with the built in templates are:
 - **Column Name**. Choose which column in the Tasks tab you wish to compare Item names to. The default is the **Task Name**, though you may also choose one of the ten **User** columns, identified in the Field Selector dialog.
 - **Items**. Choose what you would like the value in the **Column Name** to be compared to in the model scene. The default is **Item** name, though you may also choose either **Selection Sets** or **Layers**.
 - **Matching**. Use **case sensitivity** and therefore only match names that are exactly the same. You may also choose **Ignoring** to ignore case sensitivity.
 - **Category/Property Name**. Use the name of the category or property as it is displayed in the interface (recommended). You can also choose **Internal Name** which is that accessed via the API (for advanced use only).
 - **'<category>'**. Choose from the available list, which category the property you wish to define is in. Only the categories that are contained in the scene are available in the drop down.
 - **'<property>'**. Choose from the available list, which property you wish to define. Again, only the properties in the scene within the chosen category will be available.
5. Click **OK** to add the new TimeLiner rule, or **Cancel** to return to NavisWorks.

Applying TimeLiner rules:

1. Open the TimeLiner window, and click the **Rules** tab.
2. Select the check boxes for all rules you want to apply. The rules will be applied in order.
3. If **Override current selections** check box is selected, then when the rules are applied they will replace any existing attached items. Otherwise, and the rules will attach items to the relevant tasks without attached items.
4. Click the **Apply** button.

Note:

To validate tasks in your schedule, click the **Tasks** tab, right-click in the task view, and use the **Check** shortcut menu.

Validating Project Schedule

You can check the validity of your schedule, by identifying items that have not been included in any task, are duplicated in multiple tasks or, are in overlapping tasks. This is especially useful, when you use rules to attach tasks.

An item may remain unattached for a number of reasons. For example, a task in the project scheduling file is omitted, or the geometry item has not been included in a selection or search set.

To check a schedule:

1. If the TimeLiner window is not already open, select **Tools > TimeLiner** from the menu bar.
2. In the TimeLiner window, the **Tasks** tab, right-click the tasks view, and click **Check**.
3. Select one of the available options:

Find uncontained items. Choose this to select any items in the scene that are not attached to a task, or are not contained within any other item attached to a task.

Note:

A **Contained** item is the child of another item. For example, if you select a Group, Block or Cell which is comprised of various pieces of geometry, then that geometry is **contained** within the Group, Block or Cell. A Group, Block or Cell may therefore be **attached** to a task and although the child geometry is not directly attached itself, it is **contained** within an item that is attached.

Find contained items. Choose this to select any items in the scene that are either attached to a task or contained within any other items attached to a task.

Find attached items. Choose this to select any items in the scene that are directly attached to a task.

Find items attached to multiple tasks. Choose this to select any items in the scene that are directly attached to more than one task.

Find items contained in multiple tasks. Choose this to select any items in the scene that are either attached to, or contained within any other item that is attached to more than one task.

Find items attached to overlapping tasks. Choose this to select any items in the scene that are attached to more than one task, where the task durations overlap.

Find items contained in overlapping tasks. Choose this to select any items in the scene that are either attached to, or contained within any other item that is attached to more than one task, where the task durations overlap.


The check results are highlighted on the **Selection Tree** and in the main NavisWorks window.

Chapter 43. Linking to External Project Files

One of TimeLiner's most powerful features is its integration with project scheduling software. A list of tasks including their start and end dates/times can be imported from a project file directly into TimeLiner.

Supported Scheduling Software

NavisWorks TimeLiner supports a variety of scheduling software. Note that some of these may only function if the relevant scheduling software is installed.

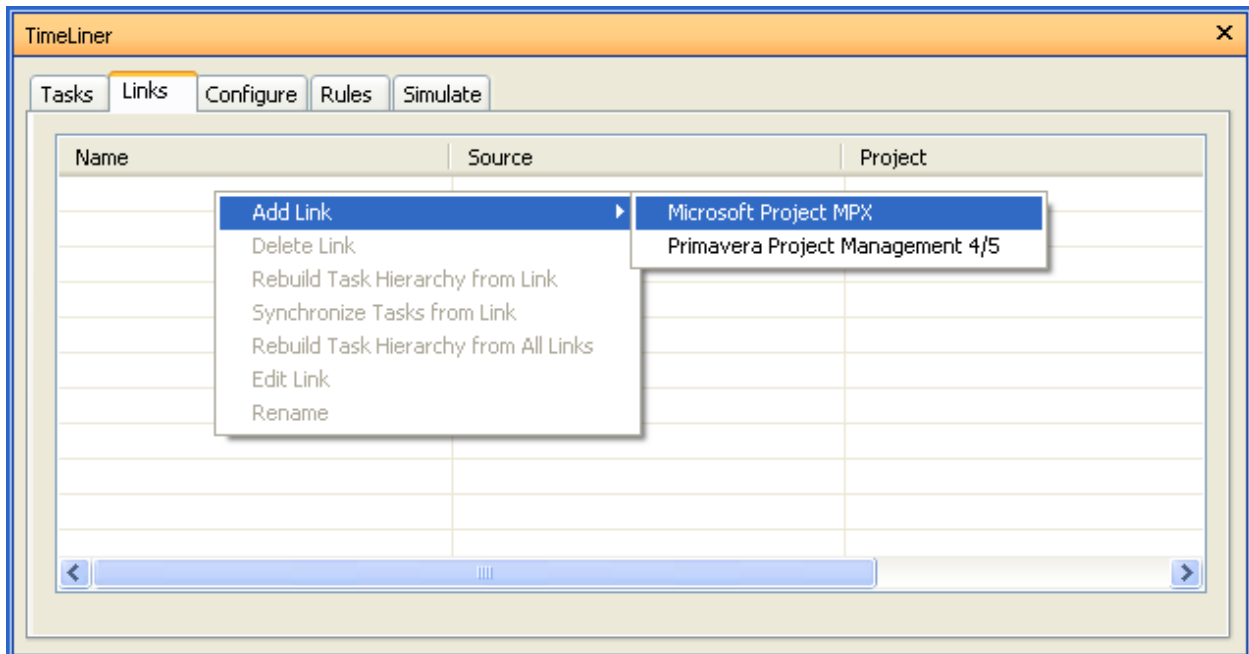

Microsoft Project 2000

Microsoft Project 2002

Microsoft Project MPX

Primavera Project Planner

Primavera Project Management 4 and 5

Asta Power Project

Note:

NavisWorks TimeLiner supports multiple sources of external schedules using a COM interface. Anyone can develop support for a new schedule source - the type library that defines the interface is included with TimeLiner.

Microsoft Project 2000

This Link requires Microsoft Project 2000™ to be installed.

Microsoft Project

This Link requires Microsoft Project 2002™ to be installed.

Microsoft Project MPX

TimeLiner can read Microsoft Project™ .mpx files directly, without needing a copy of Microsoft Project™ (or any other scheduling software) installed. Primavera SureTrak™, Primavera Project Planner™ and Asta Power Project™ can all export .mpx files.

Note:

Primavera SureTrak™ exports its unique id in the text10 field of the .mpx file, rather than the unique id field. When linking to an .mpx file exported from SureTrak be sure to specify the text10 field as the unique id field in the Field Selector dialog.

Primavera Project Planner

This Link requires Primavera Project Planner™ to be installed. The Link **status** will be displayed as "Status not available".

Note:

TimeLiner will ask for a user name and password to link to Primavera Project Planner. If these are unknown, there is a possibility that these can be retrieved from the P3 shortcut.

To locate this information, right-click on the shortcut used to run P3, and select **Properties**. The properties dialog will show the target command line which will look something like

```
"C:\Program Files\P3\P3.exe /U:Bob"
```

Here, the user name is set as "Bob", and for the purposes of the TimeLiner dialog the password will be the same.

Primavera Project Management 4 and 5

This Link requires a number of elements to be installed alongside NavisWorks:

- **Primavera Project Manager 4 and 5 product**
- **ActiveX Data Objects 2.1**
- **Primavera Software Development Kit** (available on the Primavera CDs)

PPM 4 and 5 are database driven, and as such require the Software Development Kit to be installed in order to set up the ODBC data source link. This can be installed and setup from the Project Management CD by taking the following steps:

1. Insert Project Management CD, enter the Product Key and accept the License Agreement.
2. Make sure "Primavera Applications or Components" is selected and click "Next".
3. Select "Other Components" and click "Next".
4. Select "Software Development Kit" and click "Next".
5. Continue through clicking "Next" until the install starts.
6. Once installation is complete, click "OK" to start the Database Configuration Wizard.
7. Adjust settings in the Software Development Kit Setup dialog where appropriate, and click "OK".
8. Click "Yes" for a log file, followed by "Finish" to complete.

On connecting to PPM 4 and 5 within TimeLiner, a logon dialog allows the source link to be selected (a warning occurs if none are present). The user name and password are not stored in the NavisWorks file, and will be prompted for each time.

Once connected, a dialog box allows the user to select which project to open. A check box determines if all sub-projects are opened.

By default, TimeLiner brings through Start, End, Planned Start, and Planned End as "Start", "Finish", "BL Start" and "BL Finish" respectively.

Other Primavera dates can be selected through the generic TimeLiner 'Field Selector' Dialog, including 'Project Activity Codes', 'Global Activity Codes', and 'User Defined Fields'.

The TimeLiner hierarchy supports the WBS structure for Project / Activity hierarchy.

Note:

Due to the nature of the Primavera Project Manager 4 and 5 products using the SDK for data access, linking with TimeLiner can take a longer period of time than other formats.

Asta Power Project

This Link requires Asta Power Project™ to be installed.

Adding and Managing Links

In this section you will learn how to create, delete and edit links.

Adding Links

To add a link:

1. If the TimeLiner window is not already open, select **Tools > TimeLiner** from the menu bar.

2. In the TimeLiner window click the **Links** tab.
3. Right-click in the link view, click **Add Link**, and choose the required option from a list of the project sources that may be connected to on the current PC.

Note:

For more information on which sources are typically available, see “ [Supported Scheduling Software](#) ”.

4. Use the standard **Open** dialog box to browse to and open the desired project file.

TimeLiner creates the link to the selected file in accordance with the predefined parameters configured for the corresponding data source using a COM interface.

Depending on the data source, the Field Selector dialog box may be displayed on the screen. You can use it to override some of the predefined data import options.
5. By default, your link is called **New Link (x)**, where x is the latest available number. To make your link more descriptive, right-click it, click **Rename** on the shortcut menu, and enter a new name.

You are now ready to create the tasks from you link.

Editing Links

To edit a link:

1. If the TimeLiner window is not already open, select **Tools > TimeLiner** from the menu bar.
2. In the TimeLiner window, the **Links** tab, right-click the link you want to modify, and click **Edit Link** on the shortcut menu.

The Field Selector dialog box opens.

Typically, this dialog box is used to customize the column mapping between the TimeLiner link and the external project file. For example, if the external file includes Baseline Start and End dates you may want to map them to the **Start Date** and **End Date** columns in TimeLiner. Also, if you have added any custom columns to TimeLiner, for each link, you must map the data in the external file to the required user columns in TimeLiner, otherwise the user columns will be empty.

3. Click **OK** to save changes, or **Cancel** to return to NavisWorks.

Note:

For each link, you must either rebuild the task hierarchy or synchronize tasks to apply the changes.


Deleting Links

To delete a link:

1. If the TimeLiner window is not already open, select **Tools > TimeLiner** from the menu bar.
2. In the TimeLiner window, the **Links** tab, right-click the link you want to delete, and click **Delete Link** on the shortcut menu.

This only deletes the link, not the tasks built from this link. These tasks become automatically **Unlinked**.

Note:

If you made a mistake, use the  button on the **Standard** toolbar to restore the deleted item.

Building Tasks from Links

To build tasks from a link:

1. If the TimeLiner window is not already open, select **Tools > TimeLiner** from the menu bar.
2. In the TimeLiner window, the **Links** tab, right-click the link you want to use, and click **Rebuild Task Hierarchy from Link** on the shortcut menu.

This will import all of the tasks from the project file into TimeLiner.

3. Click the **Tasks** tab to view the created tasks. The task table is populated in accordance with predefined settings for the data source. You can make any necessary overrides in the Field Selector dialog box.

Note:

Although the tasks have now been imported into TimeLiner, you still need to attach them to geometry objects before you can run a 4D simulation. The fastest way to attach linked tasks is by applying rules (see "[Using Rules to Attach Tasks](#)").

Synchronizing Tasks with Project Changes

One of the benefits of linking the model to an external project schedule is that any changes to the schedule can be easily updated in TimeLiner.

To synchronize tasks:

1. Make changes to the project in the scheduling software, and save it.
2. Load your model into NavisWorks (see “ [Opening Files](#) ” if you need help).
3. Click **TimeLiner** on the **Tools** menu, and click the **Links** tab in the TimeLiner window.
4. Right-click the link to the modified project file, and click one of the following options:

Rebuild Task Hierarchy from Link. Choose this to re-import all tasks and associated data from the selected project file, and rebuild the task hierarchy on the **Tasks** tab.

Synchronize Tasks from Link. Choose this to update all existing tasks in the **Tasks** tab, with the latest associated data from the selected project file (e.g. Start and End dates).

Alternatively, right-click anywhere in the link view, and click **Rebuild Task Hierarchy from All Links**.


This enables you to re-import all tasks and associated data from all linked project files, and rebuild the task hierarchy on the **Tasks** tab.

Chapter 44. 4D Simulation

In this section, you will learn how to play 4D simulations, and how to customize the simulation playback and appearance.

Playing Simulations

To play a simulation:

1. If the TimeLiner window is not already open, select **Tools > TimeLiner** from the menu bar.
2. On the **Tasks** tab select the **Active** check box for all tasks that you want to include in the simulation.
3. Be sure the active tasks are assigned the correct task types.
4. Be sure the active tasks are attached to geometry objects, and click the **Simulate** tab.
5. Click the **Play**  button.

The TimeLiner window displays the tasks as they are carried out, and the main NavisWorks window shows the sections of the model added or removed over time, in accordance with the task types.

Note:

When the **Simulate** tab is in use, by default the current simulation date is overlaid on the main NavisWorks window. You can customize the displayed information by using the Overlay Text dialog box.

Configuring Simulations

You can adjust both the simulation playback parameters, and the simulation appearance.

Simulation Playback

By default, the playback duration of the simulation is set to 20 seconds, regardless of the duration of the tasks. You can adjust the simulation duration, and a number of other playback options to increase the effectiveness of your simulation.

To adjust a simulation playback:

1. If the TimeLiner window is not already open, select **Tools > TimeLiner** from the menu bar.
2. Click the **Simulation** tab, and click the **Settings** button.
3. When the Simulation Settings dialog box opens, modify the playback settings, and click **OK**.

Simulation Appearance

Each task has a task type associated with it, which specifies how the items attached to the task are treated (and displayed) at the start and end of the task during simulation. The available options are:

None - the items attached to the task will not change.

Hide - the items attached to the task will be hidden.

Model Appearance - the items attached to the task will be displayed as they are defined in the model. This may be the original CAD colors or, if you have applied color and transparency overrides in NavisWorks or materials in Presenter, then these will be displayed.

Appearance Definitions - enables you to choose from the list of **Appearance Definitions**, including ten predefined appearances and any custom appearances you have added.

Managing Task Type Definitions

To add a task type definition:

1. If the TimeLiner window is not already open, select **Tools > TimeLiner** from the menu bar.
2. Click the **Configure** tab, right-click in the **Task Types** area, and click **Add** on the shortcut menu.
3. A new task type is added to the bottom of the list; it will be highlighted, enabling you to enter a new name for it.
4. Use the drop-down buttons to the right of each of the **Appearance** field to assign the desired object behavior.

You can customize the following properties:

Start Appearance - how the items will look at the start of the task, e.g. Transparent Green.

End Appearance - how the items will look when the task is completed, e.g. Hidden.

Early Appearance - how the items will look if the task is started before the planned time, e.g. Transparent Yellow.

Late Appearance - how the items will look if the task is started after the planned time, e.g. Transparent Red.

Simulation Start Appearance - how the items should be displayed at the start of a simulation.

As a minimum, you need to define the **Simulation Start Appearance**; this assigns a unique start appearance to your task type. If you do not configure this field, the start appearance set in **Default Simulation Start Appearance** will be used instead.

To delete a task type definition:

1. If the TimeLiner window is not already open, select **Tools > TimeLiner** from the menu bar.
2. Click the **Configure** tab, right-click the task type definition, and click **Delete** on the shortcut menu.

Managing Appearance Definitions

To add an appearance definition:

1. If the TimeLiner window is not already open, select **Tools > TimeLiner** from the menu bar.
2. Click the **Configure** tab, right-click in the **Appearance Definition** area, and click **Add** on the shortcut menu.
3. A new appearance definition is added to the bottom of the list; it will be highlighted, enabling you to enter a new name for it.
4. In the **Transparency %** field, use the **Up** and **Down** controls to set the transparency level, between 0% and 100% (where 0% is opaque and 100% is fully transparent).
5. In the **Color** field, click on the color to open the color selector. From here, either select one of the basic colors available, or click **Define Custom Colors** to define your own color choice.

To delete an appearance definition:

1. If the TimeLiner window is not already open, select **Tools > TimeLiner** from the menu bar.
2. Click the **Configure** tab, right-click the appearance definition, and click **Delete** on the shortcut menu.

Changing the Default Simulation Start Appearance

In the **Default Simulation Start Appearance** drop-down list, select the appearance option, which you want to use to start your simulations.

Chapter 45. Export

You can export a static image at any time during a simulation by using one of the standard NavisWorks image exports, whilst the **Simulation** tab is active. See “[Exporting an Image](#)” for more information.


You also have the option to Export an AVI of an entire TimeLiner simulation. See “[Exporting an Animation](#)” for more information.

Chapter 46. TimeLiner Options

Setting TimeLiner options:

1. On the **Tools** menu, click **Global Options**.
2. Expand the **Tools** node in the **Options Editor** dialog box, and click the **TimeLiner** option.

The TimeLiner page is displayed:

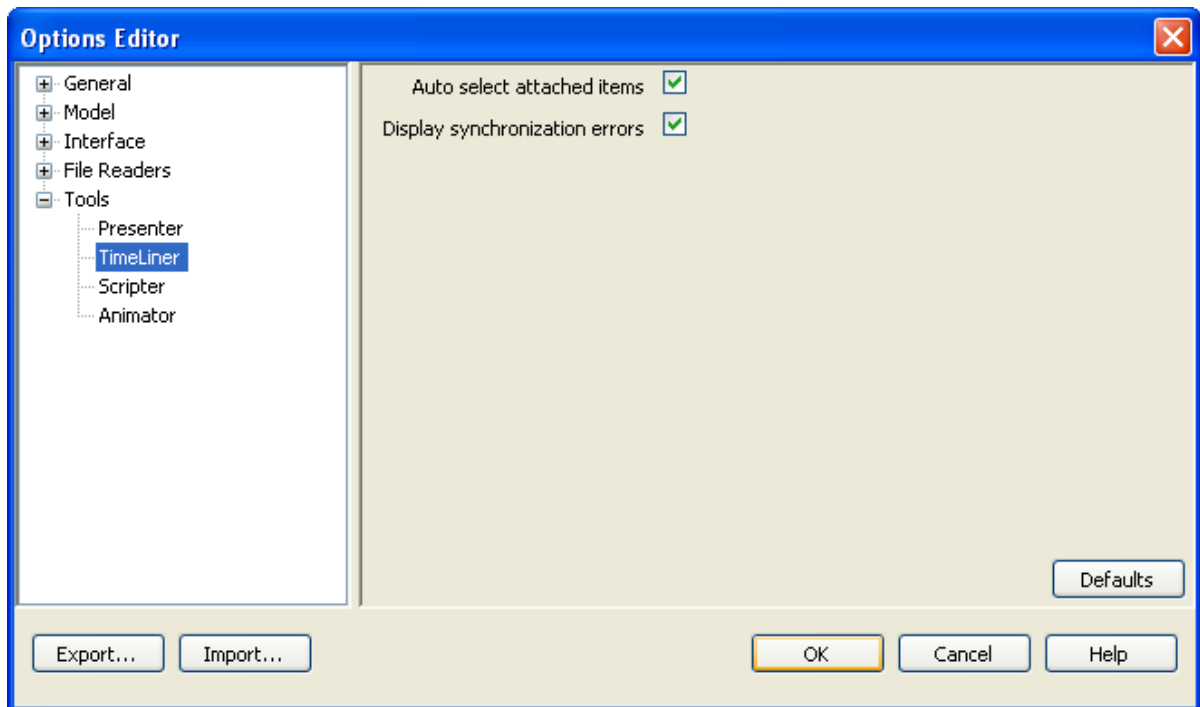

3. Select the **Auto Select Attached Items** check box if you want TimeLiner to select any attached items in the main NavisWorks window as you select each task in the TimeLiner window.
4. Select the **Display Synchronization Errors** check box if you want TimeLiner to inform you of errors when synchronizing tasks from external links.
5. Click **OK** to set the options or **Cancel** to exit the dialog without setting them.

Chapter 47. Adding Animation

In this section, you will learn how to add animation to the TimeLiner schedules.

Overview

You can link object and viewpoint animations to your construction schedules, and enhance the quality of simulations. For instance, you can start your simulation with a camera showing an overview of the whole project, and then, as the tasks are simulated, zoom into specific areas for a detailed view of the model. You can also play animation scenes as the tasks are simulated. For example, you can animate the arrival and depletion of the material stock piles together with the vehicle movements, and monitor the vehicular access to site.

You can add animation to an entire schedule, to individual tasks within a schedule, or combine these methods together to achieve the desired effect.

To record animation, see [Chapter 19, Animation](#) and [Chapter 38, Creating Animations](#) .

It is also possible to add scripts to the tasks in your schedule. By doing this, you gain control over the animation properties. For example, you may be able to play different animation segments as the tasks are simulated, or play animations backwards etc.

To record scripts, see [Chapter 39, Adding Interactivity](#) .

Adding Animation to an Entire Schedule


The animation that you can add to an entire schedule is restricted to viewpoints, viewpoint animations, and cameras.

Added viewpoint and camera animation will be automatically scaled to match the playback duration.

To add a current viewpoint or a viewpoint animation:

1. If the TimeLiner window is not already open, select **Tools > TimeLiner** from the menu bar.
2. Select the required viewpoint or viewpoint animation on the **Viewpoints** control bar.
3. Click the **Simulation** tab, and click the **Settings** button.

The **Simulation Settings** dialog box is displayed.

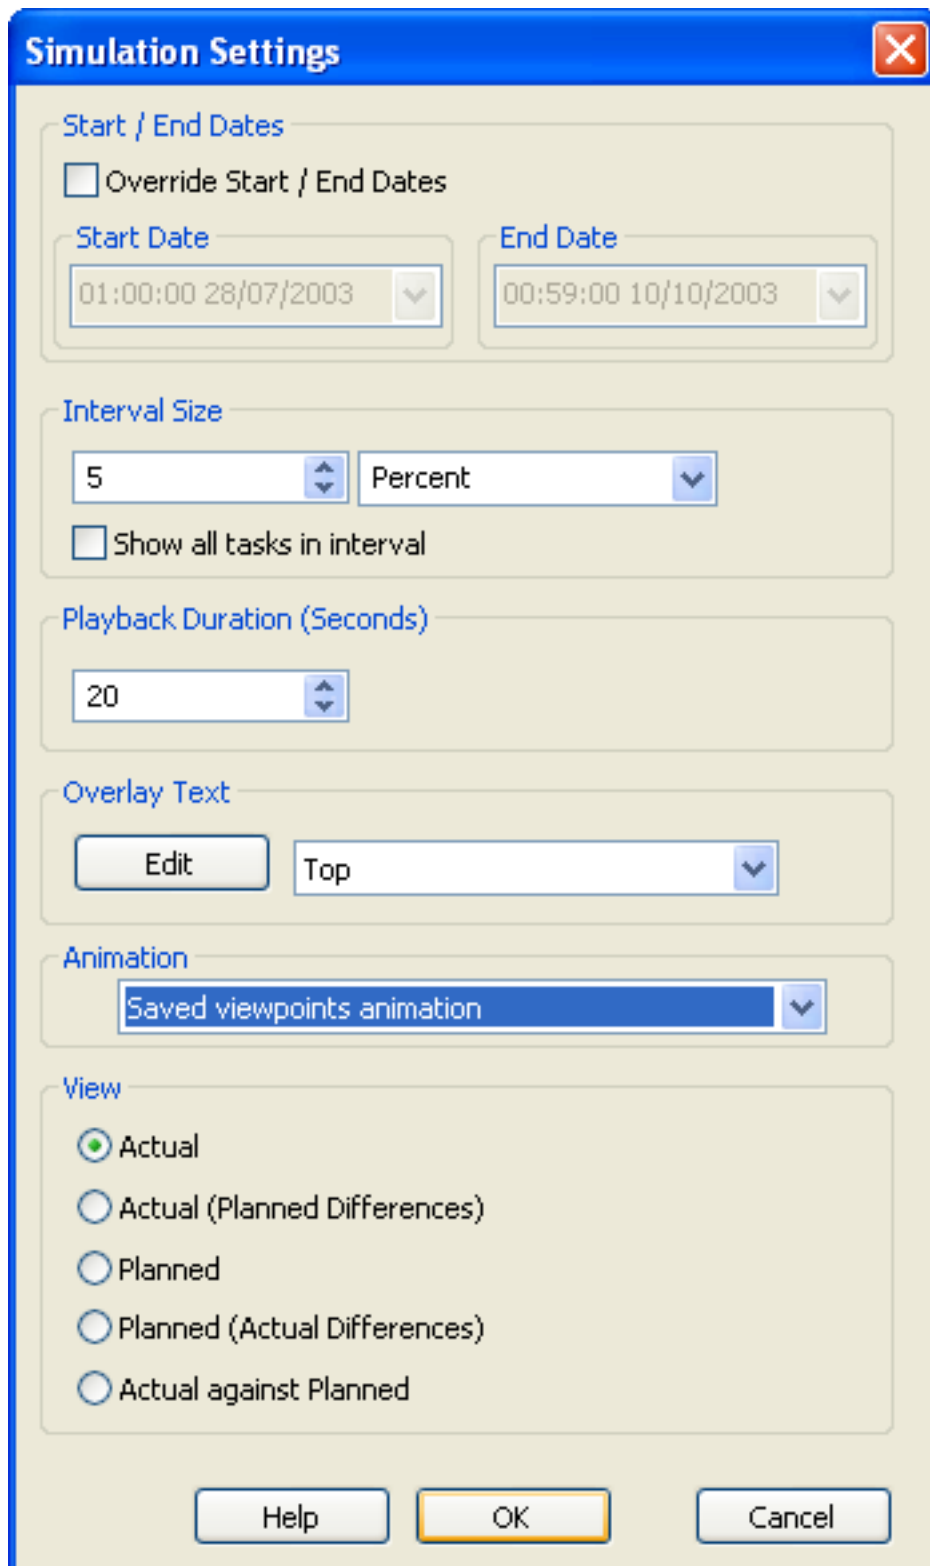


4. Click the drop-down arrow in the **Animation** field, and select **Saved Viewpoints Animation**.

5. Click **OK**.

To add a camera animation:

1. If the TimeLiner window is not already open, select **Tools > TimeLiner** from the menu bar.
2. Click the **Simulation** tab, and click the **Settings** button.

The **Simulation Settings** dialog box is displayed.

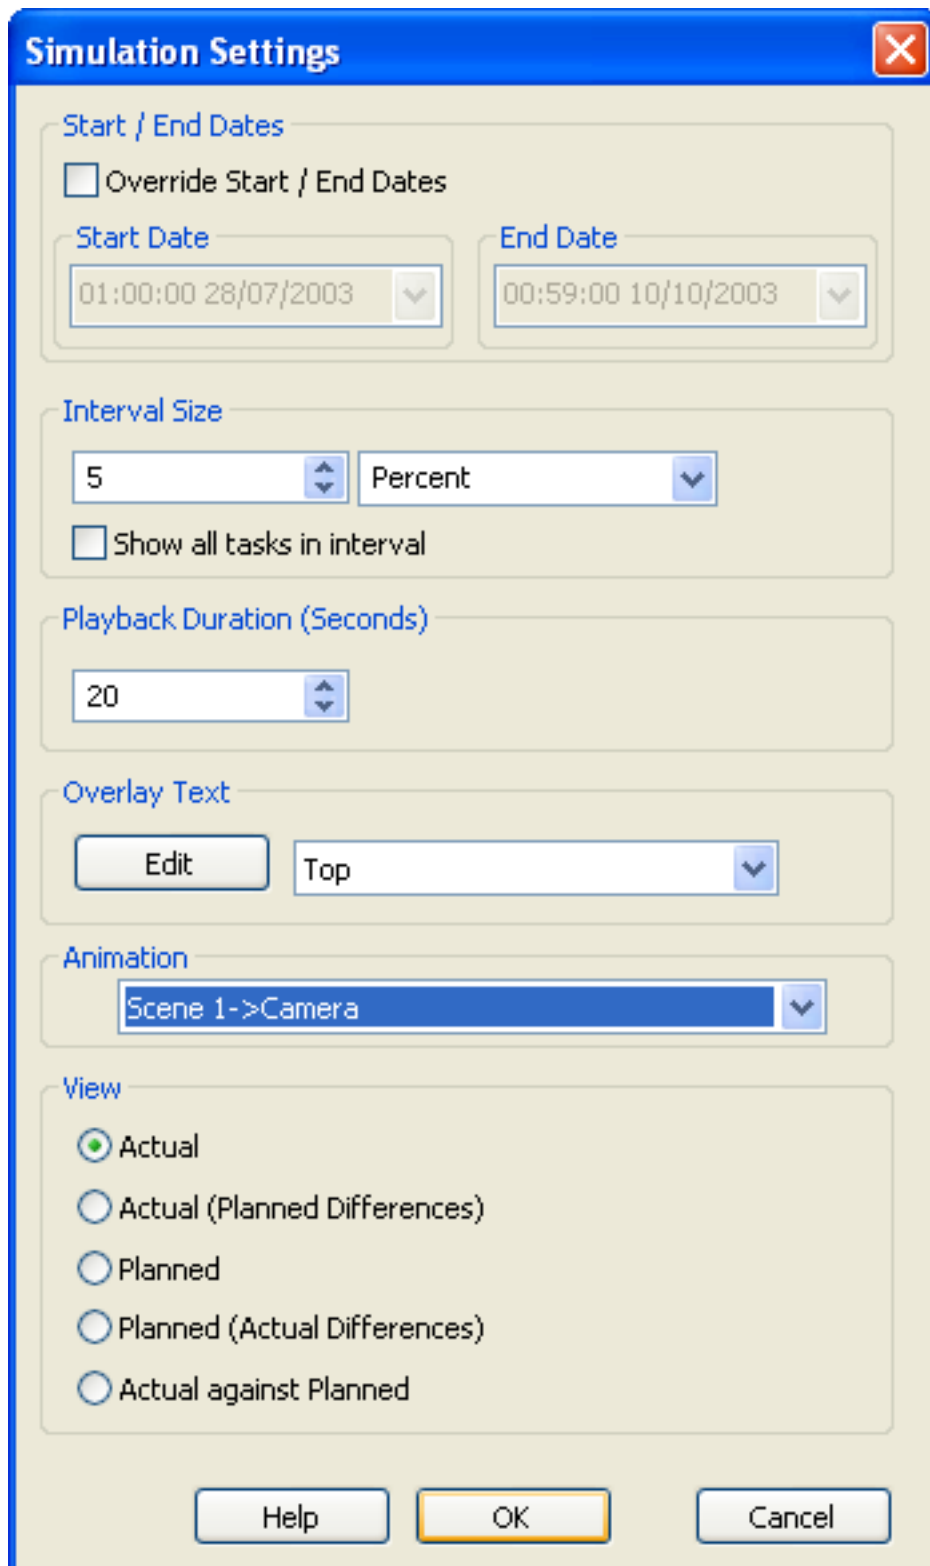

3. Click the drop-down arrow in the **Animation** field, and select the desired camera animation, for example **Scene1 -> Camera**.

4. Click **OK**.

You are now ready to simulate your schedule.

Adding Animation to Tasks

The animation that you can add to individual tasks in TimeLiner is restricted to scenes and animation sets from the scenes.

By default, any added animation is scaled to fit the task duration. You also got an option of playing an animation at its normal (recorded) speed, by matching its start or end point with the task.


Note:

Animation key-frames may contain transparency and color overrides. During the TimeLiner simulation, the transparency and color override data from Animator are ignored.

To add an animation scene or an animation set:

1. If the TimeLiner window is not already open, select **Tools > TimeLiner** from the menu bar.
2. On the **Tasks** tab, click the task you want to add an animation to, and use the horizontal scroll bar to locate the **Animation** column.

If you prefer, you can move the animation columns in front of the **Start Date** column as shown below.

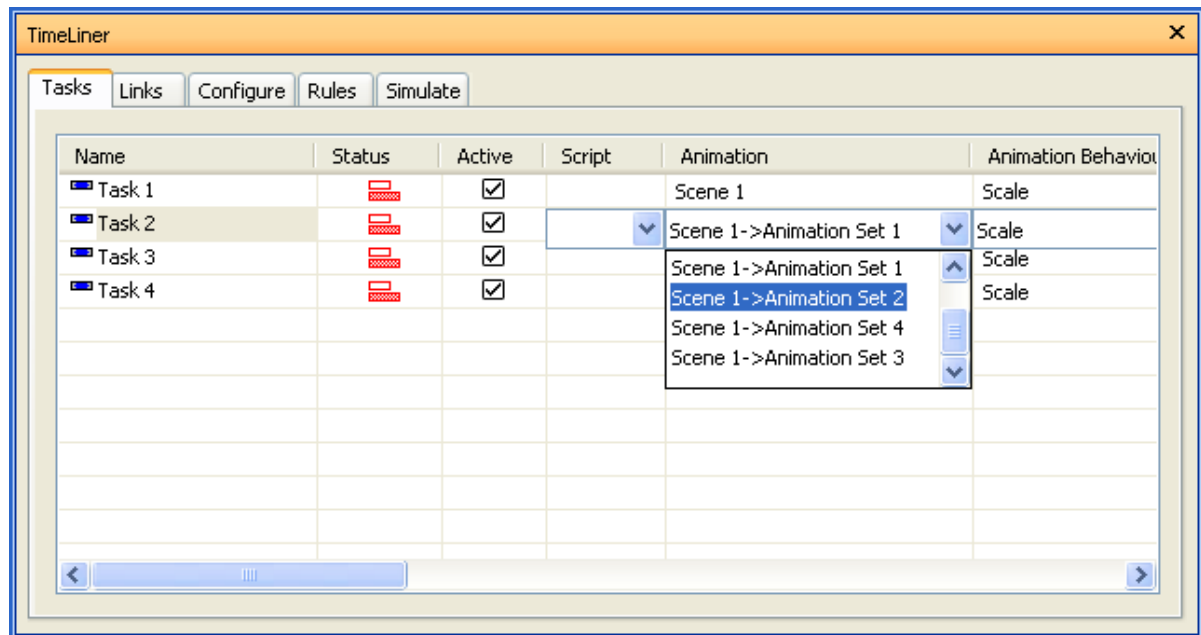

3. Click the drop-down arrow in the **Animation** field, and select a scene or an animation set from a scene. When you select a scene, all animation sets recorded for this scene will be used.

4. Click the drop-down arrow in the **Animation Behaviour** field, and select how the animation will play during this task:
 - **Scale** - the duration of the animation is matched to the duration of the task. This is the default setting.
 - **Match Start** - the animation starts when the task starts. If the animation runs past the end of the TimeLiner simulation, the end of the animation will be clipped.
 - **Match End** - the animation starts early enough so that it ends just when the task end. If the animation starts before the beginning of the TimeLiner simulation, the start of the animation will be clipped.

You are now ready to simulate your schedule.

Adding Scripts to Tasks


When you add scripts to TimeLiner tasks, the script events are ignored, and the script actions are run regardless of the events.

Using scripts enables you to control how the animation will play (forwards, backwards, a segment at a time etc.). You can also use scripts to change the camera viewpoints for individual tasks, or play several animations at the same time.

To add a script:

1. If the TimeLiner window is not already open, select **Tools > TimeLiner** from the menu bar.
2. On the **Tasks** tab, click the task you want to add a script to, and use the horizontal scroll bar to locate the **Script** column.
3. Click the drop-down arrow in the **Script** field, and select the desired script to run with this task.

Note:

Before you simulate your schedule, be sure to enable animation scripts in your file, by clicking the **Toggle Scripts**  button on the **Animation** toolbar.

Part 7. Using Clash Detective

Clash Detective enables you to search through your total project model, identifying cross-discipline interferences (clashes) earlier in the design process. In this section, you will learn how to:

- Set up and manage your clash tests
 - Define and customize 'ignore' rules to be applied to the clash test
 - Select items for clash testing
 - View and manage your clash results
 - Create clash reports
-

Chapter 48. Overview of Clash Detective

The Clash Detective tool enables effective identification, inspection, and reporting of interference clash in a 3D project model.

Using Clash Detective can help you to reduce the risk of human error during model inspections.

Clash Detective can be used as a one-off 'sanity check' for a completed design work, or it can be used as an ongoing audit check of the project.

You can use Clash Detective to conduct clash tests between traditional 3D geometry (triangles), and laser-scanned point clouds.

You can combine the Clash Detective functionality with other NavisWorks tools:

- Linking Clash Detective and Object Animation together gives you the ability to automatically check interferences between moving objects. For example, linking a Clash Detective test to an existing animation scene would automatically highlight clashes for both static and moving objects during the animation, e.g. a crane rotating through the top of a building, a delivery lorry colliding with a workgroup, etc.
- Linking Clash Detective and TimeLiner together enables the time-based clash checks on the project. See [Chapter 51, *Selecting Items for Testing*](#) for further details on **time-based clashing**.
- Linking Clash Detective, TimeLiner, and Object Animation, together enables clash testing of fully animated TimeLiner schedules.

Working with the Clash Detective Window


The Clash Detective window enables you to set up the rules and options for your clash tests, view the results, sort them and produce clash reports.

By default, the Clash Detective window floats in the main NavisWorks window. Like all other floating windows, Clash Detective window is dockable and resizable, and will automatically lock to specific locations near to where it is moved. You can prevent it from docking while you drag it, by holding down Ctrl.

Note:

You can quickly dock and undock any floating window by double-clicking the window's control bar.

To open the Clash Detective window, select **Clash Detective** from the **Tools** menu.

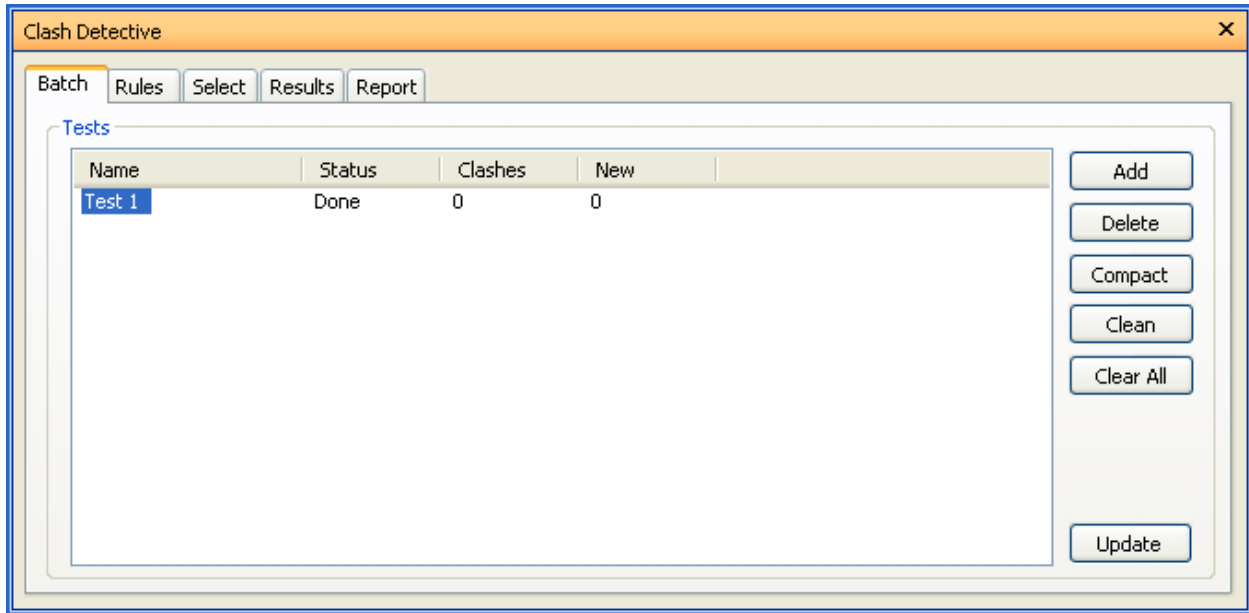


The Clash Detective window contains the following:

- Batch tab - enables you to manage your clash tests and results.
- Rules tab - enables you to define and customize ignore rules to be applied to clash tests.
- Select tab - enables you to refine your clash test by only testing sets of items at a time, rather than the whole model against itself.
- Results tab - enables you to interactively view the found clashes.
- Report tab - enables you to write reports containing details of all the clash results found in the selected test.

The Batch Tab

The **Batch** tab shows all of the clash tests currently set up, listed in a table format. You can use the scroll bars at the right and at the bottom of the tab to move through the task records.

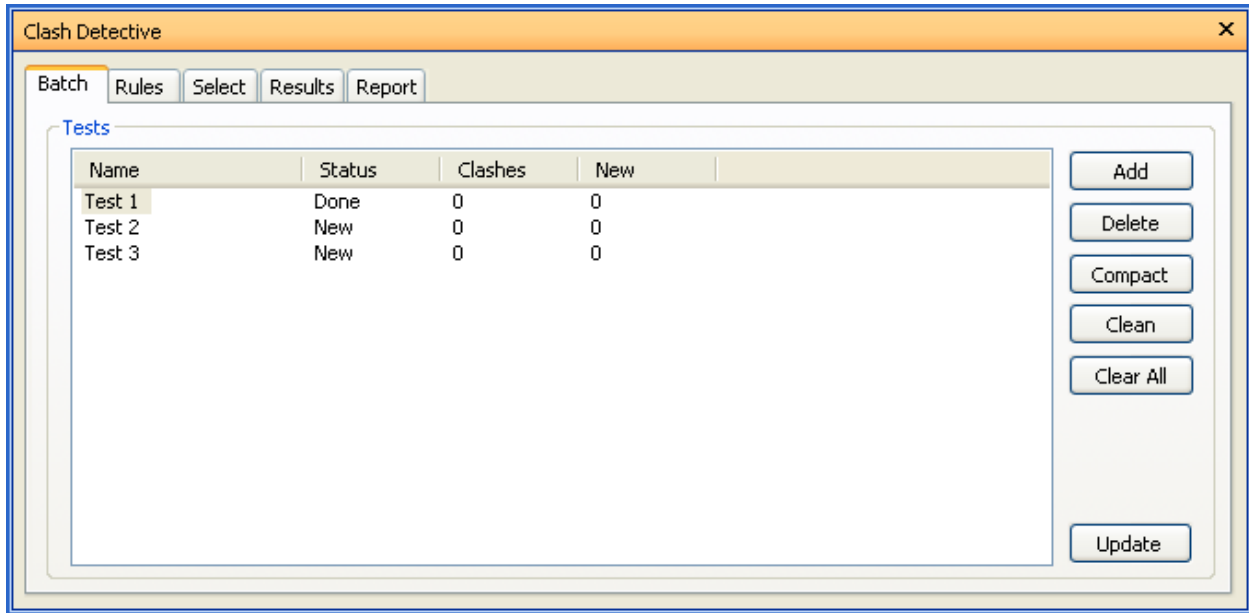

You can also change the sort order of clash tests. To do this, click the heading of the desired column. This alternates the sort order between ascending and descending.

The Batch Tab Buttons

Use the buttons on the **Batch** tab to set up and manage batches of clash tests.

Add - adds a new clash test to the current batch.

Delete - deletes the selected test from the current batch.

Compact - deletes all resolved clashes in the selected test.


Clean - resets the status of each clash in the selected test to 'New'.

Clean All - deletes all clash tests in the batch, and displays a single empty clash test.

Update - runs all clash tests in the current batch.


The Rules Tab

The **Rules** tab lists all currently available rules. These can be used to make Clash Detective ignore certain model geometry during a clash test. Each of the default rules can be edited and new rules may be added as necessary:

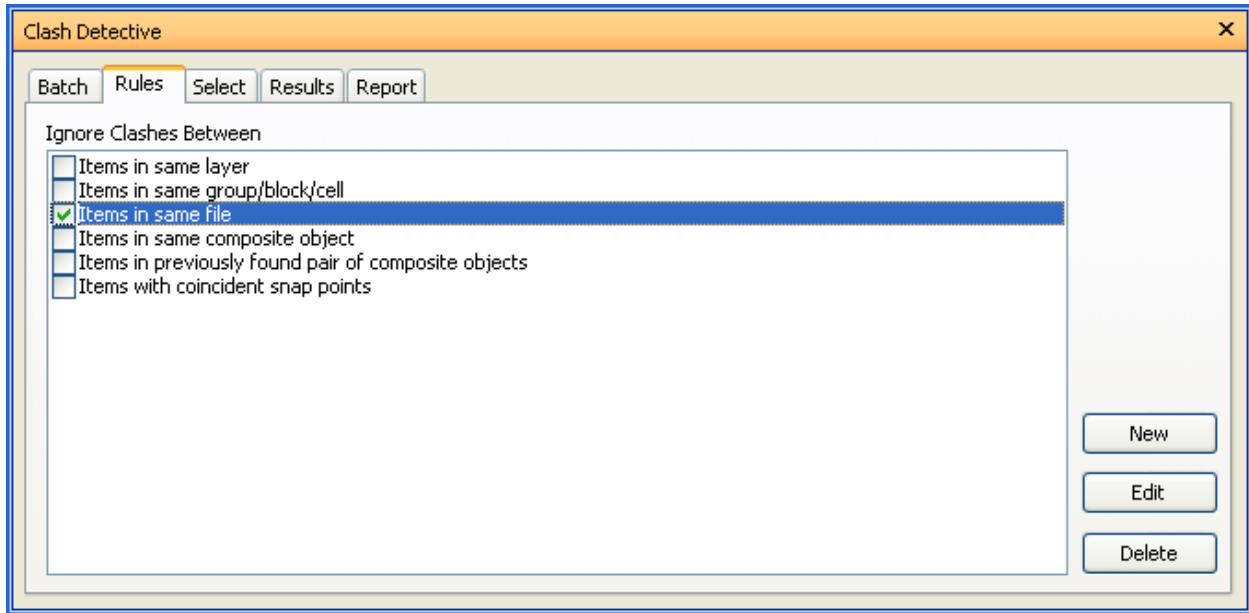

The Select Tab

The **Select** tab enables you to configure the parameters for the clash currently selected on the **Batch** tab.

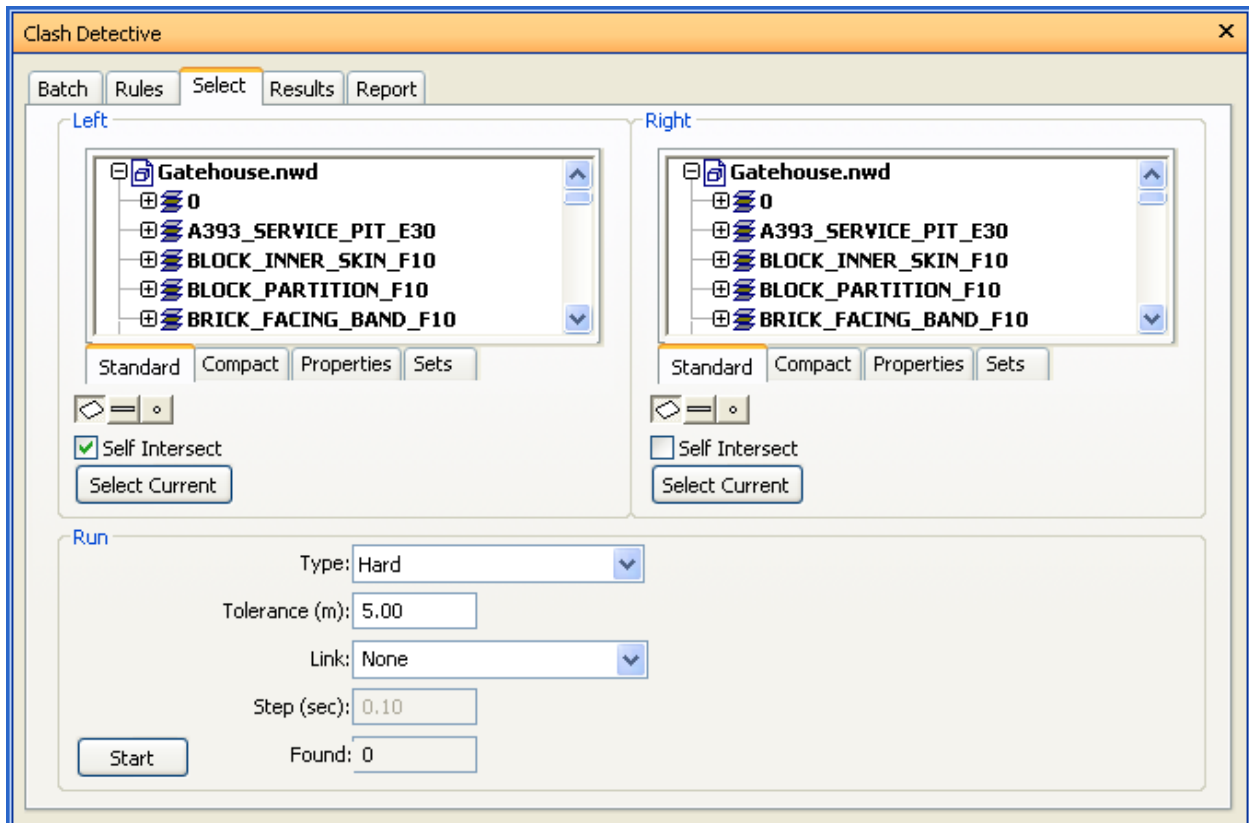

This is where you can refine your clash test by only testing sets of items at a time, rather than the whole model against itself. This will produce faster and more sensible results.

The **Select** tab is also where you can run a single test from. To run all tests in your batch, use the **Update** button on the **Batch** tab.

The Left and Right Panes

These panes contain a tree view of two sets of items that will be tested against each other during the clash test and you need to select items in each pane.

At the bottom of each pane, there are several tabs replicating the current state of the **Selection Tree** control bar. You can use them to select items for clash tests.

- Standard - displays the default tree hierarchy, including all instancing.
- Compact - a simplified version of the tree hierarchy.
- Properties - the hierarchy based on the items' properties.
- Sets - shows the same items as on the **Selection Sets** control bar.

Clash testing can be faster, more effective, and easily repeatable if you use selection and search sets. Carefully consider what sets of objects need clashing against each other and create selection/search sets accordingly.

Geometry Type Icons

Clash tests can include the clashing of surfaces, lines, and points of the selected items



- clashes item surfaces. This is the default setting.



- clashes items with center lines, for example pipes.



- clashes (laser) points.

The Self Intersect Check Box

Select this check box if you want to test the geometry selection in the pane against itself, in addition to testing it against a geometry selection in the other pane.

The Select Current Button

You can also select geometry for clash testing directly in the main NavisWorks window, and on the **Selection Tree** control bar.

When you have selected the required items (press and hold CTRL to select multiple objects), click the **Select Current** button under the desired pane to create the corresponding clash set.

The Shortcut Menu

Right-clicking in the **Left** or **Right** pane opens a shortcut menu:

Import Current Selection - has the same effect as pressing the **Select Current** button.

Set As Current Selection - selects the items on the main NavisWorks screen.

The Run Controls

Type - selects a clash type. There are four possible types of clashes:

- Hard - two objects actually intersect.
- Hard (Conservative) - two objects are treated as intersecting even though the geometry triangles do not.

Note:

By default, this option is turned off. To switch it on, click **Tools > Global Options**. In the **Options Editor**, expand the **Interface** node, click **Developer**, and select the **Show Internal Properties** check box.

- Clearance - two objects are treated as intersecting when they come within a specified distance of each other. Selecting this clash type also detects any hard clashes.

You might use this type of clash when pipes need to have space for insulation around them, for example.

- Duplicates - to intersect two objects must be identical both in type and position.

This type of clash testing may be used to clash the entire model against itself. This enables you to detect any items in the scene that may have been duplicated by mistake.

Tolerance - controls the severity of the clashes reported and the ability to filter out negligible clashes, which can be assumed to be worked around on site. Tolerance is used for Hard, Clearance and Duplicate types of clash test.

Link - enables you to link a clash test to TimeLiner schedule or an object animation scene.

Step - enables you to control the Interval Size to use when looking for clashes in a simulation sequence.

Start - runs the selected clash test.


Found - displays the number of clashes found.

Note:

Hidden items are not included in a clash test.

The Results Tab

The **Results** tab contains the list of clashes, and a number of controls to manage them.

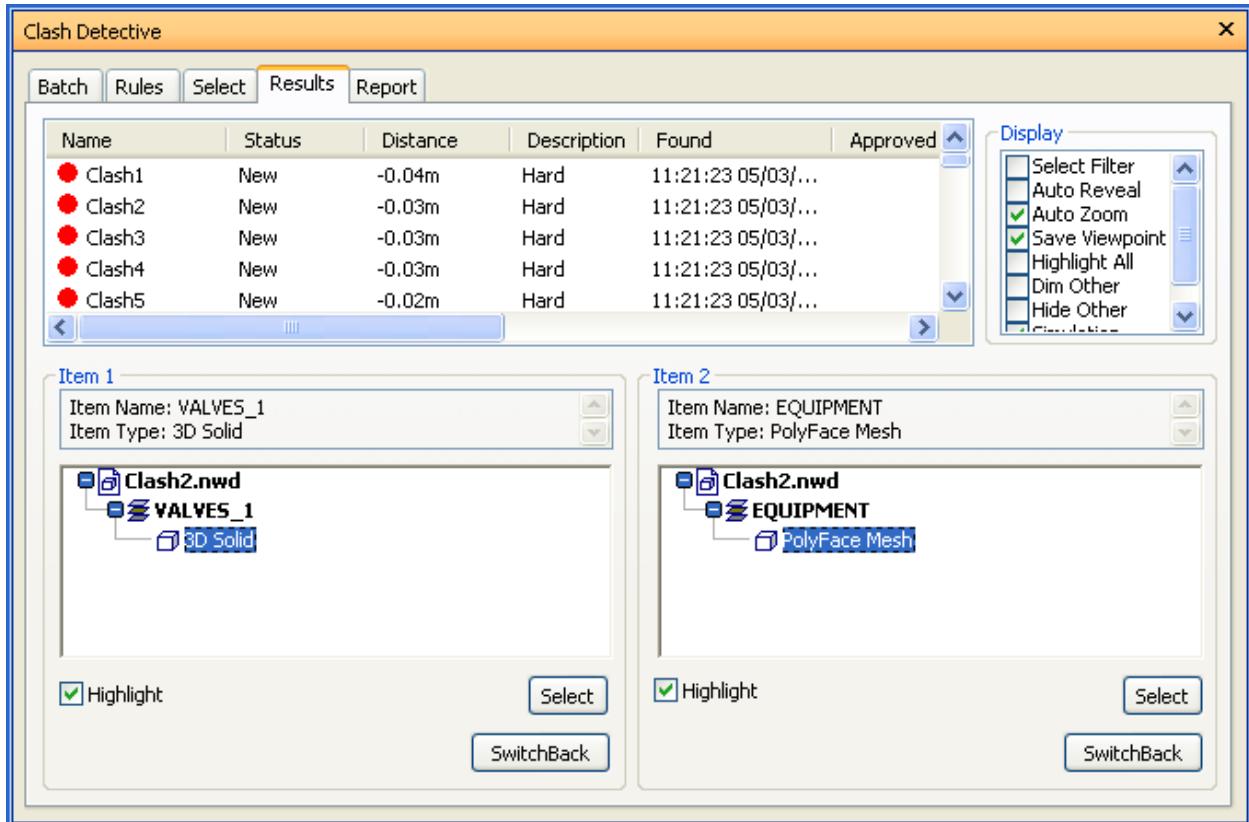

The Results View

The found clashes are shown in a multi-column table. You can use the scroll bars at the right and at the bottom of the results view.

By default, clashes are numbered and sorted by severity.

You can sort and resize columns, if necessary.

The Clash Icons

An icon is displayed to the left of each clash name. It visually identifies a clash status as follows:

- - New
- - Active
- - Approved
- - Resolved

The Clash Status

Each clash has a status associated with it. This status is updated automatically by Clash Detective each time the same test is run; you can also update the status yourself.

- **New** - a clash found for the first time in the current run of the test.
- **Active** - a clash found in a previous run of the test and not resolved.
- **Approved** - a clash previously found and approved by someone.

If the status is manually changed to 'Approved', the user currently logged on is recorded as the approver, and the current system time is used as the time of approval.

If the test is run again, and the same clash is found, its status stays as 'Approved'.

- **Resolved** - a clash found in a previous run of the test and not in the current run of the test. It is, therefore, assumed to be resolved.

If the status is manually changed to 'Resolved', and a new test finds the same clash, its status will be changed back to 'New'.

- **Old** - any clash in an "old" test. The icons still have the code of the status from the previous run, but this is a reminder to say that the current test is old. See [Clash Test Status](#) for a description of old tests.

The Shortcut Menu

Right-clicking a clash in the **Name** column opens a shortcut menu:

Add Comment - adds a comment to the selected clash.

Rename - renames the selected clash.

The Display Field

Use the following options to enable efficient reviewing of clashes:

- **Select Filter** shows only the clashes that involve the items you've selected in the main NavisWorks window.
- **Auto Reveal** temporarily hides anything obstructing the clashing items so that you can see the clash when zooming in on it, without having to move location.
- **Auto Zoom** automatically zooms in on the selected clash. Clearing this check box allows you to keep the main viewpoint static while flicking through the clashes one by one.
- **Save Viewpoint** saves the current view of the clash so that when the clash is reselected, the saved view is displayed.
- **Highlight All** highlights all found clashes in the main NavisWorks window.
- **Dim Other** turns all items not involved in a clash to gray. This makes it easier to see the clashed items.
- **Hide Other** hides all items not involved in a clash in order to focus better on the clashing items.
- **Simulation** is used for time-based and soft (animation) clashing. It moves the playback slider in the TimeLiner sequence or an animation scene to the exact point at which the clash occurs, and enables you to investigate the events happening immediately before and after the clash. See [Time-Based and](#)

[Soft Clash Testing Results](#)".

The Item 1 and Item 2 Panes

These panes contain data on both clashing items in the clash selected in the results view.

This includes the Smart Tag properties relating to each item in the clash and also the path through the standard selection tree from the root to the geometry of the item.

Right-clicking in the **Left** or **Right** pane opens a shortcut menu:

Import Current Selection - imports the tree list based on the current selection in the main NavisWorks window.

Set As Current Selection - selects the items on the main NavisWorks window.

The Highlight Check Box

Select this check box to override the color of the item in the main NavisWorks window with the color of the status of the selected clash.

The Select Button


Selecting an item in one of these tree lists, and then clicking this button selects a clashing item in the main navigation window.

The SwitchBack Button

Selecting an item in one of these tree lists, and then clicking this button allows the current view and currently selected object to be sent back to the originating CAD package.

The Report Tab

The **Report** tab enables you to set up and write reports containing details of all clash results found in the selected test.

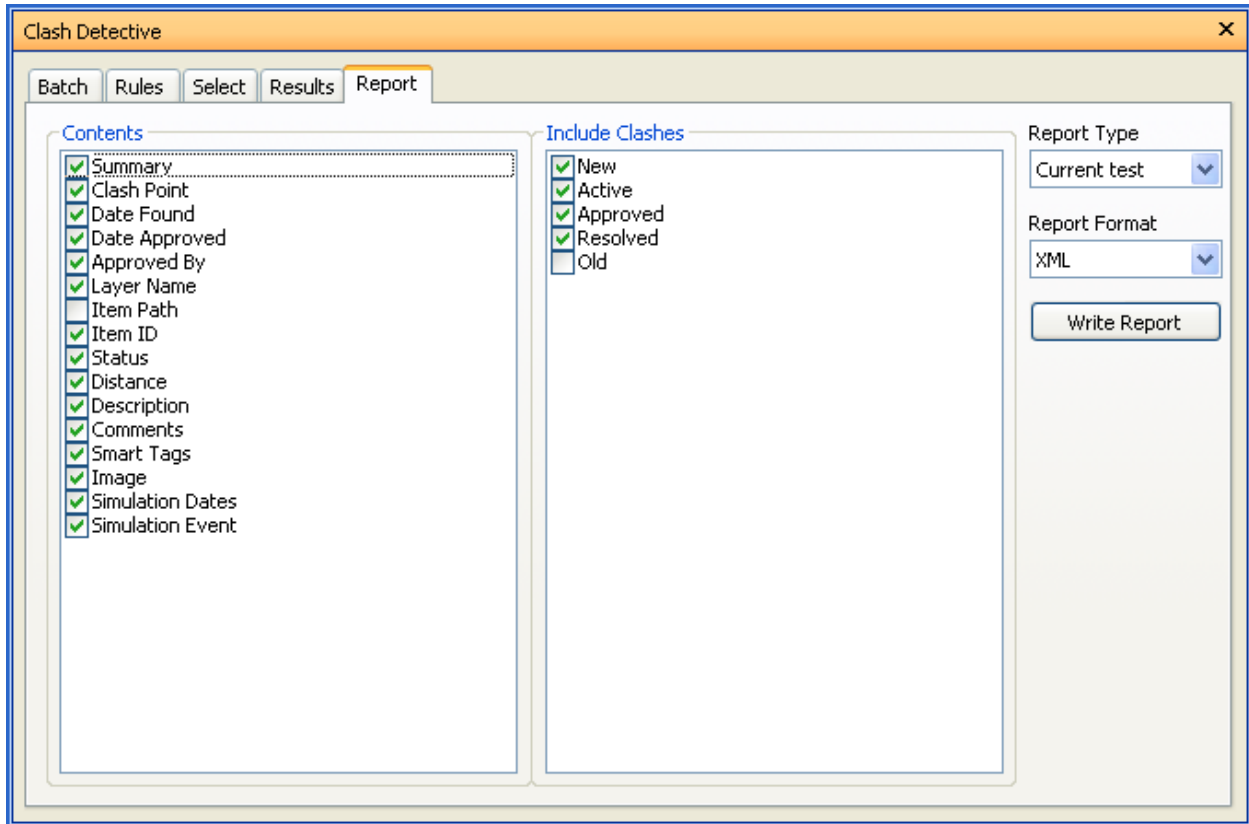

The Contents field

Select the check boxes in this field to specify which clash-related data to include in your report.

For example, you can include Smart Tag properties relating to the items involved in the clash, TimeLiner task information, image of the clash etc.

The Include Clashes field

Select the check boxes in this field to specify which clashes to include in your report.

The Report Type

Select the type of report from the drop-down list:

- Current Test - creates a single report for the current test only.
- All Tests (Combined) - creates a single report for all tests.
- All Tests (Separate) - creates a separate report for each test.

The Report Format

Select the format of the report from the drop-down list:

- XML - creates an .xml file.
- HTML - creates an .html file.
- Text - creates a .txt file.
- As Viewpoints - creates a folder called [Test_Name] on the **Viewpoints** control bar; it contains each clash saved as a viewpoint with an attached comment describing the clash.

Note:

When using XML, HTML, or Text format options consider the following:

- By default, Clash Detective attempts to include a .jpeg viewpoint image for each clash. Make sure to select the **Image** check box in the **Contents** field, otherwise the report will contain broken image links.
 - You need to create a separate folder for the report and its viewpoint images.
-

The Write Report Button

Creates the selected report and saves it into the selected location.

Getting Started

Setting up and running a clash test:

1. Select a previously run test from a batch, or start a new test
2. Set the rules for the test.
3. Select the required items to be included in the test and set the test type options.
4. View the results.
5. Produce a clash report.

Chapter 49. Clash Batches

In this section you will learn how to set up and manage tests and test batches.

Running Clash Tests

To run clash tests:

1. If the Clash Detective window is not already open, select **Tools > Clash Detective** from the menu bar.
2. Click the **Batch** tab.
3. To run *all* of the tests in the batch, click the **Update** button.

To run a single test from a batch, select it in the test view, click the Select tab, and click the **Start** button.

Managing batches of clash tests

Click **Add** to append a new test to the current batch.

Click **Delete** to delete the currently selected test from the batch.

Click **Compact** to delete all clash results with a status of resolved from the test in order to create a smaller file.

Click **Clean** to reset all tests so that they are as if you had not yet run them. In other words, this will make their test status new.

Click **Clear All** to remove all tests from the batch in order to start from scratch.

Note:

You can rename a test by selecting it and either pressing **F2**, or by clicking again on the highlighted text. You can also sort the Batch columns alphanumerically by simply clicking on the column heads. Clicking again toggles between ascending and descending.

Merging clash tests from multiple files

Merge the files using **File, Merge**. See the “[Merging Files](#)” for more information.

All of the clash test data will be combined, whilst any duplicate geometry from the files will not be loaded.

Importing clash tests

Clash tests can be imported into NavisWorks Clash Detective to set up pre-defined, generic clash tests. (see Exporting clash tests for information on exporting clash tests).


Note:

If the clash test to be imported contains a search set as one of the clash selections, then the search set will also be imported along with all other test rules, options and selection information.

To import a clash test:

1. From the **File** menu, choose **Import, Clash Test XML...**

The **Import** dialog is displayed:

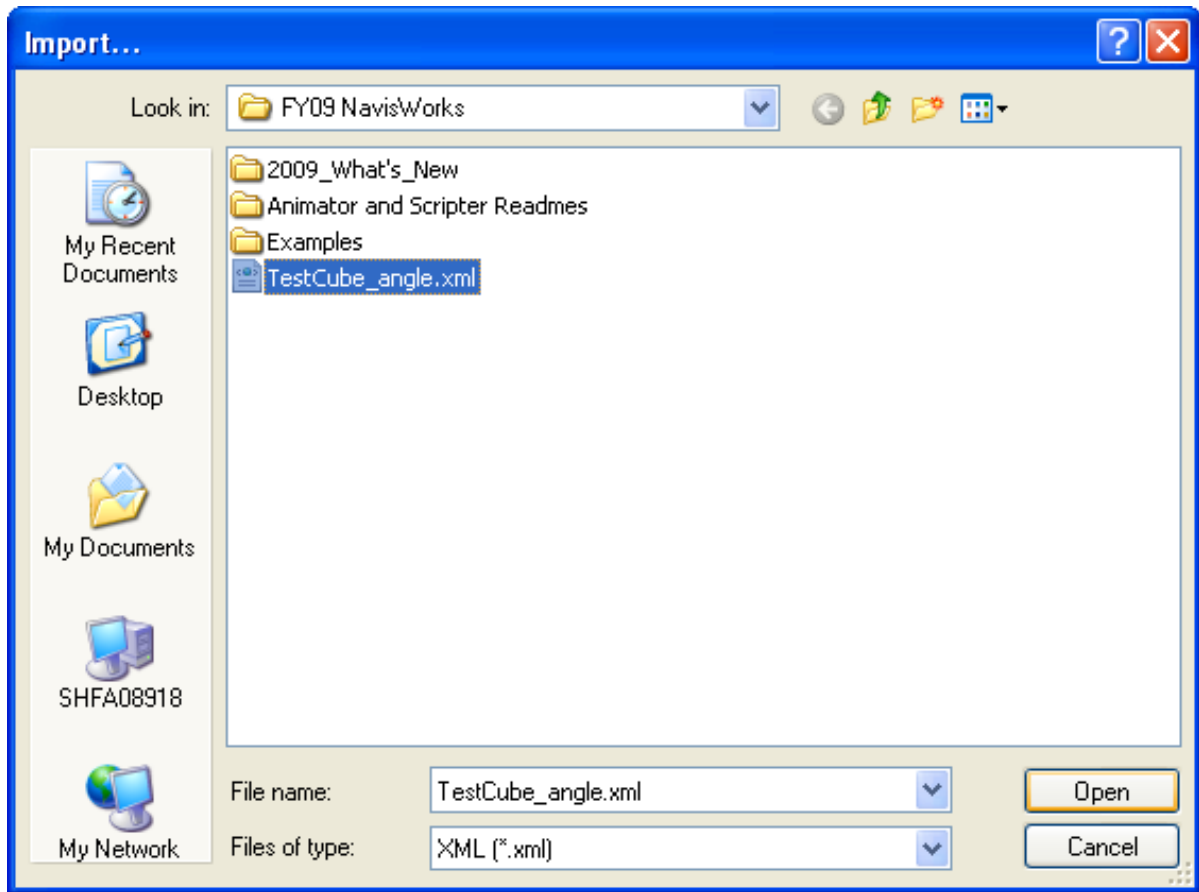

2. Locate and **Open** the .xml file to import the clash test information, or click **Cancel** to return to NavisWorks.

Exporting clash tests

Tests can be set up to clash items based on generic properties, including direct property selection in the

left and right clash selection trees, or using pre-defined search sets.

For example, you may have saved a search set that finds all pipes of a specific size, named "100mm Pipes". Your test then clashes all 100mm Pipes against the entire model (see [Chapter 51, *Selecting Items for Testing*](#)). Exporting this clash test will enable you to import it into another model, which will automatically set up a clash test between 100mm Pipes and the entire model.

Note:

Any clash tests that are based on explicit selections will not be exported. For example, clashing one layer against another is not a valid test for exporting. To achieve this you will need to use the **Find Items** dialog to search for each layer based on a specific property (e.g. Item, Name). These searches can then be saved as **Search Sets** and finally selected in the **Left** and **Right** selection trees in Clash Detective.


You may also select all loaded files in the **Left** or **Right** selection tree and Clash Detective will treat this as selecting the entire model.

Multiple generic tests can be set up as a batch and exported for use by other Clash Detective users or by yourself on other projects.

To export a clash test:

1. Having set up your implicit clash tests, from the **File** menu, choose **Export, Clash Test XML...**

The **Export** dialog is displayed:

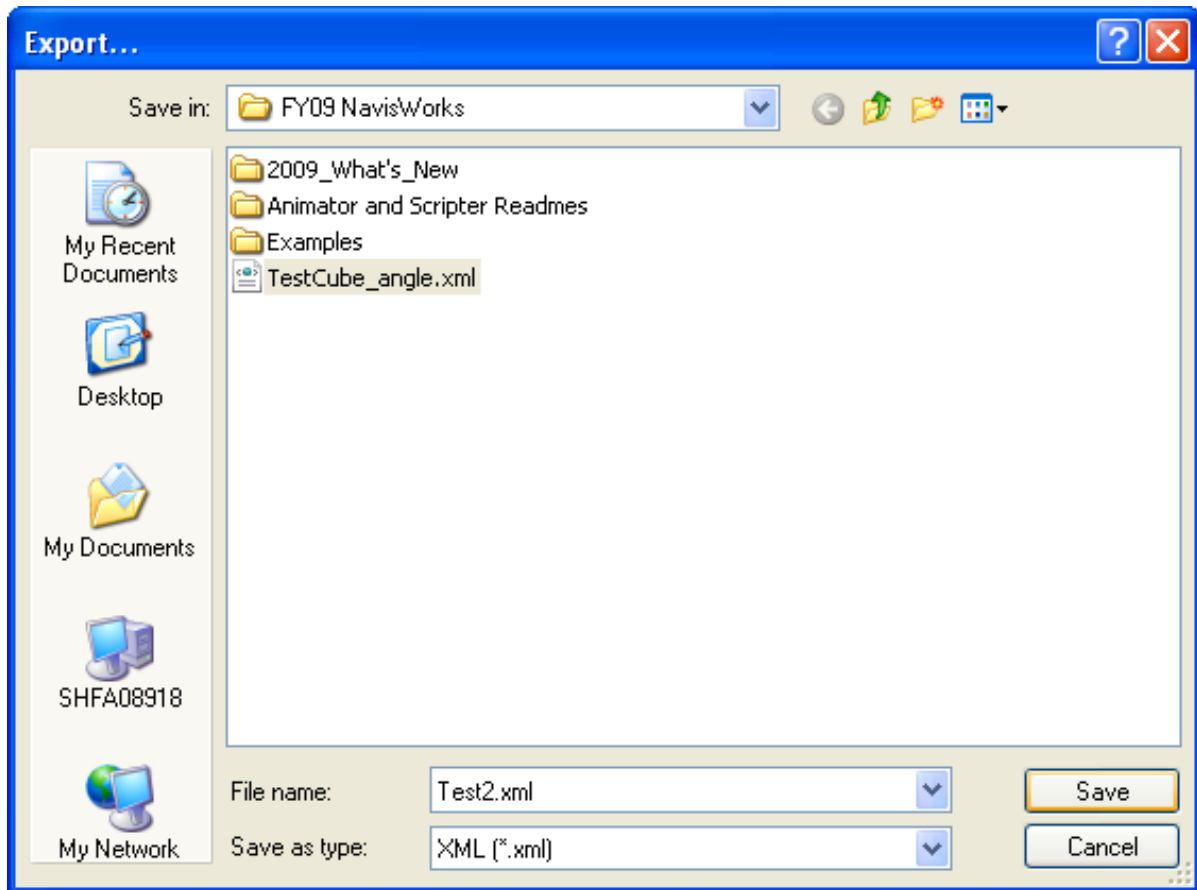

2. Enter a new file name and location, if you wish to change from those suggested.
3. Click **Save** to export the .xml file, or click **Cancel** to return to NavisWorks.

Creating custom clash tests

Exported clash tests can be used as a basis to define custom clash tests. If you have a common set of clash tests that you reuse on multiple projects, you can turn them into a custom clash test. Once installed as a custom clash test, the entire batch of tests can be selected and run directly from the **Select** tab. The results from all tests in the batch are combined and presented as the results of the custom clash test. The name of each test in the batch is displayed in the **Description** field of the results.

Custom clash tests are an excellent way to roll out a standardized set of tests across an organization. They allow the expertise of "power" users to be reused by everyone. Finally, they can be seen as a way of implementing object intelligence. For example, a custom clash test could be written that checked for compliance with a local building code based on object information and properties defined in a particular CAD system.

To define a custom clash test:

1. **Export** your clash tests to an XML file. The name of the file is used as the default name of the custom test.
2. If desired, change the name of the custom test by editing the XML file directly. The top level element in the XML file is called "batchtest". The name of the custom test as displayed to the user is defined by the "name" attribute. The name of the custom test as saved in a file is defined by the "internal name" attribute.
3. To install the custom test, copy the exported XML file to the `custom_clash_tests` subdirectory of one of the NavisWorks search directories. Clash Detective searches these directories on startup looking for custom tests. See “ [Search Directories](#) ” for more information.
4. To use the custom test select it from the Type drop-down box on the **Select** tab. And press **Start**. All other options and rules are specified by the custom test.

Chapter 50. Clash Rules

In this section you will learn how to define and customize ignore rules to be applied to a clash test.

Using Default Clash Rules

To use default clash rules:

1. If the Clash Detective window is not already open, select **Tools > Clash Detective** from the menu bar.
2. Click the **Batch** tab, and select the test you want to configure.
3. Click the **Rules** tab.

The **Ignore Clashes Between** box enables you to select "rules" that reduce the number of clash results by ignoring certain combinations of clashing items. The following rules are built-in:

- If **Items in same layer** is checked, any items found clashing that are in the same layer are not reported in the results.
 - If **Items in same group/block/cell** is checked, any items found clashing that are in the same group (or inserted block) are not reported in the results.
 - If **Items in same file** is checked, any items found clashing that are in the same file (either externally referenced or appended) are not reported in the results.
 - If **Items in same composite object** is checked, any items found clashing that are part of the same composite object (an item composed of multiple parts of geometry) are not reported in the results.
 - If **Items in previously found pair of composite objects** is checked, any items found clashing that are part of composite objects (items composed of multiple parts of geometry) that have previously been reported in the test are not reported in the results.
 - If **Items with coincident snap points** is checked, any items found clashing that have snap points that coincide are not reported in the results. This can be particularly useful for pipe runs made from cylinders.
 - If **Items in the same AutoPlant Component** is checked, any items found clashing that are contained within the same AutoPlant component are not reported in the results.
 - If **Connected AutoPlant Components** is checked, any items found clashing that are in connected AutoPlant components are not reported in the results.
4. Select the check boxes for all exception rules that you want to apply to the selected test.


Adding Custom Clash Rules

NavisWorks Clash Detective provides a number of templates which you can customize to create your own ignore rules.

To add a new ignore rule:

1. On the **Rules** tab, click the **New** button.

The **Rules Editor** dialog is displayed:

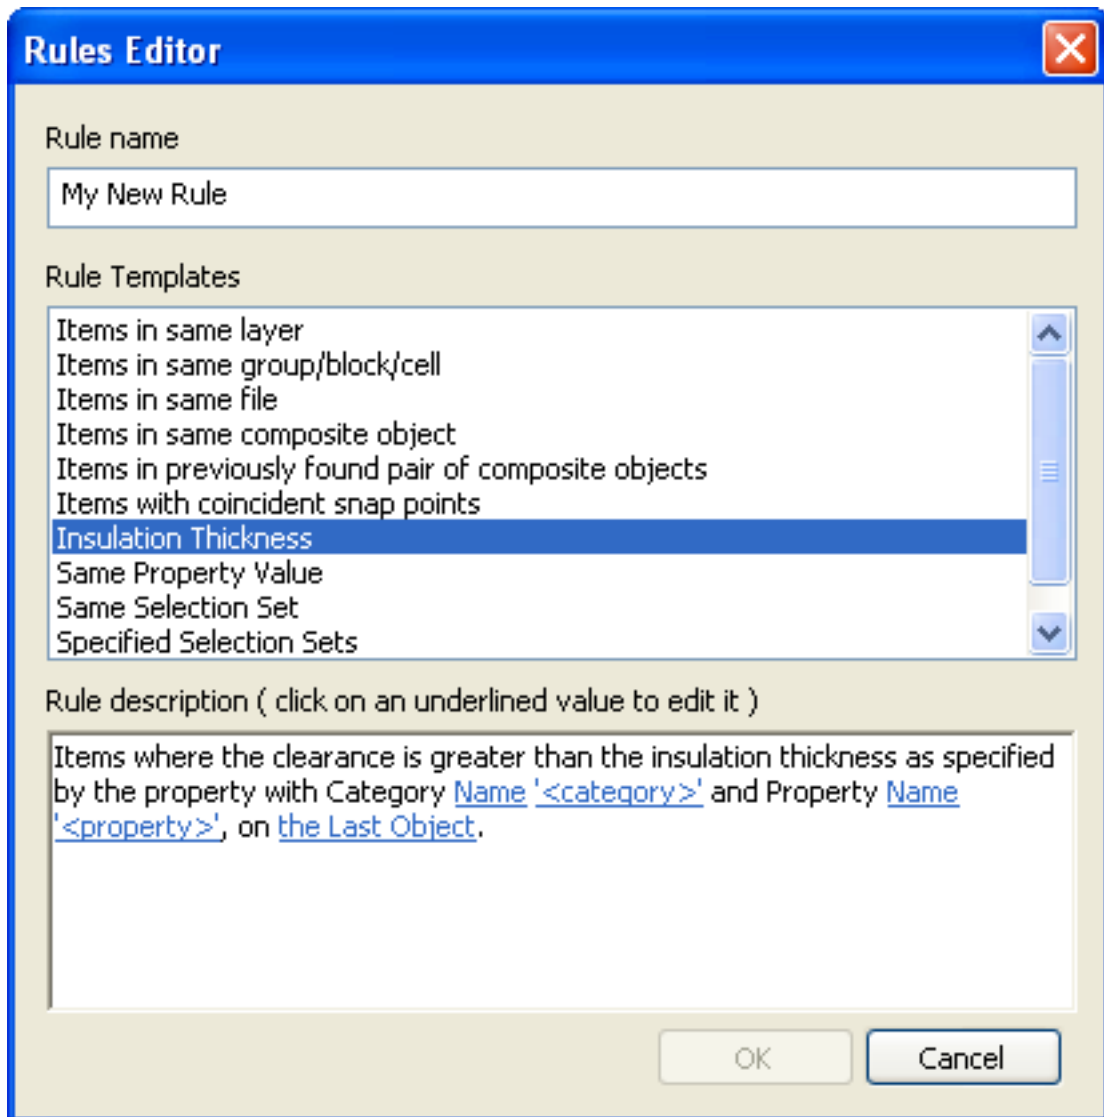


2. Enter a new name for your rule.
3. From the **Rule Templates** list, choose a template to customize. The following templates are built in:
 - **Insulation Thickness.** This rule is to be used with a **Clearance** test and will ignore any items found clashing where the clearance is greater than the insulation thickness.

If you have a pipe requiring a specific thickness of insulation, then you may want to carry out a clearance test on that pipe, setting the clearance tolerance to the required insulation thickness. This would identify any areas where there is not enough clearance around the pipe to install the insulation.

If you have various pipes, all requiring different thicknesses of insulation then rather than setting up a separate clearance test for each thickness, you can set up one test with the greatest necessary tolerance, i.e. assume all pipes require the maximum thickness of insulation. This rule can then be applied to ignore any clashes that are falsely identified, as their actual insulation thickness is less than the maximum clearance used.

See the diagram below for an example of where this ignore rule would be applied:

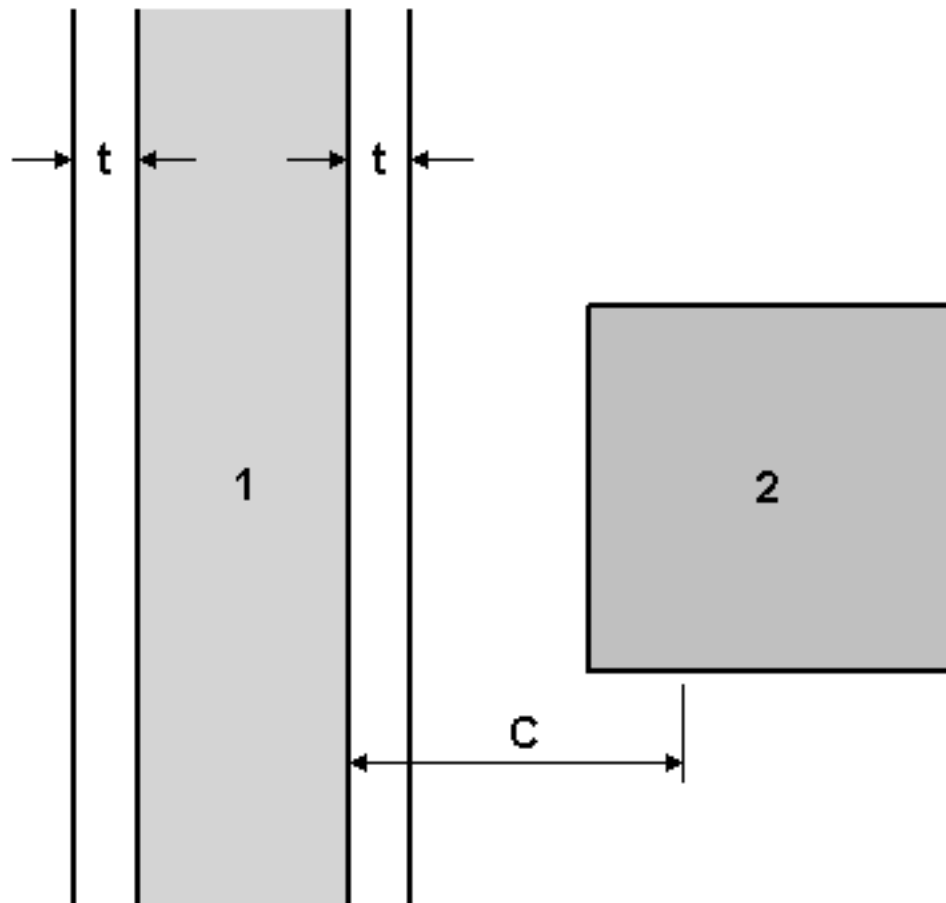

Pipe 1 has insulation thickness t and C is the maximum clearance (thickest insulation) required anywhere in the current model. Any items (2) that come within the range of t to C will not be reported in the results.

- **Same Property Value.** This rule will ignore clashing items that share a specific property.

- **Same Selection Set.** This rule will ignore clashing items that are in the same specified Selection Set.
 - **Specified Selection Sets.** This rule will ignore clashing items where each item is in a specified Selection Set
4. In the **Rule Description** box, click on each of the **underlined values** to define your custom rule. The customizable values available with the built in templates are:
- **Name.** Use the name of the category or property as it is displayed in the interface (recommended). You can also choose **Internal Name** which is that accessed via the API (for advanced use only).
 - **'<category>'**. Choose from the available list, which category the property you wish to define is in. Only the categories that are contained in the scene are available in the drop down.
 - **'<property>'**. Choose from the available list, which property you wish to define. Again, only the properties in the scene within the chosen category will be available.
 - **the Last Object.** Search for the defined property on the specified selection. The Last Object is the default, though you can also choose from **Any Parent, a Model, a Layer, or the Geometry**.
 - **'<set>'**. Choose from the available list, which Selection Set you require to define the rule. Only the pre-defined Selection and Search Sets are available in the drop down.
5. Click **OK** to add the new ignore rule, or **Cancel** to return to NavisWorks.

Managing Clash Rules

Editing clash rules

1. On the **Rules** tab, select the ignore rule you want to edit.
2. Click the **Edit** button.
3. Rename the rule if you wish to change it from its current name.
4. Choose another **Rule Template** if you wish to change it from the current template.
5. In the **Rule Description** box, click on each of the **underlined values** to redefine your custom rule.
6. Click **OK** to save the changes you've made to the rule, or click **Cancel** to return to NavisWorks.

Deleting clash rules

1. On the **Rules** tab, select the ignore rule you want to delete.
2. Click the **Delete** button to delete the clash rule.

Chapter 51. Selecting Items for Testing

In this section you will learn how to set up various parameters for your tests.

Selecting Items for a Clash Test

To select items:

1. If the Clash Detective window is not already open, select **Tools > Clash Detective** from the menu bar.
2. Click the **Batch** tab, and select the test you want to configure.
3. Click the **Select** tab.

There are two identical boxes in this tab called **Left** and **Right**. These boxes represent two sets of items that will be tested against each other during the clash test and you need to select items in each. You can select the items by choosing a tab from the selection tree and manually selecting items from the tree hierarchies. Any selection sets in the scene are also included on a tab, which is a quick and useful method of setting up items across sessions (see "Selecting Items" in the Basic NavisWorks Functionality section for more details).

You can also transfer the current selection to one of the boxes by selecting items in the usual way in the main navigation window and/or selection tree and clicking the appropriate **Select Current** button.

4. Check the appropriate **Self Intersect** check box if you want that set to test for self-intersection, as well as intersection against the other set.
5. Clash tests can also include the clashing of points, lines and surfaces depending on which of the three buttons underneath each window are selected. These three buttons correspond to surfaces, lines and points, and each can be toggled on and off by clicking on them.

If it was required to do a clash test, for example, between some surface geometry and a point cloud, then it might be done by setting up the geometry in the left hand window, and the point cloud in the right. At that point the **Surface** button would be set under the left window, with the other two unset. The **Points** button would be set under the right-hand window with the other two unset, and the **Type** perhaps set to **Clearance** with a **Tolerance** of 1 meter.

Note:

If the **Type** is set to **Hard**, lines and surfaces will actually need to intersect with any points to register a clash.

Selecting Clash Test Options

There are four default clash test types for you to choose from:

- **Hard**. Choose this option if you wish the clash test to detect actual intersections between geometry.

- **Hard (Conservative).** This option performs the same clash test as **Hard**, however it additionally applies a **conservative** intersection method. See [Intersection Method](#) for more information on this.

Note:

This clash test type is only available when in **Developer** profile. See “[Profiles](#)” for more information.

- **Clearance.** Choose this option if you wish the clash test to check for geometry within a set distance from other geometry (see [Clash Tolerance](#) for information on how to set this distance). You might use this type of clash when pipes need to have space for insulation around them, for example.

Note:

Clearance clashes are not the same as "soft" clashes. Clearance clashes detect for static geometry coming within a distance of other geometry, whereas soft clashes detect potential clashes between moving components. NavisWorks Clash Detective supports soft clash checking when you link it to Object Animation.

- **Duplicates.** Choose this option if you wish the clash test to detect for duplicate geometry. You might use this type of clash test to check a model against itself to ensure the same part has not been drawn, or referenced twice, for example.

To select the clash test options:

1. On the **Select** tab, click the **Type** drop-down, and select the clash test type you wish to run. Any custom clash tests that have been defined (see [Creating custom clash tests](#)) appear at the end of the list.
2. Enter the **Tolerance** required, which will be in scene units. See [Clash Tolerance](#) for more information on this.
3. If you want to run a time-based or soft clash test, select the appropriate option in the **Link** field. For example, selecting **TimeLiner** will make Clash Detective produce a clash report based on the Clash Detective settings, TimeLiner simulation settings, and the project data contained in TimeLiner. For more information and usage examples, see “[Time-Based and Soft Clash Testing](#)”.

Time-Based and Soft Clash Testing

Linking to a TimeLiner schedule integrates the features of Clash Detective and TimeLiner together, allowing the automation of interference checking throughout the lifecycle of a TimeLiner project.

Similarly, linking to an object animation scene integrates the features of Clash Detective and Object Animation giving you the ability to automatically check interferences between moving objects.

Finally, you can link to an animated TimeLiner schedule (a schedule in which some tasks are linked to animation scenes), and run automatic time-based soft clash tests.

Time-Based Clashing

Project models can include the static representation of temporary items, such as work packages, ships, cranes, installations etc. Such static objects should be added into the TimeLiner project and scheduled to appear and disappear at particular locations, over specific period of time.

As these static package objects 'move' around a project site, based on a TimeLiner schedule, it is possible that some static package objects could, at some point in the schedule, take up the same space, i.e. 'clash'.

Setting up time-based clashing enables the automated checking of this throughout the project lifetime. When a time-based clash session is run, at each step of TimeLiner sequence, Clash Detective is used to check if a clash has occurred. If it has, a date of when the clash took place is logged, along with the event that caused the clash.

You can review the clash results and, for example, reschedule objects' appearance to eliminate such clashes.

Preparation:

1. Each static package that you want to use needs to be modelled in the project model covering the area or volume required; for example, you can use semi-transparent blocks.
2. These static packages must be added as tasks to the TimeLiner schedule.
3. Extra task types should be added to TimeLiner (on the **Configure** tab) to represent different types of static packages. You also need to configure the appearance for each added task type.

To link to a TimeLiner schedule:

1. In NavisWorks open the project model file, which contains the TimeLiner schedule with the static package tasks.
2. If the TimeLiner window is not already open, select **Tools > TimeLiner** from the menu bar.
3. Click the **Tasks** tab, and check the static package tasks are displayed.
4. Click the **Configure** tab, and check the task types have been added to match the static packages.
5. Click the **Simulation** tab, and play the simulation to view the static packages being displayed. Check that they are shown in the correct location and over the correct periods of time.
6. If the Clash Detective window is not already open, select **Tools > Clash Detective** from the menu bar.
7. Click the **Select** tab.
8. In the **Left** and **Right** panes, select the objects you want to test.
9. In the **Link** drop-down box, select **TimeLiner**.
10. Click the **Start** button. Clash Detective will check **at each interval in the project** to see if there are any clashes present. The number of found clashes is displayed in the **Found** field.

Note:

If the TimeLiner project is large in size, running this type of clash test will invariably take more time to complete than a normal clash run.

You can now review the found clashes.

Soft Clashing

Project models can include the dynamic representation of temporary items, such as work packages, ships, cranes, installations etc.

You can use the Animator window to create animation scenes with these objects, so that they will be moving around a project site, or change their size etc. It is possible that some moving objects could collide.

Setting up soft clashing enables the automated checking of this. When a soft clash session is run, at each step of a scene sequence, Clash Detective is used to check if a clash has occurred. If it has, a time of when the clash took place is logged, along with the event that caused the clash.

You can review the clash results and, for example, reschedule objects' movement to eliminate such clashes.

Preparation:

1. Each object that you want to animate needs to be modelled in the project model covering the area or volume required; for example, you can use semi-transparent blocks.
2. Animated scenes with the desired objects should be created by using the Animator window in NavisWorks.

To link to Object Animation:

1. In NavisWorks open the project model file, which contains the object animation scenes.
2. If the Animator window is not already open, select **Tools > Animator** from the menu bar.
3. Play the animation. Check that the animated objects are shown in the correct location, in the correct size etc.
4. If the Clash Detective window is not already open, select **Tools > Clash Detective** from the menu bar.
5. Click the **Select** tab.
6. In the **Left** and **Right** panes, select the objects you want to test.

7. In the **Link** drop-down box, select the animation scene you want to link to, e.g. **Scene1**.
8. In the **Step** field, enter the Interval Size to use when looking for clashes in an animation.
9. Click the **Start** button. Clash Detective will check **at each interval in the animation** to see if there are any clashes present. The number of found clashes is displayed in the **Found** field.

Note:

If the animation scene is large in size, running this type of clash test will invariably take more time to complete than a normal clash run.

You can now review the found clashes.

Time-Based Soft Clashing

Project models can include the representation of temporary items, such as work packages, ships, cranes, installations etc. If you want to use static objects, they should be added into the TimeLiner project and scheduled to appear and disappear at particular locations, over specific period of time.

Additionally, you can create dynamic animation scenes, so that the objects will be moving around a project site, or change their size etc. Once created, such scenes should be linked to tasks in the TimeLiner project schedule.

It is possible, that appearance or disappearance of static objects can obstruct the movement of animated objects on site.

Setting up a time-based soft clashing enables the automated checking of this throughout the project lifetime. When a time-based soft clash session is run, at each step of TimeLiner sequence, Clash Detective is used to check if a clash has occurred. If it has, a date of when the clash took place is logged, along with the event that caused the clash.

You can review the clash results and, for example, re-route some objects to avoid any space/time conflicts.

Preparation:

1. You need to set up necessary static packages.
2. You need to set up necessary dynamic packages.
3. You need to link the dynamic packages (animation scenes) to the correct tasks in TimeLiner.

To link to a TimeLiner schedule:

1. In NavisWorks open the project model file, which contains the animated TimeLiner schedule.
2. If the TimeLiner window is not already open, select **Tools > TimeLiner** from the menu bar.

3. Click the **Tasks** tab, and check the static package tasks are displayed, and at least one animation scene has been linked to one of the TimeLiner tasks.
4. Click the **Configure** tab, and check the task types have been added to match the static packages.
5. Click the **Simulation** tab, and play the simulation. Check that the static and dynamic packages are shown in the correct location and over the correct periods of time.
6. If the Clash Detective window is not already open, select **Tools > Clash Detective** from the menu bar.
7. Click the **Select** tab.
8. In the **Left** and **Right** panes, select the objects you want to test.
9. In the **Link** drop-down box, select **TimeLiner**.
10. In the **Step** field, enter the Interval Size to use when looking for clashes in animation scenes.
11. Click the **Start** button. Clash Detective will check **at each interval in the project** to see if there are any clashes present. The number of found clashes is displayed in the **Found** field.

Note:

If the TimeLiner project is large in size, running this type of clash test will invariably take more time to complete than a normal clash run.

You can now review the found clashes.

Running a Clash Test

To run an individual clash test:

1. If the Clash Detective window is not already open, select **Tools > Clash Detective** from the menu bar.
2. Click the **Batch** tab, and select the test you want to run.
3. Click the **Select** tab, and select the required test options.
4. Once the left and right sets are selected and the clash type and tolerance defined, click the **Start** button to start the test running.

The **Found** box shows how many clashes have been found so far during this test.

Note:

The progress bar shows how far through the test Clash Detective has got. If you wish to stop the test at any time, press the **Cancel** button and all clashes found up until the interrupt will be reported and the test will be saved with a **Partial** status.


Chapter 52. Clash Results

In this section you will learn how to interact with the results of your clash tests.

Reviewing Test Results

To review test results:

1. In the Clash Detective window, run the desired test (individually, or as a batch). If you run a batch test, on the **Batch** tab, select the test you want to view the results for.
2. Click the **Results** tab.

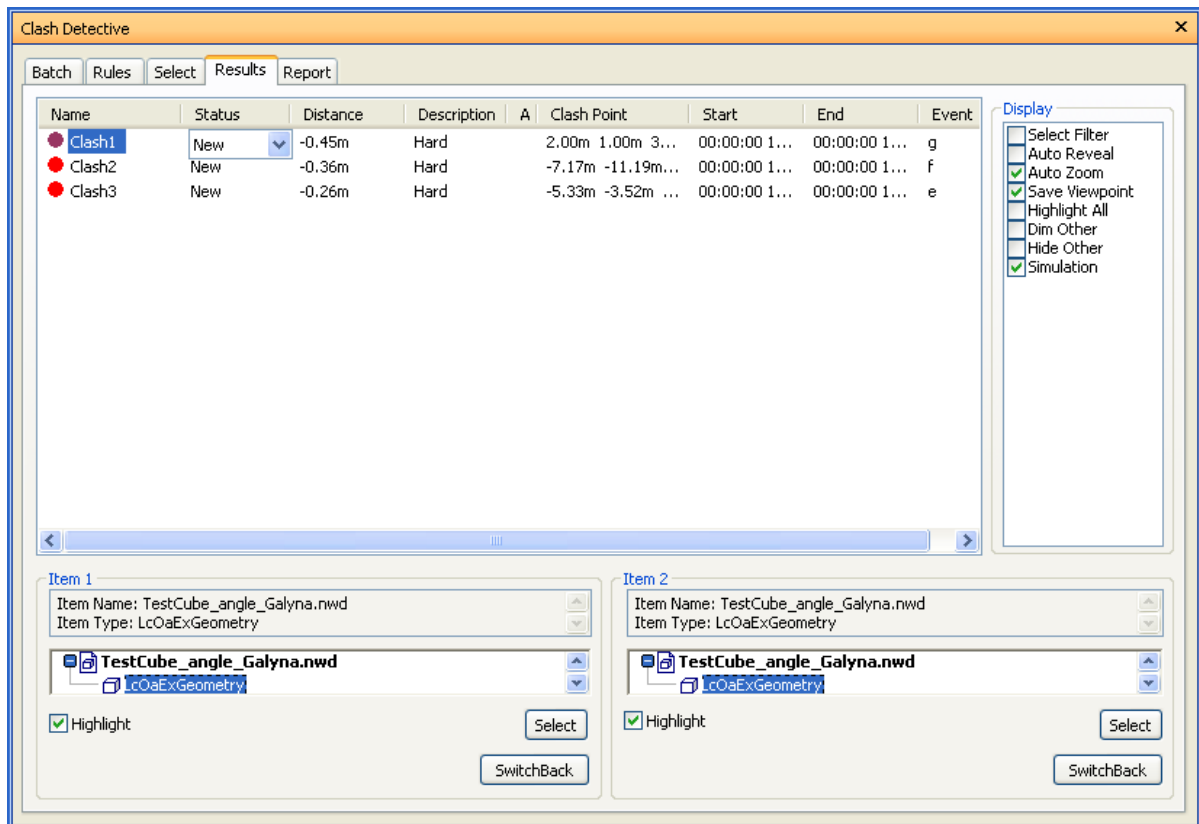

3. Click on a clash to highlight both clashing items in the main navigation window. The "Item 1" and "Item 2" boxes show the **Smart Tag** properties relating to each item in the clash and also the path through the standard selection tree from the root to the geometry of the item.

Note:

Selecting an item in one of these tree lists and then clicking on the **SwitchBack** button beneath allows the current view and currently selected object to be sent back to the originating CAD package. This makes it very simple to show clashes in NavisWorks, take them back to the CAD package, alter the design, and reload them in NavisWorks for a very fast design review

turnaround.

For more information on the use of **SwitchBack** and how to set it up, see “[SwitchBack](#)”.

4. If you run a time-based, soft, or time-based soft clash test, the start time/date of any clashes are recorded next to the appropriate Clash under the **Start, End** columns, together with the event name (an animation scene or a TimeLiner task) in the **Event** column in the Clash Detective Results tab. If multiple clashes are found on a particular date, each individual clash is listed with identical simulation information.

For more information on reviewing time-based and soft clash testing results, see “[Time-Based and Soft Clash Testing Results](#)”.

5. To rename a clash, click on the name of the clash, press **F2** or right-click the clash and choose **Rename**. This name will be saved and remembered for future tests.
6. To manually change the **Status** of clashes, select the new clashes requiring the change, and select a new status from the drop down list. Multiple clashes can be changed by either holding down the **Ctrl** key whilst selecting individual clashes (the last selected being shown in the main view), or by holding down the **Shift** key and selecting another clash, thereby selecting all clashes between the two including the first and last (again, the last selected being shown in the main view). Once the required clashes have been selected, changing the Status of the currently selected clash updates all those highlighted to the same status.
7. To enter notes about the clash for others to review, right click on the clash and choose **Add Comment** from the context menu. The **Add Comment** dialog will appear to allow you to enter your comment.
8. Select the display options you wish to apply:
 - Check **Select Filter** if you want to select an item in the main navigation window and show only those clashes that involve that selected item.
 - Check **Auto Reveal** if you want NavisWorks to attempt to temporarily hide anything obstructing the clashing items so that you can see the clash when zooming in on it, without having to move location.
 - Check **Auto Zoom** if you want to automatically zoom in on the selected clash. Clearing this box allows you to keep the main viewpoint static while flicking through the clashes one by one.
 - Check **Save Viewpoint** if you want to store the current viewpoint with the result. This allows you to tailor the viewpoint for a clash result. It also enables redlining to be stored with a clash result.

Note:

Once redlining has been added, subsequent changes to the viewpoint due to navigation will not be saved. In order to save a different viewpoint, the redlining must first be removed using the redline **Erase** tool.


- Check **Highlight All** if you want to highlight all the clashes found in the main navigation window, in the color of their status.
- Check **Dim Other** if you want to turn all items not involved in a clash to gray.
- Check **Hide Other** if you want to hide all items not involved in a clash in order to focus better on the clashing items.

- Check **Simulation** if you want to be able to interact with the animation or project schedule simulation for the selected clash. This only applies to time-based, soft, or time-based soft clash testing results.
9. Check the **Highlight** check box to override the color of the item in the main navigation window with the color of the status of the selected clash.
 10. Click **Select** to select a clashing item in the main navigation window.
 11. Click on any of the column headings to sort the table using that column's data. This sorting can be alphabetical, numerical, date-related, or, in the case of the **Results->Status** column, in workflow order **New>Active>Approved>Resolved**. Clicking the column heading repeatedly toggles the sorting between ascending and descending.

Time-Based and Soft Clash Testing Results

To review time-based clash results:


1. In the Clash Detective window, set up and run a time-based clash test (see “Time-Based Clashing”).
2. Click the **Results** tab.

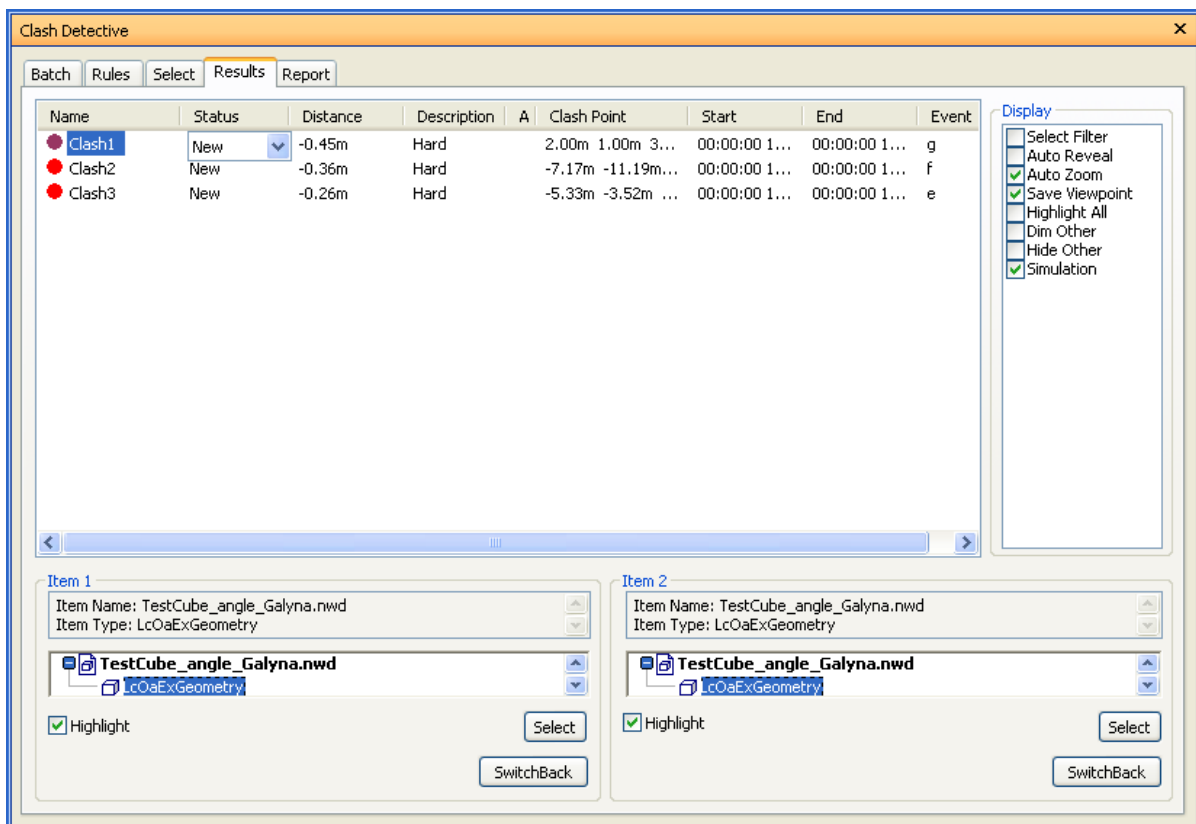

3. Select the **Simulation** check box in the **Display** area.
4. If the TimeLiner window is not already open, select **Tools > TimeLiner** from the menu bar, and click the **Simulation** tab.
5. Select a clash in the results view.
6. The simulation slider in the TimeLiner window is moved to the exact point at which the clash occurs. You can move the slider to investigate the events happening immediately before and after the clash.
7. Repeat this to review all found clashes.

To review soft clash results:

1. In the Clash Detective window, set up and run a soft clash test (see “[Soft Clashing](#)”).
2. Click the **Results** tab.

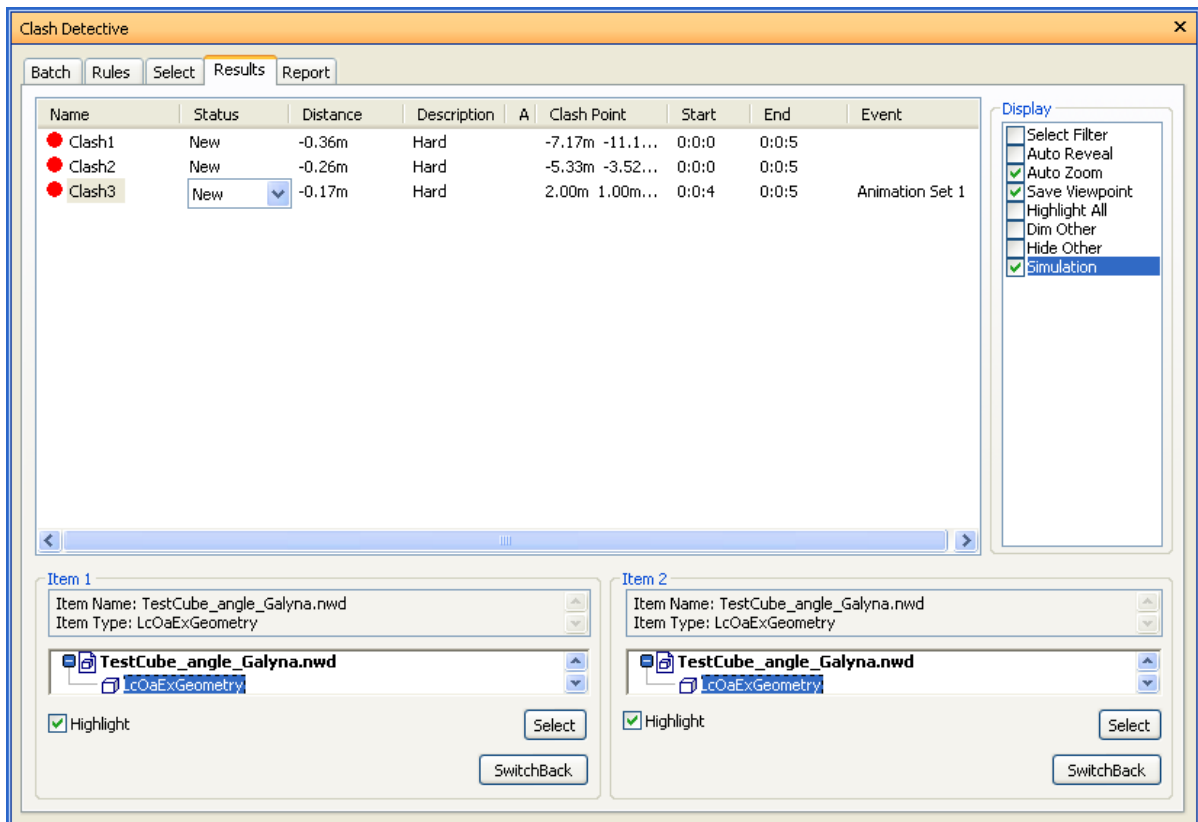


3. Select the **Simulation** check box in the **Display** area.
4. If the **Animation** toolbar is not already displayed, right-click in the NavisWorks toolbar area, and click the **Animation** option on the shortcut menu.

5. Select a clash in the results view.
6. The simulation slider on the **Animation** toolbar is moved to the exact point at which the clash occurs. You can move the slider to investigate the events happening immediately before and after the clash.
7. Repeat this to review all found clashes.

To review time-based soft clash results:

1. In the Clash Detective window, set up and run a time-based soft clash test (see “Time-Based Soft Clashing”).
2. Click the **Results** tab.

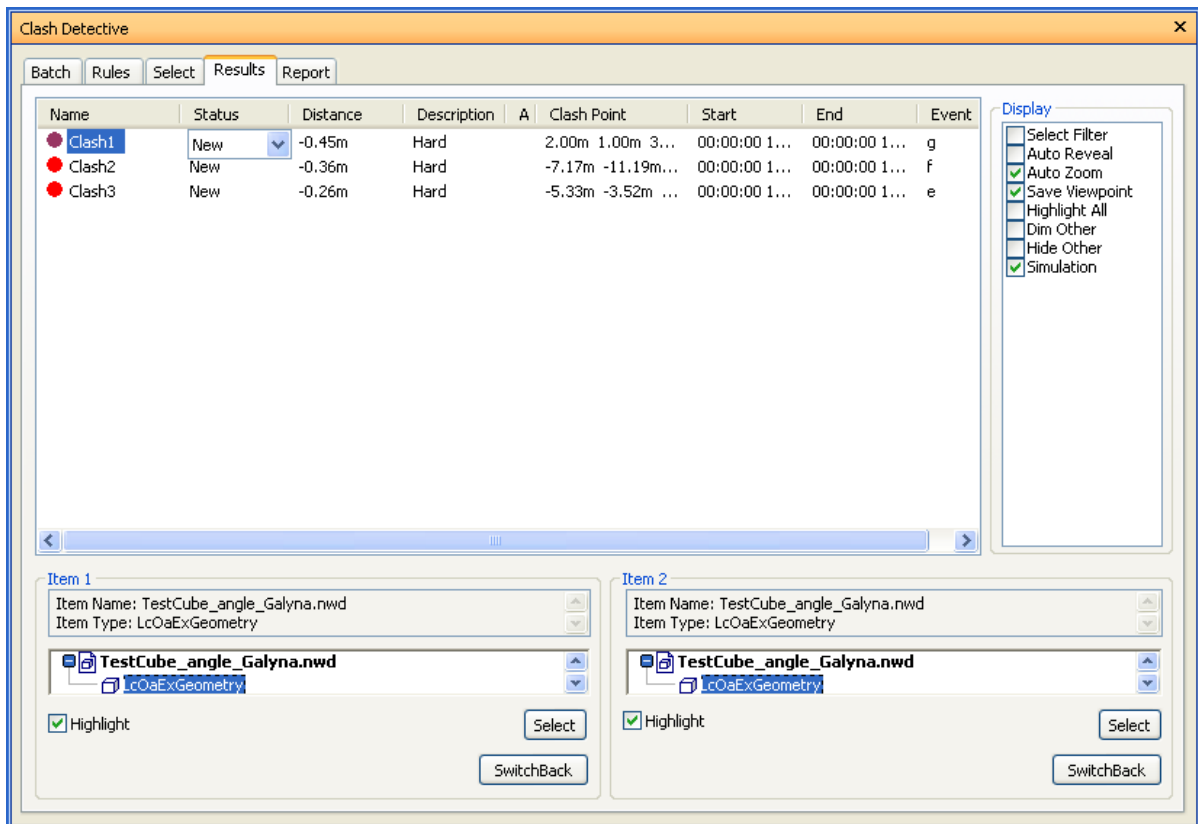

3. Select the **Simulation** check box in the **Display** area.
4. If the TimeLiner window is not already open, select **Tools > TimeLiner** from the menu bar, and click the **Simulation** tab.
5. Select a clash in the results view.
6. The simulation slider in the TimeLiner window is moved to the exact point at which the clash occurs. You can move the slider to investigate the events happening immediately before and after the clash.


7. Repeat this to review all found clashes.

Chapter 53. Reporting Clash Results

You can produce various Clash Detective reports. For example, you may need a report that will enable planners to adjust the project schedule in their 3rd party scheduling software.

To create a clash report:

1. In the Clash Detective window, run the desired test (individually, or as a batch). If you run a batch test, on the **Batch** tab, select the test you want to view the results for.
2. Click the **Report** tab.

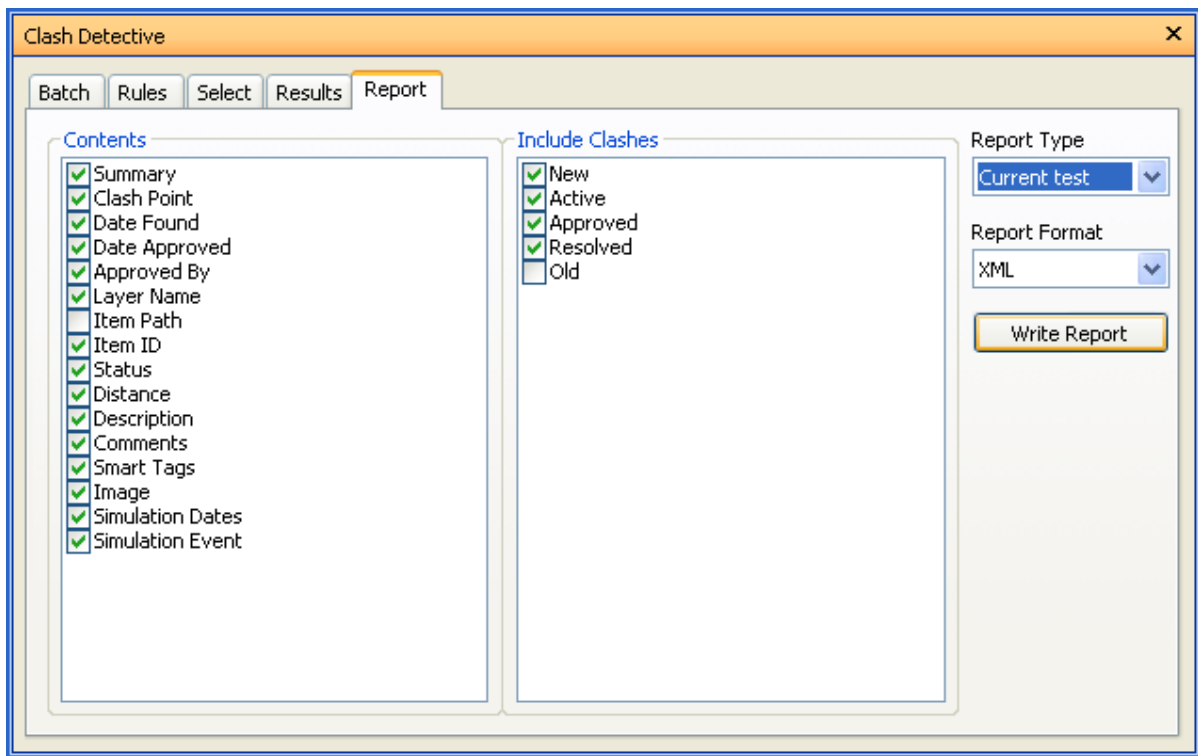

3. In the **Contents** field select all the information you want to appear in the report for each clash result. This can include **Smart Tag** properties relating to the items involved in the clash, how to find them in the standard selection tree from root to geometry, whether images or simulation information should be included, and so on.
4. In the **Include Clashes** field, select the check boxes for clashes you want to include in the report (based on clash status).
5. Select the type of report from the **Report Type** drop-down list:
 - **Current Test** creates a single file for the current test.
 - **All Tests (combined)** will create a single file containing all results from all tests.

- **All Tests (separate)** will create a separate file for each test containing all results.

6. Select the format of the report from the **Report Format** drop-down list:

- **XML** will create an .xml file containing all the clashes and a jpeg of their viewpoints alongside their details. On choosing this option, you will need to select or create a folder for the files and enter a name for the xml file.
- **HTML** will create an .html file containing all the clashes and a jpeg of their viewpoints alongside their details. On choosing this option, you will need to select or create a folder for the files and enter a name for the html file.

Note:

To customize the appearance or layout of the html file, you will need to edit the `clash_report_html_lang.xsl` file, where `lang` is a code representing your language. The installed file is located in the `stylesheets` subdirectory of the NavisWorks install directory. You can copy the edited file to the `stylesheets` subdirectory of any of the NavisWorks search directories. See “[Search Directories](#)” for more information.


- **Text** will create a .txt file containing all the clash details and the location of a jpeg of each clash. On choosing this option, you will need to select or create a folder for the files and enter a name for the txt file.
- **As viewpoints** will create a folder in the saved **Viewpoints** control bar, called the name of the test. Each clash is saved as a viewpoint in this folder, with a comment attached containing the clash result details.

7. Click the **Write Report** button to write the report.

Configuring Smart Tags for your report:

For time-based clashes, it may be helpful to include in the report additional information about each static package in the clash. This information can be set up in the **Options Editor**.

1. On the **Tools** menu, click **Global Options**.
2. Expand the **Interface** node in the **Options Editor** dialog box, expand the **Smart Tags** option, and click **Definitions**.

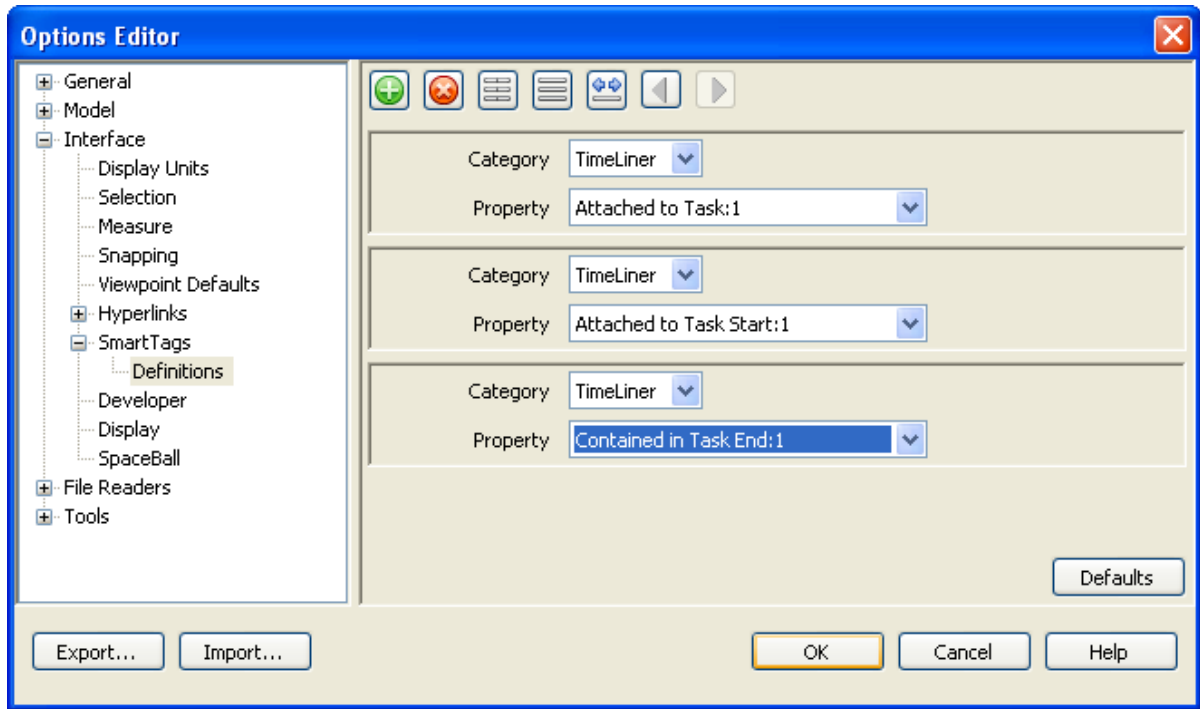

3. Select **TimeLiner** in the **Category** field.
4. Select **Attach to Task: 1** in the **Property** field.
5. Add several more definitions with **TimeLiner** selected in the **Category** field, and the desired properties in the **Property** field.
6. Click **OK** to save the changes. When you now select the **Smart Tags** check box in the **Contents** field on the **Report** tab of the Clash Detective window, your report will include the additional data you've specified.

Glossary

Glossary of technical terms relating to Autodesk NavisWorks Manage 2009.

Display Terminology

Average Frame Rate	This shows the current measured frame rate, averaged over the last second.
Average Frame Time	This shows the time taken to render the last frame.
Average Triangle Rate	This shows the rate at which triangles are being rendered and is a measure of how well your graphics card is working.
Culling	Culling is a process for determining items <i>not</i> to draw during the render of a scene. NavisWorks does a level of prioritized culling with the drop-out method of rendering interactive scenes, but you have a certain level of control over other aspects of culling such as backface, near and far planes.
Drop-Out	In order to maintain interactivity and guarantee a user-defined frame rate, NavisWorks only renders what it can in the fraction of a second it has. The remainder is "dropped out", or not rendered. However, NavisWorks prioritizes what is rendered and what is dropped out based on size of the item's bounding box, distance from viewer and size on screen, so only the less significant items in the scene are dropped out. Once navigation has ceased, the scene continues rendering until all items are visible.
Frame Rate	The frame rate is the number of frames per second (FPS) that are rendered in the main navigation window. NavisWorks guarantees a user-defined frame rate in order to maintain interactivity.

Export Terminology

These are terms specific to NavisWorks that are used in relation to exporting.

Codec	Codec stands for "COmpression-DECompression" and is a program that compresses and decompresses animations when creating and playing back .avi files. Codecs are installed independently of NavisWorks and are available when installed on your Windows™ system and the same codec that was used to create an .avi file is required to play it back.
-------	---

File Terminology

.nwc Cache Files

When any native CAD file is opened or appended, NavisWorks creates a cache file (.nwc) if the write cache option is set. When the file is next opened or appended, NavisWorks will read data from the corresponding cache file rather than re-converting the original data if the cache is newer than the original file. If the original file is altered, NavisWorks will re-create the cache file when it is next loaded. Cache files speed up access to commonly used files. They are particularly useful for models made up of many files of which only a few are changed between viewing sessions. Cache files can also be exported from some CAD applications where a native file reader is not available with NavisWorks. Cache options can be edited from the **Global Options** dialog box under the **Tools** menu.

.nwd Published Data Files

Published .nwd files are useful when wanting to take a snapshot of the model at a certain time. All the geometry and review information is saved into the .nwd file and cannot then be changed. Published .nwd files can also contain information about the file, as well as being able to be password protected and time-bombed for security. These files are also very small, compressing the CAD data by up to 80% of the original size.

Published .nwd files are useful when issuing models for viewing by others with the NavisWorks Freedom free viewer, as well as being appendable themselves into NavisWorks to build up a larger scene.

.nwf Review Files

Review files are useful when using the native CAD files appended into NavisWorks. They store the location of the appended files, along with any design reviews made in NavisWorks, such as comments, redlines, viewpoints, animations and so on.

If a group of files is appended into a NavisWorks scene, and saved as an .nwf file, then on re-opening this .nwf file later, once the original CAD files have been changed, the updated CAD files will be loaded into the scene for review.

External References

External references (sometimes called reference files or "XRefs") are shown in NavisWorks selection tree as an inserted group. NavisWorks looks for the externally referenced files in the same place as AutoCAD or MicroStation would.

If the **Unresolved XRef** dialog box is shown, then this link has somehow been broken and the referenced files need to be relocated to where AutoCAD or MicroStation would expect them to be.

If these XRefs are not important for the current session, then you can **Ignore** the reference and the file will load without that XRef inserted. Similarly, **Ignore All** will load the file without any unresolved XRefs.

You can also use the **DWG/DXF** and **DGN** options in the **Tools, Global Options** dialog to set whether external references are loaded or not, giving you more control over file appending into NavisWorks.

Faceting Factor

During an export from a CAD package to .nwc, or while NavisWorks is reading a native CAD file, decisions must be made as how a curved

surface is reduced to flat facets. For most applications and file formats, you have control over the level of faceting that takes place.


All items, no matter what their size, will use the same faceting factor and so have the same number of sides to curved entities. Therefore, you need to experiment a little with different values to account for the size that these items will appear on screen.

The faceting factor must be greater or equal to 0, where 0 results in the faceting factor being turned off. The default value is 1, if you double the value you get twice the number of facets, if you halve the value you get half as many facets. Larger faceting factors will result in more polygons to a model and larger NavisWorks files. There is little point having a large faceting factor if these curved entities are golf balls viewed from 200 yards!

For AutoCAD exports, the faceting factor is set from the NWCOPT command, MicroStation's faceting factor is set from **Options**, which is available from the NWCOUT export dialog, and the option to set the faceting factor on reading CAD files is found by choosing **Tools, Global Options**, and the relevant options tab.

Max Facet Deviation

Maximum facet deviation is used in conjunction with faceting factor to ensure that larger objects, with too large a deviation from the original, have additional facets added. If a difference greater than the entered value is found in a model it adds more facets. The values are measured in the model units.

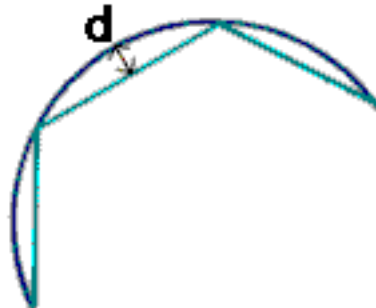

Where d is greater than the maximum faceting deviation value, more facets are added to the object.

If the max faceting deviation is set to 0, then this function is ignored and just the faceting factor is used.

Shape Merge Threshold

MicroStation shapes are polygons that can have 3 or more vertices. They're often used to model more complex objects which can waste memory. So, NavisWorks merges all shapes on the same level or in the same cell and with the same color into a "Shape Set" if these shapes have less than or equal to the number of vertices given by the *Shape Merge Threshold*.

Selection Terminology

These are terms specific to NavisWorks that are used in relation to selecting items.

Composite Objects

A composite object is a group of geometry that is considered a single object in the selection tree. For example, a window object might be made up of a frame and a pane. If a composite object, the window object would be both the frame and the pane and be selected all at once.

Instances

An instance is a single object, which is referred to several times within a model, for example a tree. This has the advantage of cutting down on file size by not unnecessarily repeating an object.

Item Name

The original CAD or NavisWorks assigned identifier. Any item can have a name and this name will usually come from the original CAD package that the model was created in.

Item Type

Every item in NavisWorks has a type. Examples of types are reference files, layers, instances (sometimes called inserts) and groups. Every CAD package also has a number of geometry types, for example, polygons, 3D Solids and so on.

Selection Resolution

The selection resolution is the level in the selection tree you start selecting at. You can cycle through items in the tree by holding down the shift key during a selection.

User Name and Internal Name

Each category and property name has two parts - a user visible string which is localized and an internal string which isn't and is mainly used by the API. By default when matching names in the Smart Tags and Find Items dialogs, both parts must be the same, but you can use the flags to match only on one part. You might use **ignore user name** if you wanted to match something irrespective of which localized version was being used.

Viewpoint Terminology

Angular Speed

The speed that the camera moves when turning right and left in any navigation mode.

Aspect Ratio



Aspect ratio is the proportion of x-axis to y-axis size. For example, in exporting a bitmap of a viewpoint, maintaining the aspect ratio would keep the proportion of the view even if the number of pixels was different.



Anti-aliasing

Anti-aliasing improves image quality by softening the jagged edge appearance of sharp lines. 2x to 64x refers to the extra number of frames that are required for the anti-aliasing process. The greater the number of frames, the finer the effect, (with the consequent increase in rendering

	time).
Camera-Centric	Navigation modes in which the camera is moved around the model (c.f. model-centric).
Field of View	The field of view of a camera is the angle that the camera can see. A large field of view will fit more into the view, but will look distorted and a small field of view will tend to make the view more flat, tending towards an orthographic view. There are two fields of view in NavisWorks - vertical and horizontal. Editing one will change the other and the two are related by the viewpoint's aspect ratio.
Focal Point	The focal point is the position in 3D space that the camera will rotate around or zoom into in examine, orbit, turntable and zoom modes.
Model-Centric	Navigation modes in which the model is moved in front of the camera (c.f. camera-centric).
Roll	The roll of the camera is its angle around the viewing axis. This cannot be edited in a navigation mode where the world up vector stays upright (walk, orbit and turntable).
Saved Attributes	Each viewpoint can optionally save the state of its hidden and "required" items, as well as any material (color and transparency) overrides. Then, on recalling the viewpoint, those same items are re-hidden, re-made required, and the materials reinstated. This can be useful in the creation of animations when dragging on viewpoints onto an empty animation.
Tilt Angle	This is indicated in the scene's units below (negative) or above (positive) horizontal (0) at the base of the tilt bar.
World Up Vector	The direction that NavisWorks considers "up" is called the "world-up vector". This is maintained in the walk, orbit and turntable modes.

Clash Detective Terminology

Clash Status	<p>Each clash has a current status associated with it and each status has a colored icon to identify them. This status is updated automatically by Clash Detective or can be manually overridden if desired. The statuses are as follows:</p> <ul style="list-style-type: none">•  New: a clash found for the first time in the current run of the test.•  Active: a clash found in a previous run of the test and not resolved.
--------------	---

-  **Approved:** a clash previously found and approved by someone.
-  **Resolved:** a clash found in a previous run of the test and not in the current run of the test. It is therefore assumed to be resolved.
- **Old:** any clash in an "old" test. The icons still have the code of the status from the previous run, but this is a reminder to say that the current test is old. See [Clash Test Status](#) for a description of old tests.

If the status is changed to **Approved**, Clash Detective takes the user currently logged on as the person who approved it.

Enabling hyperlinks will show clash results using the relevant status icon



Clash Test Status

A clash test can have one of 4 statuses:

- **New** indicates a clash test that has not yet been run with the current model.
- **Done** indicates a clash test that has been successfully run with the latest version of the model.
- **Old** indicates a clash test that has been altered in some way since being set up. This might include changing an option, or having loaded the latest revision of the model.
- **Partial** indicates a clash test that has been interrupted during execution. Results are available up to the point of interruption.

Clearance Clash

A clash in which the geometry of item 1 may or may not intersect that of item 2, but comes within a distance of less than the set tolerance.

Hard Clash

A clash in which the geometry of item 1 intersects that of item 2 by a distance of more than the set tolerance.

Duplicate Clash

A clash in which the geometry of item 1 is the same as that of item 2, located within a distance of between zero and the set tolerance. A tolerance of zero would therefore only detect duplicate geometry in exactly the same location.

Intersection Method

A standard **Hard** clash test type applies a **Normal Intersection Method**, which sets the clash test to check for intersections between any of the triangles defining the two items being tested (remember all NavisWorks geometry is composed of triangles). This may miss clashes between items where none of the triangles intersect. For example, two pipes that are exactly parallel and overlap each other slightly at their ends. The

pipes intersect, yet none of the triangles that define their geometry do and so this clash would be missed using the standard **Hard** clash test type. However, choosing **Hard (Conservative)** reports all pairs of items, which *might* clash. This may give false positives in the results, but it is a more thorough and safer clash detection method.

Severity

For hard clashes, the severity of a clash depends on the intersection of the two items intersecting. Hard clashes are recorded as a negative distance. The more negative the distance, the more severe the clash. Hard clash severity depends on whether the **Conservative** or **Normal Intersection Method** has been applied (see [Intersection Method](#) for more details on this). If **Normal**, the greatest penetration between a pair of triangles is measured. If **Conservative**, the greatest penetration of space around one item into the space around another is measured.

For clearance clashes, the severity depends on how close one item invades the distance required around the second. For example, an item coming within 3mm is more severe than an item coming within 5mm of the other.

For duplicate clashes, the severity depends on how close one item is to the other. When the distance between them is zero, it is more likely that this is duplicate geometry, whereas items that are further apart are more likely to be different objects and therefore have a lesser severity.

Tolerance

The **Tolerance** controls the severity of the clashes reported and the ability to filter out negligible clashes, which can be assumed to be worked around on site. **Tolerance** is used for Hard, Clearance and Duplicate types of clash test. Any clash found that is within this tolerance will be reported, whereas clashes outside of this tolerance will be ignored. So for **Hard** clashes, a clash with a severity of between zero and the tolerance value will be ignored, whereas for **Clearance** clashes, a clash with a severity of more than the tolerance value will be ignored as it is further away than the distance required. Similarly, a **Duplicate** clash with a severity of more than the tolerance value will be ignored as it is likely to be a separate, yet identical piece of geometry.

Index

Symbols

- 3D motion controller , 155
- 3dd files , 98
- 3DS files , 84
 - file reader options , 84

A

- animation , 222
- animation scenes
 - adding , 397
 - deleting , 397
- animation scripts
 - adding , 418
 - deleting , 418
- animations
 - creating , 224
 - cuts , 226
 - editing , 225
 - playing , 226
- Animator
 - animation scenes , 397
 - manual entry bar , 388
 - scene view , 384
 - timeline view , 386
 - toolbar , 382
 - window , 382
- ArchiCAD exporter , 125
 - options , 126
- asc files , 104
- ASCII Laser Scan files , 104
 - file reader options , 104
- auto exposure , 367
- AutoCAD
 - NavisWorks Navigator , 127
- AutoCAD exporter , 114
 - options , 116
- AutoPLANT files , 82
- AVEVA Review files , 106
- AVI
 - TimeLiner simulation , 483

B

- background color , 196
- background effects , 360
- batch
 - tab , 493

C

- caching , 75
- CAD previewing , 127
- camera

- orthographic , 146
- perspective , 146
- clash batches , 503
- Clash Detective
 - overview , 492
 - reports , 525
 - results , 519
 - rules , 508
 - selecting items , 513
- Clash Detective Terminology, 532
- collaborate , 257
 - accept call , 259
 - drive , 260
 - place call , 258
 - refresh , 260
- collision detection, 147
- commenting , 228
- comparing models , 293
- configure
 - appearance definitions , 445
 - start appearance , 446
 - tab , 444
 - task type , 445
- control bars , 275
- crouching, 149
- culling
 - options , 196

D

- database
 - links , 305, 307
- datatools , 305
 - (see also options)
- DGN files , 85
 - file reader options , 86
- directory
 - search , 292
- display
 - batch fill, 202
 - detail, 202
 - hardware acceleration, 201
 - heads up mode, 202
 - line size, 202
 - occlusion culling, 201
 - options , 201
 - parametric primitives, 202
 - point size, 202
 - show camera position, 202
 - show position, 202
 - snap point size, 202
 - transparency, 201
- DWF files , 80
 - file reader options , 81
- DWG files , 76
 - file reader options , 77
- DXF files , 76

E

- editing , 175
- emailing files, 54
- examining , 142
- exporters , 113
- exporting, 60
 - animation, 63
 - Autodesk DWF, 68
 - AVI, 63
 - Bitmap, 61
 - Bitmap sequence, 63
 - current search, 67
 - Google Earth KML, 68
 - image, 61
 - JPEG, 61
 - JPEG sequence, 63
 - PDS Tags, 66
 - Piranesi EPix, 61
 - PNG, 61
 - PNG sequence, 63
 - rendered animation , 332
 - rendered image , 329
 - search sets, 67
 - size control, 65
 - TimeLiner AVI , 483
 - viewpoints, 66
 - viewpoints report, 67

F

- Faro Scan files , 100
 - file reader options , 100
- file
 - exporters , 113
 - publishing , 129
- file management, 48
- files
 - appending, 50
 - deleting, 54
 - emailing, 54
 - merging, 51
 - new, 48
 - opening, 49
 - opening URL, 50
 - publishing, 52
 - reading , 72
 - refreshing, 49
 - saving, 51, 52
 - sending, 54
- finding , 168
 - comments , 172
 - items , 169
 - properties , 168
 - Quick Find , 171
- fls files , 100
- flying , 143

- focusing , 146
- foreground effects , 363
- frame rate , 199
 - guaranteed, 202
- Freedom , 134
- full lights , 192
- full render , 193
- full screen, 286
- fws files , 100

G

- gravity, 148

H

- hardware acceleration, 201
- head light , 189
 - options , 189
- help , 317
 - About , 322
 - license , 319
 - NavisWorks , 317
 - online , 318
 - System Info , 322
 - topics , 317
 - what's this? , 318
- hidden line render , 194
- hiding items , 178
 - unselected , 178
- holding objects , 175
- hyperlinks , 244
 - adding , 245
 - deleting , 249
 - displaying , 246
 - editing , 247
 - following , 247
 - options , 250

I

- IAM files , 95
- ifc files , 109, 109
- IFC files
 - file reader options , 110
- IGES files , 91
 - file reader options , 92
- importing, 55
 - PDS display sets, 56
 - PDS tags, 55
 - search, 58
 - search sets, 59
 - viewpoints, 57
- interactive selection , 159
- interface
 - smarrtags_definition, 255
 - standard hyperlinks, 251
 - user hyperlinks, 252
- Inventor files , 95

- file reader options , 95
- IPJ files , 95
- IPT files , 95
- iQmod files , 100
- iQscan files , 100
- iQwsp files , 100
- item properties
 - custom, 183
 - add property, 184
 - add tab, 183
 - delete property, 185
 - delete tab, 185
 - edit value, 184
 - rename property, 185
 - rename tab, 183
- overriding , 179
 - color , 179
 - hyperlinks , 181
 - transform, 180
 - transparency , 179
- resetting , 181, 182
 - hyperlinks , 181, 182
 - materials , 181
 - position , 181
 - transform , 181

L

- Leica Scan files , 101
 - file reader options , 102
- lighting , 188
 - full lights , 192
 - head light
 - (see also head light)
 - scene lights
 - (see also scene lights)
- lights, 344
 - advanced, 352
 - editing, 348
 - image based, 353
 - managing, 346
 - physically accurate, 352
 - positioning , 345
 - volumetric, 353
- lines , 195
- links
 - Asta , 476
 - edit , 448
 - Microsoft Project , 475
 - Microsoft Project 2000 , 475
 - MPX files , 475
 - Primavera , 475, 475
 - select , 448
 - tab , 442
- looking around , 140

M

- MAN files , 88
 - file reader options , 89
- materials , 333
 - advanced , 341
 - applying , 333
 - editing , 337
 - managing , 335
 - removing , 334
- Max exporter , 121
- measuring , 237
 - options , 243
 - tools , 238
- menu
 - File, 48
- MicroStation exporter , 119
 - options , 121
- multiple sections , 220

N

- navigating , 139
 - examining , 142
 - flying , 143
 - looking around , 140
 - modes , 139
 - orbiting , 142
 - panning , 142
 - spinning , 143
 - walking , 140
 - zooming , 141
 - zooming to a box , 141
- navigation tools , 144
- Navigator, NavisWorks , 127
- NavisWorks cache files , 74
- NavisWorks files , 73
- NavisWorks published files , 73
- NWC files , 74
- NWD files , 73
 - options, 73
- NWF files , 73

O

- object animation
 - model changes , 380
 - overview , 380
 - scope , 380
 - windows , 382
- options
 - developer, 291
 - file, 296
 - global, 298
 - location, 296
- Options , 484
- orbiting , 142
- orientation, 198
- orthographic camera , 146
- overriding item properties , 179

P

panning , 142
 PDS files , 90
 performance options, 202
 perspective camera , 146
 Piranesi EPix, 61
 points , 195
 Presenter
 additional archives , 327
 effects , 360
 lighting, 344
 materials , 333
 options , 204
 overview , 325
 rendering , 365
 rpc , 356
 rules , 372
 texture space , 369
 user archives , 327
 previewing , 127
 primitives , 194
 lines , 195
 points , 195
 snap points , 195
 surfaces , 194
 text , 196
 printing, 52
 current viewpoint, 52
 previewing, 53
 setup, 53
 profiles , 291
 PRP files , 85
 pts files , 101
 ptx files , 101
 publishing , 129

Q

quick find , 171
 quitting, 71

R

reading files , 72
 receiving 3D mail, 54
 redline tags, 235
 editing, 237
 finding, 236
 redlining , 233
 adding , 233
 tags, 235
 redo , 176
 render modes , 193
 full , 193
 hidden line , 194
 shaded , 193
 wireframe , 194

rendering
 animation , 332
 image , 329
 scenes , 329
 styles , 188
 rendering effects , 360
 rendering styles , 365
 predefined , 366
 report
 tab , 500
 repositioning objects, 241
 required items , 178
 results
 tab , 497
 Review files , 106
 reviewing
 commenting , 228
 Revit exporter , 116
 Riegl Scan files , 98
 file reader options , 99
 rotating objects, 242
 rpc , 356
 rules
 tab , 446, 494
 rules, Presenter , 372
 RVM files
 file reader options , 107

S

scene lights , 190
 options , 191
 scene statistics , 289
 Scriptor
 animation scripts , 418
 window , 389
 search directories , 292
 search sets , 162
 saving , 162
 searching
 (see also finding)
 sectioning , 218
 sections
 linking , 220
 select
 tab , 495
 selection commands , 161
 all, 161
 invert, 161
 multiple instances, 161
 none, 161
 same name, 162
 same property, 162
 same type, 162
 selection sets, 161
 selection options , 166
 selection resolution , 165
 first object, 165

geometry, 166
 last object, 165
 last unique, 165
 layer, 165
 model, 165
 selection sets , 162
 managing , 163
 recalling , 163
 saving , 162
 selection trees , 157
 shaded render , 193
 shadows
 casting shadows , 351
 soft, 352
 showing items , 182
 simulate
 settings , 450
 tab , 446
 Simulate
 Overlay , 456
 skp files , 111, 111
 SKP files
 file reader options , 112
 slices , 220
 smart tags , 254
 Smart Tags
 options , 254
 snap points , 195
 spaceball , 155
 spacemouse , 155
 spacetraveler , 155
 spinning , 143
 STEP files , 93
 file reader options , 94
 stereo stereoscopic, 288
 STL files , 105
 STL Stereolithography files , 105
 file reader options , 106
 straighten , 151
 surfaces , 194
 switchback , 260

T

tasks
 tab , 438
 text , 196
 texture space , 369
 third person
 avatar, 149
 thumbnails , 153
 tilt , 152
 TimeLiner
 options , 484
 overview , 437
 tools , 293
 comparing models , 293
 transform

file, 186
 transparency, 201
 txt files , 104

U

undo , 176
 options , 177
 units , 186, 290
 options , 290
 using
 Animator , 397
 Scripter , 418

V

view menu , 274
 view window
 splitting , 285
 viewing
 everything , 145
 selected items , 145
 viewpoint animations
 managing , 210
 viewpoints
 align X , 150
 align Y , 150
 align Z , 150
 control bar , 208
 editing , 211
 folders , 211
 managing , 210
 options , 214
 preset , 150
 recalling , 207
 saving , 207
 shortcut menu , 209
 Viz exporter , 121
 options , 122
 VRML world files , 96
 file reader options , 97

W

walking , 140
 window size, 287
 wireframe render , 194
 workspace toolbar , 284
 world up vector , 151
 WRL files , 96
 WRZ files , 96

Z

Z+F Scan files , 102
 file reader options , 103
 zfc files , 102
 zfs files , 102
 zooming , 141
 to a box , 141