

## Foreword

Thank you for choosing this mobile phone – you have made a wise choice, congratulations!

Our cellular phones are approved for GSM networks and meet stringent European standards. Your phone may be used internationally with various networks depending on your roaming arrangements with your service provider. To use this phone you must subscribe to a GSM service from a provider. We have included many features in this device but their function depends on the features available with your subscribed wireless network. Please contact your service provider for more information.

This User Manual is published by the manufacturer without any warranty.

Revisions and improvements resulting from typographical errors, inaccuracy of current information, and improvements to the device or software may be done without any prior notification, but will be incorporated into newer editions. More information and help on your phone may be available at the manufacturer's website.

The manufacturer reserves all rights to the contents herein. Copyrights and trade marks mentioned in this document remain with their respective owner. Reproduction, transfer, storage, or distribution in whole or in part of copyrighted materials without prior written permission is expressly prohibited. We strongly recommend you carefully read and understand this manual before using your phone in order to keep it under best conditions for your effective usage and utmost satisfaction.

## Knowing the Keys

### Key/Description

**Left soft key/Right soft key:** Implement the functions shown in the lower left/right hand corner.

**Call/Answer key (Green key):** Make and pick up call by SIM card. In idle mode, press this key to display recently call records.

**End/Power key (Red key):** End call or reject the incoming call. Long press to switch ON or OFF the phone. Directly return to the idle mode in other interfaces.

**Navigator keys:** To move left, right, up or down the cursor or browse the menu. In idle mode, press the Up/Down/Left/Right key to access a certain menu directly (as defined in the menu [Settings/Phone settings/Dedicated key]).

**OK key:** In idle mode, press to enter the main menu directly. In general situation, it is identical with the left soft key.

**AlphaNumeric keys:** These keys are used to dial and input text in edit interface.  
Long Press [2-9] to call the contact specified in the [Phonebook/Phonebook settings/Speed dial].

**\* key and # key:** In idle mode, long press the \* key to lock or unlock the keypad. Long press the # key to activate or deactivate the silent mode.

Recycling information requires you to obey the recycling rules mentioned locally for the type of waste.

The connected waste bin mark affixed to the product means that it belongs to the family of electrical and electronic equipment.

Open batteries must be deposited at the designated collection point.

To facilitate the recycling of packaging materials, please obey the recycling rules mentioned locally for the type of waste.

Environment

Recycling

## Accessories

Use only batteries, chargers, and accessories approved by the manufacturer with this device. Use of any other types will invalidate the warranty and may be dangerous. Check with your dealer for available accessories. You may opt to buy:

### Extra Battery

Extra batteries of various capacities are available from our company or through your dealer.

### Charger Plug, charger cable

Charger plug used to connect with the charger cable for charging on wall outlets. Also you can use the charger cable to connect with the other devices such as the personal computers to charge the phone. Charging time is about 2 to 3 hours. The charging condition is displayed on screen. You may use your phone while charging.

### Earphone

A mini, practical, hands-free device, you can use its button to answer and end calls. Some models may also come with a volume control knob.

Do not plug or unplug the earphone when connecting dialled or incoming calls.

Please to adjust the incoming call alert volume to the level you desire before you plug in the earphone.

## Understanding Display Icons

Icon	Description
	<b>Network signal level:</b> Shows the received signal strength. Fuller bar means stronger signal. Line1~line2 shows 1 or 2 on the top right corner.
	<b>SMS icon:</b> Shows on top of the display to indicate there are unread short text messages.
	<b>Missed call:</b> Shows when you have missed call(s).
	<b>Keypad lock:</b> Shows on top of the display when the keypad is locked.
	<b>Alarm:</b> Alarm has been set and activated.
	<b>Incoming Call Alert Mode:</b> Indicating current incoming call alert method. Ring only, Vibration only (or to activate the silent mode), Vibration and ring.
	Shows when the earphone is inserted.
	<b>Battery Power:</b> The fuller the fill the more the battery electric mass is.

## Preparing your phone

### Installing SIM card

- Keep SIM card out of children's touch.
- Any abrasion or taking could easily damage SIM card, so please be extremely careful when you insert, remove and preserve it.
- Please make sure that you have cut off the power supply and have taken out battery before you remove SIM card.

Find SIM card's groove in the back of the phone and slide it completely there.

During installation, please make sure the chip is facing downwards and pay attention to slot direction.

### Installing Memory card

This phone supports the memory card function. Please ensure the memory card is inserted correctly before using.

When the phone is shook, the memory card is likely to slide from its groove, so please do not warp and scratch the memory card, or make it contact static electricity, dust or immerse in water. Note that the phone doesn't support L-to-R disk function. You need stop the audio and image files in the memory card. You must copy the files to the memory card by the card reader or the other device.

- First, switch off the phone and remove the battery.
- Find memory card's groove in the back of the phone and slide it completely there.

- Please be careful when using the memory card, especially when inserting and removing it. Some memory cards must be formatted in PC before it is used for the first time.
- Please regularly backup information in the cards on other equipment when you use cards like T-flash!
- Improper use or other uncertain factors may cause the damage or loss to the content in the cards.

### Installing Battery

- Align the battery chip with the metallic contact point in battery jar, insert the battery until it is inserted into the battery jar.
- Slide battery cover into back of the phone until it is locked.

### Removing Battery

Switch Off the phone, push down the battery button and lift the back cover at the bottom side of the phone to remove, then lift the battery at the bottom side to remove.

- All settings or information stored in SIM card and the phone may be lost when the battery is removed.
- Please remove the battery when the phone is switched Off, because it may suffer from abnormality if you remove the battery when it is switched on.

### Charging Battery

Unfold dustproof soft gum of attachment mode on the bottom of the phone, insert one end of the charger, i.e., the charging plug into attachment mode and the other end into electrical outlet. Screen will display the charging sign. After charging is finished, just pull out the plug.

- When the battery current is low, the phone will give warning alert, and when it is too low, the phone will automatically switch Off. Do not keep the battery current low for a long time, otherwise the battery quality and life could be damaged.
- A pre-charge will occur when the battery voltage is too low, so it is normal that the phone may not give charging alert.
- To guarantee the phone's normal work, please use the designated charger.
- Do not directly remove the battery panel when charging.
- The phone must be put in a ventilated place with the ambient temperature of 0°C – 45°C when charging.

