

Security codes

-PIN Code
The PIN (Personal Identification Number) code protects your SIM card against unauthorized use. It is normally supplied with the SIM card package. Be careful while entering PIN code. 3 wrong tries in entering PIN code will block the SIM from use, requiring input of PUK code to unlock. Please contact your operator for further details.

-PIN2 Code
The PIN2 code is required when activating certain special features (such as call costs and load dialing). It is normally supplied with the SIM card package. Be careful while entering PIN2 code. 3 wrong tries in entering PIN2 code will block the SIM from use, requiring input of PUK2 code to unlock. Please contact your operator for further details.

-PUK Code
The PUK (Personal Unlocking Key) code is required to unlock a blocked PIN code. It is normally supplied with the SIM package. Otherwise contact your service provider for the code. Keep your PUK code in a safe place, do not throw it away. Contact your service provider if it is lost.

If your SIM is blocked, your phone will ask you to enter PUK code to unlock. You have 10 tries to enter the right PUK code, after which your SIM might be permanently blocked.

-Phone Password
The Phone Code is a 4 to 8 digit security code that protects unauthorized use of your phone.
The factory default code is "1234". Once activated, the phone will ask you to enter Phone code every time it is turned on. For your protection, change the default phone code as soon as possible.

Do not forget your phone password.

Using your Phone

Powering on/off

Press and hold the **Red key** to switch your phone on or off.
If there is no SIM card, SIM card is defective, or SIM card contact is loose, you will be prompted with a warning after powering on. Shut down and check your SIM and its installation.
If inserted GSM SIM card into the phone, meanwhile phone code and PIN code is turned on. When switched on, after entering the phone code and PIN code, the phone enter the standby mode by the current SIM.

After switched on, the phone will automatically search the network. If the phone detected authorized network, the screen will display the network name and signal strength. If no authorized network is found, the phone can only make emergency calls or use non-communications features.

Making a Call

In standby mode, press the corresponding numeric keys to enter the phone number that you want to dial, including necessary area codes. Press the **Right soft key (Clear)** to delete erroneous inputs, press the **Green key** to make a call when done to connect.

1. **Dialing Free/Land Line Extensions:** You cannot directly get through some fixed line extensions, and need to dial the telephone exchange or trunk line first and then long press [0] key to switch into **"PWW"** appears on the screen. And then dial the extension.

2. **Making an International Call:** To make an international call, long press [0] key to switch until the prefix symbol "+" of international call displays in screen.

3. **Dialing from Phonebook:** Enter the Phonebook via the menu to enter the phonebook list, use the Up/Down Navigator keys to scroll to the desired contact, or press the first letter of the name of the desired contact as saved in your phonebook for quick access to names beginning with the letter then scroll to the desired one.

4. **Dialing from Call history:** Enter the Call center (press the

Green key from standby or via the menu), use the Up/Down navigator keys to scroll to the desired contact.

Receiving a Call

When there is an incoming call, the phone will give corresponding alert. If your network supports caller ID, the screen will display caller's name or number (depending on whether there is information about the caller in your phonebook).

1. If function of [User profiles/Customize/Answer mode] is selected as [Cover answer], open the cover to answer the incoming call when cover is closed.

2. Press the **Green key** or press the Left soft key and confirm (Answer) to answer the incoming call when cover is opened.

3. If function of [User profiles/Customize/Answer mode] is selected as [Any key], press the any key to answer the incoming call except the Right soft key or the Red key.

4. If the earphone is plugged in and the function of [User profiles/Headset/Customize/Answer mode] is selected as [Auto], the incoming call will be automatically answered after ringing or vibrating for about 3 seconds.

5. If you do not want to answer an incoming call, press the **Red key** to reject it. You can also press the **Red key** to end a call.

6. During a call, you can press the Up/Down navigator key to adjust receiver volume.

7. You can contact emergency service numbers without the need of SIM card. Different networks uses different emergency numbers, please contact your network operator for details.

Using the In-call Menu

The feature provides some operations and features while you are in active call with a party or several parties. Some of which are network dependent, please inquire with your network operator or service provider of their availability.

Press the **Right soft key (H-Freeze/Hold)** to activate the pause/call function while on an activate call. Following the same procedure can deactivate the function.

Press the **Left soft key (Options)** key to enter the in-call Options menu while on an active call to choose among following functions (some options are only available under specific conditions):

- **Hold/Retrieve single call:** Hold the active call or resume a held call.
- **End single call:** End the current call.
- **New call:** Create a new call.
- **Phonebook:** To perform search; add; and other phone book operations.
- **Messages:** To access the inbox menu.
- **Sound recorder:** Record the current call.
- **Mute:** To turn muting on or off. If you need to speak confidentially with another person present without the other party hearing your conversations.
- **Sleep:** Suspend between the current call and the held call.
- **Conference*:** Enter the multi-line conference call status.
- **Transfer*:** To transfer a held call to another call.
- **DTMF:** Turn DTMF function on or off.
- **End all calls*:** End all calls.

Note: Menu options labeled with "*" could display only under specific circumstances. Such as: "Sleep" will display only in the coexistence of call and call suspension. As for activation of "Conference" function, you need to apply to corresponding network operator.

Menu Structure

- | | |
|----------------------|-------------------------------|
| 1. Call Records | 11. Organizer |
| 2. Movistar* | 11.1 Calendar |
| 3. Multimedia | 11.2 Tasks |
| 3.1 Camera | 11.3 Alarm |
| 3.2 Image viewer | 11.4 World clock |
| 3.3 Audio player | 11.5 Settings |
| 3.4 FM radio | 12.1 Phone settings |
| 3.5 Video player | 12.1.1 Time and date |
| 3.6 Sound recorder | 12.1.2 Schedule power on/off |
| 4. File manager | 12.1.3 Captions |
| 5. Phone Book | 12.1.4 PnP, input methods |
| 6. Messages | 12.1.5 Display |
| 6.1 SMS | 12.1.6 Shortcuts Setting |
| 6.1.1 Write message | 12.1.7 Dedicated key |
| 6.1.2 Inbox | 12.1.8 Flight mode |
| 6.1.3 Outbox | 12.1.9 MSN, settings |
| 6.1.4 Templates | 12.2 Call settings |
| 6.1.5 SMS settings | 12.3 Network settings |
| 6.2 MMS | 12.4 Security settings |
| 6.2.1 Write message | 12.4.1 SIM lock |
| 6.2.2 Inbox | 12.4.2 Phone lock |
| 6.2.3 Outbox | 12.4.3 Fixed dial |
| 6.2.4 Drafts | 12.4.4 Change password |
| 6.2.5 MMS settings | 12.5 Connectivity |
| 6.3 Voicemail server | 12.6 Restore factory settings |
| 6.4 Short message | 12.7 Sound effects |
| 7. Fun & Games | |
| 8. Services | |
| 9. User profiles | |
| 10. Extras | |
| 10.1 Calculator | |
| 10.2 Ebook reader | |

Call Record

This phone can record all answered calls, failed calls and missed calls as well as their call time. Only when related function is supported by network and phone is switched on and in network service area, it can record the answered and missed calls.

Call records may be accessed by pressing the Call/Answer key from standby or accessing through the menu.

All Dialed/Received/ Missed calls

Display list of all missed/dialed/received calls.
Click on the call records list, press the Call/Answer key to make a call, press the OK key to view the details. Press the Left soft key (Options) to make the following options: View, Call, Send text message, Send multimedia message, Save to Phonebook, Add to Blacklist, Edit before call, Delete, Delete all and Advanture.

Call times: View air time for the Last call time; Total sent; Total received; or Reset all time.

Text msg. counter: Check the number of sent and received SMS. The number here may not coincide with what is in the SMS menu when you send a long SMS, maybe it contains 4 separate messages, your phone had processed these concatenated messages when editing or reading for your convenience, thus it is counted as 4 in the SMS counter.

GPRS counter: Entering this menu, you can view data flow transmitted at GPRS network, including the last sent date, the last received date, sent data sum and received data sum, and you can also erase records in counter to erase all records.

Movistar*

This function cannot be used if the SIM card or the network operation company does not support this service. For more information, please contact the network operator.

Multimedia

Camera

Your phone is fitted with camera allows you to take photos whenever possible. You can store the pictures in photo or customize the wallpaper.

In photo preview interface, you can choose the following operations by pressing the Left soft key in a pop-up menu: Photos, Camera settings, Image settings, Effect settings, Storage and Restore default.

After finished, press the OK key to take photos, the photo will be stored in [Image viewer], you can press the Left soft key [Options] to select [Delete] to delete it and back the photo preview interface.

Image viewer

Entering this option, you can conveniently view photo list saved in album, press the OK key to view the selected photo, press the Left soft key [Options] to make the following operations: View, Browse style, Send, Use as, Rename, Delete, Sort by Delete all files and Storage.

Audio Player

Play the audio files saved in the memory card.
In playing interface, press the Up navigator key to select

"Play/Pause", press the Down navigator key to select "Stop", press the Left/Right navigator keys to select "previous/next" from the list.

You can press the * key and the # key to adjust playing volume. Press the Left soft key [List] to enter playing list interface, press the Left soft key [Options] to access the operation menu of MP3 player.

1. When play list is empty, it will have 'Add' and 'Settings' functions [Settings/List auto gen] is 'Off'.
2. When play list is not empty, you can make the following operations for each option: Play, Details, Add to ringtone, Refresh List and Settings.

• **Play:** Play the present music.

• **Details:** Display the name, format, capacity and playing time of the current music.

• **Add to ringtone:** Set the current audio as ring tone.

• **Refresh list:** Display when [Settings/List auto gen] is [On]. Otherwise the following three options display: [Add], Remove and Remove all, where you can add audio documents from multimedia list, remove one music document from list or all music documents from list.

• **Settings:** Set the MP3 player parameter.

FM radio

In FM radio interface, the Down navigator key to open/close FM radio function. The Up navigator key to open/close auto search function. If auto search function is opened, press the Left/Right navigator keys to forward/backward the channel auto search, unless a channel is found. If auto search function is closed, you can search the channel by manual, each press the Left/Right navigator keys can decrease/increase by 0.1MHz.

Use the * key and the # key to adjust the volume. Press the OK key or the Left soft key [Options] to access the following menu: Channel list, Manual input, Auto search, Settings (Activate or deactivate background play and loud speaker. When background play function is activate, you can listen the laser in standby or other menu interface.