

Voicemail server (supported by the network)

Set and call your voice mail number.
Your network may provide or support voice mailboxes. It is a service that lets your callers leave a voice message at a voice mailbox assigned to you for your later retrieval. You may have to apply for the service and secure the voice mailbox number from your operator. You can save up to two voice mail numbers following the above path. When editing, enter a name similarly as inputting name in adding a phone book record, then the voice mail access number using numeric keypad, press the Left soft key and confirm (Yes) to save.
When you need to access your voice mail, choose "Connect to voice" to dial.

Broadcast message (supported by the network)

Set and activate receive of local information broadcast from the network.
Choose whether you want to receive information broadcast from your network such as weather forecast, traffic update, news, and local service info.
Please contact your local network operator for more details.

Fun & Games

The phone provides one classic game.
For specific operations, please refer to the directions of the game.

Services

Internet surfing
Internet surfing using the phone is based on Wireless Application Protocol (WAP). WAP translates the internet language into WML and HTML languages understandable by your phone. It requires only the phone and a WAP server support to surf the net. Your network will need to support this feature for you to surf the internet using your phone.
• Homepage: You can visit your set homepage.
• Bookmarks: Access your saved or bookmarked sites, go to, edit a bookmark, delete the bookmark, delete all bookmarks, or bookmark the current page. Book marking means saving a page as favorite for easier access in the future.
• Recent Pages: Access the list of recently visited pages.
• Input address: Input a web address and visit the site.
• Service info: Access and manage your received web service messages.
• Settings: Configure WAP parameters, modify, view info, or add a new WAP profile settings here. After opening the GPRS Internet function, you need to make some settings to realize it. When phone leaves factory, it automatically selects parameters according to operator ID for domestic users and those in part countries and regions, so they do not have to make parameter settings, but users in other regions need to get relevant parameters from their operators to make parameter settings.

Data account
Your phone can use GPRS to access the internet depending on availability of service, please inquire with your network operator for settings and other details.

User profiles

Customize alert preferences.
You can customize your alert profiles for different events and environments. Follow the above path and scroll to either General, Meeting, Outdoor, Indoor or Headset, press the Left soft key [Options] and select 'Activate' to use the profile. Select 'Customize' to set the following:
• Tone settings: Set alert tones of Incoming call, Power on/off, Cover open/close, Message tone, Keypad tone.
• Volume: Use the Up and Down navigator keys to adjust ring tone and keypad tone volumes.
• Alert type: Scroll to Ring only, Vibration only, Vibration and ring, Vibration then ring and press the OK key to set alert type.
• Ring type: Scroll to Single (play ring tone once), Repeat (play ring tone repeatedly until you have acted on the event).
• Ascending (increasing volume) and press the OK key to set as ring mode.
• Extra tone: Scroll to Warning, Error, Camp On (registered to network), or Connect (call connecting) alert events and use the OK key or the Left soft key to toggle alert tone for the event on or off, press the Right soft key [Done] to confirm and press the Left soft key to save.

• Answer mode: If activated any key, you can answer incoming calls just by any key except the End/Power key and the Right soft key. If selected as Cover answer, open the cover to answer the incoming call when cover is closed.
The headset profile will automatically be activated if you plugged in the headset and deactivated and return to default profile when the headset is removed.
Another mode, the Silent Mode is available by pressing and holding the * key during standby.

Extra

Calculator
Your phone provides you a calculator with four basic functions, which facilitates simple calculations.
Note: The accuracy rate of calculator is 12 effective numbers, and calculations of over nine effective numbers will cause errors.
Ebook reader
You can read the *.TXT format document by this function after you have copied the TXT document into folder (file manager/Phone or Memory Card/Ebook).
Select any E-Book, press the OK key or the Left soft key [Options] to make the following operations: Open E-Book, Clean up bookmark, Global settings, Book Info, Delete, Delete all files, Sort by, Apply global settings and Help.

Organizer

Calendar
Select a calendar menu, and the screen will display the calendar of that month, with date of that day shown by a special color. Press the navigator keys to modify date and calendar in screen display will be correspondingly renewed. Select a date and press the OK key or the Left soft key [Options] and make the following options: View, View all, Add event, Delete event, Jump to date and Go to weekly/monthly view.

Tasks
With this function you could expediently manage all kinds of missions in work and life as well as arrange and record your future matters.
When your prearranged matter time is up, phone will give warning tone for reminding you to finish it. When the current schedule is empty, press the Left soft key [Add] to add scheduling, and first select the task type: Date, Call and Anniversary. After selecting one task type and confirm, specific operation steps are as follows (press the Up/Down navigator keys to select from the following options): Date, Time, Subject, Alarm, Repeat, Location and Priority. After editing above options, press the Right soft key [Done] and confirm saving.
Note: Phone occupies a certain amount of available memory for schedule. When phone gives alert that memory space is full, you have to delete some unwanted schedule records to create new ones. Only when planned matter's alert isn't set as [Off], its ring tone setting is effective otherwise there is no alert.

Alarm

This phone can set five alarm clocks at most, which will work in phone switched status.
When the alarm time is reached, press the Left soft key or the Red key to stop; press the Right soft key to snooze, the alarm will remind you again after snooze time if snooze is selected.
From alarm clock list displayed in alarm clock menu select an alarm clock and press the Left soft key [Edit] to enter its setting menu, and specific operation steps are as follows: Activate or deactivate the alarm, Time, Repeat, Alarm tone, Snooze and Alert type. After editing above options, press the Right soft key [Done] and confirm saving. Then alarm clock icon displays in idle mode status. And you can also follow the same procedure to set the alarm settings after modifying.

World clock

View the current time of major world cities.
Check the current time and date of different major cities in the world. When the function, a world map will be displayed, the current city is indicated by a longitude line on the x-axis and a latitude line on the y-axis, use the left and right navigator keys to move between the cities.
The city's current date and time with an icon indicating if it is day time or night are displayed under the map as you scroll to it.

Settings

Time settings
• Phone and date: Set the phone's current time and date and its format, home city.
• Schedule power on/off: Set the times when you want your phone to be off or on automatically. You can set up to four auto power on or off times. Use the up or down navigator keys to select between status, power on/off, and time fields, the left and right navigator keys to scroll between available choices, and the numeric keys to enter your desired time. The status must be enabling for the feature to function, the time range is from 00:00 to 23:59.
Tip: Check your phone before boarding a flight to assure the Power ON function is not activated. The manufacturer will not be responsible for any results because of this.

• Language: You can select the operation language of the phone.
• Pref. input methods: Set phone's default input method every time it enters edit mode according to your usage habit.
• Display: Personalize your display according to your preferences.
Wallpaper: Select wallpaper from the preset wallpaper (System) or file manager (User defined) for your phone; it is the background image on your standby screen. Select [Wallpaper Slide] option, you can select the folder which stores the pictures from preset wallpaper or file manager for your phone. If activated, the wallpaper can be switched automatically by pressing the End/Power key in idle mode. Screen saver: Select a screen saver for your phone, you must set the setting to 'On' and the waiting time must be shorter than the LCD Backlight time. When set, after a period of inactivity set by the waiting time, the display will go to the screen saver image. The screen saver image selection is similar to that of selecting your wallpaper.
Power on/off display: Customize your power on/off animation or image display using this option.
Show date and time/number: Press the OK key to turn show/off displaying current date and time/number on the idle screen.
• Shortcuts setting: Set six functions that you often want to use.

Scroll to a listed function and press the OK key or the Left soft key to select [Add], scroll to a desired function from the list of available functions, then use the Left/Right navigator keys to select 1-6 order and press the OK key to replace. You can also select [Edit, Delete, Delete all, Disable/Enable, Change order] option to set the function.
• Dedicated key: Set and customize functions of the four navigator keys when pressed in standby. The Up, Down, Left, Right Navigator keys may serve as shortcuts keys to access specific functions from standby, these function assignments may be altered here according to your usage preference and habits.

• Flight mode: Once flight mode is on, all of the radio communication related operations will be disabled.
• Misc. settings: Set the backlight of the time.

Call settings

• Caller ID (supported by the network): When the caller ID is switched on, the incoming call number will not be displayed on the receiver's screen during a call. When the caller ID is switched off, my number will be displayed on the receiver's screen.
• Call waiting (supported by the network): You can switch on and off checking for the call waiting function. Switch on call waiting, and you will hear warning alert tone if there is a new incoming call during a call, with a phone number of another call on the screen.
• Call divert (supported by the network): Divert your incoming calls to voicemail or other numbers. There are three diverting ways, each of which can be set to divert to voice Mail or to the other number, off or check status.
• Call barring: Restrict to answer or dial the call in any situation. You need to apply to the network operator for opening the international long-distance function and get network restricting code for barring setup. Any item of call barring can be set to on, off or check status.

• Line switching: Some SIM cards and operators may support two lines, this function will allow you to switch between the lines. It will be indicated by an icon on your standby screen status bar. Please inquire with your service provider for more details.
• Advance settings
Block list: Display list of rejected incoming calls. You can input the number directly with 20 at most. When a phone number has been added to the incoming call blacklist, it will be automatically rejected in any circumstances.
Auto redial: Switch on or off auto redialing function. When switched on, if the receiver does not answer in dialing, the