

# User Manual



Thank you for using our Mobile Phone, model: QB150. To guarantee the best performance of your phone, please read this manual carefully.

We reserve the right to make modification on print errors or update specifications without prior notice.

# Contents

<b>Safety Instructions</b> .....	<b>3</b>
<b>Phone controls</b> .....	<b>4</b>
<b>Preparation before use</b> .....	<b>5</b>
Installing the SIM card .....	5
Installing the Memory card .....	6
Installing the battery .....	6
Charging the battery .....	6
Power On/Off .....	7
Security number .....	7
<b>General features</b> .....	<b>8</b>
Make a call by dialing .....	8
Answer a call .....	8
To end a call conversation .....	9
Emergency calls .....	9
To make an international call .....	9
Call Voicemail .....	9
Adjusting the volume .....	9
Keypad lock .....	10
Standby mode .....	10
<b>Phone Menu</b> .....	<b>10</b>
<b>Phonebook</b> .....	<b>12</b>
Browse mode .....	12
Create contact .....	13
Speed dial .....	13
Copy .....	13
Delete all entries .....	14
Group .....	14
<b>Short Message</b> .....	<b>14</b>
Write New SMS .....	14
SMS Read view .....	14
Save message as draft .....	16
SMS Message settings .....	16
<b>Call Records</b> .....	<b>17</b>
Incoming calls .....	17
Outgoing calls .....	17
Missed calls .....	17










Call Duration .....	17
<b>Multimedia .....</b>	<b>18</b>
MP3 Player .....	18
FM Radio .....	19
USB Connect .....	20
<b>File Browser .....</b>	<b>20</b>
<b>Camera .....</b>	<b>21</b>
<b>Settings .....</b>	<b>22</b>
Phone settings .....	23
Display settings .....	23
Security settings .....	23
Clock settings .....	24
Keypad locking settings .....	24
Factory default .....	24
Network settings .....	24
Call settings .....	24
Shortcut settings .....	25
Profiles .....	25
<b>Tool .....</b>	<b>25</b>
Calculator .....	25
Calendar .....	26
Alarm .....	26
Torch .....	26
World clock .....	27
<b>Maintenance .....</b>	<b>27</b>
Battery instructions .....	27
Security Requirements .....	28
Traffic safety .....	28
Flight Safety .....	28
<b>FCC Part 15 Compliance .....</b>	<b>29</b>
<b>Specific Absorption Rate (SAR) information .....</b>	<b>30</b>



## Safety Instructions

These instructions are intended for the safe and effective use of your phone. Please follow these guidelines. Failure to do so might cause the product to malfunction, or even a potential hazard to your health.

	Do not use your mobile phone while driving. Park the car before making or answering a call.
	Turn off your phone when refueling. Do not use your phone near a gas station, flammable, or chemical substances. <b>Warning! It may explode when exposed in fire.</b>
	Do not use your phone during a flight. Wireless devices can cause interference in the aircraft.
	Do not use your phone near medical equipments like pacemaker without requesting permission from the physician or medical staff.
	Radio signals may affect the performance of your phone.
	Do not touch any exposed parts of the antenna while in a call, it will affect the call reception and waste battery power.
	Do not attempt to disassemble or modify the phone by yourself. Only authorized personnel should perform this service.
	When you connect accessories to your phone, please read the safety guidelines carefully. <b>Do not use unauthorized products.</b>
	Please use only the original accessories or products that are authorized by our company.
	Keep out of children's reach.

## Phone controls



Use the control buttons to do the following:



### **Navigations keys (Up/Down/Left/Right)**

- Press to move the selection/control up, down, left, or right during options programming.
- Use to move the cursor around the lcd screen.



### **MP3 key**

- Press to directly access the MP3 player home screen.



### **Left Soft key**

- Press to operate the function that is displayed on the bottom left side of the lcd screen.

**Talk key**

- Press to make or to receive a call.
- Press in standby mode to open the call lists.

**Write message key**

- Press to directly access the Write message home.

**Center key**

- Press in standby mode to access the phone home menu.
- Press to confirm a function during options programming.

**FM Radio key**

- Press to directly access the FM Radio home menu.

**Right Soft key**

- Press to operate the function that is displayed on the bottom right side of the lcd screen.

**Power/End key**

- Press to end an active call.
- Press to exit and return to standby mode.
- Power On/Off: Press and hold for 3 seconds to turn the phone On or Off.

**Camera key**

- Press to directly open the camera function in shoot mode.

## Preparation before use

### Installing the SIM card

Your phone will not work without the SIM card. The Subscriber Identity Module (SIM) card identifies you to the wireless network.

- 1 Remove the back cover by pulling the tab upward.
- 2 Insert the SIM card into the slot, with copper contacts facing down the pins as shown.




### Installing the Memory card

Your phone has a slot for a micro SD flash memory card.

Insert or remove the SD card:

- To insert an SD card, push the card into the slot, copper contacts facing down. Push the card gently in until it locks into place.
- To remove an already-installed SD card, pull out the card gently with your fingertip.

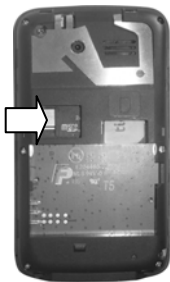

### Installing the battery

- 1 Insert the battery and make sure that the terminals on the battery aligns with the metal contacts on the phone.
- 2 Replace the back cover and push until the locking tabs clicks into place.

## Charging the battery

- 1 Connect the AC adapter plug to an electrical outlet and connect the other end to the USB port at the lower side of the phone.
- 2 When the power comes on, "Charging..." will be displayed on the LCD screen, and the charge indicator will start to scroll. It will only stop after the battery comes to full charge. If a battery is completely discharged, it may take a few minutes before the charge indicator appears on the LCD screen.
- 3 To fully charge when the phone is discharged, keep charging for at least three hours.
- 4 After the battery charge comes to full, disconnect the charger from phone and the socket of the alternating current.

### Warning!

- Do not take out the battery when it is being charged.
- To ensure the best performance, please use original accessories. Using other accessories may affect the performance of your mobile phone.
- Personal data and settings in your phone and SIM card might be lost when you take out the battery.

## Power ON/OFF

Press and hold **Power** key to turn on or power off your phone.

## Security number

### ■ PIN1

PIN (Personal Identity Number), is usually provided to a SIM card by the network operator. If you enter a wrong PIN three times in a row, it will be locked. You need to enter your PUK (Personal Unblocking Key) number to unlock. Please contact your network operator for more details.

### ■ PIN2

PIN2 is provided to some SIM. If you enter a wrong PIN three times in a row, it will be locked. You need to enter your PUK2 to unlock. Call your network operator for more details.

### ■ PUK

PUK (Personal Unblocking Key) is used to unblock the PIN. PUK is provided to a SIM card. If you lose or forget the password, contact your network operator.



## ■ Phone code

You can turn on the Phone code for your personal security and protects your phone against unauthorized use.

## Phone features

### Make a call by dialing

You have several choices for placing a call.

- |                                |   |
|--------------------------------|---|
| <b>Dial the number</b>         | In standby mode, enter a phone number, press <b>Delete</b> key to clear a wrong entry. Press <b>Talk</b> key to dial out the number.  |
| <b>Dial from contacts</b>      | Find the number you want to call in your phone book and then press <b>Talk</b> key to dial out the selected contact.  |
| <b>Dial from the call list</b> | Press <b>Talk</b> key in standby mode. The call lists will display starting from the most recently called number.<br><br>Press <b>Talk</b> key to automatically dial the displayed record, or press <b>Up</b> or <b>Down</b> key to scroll the list. Press <b>Talk</b> key to dial the selected record. |

### Answer a call

When a call comes in, phone will ring and/or vibrate according to your phone profile setting. It will show the caller's name if the network supports it. The caller's name display depends on whether you have saved it in your phonebook. Press **Talk** key, or press Option>**Accept** to answer.

In call options:

- |                                 |  |
|---------------------------------|--|
| <b>Mute</b>                     | Press <b>Mute/Unmute</b> key to activate or deactivate the microphone.   |
| <b>Turn on the Speakerphone</b> | Press Option> <b>Handsfree</b> to turn on the speakerphone . Press Option> <b>Handsfree off</b> to return to normal talk mode. |
| <b>Hold a call</b>              | Press Option> <b>Hold</b> to hold the call.  |



Options when receiving an incoming call:

Turn off the **Ringer**                      Press **Ringer off** to turn off the ringer.

**Reject** a call                      Press **End** key or press **Reject** to reject the call.

### To end a call conversation

When you have finished talking, press **End** key to end a call. You can also press **End** key if you want to terminate a call after you dialed.

### Emergency calls

You do not need to own a SIM card to make emergency calls. Emergency calls may differ from different network operators, please contact your network operator to get your local emergency call number.

### To make an international call

To make an international call, press U/+ key to input "+" on the screen. Enter the country code, area code (without the first zero), and the phone number:

For example; Enter **505** for Nicaragua, **44** for UK, **86** for China.

*Enter +8613798297223, when making an international call to China.*

### Call Voicemail

Before using this feature, first setup the **Voice mailbox number** in Menu>Phonebook>Extra number>**Voice mail**

- 1 Select **Listen to Voice Mail messages** in the Menu>Phonebook>Extra number>**Voice mail**
- 2 Your voicemail number is dialed.
- 3 When the call connects, follow the voice prompt to retrieve your voice mail message.

## Adjusting the volume

During a phone conversation, press **Left** or **Right** keys to adjust the volume of the earpiece or headset to your comfortable listening level.

## Keypad lock

To enable a permanent keypad lock setting, please see "Keypad Locking settings" on Settings>**Phone settings** menu.

## Standby mode

With phone in standby mode, you can access the following functions:

<b>Menu</b>	Press <b>Menu</b> key to open the phone menu.
<b>Call records</b>	Press <b>Call Records</b> key to directly access the Calls home menu.

# Phone Menu

## ■ Phonebook

- 1 Browse
- 2 Create
- 3 Advanced
  - 1 Speed dial
  - 2 Storage media
  - 2 Copy
  - 3 Delete all
- 4 Group
  - 1 Family
  - 2 Friends
  - 3 Office
  - 4 Others
- 5 Extra number
  - 1 Own number
  - 2 Voice mail
  - 3 Service dialing number
- 6 Storage status

## ■ Short Message

- 1 Write message
- 2 Inbox
- 3 Outbox
- 4 Draftbox

- 5 Templates
- 6 Delete all
- 7 Message setup
- 8 Broadcast message

## ■ Calls

- 1 Incoming Call
- 2 Outgoing Call
- 3 Missed Call
- 4 Call Duration

## ■ Games

## ■ Agenda

## ■ Tools

- 1 Calculator
- 2 Alarm
- 3 Torch

## ■ Multimedia

## ■ Camera

## ■ Settings

### 1 Phone settings

- 1 Display settings
  - 1 Backlight
  - 2 Wallpaper
  - 3 Greeting note
  - 4 Language
  - 5 Date Time display
- 2 Security settings
  - 1 Power on PIN1
  - 2 Change PIN2
  - 3 Phone code
- 3 Clock settings
  - 1 Date & Time setting
  - 2 Date display format
  - 3 Date separator
  - 4 Time display format
- 4 Keypad Locking Settings
- 5 Factory default

### 2 Network settings

- 1 Call waiting
- 2 Call forwarding
  - 1 Unconditional divert

- 2 Busy divert
- 3 No answer divert
- 4 No service divert
- 3 Call barring
  - 1 All Outgoing calls
  - 2 All Int'l call
  - 3 Int'l except to home
  - 4 All incoming call
  - 5 Incoming while roam
- 4 Network select mode
  - 1 Automatic selection
  - 2 Manual selection
- 3 Call settings
  - 1 Auto redial
  - 2 Any key answer
- 4 Shortcut settings
  - 1 Left key
  - 2 Right key
  - 3 Up key
  - 4 Down key
- 5 Profiles
  - 1 Standard
  - 2 Conference
  - 3 Outdoor
  - 4 Silent
  - 5 Customize

## ■ FM Radio

## ■ Applications

## ■ SIM Tool Kit

# Phonebook

To view the contacts on your phone, press Menu>**Phonebook** and then select **Browse**.

### **Browse mode**

A way to find a contact quickly is to press a letter key (**A~Z**) that corresponds to the first letter of a name, and the search will jump to the first entry beginning with that letter.

Press **Up** or **Down** key to scroll through the list.

Also, you can press **Option** to do the following:

<b>Call</b>	Calls the selected contact.
<b>Send SMS</b>	Sends SMS message to the selected contact.
<b>Detail/Edit</b>	Displays the stored information on the selected contact. You can then edit the displayed detail.
<b>Delete</b>	Deletes the selected record.
<b>Create</b>	Adds new phonebook record.
<b>Add to group</b>	To add the selected contact into the Group directory. Note: This function only applies to Contacts in the phone memory.
<b>Storage status</b>	To view the SIM and Phone memory status.

### Create a contact

- 1 In the Phonebook menu, select **Create**.
- 2 Press **Center** key and then start inputting the name.
- 3 Press **Option>Accept** key to confirm the name.
- 4 Press **Down** key once .
- 5 Press **Center** key and then start inputting the number.
- 6 Press **Option>Accept** key to confirm the number.
- 7 Press **Save** to store the record in the SIM phonebook.

### Speed dial

You can assign Speed dial numbers to the keys **2 ~ 9** and make a call via speed dialing.

- 1 In the Phonebook menu, select **Advanced>Speed dial**.
- 2 Select a Speed dial key location and then press **Accept**.
- 3 Select **Set/Change**.
- 4 Browse the phonebook record you wish to assign and then press **Accept**.

To make a Speed dial call;

In standby mode, press the Speed dial key memory location and then press **Call** Key to dial out the stored number.

## Copy

You can copy your contact list from SIM to Phone or vice versa.

- 1 In the Phonebook menu, select **Advanced**>**Copy**.
- 2 Select; **From SIM card to Phone** or **From Phone to SIM card**.
- 3 Press **Accept**.

## Delete all entries

- 1 In the Phonebook menu, select **Advanced**>**Delete all**.
- 2 Select; **Delete all phone entries** or **Delete all SIM entries**.
- 3 Press **Accept**.
- 4 In the prompt, press **Accept** again to confirm.

## Group

You can assign Phone contacts into Groups.

- 1 In the Phonebook menu, select **Groups**.
- 2 Select; **Family**, **Friends**, **Office**, or **Others**.
- 3 On the next menu, select;

**Group member:** To display the records stored under the selected group category. In the Option context menu, you can have an option to Add or Delete a member on the group.


**Rename:** To edit the group name.

**Alert tone:** To assign a distinctive tone on the group. When a member from the group calls in, the assigned ring tone will play.

## Short Message

### Write Message

Before you start, make sure that the number of the service center is set. The number is supplied by the service provider and is usually saved on the SIM card.

- 1 Press Menu and then select **Short Message**>**Write Message**. For quick access to the Write message menu, press Write message  key in standby mode.

- 2 Type your message. You will be able to track the number of characters that you are creating as you type. In the qwerty keys;
- Press **del** key to clear a wrong input, press and hold **del** key to clear the whole entry.
  - Press **Ctrl** key repeatedly to set the text input mode; *abc, Abc, ABC*.
  - Press **Caps** key to set the letter case input to *abc or ABC*.
  - Press **Alt** key to set the key input to either upper or lower character input reference as printed on the key.
  - Press **Enter** key to move the cursor to the next input line.
  - To input symbols, press **sym** key. Use the navigation keys to scroll to the desired character and then press **Accept** to input.
- 3 After completing your message, press **Accept** and select;
- Only send** - Sends the message by dialing the recipient number or search the recipient from the Contact list.
  - Only Save** - Stores the message in the Draftbox memory.
  - Send and save** - To send and then save the message in the Outbox memory.
  - Send to many** - To send the message to two or more recipients. You can add up to 5 recipients.

### SMS Read view

When receiving a text message, a message alert will be heard. Press **Select** and then **Accept** key to open the message.

**Reading a Text message:** Open the Short message > **Inbox** folder. The message lists will display starting from the Unread or most recently viewed. Select the message in the list and then press **Accept** key to read the content.



From a SMS message read view, press **Option** to do the following:

- |                       |   |
|-----------------------|---|
| <b>Delete</b>         | Deletes the current message.  |
| <b>Text Reply</b>     | Opens the Message write box to reply the message sender.  |
| <b>Forward</b>        | Forwards the message to other contact/s.  |
| <b>Edit</b>           | Opens the Message edit box. You can then edit the message draft before sending.                           |
| <b>Dial back</b>      | Calls the message sender.   |
| <b>Extract number</b> | Displays the phone number of the message sender. You can then call, or save the number to your phonebook. |

### Save message as draft

- 1 While composing, press Option>**Only save**.
- 2 To use a stored message in the draftbox menu, select the message from the list and then select **Edit**. After editing, you can then select the option to send it.

### SMS message settings

To set your SMS setting preferences, press Menu>Short Message>**Message setup**.

- |                        |  |
|------------------------|--|
| <b>Service Center</b>  | Select to view/change the service center Number. <b>Note:</b> The service center number is usually assigned by the SIM card provider.                      |
| <b>Protocol type</b>   | Sets the message protocol type to Text, Fax, or Email. The option is set to <b>Text</b> by default.  |
| <b>Validity Period</b> | Sets the time interval during which the SMS Center will try to send the message; <b>1 Hour, 12 Hours, 24 Hours, 1 Week, 1 Month, 3 Months, or Maximum.</b> |

<b>Status Report</b>	Set to <b>On</b> if you want the network to send a delivery report, otherwise set the option to <b>Off</b> .
<b>Reply Path</b>	Set to <b>On</b> if you want the network to send a reply back information to the receiver, otherwise set the option to <b>Off</b> .
<b>Storage media</b>	Sets the message storage memory location; <b>SIM</b> or <b>Phone preferred</b> .
<b>Storage status</b>	Displays the message memory condition of the phone and the SIM card.

## Call Records

Your phone records the Missed call, Incoming call, Outgoing call, and Call Duration.

### Incoming Call

Shows the answered incoming calls. It shows the telephone number or the name (if the caller's number is identified with the name and number that is stored in the Phonebook memory), date, and time of the call.

- 1 In the Call Records display, select **Incoming Call**.
- 2 The received call list will display, select the record you wish to view.
- 3 Press **Option** and then select;  
**Dial, Send SMS, Delete, Save Number, Delete all,**  
or **Show number**.

### Outgoing Call

Shows the list of phone numbers that you have most recently dialed or attempted to call.

- 1 In the Call Records display, select **Outgoing Call**.
- 2 The dialed call list will display, select the record you wish to view.
- 3 Press **Option** and then select;  
**Dial, Send SMS, Delete, Save Number, Delete all,**  
or **Show number**.

## Missed Call

Shows the latest record of unanswered incoming calls.

- 1 In the Call Records display, select **Missed Call**.
- 2 The missed call list will display, select the record you wish to view.
- 3 Press **Option** and then select; **Dial, Send SMS, Delete, Save Number, Delete all, or Show number**.

## Call duration

Shows the elapsed time of incoming calls, Outgoing calls, and the most recent last call.

- 1 In the Call Records display, select **Call duration**.
- 2 The LCD screen will display the **Outgoing Duration, Incoming Duration, and the Last Call Duration**.

Press **Reset** key to reset the time duration back to zero.

## Games

- 1 Press Menu>**Games**.
- 2 Select **Sokoban** or **Minesweeper**.
- 3 Press **Start** key to commence playing the selected game or press **Games help** to familiarize with the games control.

## Agenda

Press Menu>Agenda to view the calendar. In the calendar display, press **Up** key repeatedly to view the calendar date on previous months. Press **Down** key repeatedly to view the calendar date for coming months.

Calendar options

In the calendar display, press Options to select:

- Go to date** Set a specific date and then press **Accept**. The calendar will jump to display the date setting.

- Appointment view** To view the list of appointments available on the selected date.
- View all** View all stored appointments.
- Add Appointment** To add an appointment on the selected calendar date.
- Delete Appointment** To delete the stored appointment records. Select All or Overdue.

## Tool

### Calculator

The calculator allows you to carry out simple arithmetic operation (addition, subtraction, multiplication, and division).

To access the calculator menu;

- 1 Press Menu>Tools and then select **Calculator**.
- 2 Input the first number/s (not more than 9 digits).
- 3 Select the arithmetic operation.
  - +/**U** key: Addition
  - /**T** key : Subtraction
  - \*/**A** key : Multiplication
  - //**G** key : DivisionPress -/**Y** key to enter a negative sign number, and press ./**M** key to enter a decimal point.
- 4 Input the second number/s (not more than 9 digits).
- 5 Press **Equals** key to display the result.

### Alarm

You can set three alarm time options in your phone.

#### Setting the Alarm clock

- 1 Select; **Alarm 1, 2, or 3**.
- 2 Select **On**.
- 3 Enter the alarm time and then press **Accept**.
- 4 Select **One shot alarm** or **Weekly alarm**.

When choosing the Weekly alarm setting, press **Up** or **Down** arrow keys to select the day and then press **4/S** key to mark or unmark the selected day.

- 5 Press **Accept** key to confirm and save.

### Torch

Your phone is equipped with a torch.

- 1 Press Menu>Tools and then select **Torch**.
- 2 Select **On** to activate the Torch function or select **Off** to deactivate.

## Multimedia

Your phone can play MP3 songs. Press Menu>**Multimedia** to open the MP3 player home.

To add MP3 songs in the playlist;

- 1 In the Mp3 player home, press LSK>**Playlist**.
- 2 Press Option>**Add**.
- 3 Press **Open** to browse the MP3 files on the Memory card.
- 4 To add the selected song, press Option>**Mark** and then press **Accept**.

You can also use Option>**Mark all** and then press **Accept** to add more songs in one setting.

**Note: You can only mark a maximum of 10 songs to add in the playlist.**

- 5 Press Option>**Play** to start playing the MP3 song.

While a song is playing;

- > Press **Up** key to increase, or press **Down** key to decrease the sound volume level.
- > Press **Right** key to move the song selection forward. Press **Left** key to return to the previous.
- > Press **Center** key to pause/resume the play.
- > Press **RSK** key to stop the play.

Also, you can select the following by pressing the **Option** key;

**Playlist**      Access the song playlist.

**Play Mode**    Sets the MP3 play mode; **Single Once**,

## Repeat Single, List Once, Repeat List, or Random.

Browsing the Playlist;

- 1 Press **Option**>**Playlist**
- 2 Use **Up** or **Down** keys to browse the MP3 songs
- 3 Press **Option** to do the following:

<b>Add</b>	To add more songs in the Playlist.
<b>Delete</b>	Deletes the selected song.
<b>Delete all</b>	Deletes all the songs in the Playlist.
<b>Set as ring</b>	Sets the selected song as your incoming call ring tone.

## Camera

Your phone is equipped with a built-in camera. Press **Menu**>**Camera** to open the camera feature in capture mode. **Note:** *Make sure that you have installed a TF card prior to using the camera.*

To capture pictures;

- 1 Open the camera by pressing **Menu**>**Camera**.
- 2 The camera will initialize.
- 3 Aim at your view and then press **Capture** key to capture.
- 4 Press **Save** to stored the picture in the TF card "Photos" folder.
- 5 Press **Back** or **End** key to exit the capture mode.

To view the pictures;

- 1 Select **Applications** and then press **Option**>**Open**.
- 2 Browse the "Photos" folder and then press **Option**>**Open**.
- 3 Use **Up** or **Down** key to browse the files. Press **Option**>**Open** to view the picture. In the picture view mode, you can also press **Down** key to view the next picture or press **Up** key to view the previous.
- 4 Press **RSK** key to exit the view picture mode or press

**End** key to go to the standby mode.

## Settings

You can set the general functionality of your phone. Press **Menu** and then select **Settings**.

### Phone settings

Press **Menu**>**Setting** and then select **Phone settings** to set the following;

#### Display settings

**Backlight** Sets the back light behavior; **Always on**, **15 seconds on**, or **30 seconds on**.

**Wallpaper** Sets the wallpaper screen display; **Wallpaper 1** or **2**

**Greeting note** Select **Enable** if you want to add a greeting message display during start up.

**Language** Sets the operating language. The language list available on your phone depends on the model version.

**Date time display** Select **Enable** if you want to show the date and time in the standby mode.

#### Security settings

**Power on PIN1** Set to **On** to enable the PIN1 code entry of your SIM before the phone proceeds to turn on. You can also select **Change PIN1** to change the PIN1 code.

**Change PIN2** Changes the PIN2 code. This function is network dependent. Please call your SIM network to get more details.

**Phone code** Select **On**, **Off**, or **Change phone code**. The default phone code setting is **0000**.

## Clock settings

**Date & Time setting** Sets the time and date display of your phone.

**Date display format** Sets the display format of the date.

**Date separator** Sets the format to separate the date.

**Time display format** Sets the time format to either **12 hours** or **24 hours**.

## Keypad Locking Settings

Sets the keypad locking behavior; **Disable**, **30 Seconds**, or **60 Seconds**.

## Factory Default

Select to change the phone settings back to default.

## Network settings

**Call waiting** To display incoming calls when you are on a call. Select to Activate or Deactivate the call waiting function of your phone.

**Call forwarding** Diverts a call to another number. Selects how you want the Unconditional, when Busy, No answer, and No service call to be handled.

**Call barring** This feature is network dependent. Please call your SIM network to get more details. Select; All outgoing calls, All Int'l call, Int'l except to home, All incoming calls, or Incoming while roam.

**Network select mode** Select a wireless operator network via manual scanning, or select a network automatically.

## Call settings

**Auto redial** Set to Enable or Disable. When enabled, your phone will automatically redial the



number you called if the called party is busy or does not answer.

### **Any key answer**

Set to **Enable** or **Disable**. When enabled, you can answer a call by pressing any of the functional keys except **End** key.

### **Shortcut settings**

A quicker way to access a function is by using the shortcut setting of your phone. You can set the most often used functions in the shortcut keys to access them via touch of a button.

- 1 Press Menu>Setting and then select **Shortcut settings**.
- 2 Select the function key; **Left key, Right key, Up key, or Down key**.
- 3 Select the relevant function that you wish to assign on the selected key; **Short Message, STK, Phonebook, Games, Alarm, or Profiles**.

With the phone in standby mode, press the function key (Left, Right, Up, or Down) to quickly access the assigned function.

### **Profiles**

You can choose how your phone operate in different environment.

- 1 Press Menu>Setting and then select **Profiles**.
- 2 Select; **Standard, Conference, Outdoor, Silent, or Customize**.
- 3 Set the selected profile to; **Set as default, Personalize, or Reset**. When choosing reset, the profile settings will change back to default.

#### **Personalize Profile settings**

You can customize the following options;

**Ringtone:** Sets the call ringing tone. Browse the list to select your desired incoming call ring tone.

**SMS alert tone:** Sets the Message tone. Browse the list to select your desired SMS ring tone.

**Call alert:** Set to; **Ring once**, or **Repeat ring**.

**Ring volume:** Sets the volume level of the call ringing tone. Press **Left** or **Right** key to adjust the volume to your desired level.

**Key volume:** Sets the volume level of the key tone. Press **Left** or **Right** key to adjust the volume to your desired level.

**Vibrating alert:** Set to **On** to enable the vibrate mode, otherwise set to **Off**.

**Title:** Select to rename the selected profile.

**Alarm tone:** Sets the Alarm tone. Browse the list to select your desired Alarm tone.

## FM radio

**Note: Plug the earphone before using the FM radio.**

Press **Menu** and then select **FM Radio**.

FM Channel Auto Search;

- 1 In the FM radio controls menu, press Option>**Auto search**.
- 2 The display will prompt "Preset list?"
- 3 Press **Yes**. The phone will scan for active and clear FM radio channels and stores them in the Channel list memory.

FM Channel Set Frequency;

You can manually enter the band width frequency of your favorite FM radio station.

- 1 In the FM radio controls menu, press Option>**Set Frequency**.
- 2 Input the band width frequency.  
To save the channel into the Channel list, press Option>**Save Channel**.

Changing channels;

While tune in to a current FM channel, press **Center** key to change Channel, or

- 1 Press **Option**>**Channel** to display the Channel list.
- 2 Use **Up** or **Down** keys to browse the FM channel list.  
Press **Menu**>**Play** to open the selected channel.  
While in the Channel list, you can also press **Menu**>  
**Delete Channel** to delete the selected channel.

Play FM radio in the Loudspeaker;

While tune in to a current FM channel, press **Option**>**Set Loudspeaker** and then select **On**.

Play FM radio in the Background;

While tune in to a current FM channel, press **Option**>**Play in background** and then select **On**.

Adjusting the receiver volume;

While tune in to a current FM channel, press **+ / U** key to increase, or press **- / T** key to decrease the sound volume.

To turn off the Radio;

In the FM radio menu, press **Option**>**Radio Switch off**.

## Applications

- 1 Press **Menu**>**Application**.
- 2 Select;

<b>Open</b>	To browse the Memory card content.
<b>Details</b>	Displays the Storage memory condition.
<b>Format</b>	To format the Memory card.

### Managing a Folder

- 1 In the File browser menu, press **Up** or **Down** key to access the folders.
- 2 Press **Option** to do the following:

<b>Open</b>	To access the content of the selected folder.
<b>Rename</b>	Edits the name of the selected folder.
<b>Delete</b>	Deletes the selected folder.

<b>Delete All</b>	Deletes all of the folder and/or files in the selected memory location.
<b>Mark</b>	Marks the selected folder.
<b>Mark All</b>	Marks all of the folder and/or files in the selected memory location. You can then press <b>Option</b> to delete the marked folders and/or files.
<b>Details</b>	Displays the folder details.

## SIM Tool Kit

This menu option allows you to access a range of SMS based services that helps you do more. Simply select the desired service from the service menu. To get the list of services available for your handset or for assistance on any of these services, please call your SIM network. There are different menus according to different SIM cards.

## Maintenance

### Battery instructions

When the phone automatically turns off or indicates the alarm information of power shortage, please charge the battery in time.

- For the first few times, please charge the battery fully.
- When not in use, please separate the battery with power supply. Overcharging will shorten the life of the battery.
- Do not expose your products to extreme high or low temperatures. Do not expose the battery to temperature above +40 °C.
- Do not use damaged battery.
- Do not expose your mobile phone to direct sunlight or in hot areas. High temperatures can shorten the life of electronic devices.
- Do not expose the battery into fire or throw it away. Return the worn-out battery to the provider or put it in the appointed recycle place. Do not throw it in familial rubbish.

Follow these guidelines to protect your product:

- keep the product out of children's reach
- Keep your product dry. Do not expose it to liquid or moisture.

- Do not short-circuit the battery, as this can cause excessive heat to bring about fire.
- Do not expose your mobile phone to direct sunlight or in hot areas. High temperatures can shorten the life of electronic devices.
- Do not attempt to disassemble the phone and battery by yourself.
- Prevent any liquid from leaking into your phone.
- Please only use original accessories. Using any unauthorized accessory may affect your mobile phone's performance.

### **Security Requirements**

Before making or answering a call, you should pay attention to the local laws about the use of wireless mobile phones and take them into account in practical use.

### **Traffic safety**

- Pay attention to traffic safety. Do not use your mobile phone while driving. Park before making or answering a call.
- Without enough shield, some electronic devices in the car might interfere to the radio frequency of your phone.
- If you have to use your phone in a car, make sure it has an antenna.
- Only qualified technician can install your phone into your automobile.

### **Flight Safety**

Please turn off or set your GSM mobile phone to **Flight** profile before the airplane takes off or landing. This is in order to protect the airplane's communication system from interference, it is never allowed to use mobile phone when it is in flight. Using mobile phone before the plane taking off or landing should get aircrew's permission according to safety regulations.

Do not use your phone where a potentially dangerous atmosphere exists.

Operating of mobile phone may interfere with medical devices like hearing aids and pacemakers.

Please strictly observe with the restrictions on the use of wireless devices.

### **Warning!**

- 1 The performance of the phone depends on your local network operator's card and how you actually use it.**
- 2 We are not responsible for any damage/s due to inappropriate use.**
- 3 We reserve the right to make any modifications on this manual without prior notice.**

## **FCC Part 15 Compliance**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:



- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Specific Absorption Rate (SAR) information

This wireless phone meets the government's requirements for exposure to radio waves.

The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/Kg.