

B Mobile HK Limited

QS810 Use Manual

Content

1	General Information.....	4
2	Your phone.....	8
3	Getting started.....	10
4	Input method.....	17
5	Using the Menus.....	19
5.1	Messaging.....	19
5.2	Phonebook.....	26
5.3	Calendar.....	27
5.4	Call history.....	28
5.5	Bluetooth.....	28
5.6	Services.....	29
5.7	Multimedia.....	30

Video recorder	30
5.8 Camera.....	32
5.9 Video recorder.....	32
5.10 FM radio	32
5.11 Audio Player	32
5.12 Java	32
5.13 Alarm	33
5.14 Task s	33
5.15 Calculator.....	33
5.16 File manager	33
5.17 Settings	34
5.18 Organizer	39
5.19 User Profiles	41
5.20 Games	42
5.21 FaceBook.....	42
5.22 MSN.....	42
5.23 Yahoo	43
5.24 Twitter.....	43

5.25	Lock	43
5.26	Power off.....	43
6	Appendix.....	43

1 General Information

Profile

Please read this pamphlet carefully in order to make your phone in perfect condition.

Perfectly combining humanized design and fine art, this mobile phone provides a streamlined outlook, comfortable hand-feeling, pleasant sounds and MP3 player which bring convenience and fun to your work.

Our company may change this mobile phone without prior written notice and reserves the final right to interpret the performance of this mobile phone.

Due to different software and network operators, display on your phone may be different, refer to your phone for details.

Safety Information

If your phone has lost or been stolen, notify the telecommunication office the SIM card is disabled (network support is required). This can avoid economic loss caused by unauthorized use.

Please take measures as following to avoid your phone being unauthorized use:

- Set PIN code of SIM card
- Set phone password

Safety warning and Attentions

Safety warning

ROAD SAFETY COMES FIRST

Do not use a hand-held phone while driving. Use hands-free fittings when calls are unavoidable while

driving. In some countries, dialing or receiving calls while driving is illegal!

SWITCH OFF IN AIRCRAFT

Wireless devices can cause interference in aircraft. Using a mobile phone in flight is illegal and risky.

Please make sure that your mobile phone is powered off in flight.

SWITCH OFF BEFORE ENTERING RISKY AREAS

Strictly observe the relevant laws, codes, and regulations on the use of mobile phones in risky areas. Turn off your mobile phone before entering a place susceptible to explosion, such as an oil station, oil tank, chemical plant or a place where a blasting process is under way.

OBSERVE ALL SPECIAL REGULATIONS

Follow any special regulations in force in any area such as hospitals and always switch off your phone whenever it is forbidden to use it or, when it may cause interference or danger. Properly use your mobile phone near medical apparatuses, such as pacemakers, hearing aids and some other electronic medical devices, as it may cause interference to such apparatuses.

INTERFERENCE

The conversation quality of any mobile phone may be affected by radio interference. An antenna is built inside the mobile phone and located below the microphone. Do not touch the antenna area during a conversation, lest that the conversation quality deteriorate.

QUALIFIED SERVICE

Only qualified personnel may install or repair phone equipment. Installing or repairing the mobile phone on your own may bring great danger and violates the warranty rules.

ACCESSORIES AND BATTERIES

Use only approved accessories and batteries.

USE SENSIBLY

Use only in a normal and proper manner.

EMERGENCY CALLS

Ensure the phone is switched on and in service, enter the emergency number, e.g. 112, then press the Dial key. Give your location and state your situation briefly. Do not end the call until told to do so.

Note: Just like all other mobile phones, this mobile phone does not necessarily support all the features described in this manual due to network or radio transmission problems. Some networks even do not support the emergency call service. Therefore, do not rely solely on the mobile phone for critical communications such as first aid. Please consult the local network operator.

Precautions

This mobile phone is well designed with fine art. Please exercise special care when using it. The following suggestions will help your mobile phone survive the warranty period and extend its service life:

Keep the mobile phone and all its fittings beyond children's reach.

Keep the mobile phone dry. Keep away from rain, moisture, liquid or other substances that may corrode electronic circuits.

Do not use or store the mobile phone in dusty places, lest that active parts of the mobile phone be damaged.

Do not store the mobile phone in a high-temperature place. High temperature will shorten the life of electronic circuits and damage the battery and some plastic parts.

Do not store the mobile phone in a chilly place. Otherwise, moistures will be formed inside the mobile

phone to damage electronic circuits when the mobile phone is moved to a constant temperature place. Do not throw, knock or shock the mobile phone, as that will destroy the internal circuits and high-precision components of the mobile phone.

2 Your phone

Phone overview

Functions of Keys

The mobile phone provides the following keys:

Dial key

Press it to originate a call on SIM card 1/2/by entering the called number or selecting a contact from the phonebook; or press it to receive an incoming call; or press it in standby state to show the latest call records.

End key

Press it to end a call being dialed or end an ongoing call; or press it to exit the menu and return to the standby state; or hold it for two or three seconds to power on/off the mobile phone.

Left and right soft key

The bottom line on the screen displays the functions of the Left and Right soft key.

Cancel key

Press it to delete a character before cursor.

OK key

Press this key to confirm a selection.

Direction key

Press them to scroll the options when browsing a function list. In edit state, press direction keys to navigate.

Delete key

Press it to delete a character before cursor.

Linefeed

This key helps to switch to another line when the interface is in the edit interface.

MP3 shortcut key

Press this key in the idle screen to access to audio player interface.

Message shortcut key

Press this key in the interface to enter writing message interface.


Space key

Press it in the edit interface to get a blank.

Sym key

Press it in the edit interface to input a symbol.

Lock: press right soft key plus the lock key to unlock keypad.

 key (2) : Press it to switch between input methods.

Up arrow key: Press it in the edit interface to switch to symbol input on the keypad.

Number keys, letters, * key and # key

Press number keys 1 through 9 in input or edit state to input numbers and characters; or press a number key after entering a menu to choose the corresponding menu item; or hold any of number keys 2 through 9 for over two seconds in standby state to fast dial the corresponding telephone number in the speed-dial number list (need to set in advance).

Note: Holding number key 1 on standby will call the voice mailbox service center. The voice mailbox center number,

however, must be preset.

Press letter keys in the edit interface to input corresponding letters.

The # key and the * key represent different functions in different states or different function menus.

Hold the # key up to 2s in standby state to activate or deactivate the silent mode.

3 Getting started

Installing the SIM Cards and the Battery

An SIM card carries useful information, including your mobile phone number, PIN (Personal Identification Number), PIN2, PUK (PIN Unlocking Key), PUK2 (PIN2 Unlocking Key), IMSI (International Mobile Subscriber Identity), network information, contacts data, and short messages data.

Note: After powering off your mobile phone, wait for a few seconds before removing or inserting an SIM card.

Exercise caution when operating an SIM card, as friction or bending will damage the SIM card.

Properly keep the mobile phone and its fittings such as the SIM cards beyond children's reach.

Installation

Hold the End key for a while to power off the mobile phone

Push the back cover above the battery and remove it.

Pull the left battery buckle outward and then lift the battery away.

Insert the SIM card into the SIM card slot lightly with the corner cutting of the card aligning to the notch of the slot and the gold plate of the card facing downward, till the SIM card cannot be further pushed in.

Aim the positive pole and negative pole of the battery at the battery connector of the mobile phone, and press the left of the battery to install the battery into the battery tank.

Using code

The mobile phone and the SIM cards support sorts of passwords, in order to prevent the phone and the SIM cards from being misused. When you are prompted to input any of the codes mentioned below, just input the correct code and then press the OK key. If you input a wrong code, press the Right soft key to clear it and then input the correct code.

Phone lock code

The phone lock code may be set to prevent your mobile phone from being misused. In general, this code is provided along with the mobile phone by the manufacturer. The initial phone lock code is set to 1122 by the manufacturer. If the phone lock code is set, you need to input the phone lock code when powering on the mobile phone.

PIN

The PIN (Personal identification number, 4 to 8 digits) code prevents your SIM card from being used by unauthorized people. In general, the PIN is supplied with SIM card by the network operator. If PIN check is enabled, you need to input the PIN each time when you power on your mobile phone. The SIM card will be locked if you input wrong PIN code for three times.

Unlocking methods as follows:

- Input the correct PUK according to the screen tips to unlock the SIM card.
- Then input the new PIN and press the OK key.
- Input the new PIN again and then press the OK key.
- If the input PUK is correct, the SIM card will be unlocked and the PIN will be reset.

Note: The SIM card will be locked if you input wrong PIN code for three times. To unlock the SIM card,

you need to input the PUK. In general, the PUK can be obtained from the network operator.

PUK

The PUK code (Personal Unlocking Key, 8digits) is required to change a blocked PIN. It is supplied with SIM card. If not, contact your network operator. If you input wrong PUK code for 10 times, SIM card will be invalid. Please contact the network operator to replace the SIM card.

PIN2

The PIN2 code (4 to 8 digits), supplied with SIM card, is required to access some functions such as “call costs setup” and “fixed dialing setup”. Please contact the network operator to verify whether your SIM card supports these functions. If you input wrong PIN2 for three times, the PIN2 will be locked. To unlock the PIN2, input the correct PUK2 as follows:

- Input the correct PUK2 according to the screen prompt to unlock the PIN2.
- Then input the new PIN2 and press the OK key.
- Input the new PIN2 again and then press the OK key.

PUK2

The PUK2 code (Personal Unlocking Key2, 8digits), supplied with SIM card by the vendor. If not, contact the network operator. If you input wrong PUK2 for ten times, the PIN2 will be invalid and the corresponding functions cannot be used. Please contact the network operator to replace the SIM card.

Barring code

A barring code is required for setting the call barring function. You can obtain this code from the network operator to set the call barring function.

Installing T-Flash Card

The T-Flash card is a pluggable mobile storage card inside the mobile phone.

To install the T-Flash card, open its latch, place its indented side downward, insert the card into the card slot, and then close the latch.

To remove the T-flash card, open its latch and slightly press the card inward. The card will automatically pop out. Close the latch.

Note:

1. The mobile phone cannot automatically identify the T-flash card being inserted when the mobile phone is powered on. You must power off the mobile phone and then power it on, so that the phone can identify the T-Flash card.

2. The T-Flash card is a miniature object. Keep it out of the reach of children for fear that children swallow it!

Charging the Battery

The lithium battery delivered with the mobile phone can be put into use immediately after being unpacked. A new battery will have maximum performance after the first three full charge/discharge cycles.

Battery level indication:

Your mobile phone can monitor and display the battery state.

Normally the remaining energy of the battery is indicated by the battery level icon at the upper right corner of the display screen.

When the battery energy is insufficient, the mobile phone prompts "Battery low". If you have set an alert tone, an alert tone will be given off when the battery level is too low.

A charging animation appears when the battery is being charged. When the charging is complete, the animation disappears.

Using a travel adapter:

Install the battery into the mobile phone before charging the battery.

Connect the adapter of the travel charger with the charging slot in the mobile phone. Ensure that the adapter is fully inserted.

Insert the plug of the travel charger to an appropriate power outlet.

During the charging, the battery level grids in the battery icon keep flickering till the battery is fully charged.

It is normal of the battery to become hot during the charging period.

The battery icon does no longer flicker when the charging process ends.

Note:Ensure that the plug of the charger, the plug of the earphone, and the plug of the USB cable are inserted in the right direction. Inserting them in a wrong direction may cause charging failure or other problems.

Before the charging, ensure that the standard voltage and frequency of the local mains supply match the rated voltage and power of the travel charger.

Using the Battery

The performance of a battery is subject to multiple factors: radio network configuration, signal strength, ambient temperature, chosen functions or settings, phone fittings, and the voice, data or other application mode you choose to use.

To guarantee the optimal performance of your battery, please stick to the following rules:

Use only the battery provided by the vendor. Otherwise, damages or even injuries could be caused during the charging.

Power off the mobile phone before removing the battery.

The charging process lasts a longer time for a new battery or a battery not in use for long. If the

battery voltage is too low to enable the mobile phone to be powered on, charge the battery for a longer time. In this case, the battery icon does not flicker until a long time after the battery enters the charge status.

During the charging, ensure the battery is placed in a room temperature environment or in an environment close to room temperature.

Immediately stop using the battery if the battery produces odor, overheats, cracks, distorts or has other damage, or if the electrolyte leaks.

The battery wears out with use. A longer charging time is required as the battery is put into use for a long time. If the total conversation duration decreases but the charging time increases even though the battery is properly charged, purchase a standard battery from the OEM or use a battery approved by our company. Using any poor-quality fittings will cause harm to your mobile phone or even incur danger!

Note: To guarantee your personal safety and protect the environment, do not litter the battery! Return the old battery to the mobile phone manufacturer or place it in specified battery reclamation areas. Do not litter any battery with other rubbish.

Warning: Short-circuits of the battery may cause explosion, fire, personal injury or other severe consequences!

Powering On/Off the Mobile Phone

Hold the End key for a while to power on the mobile phone. A power-on animation appears on the display screen.

Input the phone lock code and press the OK key if the mobile phone prompts you to input the phone lock code. The original code is 1122.

Input the PIN and press the OK key if the mobile phone prompts you to input the PIN. The PIN is provided

by the network operator for new opening SIM card.

Enter the standby interface.

To power off the mobile phone, hold the End key for a while.

Linking to the Network

After the SIM card and the mobile phone are successfully unlocked, the mobile phone automatically searches for an available network. After finding a network, the mobile phone enters the standby state. When the mobile phone is registered in the network, the name of the network operator is displayed on the screen. Then you can dial or receive a call.

Adapting volume

In some broadcaster interface, e.g. Audio player and FM radio, you can press I/- and O/+ to decrease or increase volume.

Dialing Calls

In the standby interface, press number keys to input the area code and the telephone number, and then press the Dial key to dial a call. To end the call, press the End key.

Dialing a call to a number in the phonebook

Enter the phonebook and use the upward and/or downward direction keys to find the telephone number you want to call.

Press the Dial key. The mobile phone automatically dials the chosen telephone number.

Redialing the last number

In the standby interface, press the dial key to show the dialed calls.

Press the upward and/or downward direction keys to select a number you want to dial and then press the

Dial key.

Answering incoming calls

Press the Dial key or the Left soft key to answer an incoming call.

Press the End key to end the current conversation.

To reject an incoming call, press the End key or the Right soft key.

Note: If the caller can be identified, the mobile phone will present the calling number. If the calling number exists in the phonebook, the mobile phone will present both the name and the phone number of the caller. If the caller cannot be identified, the mobile phone will present the calling number only. You can answer an incoming call when using a function list or browsing the phonebook.

Using options during a conversation

Select Options during a conversation to pause, end the ongoing call, originate a new call, browse the phonebook, view information, set the mute, set the DTMF, or perform other operations. For details, refer to the menu guide.

Using the Headset


It would enter headset mode automatically when you insert headset to the slot. Make sure of inserting it at the bottom of the slot, or you can't use it normally.


4 Input method

This mobile phone provides multiple input methods, including numeric input, English input in both upper and lower case. You can use these input methods when editing the phonebook, short messages, the memorandum, files and greeting text.

Icons for Input Methods


After you enter an edit window such as a window for editing the phonebook, short messages or the memorandum, an icon is displayed to indicate the current input method:

Numeric input: “123”

English input in upper case: “ ABC”

English input in lower case: “ abc”

To Shift Entry Methods

Press a  key to switch between input methods.

Numeric Input

You can input numbers with the numeric input method. Press a number key to input the corresponding number.

English input and numeric input:

The keyboards for English input and numeric input are defined in the following table:

Key	Character or Function	Remarks
Number key 1	1W	
Number key 2	2E	
Number key 3	3R	
Number key 4	4S	
Number key 5	5D	

Number key 6	6F	
Number key 7	7Z	
Number key 8	8X	
Number key 9	9C	
Number key 0	0V	
Left soft key	Equivalent to OK or Options	
Right soft key	Equivalent to Back	
End key	Press it to return to the standby interface	

English input:

- Press the **a** key to switch between input methods
- To input a blank, switch to the English input mode (in upper or lower case) and then press number key **0**.
- To clear wrong inputs, press the **Cancel/delete** key.

Inserting a Symbol

Press the **sym** key to enter the **Select symbol** interface, use direction keys to select a symbol you want.

5 Using the Menus

5.1 Messaging

If the short message memory is full, a blinking SMS icon appears on the top of the screen. To normally receive short messages, you need to delete some of the existing short messages.

If the destination user has received the short message you sent and the short message delivery report function is activated, the phone will give off a message report alert tone.

Note: When a short message is sent through the network, the mobile phone may give a prompt message indicating that the short message has been sent. This indicates that the mobile phone has sent the short message to the short message service center number set in the mobile phone but does not imply that the destination user has received the short message. For further information, consult the service provider

Text message

5.1.1.1 Writing message

Step 1: Input the content of the short message to be sent.


Select **Options** to perform the following operations:

- ◆ **Send to:** To send the short message.
- ◆ **Input method:** To switch between input methods.
- ◆ **Insert template:** To insert a preset phrase into the short message.


Advanced

- ◆ **Insert number:** To insert a number from the phonebook to the short message.
- ◆ **Insert name:** To insert a contact name from the phonebook to the short message.
- ◆ **Insert bookmark:** To insert bookmark into a short message.
- ◆ **Save to drafts:** To save a message you've edited to drafts.

5.1.1.2 Inbox

If a new short message arrives, an icon  will be displayed on the screen. If the short message memory is full, you can no longer receive any short message. To receive short messages, delete some or

all the existed short messages.

Choosing “outbox”, the short messages in the Inbox are listed on the screen. A short message marked with an icon  indicates that you have unread message.

Press the **OK** key to view the current message.

While browsing a short message, you may select **Options** to perform the following operations:

- ◆ **Reply by SMS:** To reply to the short message.
- ◆ **Reply by MMS:** To reply to the short multimedia message.
- ◆ **Call sender:** Call the one who sends the short message to you.
- ◆ **Forward:** To forward the short message to others.
- ◆ **Delete:** To delete the short message.
- ◆ **Delete all:** To delete all short messages from the Inbox.
- ◆ **Save to Phonebook:** Save number to call thin.
- ◆ **Mark as unread:** To mark the message as unread.
- ◆ **Copy to the phone:** To copy the message to the phone
- ◆ **Move to the phone:** To move the message to the phone

5.1.1.3 Drafts

From the main menu select “**Messages**” to create text message. You can type a message, and you're also able to insert a pre-defined message from “**Templates**”. While writing a message, select “**Options**” to access all the messaging options. You can save your messages that you send often to “**Drafts**”.

5.1.1.4 Outbox

Choose **Outbox**. The short messages in the Outbox are listed on the screen.

For details, refer to the section about writing a short message above.

5.1.1.5 Sent messages

Save the message has been sent to success.

MMS

Your phone can send and receive MMS which enables you to send message containing picture, ring and text.

When sending a MMS, your message can be viewed with ensuring the addressee owe a phone supporting MMS.

5.1.1.6 Writing a message

a. Choose a new message and input corresponding content

* Addressee: To set phone number or email of the addressee

* Make a copy: To set phone number or email to make a copy

* Confidential letter: To set phone number or email of directory of sending as confidential letter.

* Theme: To set MMS theme

* Contents: To edit MMS content. User can add words, pictures, sounds and enclosure.

b. After entering corresponding content, return to the list of addressees interface, enter **theme options** interface

* Edit: To edit the current contents

* Send: To send the message you have edited

* Save: To save the message to the draft

* Save to draft: To save to the draft and send it later

- * **Sending options:** To set sending options of the message
- * **Exit:** To exit editing of message, user will be asked whether to save or not at the same time.

5.1.1.7 Inbox

This menu enables you to view MMS you received. Choose one and press left soft key to enter options as follows:

- ***View:** To view the MMS content
- ***Details:** To view the addressee, theme, date and size of MMS
- ***Reply:** To reply to the addressee
- ***Reply to all:** To reply to all of the “sender”, “addressee” and “addressee confidential letter”
- ***Delete:** Delete the MMS you chosen
- ***Edit:** Edit the short message.
- ***Forward:** Forward the short message to others.
- ***Delete all:** Delete all MMS from the Inbox.
- ***Use number:** To use numbers of MMS

5.1.1.8 Outbox

MMS of outbox would display on the screen while choosing “**outbox**”. For specific operation, please refer to inbox above.

5.1.1.9 Drafts

Listing all created MMS which stored in draft. For specific operation, please refer to inbox above.

5.1.1.10 Delete messages

Delete the messages options,select inbox,select inbox,out boxes or delete all.

5.1.1.11 Templates

Some templates are stored in the mobile phone. They can be edited or deleted. The phrase will be replaced by a blank after being deleted.

5.1.1.12 SMS Settings

This function enables you to set the default features about the SMS.

- ◆ **Profile settings:** Save or modify the short message service center number required for short message transmission, or obtain it from the network operator.
- ◆ **Voicemail server: Edit:** Edit or delete your voice mailbox number; or select OK to save the number
- ◆ **Call voicemail:** Dial the voice mailbox number stored in the voice mailbox number list. Note: In the standby interface, you can press number 1 key to call the voice mailbox after setting the voice mailbox number.
- ◆ **Common settings:** Set the message delivery report and the reply path. After Delivery report is set to On, the short message service center will send a status report indicating whether the short message you sent has been successfully delivered. This function requires the network operator's support.
- ◆ **Memory status:** View the percentage of the memory seized by the short messages in the SIM card to the total SIM card capacity and the percentage of the memory seized by the short messages in the phone to the total phone capacity.
- ◆ **Preferred storage:** Select the default storage path of short messages, i.e. whether to save short messages to the mobile phone or the SIM cards.
- ◆ **Long text message:** Activate or deactivate this function.

5.1.1.13 MMS settings

This function enables you to set the configuration information of sending and receiving MMS as following:

- ***Compose:** To set signature of editing mode on or off
- ***Send:** To set the validity period, delivery report, read report, priority, spacing interval and sending time of MMS.
- ***Retrieve:** To set main net, roam net, delivery report and allowing sending report of receiving MMS
- * **Filter:** For setting anonymous sender and ads.
- ***server profile:** For setting net configuration that MMS require. Contact the net operate for details
- ***Memory status:** To view Stored state of MMS

Broadcast Message

This network service enables you to receive a variety of text messages, such as broadcast messages about weather forecast or road conditions. At present, few networks provide this service. Please consult the network operator.

- ◆ **Receive mode:** Set it to **On** to enable or **Off** to disable cell broadcast service.
- ◆ **Read message:** View cell broadcast messages. You can press the **Up** and **Down** direction keys to view these messages.
- ◆ **Languages:** Select the language in which cell broadcast messages are displayed. The selected language, however, may not be supported by the network operator.
- ◆ **Channel settings:** Select receiving some types of cell broadcast messages or edit/delete some channel numbers.

5.2 Phonebook

The mobile phone can store up to 1000 telephone numbers. The number of telephone numbers that an SIM card can store depends on the storage capacity of the SIM card. The telephone numbers stored in the mobile phone and in the SIM cards form a phonebook. A name stored in the mobile phone can have at most four telephone numbers.

After selecting a telephone number in the phonebook, select **Options** to perform the following operations:

- ◆ **View:** View the content of the telephone number.
- ◆ **Sent text message:** sent message to this number.
- ◆ **Sent multimedia message:** sent multimedia message to this number.
- ◆ **Call:** To call the one who sends the short message to you.
- ◆ **IP call:** To call the one who sends the short message to you by IP call.
- ◆ **Edit:** Edit the telephone number.
- ◆ **Delete:** Delete the telephone number from the phonebook.
- ◆ **Copy:** Duplicate the telephone number from the mobile phone to the SIM card or from the SIM card to the mobile phone.
- ◆ **Move:** Move the telephone number to the SIM card if it is stored in the mobile phone or to the mobile phone if it is stored in the SIM card.
- ◆ **Send contact:** To send the record through message, multimedia message, Bluetooth and email or store as file.
- ◆ **Add to blacklist:** He or she can't call you if you add his or her number to blacklist.

- ◆ **Mark several:** Mark several short messages so that you can operate some accordant operations on them.
- ◆ **Caller group:** You can set five caller groups, including names, associated sound, associated pictures and members. You can set objects by pressing the left and right direction keys.

Phonebook Settings

- ◆ **Preferred storage:** Select the default location where a new number is to be stored, i.e., SIM1, SIM2, or the phone.
- ◆ **Speed dial:** Activate this function, set phone number to number key 2-9, and then you can dial corresponding phone number in the idle screen by long pressing corresponding number key.
- ◆ **My number:** Edit your name card, or send it via a short message, MMS or Bluetooth, or save it as a file.
- ◆ **Extra numbers:** Set owner number, service dialing number and SOS number.
- ◆ **Memory status:** Query the memory status.
- ◆ **Copy contacts:** This function helps to copy contacts from phone or SIM card to SIM card or phone.
- ◆ **Move contacts:** This function helps to copy contacts from phone or SIM card to SIM card or phone.
- ◆ **Delete all contacts:** This function helps to delete all contacts from phone, SIM card or delete them one by one.

5.3 Calendar

Once you enter this menu, there is a monthly-view calendar for you to keep track of important appointments, etc. Days with events entered will be marked

5.4 Call history

All Calls

View all call records

Missed Calls

You can view a list of the latest missed calls.

Note: When the mobile phone indicates that some calls are missed, you can select **Read** to enter the missed calls list. Navigate to a missed call and then press the **Dial** key to dial the number that originated that call.

Dialed Calls

You can view the latest dialed calls. Choose **SIM1 dialed calls** and then select a dialed call to delete, save, dial, or edit (or send a short message to it).

Received Calls

You can view the latest received calls. Choose **SIM1 received calls** and then select a received call to delete, save, dial, or edit (or send a short message to it).

5.5 Bluetooth

- ◆ Activate: To activate or deactivate Bluetooth as needed.
- ◆ Inquiry audio device: To inquiry audio devices automatically.
- ◆ Inquiry new device: To inquiry new devices automatically.

- ◆ Active devices: To active devices.
- ◆ Settings: To set on visibility, change device name audio path and so on.
- ◆ About: It includes the information of the Bluetooth in this mobile phone.

5.6 Services

STK

STK service is the tool kit of SIM card. This phone supports the service function .The specific items are depended by SIM card and network. Service menu will be auto added to the phone menu when supported by network and SIM card.

Internet service

This function enables you to view the internet. Your phone will ask you with existed way. You can start to view only by starting corresponding way.

- ◆ **Home page:** To store a website of home page in each way. The home page will be first viewed when using WAP explore.
- ◆ **Bookmark:** Several bookmarks are inner the phone.
- ◆ **Recent pages:** To view websites you visited latest.
- ◆ **Offline pages:** To store the website of web page
- ◆ **Input address:** To enter the website ensuring it can be linked
- ◆ **Service inbox:** To store information by net auto sending
- ◆ **Settings:** To set the net setup, color setup, advanced setup and PUSH inbox

Note: Consulting the local network operator for related fee and specific setup.

Data account

Set GSM、GPRS account parameter。

5.7 Multimedia

Camera

This function enables you take a picture you want. Roll the phone to align the camera to the picture and then press OK key, which the picture will be stored in the album. .

Select “option” and you can set some paramount of camera or scan the pictures you’ve taken in gallery and view the storage status.

Image viewer

This function enables you view, edit, slide show, use as, send, rename, delete, delete all files, rank and save about your pictures.

Video recorder

This function enables you to record dynamic pictures. Adapt the VCR to the scene or the figure, the press OK to start or pause recording. Press STOP to end recording. The phone will prompt you save or not.

Video player

This function enables you play, send, rename, delete, delete all files, rank, save about your video and

movies.

Audio Player

The audio player provides four buttons: Play or Pause, Back, and Forward, corresponding to the up/down direction key, left direction key and right direction key. The audio player supports MP3 formats. You can press +/O and -/I to increase or decrease volume.

Sound recorder

The phone support WAV and AMR. The AMR takes the compression algorithm. So in the same memory condition, it has longer recording time than WAV.

Because of having super recording time, user can choose recording format to record from “option” which can be stored to the phone memory and memory card.

FM radio

Your phone is equipped with an FM radio. You can use the application as a traditional FM radio with automatic tuning and saved channels. You can listen to it while running other applications.

Melody composer

Compose the melody all by yourself and play it.

5.8 Camera

This function enables you take a picture you want. Roll the phone to align the camera to the picture and then press OK key, which the picture will be stored in the album. .

Select “option” and you can set some paramount of camera or scan the pictures you’ve taken in gallery and view the storage status.

5.9 Video recorder

This function enables you to record dynamic pictures. Adapt the VCR to the scene or the figure, the press OK to start or pause recording. Press STOP to end recording. The phone will prompt you save or not.

5.10 FM radio

Your phone is equipped with an FM radio. You can use the application as a traditional FM radio with automatic tuning and saved channels. You can listen to it while running other applications.

5.11 Audio Player

The audio player provides four buttons: Play or Pause, Back, and Forward, corresponding to the up/down direction key, left direction key and right direction key. The audio player supports MP3 formats. You can press +/O and -/I to increase or decrease volume.

5.12 Java

The user can install your own JAVA software.

5.13 Alarm

Five alarm clocks are set but deactivated by default. You can activate one, multiple or all of them as needed. For each alarm clock, the ringing date and the ringing time can be set. When the preset alert time is up, the mobile phone gives off an alert tone whereas the current date and time blinks on the screen. Select **Stop** to stop the ring or **Snooze** to temporarily stop the ring. If you select **Snooze**, the alarm clock will ring four minutes later.

5.14 Tasks

Choosing appointment, telephone and celebrated day to create new memo, which you can view, add, edit, delete, delete overdue task, delete all, jump to date, send route and saved as file. If you have set the alarm for the memo, alarm will sound when time is up, the content of memo will display at the same time.

5.15 Calculator

- ◆ Select **Clear** to clear the last inputs or results or hold **Clear** to clear all the inputs.
- ◆ Select **OK** to obtain the calculation results.

Note: This calculator provides limited precision and is only applicable to simple arithmetic calculation.

5.16 File manager

The phone provides a certain space for users to manage files and supports the T-Flash card. The capacity of the T-Flash card is selectable. You can use the file manager to conveniently manage various directories and files on the phone and the T-Flash card. Choose **File Manager**, and then press the **Left soft** key to perform the following operations:

Open

Choose **File manager** to enter the root directory of the memory. The root directory will list the default folders, new folders and user files. When the mobile phone is powered on for the first time or when you have not changed the directory, the root directory contains the default folders only.

Select a folder and then press the **Left soft** key or select **Options** to perform the following operations:

- **Open:** Open the selected folder.
- **New folder:** Create a folder under the selected folder.
- **Rename:** Rename the selected folder.
- **Delete:** Delete the selected folder.
- **Sort by:** To rank stored files. Displaying as ranked

Format

You can use this function to format all the data in the memory. The system will re-create a default folder. The formatted data cannot be recovered. Therefore, think twice before using the formatting function.

5.17 Settings

Quad SIM switch

The user to choose insert boot automatically search the SIM card or manual search option set.

Quad SIM settings

- ◆ **Four SIM open:** Both SIM cards are standby if you set this option.

- ◆ **Only SIM1 open:** Only SIM card 1 can be identified if you set this option.
- ◆ **Only SIM2 open:** Only SIM card 2 can be identified if you set this option.

Phone Settings

- ◆ **Time and date:** set the date format, the time format, and detail time of the location.

Note: If you remove the battery from the mobile phone or if the battery energy was exhausted a long time ago, you may need to reset the date and time when re-inserting the battery or powering on the mobile phone after recharging.

- ◆ **Schedule power on/off:** Set the time when the mobile phone will be automatically powered on or off.

Alert: Before entering an area where the use of mobile phones is forbidden, make sure that the scheduled power-on function is deactivated to avoid accidents.

- ◆ **Language:** Select the display language for the mobile phone.

- ◆ **Pref.input method:** Select an input method as preferred method.

- ◆ **Display:** Select images and set them as wallpaper, screen saver, power on display, power off display. You can show date and time on the screen or shut down this function and you can set duration of LCD light time.

- ◆ **Shortcuts**

Standby shortcut menu Settings.

- ◆ **Flight mode:** You can set the phone to Flight mode.

- ◆ **Display:** Select images and set them as wallpaper, screen saver, power on display, power off display. You can show date and time on the screen or shut down this function and you can set duration of LCD

light time.

Call Settings

- ◆ **Caller ID:** You can select the ID set by the network, hide the ID, or send the ID. By default, the ID

set by the network is chosen

Note: *This function relates to the network. If you select Hide ID, dialing may fail.* Therefore, make sure that calls can be normally dialed before you choose Hide ID.

- ◆ **Call waiting**

➤ **Activate:** After you choose Activate, the mobile phone will contact the network. A moment later,

thenetwork will make a response and send a message to acknowledge your operation. If the call waiting function is activated, the network will alert you and the mobile phone screen will display the incoming call number if others are calling you while you are already in a conversation.

➤ **Deactivate:** If you choose Deactivate, the network will not alert you when others are calling you while you are already in a conversation.

➤ **Query status:** Query the network to obtain the current call waiting status.

- ◆ **Call divert**

This network function enables you to forward incoming calls to another number you have previously specified.

- ◆ **Call barring**

Call barring function enables you to bar calls as needed. When setting this function, you need to use a network barring code, which can be obtained from the network operator. If the code is wrong, an error message will be prompted on the screen. After selecting a call barring option, continue to select Activate or Deactivate. The mobile phone will prompt you to input the call barring code and then contact the network. A moment later, the network will make a response and send the operation results to the mobile phone.

◆ **Line switching:** Switch to Line 1 or Line 2. By default, Line 1 is used.

Note: If you choose Line 2, dialing may fail. This depends on the implementation of the network operator.

◆ **Closed user group:** This function requires network support. For details, consult the local network operator.

Note: SIM on service is required.

SIM1 SIM2 Settings is the same Settings.

Advanced setup

◆ **Blacklist:** He or she can't call you if you add his or her number to blacklist.

◆ **Auto redial:** Set it to **On** or **Off** to enable or disable auto redial. If you set **Auto redial** to **On**, the

mobile phone will automatically redial the number a moment later if the called party does not reply.

The number of auto redial times can be set to a maximum of 10. In the auto redial period, you cannot dial other numbers. To end the auto redial process, press the **End** key.

Note: This function requires support from the network operator to which the SIM card is registered.

- ◆ **Call time display:** To display call time or not in a call.
- ◆ **Call time reminder:** To set single or circle tone in a call to make you know the time.

Pitch shift setting: access this option to select different pitch.

Network Settings

Contact the network operator to obtain the following network services:

- ◆ **Network selection:** Set Network selection mode to Automatic or Manual. Automatic is recommended. When Network selection mode is set to Automatic, the mobile phone will prefer the network where the SIM card is registered. When Network selection mode is set to Manual, you need to select the network operator's network where the SIM card is registered.
- ◆ **Preferences:** Select the preferred networks. By default, the network where the current SIM card is registered will be displayed.

Note: The network setup for SIM card 2 is the same as above.

Security Settings

This function provides you with related settings about safety use

- ◆ **SIM lock:** To set the SIM lock, you need to input the PIN. You can set the SIM lock only after inputting the correct PIN. If you set SIM lock to On, you need to input the PIN each time you power on the mobile phone. In the case you input a wrong PIN for three consecutive times, you need to input the PIN Unlocking Key (PUK). The PUK is used to unlock and change the locked PIN. To obtain the PUK, contact the network operator.
- ◆ **Fixed dial:** This function requires the SIM card's support and the network operator's support. When

the fixed dial function is activated, you can dial only the numbers in the fixed dial list. To activate the fixed dial function, you need to input the PIN2.

- ◆ **Barred dial:** Activate or deactivate the barring of some or all calls. This function requires the SIM card's support.
- ◆ **Change password:** To change the password.
- ◆ **Phone lock:** The function enables you to lock/unlock the phone. Entering password to switch on or off the phone. Password is required when the phone is locked. The password is 1122
- ◆ **Auto keypad lock:** The function enables you to lock/unlock the keypad. Setting the auto locking time that 5s, 30s, 1min or 5mins is available. The keypad will be auto locked with no operation during the period.
- ◆ **Change password:** to change the password.

Restore Factory Settings

Choose Settings > Restore factory settings to restore the factory settings. Input the phone lock code and then select OK or press the Left soft key.

Note: The initial phone lock code is 0000.

5.18 Organizer

Calendar

Once you enter this menu, there is a monthly-view calendar for you to keep track of important appointments, etc. Days with events entered will be marked.

Tasks

Choosing appointment, telephone and celebrated day to create new memo, which you can view, add, edit, delete, delete overdue task, delete all, jump to date, send route and saved as file. If you have set the alarm for the memo, alarm will sound when time is up, the content of memo will display at the same time.

Alarm

Five alarm clocks are set but deactivated by default. You can activate one, multiple or all of them as needed. For each alarm clock, the ringing date and the ringing time can be set. When the preset alert time is up, the mobile phone gives off an alert tone whereas the current date and time blinks on the screen. Select **Stop** to stop the ring or **Snooze** to temporarily stop the ring. If you select **Snooze**, the alarm clock will ring four minutes later.

World clock

To view city of each time zone, corresponding date and time will display at the bottom of the screen. Press navigation key to choose to view cities. Press Left soft key to switch on or off daylight saving time of other cities.

Calculator

- ◆ Select **Clear** to clear the last inputs or results or hold **Clear** to clear all the inputs.
- ◆ Select **OK** to obtain the calculation results.

Note: This calculator provides limited precision and is only applicable to simple arithmetic calculation.

Currency convert

To store exchange rate, press “OK”, then choose exchange rate setup. Input one rate and press OK. Entering the money amount and press OK, and then choosing exchange to foreign currency.

Stopwatch

Stopwatch is simple application for measuring time with possibility to register several results and suspend/resume measurement.

Ebook

Ebook enables you to read TXT file. Through the USB connecting line putting files to Ebook folder of phone and T-Flash card.

You can find the folder and open Ebook or you can open the Ebook to read text directly.

5.19 User Profiles

The mobile phone provides multiple user profiles, so that you can customize some settings to adapt to the specific events and environments.

Customize the user profiles according to your preference and then activate the user profiles. The user profiles fall into six scenarios: **General, Meeting, Outdoor, Indoor, Silent.**

Activate

Select **Activate** to activate the selected mode.

Customize

After choosing one of the above five modes, select **Customize** to edit the following items:

- ◆ **Tone setup:** Set the incoming call tone, power-on prompt tone, power-off prompt tone, message tone, and keypad tone.
- ◆ **Volume:** Set the volume of the conversation tone, the ring tone, the keypad tone.
- ◆ **Alert type:** Select ring, vibrate, ring and vibrate, or ring after vibrate mode.
- ◆ **Ring type:** Set the ring type to **Single**, **Repeat** or **Ascending**.
- ◆ **Extra tone:** Activate or deactivate the warning tone, error tone, network connection tone, and conversation start tone.
- ◆ **Answer mode:** Set whether to answer incoming calls by pressing any key.

After setting all the above items, choose the mode and then select **On**.

Note: The mobile phone automatically enters the Headset mode when you insert the earpiece.

Note: In standby state, hold the # key to switch to the mute mode. To switch back to the original mode, hold the # key again.

5.20 Games

Five games are embedded in the mobile phone. For details, refers to the operation instructions of games.

5.21 FaceBook

It is a network website inside the mobile phone.

5.22 MSN

It is a website inside the mobile phone.

5.23 Yahoo

It is a website inside the mobile phone.

5.24 Twitter

It is a communication tool inside the mobile phone.

5.25 Lock

Select this function to lock keypad. To unlock keypad, you need to press right soft key and lock key.

5.26 Power off

Select this function to power off the phone, you need to press end key for 2 to 3 seconds to power on or power off the phone.

6 Appendix

Appendix 1: Troubleshooting

If you find exceptions when operating the mobile phone, restore the factory settings and then refer to the following table to solve the problem. If the problem persists, contact the distributor or service provider.

Fault	Cause	Solution
SIM card error	The SIM card is damaged.	Contact your network service provider

	The SIM card is not in position.	Check the SIM card
	The metal face of the SIM card is polluted.	Clean the SIM card with a clean cloth
Poor received signal quality	Signals are obstructed. For instance, radio waves cannot be effectively transmitted nearby a high building or in a basement.	Move to a place where signals can be effectively transmitted
	Line congestions occur when you use the mobile phone in high-traffic hours	Avoid using the mobile phone in high-traffic hours
The mobile phone cannot be powered on	The battery energy is exhausted.	Charge the battery
Calls cannot be dialed	Call barring is activated	Cancel call barring
The mobile phone cannot connect the network	The SIM card is invalid	Contact your network service provider
	The mobile phone is not in a service area of the GSM network	Move to the network operator's service area
	The signal is weak	Move to a place where the signal quality is high

The battery cannot be charged	The charging voltage does not match the voltage range indicated on the charger	Ensure the charging voltage matches the voltage range indicated on the charger
	An improper charger is used	Use the charger specially designed for the mobile phone
	Poor contact	Ensure the charger plug is in good contact with the mobile phone

FCC Caution

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio

frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC, Tests for each phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC.

For body worn operation, this model phone has been tested and meets the FCC RF exposure

guidelines when used with an accessory designated for this product or when used with an accessory that

Contains no metal and that positions the handset a minimum of 1.5 cm from the body.

Non-compliance with the above restrictions may result in violation of RF exposure guidelines.