

OPERATING GUIDE

BECKER

Contents	2	Maintenance and care	19	Basic information about the touch screen	28
24-month warranty	6	Battery quality declaration	20	Operation	28
Warranty	6	Display quality declaration	20	Calibration (model dependent)	28
Safety instructions	7	Start-up	20	Basic information about the menus	29
The Navigation device	9	Power supply	20	The main menu	29
Operating manual contents	9	Using the battery	21	Entries made with the entry menu	30
Use of the product	9	Connection for the cigarette lighter	21	Entering characters	30
Navigation	9	Connection to the mains outlet	22	Accepting proposals	30
Images*	9	Connecting to power supply	22	Scrolling through the lists	31
Telephone (selected models)	10	TMC antenna (depending on the model)	22	Special characters and accent marks	31
Unpacking the Navigation device	10	GPS antenna	22	Other character sets	32
Checking the contents	10	Unit antenna	22	Entering numbers	32
Overview of functions	11	Cable for vehicle integration (depending on model, optional)	23	Switching between upper and lower case:	32
Complaints	13	Cable for rear view camera (depending on the model, optional)	23	Deleting characters	33
Handling the packaging	13	Memory card	23	Inserting spaces	33
Description of the device	13	Inserting the memory card	24	The back button	33
The basic unit	13	Ejecting the memory card	24	Content Manager	33
Cable for power supply from cigarette lighter	14	Unit bracket	24	Installing the Content Manager	34
Intelligent charger cable (Smart) for power supply via cigarette lighter (depending on the model)	14	Fitting the unit bracket	24	Starting the Content Manager	34
Battery	15	On the windscreen	25	Transferring pictures	36
USB connection cable	15	Adjusting the unit holder's position	26	Faults	36
Unit bracket	15	Attaching the Navigation device	26	Download manager (model dependent)	36
Accessories	15	Removing the Navigation device	26	Map Update	37
Mains power supply unit	15	Devices with magnetic holders	26	Speed camera detector update	38
Overview of the scope of Delivery	16	Switching the Navigation device on/off	26	Resuming downloads	38
Overview of the navigation device	17	Switching on	27	Installing updates	39
General operation	19	Switching off	27		

Transferring pictures	39	Selecting an address and starting route guidance	48	Auto zoom	67
Faults	39	Entering address by speech (selected models)	53	Select POI categories	68
Navigation Mode	40	Speech Dialogue System (selected models)	54	Selecting Info box data fields	68
What is navigation?	40	Explanation of symbols	54	3D city view	69
Selecting Navigation	41	Objective	54	The Route overview button	70
Home address	41	Route	55	The Guidance info button	70
Smart Guess	42	More...	55	The Route options button	72
Last destinations list	42	Live POI Search (model dependent)	55	Selecting the vehicle profile (depending on model)	72
The destination list	42	Points of interest	55	Truck and mobile home functions (depending on model)	73
Icons used	43	Point of interest in the vicinity	56	Setting truck profiles	74
Operating the last destinations list	43	Point of interest near to an address	57	Selecting vehicle category and name	76
Start with existing destination	43	Point of interest near to destination	58	Selecting the route type	76
Scrolling through stored destinations	43	POI on route	58	Time-dependent route guidance	77
Displaying or editing a destination	43	Entering a point of interest directly	58	Avoiding particular types of road	77
Personal destinations	44	Calling special destination phone number		The TMC or Traffic button (model dependent)	77
Contacts	44	(depending on the model)	59	The Traffic Button (model dependent)	78
Selecting a destination from Personal destinations	44	Additional point of interest information	59	The Voice guidance button	78
Editing Personal destinations	45	Travel Guide (model dependent)	59	Setting the Voice	79
Selecting a destination from Contacts	45	Selecting a destination from the map	60	Setting the Volume	80
The New destination menu	46	Coordinate entry	61	The Warnings button	80
Layout of the New destination menu	47	Route planning	61	Setting Driver alerts	81
Enter address	47	Simulation of the route	63	Setting environmental zones (depending on model)	82
Select Point of Interest	47	Creating a new route	63	Truck warnings	82
Travel Guide (model dependent)	47	Editing a route	64	(depending on model)	82
Select on map	47	Optimising a route	65	Setting Speed info	83
Enter geo-coordinates	47	Navigation settings	65	The Blocked roads button	84
Route planning	47	The Map view button	66	The Vehicle data button	85
Entering the address	47				
Selecting a country	48				

The Format button	86	Map zooming	96	Telephone mode	111
The Time button	86	Moving the map	97	Calling up the telephone mode	
The Reset button	86	Map orientation	97	(only selected models)	111
Traffic announcements using TMC (depending on the model)	87	The Route overview	98	Telephone menu (only selected models)	
Live Traffic – Traffic Announcements via Data Connection (model dependent)	87	SituationScan	99	Dialing a number	112
Displaying traffic messages on the map	88	The detour assistant	99	Phonebook	113
Using TMC or Live-Traffic Reading a message	88	The Park Assistant	99	Call list	114
Taking announcements into consideration when calculating routes	90	The departure assistant	99	Icons used	115
Automatic recalculation	90	Map display options	100	Scrolling through the call list	115
Manual recalculation	90	Displaying the whole route	100	Dialing an available number	115
The map display	91	Move route (model-dependent)	101	Displaying or editing entries	115
Calling up the map display	91	Selecting alternative routes	102	Lists loaded from cell phone	116
Structure of the map display	91	Canceling route guidance	103	Connecting Bluetooth® telephones	116
Map display without route guidance	91	Entering/deleting a stopover	103	Calling up a device list	116
Map display with route guidance	91	Blocking route temporarily	104	Automatic connection	117
The Information box	92	Setting day/night display	105	Searching for cell phones	118
Split screen with route guidance	93	Displaying current position	105	Connect new devices	118
Route guidance with arrow display	94	(Where am I?)	105	Connecting a mobile phone	119
Lane Assistant Pro 3D (model dependent)	94	Entering the destination	106	Disconnecting a connected telephone	119
Map display with Junction view	94	Skipping a destination	107	Telephone calls	119
Tunnel view	95	Supplementary functions for trucks and mobile homes (selected models only)	108	Establishing a call	119
Using the map display	95	Feedback after route calculation	108	Accepting a call	120
Repeating the last announcement	95	Zooming in on the map	108	Ending a call	120
Changing the announcement volume	96	Warnings with planned route	108	During a call	121
		Warnings without planned route	109	Bluetooth settings	
		Show route	109	(model dependent)	122
		Other additional functions (only selected models)	110	Bluetooth: on/off	122
		Display height profile	110	Telephone settings	122
				Automatic connection	122

Automatic call acceptance	122	The system settings menu	133	NOTICE	151
Telephone volume	123	Operation	133	EU Declaration of Conformity	151
Updating the phonebook	123	Selection options	133	Disposal of the unit	152
Bluetooth® name	123	Closing the settings menu	133	Disposal of the battery	153
Data settings / Bluetooth Tethering (model dependent)	124	The individual menu items	134	Duty to supply information according to battery legislation (BattV)	153
Audio Out settings (model dependent)	124	Battery	134	Removing the battery	153
Tools	125	Automatic on/off	135		
Travel Guide (model dependent)	125	Day/night display	136		
Rear View camera	125	Brightness	136		
Displaying Rear view camera (depending on the model)	125	Design by day	136		
Image viewer*	125	Design by night	137		
The image viewer menu	126	Setting the colour	137	The information and data contained in these documents are subject to change without prior notice.	
Selecting an image	126	Language	138	No part of these documents may be duplicated or transmitted for any purpose whatsoever without express written permission of United Navigation GmbH. All technical information, drawings etc. are subject to copyright law.	
Enlarging the image	127	Keyboard layout	138		
Rotating the picture	127	Sounds	138		
Displaying image information	127	Rear view camera (depending on the model)	138		
Slide show	128	Screen animations	139		
Settings	128	Driver profiles (depending on model)	139		
Where am I?	128	Renaming driver profile	140		
Traffic forecast (depending on model)	128	Deleting driver profile	140		
Country information	129	Driver profile Pro (model dependent)	141	© Copyright 2015, United Navigation GmbH All rights reserved.	
Blocking a section of the road permanently	130	Service information	141		
Trip computer (depending on model)	131	Factory settings	142	The Bluetooth® word mark is a registered trademark owned by Bluetooth SIG, Inc. and any use of such marks by United Navigation GmbH is under license.	
Settings	133	Calibration (model dependent)	142		
Selecting system settings	133	Wi-Fi® settings (model dependent)	143		
		Technical terminology	144		
		index	146		
		Model overview and technical s pecifications	149		

24-month warranty

The company United Navigation GmbH, Zeppelinstraße 41, 73760 Ostfildern, Germany, provides a world-wide, 24-month warranty (battery: 6 months) for BECKER units, beginning on the day of delivery to the final customer (buyer).

Within the framework of the warranty, functional defects will be eliminated free-of-charge, provided that these can be shown to be the result of material or manufacturing faults and this shall be effected either by elimination of the fault or by provision of a new unit, at the discretion of the manufacturer. Warranty claims must be registered by the buyer immediately after defects are discovered and must be accompanied by the initial buyer's purchase contract.

The warranty expires after 24 months (battery: 6 months); neither warranty claims nor fulfilment shall effect an extension of the warranty period.

Faults resulting from improper handling, incorrect installation of the unit, improper noise suppression of the vehicle, static charge or mechanical damage are excluded from the warranty.

The warranty is invalidated in the case of repairs or tampering on the part of the buyer or unauthorised third parties. Repairs may only be performed by persons and service centres expressly authorised by the manufacturer or by the manufacturer himself.

This warranty does not affect or restrict the legal warranty rights of the buyer.

⚠ Safety instructions

- Use of the device is only permitted if the traffic conditions are suitable and you are absolutely sure that its use presents no risk, distraction or inconvenience to you, your passengers or other road users.
Traffic laws and regulations will apply in each and every case. Destinations may only be entered when the vehicle is stationary.
- The navigation system is merely an aid, data/information may in select cases be incorrect. The driver must decide in each situation by him- or herself if he or she will follow the directions. No liability will be assumed for incorrect directions provided by the navigation system. Imprecise or incorrect directions may be provided due to changing traffic patterns or deviations in data. Therefore, you must always observe the actual road signs and traffic regulations. In particular, the navigation system must not be used as an orientation aid at times of poor visibility.
- The device must only be used for its intended purpose. The volume of the navigation system should be adjusted so that noises external to the vehicle are still well audible.
- Turn the unit off immediately if a defect occurs (e.g. emission of smoke or odors).
- For reasons of safety and security, the device must only be opened by a professional. In case of needed repair please consult your dealer.
- Navigation devices from Becker could contain magnets. Do not bring them near magnetic data carriers (notebooks) or cards (EC cards, credit cards etc.). These could get damaged or be rendered unusable if brought into contact. Magnets can impair the function of cardiac pacemakers! Persons with cardiac pacemakers should not carry the device to close to their bodies.

- It is forbidden to exceed the supply voltages (Volts) specified for the mains adapter, the motor vehicle charging adapter and the product. In case of non-observance, the product or the charger may be damaged, or the battery may explode.
- Do not open the product or the battery under any circumstances. No modifications of the product are permitted, any such modification leads to the loss of the operating permission.
- Only use original BECKER accessories. This way it is ensured that all relevant provisions will be met and that health risks and damages to the product are avoided. Dispose of the used product or the battery according to the legal regulations in effect.
- Improper use excludes all warranties! The safety instructions are also valid for any original BECKER accessories.
- Allowed temperature range: -20 °C – 60 °C storage / 0 °C – 45 °C operation

Operating manual contents

This operating manual contains the description of your Becker navigation equipment.

This manual contains descriptions for different model versions in a single document. Therefore, some of the functions described here might not be available for your equipment under certain circumstances.

All pictures are similar.

Use of the product

This product is a high performance PND (Personal Navigation Device) for use in vehicles. Protect the product and the accessories from moisture and dirt.

Navigation

The use of the GPS = **Global Positioning system** eliminates the tedious process of looking in street maps.

The receiver antenna integrated into the product allows constant access to the navigation services outside buildings. Within buildings, it is currently not possible to access any navigation functions. When using in vehicles, it might not be possible to receive sufficient GPS data depending on the installation position of the Navigation device.

Images*

The Navigation device has a Picture Viewer with a lot of image display functions.

Telephone (selected models)

Your Navigation device is equipped with Bluetooth® wireless technology. Via Bluetooth®, you may connect to a cell phone equipped with Bluetooth® wireless technology.

Your Navigation device can then be used as a very comfortable hands-free unit. You also have the option to read out the address book or phonebook of the cell phone and to read any received short messages.

Unpacking the Navigation device

Note:

Your Navigation device is delivered in a stable packaging. If the packaging or its contents show the signs of serious damages, you must not continue to unpack the product. In such case, please contact your dealer.

Checking the contents

Before you start using the Navigation device, the scope and condition of the contents must be thoroughly checked (see also page 16).

- > Unpack the contents carefully and check them thoroughly.

Overview of functions

- : standard
- : not available
- : optional

	Navigation system						
	active.6s CE / EU BE H00	ready.6l EU plus BE B95 / BBF/6	active.6s EU plus BE H10	active.6s1 EU plus BE H40	professional.6s1 EU BE H50	transit.6s EU BE H02	transit.6s1 EU plus BE H50
TMC	●	-	-	-	-	-	-
Becker OneShot Pro Voice control	-	-	-	-	-	-	-
Free speed camera detector for 1 year (download product)	●	-	-	-	-	-	-
Lifelong speed camera detector (download product)	-	-	●	-	-	-	-
Lifelong live speed camera detector	-	-	-	●	●	●	●
Driver warnings	-	-	-	-	●	-	●
Bluetooth hands-free	-	-	●	●	●	-	●
On-board computer	●	-	-	●	●	●	●
Environmental zones	●	●	●	●	●	●	●
Truck & Camper Navigation Pro	-	-	-	-	-	●	●
Display height profile	-	-	-	-	●	●	●
BECKER RouteMove	●	-	-	●	●	●	●
ADAC Camping Guide	○	○	○	○	●	●	●
MARCO POLO Travel Guide	●	●	●	●	●	●	●
Lane assistant Pro 3D	●	●	●	●	●	●	●
Connection for reversing camera	-	-	-	-	●	-	●
WLAN interface	-	●	-	●	●	-	●
Live Traffic (Bluetooth and/or WLAN Tethering)	-	●	●	●	●	-	●
Live POI Search (Bluetooth and/or WLAN Tethering)	-	●	●	●	●	-	●
Becker Connect / Download Manager	-	●	-	●	●	-	●
Track recording	-	-	-	-	●	●	●
EU Truck Driving Ban Calendar	-	-	-	-	-	●	●
Power saving mode	●	-	●	●	●	●	●

- : standard
- : not available
- : optional

	Navigation system				
	active.5s EU BE 2B00 BE 3B00	active.7s EU BE 2B30 BE 3B30	active.5sI EU BE 2B10 BE 3B10	active.7sI EU BE 2B40 BE 3B40	transit.7sI EU BE 3B40
TMC	●	●	●	●	●
Becker OneShot Pro Voice control	-	-	-	-	-
Free speed camera detector for 1 year (download product)	●	●	-	-	-
Lifelong speed camera detector (download product)	-	-	●	●	●
Lifelong live speed camera detector	-	-	-	-	-
Driver warnings	-	-	-	-	●
Bluetooth hands-free	-	-	-	-	-
On-board computer	●	●	●	●	●
Environmental zones	●	●	●	●	●
Truck & Camper Navigation Pro	-	-	-	-	●
Display height profile	-	-	-	-	●
BECKER RouteMove	●	●	●	●	●
ADAC Camping Guide	○	○	○	○	●
MARCO POLO Travel Guide	●	●	●	●	●
Lane assistant Pro 3D	●	●	●	●	●
Connection for reversing camera	-	-	-	-	-
WLAN interface	-	-	●	●	●
Live Traffic (Bluetooth and/or WLAN Tethering)	-	-	●	●	●
Live POI Search (Bluetooth and/or WLAN Tethering)	-	-	●	●	●
Becker Connect / Download Manager	-	-	●	●	●
Track recording	-	-	-	-	●
EU Truck Driving Ban Calendar	-	-	-	-	●
Power saving mode	-	-	-	-	-

Complaints

In case of complaints, please consult your dealer. The equipment may be sent directly to United Navigation in its original packaging.

Handling the packaging

Keep the original packaging in a dry place, at least for the warranty period.

Note:

The disposal must be performed in a professional manner, according to the country-specific regulations. The packaging must not be combusted. Depending on the country of delivery, it might be possible to return the packaging to the dealer.

Description of the device

The navigation device consists of the basic unit and the accessories included in the scope of delivery.

For descriptions of the individual parts, see:

- "Overview of the scope of Delivery" on page 16

Note:

The basic unit and accessories must not be opened or modified in any way.

The basic unit

The basic unit consists of the complete electronic unit:

- Integrated antenna
- a TMC receiver for receiving traffic messages (depending on the model),
- Touchscreen
- an integrated loudspeaker
- a microphone (depending on the model).

On the side of the unit, there are also various connections and ports.

You will find more details of the unit under:

- "Model overview and technical specifications" on page 149

Cable for power supply from cigarette lighter

This cable allows the unit to be connected up to the car's cigarette lighter.

The power supply must satisfy the following requirements:


- DC current 12/24 volts
1 amps

Intelligent charger cable (Smart) for power supply via cigarette lighter (depending on the model)

This cable allows the unit to be connected up to the car's cigarette lighter.

The power supply must satisfy the following requirements:

- DC current 12/24 volts
1.3 amps

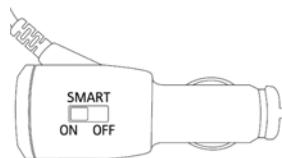

This cable allows the function "Automatic on/off", described page 135, to also be used for vehicles without switched cigarette lighters.

The cable detects whether the engine is running or switched off and switches the power supply to your navigation system on or off accordingly.

The function is switched on when the switch is on the **position On**.

The function is switched off when the switch is on the **position Off**.

This cable also allows the function "Automatic on/off", described on page 135, without switched cigarette lighters:

- For cars with unswitched cigarette lighters.
- Charger cable detects whether the engine is running or not and switches the power supply to the navigation system on or off accordingly.

If the function is switched off, the navigation system is always supplied with power when there is voltage on the cigarette lighter.

Note:

The function can be switched off on vehicles with switched vehicle voltage sockets. It does not work on vehicles with 24V vehicle voltage.

On vehicles with an automatic start/stop feature, your navigation device might always be switched off when the engine is stopped.

Battery

When depleted, the integrated rechargeable battery can be recharged by connecting the Navigation device to the power supply.

For this purpose, connect the unit via a car power adapter to a 12/24 V socket in a vehicle or via the optional mains power supply unit to the 230 V mains.

Note:

You can charge the Navigation device via the car charger cable included in the scope of delivery or via the optionally available mains power supply unit.

When the Navigation device is connected to a PC, it is supplied with power via the PC and does not consume battery power.

Note:

Switch the navigation device completely off, see "Devices with magnetic holders" on page 26, before connecting the navigation device to the computer.

Unit bracket

The Navigation device can be mounted in the vehicle using the unit bracket.


Accessories

Mains power supply unit

This power supply allows connection of the Navigation device to a mains outlet.

USB connection cable

With the USB connection cable provided, it is possible to connect the Navigation device to a standard PC with a USB interface. The integrated flash memory of the navigation device and a micro SD card that may eventually be inserted can then be addressed by the PC like a removable storage device.

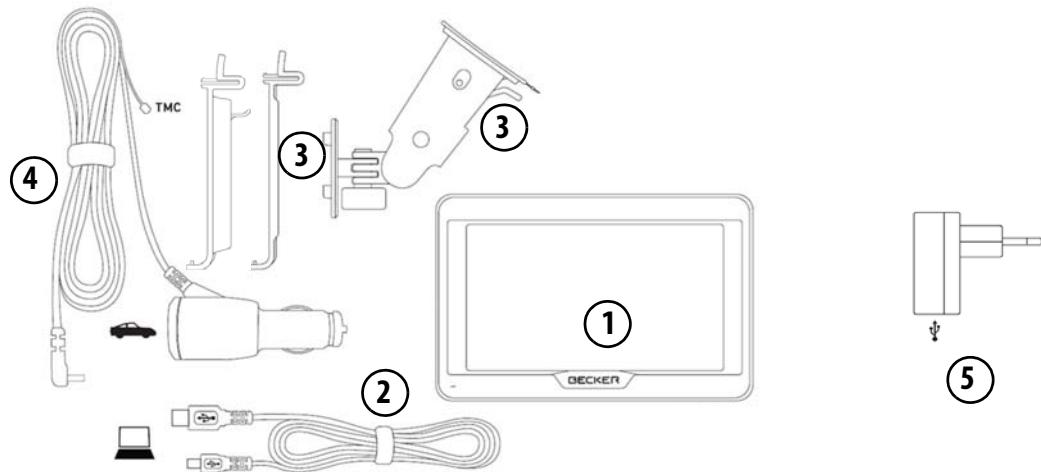

Scope of delivery

- 1 Basic device – PND (Personal Navigation Device)
- 2 USB connection cable
- 3 Unit holder with carrier plate (the design depending on the model)
- 4 Cable for power supply via the vehicle cigarette lighter (12/24 Volt) with integrated TMC-antenna (depending on the model)
- 5 Micro USB mains charger (selected models)

In the case of devices with magnetic holders, the carrier plate (2) and car adapter cable (4) form one unit.



Front of unit with controls and displays

1 Back button

Model dependent: either on the left bottom side of the screen or in the left top corner of the housing.

Press = Back function in most applications

Press and hold = Open the main menu


2 Touch screen showing the main menu selected

3 Touch screen key


Press = activates the corresponding key command

4 Microphone (depending on the model, sometimes in the right top corner, too))

Model dependent, the arrangement of the connections can differ on the bottom side of the device.

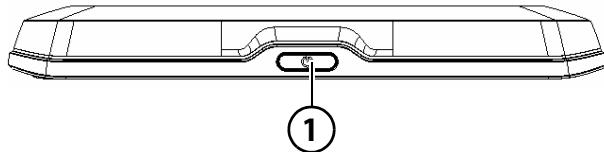

1 ON/OFF switch

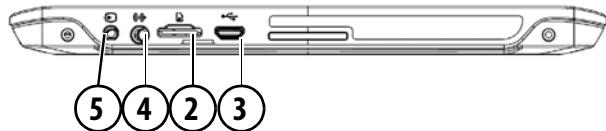

Underside of the unit

- 2 Slot for Micro SD card
- 3 Mini USB connection / connection for power supply
- 4 Connection for reversing camera
- 5 Connection for vehicle integration

Maintenance and care

The unit is maintenance-free.

For proper care, a commercially available cleansing fluid for electrical devices may be applied using a soft damp cloth.

Danger!

Danger to life by electrocution.

Always switch off the unit and disconnect the mains power supply unit before cleaning the unit, supplied components, or accessories.

Note:

Do not use any aggressive or abrasive substances or cloths which may damage the surface.

A micro-fibre cloth is particularly suitable for the display.

The unit must not be exposed to water.

Your mobile navigation system was designed and manufactured with great care and should be treated with equal care. You will enjoy your mobile navigation system for a long time to come if you observe the recommendations listed in the following:

- Protect your mobile navigation unit and the accessories from water and moisture. If your unit has been exposed to moisture, switch it off immediately and disconnect the power supply. Allow to dry at room temperature.
- Do not operate your mobile navigation system in a dusty or dirty environment and do not store it in such an environment.
- Do not store your mobile navigation system in hot environments. High temperatures can shorten the service life of electronic components in your unit, damage the rechargeable batteries and cause certain plastics to warp or melt.

- Do not store your mobile navigation system in cold environments. During operation, when the unit warms up to operating temperature, moisture may form internally, causing damage to electronic components.

- Do not drop your mobile navigation system unit, protect it from shocks and do not shake it. Improper handling can damage components within the unit.
- Never use corrosive or aggressive chemicals, cleaning solutions or aggressive detergents for cleaning.

All the above information applies equally to the mobile navigation system, the rechargeable battery, the mains charging and car power adapters as well as all accessories. Should one of these parts not work properly, please contact your authorised dealer.

Battery quality declaration

The capacity of the rechargeable battery in your mobile navigation system decreases with every charging/discharging cycle. Improper storage at excessively high or low temperatures may also cause a gradual deterioration of capacity. Consequently, the operating time may be substantially reduced even in the case of a fully charged battery.

Display quality declaration

In some cases, for technical reasons, a few discoloured dots (pixels) may be visible on the display. Some pixels may also appear brighter or darker. However, such instances do not represent a product flaw.

Start-up

Once the Navigation device has been unpacked and checked for damage, the unit can be started up. The individual start-up steps are:

- connect to power supply.
- switching on the unit.
- ensuring antenna reception (if navigation is desired)

Power supply

Note:

You can charge the Navigation device via the car charger cable included in the scope of delivery or via the optionally available mains power supply unit. When the Navigation device is connected to a PC, it is supplied with power via the PC and does not consume battery power.

Using the battery

The internal power supply is via the integrated rechargeable battery. The rechargeable battery is maintenance-free and does not require any particular care.

You are alerted by a warning message when the battery should be recharged. After the alert, the device can still be used for approximately 10 minutes before switching off automatically.

Note:

Note that if the battery is completely discharged, it may take up to a minute before the device can be switched on again.

Note:

In the event of a defective battery, please contact your authorised dealer. Please do not attempt to remove the battery yourself.


Connection for the cigarette lighter

Note:

If the cigarette lighter has recently been used and is still hot, wait until the lighter socket has cooled down.

Connect the power supply via the vehicle battery and the cable provided for the cigarette lighter as follows:

- > Grasp the connector of the connection cable and insert it gently without force into the connector socket of the navigation device up to the stop, or in the case of a device with an active cradle, on the underside of the supporting plate. (Model dependent, this step is not required on navigation devices with magnetic holders)

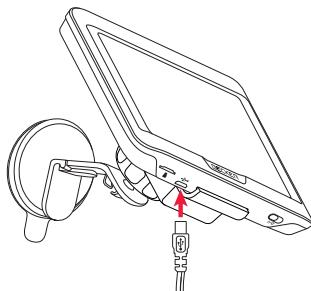

- > Insert the adapter into the cigarette lighter.

Note:

When the engine is switched off, the power supply slowly discharges the vehicle battery via the cigarette lighter! Do not therefore operate the Navigation device for long periods with the engine switched off.

To receive TMC messages (depending on the model), the power supply must be connected to the supporting plate in the case of a device with an active cradle.

Connection to the mains outlet

⚠ Danger!

Make sure that your hands are not wet and that the power supply unit is dry. Only connect the power supply unit to a permissible mains power supply.

Connecting to power supply

Connection to the public mains grid is achieved using the optionally available mains power supply unit. Please proceed as follows to connect to the mains:

- > Hold the connector and push it all the way into the connecting socket in the Navigation device without using excessive force.
- > Insert the plug of the power supply unit into the socket.

Note:

Remove the power supply unit when not using the Navigation device for longer periods of time.

TMC antenna (depending on the model)

The supplied TMC antenna is integrated into the cable for power supply.

The TMC antenna runs in parallel with the cigarette lighter cable in the delivered condition.

If the TMC reception is poor, you must remove the cable of the TMC antenna from the cable for the cigarette lighter.

Note:

The TMC antenna must be installed in such a way that it does not distract you while driving.

GPS antenna

Unit antenna

The GPS antenna is integrated into the housing.

Note:

The integrated GPS antenna is not suitable for use in vehicles with anti-glare windows (metallised thermoglass or metal foil, indicated by the window label - SIGLA SOL, SIGLA CHROM, SIGLA, KOOL-OF, SUNGATE, etc.) and vehicles with fine-meshed heating wires in the windows.

Cable for vehicle integration (depending on model, optional)

With a 4-pin 3.5mm jack cable you can integrate your Navigation device seamlessly into your vehicle.

- connect your Navigation device to the phone mute function of your audio system. If the cable is connected correctly, your audio system will mute the car radio during navigation announcements.
- connect your Navigation device to your audio system for output of the audio signal.



> Plug the cable into the designated 3.5 socket on the underside of the device.

Note:

Once the cable is connected, the loudspeaker of the basic device is switched off.

Cable for rear view camera (depending on the model, optional)

You can connect your rear view camera to your navigation device using a 4-pin 2.5mm AV cable. Insert the cable into the socket provided on the back of the basic unit, also see page 18.




You can make the necessary settings in the chapter "Rear View camera" on page 125.

Memory card

Your Navigation device has a slot for a micro SD memory card.

As the map data is stored in an internal memory on the Navigation device, the slot for a micro SD memory card is used for updates and for viewing images.

The memory card can also be used for supplementing the map data.

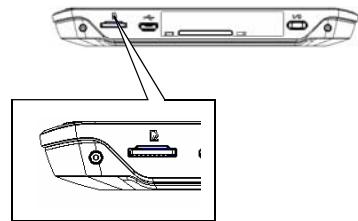

The card slot is located on the bottom side of the device. The card slot is equipped with a spring-actuated locking and ejector mechanism.

Inserting the memory card

- > Remove the memory card from its packaging without touching or soiling the contact bar.
- > Hold the memory card so that the contact strip is facing towards the rear of the unit.
- > Guide the memory card into the card slot.
- > Exert a little pressure and slide the memory card into the card slot until it snaps in.

Ejecting the memory card

The card slot ejects the card so that you can pull it out with two fingers.

- > Use your finger to gently press the memory card against the spring force into the card slot and then release it.

The card is ejected.

- > Remove the memory card and place it in the packaging while ensuring not to touch contact bar.

Unit bracket

The Navigation device can be attached directly to the windscreen with the unit holder.

Note:

The Navigation device and unit bracket must not be exposed to long periods of direct sunlight. Temperatures inside the vehicle of +70 °C and higher may damage parts of the bracket.


Fitting the unit bracket

Note:

Fasten the unit holder such that your field of vision is not impaired when the Navigation device is installed and ensure that the unit is outside the deployment area of the airbag.

Ensure that the electrical connection cable does not hamper you from accessing the vehicle's controls.

Clean the attachment surface on the windscreen to ensure that it is clean and free of grease. Do not use greasy or soapy cleaning agents.

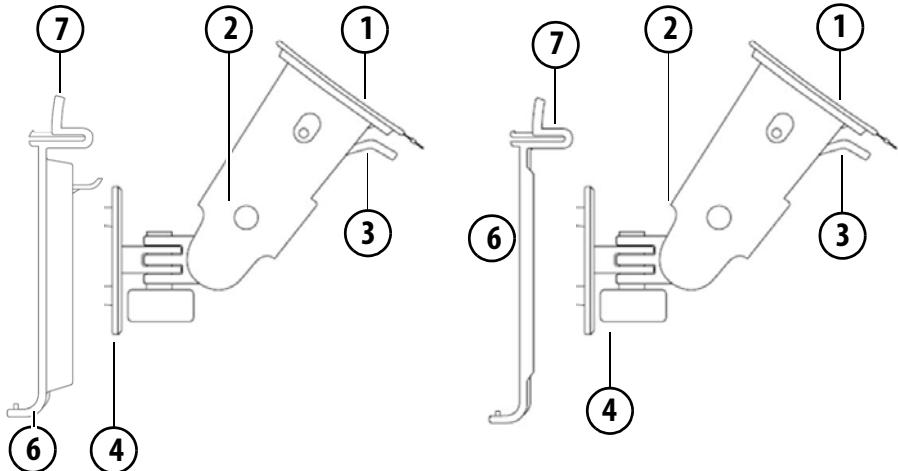

- ① Suction surface
- ② Base
- ③ Lever
- ④ Fastening screw
- ⑥ Carrier plate
- ⑦ Release button

Similar to figure, on devices with magnetic holders no unlocking button is present ⑦.

On the windscreen

The unit holder can be attached directly to the windscreen using the suction mechanism.

- > Press the carrier plate onto the four retaining lugs of the unit holder.
- > Select a suitable spot to attach.
- > Loosen the fastening screw ④ slightly.
- > Press the base ② with its suction surface ① against the windscreen. Turn the unit holder such that the carrier plate is positioned roughly in the desired viewing direction.

> Press the lever ③ down.

The holder has attached itself firmly to the windscreen. It can now be adjusted with precision. In order to remove it, operate the ③ lever again.

Adjusting the unit holder's position

- > Loosen the fastening screws ④ and ⑤ until the carrier plate ⑥ can be moved without using excessive force.
- > Move the carrier plate ⑥ to the required position and hold it in this position.
- > Tighten the fastening screws ④ and ⑤ sufficiently so that the Navigation device is held securely in place when the vehicle is in motion.

Attaching the Navigation device


- > Position the Navigation device with the attachment point on the bottom of the housing, onto the carrier plate ⑥.
- > Without using excessive force, press the Navigation device onto the carrier plate ⑥. The Navigation device locks into place.

Removing the Navigation device


Press the button ⑦ on the top of the carrier plate ⑥. This unlocks the Navigation device which can be removed from the carrier plate.

Devices with magnetic holders

The unlocking button ⑦ is not present. First place the navigation device with the upper mounting point onto the carrier plate ⑥ and fold down the navigation device. The magnet holds the navigation device securely on the carrier plate. To remove the navigation device, first take it off from the carrier plate at the bottom.

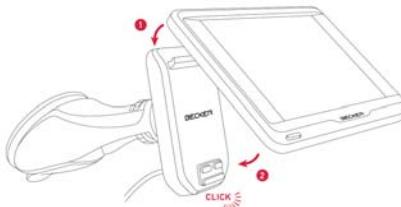

Switching the Navigation device on/off

 

With the ② button you can switch the device off, on or to the sleep mode.

Switching on

> Press the button on the top of the Navigation device.

The unit is switched on. The manufacturer's logo appears on the touchscreen.



When the Navigation device is started for the first time, the language selection is displayed automatically.



Using the buttons or the scroll wheel, it is possible to scroll through the list in the direction of the relevant arrow.

- > Press the button for the required language.
- > The selection is confirmed by pressing **OK**.



- > Then select the desired voice.

Note: for models with TTS

Voices with a (TTS) tag support the text-to-speech function (e.g. announcing roads and reading out text messages).

A short example announcement is given.

- > Confirm your selection by pressing the **OK** button.

The following prompt appears shortly afterwards:



- > If you agree to the request contained in this prompt, press the **OK** button.

Note:

Use of the Navigation device is only permitted in accordance with the national road traffic regulations applicable at the time.

Switching off

You can switch the unit off at any time.

- > Press the button on the top of the Navigation device.

The Navigation device switches to sleep mode.

- > Press the switch on the top of the navigation device for longer than 3 seconds to finally switch it off.

Note:

We recommend that you place the Navigation device in sleep mode in the event of short interruptions to operation (of up to a week).

This significantly reduces the switch-on time and the Navigation device finds the satellites required for navigation much faster.

If route guidance was active when sleep mode is activated, it is automatically resumed if the Navigation device is switched back on again within approx. 4 hours.

If the device cannot be switched off anymore or no longer works reliably, it is possible to switch off the device completely by pressing the button on the top for longer than 7 seconds.

Basic information about the touch screen

The Navigation device is fitted with a touch screen.

Note:

To ensure that the display's surface is not damaged, you may only touch it with your fingers or a blunt, non-smearing object.

Operation

When you touch a button on the touch screen, the button in question is briefly shown outlined in red to confirm the selection.

If you touch a button that is not active at the moment, a short signal tone sounds.

Calibration (model dependent)

A calibration can only be carried out on devices with resistive display, devices with capacitive display do not have to be calibrated.

If the touch screen responds inaccurately, a calibration must be carried out.

The calibration function is started from the  menu (see also page 142).

Basic information about the menus

During operations, you are assisted by various menus and entry windows.

The main menu

The top menu level is the main menu. The individual applications are started from the main menu. The main menu differs in terms of content and graphical representation; an example graphic is only shown here.



You will find information about the individual applications in the corresponding main chapters.

In addition to the individual applications, the main menu also contains further information and operating options.

You can tell whether a telephone is already connected by the symbol on the **Phone** button.



- ① Telephone connected
- ② Telephone not connected

The satellite symbol in the main menu or status line (model-dependent) shows you whether there is currently GPS reception or not.



- ① GPS reception
- ② No GPS reception

If route guidance is already active, the current destination address and a button for cancelling route guidance will be displayed between the two rows of buttons.



Press the button ① to cancel route guidance to the displayed destination directly in the main menu.

Entries made with the entry menu

Some applications require entries to be made via the entry menu. The entry menu is operated in a similar way to a keypad.

The keyboard layout can be switched between ABC and QWERTZ, see page "Keyboard layout" on page 138



The character entered on the keypad is displayed in the top line of the entry menu. The central area is used to enter characters. Help functions are provided in the right line. Descriptions of how to operate the menu are provided below.

Entering characters

Characters are entered by pressing the keys in the central area.



Once the entry is complete, the process is concluded by pressing the **OK** key and the entry passed on to the Navigation device for processing.

When a navigation destination is entered, the Navigation device compares the data with the stored data.

Only those letters that are still possible are available for selection.

Characters that cannot be selected are displayed greyed out.

Accepting proposals

During entry, the Navigation device makes proposals in the uppermost line. The proposals take into account your usage habits. For example, if you enter the city of Hamburg often, then after you enter the letter "H" the proposal "Hamburg" is automatically displayed. If no preferences are known for the letter entered, then cities/locations suitable for the entry are displayed as proposals.



> To accept the proposal, you may press either the input field or the **OK** button.

Scrolling through the lists

If you have already entered some of the letters of the selection you want, you can use the selection list to display all the destinations containing the combination of letters in question.



> To call up the selection list, press the  key.

Note:

The quantity of selection options is displayed in the form of the number on the button. When there are more than 300 options, the precise number is not displayed.

In the list, all the entries corresponding to the letters already entered are displayed. The letters entered are coloured red in the case of the individual entries.

The selection list appears.



- > Press the   arrow keys on the right hand side of the screen to scroll through the list.
- > Press the destination you want. The destination is adopted and the selection list is closed.

Special characters and accent marks

Special characters and accent marks do not have to be used when entering the names of towns and streets. The Navigation device will change entries from AE, OE and UE if necessary.

- > If, for example, you are looking for the location "Würzburg", then simply press "WUERZBURG" or "WURZBURG".

Special characters can be useful when naming destinations and routes.



> In order to switch to the special characters keyboard, press the button marked with an arrow.

The special characters keyboard is displayed.



> Enter the desired special character.

After you enter a character, the Navigation device automatically switches to the normal input menu.

To exit the special character keypad without an entry, press the button marked with the arrow.

Other character sets

Different character sets can be selected for the keyboard of the Navigation device.



> Press the button marked with an arrow repeatedly until the desired character set is selected.

Entering numbers

Switch to the numbers keyboard in order to enter figures.

> Press the **123** button.

The numbers keyboard is displayed.



> In order to return again to the keyboard for entering letters, press the button marked with an arrow.

Switching between upper and lower case:

During free text entry, it is possible to switch between upper/lower case and the automatic function.



> Press repeatedly on the button in the top right-hand corner of the display until the desired method of entry is activated.

The inscription on the button symbolises the method of entry.

- The **Abc** button represents automatic mode. This means that, on entry, the first letter is automatically in upper case and subsequently changes automatically to lower case.
- The **ABC** button represents the entry of upper case letters.
- The **abc** button represents the entry of lower case letters.

Deleting characters

To delete the last character, use the back key.



> To delete the character to the left of the cursor, press the key.

Inserting spaces

If you have an entry with two words, e.g. for names of towns, the words should be separated by a space.



> To enter a space, press the key.

The back button

The button is located on the bottom left of the device.



It has various functions:

- Depending on the menu context, if pressed briefly, you will be returned to the previous entry level.
- The main menu is displayed by pressing and holding the button.
- Depending on the model, the Back button is either integrated on the screen or positioned on the edge of the screen as a button.

Content Manager

The Content Manager is a PC-based application containing a number of important functions to help you manage the content on your Navigation device.

With the Content Manager you can:

- back up the content saved on the Navigation device to your PC and restore it later to your Navigation device,
- download current content from the Internet and install it on the Navigation device.

To use the Content Manager, you will need the USB cable provided as well as a computer that meets the following minimum requirements:

	Minimum
Operating system	Windows
Processor	300 MHz clock frequency
Main memory	256 MB
Free storage space	2 GB

Installing the Content Manager

You can install the Content Manager on your computer with the following steps:

- > Switch the navigation device completely off, see "Devices with magnetic holders" on page 26.
- > Connect the USB interface of the device directly to a USB port of the computer using the USB cable supplied.
- > Switch on the navigation device.
- > If the application does not start automatically, please start the file "ContentManager" manually in the folder "ContentManagerStarter.exe".
- > Select a language from the list and then click on **OK**.
- > Read the welcome page and click on **Next** to continue.
- > Select the installation folder. A default installation folder is already specified. To select another folder, either type in the path name or click on **Browse** and define another folder.

> Click on **Install** to start the copying procedure. Click on **Details** to see the details during copying.

The Content Manager is automatically started immediately after installation. Remove the check mark from the box if you do not want this.

This completes the installation procedure.

> Click on **Finish** to exit the installation program.

Starting the Content Manager

Execute the following actions to start the Content Manager:

- > Switch the navigation device completely off, see "Devices with magnetic holders" on page 26.
- > Connect the USB interface of the device directly to a USB port of the computer using the USB cable supplied.

Switch on the Navigation device.

Note:

When you connect the Becker Navigation device to the PC for the first time, the PC installs all the necessary drivers and then displays the message "Your unit is now ready to use".

After a short time, the Navigation device is displayed as a removable storage medium on the computer.

- > Click on **Start > All Programs** on the computer.
- > Select **Becker**.
- > Click on **Content Manager**.

When the Content Manager is started, the program executes a number of steps before you can start to manage your navigation software content.

Each time the program is called, a connection is established to the Internet to check whether a new version of the ContentManager is available. If a new software version is found, the Content Manager gives you the option of installing it. We recommend that you always agree to the upgrade, if one is available. If a new software version is found, you have the following options:

- Click on **Yes** to accept the new software version. The new version is downloaded and installed before you can start the Content Manager.

- Click on **No** to start the Content Manager with the version already installed.
- If the new version is a critical update, the **Exit** button will be shown instead of the **No** button. You must install the new version, otherwise you have to exit the application.

If you have not yet made a backup of the navigation unit, the Content Manager will ask you each time it starts whether you would like to make a complete or partial backup copy.

Note:

We recommend that you always create the backup. Otherwise you will not be able to restore the content in the event of loss of data.

Transferring pictures

Pictures* can be saved on a separate micro SD memory card (not included in the standard delivery) or in the internal memory of the navigation device in the "Media" folder.

Files can be transferred via a card reader or a USB connection.

Note:

Switch off the navigation device completely, see "Devices with magnetic holders" on page 26, before connecting the navigation device to the computer. We recommend that you give files and directories self-explanatory names so that it is simpler to find these again, if needed.

Faults

Malfunctions in the operating system or in the unit are displayed accordingly. If the desired function cannot be performed after that, you should restart the navigation device by pressing the button on the top for longer than 7 seconds.

If the messages reappear or the unit does not function correctly for any other reason, please contact your local dealer. You can also try to find a solution to your problem in the FAQ in the Support area on the Becker homepage (www.mybecker.com).

Note:

Never attempt to open the unit yourself. Please contact your authorised dealer if you are unable to remedy the fault.

Download manager (model dependent)

The integrated Download manager allows you to easily perform updates such as the lifelong map updates, lifelong speed camera warning updates as well as updates of the learning navigation directly on the device, without connecting to the PC at all. As soon as contents for your device are available, you will receive notification on your device automatically if the Wi-Fi® Internet connection is active. No matter where you are – a Wi-Fi® Internet connection at home or a mobile smartphone connected via Tethering is sufficient and you can download the updates immediately and without any time-consuming delays. You can also download updates later, of course, by pressing the  button in the main menu or in the Tools. Please note that the navigation menu is not available while downloading updates.

Note:

A Wi-Fi® Internet connection via a local or mobile hotspot is a prerequisite for use. The data transmission may result in additional costs (home Internet flat rate or a mobile contract with data flat rate is recommended). The activation of Wi-Fi® is described in the chapter entitled Wi-Fi® Settings on page 143.

The prerequisite for using lifelong map updates is the one-time online activation in the Becker Content Manager within 30 days after using your device for the first time.

The speed camera detector must first be purchased in the BECKER Online Shop with the enclosed voucher code. More information at www.shop.mobilenavigation.mybecker.com. Operating the speed camera warning, or carrying it with you so that it is ready to be operated, is a regulatory offence in Germany and is therefore prohibited.

Additionally, it may constitute a violation of the law in other countries too. Before starting your journey, please find out about the regulations that are currently valid in the countries in which you are travelling. United Navigation GmbH accepts no liability for the legality of the installation or use.

The prerequisite for using the learning navigation is to first agree to updates of the learning navigation via the Becker Content Manager. Automatic data transmission will only take place upon your explicit consent.

If you select the  button in the main menu or in the Tools, you will be taken to the initial menu of the Download Manager:

**Note:**

Your navigation device should be connected to a power supply via the enclosed USB power supply or the vehicle adaptor cable in order to prevent damage that an empty battery can cause during the map update.

Map Update

With the  button you can select which new maps you want to download. The system is also capable of only updating individual country maps. For best possible system speed and trouble-free cross-national routing, however, we recommend a complete update of all available countries for your device.

In this view, you can also see the volume of data generated during the download. Please note that considerably large amounts of data can be generated, especially when downloading map updates, which could exceed the free volume included in mobile telephone contracts. Therefore, we recommend using home Internet access that generally has no download volume restriction.



If you select a button on the left (map or self-learning navigation), a description of the download will be displayed. With the button on the right, next to the map description, you can start the download. If more than one file is available, you can choose individual maps or all maps at once.



Once you have made your choice, you can start downloading by selecting the **Download** button. The download is started and you are informed about the progress during the download. The duration of the download depends on the speed of the Internet access and Wi-Fi® network connection.

You can use the button to pause an individually ongoing download at any time.

You can use the button to restart an individually paused download.

The button provides you with additional options:

- Cancel all ongoing downloads
- Pause all ongoing downloads
- Resume all paused downloads

After downloading all the updates, you still have to install the downloads. You can do this either by selecting the **Install** button or by selecting the button in the Download Manager.

Note:

During an active download, you cannot install the updates that have already been downloaded. Either wait until all data has been downloaded or pause any downloads that are required less urgently. Do not disconnect the navigation device from the connected power supply during the installation!

Speed camera detector update

With the button in the Download Manager menu you can download the new speed camera detector updates. If no new data is available yet, you will be informed about this via a popup window.

Resuming downloads

With the button in the Download Manager menu you can resume paused downloads. The function is only selectable if downloads were paused previously.

Installing updates

With the  button in the Download Manager menu you still have to install the downloaded updates before you can use them. The button is only selectable if completely downloaded files are available for installation.

The updates will also be installed after the next restart of the device. If you only switch the device to sleeping mode, the downloaded updates will not be installed until you have switched off the device completely.

Transferring pictures

Images*, music* and videos* can be stored on a separate Micro SD memory card (not included in the scope of delivery) or in the internal memory of the Navigation device in the "Media" folder. Files can be transferred via a card reader or a USB connection.

Note:

Switch off the navigation device completely, see "Devices with magnetic holders" on page 26, before connecting the navigation device to the computer. We recommend that you give files and directories self-explanatory names so that it is simpler to find these again, if needed.

Faults

Malfunctions in the operating system or in the unit are displayed accordingly. If the function you want cannot then be executed, you should restart the Navigation device using the On/Off switch. In the case of devices without I/O switches, you can restart the device by pressing the button on the top for longer than 7 seconds.

If the messages reappear or the unit does not function correctly for any other reason, please contact your local dealer. You can also try to find a solution to your problem in the FAQ in the Support area on the Becker homepage (www.becker-navigation.de).

Note:

Never attempt to open the unit yourself. Please contact your authorised dealer if you are unable to remedy the fault.

What is navigation?

The term "navigation" (lat. *navigare* = to travel by sea) is generally understood to mean the determination of a vehicle's location, the determination of its direction and its distance from the desired destination and the required route to get there. Stars, prominent landmarks, compasses and satellites etc. are used as navigation tools.

With the Navigation device, the location is determined by the GPS receiver. The **Global Positioning System (GPS)** was developed during the 1970s by the US military as a weapons guiding system.

GPS is based on a total of 32 satellites which orbit the Earth and transmit signals. A GPS receiver receives these signals and calculates its distance to the individual satellites based on the signal travel times, and then determines your current geographical position.

Signals from at least three satellites are required to determine your position; your height above sea level can be calculated if signals are received from four or more satellites.

The Navigation device determines the direction and distance from the destination using a navigation computer and a digital street map held in its internal memory.

For safety reasons, route guidance **is given predominantly in spoken form**.

This is supported by a direction indicator and a map display on the touch screen.

Safety instructions

- Road traffic regulations always take priority. The navigation system is merely an aid, data/information may in select cases be incorrect. The driver must decide in each situation by him- or herself if he or she will follow the directions.
No liability will be assumed for incorrect directions provided by the navigation system.
- When first put into use it can take up to 30 minutes to fix the position.
- Observation of traffic signs and local traffic regulations must always take priority.
- Traffic guidance is restricted to passenger vehicles. Special driving recommendations and regulations for other vehicles (e.g. commercial vehicles) are not included.
- Destinations may only be entered when the vehicle is stationary.

Selecting Navigation

Navigation mode is called up from the main menu. New destinations can be entered in the menu "New destination". Destinations that have already been visited or saved can be selected in the menu **My destinations**.

> In the main menu, press the button **My destinations**.


Note:

If an address is displayed in the lower edge of the main menu, this means that route guidance has already been started to the displayed address.



Home address

When you press the **Home** button you will be asked to enter an address if no home address has yet been entered.

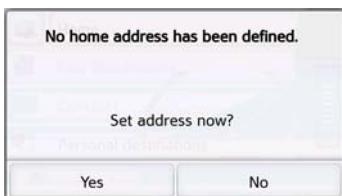

> Press the **Yes** to enter the address. You can then enter a destination as described under "The New destination menu" on page 46.

Note:

The menu items **Set current position** and **Select from last destinations** (fast access mode) can also be used to select a destination.

If you have already entered your home address, you can start route guidance to your home address in the first line. A home address once entered can be modified later.

In the "My destinations" menu, next to the **Home** option press the  button.



> Press the **Change** button to enter a new home address. The menu for selecting the destination appears.



Here you can set the new home address for example using an intelligent text entry field.

Smart Guess

The two addresses that can be selected with the button, , is a selection of the addresses last visited. Depending on the time of day and your current position, the two most likely destinations are displayed and can be selected directly.

Last destinations list

The last destinations visited and saved destinations are displayed in the Last destinations list and can be selected directly. The menu for entering destinations can also be called up using the fast access function.



The destination list

The destination list displays, line by line, all destinations available for fast dialling. Each line of the destination list is divided into two fields. Each list field is designed as a button. The destination is shown on the right-hand button and the properties of the destination are displayed using the left icon.

Note:

Up to 200 of the most recent destinations are automatically stored in the destination list. If the storage capacity is reached, the oldest destination in the list is automatically deleted to make room for each new destination. However, important destinations may be protected. If you select your home address and it has not yet been defined, you will be requested to enter the address.

Icons used

The following icons are used in the destination list:

Icon	Meaning
	This destination is a standard destination with no special features.
	This destination is protected. If the destination memory is full, this destination will not automatically be deleted. This can be performed manually, if required. In the case of a protected entry, you can also determine the position using the fast access function.

Operating the last destinations list**Start with existing destination**

The existing destinations are listed in the destinations list.

> Press the button for the desired destination to start route calculation.

The calculation begins.

When the calculation is complete, the map appears and the route guidance begins.

Scrolling through stored destinations

Using the   buttons or the scroll wheel, it is possible to scroll through the list.

Displaying or editing a destination

Any destination stored in fast access mode can be displayed and edited.

> Press the button to the left of the desired destination.

> A selection menu appears.

Option	Meaning
Show details	The data for the destination are displayed. From this screen you can display the destination on the map, display the route or start the route guidance.
Name entry	The destination can be renamed. If the destination is given a name it is automatically protected.
Protect entry	The destination is protected from automatic deletion. This function is only available for unprotected destinations.

Option	Meaning
Remove protection	The protection is removed from the destination. This function is only available for protected destinations.
Move up	The destination is moved forwards by one position. If the destination is moved it is automatically protected.
Move down	The destination is moved back by one position. If the destination is moved it is automatically protected.
Delete entry	The destination is deleted from the fast access mode.
Delete all entries	All destinations (except for the protected destinations and your home address) are deleted from the list.

Personal destinations

Using the **Personal destinations** button you can call up Google™ points of interest that have been imported into the Navigation device and start route guidance to one.

- See "Selecting a destination from Personal destinations" on page 44.

Contacts

Using the **Contacts** button you can call up Microsoft® Outlook® contacts that have been imported into the Navigation device and start route guidance to the address listed in the contact.

- See "Selecting a destination from Contacts" on page 45.

Selecting a destination from Personal destinations

You can call up Google™ points of interest that have been imported into the Navigation device and start route guidance to one.

Note:

To display custom Google™ points of interest, the Google™ KML files must be stored in the **Navigator\content\userdata\mydest** directory of the Navigation device.

- > In the main menu, press the button **My destinations**.



- > Press the **Personal destinations** button.



A list of the available destinations will be displayed.

Using the buttons or the scroll wheel, it is possible to scroll through the list.

Note:

If the list contains numerous entries, it may be a good idea to search for the desired destination by selecting **Search entry** and using the input menu. A maximum of 1000 destinations can be imported.

Newly imported destinations are filed at the start of the list.

> Select the desired destination.

Route guidance to the selected destination will be initiated.

Editing Personal destinations

> In the list of your own destinations, press the button in front of the destination that you wish to edit.

Select **Delete entry** if you wish to delete the destination from the list. Select **Delete all entries** if you wish to delete the entire list.

Select **Show details** if you wish to display details about the destination.



Press the **Start** button to begin route guidance to the destination straight away.

You can also display your chosen destination on the map (**On map**), store it in fast access mode (**Save**), display the route to the destination (**Show route**) or call the number if a telephone is connected and a phone number is available by pressing the button with the symbol.

Selecting a destination from Contacts

You can call up Microsoft® Outlook® contacts that have been imported into the Navigation device and start route guidance to one.

Note:

The Microsoft® Outlook® contacts are imported via the Content Manager.

> In the main menu, press the button **My destinations**.



> Press the **Contacts** button.



An input menu appears if there are more than 10 contacts. If there are fewer than

10 entries, a list of contacts is displayed straight away.

- > In the input menu, select the first letters of the entry you are looking for.
- > Press the **OK** button when the name you want is displayed in the top line.

If there are 5 or fewer entries available with the letter combination entered, a list containing these entries will automatically be displayed.

Note:

You may also first have a list displayed that corresponds to the letter combination entered. For this purpose, press the >300 button in the input menu.

- > Select the desired entry in the list.



Press the **Start** button to begin route guidance to the address displayed for this contact straight away.

You can also display the address shown for the contact on the map (**On map**), store it in fast access mode (**Save**), display the route to the destination (**Show route**) or call the number displayed if a phone number is provided (button with the symbol).

If there are a number of addresses provided for the chosen contact, you can select one of them after pressing the button **①**.

If there are a number of phone numbers provided for the chosen contact, you can select one of them after pressing the button **②**.

The New destination menu



- > In the main menu, press the button **New destination**.

The menu for new destinations appears.



Layout of the New destination menu

Enter address

The various steps from selecting an address to starting route guidance can be carried out using the **Enter address** button.

- See "Entering the address" on page 47.

Select Point of Interest

Points of interest such as airports and ferryports, restaurants, hotels, petrol stations or public buildings can be selected and route guidance started using the **Select Point of Interest** button.

- See "Points of interest" on page 55.

Travel Guide (model dependent)

With the travel guide, you can select, for example, MARCO POLO Top-Highlights or MARCO POLO Insider Tips and start the guide destination there. See "Travel Guide (model dependent)" on page 59.

Select on map

With the button **Select on map**, you can select a destination directly on the map and start route guidance.

- See "Selecting a destination from the map" on page 60.

Enter geo-coordinates

The geographic coordinates for a destination can be entered and route guidance started via the **Enter geo-coordinates** button.

- See "Coordinate entry" on page 61.

Route planning

A route with several waypoints can be planned using the **Route planning** button.

- See "Route planning" on page 61.

Entering the address

The **Enter address** button in the destination input menu opens the menu for entering addresses.



> In the destination input menu, press the **Enter address** button.

The menu for entering addresses appears.



Note:

By pressing the **Clear form** button (top right) you can delete all entered data apart from the country.

Selecting a country

You can select a country from those available using the button for the country of destination. A country is adopted automatically in the address input menu after selection. If a country of destination has already been entered it will remain until you select a different country.



> Press the button containing the country of destination to access the country selection list.

The selection list appears.



> Press the button for the desired country.

Note:

If required, press the arrow keys or use the scroll wheel on the right of the screen to scroll through all available countries of destination.

The symbol indicates the countries for which an address can be entered using speech. (depending on the model)

Selecting an address and starting route guidance

You can enter the exact destination address in the address input menu.



The following settings can be made in the address input menu:

- Town
- Zip code (or postal code)
- Street and house number
- Junctions as an orientation aid

It is also possible to:

- search for a point of interest near to the address entered (**POI search**). This can be entered as described under "Point of interest near to an address" on page 57.
- save the destination in fast access mode,
- show the route on the map. For details please see page 100.
- start the route guidance straight away.

Selecting a town

The destination can be entered by either using the name or ZIP code.

When you enter the letters of a place, the navigation device displays suggestions (See "Accepting proposals" on page 30). If you do not want to accept the proposal, just enter the other letters of the location you want.

The Navigation device excludes all impossible letter combinations and ZIP codes and activates only letter fields or numerical fields that lead to an existing location or ZIP code.

> Select the option of entering the town or postcode.



> Enter the letters of the destination town or the numbers of the postcode consecutively.

Note:

If two words need to be entered you must separate them with the character

- .

When sufficient letters have been entered it will automatically switch to a list from which you can select the town. However, you can switch to the list before this by pressing the button.


Note:

If you have entered a postcode, the name of the town will be hidden in the input menu to start with. If you then enter the street name, the name of the town will then also be displayed.

Using the town list

Once a few letters of the desired town have been entered you can display a list of all the towns with the relevant letter combinations or this list will be displayed automatically.

> Press the button on the right of the screen to call up the list.

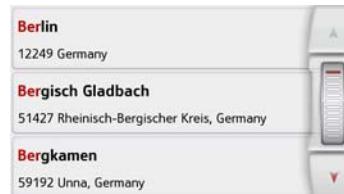

Using the buttons or the scroll wheel, it is possible to scroll through the list.

> Press the button for the required town.

Selecting the street

In the **Street** menu field the street and house number can be entered separately using a letter and number field.

The Navigation device excludes all impossible letter combinations and activates only those letters that could give an existing street name.

A house number can only be chosen once the street has been selected and if house numbers are included in the data.


> Enter the letters of the destination street consecutively.

When sufficient letters have been entered it will automatically switch to a list from which you can select the street. However, you can switch to the list before this by pressing the  button.

Using the street list

Once a few letters of the desired street have been entered you can display a list of all the streets with the relevant letter combinations or this list will be displayed automatically.

> Press the  button on the right of the screen to call up the street list.

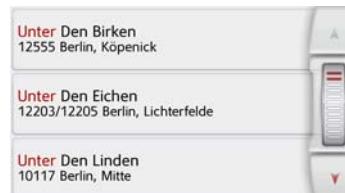

You can scroll through the displayed list using the   buttons.

> Press the button for the desired street.

Selecting the Intersection

After entering the destination town and street, you can enter a junction so as to further limit the choice.

Note:

Instead of entering a junction, you can also enter a house number. However, it is not possible to enter both at the same time.

> Press the **Intersection** button. The input menu for the name of the junction will appear.

> Enter the name of the junction. Once a few letters of the desired street have been entered a list will automatically be displayed.

> Press the button for the desired street.

Selecting a house number

After entering the destination town and street, you can enter a house number so as to further limit the choice.

Note:

Instead of entering the house number, you can also enter a junction. However, it is not possible to enter both at the same time.

> Press the **No.** button.

The input menu for the house number will appear.

> Enter the house number and then press the  button.

Displaying the route

Once the address has been entered, the address input menu allows the route to the destination to be displayed on the map.

> Press the **Show route** button to display the route on the map.

The route is calculated.



You can start the route guidance directly from this screen using the **Start** button.

The other options on this screen are described under "Displaying the whole route" on page 100.

Storing a destination

In the address input menu, the **Save** button opens a menu where a name can be entered for the specified destination. If the desired name has been entered and  has been pressed to accept it, the destination is transferred to fast access mode and protected.

Starting navigation

The **Start** button starts the route guidance.

All data entered thus far is processed when calculating the route.

> Press **Start** to start the route guidance.



The route is calculated. The map will then be displayed and the route guidance will begin.

Note:

The symbols above the progress bar refer to restrictions that you may have activated (e.g. unpaved roads, toll roads).

If the route guidance is already running you will be asked whether the new destination should replace the old destination or if the new destination should be regarded as a waypoint.



> Select between **Add as stopover**, **Add as new destination** or **Replace old destination**.


If the route guidance is already running and a waypoint has already been entered you will be asked whether the new destination should replace the old destination or the waypoint.



> Select **Replace stopover** or **Replace old destination**.

Note:

If there is no GPS signal when the route is calculated, the following will be displayed:

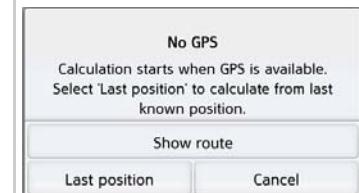

When a GPS signal is available, the route calculation will start automatically.

When the **Last position** button is pressed, the last known position is used and the route calculated from this position.

Entering address by speech (selected models)

You can start the spoken address entry from the address entry menu by pressing the  button.

Notes:

- Only one address can be entered using the voice entry function. Lists for more precise selection cannot be operated using speech.
- The destination country cannot be entered using speech.
- The  symbol in the list of countries indicates the countries for which address entry using speech is possible.
If entry using speech is not possible, the  button will be displayed greyed out.
- An address and the street number must be spoken in the language of the destination country.

After pressing the  button, a menu that shows you how to say an address will be displayed.



You can say the address as soon as you see the lines next to the stylised face.

Notes:

- If a number of languages are spoken in the destination country (as is the case in Switzerland, for example), you can set another language by pressing the **Change language** button.
- You can say the complete address or just a part of it.
Possible entries include:
 - street number - street - town
 - street - town
 - town

> Say the address.

If your entry is unique, after a short time the menu for entering addresses will be displayed with your entry filled in.



If the address displayed does not match the address you said, you can make appropriate changes.

If the address is correct, you can start route guidance, display the route or store the address as described on page 51.

If your entry was not unique or the Navigation device was not able to uniquely assign your entry, you will be shown appropriate lists. You can then select the address you want from these lists.

Depending on your entry, lists with town names, lists with street names or combined lists with town and street names can be displayed.

Note:

Voice entry can be restarted at any time in the lists by pressing the  button.

The following example shows a list in which a town can be selected.



Entries identified with the  symbol open up a further list when they are selected. This can be necessary if, for example, the same town name occurs a number of times in the set country.

Once you have selected the town or street you want in the lists, the menu for entering addresses is displayed after a short time with your entry filled in. You can then start route guidance, display the route or store the address as described on page 51.

Speech Dialogue System (selected models)

The Speech Dialogue System is an extension of the spoken address entry. As well as entering addresses directly, selected device functions can be operated via speech dialogue. This function is available in the following languages: German, English, Italian, Spanish and French.

Explanation of symbols

The following symbols are displayed on the left-hand side of the screen:

	Please speak
	Please listen
	Please click (to start voice control)

Objective

Please say a command.

	Destination	Address
	Route	Point of interest
	More...	Last destinations
		Home

You can enter the following destinations via speech entry:

- Address
- Point of Interest
- Last destinations
- Home

To enter an address, see page 61.

If you have not yet entered a destination,

or you have not set a home address (because this is the first time you have used the device), these fields are greyed out.



Points of interest are divided into different categories. Route guidance is also activated in the screenshot above, so the device asks if the petrol station should be located on the route or near the destination.

Route



When you enter a destination, the following options are available:

- Show route
- Delete route

- Block road

If there is not currently a route activated, this field is greyed out.

More...



When you click on **More...**, you can choose between three menu items.

Under **Where Am I?**, you can determine the current GPS position.

If you select **Country info**, you will be given information about the country you are currently in.

Help gives you useful information about speech entry. For example, it lists all phrases which can be used as soon as the speech dialogue is started. As well as these global commands, you will also find help for entering addresses or for points of interest.

Live POI Search (model dependent)

With the Live POI Search your Becker navigation device establishes a connection to our live Server. You have access to millions of addresses in Europe.

You can choose between:

- A Live POI Search in the vicinity,
- A Live POI Search near to an address
- A Live POI Search near to a destination

Subsequent operation is similar to how it is described in the chapter entitled Points of interest on page 55, except that no categories can be selected.

Points of interest

Points of interest (POI) are included in the map and can be displayed there. Points of interest include airports and ferry ports, restaurants, hotels, petrol stations, public buildings. You can use points of interests as navigation destinations.

Note:

You can only select points of interest in the area in question if the GPS reception is adequate for determining a position. Otherwise, the last position stored will be used.

You can extend the places of interest stored on the device by installing additional POIs in KML format on your device via the Content Manager.

> In the main menu, press the button **New destination**.



> Press the **Select Point of Interest** button.



You can choose between:

- a point of interest in the vicinity,
- a point of interest near to an address,
- a point of interest near to a destination,
- a point of interest along the route or
- entering a point of interest directly.

Point of interest in the vicinity

> Press the **POI nearby** button.



Press the arrow keys or use the scroll wheel to scroll through the list displayed.

> Select one of the available categories.

Note:

You can also press the **All categories** button. An input menu will then open and you can enter the name of a point of interest directly and confirm it.


For some categories, e.g. petrol stations, a further selection menu is displayed in which you can narrow down the choice further, e.g. by brand.

If you have selected the category, any points of interest belonging to the relevant category and available within the area in question will now be displayed.



The name, distance as the crow flies and the address is displayed for each entry.

> Select the desired point of interest.

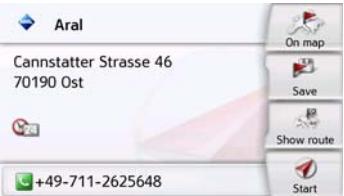

You will now receive additional information about your chosen destination.

> Press the **Start** button to begin route guidance to the point of interest directly.

In addition, the selected point of interest can be:

- displayed on the map (**On map**),
- saved in fast access mode (**Save**),
- used for displaying a route to the POI (**Show route**),
- if a telephone is connected and a phone number is available by pressing the button with the  symbol. (depending on the model)

Point of interest near to an address

> Press **POI near location**.



> Select the desired country.

> In the **City** or **Code** field, enter the town where you wish to search for a point of interest.

Note:

If you have already entered an address, this address will appear by default.

> Press the **Select category** button.

The available Points of interest categories for the city entered will be displayed.

> Select the desired point of interest as described under "Point of interest in the vicinity" on page 56.



> Press the **Start** button to begin route guidance to the point of interest directly.

However, you can also store your chosen point of interest in fast access mode (**Save**) or display the route to the point of interest (**Show route**).

Note:

Your can also press the **Select Point of Interest** button. An input menu will then open and you can enter the name of a point of interest directly and confirm it.

By pressing of the  button next to the selected POI, you can display the additionally available information for the destination.

Point of interest near to destination

> Press the **POI near destination** button.



The categories available near to the destination are displayed.

> Select the desired point of interest as described under "Point of interest in the vicinity" on page 56.

POI on route

> Press the **POI on route** button

The available Point of Interest categories available on the whole route will be displayed.

> Select the desired point of interest on the route as described under "Point of interest in the vicinity" on page 56.

Entering a point of interest directly

> Press the **POI search by name** button.



> Enter the desired point of interest or part of the name.

> Press the  button.

The Navigation device displays in a list all the points of interest corresponding to the name entered.

> Select the desired destination in the list.



You will now receive additional information about your chosen destination.

> Press the **Start** to begin route guidance to the point of interest straight away. However, you can also display your chosen point of interest on the map (**On map**), store it in fast access mode (**Save**) or display the route to the point of interest (**Show route**).

Calling special destination phone number (depending on the model)

You can dial directly phone numbers specified in the information on a point of interest

The prerequisite here is that a cell phone is connected via Bluetooth® wireless technology with the Navigation device.



> Press the button with the  symbol shown at the bottom of the point of interest information screen.

The call will be initiated.

Additional point of interest information

Any additional information that is provided for a point of interest can also be displayed.



To display the additional information, press the **More** button shown at the bottom of the point of interest information screen.



You can scroll through the displayed text using the arrow buttons or the scroll wheel.

Travel Guide (model dependent)

The Travel Guide acts in a similar fashion to the "Enter point of interest" function (see also page 47).

The Travel Guide for Berlin is already pre-installed. All travel guides are available in 5 languages (D, E, I, S, F). Other languages are represented in English. Additional cities can be purchased from the ContentManager (see also page 33).

Selecting a destination from the map

You may also select a destination directly from the displayed map.



- > Press the **Select on map** button.
The map display appears.

Note:

You may need to make the area larger using the zoom buttons and in order to find the desired point. You can also move the map to the desired point.



- > Press the desired point lightly on the surface of the screen.
A flashing red cross will be displayed at this point.

Note:

By pressing the **GPS Position** you can display your current position again.

- > Press the **Select** button.



Where available, the address of your chosen point is displayed.

- > Press the **Start** button to begin route guidance to the destination straight away.

You can also search for points of interest in the vicinity of your chosen point using the **POI nearby** button.

However, you can also store your chosen point in fast access mode (**Save**) or display the route to the point of interest (**Show route**).

You can select a new destination by touching the map even during the route guidance in progress, in order to insert a stopover or to replace the old destination. When touching the display, a compass appears with arrows to adjust the horizontal display and the vertical display angle of the map. This function is described on page 97.

Coordinate entry

You can also enter your destination using geographic coordinates.

> In the main menu, press the button **New destination**.



> Press **Enter geo-coordinates**.



> Using ② select the value you wish to change.

> Using the two buttons indicated by ① select the direction required for the geographic longitude and latitude (east/west or north/south).

> Then enter the desired values using the buttons 1 to 0.

The entry field at the beginning may be displayed greyed out. Delete any entries in the field with the backspace button, in order to use the entry field. You can enter coordinates in three different ways.

The following formats can be used:

- Degrees Minutes Seconds.Decimal seconds e.g. 42°52'46.801"
- Degrees Minutes.Decimal minutes e.g. 48° 53.56667'
- Decimal degrees e.g. 48.89277778

Notes:

- The coordinates entered must correspond to WGS84 (World Geodetic System 1984).
- If you press button ③ your current geographic position will be entered into the fields.

> Press the **OK** button.

Where possible, an address matching the coordinates will be displayed. You can view the destination on the map, store it, display the route to the destination or start the route guidance straight away.

Route planning

The route planning menu allows you to create and select individual routes. To do this, enter the individual destination points for the desired route. It is then possible to travel to these points consecutively without having to enter any further information. You can also optimise the destination points entered and in so doing change their order.

> In the main menu, press the button **New destination**.



> Press the **Route planning** button.

In the route menu you can create a new route by pressing the **Create new route** button. Previously stored routes are shown in a list below this.

**Note:**

If no routes have yet been stored, the route menu is empty.

Scrolling through stored routes

> Press the arrow keys   or use the scroll wheel on the right of the screen to scroll through the stored routes.

Editing stored routes

You can add additional stages to a stored route, change the name of the route or delete it.

> Press the  button in front of the route you wish to edit.

By pressing **Add stage** you can now add a stage to the route.

After pressing **Rename route** you can give the route a new name.

Pressing **Delete route** will allow you to delete the route from the stored routes.

Selecting and starting a route

> Press a route to select it.
The route is loaded and displayed in the stage menu.



> Press the top button.

Note:

You can also select a leg of the route. The route is started as of this leg.



> Select the start point or your current position as the start point for route guidance.

Note:

If a start point is selected, this is only used to view a route.

The individual stages are calculated. A map of the stages will then be displayed.



> Press the **Start** button to start guidance for this route.

You can call up the route options using the **Options** button.

Simulation of the route

There is a play button  on the left under the map, used to start a simulation of the route.

If you touch the display after starting, a control bar is displayed at the top with control buttons for the simulation. You can pause the simulation with the  button, and continue it with the  button. The  button allows you to fast forward the simulation by a 16x speed. You can move from route section to route section with the  and  buttons.

If there is no further action, the control bar disappears after a few seconds.

Creating a new route

> Drücken Sie in der Routenplanung die Taste **Create new route**.



You can now enter an intermediate destination as described under "The New destination menu" on page 46 (**Enter address, Select from last destinations, Select Point of Interest, Travel Guide, Contacts, Personal destinations, Select on map or Enter geo-coordinates**). You also have the option of quickly selecting a destination using the **Select from last destinations** button.

> In the input menu, press the **OK** button to accept the relevant intermediate destination.

Notice (depending on model):

Here you can define a loading time. This, in turn, has an impact on the calculations of the arrival time for the subsequent destinations of the route.

> Enter the loading time in hours and minutes using the buttons. If you do not want to set any loading time, press the **No loading time** button.






- > Press **Add stage** to enter further intermediate destinations as described above.
- > When you have entered all intermediate destinations, press the **Done** button.



- > Give the route a name of your choice. The stage menu for the new route will be displayed.

Editing a route

- > Select the route you wish to edit.
- > Press the  button in front of the stage you wish to edit.

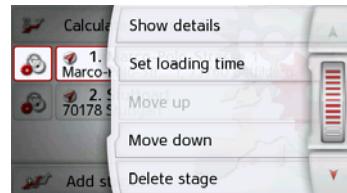

The edit menu will be displayed. The following options are available:

Option	Meaning
Move down	The stage is moved backwards by one position.
Delete stage	The stage is deleted from the route.
Replace stage	You can replace the selected stage with another intermediate destination.

Option	Meaning
Show details	The data relating to the intermediate destination is displayed. From this screen, you can display the intermediate destination on the map.
Entering loading time	You can define the expected loading time. This is necessary in order to display the most accurate expected arrival time possible.
Move up	The stage is moved forwards by one position.

Optimising a route

If you have entered several destinations for a route, you can use the Navigation device to optimise the order of the destinations for the journey distance. The route stored is retained even after optimization, however.

Call up the map display for the stages of the route.



> Press **Optimise**.

The route is optimised and recalculated.



The optimised route is displayed.

Navigation settings

The navigation settings contain all the settings that are relevant to the navigation functions.

Note:

All your settings must be confirmed by pressing the button. Only in a few cases it is possible to confirm selections in the menu using the **OK** button or the **Yes** button.

> In the main menu, press the button.



> Press the **Navigation settings** button.

This will take you to the navigation settings menu.

Configuration

Various pages containing functions are available in the menu:



You can go to the next or previous page of the settings by pressing the and buttons or the scroll wheel.

 
The Map view button

You can select whether the map is to be displayed in 3D or 2D mode, in a split screen with 3D or 2D display or in arrow mode.


You can also select whether or not 3D buildings available in towns should be displayed in 3D mode.

Further setting options are available to you in the extended settings.

> Press the **Map view** button in the settings menu.



The **Map view** settings window appears.

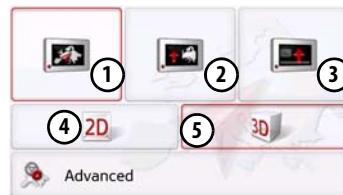

> Press the button **④** or **⑤** to select whether to use 2D or 3D mode.

> Press the button **①** to select the entire map.




> Press the button **②** for a split screen.



> Press the button **③** for arrow mode.



To call up the extended settings, press the **Advanced** button.

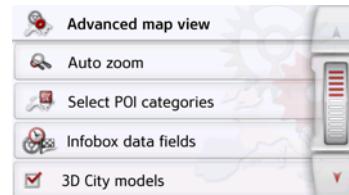

The following setting options are available in the extended settings:

- **Auto zoom**

You can select how the map changes when approaching an action point or at different speed.

- **Select POI categories**

You can select which symbols are displayed for points of interest on the map.

- **Infobox data fields**

In this menu you can define the data to be displayed in the Info box in the top left corner of the map view. You can select between Speed, Speed limit, Time and Height.

- **3D City models**

You can select whether or not 3D buildings available in towns should be displayed in 3D mode or not . This option is only available with the 3D view active.

- **Street names 2D/Street names 3D**

You can select whether the street names should be displayed () or not () in 3D or 2D mode.

- **2D heading up**

You can select whether the map should always be orientated to the direction of travel () or to the north () in 2D mode. This option is only available with the 2D view active.

Auto zoom

> Press the **Auto zoom** button in the extended settings.




Pressing the **Auto zoom** button switches the zoom function on () or off ().

When the zoom function is switched on, you can select whether the autozoom action should be weak, medium or strong.

Select POI categories

You can select which POI symbols are to be displayed on the map.


> Press the **Select POI categories** button in the extended settings.

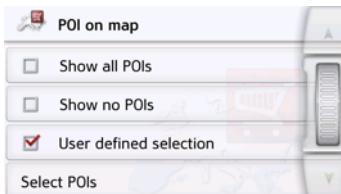

Selecting **Show all POIs** displays all points of interest on the map.

Selecting **Show no POIs** displays no points of interest on the map.

Selecting **User defined selection** and then pressing the **Select POIs** button allows you to determine for yourself in the menu which then appears whether each individual points of interest category is displayed or not.

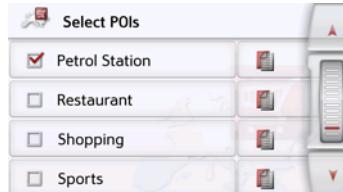

> You can then switch the display of entire categories on (✓) or off (□).

 
After pressing the **Select** button beside a category you can switch subcategories in further menus on or off.

> Confirm all your settings by pressing the **OK** button.


Selecting Info box data fields

In this menu you can define the data to be displayed in the Info box in the top left corner of the map view.

> Press the Info box data fields button.



The Info box data field selection window appears.

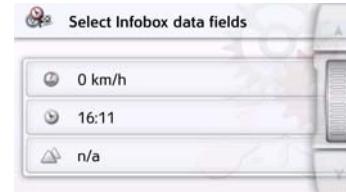

Touch the first field to select one of the possible options.

An options list appears on the right side over the window.



For the selected route (category With Route) you can choose from the display options Remove, remaining time, arrival time, speed, speed limit, time, altitude and traffic delays on the entire route (selected models).



Under these options, you can select displays for the travel without a selected route. Here you can only select between Speed, Speed limit, Time and Height.



3D city view

With this option, you can select whether or not 3D buildings available in towns should be displayed in 3D mode or not.

In the Advanced menu, press the 3D city view button to turn the function on or off.

> Confirm your setting in the Advanced menu by pressing the button.

 
Note:

This setting is only available in the 3D view.

The Route overview button


With the options in this setup menu you can select the Points of Interest to be displayed and whether TMC reports are displayed in the map view when pressing the Route overview  button.

> Activate the option All Destinations.



The Route Overview displays the Points of Interest selected in the POI Categories menu. The display is recalculated every two minutes.
 
> Activate the option TMC On Route.



The Route Overview in the map view displays TMC announcements.

> Press the Select POI Categories button.



The Select POI Categories window is opened. Three point of interest categories can be selected.



 
If you touch the preset option of one of the POI Categories (POI 1, 2 and 3), a selection list with 20 POI types appears.



The Guidance info button

In the **Guidance info** settings window you can select which additional information you would like displayed during route guidance.

> Press the **Guidance info** button in the settings menu.



The **Guidance info** settings window appears.



The following settings are available:

Setting	Meaning
Lane info	When this function is enabled, a small arrow indicates which lane you should move into in the case of multi-lane roads.

Setting	Meaning
Signposts	When this function is activated, you receive additional important information at traffic junctions about the sign you should follow.
Detour Assistant	If this function is activated, the Assistant will help you to avoid traffic jams or traffic disruptions. The responsiveness can be adjusted with 3 sensitivity settings.
Parking Assistant	If this function is activated, the Assistant will help you to choose a car park at the destination.
ExitAssistant	If this function is activated, the Assistant will help you if you leave the motorway unexpectedly.

Setting	Meaning
Country info	When this function is enabled, you will automatically receive generally applicable traffic information for the relevant country when you cross a national border (e.g. speed limits).
Lane Assistant Pro 3D	If this function is activated, you will see an animated, realistic representation of your lane at many junctions if available.
Junction view	If this function is activated, you will see realistic views of the current lane situation, if available, at many motorway intersections.

Setting	Meaning
Tunnel View	If this function is activated, you will see a three-dimensional tunnel view when entering a longer tunnel.

Note:

This information can only be displayed if it is contained in the map material.

- > Press the relevant button to switch the required function on or off .
- > Confirm your selection by pressing the  button.


The Route options button

You can edit your driving profile in the **Route options** settings window. The settings made here have an effect on the route selection and on the calculation of the estimated journey times.

> In the settings menu, press the **Route options** button.



The **Route options** settings window appears.

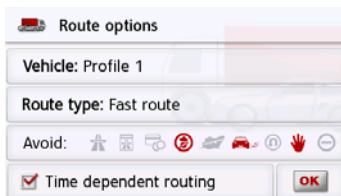

Selecting the vehicle profile (depending on model)

This setting influences the calculation of the expected time of arrival and blocks e.g. motorways for the bicycle setting.

> Select the mode of travel or the required vehicle profile after pressing the **Vehicle** button.



The different profiles are displayed and you can select the desired profile by pressing the appropriate button.

- 1 Saved profile truck with trailer
- 2 Saved bus profile
- 3 Saved mobile home profile
- 4 General truck profile
- 5 Car profile
- 6 Motorcycle profile
- 7 Bicycle profile
- 8 Pedestrian profile

After selecting the desired profile, it is displayed.


You can now change the selected profile, as described under "Truck and mobile home functions (depending on model)" on page 73 (only for selected models).



> Press the settings button or **130 km/h** button.



The window for selecting the maximum speed is displayed.

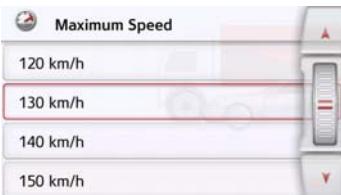

Select a speed and exit the speed menu with the back button .

> Exit the vehicle selection menu, too, with the back button .

The selected vehicle type is now displayed.

The required profile is displayed once selected.

Truck and mobile home functions (depending on model)

You can select or set the vehicle profile. For the truck profiles (depending on the model), you can define or select dimensions, weight, number of axles etc. Once the appropriate profile is set, a route is calculated on the basis of these settings.

See also the chapter on supplementary functions for trucks and mobile homes on page 108.

Danger of accident!

 
The information in the map material could be incorrect on account of sudden changes (e.g. construction sites)! The traffic situation and the signposts on site have priority over the information given by the navigation system.

Notes:

In the map display, roads are displayed with a light red contour if no specific information for trucks is available. You must therefore be particularly careful here.

With the GPS navigation activated the  symbol displays that there is no specific truck information available before the current road or the road to which the next driving manoeuvre is leading.

> Call up the option menu for the map screen.



> Press the **Route options** button (depending on model).

> Press the **Vehicle** button



Different menus are now displayed depending on the vehicle profile previously set.

> Confirm the profile currently set by selecting **OK** or select **Change profile** to change the profile.

You have different operation options in the car or truck profile menus displayed. You do not have any further setting options for all other profiles.

For the car profile:



For the general truck profile or saved truck profiles (depending on the model):



Here you can set the profile settings directly by pressing the buttons in the right-hand area as described on the following pages.

Setting truck profiles

Notes:

This function is only available with models with optimized route navigation for trucks, busses and mobile homes.

> Select one of the saved truck profiles or the general truck profile.



You can now set the selected profile:

- ① With this button you can set the size of the truck.
- ② With this button you can set whether the truck has a trailer and how many axles there are.
- ③ With this button you can set the maximum permissible weight as well as the actual weight.
- ④ With this button you can set the hazardous materials class of the truck.
- ⑤ Use this button to select tunnel restrictions. ADR tunnel categories B to E are available for selection.

With the three saved truck profiles you have the option to customize the truck symbol ⑤ and name ⑥

⑦ The window is displayed for selecting the maximum speed

Setting size

> In the profile settings, press the button for setting the size.



> Press the button next to the dimension to be entered.

An entry menu will appear.

> Enter the desired dimension.

> Confirm the entry in the entry menu by pressing **OK**.

Once you have made all the required settings, confirm your settings by selecting **OK**.

Setting trailer and axles

- > In the profile settings, press the button for the trailer and axle settings.



- > Use the ① button to select whether there is a trailer (✓) or not (□).
- > Select the total number of axles.
- > Confirm your settings by selecting .

Setting weight

- > In the profile settings, press the button for setting the weight.



- > Press the button next to the weight to be entered.

An entry menu will appear.

- > Enter the desired weight.

- > Confirm the entry in the entry menu by pressing .

Once you have made all the required settings, confirm your settings by selecting .

Setting hazardous materials class

- > In the profile settings, press the button for setting the hazardous materials class.



- > Select the required hazardous materials class.

Set tunnel category (ADR)

- > In the profile settings, press the button for setting the tunnel categories .

- > Select the required tunnel category.

If you do not select any of the available restrictions (B to E), all tunnels will be used for your route.

Once you have made all the required settings, confirm your settings by selecting .

Selecting vehicle category and name

Once you have changed one of the truck profiles, you have the option to enter the displayed truck symbol and name.



> Press the ① button to enter another name.

The entry menu will appear.

> Enter the desired name.

> Confirm the entry in the entry menu by pressing ②.

The name is changed.

> Press the ② button to change the displayed symbol.



> Select the desired symbol. The new vehicle category is displayed in the profile.

Selecting the route type

> After pressing the **Route type** button, select one of the following options.

Option	Meaning
Fast route	With this option, the fastest route in terms of travel time is calculated.
Economical route	With this option, the most economical route in terms of travel time and mileage is calculated taking into consideration further parameters such as gradients, for example.
Short route	With this option, the shortest route in terms of mileage is calculated.
Easy route	With this option, a route with as few manoeuvres as possible is calculated. This may result in larger detours.

Time-dependent route guidance

If this function is switched on (✓), information (statistical information) on the possible speed on certain segments at certain times of the day is also taken into account in the route calculation, provided this is available. This provides a more accurately calculated arrival time and may even result in a different route being selected.

Avoiding particular types of road

After pressing the button **Avoid** you can exclude various types of road (e.g. **motorways**, **ferries** and **toll roads**), from the route calculation. You can set one of the following options for each of these road types.

Option	Meaning
Permitted	With this option, the road type in question is included in calculating the route.
Prohibited	With this option, the road type in question is not included in calculating the route.

> Confirm your selection in the **Route options** window by pressing the **OK** button.


The TMC or Traffic button (model dependent)

The use of TMC is described below, Live Traffic behaves similarly here. You can configure settings for the reception of traffic announcements in the **TMC** settings window.

> Press **TMC** in the settings menu.



The **TMC** settings window appears.

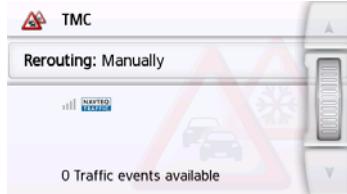


Setting	Meaning
Rerouting	This button allows you to choose whether the route change should be made Never , Automatically or Manually . (See "Taking announcements into consideration when calculating routes" on page 90.) The setting Never is equivalent to switching off the TMC function.

> Confirm your settings by pressing the  button.
 An automatic search procedure presets the transmitter with the best reception. The currently received TMC-transmitter appears on the display.
 The TMC announcements can be spoken by the voice, if the navigation settings in the **Voice guidance** menu the **Announce TMC events** option is activated.

The Traffic Button (model dependent)

When the navigation device has access to the server, the heading **Traffic** and another icon are displayed instead of TMC. The traffic announcements will always then be retrieved updated from the server. The settings are the same as described in the chapter entitled TMC.

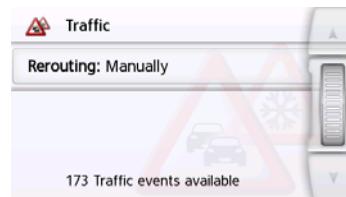

Notice:

The data transmission via your mobile phone may involve additional costs depending on the mobile phone contract. Please find out from your mobile phone provider before activating. If a connection to the server is not possible, e.g. because no mobile phone network is available for a longer period of time, then the system switches over automatically to TMC until a connection to the server is possible again.


The Voice guidance button

In the **Voice guidance** settings window you can make settings relating to the voice guidance of the Navigation device.

> Press the **Voice guidance** button in the settings menu.



The **Voice guidance** settings window appears.

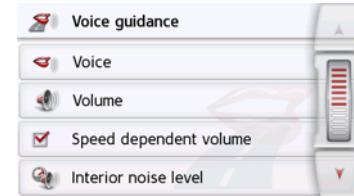

The following setting options are then available:

- **Voice**

You can select the voice that will make the navigation announcements for the language that has been set.

- **Volume**

You can select the standard volume for voice announcements for each start of the Navigation device, or switch off voice announcements completely.

- **Interior noise level**

With the **Interior noise level** button, you can adjust the speed-dependent volume control. To do this, select the interior volume level suitable for your vehicle.

With the **Dynamic** setting (selected models), the interior noise is measured with the aid of the integrated microphone, the volume is then continually adjusted depending on the noise level.

Notice:

If the announcements of your navigation device are too loud at high speed, you should select a quieter interior noise. If the announcements are too quiet, you should select a louder interior noise.

- **Announce streets**

Using the **Announce streets** button you can switch the announcement of the names of streets into which you are to turn on () or off ().

- **Announce time of arrival**

Using the **Announce time of arrival** button you can switch the automatic announcement of the expected arrival times on () or off ().


Note:

The **Announce streets** and **Announce time of arrival** functions are only supported by speakers with the TTS function.

Setting the Voice

In the **Voice** settings window you can set the voice that will make the navigation announcements for the language that has been set.

> In the **Voice guidance** settings window, press the **Voice** button. The **Voice** settings window appears.

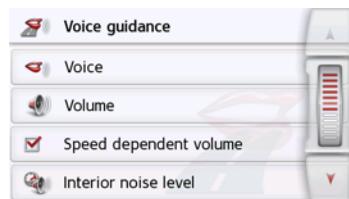

> Select the desired voice.

Note:

Voices with a (TTS) tag support the text-to-speech function (e.g. announcing roads and reading out text messages).

A short example announcement is given.
> Confirm your selection by pressing the  button.

Setting the Volume

With the **Volume** settings window, you can set the standard volume for voice announcements for each start of the Navigation device, or switch off voice announcements completely. Depending on the situation, this setting can be fitted into the map display.

> In the **Voice guidance** settings window, press the **Volume** button.

The **Volume** settings window appears.



- > Select the desired volume with the **-** and **+** buttons or the scroll wheel.
- > The voice output can be switched off completely or turned back on by pressing the Mute button.
- > Confirm your settings by pressing the **OK** button.

The Warnings button

In the **Warnings** settings window you can select which warnings are to be displayed by the Navigation device or which warning sounds are to be output.

> In the settings menu, press the **Warnings** button.



The **Warnings** settings window appears.



The following setting options are then available:

- **Driver alerts (depending on the model)**

You can have signs displayed, for example for dangerous curves or steep gradients, provided this information is stored in the map data.

- **Speed info**

You can select whether speed limits are displayed in parallel to the navigation.

You can also receive an audible warning about exceeding the speed limit.

- **Speed camera detector (model-dependent)**

You can be alerted against stationary and mobile speed checks.

Models that include speed camera detector alerts against stationary speed checks are a download product that first have to be downloaded and then activated under the "speed camera detector" menu item. To do this, follow the instructions on the flyer enclosed in the packaging. As an active subscriber, you perform regular updates of the speed camera data either in your customer account or the

Becker Online Shop (<http://shop.mobilenavigation.mybecker.com>; Follow the instructions in the "My downloads" area), or perform updates of the speed camera data for models with Becker Connect directly via the integrated Download Manager.

In the case of models that include speed camera detector alerts against mobile speed checks (Live speed camera detector), you just need to activate this function under the "Speed camera detector" menu item. Updates of speed camera data are performed in real-time via an active connection to your Internet-enabled mobile phone with WLAN-/Bluetooth Tethering and mobile contract.

Note:

Operating the speed camera warning, or carrying it with you so that it is ready to be operated, is a regulatory offence in Germany and is therefore prohibited. Additionally, it may constitute a violation of the law in other countries too. Before starting your journey, please find out about the regulations that are currently valid in the countries in which you are travelling. United Navigation GmbH accepts no liability for the legality of the installation or use.

- **Environmental zones (depending on model)**

You can let yourself be warned about environmental zones.

- **Truck Navigation (depending on model)**

You can let yourself be warned about loading and vehicle-specific restrictions (e.g. height, weight, restrictions for hazardous materials).

Setting Driver alerts

If this information is saved in the map material and is supported by your navigation device, you can display information signs, e.g. for dangerous bends or descending gradients. In addition, you can define whether the display of the sign is also to be accompanied by a warning sound.

> In the **Warnings** settings window, press the **Driver alerts** button.

The **Driver alerts** settings window appears.



The available driver alerts are divided into 4 categories. The four categories can be enabled or disabled individually. The warning sound can be set individually for each of the four categories by pressing the symbol with the bell (warning sound switched on).

The following signs are available in the individual categories:

- **Curve warnings**

This category includes warning signs that relate to sharp curves.

- **Traffic regulations**

This category includes other traffic regulations, such as no passing zones.

- **General warnings**

This category includes all other warning signs, such as steep gradients, falling rocks.

- **Informative road signs**

This category contains the available information signs.

> Confirm your settings by pressing the  button.

 
Setting environmental zones (depending on model)



You can let yourself be warned about environmental zones provided that this information is saved in the card material and is supported by your navigation system. This function can be activated or deactivated . By pressing the symbol with the bell, you can set the audible warning signal ( audible warning signal activated).

> Confirm your settings by pressing the  button.

respectively. By pressing the symbol with the bell, you can set the audible warning signal ( audible warning signal activated).

> Confirm your settings by pressing the  button.



Truck warnings (depending on model)

You can let yourself be warned about environmental zones provided that this information is saved in the card material and is supported by your navigation system. The function can be adjusted separately for journeys with and without active navigation. The function can be activated or deactivated

Setting Speed info

The **Speed info** settings window allows to select whether speed limits are displayed in parallel to the navigation. You can also receive an audible warning about exceeding the speed limit.

Note:

This information can only be displayed if it is contained in the map material.

⚠ Risk of accident!

The information in the map material may be incorrect as a result of short-term changes (road works, for example).

The traffic situation and the local road signs take precedence over the navigation system information.

> In the **Warnings** settings window, press the **Speed info** button.

The **Speed info** settings window appears.



The following settings are available.

Setting	Meaning
Show signs	Select whether speed limits are never displayed, always displayed or only displayed if the limit is exceeded. Furthermore, you can select whether the sign should blink when exceeding the speed limit, by selecting Always or If speed limit is exceeded .
In city	Select the amount over the speed limit at which you would like to receive an acoustic warning within built-up areas.
Out of city	Select the amount over the speed limit at which you would like to receive an acoustic warning within built-up areas.

Setting	Meaning
Out of city	Select the amount over the speed limit at which you would like to receive an acoustic warning within built-up areas.
Alert	An audible signal is to sound when exceeding speed limits.
Voice output	A speaker's voice warns you of exceeding the speed limit.

> Confirm your selection by pressing the  button.

The Blocked roads button

In the **Blocked roads** settings window you can unblock previously permanently blocked roads (See "Blocking a section of the road permanently" on page 130) or modify the block (time and days of week of block).

- > In the settings menu, press the **Blocked roads** button.



A window is displayed containing the roads that have previously been blocked.



Note:

To delete all blocked roads from the list, press the **Delete all blockings** button followed by the **Yes** button in the display that then appears.

- > Select the blocked road you want.



The road is currently blocked for all days of the week, for the whole day . You can now set whether or not the road should be blocked for each day of the week.

- > Press the buttons with the days on which the road should not be blocked .
- > Press the clock symbol under one of the days and limit the block of this day to the required time of the day.




You can now set whether or not the road should be blocked for each day of the week.

- > Confirm your settings by pressing the back button .

or

- > Press the  button under one of the days and set up to two times when the road should be blocked.

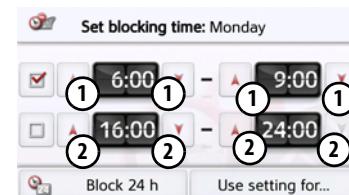

- > Using the buttons ① set the first period when the road is to be blocked on this day.
- > Using the buttons ② set the second period when the road is to be blocked on this day if necessary.

Note:

Press the **Block 24 h** button to set a block for an entire day.

Press the **Use setting for...** button to also use the block on other days.

> Confirm your settings by pressing the back button .

The Vehicle data button

This menu allows the calculation of an economic route by using the fuel consumption of the vehicle.

 
> Press the **Vehicle data** button.



The **Vehicle data** window is displayed.



The following settings can be made:



> Press the **Urban** button to enter the average fuel consumption of the vehicle within cities. The input menu for numbers appears. Any existing inputs can be deleted with the arrow buttons. Enter the fuel consumption value with the number keys. The value can be given to one decimal point. Confirm your entry by pressing the **OK** button.

Extra-urban: 6.5 l/100 km

> Press the **Extra-urban** button to enter the average fuel consumption of the vehicle outside cities. This can be entered as described for the **In city** value.

Type of engine: Petrol Engine

> Press the **Type of engine** button to set your engine type. The display changes by pressing the button repeatedly. You can select Petrol, Diesel and Hybrid as the engine type.

Fuel economy: l/100 km

> Press on the **Fuel economy** button to change to the consumption unit. Pressing this button repeatedly will change the display. You can choose from the consumption units l/100 km, MPG (UK) and MPG (US).

The Format button

In the **Format** settings window you can set the measurement units to be used for times and distances.

- > In the settings menu, press the **Format** button.



The **Format** settings window appears.



- > Press the **Time** button to switch between the 12 hour clock and the 24 hour clock.
- > Press the **Distance** button to switch between kilometres and miles.
- > Confirm your settings by pressing the  button.

The Time button

You can select the time zone relevant for your location in the **Time** settings window. This setting is important for the correct calculation of the estimated time of arrival.

- > Press **Time** in the settings menu.



The **Time** settings window appears.



Using the **Time zone** you can set whether the time zone should be set automatically by the Navigation device or not (**Use auto time zone** on or **Use auto time zone off**).

If the automatic function is switched off, you can select the desired time zone by pressing the button below **Use auto time zone**.


The Reset button

You can reset the navigation settings to their factory settings.

The settings will then be reset. The fast access mode data, stored routes, blocked routes, voice and home address are retained.



- > Press the **Reset** button.

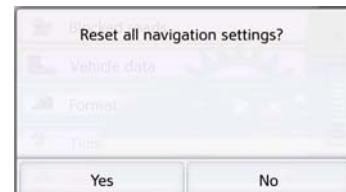

- > Press the **Yes** button.
- The navigation settings are reset to their factory settings.

Traffic announcements using TMC (depending on the model)

Your Navigation device can receive traffic announcements (TMC messages) from radio stations. The power supply with the integrated TMC antenna must be connected to the carrier plate for this function.

Note:

TMC is not available in all countries.

Traffic announcements are transmitted by radio stations via the TMC (Traffic Message Channel) in addition to the radio programme and are received and analysed by the navigation system. Receiving traffic announcements is free of charge.

Note:

As the traffic announcements are transmitted by radio stations, we cannot assume responsibility for the completeness or accuracy of the announcements.

Austria: The location and event code was made available by ASFINAG and BMVIT.

The Navigation device constantly checks whether there are any relevant announcements for the route that has been set. All traffic problems that have been received are shown on the map.

If the continuous checks determine that a traffic announcement is relevant to route guidance, the unit can automatically recalculate a new route to the destination (See "The TMC or Traffic button (model dependent)" on page 77).

Live Traffic – Traffic Announcements via Data Connection (model dependent)

Your navigation device can receive traffic announcements from a server via a data connection. These announcements are more up-to-date than data received via TMC and are also available more quickly. There must also be an appropriate data connection. Subsequent use of the traffic announcements is the same as described below for TMC.

If a connection to the server is not possible, the system then tries to switch over to TMC traffic announcements (model dependent). As soon as TMC is displayed, there is no connection to the Life Traffic server.

A data connection can be established via an integrated WLAN/WiFi® and/or Bluetooth® interface, depending on the navigation device model. Please refer to the relevant chapters in this manual.

Notice:

The data transmission via your mobile phone may involve additional costs depending on the mobile phone contract. Please find out from your mobile phone provider before activating. If a connection to the server is not possible, e.g. because no mobile phone network is available for a longer period of time, then the system switches over automatically to TMC until a connection to the server is possible again.



With this button you can specify the time a traffic congestion bypass will save before it should be displayed. Values between 3 minutes and 30 minutes of time-saving are available.

Displaying traffic messages on the map

The latest traffic messages are represented graphically on the traffic overview map. Sections of the route where there are traffic problems are highlighted blue. Arrows indicating the traffic direction which is affected by the traffic problem continue to be displayed.

In addition to the coloured mark, a warning sign is displayed on the stretch of road affected.



In the case of devices with Live Traffic – traffic messages, movement data in coloured gradations are represented in addition to traffic congestions. Green, yellow, orange and red are used here, whereby green signifies a free flow of traffic and red indicates that serious delays are to be expected.

Using TMC or Live-Traffic

The use of TMC is described below, Live Traffic behaves similarly here. When the Navigation device has been attached to the carrier plate (power supply with the integrated TMC antenna connected), your Navigation device will receive up-to-date traffic announcements. It is then possible to calculate dynamic routes (traffic jam diversion).

You can also view traffic announcements directly.

Settings for TMC can be made as described under "The TMC or Traffic button (model dependent)" on page 77.

> In the main menu, press the  button.

The map overview appears.



The message list appears when you press **TMC List view**.

You can scroll through the list using the arrow keys or the scroll wheel on the right-hand edge of the screen.

The following is displayed for each traffic announcement:

- ① The type of problem and the street number (motorway, A-road or district road)
- ② The distance as the crow flies from the current position, and the length and duration of the problem if applicable

③ The part of the route with the travel direction

④ If a TMC message lies on your route, the message is indicated by the sign



Traffic announcements received via Premium-TMC are indicated by the symbol.

⑤ A red twisted arrow next to the traffic report warns for traffic jams that need to be avoided. If the arrow is crossed out in grey and red , the route does not go around the traffic jam.



Reading a message

> Press on the desired message in the list. The message display appears on the top of the screen, while a map is displayed below it with the related route section. Press on the message again to display more information on the traffic obstruction. By pressing it again, the extra information disappears.

The message display appears.



> Press the arrow buttons to scroll in the messages.

> Press the button to return to the message list.

Taking announcements into consideration when calculating routes

Your Navigation device can take traffic announcements into consideration when calculating a route. You have the option of setting this function to automatic, manual or never in the  menu in the navigation settings with the TMC option (see "The TMC or Traffic button (model dependent)" on page 77).

Automatic recalculation

If the traffic on your route is obstructed, the Navigation device checks whether an expedient detour of the obstruction is possible. If an expedient detour is possible, then an alternative route is calculated and you are guided via the alternative route.

Manual recalculation

If a traffic announcement affects your route, a window with detailed information on the traffic announcement appears.



If, after displaying the traffic message, the navigation system detects that a sensible alternative route is possible, the following display appears.

Note:

This display may also appear if, for example, a previously obstructed route is now free again.

The red route or route marked blue for an obstruction shows the previous route. The route marked yellow displays the alternative route calculated.

In the right section of the display, you can see how much the route changes and how much time you will likely save if you use the alternative route.

> Now either press the **OK** button to use the alternative route or press the **Reject** button to continue using the existing route.



The display provides you with an overview of the alternative route calculated.

The map display

The map display is used primarily for route guidance. However, you can also use the map display without route guidance to show your current position and, for example, to receive warnings about exceeding the speed limit.

Calling up the map display

The map display is called up automatically when you start route guidance.

Without route guidance, you can call up the map display from the main menu.


The map display will then appear and, if GPS reception is available, will show your current position.

If route guidance is already active, the map will be displayed with route guidance.

Structure of the map display

The structure depends on the settings made in "Map display options" on page 100 or in "The Map view button" on page 66 and whether route guidance is active or not.


Map display without route guidance

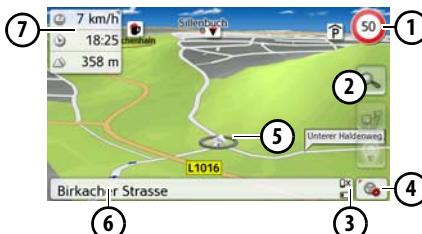

If the navigation is not active, almost the whole area of the touch screen will be taken up by the map.

- ① Speed limit on the road currently being driven on (display not available for all roads), signs for the driver alerts will also be displayed
- ② Zoom buttons
- ③ Power level/telephone status (depending on the model)
- ④ Button for calling up the options
- ⑤ Vehicle position
- ⑥ Current road
- ⑦ Information box (if displayed) showing vehicle speed and altitude above sea level

Map display with route guidance

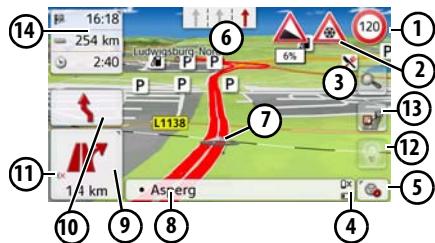

- ① Speed limit of the street currently being driven on (display is not available for all streets)
- ② Driver alerts (depending on the model)
- ③ Zoom buttons

- ④ Power level/telephone status (depending on the model)
- ⑤ Button for calling up the options
- ⑥ Traffic lane recommendation (only appears on some multi-lane roads; green arrows = recommended lanes)

Note:

If you follow the lane recommendation, the next driving maneuver is possible without changing lanes.

- ⑦ Vehicle position
- ⑧ Current street or street to which the next driving maneuver leads
- ⑨ Distance to the next driving maneuver
- ⑩ Next driving maneuver
- ⑪ Calls up volume settings
- ⑫ Button for **SituationScan**
- ⑬ Button for Route overview (only with the selected route active. If TMC announcements are activated on the route, a traffic jam warning sign appears on the button.)
- ⑭ Information box

Your current position is displayed on the map via the position icon.

**The Information box**

During route guidance you can have information displayed in the Info box.



If you press the Info box again, more or less fields are displayed. At least one field and a maximum of three fields can be displayed. The information displayed depends on the settings that are selected in the **Navigation settings in the map view menu > Advanced > Info box data fields**. The following can be selected:

- With selected route ①: Remaining distance to destination, remaining travel time, time of arrival at destination, speed, speed limit, time, position altitude above sea level and traffic delays on the entire route (selected models)
- Without selected route ②: Speed, Speed limit, Time and Positionheight

Information is also displayed in the bottom left corner in the preview area.



The next manoeuvre is displayed as an arrow, with a distance indication underneath it. If two driving manoeuvres are to be performed in succession within a short time, another smaller arrow indicating the second driving manoeuvre is displayed above the first arrow.

You can adjust the volume of the navigation announcements by pressing the button with the speaker symbol in the preview area (See "Changing the announcement volume" on page 96).

Split screen with route guidance



- ① Speed limit on the road currently being driven on (display not available for all roads), signs for the driver alerts will also be displayed
- ② Driver alerts (depending on the model)
- ③ Zoom buttons
- ④ Vehicle position
- ⑤ Power level/telephone status (depending on the model)
- ⑥ Button for calling up the options
- ⑦ Traffic lane recommendation (only appears on some multi-lane roads; green arrows = recommended lanes)
- ⑧ Next driving maneuver
- ⑨ Current street or street to which the next driving maneuver leads
- ⑩ Distance to the next driving maneuver
- ⑪ Bar display to illustrate the distance to the next driving maneuver
- ⑫ Button for **SituationScan**
- ⑬ Calls up volume settings
- ⑭ Information box
- ⑮ Button for Route overview (only with the selected route active. If TMC announcements are activated on the route, a traffic jam warning sign appears on the button.)

Note:

If you follow the lane recommendation, the next driving maneuver is possible without changing lanes.

Route guidance with arrow display

- ① Vehicle speed and altitude above sea level
- ② Information box
- ③ Button for **SituationScan**
- ④ Power level/telephonestatus (depending on the model)
- ⑤ Button for calling up the options
- ⑥ Button for Route overview (only with the selected route active. If TMC announcements are activated on the route, a traffic jam warning sign appears on the button.)
- ⑦ Driver alerts (depending on the model)
- ⑧ Speed limit of the street currently being driven on (display is not available for all streets)
- ⑨ Next driving maneuver

- ⑩ Traffic lane recommendation (only appears on some multi-lane roads; green arrows = recommended lanes)

Note:

If you follow the lane recommendation, the next driving maneuver is possible without changing lanes.

**Map display with Junction view**

You can display a detailed and realistic view of the lane situation at many motorway junctions.

To do this, switch on the **Junction view** function as described under "The Guidance info button" on page 70. If you are then directed through a motorway junction by the Navigation device, you will see a corresponding display.



> Follow the lanes indicated with the arrows.

Tunnel view

When you enter a longer tunnel, a three dimensional tunnel view appears. If there is no manoeuvres performed in the next 1000m in the tunnel, the lane of the current road section is displayed. An overview of the tunnel is displayed in the bottom on the right. When you touch the display, the tunnel view disappears. If any manoeuvres are performed in the tunnel, or if the next manoeuvre is performed outside the tunnel, a tunnel view is displayed in full image mode with the coming manoeuvre.

Note:

The tunnel view and the intersection view can be deactivated by touching the display. The map view is displayed again. If you would like to deactivate the tunnel view permanently, de-select the "Tunnel view" option in the "**Settings > Navigation settings > Route guidance**" menu.

Note:

The tunnel view provides a schematic view of the route layout of the tunnel. The whole tunnel layout, the first route section and the vehicle position are displayed. Since there is no GPS signal during the travel through the tunnel, the displayed position is only calculated.

Using the map display

Repeating the last announcement

During route guidance, the system announces important information, e.g. the next driving manoeuvre. The last announcement can be repeated with updated information.



> Press the speaker symbol in the preview area while route guidance is active.

The last announcement is repeated with updated information. The volume is also displayed. If the preview area is reduced and no speaker symbol is displayed, the announcement can be spoken again if you press the preview area.

Changing the announcement volume

The volume of announcements can be adjusted.



> Press the speaker symbol in the preview area while route guidance is active. On the top edge of the image, the Mute button is displayed with a speaker symbol. A bar diagram and the and buttons are displayed on the right.



The bar diagram represents the volume.

- > Press or or pull your finger over the scroll strip to increase or decrease the volume.
- > Press **Mute** in order to mute the announcements.

An x now appears next to the speaker symbol . With pressing the button, you can make the volume control elements disappear.

- > Press again the speaker symbol in the preview area to mute the voice again.

⚠ Warning!

Always adjust the volume so that you can still hear any ambient noise while driving.

The bar display disappears again automatically after a short while if no button is pressed.

Map zooming

The map can be zoomed into in steps by using the zoom buttons.

- > Press the button. The zoom buttons are displayed.



- > Press zoom in to "zoom in on the map" and therefore to get closer to the details displayed.
- > Press zoom out to "zoom out from the map" and therefore to obtain a larger overview.
- > Press the button to switch back to the set zoom step after a change.

Note:

The zoom steps are altered in quick succession by pressing and holding the or button.

If you change the zoom step, a button with two red lenses are displayed.

- > Press the button to restore the originally set zoom step.

Moving the map

You can move the map to any point.

> To do this, press the map briefly.



> Then press any point on the map and move it in the required direction.

The map is then moved accordingly.

Note:

By pressing the **GPS Position** you can display your current position again.

You can also select a point as a destination as described under "Selecting a destination from the map" on page 60.

Map orientation

When a route is activated, the map view can be oriented in different ways.

If you have selected a 2D view in the Navigation settings in the map view (see page 64), this pertains to the compass direction only.

> Press the 2D map view on the display a little longer.



Apart from the pulsating point, a compass and two arrow buttons pointing to the left and right appear on the top edge of the screen, and on the left edge of the screen, two arrow buttons pointing up and down are displayed.

> Press the and buttons to rotate the map towards the desired compass direction.



You can orient the map for example in the direction of travel.

If you have selected a 3D display for the map view, the vertical display angle can be adjusted, too.

> Press the 3D map view on the display a little longer.



Apart from the pulsating point, a compass and two arrow buttons and pointing to the left and right appear on the top edge of the screen, and on the left edge of the screen, two arrow buttons pointing up and down are displayed.

> Press the button.



The viewing angle will be lower and the horizon is moved back after a while into the image.

> Press the  button.



The viewing angle will be steeper. If the angle is exactly 90°, you are viewing the map in the 2D view from the top.

The Route overview

With the Route overview, you can have Points of Interest (POIs) and, if the TMC on route option is activated in the **Navigation settings > Route overview** menu, TMC events displayed on the selected route.

> Press the  button.

A list of POIs and traffic events are displayed. In the top edge of the screen, four single buttons are displayed for TMC announcements on the route and the three selected POI Categories are also displayed. Apart from the symbols, the

number of TMC announcements and POIs are displayed.

> Press one or more buttons to display TMC events or POIs.

A list of POIs and, if applicable, TMC events is displayed with the expected arrival time and distance from the current vehicle position.

> Press the desired Point of Interest or TMC event.

Information such as the address and the telephone number of the POIs or the type of traffic obstruction are displayed. From this view, all actions already described in the chapter Points of Interest on page 52 can be accessed, such as displaying POIs on the map, inserting or storing stopovers on routes.

 2	 11	 28	 43
207 km/2:02 h		 234 km/2:23 h	
92 km/0:58 h		 206 km/2:02 h	
48 km/0:32 h		 206 km/2:02 h	
9.5 km/0:11 h		 67 km/0:43 h	
1600 m/0:02 h		 13.1 km/0:15 h	
		 4.3 km/0:06 h	

The red line in the middle of the screen represents your route. If this line ends with two points, then the list continues and you can scroll through the complete list by moving your finger.

 2	 11	 28	 43
235 km/2:25 h		 16:22, Chur	
207 km/2:02 h		 235 km/2:25 h	
		 234 km/2:23 h	
92 km/0:58 h		 206 km/2:02 h	
48 km/0:32 h		 206 km/2:02 h	
		 67 km/0:43 h	

At cross-border destinations, the border crossing is displayed with the appropriate national flag. If you select the petrol station button, a petrol station is displayed before and after the border if available.

Note:

If there is a traffic jam announcement on the route, the TMC symbol  appears on the  button. If there are no traffic jams reported on the route, the POI symbol  is displayed instead.

SituationScan

If this function is activated  in the Navigation settings in the Route guidance menu, three assistants support the driver during the travel with useful information and help in case of unexpected traffic situations.

The detour assistant

This function reacts to the reduction of the speed. If there are no POIs such as resting places or filling stations in the vicinity, the assistant assumes that the driver is in a traffic jam. If the  symbol is displayed in colour and begins to blink, the assistant suggests a detour.

> Press the  symbol.

A message is displayed with the question "You are probably standing in a traffic jam. Would you like to avoid the jam using a detour?". Now you can have the suggested detours displayed and select or reject them.

If the vehicle is not on a motorway, the detour assistant calculates possible alternative routes before the next crossing in case of strong stop-and-go traffic to get you there faster. If the assistant can calculate an alternative route before the vehicle passes the crossing, the  symbol is blinking. The alternative routes can be displayed and selected similar to the identically named function described on page 84.

The Park Assistant

This assistant will be activated when you are near the destination or passed by the destination. In the case when the driver is looking for a parking place, the  symbol is activated as soon as it is possible to park in the given point of interest. Up to eight parking possibilities may be displayed, where the route to there and the footpath from the parking

lot to the destination are governing for the selection.

> Touch a parking possibility on the map to select it.

You can then have the route leading there displayed and the route guidance started. You can have the device lead you to the destination in pedestrian mode at the arrival at the parking place.

The departure assistant

This assistant reacts when you leave the suggested route, and asks your intentions with a list of options. Depending on whether you are looking for a resting place or a parking place, or would like to avoid a visual traffic obstruction, a tunnel or a toll road, the assistant displays the appropriate POIs in the vicinity or calculates a detour that supports the driver in avoiding the given route section. If the assistant has calculated a detour, the  symbol is activated and blinking.

Map display options

In the map display options, you can change the settings for route guidance, the map display and the route.



On the map display, press the button on the bottom right.



This opens the options menu for the map display.

You can go to the next or previous page of the options by pressing the and buttons or by using the scroll wheel.

Note:

The scope of the displayed functions depends on whether route guidance or a route with several destinations is active.

 
The options menu is exited either by selecting a function or by pressing the button.

Displaying the whole route

(Only available when route guidance is active.)

You can have the whole route to the destination displayed on the map. Additionally, you can have a complete route description displayed. As a further option, you can display and, if needed, select the different routes that can be set in the Route options.

> Call up the options menu for the map display.



> Press the **Show route** button.



The complete route is displayed.

Move route (model-dependent)

Becker RouteMove allows you to move your route with a single movement of your finger, providing a rapid means of adjusting your current route guidance with just one hand. After you switch to the Show route screen, the  icon is displayed on the left-hand side. It takes just a short time for the function to become available and the icon to change. As soon as this icon  is displayed and you select it, the route displayed can be moved.

Press and hold your finger down anywhere on the route displayed on the screen and drag the route to where you want it to be. The device will immediately calculate the updated route.

Original route



New route



The distance and journey time of the new route are displayed immediately underneath.

You can set the route options using the **Options** button.

By pressing the Play  button, the whole route can be simulated. The control elements, that are displayed by touching the screen shortly, allow you to play the simulation in up to 16x speed, or to step from route section to route section. The simulation can be stopped by pressing the back  button.

Route description

> When the whole route is displayed, press the **Sections** button.



The first point of the route description is displayed on the map.

You can scroll through the whole route description with the **Next**  and **Back**  buttons.

You can also display a list version of the route description. For this press the **List view** button. The simulation is continued by pressing the **Resume**  button.




> Press the   arrow keys on the right hand side of the screen to scroll through the list.

If you press an entry in the route description, it is displayed on the map.

Blocking route sections/roads

You can block individual route sections/roads. The Navigation device then calculates a sensible diversion to avoid the blocked section.

- > Use the  and  buttons in the route directions to select the section of the route to be blocked.
- > Press the **Block** button.

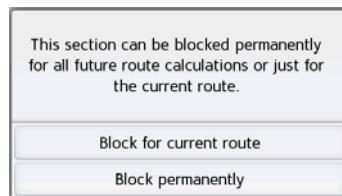

- > Select **Block for current route** to block the section of the route for the current route guidance session only.

Note:

If the route section is more than 10 kilometres long, you can choose, in another menu, whether to block the entire section or just part of it.

- > Select **Block permanently** to block the section of the route for future route guidance sessions too.



Changing of the blocking times is described on page 131.

Selecting alternative routes

You can have the different routes displayed by the navigation device.

- > When the whole route is displayed, press the Alternative routes button. (This function can be selected in the Route overview, too.)

After a short time, the map is displayed. Each route is calculated after each other and displayed on the map. On the right-hand side, you can see the coloured list of the single routes, according to the kilometres to be travelled and the expected duration of the travel.

 
You can select the desired route by pressing the buttons on the right.

Change route options

(Only available when route guidance is active.)

You can change the route options (route selection etc.) during route guidance.

> Call up the options menu for the map display.



> Press the **Route options** button.



> Set the route options as described under "The Route options button" on page 72.

 
After a modification, the route is recalculated.

Canceling route guidance

(Only available when route guidance is active.)

You can cancel the active route guidance.

> Call up the options menu for the map display.



> Press the **Stop guidance** button.

This cancels route guidance to all destinations.

Note:

 
You can also cancel route guidance as described in "The main menu" on page 29.

Entering/deleting a stopover

(Only available when route guidance is active.)

With this function, you can enter a stopover, or you can delete an entered stopover.

> Call up the options menu for the map display.




> Press the **Add stopover** button.



You can now enter a stopover as described under "The New destination menu" on page 46 (**Enter address**, **Select Point of Interest**, **Personal destinations**, **Contacts**, **Select on map** or **Enter geo-coordinates**). You also have the option of quickly selecting a destination using the **Select from last destinations** button.


If you have entered the desired stopover, the route is recalculated.

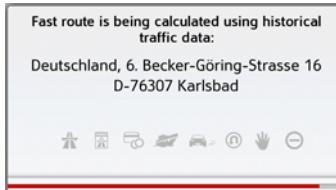

The stopover is indicated on the map by a red flag.

Deleting a stopover
 
> Call up the options menu for the map display.



> Press the **Delete stopover** button.



> Press the **Yes** button.

The stopover is deleted.

 
Blocking route temporarily

Using the **Block road ahead** option, you can block a stretch of road ahead temporarily. This determines a certain stretch of road that should not be used. The Navigation device will now try to calculate a detour.

Notes:

- The selected length of the block is only an approximation since the actual distance blocked depends on the availability of an exit.

> Call up the options menu for the map display.



> Press the **Block the road ahead** button.



> Select the length of block you want by pressing the arrow buttons.

 
If route guidance is active, you can select a road length between 200 m and 50 km. As soon as you selected the stretch, a new route will be calculated. Furthermore, the distance and time difference are also displayed in the lower part of the display.

Notes:

- If route guidance is not active, you can only select between 200 and 500 m (250 and 500 yards). You can then define directly the days and times when the route should be blocked.
- After the temporary blocking of a section, the **Clear blockings** option appears in the option menu of the map view. Press this button to delete all temporary blockings. If a route guidance is active, the former route is restored.


Setting day/night display

You can switch the Navigation device display from day to night and vice versa.
 > Call up the options menu for the map display.



> Press the **Day/Night** button.

The display changes from day to night and vice versa.

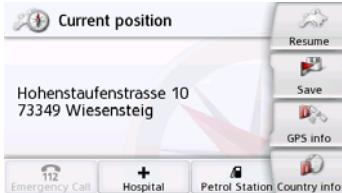

The current position is displayed. If possible, an address is displayed. If no address is available for the current position, the geographic coordinates are displayed.

With the **Emergency call** button you can make an emergency call under the Europe-wide standard emergency call number 112 (depending on model) if a mobile telephone is connected to your navigation system and has reception. Before dialling the emergency call number, you must confirm this once again.

 


The **emergency** call number is dialled using the call button.



An address or the GPS position will be displayed depending on availability.

If possible, you can change between the views using the buttons



or

you have other telephone functions at your disposal. Also see chapter "Telephone calls" on page 119.

With the Hospital button, you can change directly to the places of interest category Hospital in the current vicinity. Also see chapter "Points of interest" on page 55.

With the Petrol Station button, you can change directly to the places of interest category Filling station in the current vicinity. Also see chapter "Points of interest" on page 55.

 
You can return to the map using the **Resume** button.

By pressing **Save** you can store your current position in the fast access list.

Displaying current position (Where am I?)

You can display your current position, make an emergency call (depending on model), select a hospital or filling station and save this position. Furthermore, you can display information regarding the current GPS reception and the current country.

> Call up the options menu for the map display.




> Press the **Where Am** button.



The **emergency** call number is dialled using the call button.

By pressing the **Country info** button you can display country-specific information such as the maximum permitted speed for the country you are currently in. Click on the relevant icon to display additional information.

By pressing **GPS info** you can view information regarding the GPS reception.

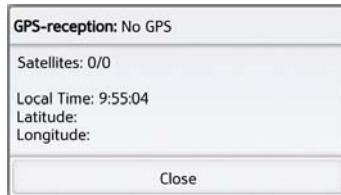


You can see how many satellites are being received, and whether the satellite reception is good enough for navigation. The current time and the geographic position are also displayed.

Entering the destination

(Only available when route guidance is not active.)

You can enter a destination.

- > Call up the options menu for the map display.
- > Press the **Enter destination** button.

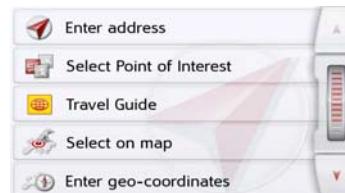

You can now enter a destination as described under "The New destination menu" on page 46 (**Home**, **Enter address**, **Select Point of Interest**, **Personal destinations**, **Contacts**, **Route planning**, **Select on map** or **Enter geo-coordinates**).

Displaying/selecting different routes

You can use the Navigation device to display various routes.

- > With the entire route displayed, press the **Alternative** button. This function can also be selected in the options of the map display. See "Map display options" on page 100.

After a short time, the map is displayed. Each route is calculated after each other and displayed on the map.



The area on the right-hand side shows the colour key for the individual routes, the mileage for each route and the estimated driving time.

 
You can select the desired route by pressing the buttons on the right.

Skipping a destination

If a planned route with several destinations is active, you may delete the current destination of the route. Route guidance to the next destination is then started.

This may be necessary if a destination was not driven to directly. The Navigation device otherwise tries to guide you to the current destination.

> Call up the options menu for the map display.



> Press the **Next destination** button.

Route guidance to the next destination is started.

Depending on the selected settings (see page 74 onwards), a number of helpful supplementary functions are made available to you.

Feedback after route calculation

When calculating the route, the best possible route is selected by taking the vehicle or loading specifications into consideration if possible. The route might vary considerably from the car route as regards distance, journey time or routing. If a destination cannot be reached without taking the predefined restrictions into consideration, this will be displayed after the route calculation.

You can scroll through the list using the arrow key   or scroll wheel on the right-hand side of the screen.

Press the **Cancel** button or  to return to the last entry.

Press the **Next** button to start the navigation.



The following is displayed for each restriction:

- ① A graphic for the restriction
- ② The distance from the current position

When you select a restriction, the corresponding section will be displayed on the map.



Zooming in on the map

You can gradually zoom in and out of the map using the Zoom buttons.


> Press Zoom in  to "zoom into the map" and thus zoom in closer to the displayed details.

> Press Zoom out  to "zoom out from the map" and thus get a greater overview.

> Press the  button to display the entire section of the route.

Warnings with planned route

When the driver warnings function is activated in the navigation settings, you will be warned about road sections where there are relevant restrictions.

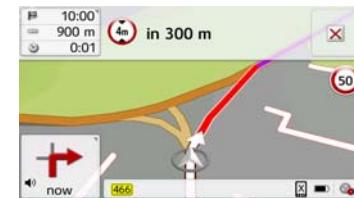

If there are road sections on your route that are subject to a restriction, your navigation system will warn you shortly before reaching the road sections affected. The layout of the message is similar as

described in the chapter "Feedback after route calculation".

You have the following options:

- ① Press the  button to close the message.
- ② enlarge the display area if another restriction lies ahead of you.

The message will close automatically once you have left the critical area. In addition, the message closes automatically when you approach a new road section with a restriction.

Warnings without planned route

When the driver warnings function is activated in the navigation settings, you will be warned about road sections where there are relevant restrictions.

The function is similar as described in the chapter "Warning with planned route". Furthermore, the navigation system will display in which direction you can or cannot drive at intersections, provided that the information is available.

Show route

You can display the route on the screen once you have entered a destination. If a different route has been selected on the basis of a profile setting (vehicle dimensions, weight, dangerous goods), the section of road being avoided because of this is shown in blue.



On the avoided (blue) route, the restrictions are displayed with signs. Select a traffic sign on the map to display a detailed view of the section of road concerned.



If there are further restrictions on your route, you can use the arrow keys  to scroll through the list of restrictions that are being avoided because of the vehicle settings you have made.

Display height profile

You can display a height profile from the Show route or Alternative routes view. To do this, select the 

Height profile for a route:



You can use the  and  buttons to adjust the zoom level and move to the left or right to shift the height profile.

If you select a point by touching the profile, the corresponding height and distance from the starting point are displayed for it.

Press the  button to go back to the route view.

Height profile for alternative routes:



Yet more functions are available for alternative routes. Press the **Next**  and **Previous**  buttons to highlight the individual height profiles. The height profiles and their associated alternative routes on the right-hand side of the screen are displayed in the same colour. Once you have decided on a route, use the buttons on the right to select it.

If your navigation device has an integrated Bluetooth® wireless technology interface, you can connect it to a mobile phone equipped with Bluetooth® wireless technology.

Your Navigation device can then be used as a very comfortable hands-free unit.

Note:

- For some cell phones equipped with Bluetooth® wireless technology, it is possible that some of the functions described are not available.
- The following descriptions assume that Bluetooth® is activated on the cell phone. You can find out how to activate Bluetooth® wireless technology on your cell phone in the cell phone's description.
- This function must also be activated on the mobile phone for an automatic connection to the mobile phone.

Calling up the telephone mode (only selected models)

You can call the telephone mode from the main menu.

> To call the telephone mode, press the **Phone** button in the main menu.

If Bluetooth® wireless technology is activated and the Navigation device is already connected to a cell phone, the telephone menu is displayed.



If Bluetooth® wireless technology is not activated upon calling up the telephone function, the system will prompt you to switch Bluetooth® wireless technology on.



> Press the **Yes** button to activate Bluetooth® wireless technology.

The Navigation device now attempts to reconnect the cell phone last connected. When the connection is established, the telephone menu is displayed after a short period.

If no cell phone has been connected yet or if the device last connected is not available, the following display is generated.



> Press the **Yes** button to find Bluetooth® cell phones as described in "Searching for cell phones" on page 118.

Telephone menu (only selected models)

From the telephone menu, you have the option:

- Numbers to be dialled or selected from the phonebook,
- to display the telephone book
- to call up the call list,
- To search for Bluetooth® telephones
- To disconnect the connection to a cell phone.

If Bluetooth® is activated and the Navigation device is already connected to a cell phone, the telephone menu is displayed after the telephone function is called up.



In the upper area of the telephone menu, the signal strength of the cell phone, the charging level of the cell phone, the telephone name and the network provider are displayed, if available.

Dialing a number

You can enter a telephone number and start a call to this number or select a number from the phonebook.

> In the telephone menu, press the **Dial** button.



> Use the buttons displayed to enter the phone number you want.

Note:

Press the  button to delete the characters entered.

> Press the **Dial** button.

The Navigation device then attempts to establish a connection to the phone number entered. You can find out how to continue operation in "Telephone calls" on page 119.

Phonebook

In the phonebook, the system displays the phonebook entries loaded from the SIM card and from the memory of the cell phone. After selecting the desired entry, you can call the respective phone number.

Note:

- Be aware that it may take several minutes to transfer the phonebook.
- If the cell phone whose phonebook was already loaded is reconnected, the phonebook is not loaded again. If entries were changed or entered while the cell phone was not connected, then the phonebook of the Navigation device must be loaded manually for the update. See "Updating the phonebook" on page 123.

> In the telephone menu, press the **Dial** button.



> Press the **Phone book** button.



If there are more than 10 entries in the phonebook, an input menu is displayed. If there are less than 10 entries, a list with the entries will be displayed directly.

> In the input menu, select the first letters of the entry you are looking for.

Note:

- For example, if you entered the letters "M" and "I", the entries are displayed whose last names or first names start with "Mi". That means, "Miller John" or "Bauer Michael".
- You may enter the first letter of the last name and then enter the first letter of the first name separately using a space (button **_**).


> Press the **OK** button when the name you want is displayed in the upper line. As soon as just 5 or fewer hits are available, a list is displayed from which you can select the correct entry.

Note:

You may also first have a list displayed that corresponds to the letter combination entered. For this purpose, press the  button in the input menu.

> Select the desired entry in the list.

If there is more than one phone number available for the entry selected, you may then select the respective number.

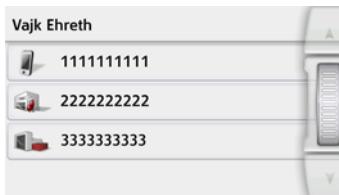

The different numbers are indicated by icons.

Icon	Meaning
	Private phone number
	Business phone number
	Cell phone number

> Select the desired phone number.

The Navigation device then attempts to establish a connection to the phone number selected. You can find out how to continue operation in "Telephone calls" on page 119.

Call list

In the call list, the last dialled, answered or unanswered numbers or names are displayed in chronological order. If possible, the numbers or names of the list stored in the cell phone are also displayed in different lists.

> In the telephone menu, press the **Last calls** button.



Using the buttons **Missed**, **Received** and **Dialed**, you may retrieve the lists loaded from the cell phone.

The call list of the dialled, answered or unanswered numbers or names on the Navigation device is displayed in the rows below.

Each row of the call list is divided into fields. Each list field is designed as a button. On the right button, the number/name is displayed and the features of the entry are displayed with the left icon.

Notes:

- The last 100 numbers/names are saved automatically in the call list. If the storage capacity of 100 numbers is reached, the oldest number is automatically deleted for each new number.

Using the buttons **Missed**, **Received** and **Dialled**, you may retrieve the lists loaded from the cell phone, if available.

Icons used

The following icons are used in the call list.

Icon	Meaning
	This entry is a standard entry without any special features.

Scrolling through the call list

Using the buttons, you can scroll through the call list in the corresponding direction of the arrow.

Dialing an available number

You can dial the numbers/names in the call list directly.

- To initiate the call, press the button with the entry you want.


The call will be initiated.

Displaying or editing entries

Each entry contained in the call list can be displayed or edited.

- Press the button field on the left next to the entry you want.

A selection menu appears.

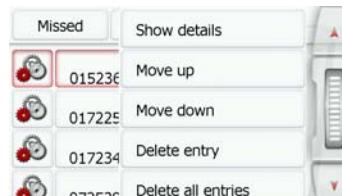

Selection	Meaning
Show details	The data for the entry is displayed (number and name, time and date of call, if available).
Move up / Move down	The entry is moved one position forwards/backwards.
Delete entry	The entry is deleted from the call list.
Delete all entries	All entries (even the protected ones) are deleted from the call list.

Lists loaded from cell phone

- > In the call list, call up the corresponding list using the **Missed**, **Received** and **Dialled** buttons.



Using the buttons, you can scroll through the list in the corresponding direction of the arrow.

- > To initiate a call, press the button with the entry you want.

Note:

Press the button in front of an entry to display the data for that entry (number and name, time and date of call, if available).

Connecting Bluetooth® telephones

So that you may make and receive calls with your Navigation device, a cell phone that is equipped with Bluetooth® wireless technology must be connected to the Navigation device. The following describes the various options for establishing a connection.

Calling up a device list

- > In the main menu, press the **Telephone** button.



The device list is displayed.

From the device list, you may search for or connect cell phones.

Note:

If you have not yet established any connections to cell phones, then the list is empty.

The device list shows line by line all cell phones that were already connected to the Navigation device.

Each line of the device list is divided into two fields. Each list field is designed as a button. On the right button, the device is named and its features are displayed with the left icon.

Icon	Meaning
	This device is a standard device without any special features.
	This device is the cell phone currently connected.

You can call up a menu by pressing the icon.



Automatic connection

After activation, your Navigation device attempts to establish a connection to the cell phone last connected.

You can switch this function on or off as described in "Automatic connection" on page 122.

Prerequisites for a successful connection are:

- On your Navigation device, Bluetooth® wireless technology is switched on. (See "Bluetooth: on/off" on page 122.)
- The cell phone is switched on, is within range, and Bluetooth® wireless technology is activated.

Searching for cell phones

Note:

Prior to a search, switch on Bluetooth® on the cell phone to be searched for.

> Call up the device list.



> Press the **Search Bluetooth® phones** button.

The search starts.

During the search, any devices found are displayed and you may cancel the search by pressing the **Stop search** button.

After the search or after you press the **Stop search**, a list of the devices found is displayed.



> Then select the name of the cell phone to be connected.

The Navigation device will then attempt to establish the connection. On the cell phone, the password prompt should then occur. This password is fixed by Navigation device.



> Enter the password displayed on the cell phone.

The connection will be established. With a successful connection, the telephone menu will be displayed.

Connect new devices

You can initiate a connection to another mobile phone using the **Devices** button located in the telephone menu at the lower right hand corner of your screen. If a cell phone is already connected, that connection is automatically disconnected and the new device is connected.

> Click on **Devices**



> Select the cell phone you want in the list.

The connection is established to the cell phone selected. With a successful connection, the telephone menu will be displayed.

Connecting a mobile phone

You can also attempt to establish a connection to the Navigation device from the mobile phone.

If a request is received from a mobile phone that has not yet been connected, you will be asked whether you wish to allow the connection.

- > Press the **Yes** button to permit the connection.
- > Enter the displayed password (four zeros) on the mobile phone.

The connection will be established. With a successful connection, the telephone menu will be displayed.

Disconnecting a connected telephone

You may disconnect the connection to a cell phone currently connected via Bluetooth® wireless technology.



- > Press the **Disconnect** button.

The connection to the cell phone currently connected is disconnected.

Telephone calls

In the telephone calls section, you can find a summary of the control options that are available for establishing a call, accepting a call, and ending a call.

Establishing a call

- > Enter the telephone number or select an entry from the call list or telephone book.
- If the call is accepted by the party called, the display changes and you are connected to the other party.



Accepting a call

For an incoming call, a ringing tone will sound. Also the following is displayed.



If available, the phone number and name of the caller are displayed.


For incoming calls, you have several operating options:

Selection	Meaning
Accept	The call is accepted. The call screen is displayed.
Reject	The call will be declined. The caller hears the busy signal. The screen last active is displayed.
Ignore	The ringing tone is switched off. The screen last active is displayed. The call is ended if the caller hangs up.

If you have switched on the automatic call acceptance as described in "Automatic call acceptance" on page 122, the time to call acceptance is also displayed for the **Accept** button.

Ending a call

 You can end an active call.



> In the call screen, press the **End call** button.

The call is ended. The screen last active is displayed.

Note:

The call is also ended if the other party hangs up. The screen last active is also displayed.

During a call

During a call, you have various control options.



In the call display, the signal strength of the cell phone, the charging level of the cell phone, the telephone name and the network provider are displayed if available in the upper area.

Beneath, the call time and, if available, the phone number or name of the other party are displayed.

If route guidance is active, then you will receive the navigation instructions with arrows on the call screen.

> To call the options menu of the call screen, press the **Options** button.



- **Volume**

By pressing the **Volume**, you can call the volume adjustment. See "Telephone volume" on page 123.

- **Microphone off/Microphone on**

For a private conversation in a vehicle, you can switch off the microphone of the Navigation device. The other party on the phone will not hear anything.

Press the **Microphone off** button to switch off the microphone. Press the **Microphone on** button to switch the microphone back on.

- **Private mode/Hands free**

You can transfer a call back to the cell phone. The hands-free function is then ended.

After the call is ended, the connection to the cell phone is automatically re-established.

Press the **Private mode** button. The hands-free function is ended.

Press the **Hands free** button to make and receive calls again via the Navigation device prior to ending the call.

Bluetooth settings (model dependent)

In the Bluetooth settings are all relevant options for telephone mode and data transmission via Bluetooth Tethering.

> In the main menu, press the  button.

> Press the **Bluetooth settings button**. You will be taken to the menu for Bluetooth settings.

Structure

In the menu you have various pages with functions at your disposal:

Bluetooth: on/off

Press the **Bluetooth: on/off** button to activate or deactivate Bluetooth.

Telephone settings

Automatic connection

With the **Auto-connect** button, you can switch on or off whether an automatic connection to a cell phone is attempted after switching on the Navigation device.

> In the settings menu, press the **Auto-connect** button.

Depending on the previous setting, you can switch the function on or off.




- Top icon: function on
- Bottom icon: function off

Automatic call acceptance

With this function, you can set whether or not or after which time an incoming call is accepted automatically.



> In the settings menu, press the **Answer call automatically** button.

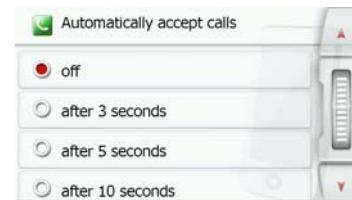

> Select whether incoming calls will be accepted automatically after 3, 5 or 10 seconds.


If you select **Off**, the function is switched off.

Telephone volume

With this function, you can set the volume of the ringtone and the volume of the call.



> In the settings menu, press the **Volume** button.

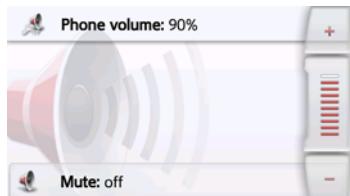

> Select the desired volume with the and buttons.

> Press the **Mute** button to mute the volume. By pressing the button again, the telephone volume is switched back on.

> Confirm your settings by pressing the back button .

Updating the phonebook

With this function, you can update or retransfer the stored phonebook entries in the Navigation device.

 


> In the settings menu, press the **Refresh** button.

Be aware that it may take several minutes to load the phonebook.

Bluetooth® name

With this function, you can assign a name for your Navigation device. This assigned name will then be displayed by other Bluetooth® devices.



> In the settings menu, press the **Bluetooth® name** button.



> Enter the desired name.

> Confirm the name entered by pressing the **OK** button.

Data settings / Bluetooth Tethering (model dependent)

In the "Data settings" menu item you can activate/deactivate the data usage. This is necessary for receiving live services, such as Live traffic or Live speed camera detector alerts via Bluetooth Tethering. This requires a compatible mobile phone with support of the Bluetooth Tethering function as well as a mobile contract with data flat rate. The Bluetooth Tethering function must be activated separately in your mobile phone. You can find more information on this in your mobile phone manual.

Note:

Data transmission via your mobile phone can incur additional costs depending on your mobile contract. Before activation, please consult your mobile provider. If a connection to the server is not possible, e.g. because no mobile network is available for a longer period of time, then TMC is switched to automatically until a connection to the server is possible again.

Audio Out settings (model dependent)

In the Audio Out settings you have the option to connect the Bluetooth-enabled audio system of your vehicle wirelessly with your navigation device and to hear the navigation announcements via the speakers of your vehicle. To do this, activate the option by clicking "on/off". Afterwards, select your audio system in the Bluetooth list. To connect automatically in future, activate the "AutoConnect" option.

Your audio system handles the announcements of the navigation device like a telephone call. This means that the Bluetooth connection is switched to automatically for the duration of the navigation announcement so you can hear it via the speakers of your vehicle. After the announcement, the previous audio source is switched to automatically again (for example radio/CD/USB mode).

Under Tools, the following functions are grouped together, depending on the model:

- Marco Polo City Guides
- Image viewer
- Country information
- Overview of functions
- Blocking a section of the road
- Trip computer

The Tools menu is called up from the main menu.

> In the main menu, press **Extras**.



This displays the extras menu.

> Select the desired function by pressing one of the buttons.

Travel Guide (model dependent)

With the travel guide, you can select, for example, MARCO POLO Top-Highlights or MARCO POLO Insider Tips and start the guide destination there. See "Travel Guide (model dependent)" on page 59.

Rear View camera



Displaying Rear view camera (depending on the model)

When a reversing camera is connected to your navigation system, and the reversing camera setting is set to **Manual** (see "Rear view camera (depending on the model)" auf Seite 138) you can display the image of the reversing camera on your navigation system via the button **Show rear view camera**.

Press the button and then return to the screen last viewed. Depending on the model, the button will be on the map.

Image viewer*

Note:

The image viewer cannot be called up when route guidance is active.

The Image Viewer can display pictures saved on an inserted micro SD memory card or on the internal memory.

The jpg and bmp image formats are supported.




> Press the **Pictures** button.

*depending on model, this must be activated via the Content Manager.



A message is displayed stating that the image viewer must not be used when driving. Please observe this warning.

> Confirm the message by pressing the **OK** button.

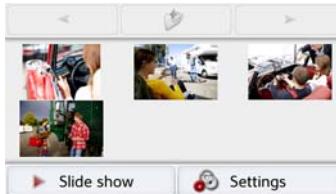

The image viewer menu appears.


The image viewer menu

In the image viewer menu, you can select images, start a slide show and call up the settings.



- ① Folder containing images
- ② Thumbnails of the images in the current folder
- ③ View the previous page of images/folders
- ④ Go up one level in the directory hierarchy
- ⑤ View the next page of images/folders

Selecting an image

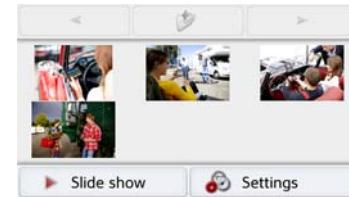

> In the image viewer menu, select the desired folder, and then the desired image.

You can use the and buttons to scroll through the pages of images and folders.

The selected image is displayed along with an image menu.



You can use the menu buttons to rotate or enlarge the image or to display information.

Press the buttons to the left and right of the image to move to the next or previous image.

Press the centre of the image to hide the image menu.



Press the right- or left-hand side of the screen to move to the next or previous image.

Press the centre of the image to show the image menu again.

Enlarging the image

- > Show the image menu.
- > Press the **Zoom** button.



- > Move the control on the top of the screen to the desired level of magnification.

The image can then be moved around.

Press the centre of the image to cancel the enlargement.

Rotating the picture

- > Show the image menu.
- > Press the **Rotate** button until the image is in the desired orientation.

Press the centre of the image to hide the image menu again.

Displaying image information

- > Show the image menu.
- > Press the **EXIF** button.



Information on the current image is displayed.

- > Press the  button to close the information.

Slide show

In the slide show, all the pictures in the current folder level are automatically displayed sequentially.

> Press **Slide show** in the image viewer menu.

The image display changes to full screen display and initiates the slide show according to the settings made, with the first image in the current folder level.


The slide show will end once all images have been displayed.

Press the  button to stop the show before the end.

Settings

In the settings, you can choose the speed at which the images are displayed, whether certain effects are used when a new image is shown, and whether the images should be loaded at a higher quality.

> Press **Slide show settings** in the image viewer menu.

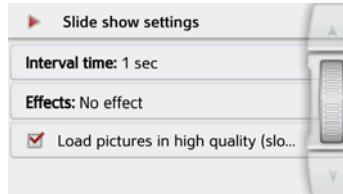

- > You can use **Interval time** to set the display duration.
- > In **Effects** you can choose the transition effects for the images.
- > In **Load pictures in high quality (slower)** you can choose whether images should be loaded at high resolution () or not ().

Loading the images at high resolution makes the display slower.

> Confirm your settings by pressing the back button .

Where am I?

> See "Displaying current position (Where am I?)" on page 105.

Traffic forecast (depending on model)

With the traffic forecast, you can observe the expected flow of traffic.

The data is based on historical traffic data collected over a longer period of time.



You can determine the expected flow of traffic by the colour of the road. Green signifies a clear road, red signifies congestion. All possible colours are displayed on the right-hand side of the screen.

If you now change the time of day, you will see how the expected flow of traffic changes.

> Press the **Traffic forecast** button

- With the **①** and **②** buttons you can change the weekday
- With the **③** and **④** buttons you can change the time in hourly increments

- With the  and  buttons you can change the section of the map.
- With the  button you can display the complete route on the screen if available.


You can select another section of the map by dragging.

Country information

The country information enables you to display country-specific information for numerous countries (maximum permitted speed, alcohol limits, etc.).



> Press the **Country information** button.

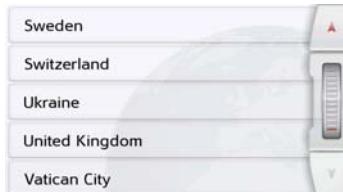

The list of countries is displayed.

> Press the button for the desired country.



The country-specific information is displayed (maximum permitted speed, alcohol limits, etc.). Click on these symbols to display additional information.

Note:

Please note that the information may not be complete and other regulations may apply in the various countries.

Below you will find a description of the symbols used:

Symbol	Meaning
	Speed limit in built-up areas
	Speed limit outside built-up areas
	Speed limit on motorways
	Speed limit on main roads
	Alcohol limit
	Reflective jacket requirement
	Driving lights requirement during daytime
	Tow rope must be carried
	Spare bulbs must be carried
	Fire extinguisher must be carried
	Winter tyres must be fitted in winter
	Snow chains must be fitted in winter

Blocking a section of the road permanently

With the Block option you can block individual route sections permanently. The Navigation device then calculates a diversion to avoid a traffic obstruction. Furthermore, existing blockages can be removed (with the Delete blockage button) or be displayed on a map.

> Press the Block button

A map of the vicinity near your location is displayed.

> Define the start and end point of the section to be blocked by touching the map.



Additionally, you can display a list of permanent blockages already defined on the map.




Select the desired blocked road by pressing, in order to set the blockage times.

Press the **OK** button or the  button to exit the menu.



The road is currently blocked for all days of the week, for the whole day . You can now set whether or not the road should be blocked for each day of the week.

- > Press the buttons with the days on which the road should not be blocked .
- > Press the clock symbol under one of the days and limit the block of this day to the required time of the day.

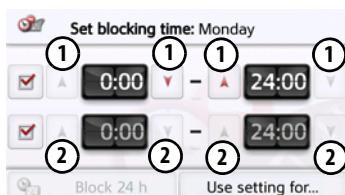

You can set up to two times when the road shall be blocked.

- > Using the buttons set the first period when the road is to be blocked on this day.
- > Using the buttons set the second period when the road is to be blocked on this day if necessary.

Press the **Block 24 h** button to set a block for an entire day. Press the **Use setting for...** button to also use the block on other days.

Use setting for...

- > Press again the back button to confirm the settings and to exit the menu.

Note:

The duration of the blockages can be defined also in the **Blocked roads** menu in the Navigation settings.

Trip computer (depending on model)

The Trip computer provides a data display with average speeds, maximum speeds, etc. and a stopwatch with the option to record laps.

- > In the main menu, press **Extras**.



- > Press the **Trip computer** button.



The data display appears.

The data display contains the following information:

- ① Current speed (as a number and in the form of a bar graph)
- ② Maximum speed
- ③ Average speed without breaks in the journey
- ④ Average speed with breaks in the journey
- ⑤ Total distance

- ⑥ Travel time without breaks in the journey
- ⑦ Travel time with breaks in the journey
- ⑧ Compass
- ⑨ Calls up the stopwatch with lap recording

Press the **Reset** button to reset the values to zero.

To display the stopwatch with the lap recording, press the button ⑨.



> Press the **Start** button to start the recording.



> Press the **Lap** button to stop the current recording and start a new lap recording.



You can record up to 300 laps in the same way.

Notes:

- The second value displayed in the top section shows the total time for the laps driven.
- Pressing the **Back** button on the left-hand side of the display or pressing the button switches back to the data display.

Press the **Stop** button to stop the recording. The time continues if you press the **Start** button again after stopping the recording.

Press the **Reset** button to delete all recordings and reset all times to zero.

You can display the individual laps in list form using the **List view** button.



> Press the **Delete list** button to delete the recorded laps.

Selecting system settings

You can change various basic settings for all applications on the Navigation device.

> In the main menu, press the  button.



> Press the **System settings** button.
The system settings menu is displayed.

The system settings menu

You can select the various settings options from the system settings menu.



Operation

Selection options

Select the desired menu item by pressing the appropriate button. The functionality of the buttons varies depending on the selection and is described under "The individual menu items" on page 134.

You can go to the next or previous page of the settings by pressing the  and  buttons.

Closing the settings menu

Press  to close the settings menu.

The individual menu items

Battery

Your Navigation device may be operated using an external power supply unit or an integrated rechargeable battery.

 
Note:

The current charging state is important when operating with a battery. If the battery is low on power, it may not be possible to continue navigation right to the destination.

The energy supply and status are shown on a display.

Displaying the power supply

You can call up the status display using the following button:



> Press the **Battery** button.

The status display appears and shows the power supply.



The power level is displayed by means of the level indicator. In the example, the battery is still approx. 80% charged.

The charging process is indicated in the status display by a connector symbol.

Please note that your navigation device must be supplied with sufficient current (ampere) in order to be reasonably charged. Consequently, we recommend using the BECKER car charger cable supplied with the device or original BECKER accessory items.



As soon as the battery is fully charged, the "battery fully charged" text will appear in the display.

Closing the status display

Pressing the **OK** button closes the status display and the settings menu appears.

Protection from overheating of the battery (model-dependent)

If the battery overheats due to external influences, for example, the device can switch to a protection mode automatically if necessary. In this mode, the external power supply is deactivated and the display brightness is reduced. The protection mode is stopped automatically as soon as the battery has reached a normal temperature again.

Power saving mode (model dependent)

In the system settings you can find the "Power saving mode" menu item. Here, you have two options for reducing the power consumption:

1. Reduce display brightness automatically: The display brightness is reduced automatically in the following situations:
 - a) As soon as nothing has been touched for at least 1:30 minutes without any active route.

(As soon as the display is pressed, the brightness is reset again to the previous value.)

- b) In battery mode: As soon as the battery has a capacity below 40%.
- c) In charging mode: As long as the battery has a capacity below 25%.

2. Switching off the screen between two turn-offs: You can set the navigator so that the display is switched off as long as no turn-off instructions are imminent. This option can be activated optionally on all road categories or only on motorways.



Automatic on/off

The Navigation device can switch automatically to sleep mode when the vehicle ignition is switched off.

Prerequisite for this:

- The Navigation device must be connected to the vehicle cigarette lighter (see also page 21).
- The cigarette lighter is de-energized after the ignition is switched off.
- The relevant function can be switched on at the Navigation device.

Switching the function on/off

> Press the **Automatic on/off** button.

Depending on the previous setting, you can switch the function on or off. The current setting is shown by the icon.



- Top icon: The function is switched on, the Navigation device switches off automatically.

- Bottom icon: The function is switched off, the Navigation device does not switch off automatically.

The following display is shown during automatic switch-off.



You can cancel the automatic switch-off procedure by pressing the **Cancel** button.

Day/night display

You can set the Navigation device display to day, night or automatic.

The automatic setting changes automatically between day and night display depending on the time, the current position and the time of year.

With the following button, you can call up the setting:



> Press the **Day/Night** button.



> Select from **Automatic**, **Day** and **Night**.
The desired function is activated and the system settings are displayed.


Brightness

You can set the brightness of the display separately for day and night display.

With the following button, you can call up the setting:



> Press the **Brightness** button.

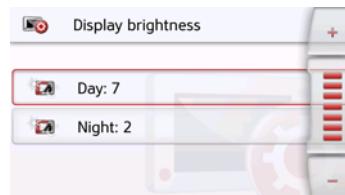


> Use the and buttons to set the desired brightness for the day and night display.

> Confirm your settings by pressing the back button .

Design by day

 With this option, the menu and map display during the day can be switched to the colours and contrast of night display.



> Press the **Design by day** button.



> Select the **Dark** design option for a dark display during the day.

> Select the **Normal** design option for a normal display during the day.



Confirm your selection by pressing the back button .


Design by night

Two schemes with different contrasts are available to select for the map display at night.


Press the Design by night button.



Select the option on the bottom to set a lighter night display for the map view.

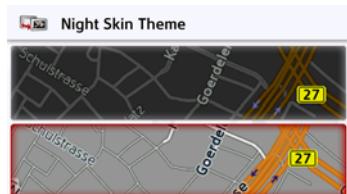

Select the option on the top to reset the darker, standard preset night display for the map view.

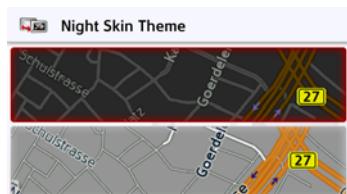


> Confirm your selection by pressing the back button . The new night display will take effect when activating the night mode.

Setting the colour

You can change the colour of the icons and other design elements.



> Press the **Colour schemes** button.

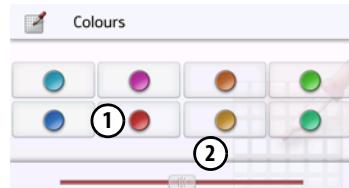

> Select one of the eight predefined colours.

or

> Select the required colour using the slider **(2)** at the bottom of the display.

Note:

The colour of the button **(1)** corresponds to the red colour set at the factory.

> Confirm your settings by pressing the back button .

Language

The texts on the touch screen can be displayed in a variety of languages.

Opening language selection

You can choose between the various languages using the following button:



> Press the **Language** button.

The language selection appears.



The language selection shows the available languages in a list several pages long. Each list field is in the form of a button. Each button is labelled with the language name and the associated national flag.

Scrolling

Using the buttons or the scroll wheel, it is possible to scroll through the list in the direction of the relevant arrow.

Selecting the language

- > Press the button for the required language.
- > The selection is confirmed by pressing the back button.

The selection list for the voice is displayed.

- > Using the buttons or the scroll wheel, scroll through the selection list.
- > Select a voice by touching the button.
- > Press the Back button.

A prompt appears indicating that the software has been re-started, and you are asked whether you really want to change the language.

 
- > Confirm the prompt using **OK**.

Cancelling the language selection

Pressing the **Cancel** button cancels the language selection and shows the settings menu.

Keyboard layout

You can switch the sequence of the keyboard layout by selecting the corresponding key.



Sounds

You can switch the Navigation device signal tone on and off. This also includes the clicking of the touch screen buttons.

- > Press the **Tones** button.

Depending on the previous setting, the signal tones are switched on or off.




- Top icon: Tones switched on
- Bottom icon: Tones switched off

Rear view camera (depending on the model)

Once you have connected your navigation system to a rear view camera using a suitable cable, (see "Cable for rear view camera (depending on the model, optional)" on page23) you can display the image of the rear view camera on your navigation system.



> Press the button rear view camera

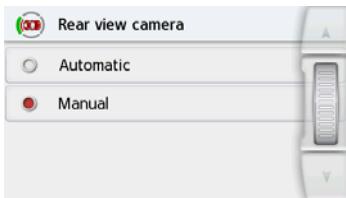

You can choose from the following options:

Selection	Meaning
Automatic	The navigation system switches over to the image of the reversing camera as soon as an image signal is sent. Normally, this is always the case once the reverse gear has been engaged

Selection	Meaning
Manual	It is possible to manually switch over to the reversing camera. In the Tools menu, a corresponding menu item is then available

Screen animations

You can switch the animated screen changes on and off.

> Press the animations key


Depending on the previous setting, you will either switch the animated screen changes on or off.




- Top icon: animations switched on
- Bottom icon: animations switched off

Driver profiles (depending on model)

You can select 4 different driver profiles.

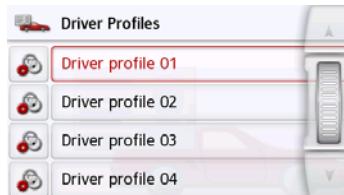

You select the corresponding profile by pressing the **Profile 1 – Profile 4** button. You must then restart the navigation system.

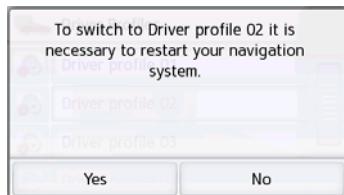

You restart the system by pressing on the **Yes** button.

The driver profiles can now be named individually. This function can be useful, for example, if several drivers use the same navigation system.

Many settings and regular destinations are stored in the driver profiles.

The following .. are stored in the driver profiles:

- Home address
- Last destinations
- Planned routes
- Blocked roads
- Last calls
- Data in the journey computer
- Last GPS position
- Navigation settings
- Phone settings
- System settings

Renaming driver profile



You can rename the selected profile by pressing the **Name entry** button.



Deleting driver profile



You can delete the saved profile data by pressing the **Delete profile** button. The profile itself will still remain. If the profile was renamed previously, it will then be renamed to the original name again (Profile 1 – Profile 4).



Driver profile Pro (model dependent)

Besides the functions described in the previous chapter, a Bluetooth® telephone can be used for automatically changing the profile on devices with Driver Profile Pro. Whenever the navigation device is switched on and the last connected phone is not found, your navigation device checks whether another telephone is within reach that was selected as a trigger for changing the profile.

Notice:

In order to use a telephone as a trigger for changing to another driver profile, you must first connect the telephone in the profile to the navigation device in which the telephone is to be used as a trigger, (also see "Connecting Bluetooth® telephones" on page116). Furthermore, the Auto-connect setting must be activated, see "Automatic connection" on page122.



Press the Set Auto-connect button. A list of possible telephones is displayed that you can use as a trigger for this profile, select the corresponding telephone by pressing the appropriate button.

Service information

The following button displays information regarding the Navigation device.



> Press the **Information** button.

The information display appears with the software version number.



By pressing the **Service information** button, you can display further information such as used licences, installed contents and map material. Always quote these details in enquiries to the service provided by United Navigation GmbH.

Factory settings

You can reset your Navigation device to the factory settings.

The following updated data is deleted: saved destinations, saved routes, the home address, telephone data, images, videos etc. saved on the internal memory.



> Press the **Factory reset** button.



> Press the **Yes** button.

 
The Navigation device is reset to the factory settings.

Calibration (model dependent)

If the touch screen responds incorrectly when buttons are pressed, it needs to be calibrated.

Starting the calibration

You can start the calibration using the following button:



> Press the **Calibration** button.

The calibration procedure will be started. You will be guided through the procedure by means of text instructions.

You can establish a data connection to a Wi-Fi® network (a telephone, for example) from your navigation system. This function requires that there is a mobile device in range which can be used as a Wi-Fi® hotspot.

Please refer to the operating instructions for your smartphone to see if/how you can use your smartphone as a mobile hotspot.

Press the Wi-Fi® settings button in the Settings menu.

Press the  button to activate and deactivate the Wi-Fi® function.

Press the  button to display the list of available networks. Select the network you wish to access from the list. Networks belonging to other people which you cannot access without a corresponding password might also appear in the list.

If you are connecting to a network for the first time, you must enter a password for this device. Enter the correct password for your Wi-Fi® hotspot here.


If you have previously connected to a

network, you can select it from this list without having to enter a password again.

If you have previously connected with a Wi-Fi® hotspot, the system will automatically try to re-establish the connection the next time you activate Wi-Fi®.

If you select the  button in this menu, you can establish or disconnect a connection, delete this network from the list or delete all networks displayed from the list.

The  button is used to modify or display specific settings.

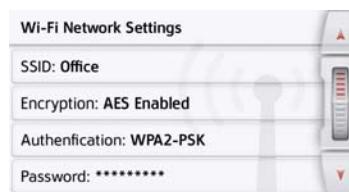

You can view the encryption, authentication and name of the Wi-Fi® network, for example, or enter the password for your Wi-Fi® hotspot.

Notice:

The data transmission via your mobile phone may involve additional costs depending on the mobile phone contract. Please find out from your mobile phone provider before activating. If a connection to the server is not possible, e.g. because no mobile phone network is available for a longer period of time, then the system switches over automatically to TMC until a connection to the server is possible again.

GMT

(Greenwich Mean Time)

Central European Time standard

Standard time at 0 degree longitude (the longitude intersecting Greenwich, Great Britain). This time is used worldwide for synchronization of data collection.

Bluetooth® wireless technology

Technology for wireless data transmission at short range up to 10 metres.

GPS

(Global Positioning System)

GPS determines your actual geographical position by the use of satellites. It is based on a total of 24 satellites which orbit the Earth and transmit signals. The GPS receiver receives these signals and calculates the distance to each satellite from the running time differences and thus evaluates its actual current position in terms of geographical length and width. In order to determine the position, signals from at least three satellites are required, and the fourth one allows the height to be determined.

JPG/JPEG

(Joint Photographic Experts Group)

The JPEG is the most common type of storage format for dissipating picture compression, i.e. when compressing, details of the picture are lost. Still provides good picture quality despite compression, compression stages are selectable. It is the most common format for representation and exchange of pictures on the internet.

SD card

(Secure Digital)

The Secure Digital Card was developed in 2001 by SanDisk on the basis of the older MMC standard. An SD card is a rewritable change-over storage card.

TMC

(Traffic Message Channel)

Traffic announcements transmitted by most FM stations via RDS. Basis for dynamic navigation.

USB

(Universal Serial Bus)

The Universal Serial Bus (USB) is a bus system for interconnection of a computer with external USB peripherals for the exchange of data.

Wi-Fi®

Wi-Fi® stands for "Wireless Fidelity" and is a worldwide wireless LAN Standard. Devices with the Wi-Fi® label are compatible with each other and can exchange data.

Numerics

3D display 66

A

Adjusting the map view 66

Announce streets 79

Audio Out settings
(model dependent) 124

Automatic call acceptance 122

Automatic connection 117, 122

B

Block 104

Blocked roads 84

Blocking a section of the road 104

Blocking a section
of the road permanently 130Bluetooth settings
Bluetooth on/off 122Bluetooth settings
(model dependent) 122Bluetooth® wireless
technology 116, 144

Switching on/off 122

CCall
Accept 120

End 120

Ignore 120

Reject 120

Call list 114

scrolling 115

selecting number 115

Call lists 114

Connecting a telephone 116

Content Manager 33

telepítése 34

Coordinate entry 61

Country information 71, 129

Current position 105

D

Data settings / Bluetooth Tethering

(model dependent) 124

Destination from map 60

Destination input menu

Start 47

Destination list 42

Destination memory

changing 43, 115

Scroll 43

Destinations

Entering 47

Protected 43

Standard 43, 117

Storing 51

Dial 112

Dialing a number 112

Display position 60

Display street names 67

Displaying information signs 81

Displaying the route 51, 100

Driver warnings 81

E

Easy route 76

Economical route 76

Eco-route 76

Entering address by speech 53

Entering an address 48

Entering the town 49

F

Factory settings 86

Fast access 43

Icons 43

Fast route 76

Ferries 77

G

Geo coordinates 61
 GMT 144
 Google™ points of interest 44
 GPS 144
 GPS reception 106

H

Hazardous materials class 75
 Home address 41
 House number 51

I

ID3 tag 144
 Image viewer 125
 Intended purpose 7
 Intersection 50

J

JPG/JPEG 144

L

Lap recording 132
 Last announcement 95
 Lists

 List of towns 49
 Street list 50
 telephone numbers 114

M

Map
 showing 91
 Zoom in 60, 96, 108
 Zoom out 60, 96, 108
 Map display 91
 Map orientation 67
 Memory card 23
 Micro SD Card 23
 Microphone on/off 121
 Motorways 77

N

Navigation 40
 starting 51
 terminating 29, 103
 Number list
 Dialing a number 115
 Number lists 114

P

Phonebook 112, 113
 Update 123
 Photo 125
 Point of Interest on the route 58

Points of interest

Call 59
 entering directly 58
 in the vicinity 56
 near the destination 58
 near to an address 57

Q

Quick access
 Icons 115

R

Restrictions
 Ferries 77
 Motorways 77
 Toll roads 77
 Route calculator 131
 Route description 101
 Route guidance
 starting 51
 terminating 29, 103
 Route options 72, 103
 Route planning 47, 61
 Route types 106

S

Safety instructions 7, 40
Satellites 106
SD card 23
Searching for a telephone 118
Selecting a country 48
Selecting a town 49
Selecting destination
 Entering an address 48
Selecting the street 50
Setting the volume 96, 123
Settings
 Close the status display 134
 Navigation 65
 Power saving mode 134
 Protection from overheating
 of the battery 134
 System 133
 Telephone 122
Short route 76
Slide show 128
Speed limit 83
Stopover 103
 Deleting 104
Switching on the navigation
device 27
System settings 133

T

Telephone menu 112
Telephone settings 122
The main menu 29
Time of day format 86
Time zone 86
TMC 77, 87
 Displaying TMC messages
 on the map 88
 Route recalculation 90
TMC antenna 22
Toll roads 77
Traffic information 71, 129
Truck profile 74

U

Units 86
USB 145

V

Vehicle profile
 selecting 72, 73
 setting 73
Voice 79
Voice commands 53

W

Warnings
 Speed limit 83

- : standard
- : not available
- : optional

	Navigation system						
	active.6s CE / EU BE H00	ready.6s EU plus BE B95 / BBF96	active.6s EU plus BE H10	active.6s EU plus BE H40	professional.6s EU BE H50	transit.6s EU BE H02	transit.6s EU plus BE H50
Weight	300 g	290 g	300 g	300 g	300 g	300 g	300 g
Processor speed in MHz	800	800	800	800	800	800	800
Flash memory	4 GB	8 GB	4 GB	8 GB	8 GB	8 GB	8 GB
SD-RAM	256 MB	256 MB	256 MB	256 MB	256 MB	256 MB	256 MB
Battery capacity (Li-polymer)	1600 mAh	1550 mAh	1600 mAh	1600 mAh	1600 mAh	1600 mAh	1600 mAh
TMC	●	●	●	●	●	●	●
Dimensions in mm (W x H x D)	167x103x16	167x103x16	167x103x16	167x103x16	167x103x16	167x103x16	167x103x16
Screen diagonal	15.8 cm	15.8 cm	15.8 cm	15.8 cm	15.8 cm	15.8 cm	15.8 cm
Display resolution in pixels	800x480	800x480	800x480	800x480	800x480	800x480	800x480
Resistive touch display	-	●	-	-	-	-	-
Capacitive touch display	●	-	●	●	●	●	●
Micro SD card reader	Support class 6 SDHC max. 32 GB; format FAT32						
USB interface	USB Client 2.0, micro USB						
1 Internal loudspeaker	1.5 Watt max.						
Power supply	5 V, 2 A	5 V, 2 A	5 V, 2 A	5 V, 2 A	5 V, 2 A	5 V, 2 A	5 V, 2 A
USB power supply 100-240 V 50-60 Hz	-	-	-	●	●	-	●
Compatible with HR holders	●	●	●	●	●	●	●

● : standard
- : not available
○: optional

	Navigation system				
	active 5" EU BE 2B00 BE 3B00	active 7" EU BE 2B30 BE 3B30	active 5" EU BE 2B10 BE 3B10	active 7" EU BE 2B40 BE 3B40	transit. 7" EU BE 3B40
Weight	200 g	325 g	205 g	330 g	330 g
Processor speed in MHz	800	800	800	800	800
Flash memory	4 GB	4 GB	8 GB	8 GB	8 GB
SD-RAM	256 MB	256 MB	256 MB	256 MB	256 MB
Battery capacity (Li-polymer)	1300 mAh	1600 mAh	1300 mAh	1600 mAh	1600 mAh
TMC	●	●	●	●	●
Dimensions in mm (W x H x D)	138x85x15.5	182x114x13.5	138x85x15.5	182x114x13.5	182x114x13.5
Screen diagonal	12.7 cm	17.8 cm	12.7 cm	17.8 cm	17.8 cm
Display resolution in pixels	800x480	800x480	800x480	800x480	800x480
Resistive touch display	-	-	-	-	-
Capacitive touch display	●	●	●	●	●
Micro SD card reader	Support class 6 SDHC max. 32 GB; format FAT32				
USB interface	USB Client 2.0, micro USB				
1 Internal loudspeaker	1.5 Watt max.	2.5 Watt max.	1.5 Watt max.	2.5 Watt max.	2.5 Watt max.
Power supply	5 V, 1.3 A	5 V, 2 A	5 V, 1.3 A	5 V, 2 A	5 V, 2 A
USB power supply 100-240 V 50-60 Hz	-	-	●	●	●
Compatible with HR holders	●	●	●	●	●

Dear customer,

In conformance with current EC guidelines, any person may operate this unit. This unit conforms to the current valid European or harmonized national regulations. This designation is your guarantee that the unit conforms to the applicable specifications concerning electromagnetic compatibility. Interference caused by your unit affecting other electrical/electronic devices, as well as interfering influences on your unit from other electrical/electronic devices are largely prevented.



EU Declaration of Conformity

The **United Navigation GmbH** hereby declares that the navigation device described here is in compliance with the essential requirements of the EC directives and in particular is in compliance with the essential requirements and other relevant regulations of the R&TTE directive 1999/5/EG.

You can find a comprehensive EU Declaration of Conformity on our website www.becker-navigation.de under the "Downloads" area for the respective product.

Disposal of the unit

Customer information on the disposal of electrical and electronic devices (private households)

According to the self-proclaimed corporate principles of United Navigation GmbH, your product has been developed and manufactured from high-quality, recyclable materials and components.

This symbol on the product and/or accompanying documentation means that electrical and electronic products must be disposed of separately from the household garbage at the end of its service life. Please bring this product to the appropriate collection sites for processing and recycling. The units will be accepted there free of charge.

The proper disposal of this product serves the purpose of environmental protection and prevents the harmful effects to persons and the environment that may be caused by improper disposal.

For further information on the nearest collection points, please contact your local municipal authorities.



For commercial customers in the European Union

Please contact your dealer or supplier if you wish to dispose of this electrical/electronic device.

Information on disposal in countries outside the European Union

This symbol is only valid within the European Union.

Disposal of the battery

Duty to supply information according to battery legislation (BattV)

Batteries must not be disposed of in household waste. It is the duty of the user to return used batteries. Please only dispose of batteries via specialised dealers or at battery collection points. In this way, you make a positive contribution to environmental protection.

Since 1998, German battery legislation obligates all citizens to dispose of used batteries exclusively via the retail or at collection points specially equipped for this purpose (statutory obligation to return). It is the duty of the retail and of manufacturers to take back these batteries free of charge and to correctly recycle them or to dispose of them as hazardous waste (statutory obligation to take back).

The lithium ion battery in the Navigation device is marked with the adjacent symbol, consisting of a crossed-out waste bin, and the type of battery used.




Removing the battery

Before you hand in your old unit for disposal, the battery must first be removed.

Note:

Please note that in following the removal instructions for the battery described here, your unit may be **destroyed**.


You should only remove the battery if your unit is old and is to be handed in for disposal.

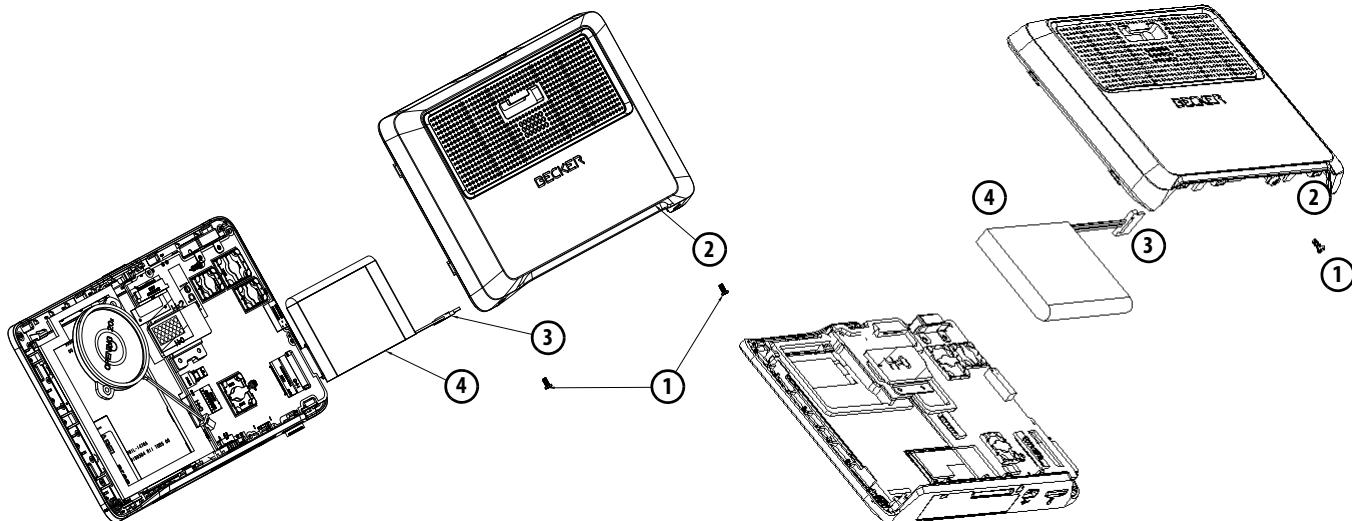

- > Completely discharge the battery (leave the unit switched on with no power supply until it automatically switches off).
- > Unscrew and remove the housing screws ① (model dependent) using a small screwdriver.
- > Lever off the rear of the housing ② using a flat-blade screwdriver (placed at the slits on the sides of the housing).
- > Remove the circuit board if necessary; to do this, you first have to remove the screws of the circuit board (model dependent).
- > Pull out the connector of the battery connecting cable ③.
- > Remove the battery ④.

Note:

Do not reconnect a unit that you have opened to the power supply.

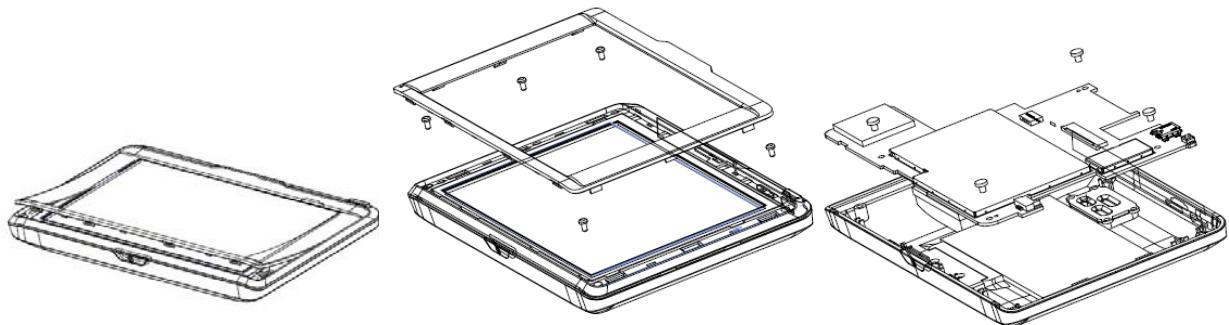

For devices without screws on the bottom side of the device (model dependent):

- > Completely discharge the battery (leave the unit switched on with no power supply until it automatically switches off).
- > Lever off the front cover using a flat-headed screw driver (placed between the display and display frame).
- > Remove the 5 screws.
- > You can now lever off the front of the device from the back panel using a flat-headed screw driver.
- > Then remove the circuit board; to do this, you first have to remove the screws of the circuit board.
- > Disconnect the plug of the battery connection cable.
- > Remove the battery.

Note:

Do not reconnect a unit that you have opened to the power supply.

United Navigation GmbH
Zeppelinstraße 41
73760 Ostfildern

www.becker-navigation.de

BECKER