

brother®

TZ
TAPE

P-touch

2470

USER'S GUIDE



- Read this User's Guide before you start using your P-touch.
- Keep this User's Guide in a handy place for future reference.

If you encounter any problems with your product, visit our Web site:
<http://solutions.brother.com/>

Declaration of Conformity (Europe only)

We BROTHER INDUSTRIES, LTD.
 15-1, Naeshiro-cho, Mizuho-ku,
 Nagoya, 467-8561, Japan

declare that this product is in compliance with the essential requirements and other relevant provisions of Directives 2004/108/EC and 2009/125/EC.

The Adapter AD-18ES is in compliance with the essential requirements and other relevant provisions of Directive 2006/95/EC.

The Declaration of Conformity (DoC) is on our Web site. Please go to <http://solutions.brother.com> -> choose region (eg. Europe) -> choose country -> choose your model -> choose "Manuals"-> choose Declaration of Conformity (*Select Language when required).

Compilation and Publication Notice

Under the supervision of Brother Industries Ltd., this manual has been compiled and published, covering the latest product's descriptions and specifications.

The contents of this manual and the specifications of this product are subject to change without notice.

Brother reserves the right to make changes without notice in the specifications and materials contained herein and shall not be responsible for any damages (including consequential) caused by reliance on the materials presented, including but not limited to typographical and other errors relating to the publication.

Trademarks

The Brother logo is a registered trademark of Brother Industries, Ltd.

Brother is a registered trademark of Brother Industries, Ltd.

© 2010 Brother Industries Ltd.

- Microsoft, Windows and Windows Vista are registered trademarks of Microsoft Corporation in the United States and other countries.
- The names of other software or products used in this document are trademarks or registered trademarks of the respective companies that developed them.



Before Using Your P-touch

Thank you for purchasing the PT-2470.









Your new P-touch is an easy to operate, feature packed labelling system that makes creating professional, high quality labels a breeze. In addition to easy label creation via pre-formatted label layouts, the P-touch editing software features advanced label formatting, block formats, bar codes and auto-numbering functions.

Safety precautions

To prevent injury and damage, important notes are explained using various symbols. The symbols and their meanings are as follows:

 WARNING	Tells you what to do to avoid the risk of injury.
 CAUTION	Tells you about procedures you must follow to prevent damage to the P-touch.










The symbols used in this manual are as follows:

	Action NOT allowed.		DO NOT disassemble the product.
	DO NOT splash the product with or immerse the product in water.		DO NOT touch this part of the product.
	Mandatory action		Unplugging
	Safety alert		Alerts to the possibility of electrical shock

WARNING

AC adapter







Follow these guidelines to avoid fire, damage, electric shock, or failure.

-  Use only the AC adapter (AD-18ES) designed exclusively for your P-touch. Failure to observe this may result in an accident or damage. Brother shall not assume any responsibility for any accident or damage resulting from not using the specified AC adapter.
-  Unplug the power cord immediately and stop using the machine during an electrical storm. There may be a remote risk of electric shock from lightning.
-  Do not touch the AC adapter or power plug with wet hands.
-  Do not use the AC adapter in places of high humidity such as bathrooms.
-  Do not use a damaged power cord.
-  Do not overload the power outlet.
-  Do not place heavy objects on, damage or modify the power cord or plug. Do not forcibly bend or pull the power cord.
-  Do not drop, hit or otherwise damage the AC adapter.
-  Make sure that the plug is fully inserted in the power outlet. Do not use an outlet that is loose.

WARNING









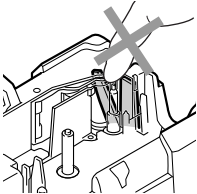
Batteries (Alkaline)

Follow these guidelines to avoid leakage, or damage to the batteries.

-  Do not use metallic articles, such as tweezers or a metallic pen, when exchanging the batteries.
-  Do not charge the batteries in high temperature locations.
-  Do not throw into fire, heat up, or disassemble the battery.
-  If battery fluid comes into contact with skin or clothes, wash the affected areas thoroughly with clean water. Battery fluid is harmful to skin.
-  If the batteries leak, make sure the fluid does not come into contact with your eyes, as this may result in loss of eyesight. If contact does occur, flush eyes with clean water and seek medical attention urgently.
-  If the batteries begin to emit an odour, overheat, discolour, deform, or any other change occurs during use, charging, or storage, remove the batteries immediately and discontinue use.

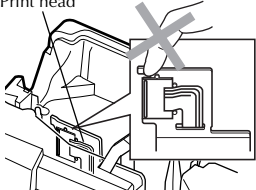P-touch

Follow these guidelines to avoid fire, damage, electric shock, and choking.

-  Do not allow the P-touch to get wet in any way.
-  Do not touch any metal parts near the print head. The print head becomes very hot during use and remains very hot immediately after use. Do not touch it directly with your hands.
Print head
- 
-  Do not disassemble the P-touch. For inspection, adjustment, and repair of the P-touch, contact the retail outlet where the P-touch was purchased or your local authorized service centre.
-  Plastic bags are used in the packaging of your machine. To avoid danger of suffocation, keep these bags away from babies and children.
-  Disconnect the AC adapter and remove battery immediately and stop using when you notice abnormal odour, heat, discolouration, deformation or anything unusual while using or storing it.
-  Do not use the P-touch with a foreign object in it. If water, metallic substance or any foreign object enters the P-touch, disconnect the AC adapter and remove battery, and contact the retail outlet where the P-touch was purchased or your local authorized service centre.
-  Do not touch the blade of the cutter unit.
- 



CAUTION

Tape Cutter

Follow these guidelines to avoid personal injury and damage of the P-touch.






-  Do not open the tape compartment cover when operating the cutter unit.
-  Do not apply excessive pressure to the cutter unit.

AC adapter

-  If you do not intend using the P-touch for an extended period of time, please disconnect the AC adapter from the power outlet and the P-touch to avoid battery leakage or loss of charge.
-  Always hold the plug when disconnecting the power cord from the power outlet.




Batteries

Follow these guidelines to avoid liquid leakage, heat or rupture of the batteries.


-  Do not use old and new batteries together.
-  Check that the batteries are correctly inserted.
-  Do not mix alkaline batteries with other type batteries.
-  If you do not intend using the P-touch for an extended period of time, please remove the battery to avoid battery leakage or loss of charge.
-  Do not let the batteries get wet.

P-touch



Follow these guidelines to avoid personal injury and damage of the P-touch.

-  Place the P-touch on a flat, stable surface such as a desk.
-  Do not place any heavy objects on top of the P-touch. Do not press on the LCD screen.
-  Do not leave the P-touch within reach of children with the back cover open.


Tape

-  Depending on the location, material, and environmental conditions, the label may unpeel or become irremovable, the colour of the label may change or be transferred to other objects. Before applying the label, check the environmental condition and the material.

Memory

-  Any data stored in memory will be lost due to failure or repair of the P-touch, or when the batteries expires and the power is disconnected.
-  When power is disconnected for more than two minutes, all text and format settings will be cleared. Any text files stored in the memory will also be cleared.

General Precautions

- Do not use the P-touch in any way or for any purpose not described in this guide. Doing so may result in accidents or damage to the machine.
- Do not put any foreign objects into the tape exit slot, AC adapter connector, etc.
- Do not touch the print head with your fingers. Use a soft wipe (e.g. a cotton swab) when cleaning the print head or the optional print head cleaning cassette (TZ-CL4) when cleaning the print head.
- Do not clean the machine with alcohol or other organic solvents. Only use a soft, dry cloth.
- Do not place the P-touch/battery in direct sunlight or rain, near heaters or other hot appliances, in any location exposed to extremely high or low temperatures (e.g. on the dashboard or in the back of your car), high humidity, or dusty locations. Standard operating temperature range: 10°C to 35°C.
- Do not leave any rubber or vinyl on the machine for an extended period of time, otherwise the machine may be stained.
- Depending on the environmental conditions and the applied settings, some characters or symbols may be difficult to read.
- Use only Brother TZ tapes with this machine. Do not use tapes that do not have the  mark.
- Do not pull or apply pressure to the tape in the cassette. Otherwise the tape cassette or P-touch may be damaged.
- Make sure that the release lever is up when closing the back cover. The back cover cannot be closed if the release lever is pressed down.
- Do not try to print labels using an empty tape cassette or without a tape cassette set in the P-touch. Doing so will damage the print head.
- Do not attempt to cut tape while printing or feeding since this will damage the tape.
- We strongly recommend that you read this User's Guide carefully before using your P-touch, and then keep it nearby for future reference.

Contents

Before Using Your P-touch	i
<i>Safety precautions</i>	<i>i</i>
General Precautions	v
Contents	vi

1. Getting Started1

Unpacking Your P-touch	1
General Description	2
<i>Top view & bottom view</i>	<i>2</i>
<i>Keyboard & LCD screen</i>	<i>3</i>
<i>Back light</i>	<i>4</i>
Power Supply	4
<i>AC Adapter</i>	<i>4</i>
<i>Batteries</i>	<i>5</i>
Tape Cassettes	6
<i>Installing a tape cassette</i>	<i>6</i>
Turning the P-touch On/Off	9
Changing the Language	9

2. Label Type Modes10

Selecting a Label Type Mode	10
Normal and Vertical Modes	10
Rotate and Rotate & Repeat Modes	11
Flag Mode	12
Port and Panel1 Modes	13
Panel2 Mode	14

3. Basic Functions16

Performing Basic Operations	16
<i>Choosing functions, parameters, settings and groups</i>	<i>16</i>
<i>Choosing the default setting</i>	<i>16</i>
<i>Confirming a choice</i>	<i>16</i>
<i>Cancelling a choice</i>	<i>16</i>

Inputting Label Data	17
<i>Entering and editing text</i>	17
<i>Entering an accented character</i>	19
<i>Entering a bar code</i>	20
<i>Entering a symbol</i>	22
Formatting the Label	25
<i>Specifying a label length</i>	25
<i>Specifying a margin size</i>	25
<i>Framing the text</i>	26
<i>Specifying the character size</i>	27
<i>Specifying the character width</i>	28
<i>Specifying the character style</i>	29
<i>Using the pre-formatted Auto Format templates</i>	30
Printing Labels	31
<i>Previewing the label layout</i>	31
<i>Feeding tape</i>	32
<i>Printing a label</i>	32
<i>Using special printing functions</i>	32
Storing and Recalling Files	36
<i>Storing label text</i>	36
<i>Recalling text that has been stored</i>	37
<i>Deleting text that has been stored</i>	37

4. Machine Adjustments39

<i>Selecting how tape is fed and cut</i>	39
<i>Adjusting the display contrast</i>	39
<i>Using the Auto Reduction function</i>	40
<i>Calibrating the label length</i>	40
<i>Updating the PERSONAL symbol category</i>	41
<i>Changing the units of measure</i>	41
<i>Displaying version information</i>	41
Cleaning	42
<i>Cleaning the print head, rollers and tape cutter</i>	42

5. Appendix44

Resetting the P-touch	44
Troubleshooting	44
Error Message List	46

Machine Specifications	51
<i>Main Unit</i>	<i>51</i>
Accessories	52
Index	53

1 Getting Started

Unpacking Your P-touch


Check that the package contains the following before using your P-touch.

PT-2470


P-touch



User's Guide

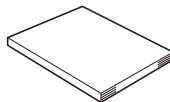



TZ tape cassette

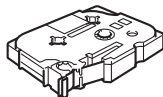


General Description

Top view & bottom view

Top view

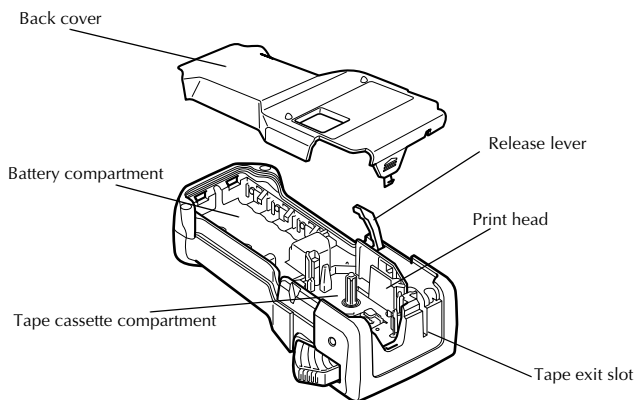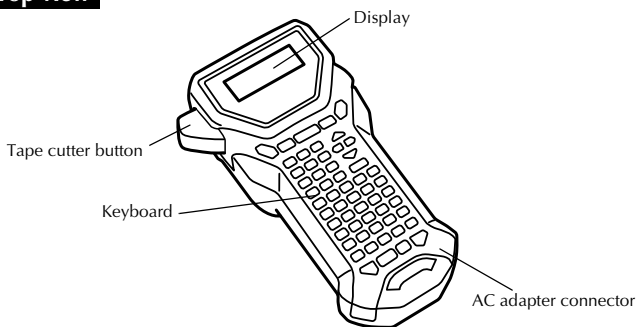

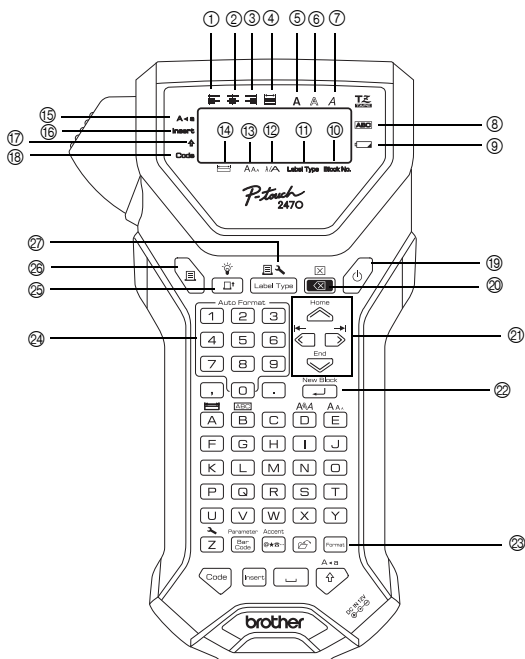

Bottom view



- | | |
|--------------------------------------|---------------------------------|
| ① Left text alignment (page 30) | ⑮ Caps mode (page 17) |
| ② Centre text alignment (page 30) | ⑯ Insert mode (page 18) |
| ③ Right text alignment (page 30) | ⑰ Shift mode (page 17) |
| ④ Justified text alignment (page 30) | ⑱ Code mode (page 17) |
| ⑤ Bold text style (page 29) | ⑲ Power key (page 9) |
| ⑥ Outline text style (page 29) | ⑳ Backspace key (pages 16 & 19) |
| ⑦ Italic text style (page 29) | ㉑ Arrow keys (page 16) |
| ⑧ Frame (page 26) | ㉒ Return key (pages 16 & 18) |
| ⑨ Low battery indicator (page 5) | ㉓ Global format key (page 27) |
| ⑩ Block number (page 18) | ㉔ Auto Format keys (page 30) |
| ⑪ Label Type setting (page 10) | ㉕ Feed key (page 32) |
| ⑫ Width setting (page 28) | ㉖ Print key (page 32) |
| ⑬ Size setting (pages 27 & 28) | ㉗ Label Type (page 10) |
| ⑭ Length setting (page 25) | |

Back light

Press  and  to turn on or turn off the back light. The back light can be used when you wish to see the display more clearly. The default setting is ON.

 Power can be saved when the back light is turned off.

Power Supply

The P-touch can be supplied with two power supply options.


	AC adapter (page 4)	Batteries (page 5)
PT-2470	●	●

Use the power supply best suited to your needs. For details on each power supply, refer to the following description below.

AC Adapter

Connecting the AC adapter

When printing a large number of labels or labels that contain a large amount of text, it may be useful to connect the P-touch to a standard electrical outlet using the AC adapter.

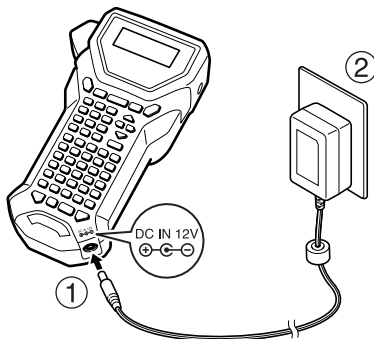


Notes on the AC adapter

- ☞ Only use the AC adapter designed exclusively for this machine.
- ☞ Disconnect the AC adapter if you do not intend to use this P-touch for an extended period of time. When the power is disconnected, all text shown in the display and stored in the memory will be lost.


Batteries

Installing the batteries

This machine has been designed to allow you to change the batteries quickly and easily. With batteries installed, this compact and portable machine can be used anywhere.

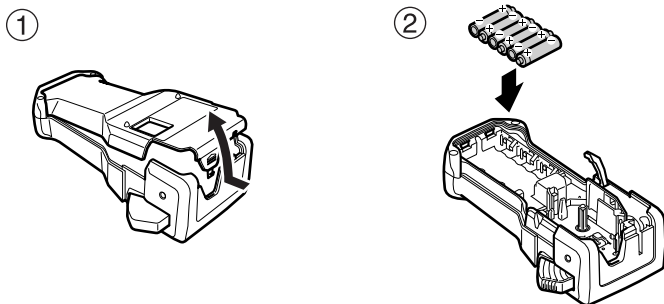

Notes on batteries


- ☞ **This P-touch requires six AA-size batteries (LR6).**
- ☞ Do not use any of the following, otherwise battery leakage or damage may occur.
 - Manganese batteries
 - A combination of new and used batteries
 - A combination of batteries of different types (alkaline and Ni-MH), different manufacturers or different models
- ☞ Make sure that the batteries are inserted so that their poles point in the correct direction. With batteries installed, the P-touch determines the remaining battery charge during printing and feeding. If a low battery charge is detected, the low battery indicator () comes on. When this occurs, be sure to replace the batteries. The low battery indicator may not come on in some operating conditions.

- ☞ Before replacing the batteries, make sure that the P-touch is turned off. In addition, when replacing the batteries, insert the new ones within two minutes of removing the old ones, otherwise the text shown in the display and any text stored in the memory will be lost.
- ☞ If you do not intend to use this P-touch for an extended period of time, remove the batteries. When the power is disconnected, all text shown in the display and stored in the memory will be lost.

Tape Cassettes


Installing a tape cassette


This machine has been designed to allow you to change the tape cassettes quickly and easily. TZ tape cassettes are available for this machine in a wide variety of types, colours and sizes, enabling you to make distinctive colour-coded and stylized labels.

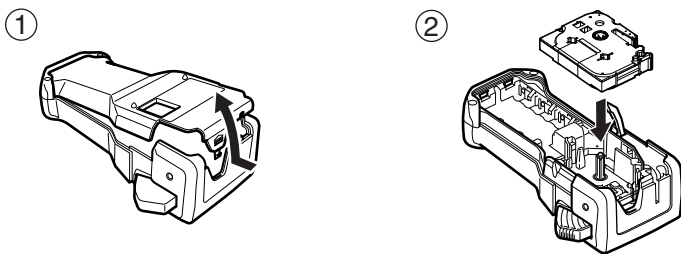

Notes on tape cassettes

- Before installing the tape cassette, make sure that the end of the tape feeds under the tape guides.
- If the tape cassette to be installed has an ink ribbon and the ink ribbon is loose, use your finger to wind the toothed wheel in the direction of the arrow on the cassette until there is no slack in the ribbon.

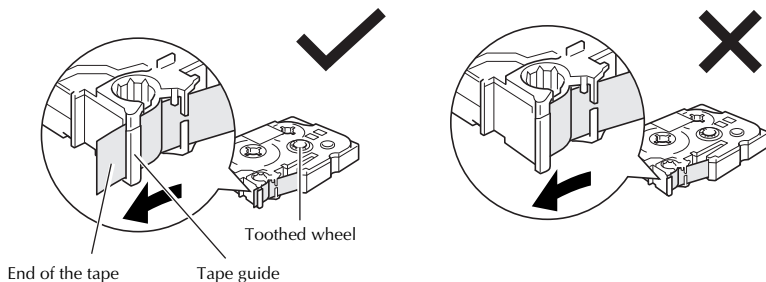


- When inserting the tape cassette, make sure that the inner ribbon does not catch on the corner of the metal guide.
- After installing a tape cassette, press  once to remove any slack in the tape, and then press the tape cutter button to cut off the excess tape.
- Always cut off the tape before removing it from the machine. If the tape is pulled on before being cut off, the tape cassette may be damaged.

Strong Adhesive Tape

- For textured, rough, or slipping surface, we recommend using Strong Adhesive Tape.
- Although the instruction sheet included with the Strong Adhesive Tape cassette recommends cutting the tape with scissors, the tape cutter that this P-touch is equipped with is able to cut Strong Adhesive Tape.**

Turning the P-touch On/Off








Press  to turn on or turn off the P-touch.

If the P-touch is powered by the AC adaptor or batteries, the previous session's text is displayed when the P-touch is turned on again. This feature allows you to stop work on a label, turn off the machine, and return to it later without having to re-enter the text.

Regardless of whether the P-touch is being operated from battery or the AC adapter, the machine will automatically turn off if no key is pressed or no operation is performed for 5 minutes.


Changing the Language














The language of the menus, settings and messages can be changed by selecting **ENGLISH, FRANÇAIS, ESPAÑOL, PORTUGUÊS, DEUTSCH, NEDERLANDS, ITALIANO, DANSK, SVENSKA, NORSK, or SUOMI**. (The default setting is **ENGLISH**.)

- 1 Press , then .
- 2 Press  or  until **LANGUAGE** is displayed.
- 3 Press  or  until the desired setting is displayed, and then press .

2 Label Type Modes


Selecting a Label Type Mode

Pressing  allows you to select one of the two regular modes for designing and printing your own custom labels, or any of the six special modes available for printing labels pre-formatted for identifying patch panels, cables, connectors and other components.

- 1 Press .
- 2 Press  or  (or continue pressing ) until the desired mode is displayed. (For details on each Label Type mode, refer to the sections below.)
- 3 Press  to apply the selected Label Type mode.
 - If **NORMAL** or **VERTICAL** was selected, continue entering the label text as described in chapter 3, *Basic Functions*.
 - If **ROTATE**, **R & REP.**, **PORT**, **PANEL1**, **PANEL2** or **FLAG** was selected, continue with the following steps.
- 4 Press  or  until the desired parameter is displayed.
- 5 Press  or  until the desired setting is displayed (or use the number keys to type in the desired setting).
- 6 Press  to apply the selected settings.
- 7 Type the text for each label in a separate text block.
- 8 Print the labels.
 - To print a single copy of each label, press .
 - To print multiple copies or several copies while increasing certain characters, or to print using any other special printing function, press , then  and choose your options. (For details, refer to *Using special printing functions* on page 32.)

Normal and Vertical Modes



Labels printed using the **Normal** and **Vertical** Label Type modes can be formatted and printed to fit any need.

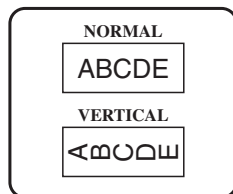

After selecting the Label Type mode **NORMAL** or **VERTICAL**, the label text can be entered, formatted, printed and cut as usual. With the **Normal** Label Type mode, the entered text is printed horizontally along the label. With the **Vertical** Label Type mode, the entered text is printed vertically along the label.

Rotate and Rotate & Repeat Modes

Labels printed using these Label Type modes can be wrapped around cables and wires to mark them. With both of these modes, the text is rotated 90° anti-clockwise and each text block printed on a separate label as shown below. With the Rotate & Repeat mode, the text is printed repeatedly along the length of the label so that it can easily be read from any angle.

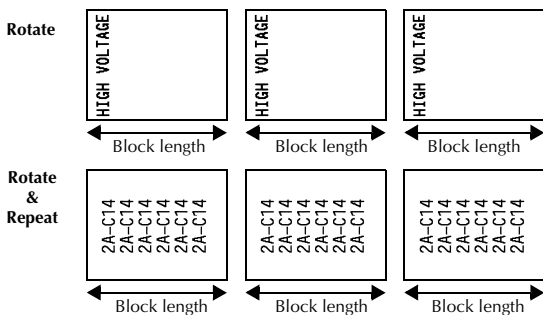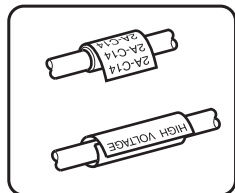



After selecting the **ROTATE** or **R & REP.** Label Type mode, specify the length of each label and a frame style if desired.

- **BL. LEN.** (block length): 20.0 to 200.0 mm
Default: 30.0 mm
- **FRAME:** OFF, 1, 2, 3, 4
Default: OFF

- ☞ A single block of text can contain a maximum of 7 text lines, and with the **R & REP.** Label Type mode, only the text lines that fit within the label are printed.
- ☞ For labels to be attached to cables and wires, we recommend using Flexible ID Tape. When wrapping Flexible ID Tape around cylindrical objects, the diameter of the object should be at least 3 mm, otherwise the **FLAG** Label Type mode should be used. In addition, the overlapping ends of the label or the flag length should be at least 5 mm.

Flag Mode

Labels printed using this Label Type mode can be wrapped around cable or wire with the ends stuck together to form a flag. With the **FLAG** Label Type mode, each block of text is printed at both ends of separate labels. The length of the unprinted part of this label is equal to the circumference of the cable or wire. In addition, the text can be printed horizontally or rotated 90°.

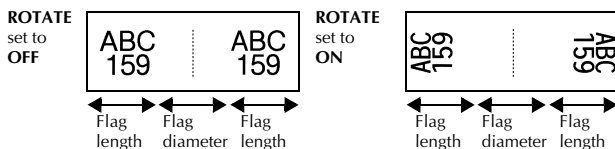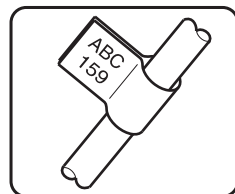

After selecting the **FLAG** Label Type mode, specify the length and diameter of the flag, a frame style if desired, and whether or not to rotate the text.


- **FLAG ϕ** (flag diameter): 0.0 to 100.0 mm
Default: 7.0 mm
- **FLAG LEN** (flag length): 10.0 to 200.0 mm
Default: 30.0 mm
- **FRAME:** OFF, 1, 2, 3, 4
Default: OFF
- **ROTATE:** OFF, ON
Default: OFF

- ☞ A single block of text can contain a maximum of 7 text lines.
- ☞ For labels to be attached to cables and wires, we recommend using Flexible ID Tape. To wrap Flexible ID Tape around cylindrical objects, use the **FLAG** Label Type mode when the diameter of the object is less than 3 mm. In addition, the flag length should be at least 5 mm.


Port and Panel1 Modes

Labels printed using these Label Type modes can be used to identify various components or panels.


With the **Port** Label Type mode, each block of the text is printed on a separate label, making these labels useful for identifying different components or ports that are not equally spaced.

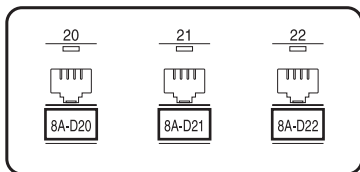


With the **Panel1** Label Type mode, all blocks of the text are evenly spaced on a single label, making this label useful for a row of equally spaced switches, fuses or connectors on a patch panel. In addition, the text blocks can be printed in the order that they were typed in or in the opposite order.

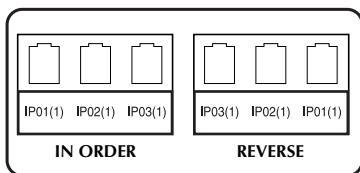


Port

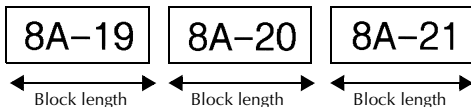

Panel1
(PRINT set to
IN ORDER)

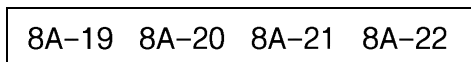

Panel1
(PRINT set
to REVERSE)

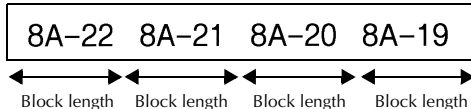


After selecting the **PORT** or **PANEL1** Label Type mode, specify the length of each text block or label, and select a frame style if desired. For the **PANEL1** Label Type mode, select whether the text blocks are printed in the order that they were typed in or in the reverse order.

- **BL. LEN.** (block length): * For the **PORT** Label Type mode:
20.0 to 200.0 mm
Default: 30.0 mm
* For the **PANEL1** Label Type mode:
6.0 to 200.0 mm
Default: 30.0 mm
- **FRAME:** * For the **PORT** Label Type mode:
OFF, 1 , 2 , 3 , 4
Default: **OFF**
* For the **PANEL1** Label Type mode:
OFF, 1 , 2 | | , 3 | | ,
4 , 5 , 6 ,
7 , 8 , 9
Default: **OFF**
- **PRINT** (print order): **IN ORDER, REVERSE**
Default: **IN ORDER**


- ☞ For these types of labels, we recommend using Strong Adhesive Tape.
- ☞ The **PRINT** parameter is only available with the **PANEL1** Label Type mode.
- ☞ By using the Numbering function with the **PANEL1** Label Type mode, a single label containing multiple blocks of ascending characters can easily be created, for example, to label patch panels as shown above. (For details on the Numbering function, refer to *Printing multiple copies with incremental characters* on page 33.)



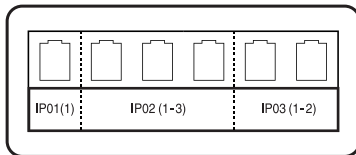


 


 
Panel2 Mode

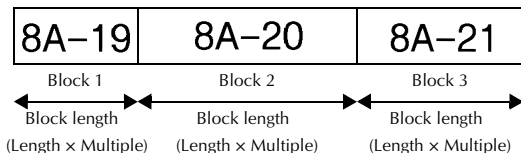Specifying a fixed length for each block makes this label useful for a row of switches (for example, in a switchboard) or a patch panel. In addition, the text blocks can be printed in the order that they were typed in or in the opposite order, or the text can be printed rotated 90°.



Panel2







- **BLOCK:** 1 to 50 blocks
Default: 1
- LENGTH:** 6.0 to 200.0 mm
Default: 17.5mm
- MULTIPLE:** x1 to x9
Default: 1
- **FRAME:** **OFF, 1** , **2** , **3** ,
4 , **5** , **6** ,
7 , **8** , **9** 
Default: **OFF**
- **PRINT:** **IN ORDER, REVERSE**
Default: **IN ORDER**
- **ROTATE:** **OFF, ON**
Default: **OFF**

- ☞ The number of blocks can be specified or changed only with the **BLOCK** parameter. Text blocks cannot be added or deleted in any other way.
- ☞ If the number of blocks specified in the **PANEL2** Label Type mode is less than the number of text blocks that have already been entered, entered text blocks are deleted. If the specified number of blocks is greater than the number of entered text blocks, text blocks are added.
- ☞ For these types of labels, we recommend using Strong Adhesive Tape.


3 Basic Functions

Performing Basic Operations

 
Choosing functions, parameters, settings and groups

- If “◀▶” appears, press  to select the previous item or  to select the next item.
- If “◀▶” appears, press  to select the previous item or  to select the next item.


Choosing the default setting

- To select the default setting of a function or parameter, press .

Confirming a choice

- To select an item from a list, to apply a selected setting, or to answer “yes”, press .




Cancelling a choice



- To quit a function and return to the previous display without changing the text, or to answer “no”, press .




Inputting Label Data


 
Entering and editing text

Entering characters

 
- To type a lowercase letter, a number, a comma or a period, simply press the key for that character.
- To type an uppercase letter, press  to enter Shift mode, and then press the applicable letter.
- To type uppercase letters continuously, press , then  to enter Caps mode, and then type.

 To exit Shift mode without typing a letter, press .

 To exit Caps mode, press , then .









 
 


 To type a lowercase letter in Caps mode, press , then the applicable letter.



 


Entering spaces

- To add a blank space to the text, press .


Moving the cursor

Move the cursor in order to review and edit the text, or you can select the various functions and settings.

- To move the cursor left, right, up or down, press , ,  or .
- To move the cursor to the beginning of the current line of text, press , then .
- To move the cursor to the end of the current line of text, press , then .
- To move the cursor to the beginning of the entered text, press , then .
- To move the cursor to the end of the entered text, press , then .

 To move the cursor several characters or lines at once, hold down , ,  or .

Adding a new line of text


 
- To end the current line of text and start a new one, press . “↵” appears at the end of the line.

The number of text lines that can be printed depends on the width of the tape.


Tape Width	Maximum Number of Lines That Can Be Printed
6 mm	2
9 mm	2
12 mm	3
18 mm	5
24 mm	7

The line number on the display indicates the line number of the text block.

Adding a new text block



- To create a new text block so that one section of the text can have a different number of lines than another, press , then . “↵” appears at the end of the block.

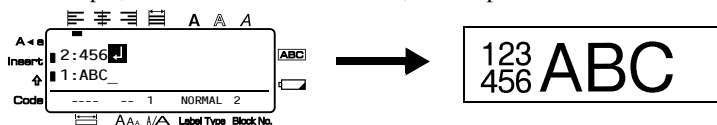For example, text entered as shown below, will be printed as follows.









- A single label can only contain a maximum of fifty text blocks.
- The number of the block that the cursor is in is indicated at the bottom of the display.
- All text blocks have the same formatting features.
- While trying to print a large amount of data at one time, some outputted labels may be blank. For example, when printing 50 records, the maximum number of characters that can be printed at one time is limited to approximately 200.

Inserting text

- To insert the text that you type at the cursor's current position, make sure that the **Insert** indicator is displayed. Otherwise, press  to enter **Insert** mode.
- To replace the text at the cursor's current position instead of inserting it, press  to exit **Insert** mode.

Deleting text




 
- To remove characters to the left of the cursor's current position, press  until all of the characters that you wish to delete are removed.
- To delete all of the text:
 - Press , then .
 - Press  or  to select either **TEXT ONLY** (to erase just the text) or **TEXT&FORMAT** (to erase all of the text and return all formatting functions to their default settings).
 - Press .

Entering an accented character


There are various accented characters available with the Accent function.



 
The following accented characters are available.

Character	Accented Characters	Character	Accented Characters
a	á à â ã ä å ã ä á ã ä	n	ñ ñ í ñ
A	Á Â Ã Ä Å Æ Æ Å Å Å Å	N	Ñ Ñ Ñ Ñ
c	ç ç é	o	ó ô õ ø ö õ œ ö
C	Ç Ç Ç	O	Ó Ô Õ Ø Ö Õ Œ Ö
d	d' ð ð	r	ř ř ř
D	Ď Ď	R	Ř Ř Ř
e	é è ê ë ě é é é	s	ś ś ś ś β
E	É È Ê Ë Ě Ě Ě Ě	S	Ś Ś Ś Ś β
g	ğ ğ	t	ť ť þ
G	Ğ Ğ	T	Ť Ť Þ
i	í î ï ï ï ï	u	ú û ü ü ü ü ü
I	Í Î Ï Ï Ï Ï	U	Ú Û Ü Ü Ü Ü Ü Ü
k	ķ	y	ý ŷ
K	Ķ	Y	Ý Ŷ
l	ł ł ł ł	z	ž ź ź
L	Ł Ł Ł Ł	Z	Ž Ž Ž

- Press , then . The message "ACCENT a-z/A-Z?" appears.
- Press the key corresponding with the desired accented character repeatedly, until the correct character is displayed.
- Add the accented character(s) to the text.
 - To add a single accented character or the last one in a series, skip to step **5**.
 - To add a series of accented characters to the text, press , then .

4 For each additional accented character, repeat steps 2 and 3.

5 Press .

To type in an uppercase accented character, press  (or press , then  to enter Caps mode) before pressing the letter key.

Entering a bar code

The **Bar Code** function allows bar codes to be printed as part of labels.


 




 
- Since this machine is not specifically designed for special bar code label-making, some bar code readers may not be able to read the labels.
- Bar code readers may not be able to read bar codes printed with certain ink colours on certain label tape colours. For best results, print bar code labels using black on white tape.

In addition, the various bar code parameters enable you to create more customized bar codes.

 
 
Parameter	Settings
PROTOCOL	CODE 39, I-2/5, EAN13, EAN8, UPC-A, UPC-E, CODABAR, EAN128, CODE128
WIDTH (bar width)	SMALL, MEDIUM, LARGE
UNDER# (numbers printed below bar code)	ON, OFF
CHECK DIGIT	OFF, ON






The **CHECK DIGIT** parameter is only available with the **CODE 39, I-2/5** and **CODABAR** protocols.


 


Setting bar code parameters

- 1 Press , then .
- 2 Press  or  until the parameter that you wish to change is displayed.
- 3 Press  or  until the desired setting is displayed.
- 4 Repeat steps 2 and 3 until all parameters are set as you wish.
- 5 Press .

Entering bar code data

- 1 Press .
- 2 Type in the new bar code data or edit the old data.
- 3 Press  to add the bar code to the text.

 To add special characters to the bar code data (only with protocols **CODE39**, **CODABAR**, **EAN128** or **CODE128**), position the cursor below the character immediately to the right of where you wish to add the special character, and then press . Press  or  until the desired control character is displayed, and then press  to add the character to the data. (Refer to the tables below for a list of the special characters that are available.)

 To change the data or **WIDTH** or **UNDER#** parameter settings of a bar code that has already been added to the text, position the cursor below the bar code mark (), and then press , then .

The following control characters can only be added to bar codes created using protocol **CODE39** or **CODABAR**.

CODE39

Symbol	Character	Symbol	Character
0	–	4	/
1	.	5	+
2	(SPACE)	6	%
3	\$		

CODABAR

Symbol	Character	Symbol	Character
0	–	3	/
1	\$	4	.
2	:	5	+





 
The following special characters can only be added to bar codes created using protocols **EAN128** and **CODE128**.


 
Symbol	Character	Symbol	Character	Symbol	Character
0	(SPACE)	10	★	20	>
1	!	11	+	21	?
2	"	12	/	22	@
3	#	13	-	23	[
4	\$	14	.	24	\
5	%	15	/	25]
6	&	16	:	26	^
7	'	17	;	27	_
8	(18	<		
9)	19	=		

Symbol	Control Character	Symbol	Control Character	Symbol	Control Character
28	NUL	42	CR	56	ESC
29	`	43	SO	57	{
30	SOH	44	SI	58	FS
31	STX	45	DLE	59	
32	ETX	46	DC1	60	GS
33	EOT	47	DC2	61	}
34	ENQ	48	DC3	62	RS
35	ACK	49	DC4	63	~
36	BEL	50	NAK	64	US
37	BS	51	SYN	65	DEL
38	HT	52	ETB	66	FNC3
39	LF	53	CAN	67	FNC2
40	VT	54	EM	68	FNC4
41	FF	55	SUB	69	FNC1

 
Entering a symbol


There are 164 symbols and pictures available with the Symbol function.

- 1 Press . The last category used is displayed.
- 2 Press  or  to select the desired category.
- 3 Press  or  until the desired symbol is selected.
- 4 Add the symbol(s) to the text.

- To add a single symbol or the last one in a series, skip to step 6.
- To add a series of symbols to the text, press , then .












 












 

 
 

 




 
 
 
 


 





 

































5 For each additional symbol, repeat steps 2 through 4.





6 Press .

A symbol can also be selected by typing in the corresponding code from the table below. For example, typing “A02”, then pressing  adds “?” to the text.

The following symbols are available.

Category	Symbols									
A PUNCTUATION	.	,	?	!	”	'	:	;	—	—
	00	01	02	03	04	05	06	07	08	09
	\	/	&	¿	¡	~	§	▪		
	10	11	12	13	14	15	16	17		
B BUSINESS	@	#	%	®	©	™				
	00	01	02	03	04	05				
C MATHEMATICS	+	-	×	*	±	=	÷			
	00	01	02	03	04	05	06			
D BRACKET	()	[]	<	>	《	》		
	00	01	02	03	04	05	06	07		
E ARROW	→	←	↑	↓	➔	➔	⬆	⬇	☞	☜
	00	01	02	03	04	05	06	07	08	09
F UNIT	°	\$	¥	£	€	¢	f	φ		
	00	01	02	03	04	05	06	07		
G INTERNATIONAL CHARACTERS	ā	ā	ß	Šš	ɑ	β	γ	δ	μ	Ω
	00	01	02	03	04	05	06	07	08	09
	Ð	ð	Þ	þ	ij					
	10	11	12	13	14					

Category		Symbols									
H	NUMBER	1/2	1/3	1/4	0	1	2	1	2		
		00	01	02	03	04	05	06	07		
I	PICTOGRAPH										
		00	01	02	03	04	05				
J	ELECTRICAL / ELECTRONIC										
		00	01	02	03	04	05	06	07	08	09
											
		10	11	12	13	14	15	16	17	18	19
											
		20	21	22	23	24	25	26	27	28	29
											
30	31	32	33	34	35	36	37	38	39		
											
40	41	42									
K	PROHIBITION										
		00	01	02							
L	WARNING										
		00	01	02	03	04	05	06			
M	COMMUNICATIONS										
		00	01	02	03	04	05				
N	AUDIO/VISUAL										
		00	01	02	03	04	05	06	07	08	09
											
10	11	12	13	14							



 


 

Category	Symbols			
O OTHERS				
	00	01	02	03
Z PERSONAL CATEGORY	*A maximum of 16 most recently selected symbols are automatically saved in the PERSONAL symbol category.			


Once the **PERSONAL** symbol category becomes full, newly selected symbols will overwrite older ones unless the Symbol Save function is set to **OFF**. (Refer to *Updating the PERSONAL symbol category* on page 41.)

Formatting the Label

Specifying a label length





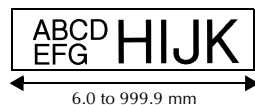
 
 
The length of the label can be specified as follows.

- 1 Press , then .
- 2 Press  or  until **LENGTH** is displayed.
- 3 Press  or  until the desired label length is displayed (or use the number keys to type in the desired setting).
- 4 Press .






 

Specifying a margin size

The size of the margins for the left and right sides of the text can be specified.















- 1 Press , then .
- 2 Press  or  until **MARGIN** is displayed.
- 3 Press  or  until the desired margin setting is displayed (or use the number keys to type in the desired margin setting).
- 4 Press .



Framing the text

- 1 Press , then .
- 2 Press  or  until the desired frame setting is displayed.
- 3 Press . The selected setting is applied to the entire text.

The following frame styles are available.


 
 

 

Frame Setting	Sample	Frame Setting	Sample
1		8	
2		9	
3		10	
4		11	
5		12	
6		13	
7		14	

Specifying the character size




 

The character size can be specified for all text in the label or only for the text in the line that the cursor is in.

- ☞ With the default character size setting **AUTO**, the largest possible text size is automatically selected depending on the width of the tape and the number of lines in the text.

Formatting the Global character size of all text

- 1 Press .
- 2 Press  or  until **G. SIZE** is displayed.
- 3 Press  or  until the desired character size setting is displayed.
- 4 Press . The selected setting is applied to the entire text.

Formatting the character size of a line

- 1 Move the cursor to the line of text whose size you wish to change.
- 2 Press , then .
- 3 Press  or  until the desired character size setting is displayed.
- 4 Press . The selected setting is only applied to the text line that the cursor is positioned in.


 
 

 

- ☞ Since the text sizes that can be printed depends on the width of the tape, the following table shows the maximum text size that can be used with each tape width.

Tape Width	Maximum Text Size
6 mm	12 points
9 mm	18 points
12 mm	24 points
18 mm	36 points
24 mm	48 points


 
 


 
 
- ☞ With the **AUTO** setting selected and the text in a block consisting of just one line of only uppercase letters (and no accented letters), the text is printed slightly larger than the maximum possible for the tape width.

Specifying the character width

Formatting the Global width of all text

- 1 Press .
- 2 Press  or  until **G. WIDTH** is displayed.
- 3 Press  or  until the desired character width setting is displayed.
- 4 Press . The selected setting is applied to the entire text.

Formatting the width of a line

- 1 Move the cursor to the line of text whose character width you wish to change.
- 2 Press , then .
- 3 Press  or  until **WIDTH** is displayed.
- 4 Press  or  until the desired character width setting is displayed.
- 5 Press . The selected setting is only applied to the text line that the cursor is positioned in.





 

The following width sizes are available for each text size as shown.

Width Size	NORMAL	NARROW	THIN	WIDE
48 points	ABC	ABC	ABC	ABC
36 points	ABC	ABC	ABC	ABC
24 points	ABC	ABC	ABC	ABC
18 points	ABC	ABC	ABC	ABC
12 points	ABC	ABC	ABC	ABC
9 points	ABC	ABC	ABC	ABC






Width Size	NORMAL	NARROW	THIN	WIDE
6 points	ABC	ABC	ABC	ABC

Specifying the character style

Formatting the Global character style of all text

- 1 Press .
- 2 Press  or  until **G. STYLE** is displayed.
- 3 Press  or  until the desired character style setting is displayed.
- 4 Press . The selected setting is applied to the entire text.



 

 

Formatting the character style of a line

- 1 Move the cursor to the line of text whose character style you wish to change.
- 2 Press , then .
- 3 Press  or  until the desired character style setting is displayed.
- 4 Press . The selected setting is only applied to the text line that the cursor is positioned in.

The following text styles are available.

Style Setting	Sample	Style Setting	Sample
NORMAL	ABC	ITALIC	<i>ABC</i>
BOLD	ABC	I+BOLD (italic & bold)	<i>ABC</i>
OUTLINE	ABC	I+OUTL (italic & outline)	<i>ABC</i>

Specifying the alignment for all lines in the text

- 1 Press .
- 2 Press  or  until **ALIGN** is displayed.
- 3 Press  or  until the desired setting is displayed.
- 4 Press . The selected setting is applied to the entire text.



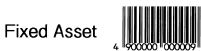

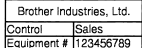
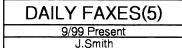
The following alignment settings are available.

ABC DEFGH IJKLM	ABC DEFGH IJKLM	ABC DEFGH IJKLM	A B C DEFGH IJKLM
LEFT	CENTRE	RIGHT	JUSTIFY

Using the pre-formatted Auto Format templates

Various pre-formatted label templates are available, enabling you to quickly and easily create labels for a variety of applications—from identifying the contents of boxes and file folders to labelling equipment and making name badges and ID tags. After simply selecting one of the ten label templates, type text into each of its fields, and then the label is ready to be printed.

The following label templates are available.

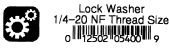Key	Template Name	Tape Width × Label Length	Template Fields	Sample
1	BIN BOX	18 mm × 69 mm	① SYMBOL? ② TEXT1? ③ TEXT2? ④ BAR CODE?	
2	ASSET1	24 mm × 83 mm	① TEXT1? ② TEXT2? ③ BAR CODE?	
3	ASSET2	24 mm × 79 mm	① TEXT? ② BAR CODE?	
4	ASSET3	24 mm × 41 mm	① TEXT? ② BAR CODE?	
5	ASSET4	24 mm × 55 mm	① TEXT1? ② TEXT2? ③ TEXT3? ④ TEXT4? ⑤ TEXT5?	
6	ID	24 mm × 69 mm	① TEXT1? ② TEXT2? ③ TEXT3?	

Key	Template Name	Tape Width × Label Length	Template Fields	Sample
	SIGN	24 mm × 101 mm	① SYMBOL? ② TEXT1? ③ TEXT2?	NO SMOKING
	N. BADGE	18 mm × 101 mm	① NAME? ② COMPANY?	Robert Becker ABC Transport
	FILING	12 mm × 88 mm	① TITLE? ② SUB-TITLE?	August Sales Report Overseas Sales Div.
	IC CHIP	9 mm × 25 mm	① TEXT1? ② TEXT2?	01294567 ver.1.01

- Press , then the number key where the template that you wish to use is assigned.
- Press . The first field for the selected template is displayed.
- Press or to display each field, and then type in the text.
- To print a single copy, press .
 - To print multiple copies, several copies while increasing certain characters, or a mirror image of the text, press , then . (For details, refer to *Using special printing functions* on page 32.)

☞ Accented characters (page 19), symbols (page 22) and bar codes (page 20) can be entered in the template fields.

☞ To quit using the template, display the last field, and then press . The Auto Format menu appears. Press or until **FINISH** appears, and then press .

Printing Labels

Previewing the label layout

The **Preview** function allows you to see a sample of the layout of the text.




- To use the print preview, press , then . The length of the current label is indicated in the lower-left corner of the display.

☞ To scroll the print preview left or right, press or .


☞ To return to the text, press or .

 

Feeding tape

 

 
- To feed out 23 mm of tape, press . The message “FEED” is displayed.

 Press  to feed out any leftover printed tape after pressing  to quit printing.

Printing a label

- To print out a label, press . The message “WORKING”, then “COPIES” followed by the number of the label being printed is displayed.

 To quit printing, press .







 



 When setting **3** (cut pause; chain printing) or **4** (no cut pause; chain printing) is selected in the Cut function (page 39), “OK TO FEED?” will appear. Press  to feed. Or press  to return to the entering text mode.


Using special printing functions




Various special printing functions are available that enable you to print multiple copies of labels, print several copies while incrementing the values of certain characters, print specific sections of label text, or print label text as a mirror image.

Printing multiple copies of a label

The Repeat Printing function allows you to print up to 99 copies of the same text.

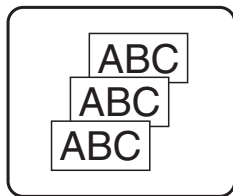
- 1 Press , then .
- 2 Press  or  until **COPIES** is displayed.
- 3 Press  or  until the desired number of copies is displayed (or use the number keys to type in the desired setting).
- 4 Press  (or ). **CONFIRM** appears in the Print Option menu.
- 5 Press  (or ) to begin printing the specified number of copies. The number of each copy is displayed while it is being printed.




 

 



 
 
 



 
 

 


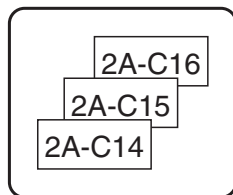



- ☞ If the Cut function is set to **1** or **3**, the message “CUT TAPE TO CONTINUE” appears after each label is printed. Press the tape cutter button to cut off the label and continue printing.
- ☞ Be sure to cut the tape within 5 minutes from the time that the message appears.
- ☞ For the different options available for cutting the tape, refer to *Selecting how tape is fed and cut* on page 39.
- ☞ To specify settings for additional Print Option functions, instead of continuing with step **5**, press  or  until **CONTINUE** is displayed in the Print Option menu, and then press .

Printing multiple copies with incremental characters

The Numbering function can be used to print several copies of the same text while incrementing the values of certain characters (letters, numbers or bar code data) after each label is printed. This type of automatic incrementation is very useful when printing serial number labels, production control labels or other labels requiring ascending codes.










- 1** Press , then .
- 2** Press  or  until **NUMBER** is displayed.
- 3** Press  or  until the desired number of copies is displayed (or use the number keys to type in the desired setting).
- 4** Press . The message “START?” appears. (To specify only the character at the cursor’s current position as the numbering field, press , and then skip to step **9**.)
- 5** Press , ,  or  until the first character that you wish to include in the numbering field is flashing.
- 6** Press . The message “END?” appears.
- 7** Press , ,  or  until the last character that you wish to include in the numbering field is flashing.
- 8** Press . **CONFIRM** appears in the Print Option menu.
- 9** Press  (or ) to begin printing the specified number of labels. The number of each copy is displayed while it is being printed.




 



- ☞ If the Cut function is set to **1** or **3**, the message “CUT TAPE TO CONTINUE” appears after each label is printed. Press the tape cutter button to cut off the label and continue printing.
- ☞ Be sure to cut the tape within 5 minutes from the time that the message appears.
- ☞ For the different options available for cutting the tape, refer to *Selecting how tape is fed and cut* on page 39.
- ☞ Letters and numbers increase as shown below.
 - 0 → 1 → ...9 → 0 → ...
 - A → B → ...Z → A → ...
 - a → b → ...z → a → ...
 - A0 → A1 → ...A9 → B0 → ...
 Spaces (shown as underlines “_” in the examples below) can be used to adjust the space between characters or to control the number of digits that are printed.
 - _Z → AA → ...ZZ → AA → ...
 - _9 → 10 → ...99 → 00 → ...
 - 1_9 → 2_0 → ...9_9 → 0_0 → ...
- ☞ Only one numbering field can be selected from any text.
- ☞ A numbering field must be located entirely within one line of text of a single block.
- ☞ A maximum of five characters can be selected for the numbering field.
- ☞ If you include a non-alphanumeric character such as a symbol in the numbering field, only the letters and numbers in the numbering field will be increased when the labels are printed, or just one label will be printed if the field only contains a non-alphanumeric character.
- ☞ To specify settings for additional Print Option functions, instead of continuing with step 9, press  or  until **CONTINUE** is displayed in the Print Option menu, and then press .
- ☞ If a bar code is selected as the numbering field in step 5, skip steps 6 and 7, and continue with step 8.

Printing a range of text blocks

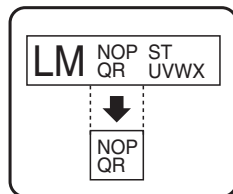The Block Printing function enables you to select the range of text blocks to print.

- 1 Press , then .
- 2 Press  or  until the first number in the range displayed below **BLOCK NO.** is flashing.
- 3 Press  or  until the desired block number is displayed (or use the number keys to type in the desired setting).












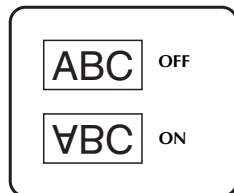

- 4 Press  so that the second number in the range displayed below **BLOCK NO.** is flashing.
- 5 Press  or  until the desired block number is displayed (or use the number keys to type in the desired setting).
- 6 Press  (or ). **CONFIRM** appears in the Print Option menu.
- 7 Press  (or ) to begin printing the specified number of labels. The number of each copy is displayed while it is being printed.


 To specify settings for additional Print Option functions, instead of continuing with step 7, press  or  until **CONTINUE** is displayed in the Print Option menu, and then press .





Printing mirrored labels

This function prints your label so that the text can be read from the adhesive side of the tape. If mirror-printed labels are attached to glass or some other transparent material, they can be read correctly from the opposite side.




- 1 Press , then .
- 2 Press  or  until **MIRROR** is displayed.
- 3 Press  or  until **ON** is displayed.
- 4 Press  (or ). **CONFIRM** appears in the Print Option menu.
- 5 Press  (or ) to begin printing the specified number of labels. The number of each copy is displayed while it is being printed.

 When using the Mirror Printing function, the text should be printed on clear tape.

 To specify settings for additional Print Option functions, instead of continuing with step 5, press  or  until **CONTINUE** is displayed in the Print Option menu, and then press .

Combining special printing functions

Many of the special printing functions can be combined, depending on various conditions, such as which Label Type mode is selected or whether a template is being used. For example, by combining the operations for the Repeat Printing function and the Numbering function to print two copies of a label with “1” selected as the numbering field and three increments, the labels shown above will be printed.

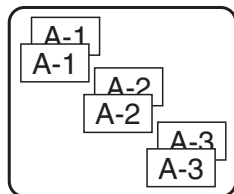








For details on the various special printing functions, refer to the corresponding section above.



Storing and Recalling Files

Frequently used label text along with its formatting can be stored in the memory and easily recalled so that it can be edited and quickly printed. When each text file is stored, it is given a number to make recalling it easier. Up to 10 text files or approximately 2,000 characters can be stored in the memory.








Since a copy of the stored text file is recalled when the Recall function is used, the text can be edited or printed without changing the originally stored file. When a file is no longer needed or more space is necessary, the Clear function can be used to delete text files.



Storing label text

- 1 Press .
- 2 Press  or  until **STORE** is displayed.
- 3 Press .
- 4 Press  or  until the file number where you wish to store the text is displayed.
- 5 Press .







 
 


- ☞ If the maximum number of characters has already been stored, the error message “MEMORY FULL!” appears in the display. If this occurs, an existing text file must be deleted before the new one can be stored.
- ☞ If a file is already stored under the selected file number, the message “OVERWRITE?” appears in the display. To overwrite the stored file with the new one, press . To go back and choose another file number without overwriting the text file, press , and then select a different file number.



Recalling text that has been stored








 
- 1 Press .
- 2 Press  or  until **RECALL** is displayed.
- 3 Press .
- 4 Press  or  until the file number containing the text that you wish to recall is displayed.
- 5 Press . Any text previously entered in the display is erased and the text stored under the selected file number is recalled into the display.

- ☞ To view other parts of the selected text file, press  or .

Deleting text that has been stored

- 1 Press .
- 2 Press  or  until **CLEAR** is displayed.
- 3 Press .
- 4 Press  or  until the file number containing the text that you wish to delete is displayed.
- 5 Select the file(s) to be deleted.
 - To delete a single file, skip to step 6.
 - To select multiple files, press . The current file number is highlighted. Continue selecting text files by repeating step 4, then pressing  until all files that you wish to delete are selected.
 - To delete all files, press , then .

- 6 Press . The message “OK TO CLEAR?” (or “CLEAR ALL?” if all files were selected) appears.
- 7 Press . The text stored in the selected files is deleted.

-  If you do not wish to delete the selected text file(s), press  instead of  in step 7.
-  To view other parts of the selected text file, press  or .
-  To remove a text file from those that are to be deleted, display the text file, and then press  so that the file number is no longer highlighted.


4 Machine Adjustments

Various functions are available for changing and adjusting the operation of the P-touch.





Selecting how tape is fed and cut


 



 
 
The **Cut** function enables you to specify how the tape is fed out after it is printed. The settings of the Cut function consist of combinations of two different cut methods:

 
 
cut-pause (where the machine stops printing so the label can be cut) and chain printing (where the last copy is not fed out to be cut, reducing the amount of tape that is wasted).

Chain printing is an economical function designed to help eliminate “wasted tape” at the beginning of labels. Without chain printing, the excess from the previous printing session is cut before the first label in the current session is printed. However, if a setting using chain printing is selected, the last label in the previous session remains in the machine (is not fed out), so that the next label can be printed without wasting tape. When the last label is printed, press  to feed the chain of labels, and then press the tape cutter button to cut it.

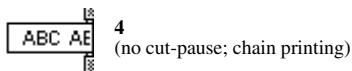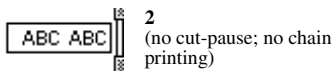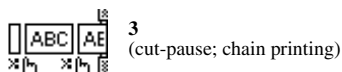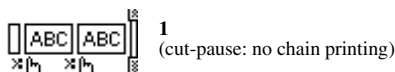The following settings are available: (The default setting is **1**.)


 




 


- 1** Press , then .
- 2** Press  or  until **CUT** is displayed.
- 3** Press  or  until the desired setting is displayed, and then press .

After printing with the **Cut** function set to **3** or **4**, “OK TO FEED?” will appear. Press  to feed. Press  to return the entering text mode.


 




 
Adjusting the display contrast

The display can be made lighter or darker by selecting a setting between **-2** and **+2**. (The default setting is **0**.) Select a higher value to increase the contrast (make the display darker). Select a lower value to decrease the contrast (make the display lighter).

- 1 Press , then .
- 2 Press  or  until **CONTRAST** is displayed.
- 3 Press  or  until the desired setting is displayed, and then press .

Using the Auto Reduction function

With the Auto Reduction function, you can select whether the text width (**TEXT WIDTH**) or the text size (**TEXT SIZE**) will be reduced if text that is set to the **AUTO** Size setting is too large for the specified label length. (The default setting is **TEXT SIZE**.)

- 1 Press , then .
- 2 Press  or  until **AUTO REDUCTION** is displayed.
- 3 Press  or  until the desired setting is displayed, and then press .

If **TEXT SIZE** is selected and more text is added, the character size is reduced so the text fits within the specified label length.




 

 


 
If **TEXT WIDTH** is selected and more text is added, the character width is reduced so the text fits within the specified label length.

However, after the character width is reduced to **THIN**, the character size will be reduced so the text fits within the specified label length.




 




 
Calibrating the label length

If the length of the printed label does not correspond to the length specified with the Length function, the printed label length can be recalibrated with the Length Adjust function by selecting a setting between **-5** and **+5**. (The default setting is **0**.)

- 1 Press , then .
- 2 Press  or  until **LENGTH ADJUST** is displayed.
- 3 Press  or  until the desired setting is displayed, and then press .


 





Updating the PERSONAL symbol category

You can specify whether symbols continue to be added to the **PERSONAL** symbol category (with the older symbols deleted) when the category becomes full (**ON**) or symbols are no longer added after the **PERSONAL** symbol category becomes full (**OFF**). (The default setting is **ON**.)

- 1 Press , then .
- 2 Press  or  until **SYMBOL UPDATE** is displayed.
- 3 Press  or  until the desired setting is displayed, and then press .


 




 
Changing the units of measure

The units used for displaying measurements can be set to millimeters (**mm**) or inches (**inch**). (The default setting is **mm**.)

- 1 Press , then .
- 2 Press  or  until **UNITS** is displayed.
- 3 Press  or  until the desired setting is displayed, and then press .

Displaying version information


This function can be used to display the version information for the P-touch software and built-in symbol set.

- 1 Press , then .
- 2 Press  or  until **VERSION INFO** is displayed.
- 3 Press  or  until the desired version information is displayed.
- 4 Press  to exit Setup mode.

Cleaning


Occasionally, certain parts of the P-touch may need to be cleaned. Dust or dirt may become attached to the P-touch's print head and rollers, particularly when the unit is used outdoors or in a very dusty environment. With use, the tape cutter may become covered with adhesive, making it difficult to cut the tape.

Cleaning the print head, rollers and tape cutter

- ⓘ Before cleaning the print head, rollers and tape cutter, press  to turn off the P-touch, and then remove the battery and disconnect the AC adapter.

WARNING

- Do not touch the print head directly with your bare hands. The print head may be hot.
- Do not touch the cutter blade directly with your bare hands.

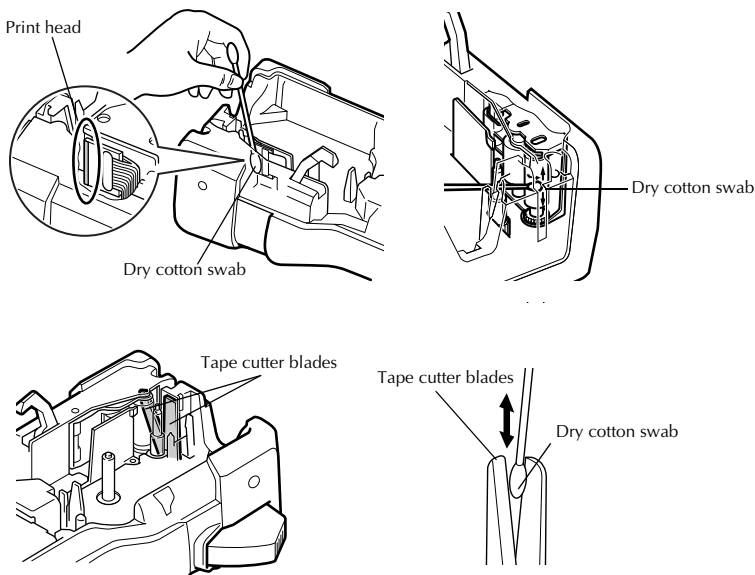

Notes on cleaning the print head & rollers

- ☞ If a blank horizontal streak appears through the label text, clean the machine's print head.
- ☞ The print head can be cleaned more easily if the optional print head cleaning cassette (TZ-CL4) is used.






Notes on cleaning the tape cutter


- ☞ If the tape cannot be cut correctly, clean the tape cutter blades.

5 Appendix

Resetting the P-touch


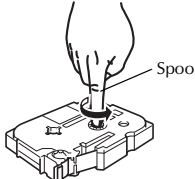
You can reset the internal memory of your P-touch when you want to clear all saved label files, or in the event the P-touch is not working properly.

- 1 Turn off the machine and then while holding down  and , press  to turn the machine back on.
- 2 Release  and .
The P-touch turns on with the internal memory reset.

- ⓘ Release  before releasing the other keys.
- ⓘ All text, format settings, option settings and stored label files are cleared when you reset the P-touch. Language and unit settings will also be cleared.



 
 

Troubleshooting




Problem	Cause	Solution
The screen 'locks', or the P-touch does not respond properly.		Refer to <i>Resetting the P-touch</i> on page 44 and reset the internal memory to the initial settings. If resetting the P-touch does not solve the problem, disconnect the AC adapter and remove the battery for more than 10 minutes.
The display remains blank after turning on the power.	Is the AC adapter connected correctly?	Check that the AC adapter designed exclusively for your P-touch is connected correctly.
	Are you using the correct AC adapter?	Make sure that you are using the AC adapter designed exclusively for your P-touch.
	Is the battery fitted correctly?	Remove and re-install the battery.

Problem	Cause	Solution
The label is not printed after pressing .	Has text been entered?	A label will not be printed if there is no text entered.
	Is the tape cassette installed correctly, and is there enough tape remaining?	Check that the tape cassette is installed correctly, and that there is enough tape remaining.
	Is the end of the tape bent?	If bent, cut the bent section of tape with scissors and thread the tape through the tape exit slot correctly.
	Is the tape jammed?	If jammed, remove the tape cassette, carefully pull out the jammed tape, and then cut the tape with scissors. Check that the end of the tape passes through the tape guide, and reinstall the tape cassette.
	Is the tape compartment cover open?	If so, close the tape compartment cover correctly.
The LCD messages are displayed in a foreign language.	Is the language set properly?	Refer to <i>Changing the Language</i> on page 9 and select the desired language for the LCD messages.
The label is not printed correctly.	Is the tape cassette installed correctly?	When installing a cassette, press firmly until it clicks into place.
	Is the print head clean?	If not, clean the print head using a cotton swab or optional print head cleaning cassette (TZ-CL4).
The ink ribbon is separated from the ink roller.	Is the ink ribbon in the tape cassette loose, or did you pull on the label coming out of the tape exit slot?	<p>If the ink ribbon is broken replace the tape cassette. If not, leave the tape uncut and remove the tape cassette, then wind the loose ink ribbon onto the spool as shown in the figure.</p> 
The P-touch stops while printing a label.	Is there enough tape remaining in the tape cassette?	The striped tape indicates you have reached the end of the tape. Replace the tape cassette when the striped tape appears.
	Are the batteries weak and is the AC adapter disconnected?	Replace all batteries or connect the AC adapter directly to the P-touch.


Problem	Cause	Solution
Label files saved previously are now empty.	Have the batteries and AC adapter been disconnected?	All files stored in the internal memory are lost if the batteries and AC adapter are disconnected for longer than two minutes.
	Is there enough power remaining in the batteries?	All data stored in the internal memory is lost if the batteries become empty or the AC adapter is disconnected.
	Have you used the Reset function?	The resetting function clears all data stored in the internal memory, including label files.






Error Message List

Error Message	Cause	Solution
1 BLOCK LIMIT!	<ul style="list-style-type: none"> This message appears if you try to use the Numbering function when multiple blocks of text have been entered with the PANEL1 Label Type mode selected. 	<ul style="list-style-type: none"> Cancel the Numbering function. Limit the number of text blocks to 1.
CHECK # OF DIGITS ENTERED!	<ul style="list-style-type: none"> This message appears if less than the minimum one digit are entered as the bar code data. 	<ul style="list-style-type: none"> Enter a minimum of one digit before pressing .
	<ul style="list-style-type: none"> This message appears if the required number of digits are not entered in the bar code data. 	<ul style="list-style-type: none"> Input the correct number of digits or change the bar code protocol.
50 LINE LIMIT REACHED!	<ul style="list-style-type: none"> This message appears if 50 lines have already been entered when you press , then . 	<ul style="list-style-type: none"> Limit the number of lines to 50.
7 LINE LIMIT!	<ul style="list-style-type: none"> This message appears if 7 lines have already been entered in a text block when you press . 	<ul style="list-style-type: none"> Limit the number of lines in a text block to 7.
	<ul style="list-style-type: none"> This message appears if you delete , causing the number of lines in a block to exceed the 7-line limit. 	<ul style="list-style-type: none"> Adjust the number of lines so that the block will not have more than 7 lines.

Error Message	Cause	Solution
BUFFER EMPTY!	<ul style="list-style-type: none"> This message appears if no text has been typed in when you try to print or Preview function. 	<ul style="list-style-type: none"> Type in some text before trying to perform any of these operations.
BUFFER FULL!	<ul style="list-style-type: none"> This message appears if you try to add a character, a space, a new line, a new block, a symbol, an accented character or a bar code after the maximum number of characters has already been entered. 	<ul style="list-style-type: none"> Delete some existing text before trying to add any more.
TAPE CASSETTE CHANGED!	<ul style="list-style-type: none"> This message appears if the tape cassette was changed while the P-touch paused for the tape to be cut. 	<ul style="list-style-type: none"> Change the tape cassette back again.
CHECK BATTERIES!	<ul style="list-style-type: none"> This message appears if a combination of new and used batteries, a combination of batteries of different types (alkaline and Ni-MH), manufacturers or models have been installed. 	<ul style="list-style-type: none"> Replace the batteries with six new AA batteries of the same type.
CHECK SETTING IN LABEL TYPE MODE!	<ul style="list-style-type: none"> This message appears if you try to change the settings for the Length function or Frame function after a Label Type mode with a preset label length or frame has already been selected. 	<ul style="list-style-type: none"> Select a different Label Type mode.
CUTTER ERROR!	<ul style="list-style-type: none"> This message appears if the tape cutter button was pressed when  was pressed or the tape was being fed. 	<ul style="list-style-type: none"> Release the tape cutter button. If  was pressed, press  to feed out any printed tape. If the problem cannot be corrected, contact your service representative.
EXCEEDS PRINT COPY LIMIT!	<ul style="list-style-type: none"> This message appears if more than 1000 copies were selected with the Print Option functions. Note the number of copies plus the number of sequential labels cannot exceed 1000. 	<ul style="list-style-type: none"> Select less than 1000 copies.

Error Message	Cause	Solution
IMAGE CHARACTER SIZE ERROR!	<ul style="list-style-type: none"> This message appears if a wide user-defined character image is entered when the Vertical Label Type mode is selected. 	<ul style="list-style-type: none"> Change the Label Type mode or use a tall user-defined character image.
INPUT ABCD AT BEGIN & END!	<ul style="list-style-type: none"> This message appears if a letter between A and D has not been entered at the beginning and end of the bar code data when the CODABAR protocol is selected. 	<ul style="list-style-type: none"> Enter a letter between A and D at the beginning and end of the bar code data.
LENGTH LIMIT!	<ul style="list-style-type: none"> This message appears if you try to print or use the Preview function when the length of the text is greater than the 1 m limit. 	<ul style="list-style-type: none"> Delete some of the text.
<p>On 18 mm tape: LINE LIMIT! 5 LINES MAXIMUM</p> <p>On 12 mm tape: LINE LIMIT! 3 LINES MAXIMUM</p> <p>On 9 mm and 6 mm tape: LINE LIMIT! 2 LINES MAXIMUM</p>	<ul style="list-style-type: none"> This message appears if you try to print or use the Preview function when the number of lines in the text is greater than the maximum possible for the installed tape. 	<ul style="list-style-type: none"> Reduce the number of lines or install a wider tape.
MEMORY FULL!	<ul style="list-style-type: none"> This message appears if you try to store a text file after approximately 2000 characters have already been stored in the memory. 	<ul style="list-style-type: none"> Delete an unwanted file to make space for the new one.
NO FILES!	<ul style="list-style-type: none"> This message appears if no files are stored in the memory when you try to recall or delete one. 	<ul style="list-style-type: none"> Store a text file before trying to recall or delete one.
SET 24mm!	<ul style="list-style-type: none"> This message appears if a 24-mm-wide tape cassette is not installed when printing an Auto Format template created for 24-mm-wide tape. 	<ul style="list-style-type: none"> Install a 24-mm-wide tape cassette.

Error Message	Cause	Solution
SET 18mm!	<ul style="list-style-type: none"> This message appears if a 18-mm-wide tape cassette is not installed when printing an Auto Format template created for 18-mm-wide tape. 	<ul style="list-style-type: none"> Install a 18-mm-wide tape cassette.
SET 12mm!	<ul style="list-style-type: none"> This message appears if a 12-mm-wide tape cassette is not installed when printing an Auto Format template created for 12-mm-wide tape. 	<ul style="list-style-type: none"> Install a 12-mm-wide tape cassette.
SET 9mm!	<ul style="list-style-type: none"> This message appears if a 9-mm-wide tape cassette is not installed when printing an Auto Format template created for 9-mm-wide tape. 	<ul style="list-style-type: none"> Install a 9-mm-wide tape cassette.
SET 6mm!	<ul style="list-style-type: none"> This message appears if a 6-mm-wide tape cassette is not installed when printing an Auto Format template created for 6-mm-wide tape. 	<ul style="list-style-type: none"> Install a 6-mm-wide tape cassette.
INSERT TAPE CASSETTE!	<ul style="list-style-type: none"> This message appears if no tape cassette is installed when you try to feed the tape, print or use the Preview function. 	<ul style="list-style-type: none"> Install a tape cassette and try again.
TEXT TOO HIGH! XX BLOCK	<ul style="list-style-type: none"> This message appears if the size of the text is larger than the width of the installed tape. 	<ul style="list-style-type: none"> Reduce the size of the characters, install a tape with a greater width, or select the AUTO text size setting.
TEXT TOO LONG!	<ul style="list-style-type: none"> This message appears if the length of the text is longer than the label length that has been set with the Length function. 	<ul style="list-style-type: none"> Press , and then select a longer label length.
TEXT TOO LONG! XX BLOCK	<ul style="list-style-type: none"> This message appears if you try to print a label that is longer than the specified block length. 	<ul style="list-style-type: none"> Select a longer block length.

Error Message	Cause	Solution
<p style="text-align: center;">VALUE OUT OF RANGE!</p>	<ul style="list-style-type: none"> This message appears if the value entered while setting the Margin, Length, and Block Length function is not within the allowable range. This message appears if the specified characters cannot be found in the database. This message appears if the values for the blocks, records or fields to be printed is not within the allowable range. 	<ul style="list-style-type: none"> Type in a value that is within the allowable range.
<p style="text-align: center;">BAR CODE TOO LONG!</p>	<ul style="list-style-type: none"> The message appears if the length of the bar code is longer than 22 cm when pressing . 	<ul style="list-style-type: none"> Reduce the width of the bar code.
<p style="text-align: center;">OK TO REDUCE THE BLOCK NO.?</p>	<ul style="list-style-type: none"> The message appears if you select the PANEL2 Label Type mode, and when the number of the desired blocks is less than that of the text mode, the number is reduced. 	<ul style="list-style-type: none"> Press  to reduce. Press  to set the same or the more numbers of the blocks.
<p style="text-align: center;">BLOCK NO. CHANGE CLEAR TEXT?</p>	<ul style="list-style-type: none"> The message appears when changing from a different Label Type mode to the PANEL2 Label Type mode and the current block number is different from the previously used block number. 	<ul style="list-style-type: none"> Press  to use the PANEL2 Label Type mode. All text is cleared. Press  to select a different Label Type mode.

Machine Specifications

Main Unit

Item	Specification
Input Device	Keyboard (56 key)

Display

LCD	16 characters x 2 lines (132 dot x 48 dot) * Line indicator and 15 characters = 16 characters
LCD Contrast	5 levels (+2, +1, 0, -1, -2)
Back light	Yes

Printing

Print method	Thermal printer
Print head	128 dot / 180 dpi
Print height	18.1 mm max. (when using 24 mm tape)
Print speed	10 mm / sec.
Tape cassette	Standard TZ tape cassette (6, 9, 12, 18, 24 mm widths)
Tape cutter	Manual
No. of lines	24 mm tape: 1 - 7 lines; 18 mm tape: 1 - 5 lines; 12 mm tape: 1 - 3 lines; 9 mm tape: 1 - 2 lines; 6 mm tape: 1 - 2 lines
Print direction	Horizontal, Vertical
Continuous printing	1 ~ 99 labels
Numbering printing	1 ~ 99 labels
Print preview	Yes

Characters


Internal character set	Total of 373 characters (62 alphanumeric, 164 symbols, 147 accented characters.)
Text buffer	Maximum 512 characters.
Fonts	Helsinki
Character size	Auto, 48 pt, 36 pt, 24 pt, 18 pt, 12 pt, 9 pt, 6 pt
Character style	Normal, Bold, Outline, Italic, Italic Bold, Italic Outline
Character width	Normal, Narrow, Thin, Wide
Text alignment	Left, Centre, Right, Justify

Item	Specification
Memory	
Memory size	Maximum 2000 characters
Other Features	
Frame	15 frame patterns
Auto-Format	Templates: 10
Label Type	Normal, Vertical, Rotate, Rotate & Repeat, Port, Panel1, Panel2, Flag
Power Supply	
Power supply	AC adapter (AD-18ES) Six AA-size alkaline batteries (LR6)
Auto Power-off	5 minutes
Size	
Dimensions	134 mm (W) x 235 mm (D) x 78 mm (H)
Weight	635 g (without tape cassette and battery)
Other	
Operating temperature / humidity	10 ~ 35°C / 20 ~ 80% humidity (without condensation)

Accessories

● Supplies

Obtain tape cassettes from your nearest authorised dealer.

Use only Brother TZ tapes with this machine. **Brother cannot be held responsible for any problems caused by the use of unauthorised supplies.** Do not use tapes that do not have the  mark. Tape supply may differ by country.

Index

- A**
- AC adapter 4
 - Accent function 19
 - alignment 30
 - arrow keys 3, 16, 17
 - Auto Format function 30
 - Auto Reduction function 40
- B**
- backspace key 3, 16, 19
 - bar code
 - special characters 21
 - Bar Code function 20
 - block number 3
 - block range 34
 - bold text style 29
 - indicator 3
- C**
- cancelling 16
 - Caps indicator 3
 - Caps mode 17
 - centre text alignment 30
 - indicator 3
 - chain printing 39
 - character
 - size 27
 - style 29
 - width 28
 - choosing 16
 - default setting 16
 - cleaning
 - print head 42
 - rollers 42
 - tape cutter 42
 - Clear function 19
 - Code indicator 3
 - confirming 16
 - Contrast function 39
 - copies 32
 - cursor 17
 - Cut function 39
 - cut-pause 39
- D**
- default setting 16
 - deleting
 - memory files 37
 - text 19
 - display 3
 - contrast 39
- E**
- error messages 46
- F**
- Feed key 3, 32
 - Flag mode 12
 - flexible ID tape 8
 - Format key 27, 28, 29
 - formatting 27, 28, 29
 - Frame function 26
 - frame indicator 3
- G**
- global format key 3
 - global formatting
 - character size 27
 - character style 29
 - character width 28
- I**
- indicators 3
 - block number 3
 - bold text style 3
 - Caps 3

centre text alignment	3
Code	3
frame	3
Insert	3
italic text style	3
justified text alignment	3
Label Type setting.....	3
left text alignment.....	3
length	3
low battery	3
outline text style	3
right text alignment.....	3
Shift.....	3
size.....	3
width.....	3
Insert indicator	3
Insert key.....	18
italic text style	29
indicator	3

J	
justified text alignment	30
indicator	3

K	
keyboard	3

L	
label margins.....	25
Label Type key	3
Label Type mode.....	10
Label Type setting indicator.....	3
LCD screen	3
left text alignment.....	30
indicator	3
length adjustment.....	40
Length function	25
length indicator	3
local formatting	
character size	27
character style	29
character width	28

low battery indicator	3
lowercase letters.....	17

M	
Margin function.....	25
Memory key	36
mirror printing.....	35

N	
New Block function	18
Normal mode.....	10
Numbering function	33
numbers	17

O	
outline text style	29
indicator	3

P	
Panel1 mode	13
Panel2 mode	14
PERSONAL symbol category	25
setup	41
PF keys.....	3
Port Block mode.....	13
Port mode	13
power key	3, 9
preview	31
print head.....	42
Print key.....	3, 32
printing	
text block range.....	34
problems.....	44

R	
recalling	37
Repeat Printing function	32
return key.....	3, 16, 18
right text alignment	30
indicator	3
rollers.....	42
Rotate & Repeat mode.....	11

Rotate mode 11

S

selecting 16, 17
 default setting 16
Setup key 39
Shift indicator 3
Shift mode 17
size 27
 indicator 3
Space key 16, 17
storing 36
Strong Adhesive Tape 7
style 29
Symbol key 22

T

tape
 cutter 42
templates
 Auto Format 30
text
 alignment 30
 size 27
 size adjustment 40
 style 29
 width 28
 width adjustment 40
troubleshooting 44

U

uppercase letters 17

V

version 41
Vertical mode 10

W

width 28
 indicator 3

brother®

Printed in China
LW7415001

