

Remo Audio2

## User Manual







**Contents page**

Safety Warning.....3  
Function and Operation.....4  
Frequently Asked Questions.....4  
Specification.....5  
Warranty.....6  
Installation .....7  
Serial Number.....2






## **Safety Warning**

- Thank you for using our Remo Bluetooth sound furniture!
- Before using this unit please read the manual.
- We might improve our product due to technology update, and this user manual will be updated accordingly, we will not notice again.
- The apparatus shall be used in moderate climates only.
- Do not use in the humid or under water environment
- Do not place the apparatus in direct sunlight or heat, keep away from temperatures over 35°
- This apparatus shall be placed on stable state.
- Never try to repair this product by yourself, take it to an authorized technician, otherwise you will lose warranty right
- Trying to remove panels or repairing the unit by yourself could result in an electric shock.

## Functions and Operation

Number	Icon	Function
1		To turn on/off the unit ; to play/stop
2		To decrease the volume.
3		To increase the volume.
4		Touch to takes you back to the previous track or hold to fast rewind through the current track.
5		Touch to take you to the next track, or hold to fast forward through the current track.
6		This USB port can charge your device with the USB cable, can not support the audio input function, output power is 1A

### Basic operation

- 1.when power on,  power button red light will be on;
- 2.to touch  power button for 2 seconds, the other buttons white lights will be on, and power button red light will be twinkling, indicate to enter searching Bluetooth signal state;
- 3.the Remo Bluetooth device name is eMoMo, cord is 0000, paring with the Bluetooth device, the  power button red light will be off, and the white light will be on, will have a “du” signal sound, indicate the Bluetooth paring is succeed;
- 4.touch the  slightly to play or stop the audio file;
- 5.to touch  power button for 2 seconds again to turn off the unit.

## Frequently Asked Questions

Problem	Possible cause and correction or maintenance
No power or does not turn on	AC adapter isn't plugged into a working socket or not plugged into the power supply jack properly at the back of the unit. If the unit still can not work, please replace the unit. Or please open the unit and check if anything wrong on PCB. Or please check the power adapter working or not.
No sound at all	The volume switch is on minimum, the unit isn't set to the correct function. Or the speaker cables are not connected well with main machine. If the speaker units are bad, please replace speaker units
The Unit doesn't respond	Please disconnect the power and try again. iPod/iPhone is not docked correctly.
Bluetooth can not pair	The Bluetooth can pair only one device once, if need to pair with another device, need to turn off the previous device' s Bluetooth and reboot the player. Please wait more seconds or restart the machine. Don't pair the devices behind a wall or in corner. Please keep the working space within 8 meters. Pair the device which named with eMoMo, and password is 0000.

## Specification


Input	100V~240V
Output	12V 2A
Rated Power	25W
Frequency Response	40-22 kHz
Signal-to-Noise Ratio	>65 db
Bluetooth Edition	2.0

## Warranty

- » This limited warranty does not restrict your statutory rights in any way.
- » The warranty period is 1 year from the date of purchase.
- » You can certify your purchase date either by the original Invoice/Receipt, or by the registration code.
- » For Product Registration, please visit us at [www.emomotech.com](http://www.emomotech.com)
- » Product serial Number is on page 2.
- » The warranty is limited to the repair of the faulty audio device. The warranty does not cover any transport or other direct/indirect costs or any risks associated with removing/dismounting, transporting, and installing the products.
- » It does not apply:
  - The warranty will lose its effectiveness if it is misused and not used the original device, such as iPhone/iPod/iPad released by Apple.
  - to damage due to inexpertly carried out installation, incorrect connection, or incorrect packing.
  - to damage attributed to utilisation not specified in the operating instructions, to negligence or modification, or to the use of parts that have not been manufactured or approved by eMoMo.
  - to damage due to faulty or unsuitable peripheral devices.
  - to damage caused by accidents, lighting, water, fire, heat, war, civil unrest, or other events beyond the control of eMoMo and its distribution partners.
  - to products whose serial numbers have been altered, deleted, removed, or rendered illegible.
  - if repairs or modifications have been performed by unauthorised persons.
- » If you wish to make a claim under the warranty, please always try to contact the distributor whom you purchased this product firstly, or you can contact the Remo Audio manufactory by below:
  - America(North America, Central America, South America):  
US-SERVICE@emomotech.com
  - Europe:  
EU- SERVICE@emomotech.com
  - Australia:  
AUS- SERVICE@emomotech.com
  - Asia(including Russia & other territory):  
ASIA- SERVICE@emomotech.com
  - Tel:+86 755 27643116 Fax:+86 755 27643115

## Installation

1. Dig holes in the wooden board. ( shows on the following picture.)

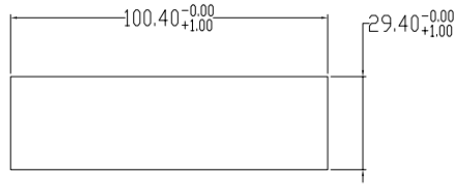

2. Put the sponge on board. And dig the holes as the picture.
3. Cover by skin, and cut a incision by knife.
4. Dig the same holes on back board.
5. Take off the butterfly nut from control box and put the control box in the hole.
6. Install the butterfly nut back.
7. Finish

### Installation guide for speakers

Decide the location of speakers

2. Dig the hole
3. Put speakers in the each hole.
4. Connect it
5. Put the nets on
6. Finish

Note: the End-user should follow the above step to install the device.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.