

Specification

Input	AC 100~240V
Power	120W
Audio input	DC 13V
Power for the audio	17W
Audio frequency response	40~22 kHz
Signal-to noise ratio	> 65 db
Bluetooth edition	4.0
Recliner input	DC 29V
Power for the recliner	120W
USB output	5V 2.1A max for each
Wireless charging output	5V 1A max for each
Socket output	Total AC 100~240V 8A

Frequently asked questions

Problem	Possible cause and correction
No power	1.The plug is plugged into a useless socket. Change a useful socket. 2.The plug isn't plugged properly. Re-plug it and ensure it is plugged properly.
No sound at all	1.The volume switch is on minimum. increase the volume. 2. The unit is in earphone mode. Disconnect the earphone.
The unit doesn't response	1.Safety switch has pop up. Press it down to reset the unit. 2. The unit is poorly connected. Check all connectors and reconnect them.
Bluetooth can't be paired	1.It has been connected. Press to disconnect the previous BT and try again. 2. Do not pair the Bluetooth behind a wall or in a corner. Keep the working space in 8M.

USB mode can't work	1.Availablefor MP3 and WMA format. Others can't be played. 2.The USB is broken. Try to change a useful one or try to upgrade your device.
AUX mode can't work	1.The music source is useless. Try another one. 2. The auxin cable is useless. Change a useful cable.

Warranty

» This limited warranty doesn't resist your statutory rights in any way.
 » The warranty period is 2 years from the date of purchase.
 » you can certify your purchase date either by the original Invoice/ Receipt, or by the registration code.
 » The warranty is limited to the repair of the faulty audio device.
 » The warranty does not cover any transport or other direct/indirect costs or any risks associated with removing/dismounting, transport ation, and installing the products.

It does not apply:

- » the unit is misused.
- » damage due to inexpertly carried out installation, incorrect connection, or incorrect packing.
- » damage attributed to utilization not specified in the operating instructions, to negligence or modification.
- » damage due to faulty or unsuitable peripheral devices.
- » damage caused by accidents, lighting, water, fire, heat, war, civil unrest, or other events beyond the control of the manufacturer and its distribution partners.
- » If repairs or modifications have ben performed by unauthorized persons
- » If you want to make a claim under the warranty, please always to contact the store from whom you purchase this product.

Remark


Use product correctly and keep it probably will prolong the service life.

Part number and functions

Part number & functions			
P/N	Functions	P/N	Functions
iTable406R		iTable406RW	
iTable406		iTable406W	
iTable406TR		iTable406TRW	
iTable40624HR		iTable40624HRW	
iTable40624HRR		iTable40624HRRW	
iTable40624HTR		iTable40624HTRW	
iTable40624HTRL		iTable40624HTRLW	

iTable406

 User Manual

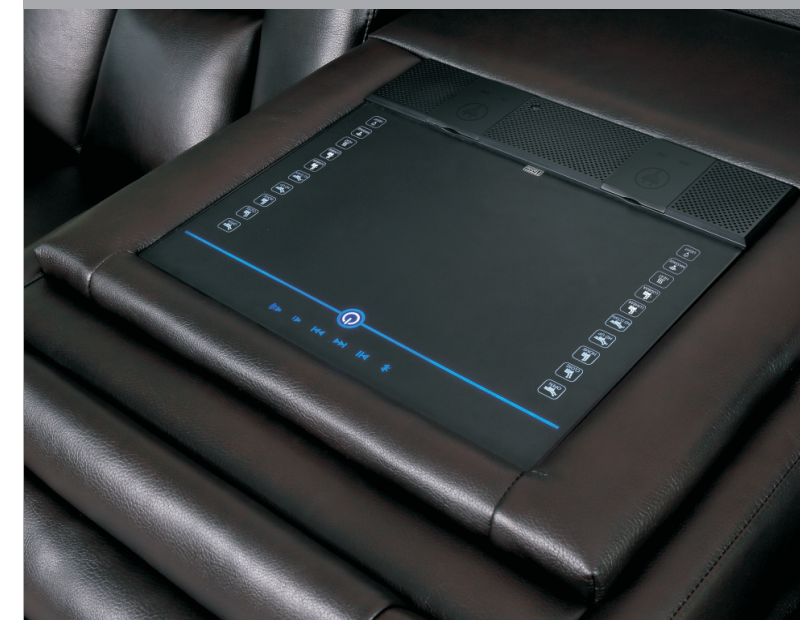

Caution


» Congratulations on your new smart table top. Please read the user manual carefully before using the unit. Then operate it properly.
 » This apparatus is supposed to be connected with AC 100V-240V power supply.
 » The unit should be powered off before unplugging it.
 » Do not touch the sockets at any time, it may cause a electricity shock.
 » Do not pull the silicon cover of the power supply too hard, it may cause a damage to the product.
 » Ensure the apparatus is installed stably.
 » The apparatus is for in door use only.
 » Do not used in extreme environment.
 » Do not place the apparatus in sunlight exposure or near heat source.
 » Do not try to take any components away off the apparatus because there is not useless component and it may cause electricity shock.
 » Children under 13 years old should use it under adults' supervision.
 » Never try to repair this product by yourself as it may cause a void warranty. Please contact with the store or customer service for help if problem occurs.
 » This apparatus might be updated as technology & system upgraded. The corresponding revision of the manual will not notify specially.
» FCC Caution:
 Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.
 This equipment should be installed and operated with minimum Do not pull the silicon cover of the power supply too hard, it may distance 20 cm between the radiator and your body.
 This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 (1) This device may not cause harmful interference, and
 (2) this device must accept any interference received, including interference that may cause undesired operation.
 This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.
» NOTE:
 This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
 supply.
 However, there is no guarantee that interference will not occur in a

particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.

FCC ID: A4E-ITABLE406

 Panel description

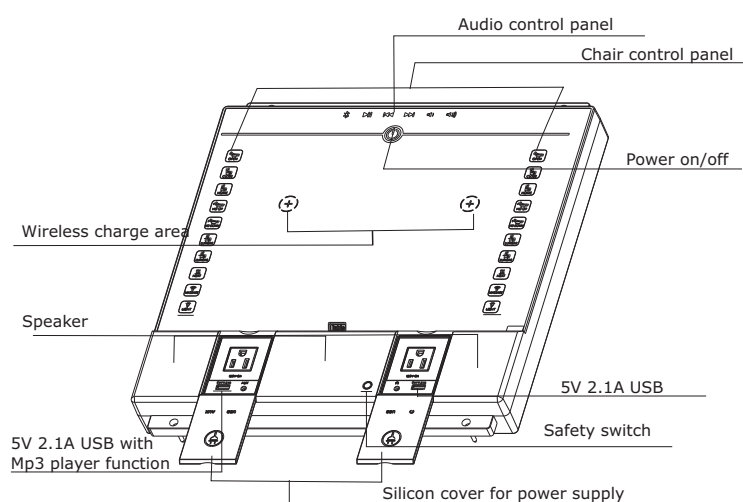

Buttons and functions


Icon	Function
	Power on/off
	Press for 3s to disconnect the BT pairing. Press shortly to switch into BT mode
	Play/pause the music track.
	Decrease the volume.
	Increase the volume.
	The last track.
	The next track.
	AUX-IN
	Listen to music via earphones.
	Recline the chair.
	Close the chair.
	Return the chair to Upright Position.
	Lift the headrest.
	Retract the headrest.
	Activate the lumbar support.
	Retract the lumbar support.
	Turn on/off heating pad.
	Turn on/off vibrating massage function.
	Turn on/off base light.
	AC 100~240V power supply.
	USB MP3 player or 5V 2.1A max charging outlet.
	Wireless charging area.

Operation


» Plug the unit into a household power supply.(AC 100~240V)
 » Touch to turn on the device. All buttons light on and the BT begins to search signal.
 » Turn on the BT function of your device, search BT signal "eMoMo iTable406". Pair your BT device with "eMoMo iTable406". If it is paired successfully, a "Du" sound will made and you can Play music by your BT device. If you want to disconnect the BT, touch for 3s to disconnect it.
 » Touch to play or pause the music file.
 » Touch time after time to decrease volume gradually. Touch and hold it to decrease volume rapidly.
 » Touch time after time to increase volume gradually. Touch and hold it to increase volume rapidly.
 » Touch to back to the last track.
 » Touch to leap to the next track.
 » Connect your AUX device with the product via outlet by a AUX cable, the audio will switch into AUX audio mode automatically and you can play music via your AUX device .
 » Insert a USB with MP3 audio file in into the USB next to AUX-IN outlet, the audio will switch into USB MP3 player and play the MP3 in USB automatically.
 » Touch shortly could cut off the AUX and USB connection. Then you can pair the BT and play music by BT device.
 » Connect your earphones with outlet to listen music via earphones.
 » Touch to recline the chair.
 » Touch to close the chair.
 » Touch to return the chair to Upright Position.
 » Touch to lift the headrest.
 » Touch to retract the headrest.
 » Touch to activate the lumbar support.
 » Touch to retract the lumbar support.
 » Touch to turn on/off heating pad. It will be shut down in 1 hour automatically as it reaches the maximum work time.
 » Touch to turn on/off vibrating massage function. It will be shut down in 30 minutes automatically as it reaches the maximum work time.
 » Touch to turn on/off the base light. It will be shut down in 4 hours if there is no operation on the smart table top.
 » Put your device on the wireless charging area to charge for it. Ensure that the receiver of your device is aligned with logo.
 » If unexpected problem occurs on the product, like water flow in , the safety switch will cut off the power then pop up. After troubleshooting, press the safety switch down could reset it so it could work normally. But if the product is still with problem, the switch can not be press down.
 » Swivel clockwise to open the silicon cover for power supply.

Installation:

 1. Hole size

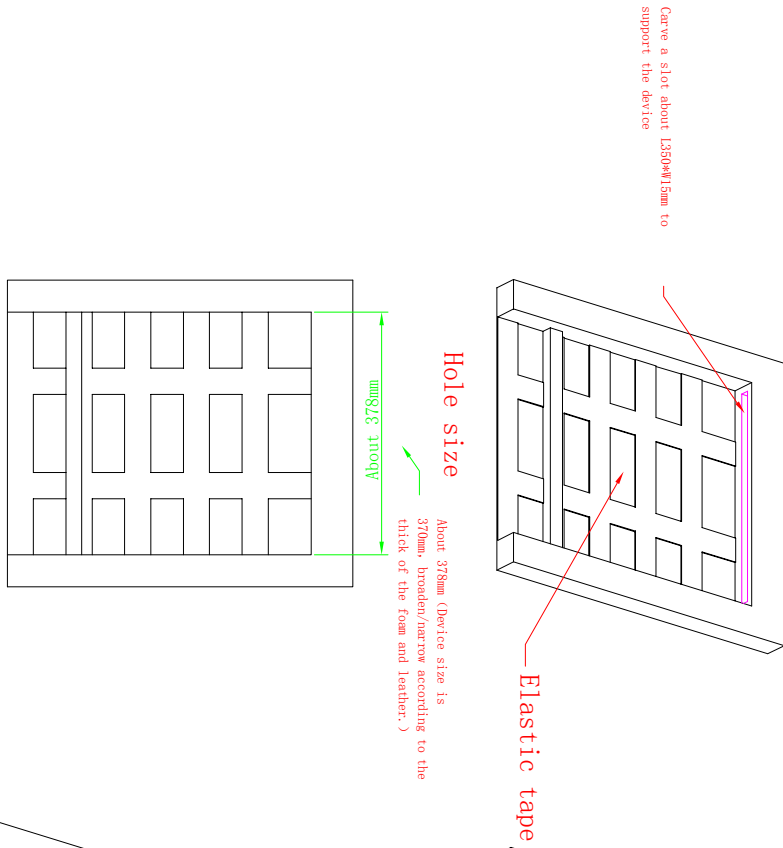

 2. Put the device into the mounting hole, ensure the device and slot matched properly.

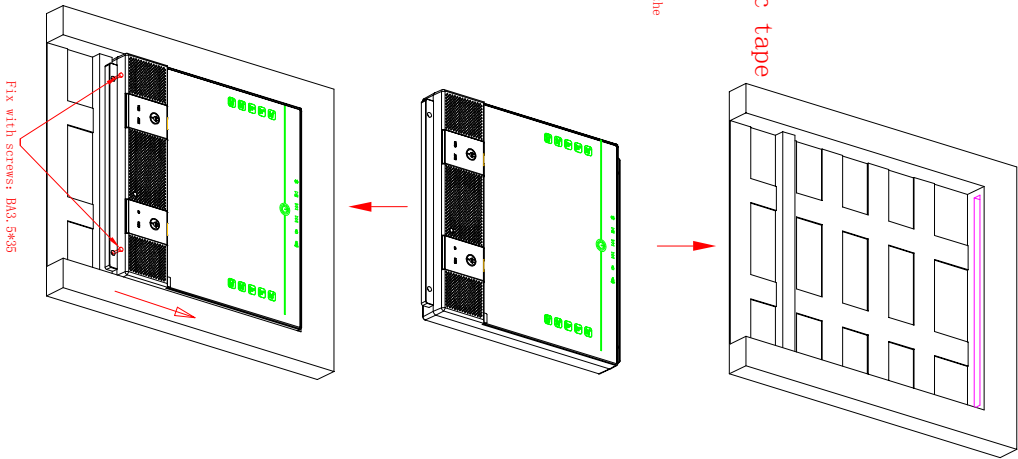

3. Fix accessory plate

