

Digitalizing hazardous areas.
Enabling connectivity.
Enhancing mobility.

Smartphone for use
in Hazardous Areas

Smart-Ex® 02 User Guide

English



ecom
A PEPPERL+FUCHS BRAND

Your automation, our passion.

pf PEPPERL+FUCHS

Copyright © 2019 Pepperl+Fuchs GmbH. PEPPERL+FUCHS and the ecom A PEPPERL+FUCHS BRAND logo are trademarks of Pepperl+Fuchs GmbH. Other company and product names may be trademarks or registered trademarks of the respective owners with whom they are associated.

Third Party Trademarks

Google™, Android™, Google Play and other marks are trademarks of Google LLC.”
The Android robot is reproduced or modified from work created and shared by Google and used according to terms described in the Creative Commons 3.0 Attribution License.

Disposal of Old Electrical and Electronic Equipment



The symbol of the crossed-out wheeled bin indicates that within the countries in the European Union, this product, and any enhancements marked with this symbol, can not be disposed as unsorted waste but must be taken to separate collection at their end-of-life.

Disposal of Battery



Li-ion

Please check local regulations for disposal of batteries. The battery should never be placed in municipal waste. Use a battery disposal facility if available.



RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

Guideline for Headphone and Earphone

This device have been tested to comply with the Sound Pressure Level requirement laid down in the applicable EN 50332-1 and/or EN 50332-2 standards. Permanent hearing loss may occur if earphones or headphones are used at high volume for prolonged periods of time.



To prevent possible hearing damage, do not listen at high volume levels for long periods.

Charging Mode



For charging the temperature for the adapter and the Smart-Ex® 02 shall not higher than 45 °C.

Legal Information	2	Managing Home Screen	17
		Home Screen Indicators	19
Phone Models and Support Information	5	Phone Operations Without SIM Card	20
Phone Models Covered	5	Changing the Wall paper	20
Network Services	5	Taking a Screenshot	21
ECOM Support Information	5	Keypad Functions	22
Use the Guide Effectively	5		
Menu Options	6	Managing Phone Settings	23
Limited Feature Description - Disclaimer	6	Language and Input Settings	23
		Power Saving Settings	24
		Connecting a PC Using USB Connection	25
Safety Guidelines	7	Viewing Device Details	25
SAR Information	9	Managing Memory Utilized by Applications	25
Avoid High Temperatures	9	Optimizing Memory Usage	26
Personal Medical Devices	9	Using Flashlight	26
Safety Guidelines	10		
Child Safety	10	Managing Wireless and Network Settings	27
Emergency Calls	10	Connecting to Wi-Fi Network	27
		Optimizing Data Usage	28
Battery Usage Guidelines	11	Activating Aeroplane Mode	29
Battery Usage	11	Setting Up Tethering & portable hotspot	29
Charging the Battery	11	Setting Up Wi-Fi Hotspot	29
Battery Usage Guidelines	12	Activating Bluetooth Tethering	29
Verifying and Optimizing Battery Usage	12	Setting Up VPN Connection	30
Tips to extend the battery life	12		
Getting Started	13	Managing Phone Security Settings	32
What Is In the Box ?	13	About Android Security	32
Your SIM Card	13	Managing Security Settings	32
Inserting the Nano-SIM Card and Battery	13	Locking your Screen	32
		Locking Your SIM Card	32
		Managing Credential Certificates	33
Your ECOM Smart-Ex® 02	15		
Switching On	16	Managing Personal, Account and System Settings	34
Setting Up Your Phone	16	Location Access	34
Need for a Google Account	16		

Backup and Restore Data	34
Managing Accounts	34
Syncing Your Account	35
Managing Contacts	36
Add a New Contact	36
View the Contact Details	36
Sending a Message from Contacts	36
Dialing a Number from Contacts	36
Editing the Contact Details	36
Copy to Phone	37
Managing Contact Settings	37
Managing Phonebook Settings	37
Searching Contacts	38
Deleting a Contact	38
Managing Calls	39
Making a Call	39
Dialing a Number via Contacts	39
Answering an Incoming Call	39
Adding a Contact From Phone Screen	39
Viewing All Contacts from Phone Screen	39
Viewing Call History	40
Deleting Call History	40
Managing Call Settings	40
Changing Ringtones	40
Activating Vibrate Mode	40
Setting Up Your Voicemail	40
Editing Quick Responses	40
Managing Fixed Dial Numbers	41
Blocking Incoming Calls	41
Call Barring	41
Call Forwarding	41
Call Waiting	42

Sending Messages	43
Sending SMS/MMS Message	43
Managing Message Settings	43
Deleting Messages	44

Using the Keyboard	45
Keyboard Dictionaries	45

Installing and Using Android™ Applications	46
Google Play™	46
Downloading Media Files and Documents	46
Accessing Gmail™	46
Google Calendar™	46
Alarm	47
Clock	47
Calculator	47
Voice Search	47

Frequently Asked Questions	49
How to Enable VoLTE on my phone?	49
What is PTT call priority. How to enable and use PTT call priority?	49
What is Pocket mode?	49
How can I activate Wi-Fi Calling (VoWiFi)?	49
How can I activate Video Calling (ViLTE)?	49
How can I configure and use Speed dial?	49
How can I perform a system update ?	49
How can I use the flash light settings?	49

End User License Agreement	50
License	50
Phone Care	50
Warranty	50

FCC Statement	51
----------------------	-----------

FCC Statement	51
Déclaration de la FCC	52
Déclaration de la FCC	52
Radio Frequency (RF) Energy	53
Radio Frequency (RF) Energy	53
Énergie Radioélectrique	54
Énergie Radioélectrique	54
EU - Declaration of Conformity	55
EU - Declaration of Conformity	55
Index	57

Congratulations on the purchase of a ECOM Smart-Ex® 02 dual-SIM smartphone. This phone is a GSM/GPRS/EDGE/UMTS/VoLTE/ViLTE/VoWiFi enabled handset and has an intuitive, feature-rich user interface, which allows you to make the best use of the offered functions.

Phone Models Covered

This user guide covers the different variants of Smart-Ex® 02.

The model name of the device can be found on the packaging.

Network Services

These are additional services that you can avail through your network service provider. To make the best of these services, you must subscribe to them through your service provider and obtain instructions for their use from your service provider.

ECOM Support Information

For additional product and support information, visit <https://www.ecom-ex.com>.

Use the Guide Effectively

Familiarize yourself with the terminology and symbols used in the guide to help you use your phone effectively.

home screen

This is the screen displayed when the phone is in idle condition.

TOUCH & HOLD

Touch and hold an item on the screen by touching it and not lifting your finger until an action occurs.

DRAG

Touch and hold an item for a moment and then, without lifting your finger, move your finger on the screen until you reach the target position.

SWIPE OR SLIDE

Quickly move your finger across the surface of the screen, without pausing when you first touch. For example, you can slide a home screen left or right to view the other home screens.

Pinch in/out

Pinch in/out on a webpage, map or other screen to zoom. For example, double-tap a webpage in Browser to zoom in, and double-tap again to zoom out.



Signifies a Note.

Options Commonly Used across Menu Items

The following are common actions used across various menu items:

back	Displays the previous screen. Use the Left Selection Key to perform this function.
Home	Moves the current working application to the recent applications list/ background and displays home screen
Recent	Displays recently used applications.

Limited Feature Description - Disclaimer

Your Smart-Ex® 02 smartphone comes with feature rich Android operating system and GMS applications which gets frequent updates. This document intend to address the basic features of the phone and the integrated applications. To get the best out of your Smart-Ex® 02, we recommend you to refer the help and support documentation associated with each application and explore the latest features offered by them.

Please read and understand the following safety guidelines before you use the phone. These guidelines provide details to enable you to operate your phone safely and conform to any legal requirements regarding the use of cellular phones.

	Electrical interference may obstruct the use of your phone. Observe restrictions in hospitals and near medical equipment.
	Switch off your cellular phone when in an aircraft. Wireless phones can cause interference or danger to an aircraft. In an aircraft, the phone can be used in flight mode.
	Do not expose the battery to high temperatures (in excess of 55°C).
	Adhere to road safety laws. Do not hold/use a phone while you are driving; find a safe place to stop first. Use hands-free microphone while you are driving.
	Avoid using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.



Use only ECOM Smart-Ex® 02 approved charging equipment to charge your phone and avoid damage to your phone.



The symbol of the crossed-out wheeled bin indicates that this product, and any enhancements marked with this symbol, can not be disposed as unsorted waste but must be taken to separate collection at their end-of-life.



Ensure that only qualified personnel install or repair your phone.



Applicable to non-EX versions only:
Do not to use the phone at a refueling point. Observe restrictions when using radio equipment at fuel depots, chemical plants or where blasting operations are in progress.



The ECOM Smart-Ex® 02 is water-proof and can be submerged to 2 metres for 30 minutes.

Make sure to properly close the rubber cover of the charging connector and audio connector and the screws of the SIM card cover shall be tightened to avoid deposits of water drops on these connectors, when the phone is immersed in water.

Water droplets may condense under the display cover if the phone is immersed in water with significant drop in temperature. This does not indicate water leakage. The droplets disappear at room temperature.

The ECOM Smart-Ex® 02 is dust-resistant, rugged and shock-resistant. However, it is not dust-proof or unbreakable if subjected to overwhelming impact. For best results and long product life, one should protect the ECOM Smart-Ex® 02 from salt water, dust and strong impacts.

SAR Information

The ECOM Smart-Ex® 02 has been certified in compliance with the Government's requirements for exposure to Radio Waves.

When communicating over the wireless network, the smartphone emits via the radio frequency waves low levels of radio energy. The Specific Absorption Rate, or SAR, is the amount of RF energy absorbed by the body while using the phone and is expressed in watts/kilogram (W/kg).

Governments around the world have adopted comprehensive international safety guidelines, developed by scientific organizations, for example, ICNIRP (International Commission on Non-Ionizing Radiation Protection) and IEEE (The Institute of Electrical and Electronics Engineers Inc.). These guidelines establish permitted levels of radio wave exposure for the general population.

Tests for SAR are conducted using standardized methods with the phone transmitting at its highest certified power level in all used frequency bands.

SAR Data Information for residents in countries that have adopted the SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP). For example, European Union, Japan, Brazil and New Zealand.

A minimum separation distance of 1.5 cm must be maintained between the user's body and the device, including the antenna during body-worn operation to comply with the RF exposure requirements in Europe. The limit recommended by ICNIRP is 2 W/kg averaged over ten (10) gram of tissue.

The following SAR values are applicable to ROW variant of Smart-Ex® 02 smartphones. This variant is available in countries in Asia, Australia and European union.

The highest SAR value for the ECOM Smart-Ex® 02 ROW phone when tested by ECOM for use:

By the head is 0.594 W/Kg (10 g).

Worn on the body is 1.931 W/Kg (10 g-5 mm).

Avoid High Temperatures

Leaving the phone in hot or cold places, such as in a closed car in summer or winter conditions, reduces the capacity and lifetime of the built-in battery. For the best results, try to keep the phone between -20°C and +55°C (-4°F and 131°F). A phone with a hot or cold battery may not work temporarily, even when the battery is fully charged. Battery performance is particularly limited in temperatures well below freezing.

Personal Medical Devices

Smartphones may affect the operation of cardiac pacemakers and other implanted equipment. Please avoid placing the smartphone over the pacemaker, for example in your breast pocket. When using

the smartphone, place it at the ear opposite the pacemaker. If a minimum distance of 15 cm (6 inches) is kept between the smartphone and the pacemaker, the risk of interference is limited. If you suspect that interference is taking place, immediately turn off your smartphone. Contact your cardiologist for more information. For other medical devices, consult your physician and the manufacturer of the device. Comply with instructions to switch off the device or deactivate the RF transmitter when required, especially when posted in hospitals and aeroplanes. Equipment used in these places may be sensitive to radio waves emitted from the device and adversely affect their operation. Also, observe restrictions at gas stations or other areas with flammable atmosphere or when close to electro-explosive devices (applicable to non-EX versions only).

Child Safety

Do not allow children to play with your smartphone or its accessories. Keep it out of their reach. They could hurt themselves or others, or could accidentally damage the smartphone or accessories. Your smartphone and its accessories may contain small parts, which could be detached and create a choking hazard.

Emergency Calls

Smartphones operate using radio signals, which cannot guarantee connection under all conditions. Therefore you should never rely solely upon any

smartphone for essential communications (e.g. medical emergencies). Emergency calls may not be possible in all areas, on all cellular networks, or when certain network services and/or smartphone features are in use. Check with your local service provider. To make emergency calls, the user can dial the emergency numbers.

If the phone display is in locked state, you can long press the **EMERGENCY** text on the screen.

Battery Usage

ECOM Smart-Ex® 02 phone comes with a removable battery. For any battery related queries contact ECOM customer support.

WARNING

Use only ECOM certified charger and charging cable with magnetic connector , to charge your ECOM Smart-Ex® 02.

Charging the Battery

The battery delivered with your smartphone is not fully charged. We recommend to charge the phone for five hours before using it for the first time. The full capacity of the battery is reached after 3 to 4 complete charge/discharge cycles.



There is a risk of explosion while charging if the battery has been replaced by an incorrect type.

1. Insert Charger

Insert the charger plug into a power outlet.

2. Connect to Phone

The charging port is located in lower side of the phone, below the back cover. Insert the magnetic connector to the charging port, such that the black arrow is positioned on the top of the connector.



3. Charging Animation/Icon

If the battery is being charged when the phone is switched off, a battery charging animation with charged percentage is displayed.

If the battery is being charged while the phone is switched on, the battery charge icon on the home screen shows animation indicating that the battery is being charged. After the phone is fully charged the charging animation stops and you can disconnect the charger from the phone.

The LED indicator on the top right corner of the phone, shows RED when the charging is in progress and changes to GREEN once the charging completes.

WARNING

DO NOT charge your ECOM Smart-Ex® 02 inside hazardous areas and/or with any other cable and charger other than the provided ECOM certified charging cable and charger.

Charging your ECOM Smart-Ex® 02 with a different cable/Charger and/or in a hazardous environment will compromise the intrinsically safe nature of the device.

Verifying and Optimizing Battery Usage

To check the battery usage status and also close some applications to save battery power, select **Settings > Battery**.

The current battery charge status (charging or discharging) and the charge level details are displayed on the top of the screen.

The discharge graph (visible upon tapping the **Show full device usage** option from right top corner option icon) shows the battery level over time since you last charged the device.

The list at the bottom of the screen shows the breakdown of battery usage for individual applications and services. Touch any listed items for more details. The details screen for some applications includes options that allow you to adjust settings affecting power usage, or stop the app completely.



If you stop some system apps or services such as Google service, your device may not work correctly.

Tips to extend the battery life

Follow these tips to extend your phone's battery life. If you are using Wi-Fi, Bluetooth, or GPS, use the **Quick Settings** or **Phone Settings** to turn them off.

Move **Maps** or **Navigation apps** to background when you are not using them. They use GPS (and thus more power) only when they're running.

Set screen brightness to Auto and set a shorter Sleep timeout (1 minute). The display settings are located in **Settings > Display**.

If you are travelling and do not have access to mobile or Wi-Fi network, switch to **Aeroplane mode**. Drag down the notification bar and locate the **Airplane**

mode icon (). Tap the **Aeroplane** icon to enable/activate Aeroplane mode ().

What Is In the Box ?

The list of items in the ECOM Smart-Ex® 02 phone box are:

- ECOM Smart-Ex® 02 phone
- Battery pack Ex-BP S02
- Wall charger
- USB cable
- Screw driver
- Documentation


Your SIM Card

The SIM card associates your network services (for example, phone number, data services, and so on) with your phone.


Inserting the Nano-SIM Card and Battery

Step 1

To insert the nano-SIM card unscrew the two cover screws in a counter clockwise direction and remove the battery cover.

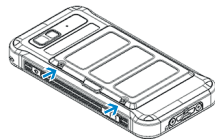


Please use the screwdriver Torx T8 provided with the phone.

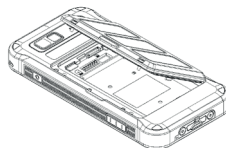


Step 2

Insert the nano-SIM card with the gold-colored contacts facing downwards by pushing it upward in the designated slot.

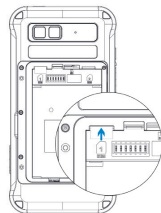


Step 3

Insert the battery into the battery slot in the prescribed order as shown in the illustration on the right.

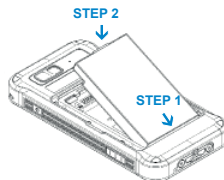


Step 4

Reattach the battery cover and screw down the two cover screws in a clockwise direction.

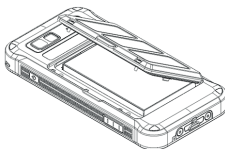

Please use the screwdriver Torx T8 and ensure not to overtighten the screws.

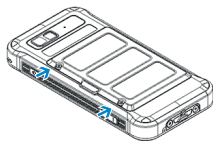



Switching On

Press and hold the **Power ON/OFF** key located in the top corner in the right hand side for 2 seconds to Power ON the phone.

When the phone is switched on, it tries to register with the network. After successful registration, the names of the service providers are displayed.

Setting Up Your Phone

To setup your phone follow the instructions on the setup wizard.

Need for a Google Account

Signing into Google account helps user to access personalized offerings via Google Mobile Services (e.g. e-mail, calendar, drive, contacts). It also provides multiple security and management services for your device and Google services. For more details and latest information, visit <https://support.google.com/accounts>.

Managing Home Screen

After you complete the phone setup, the home screen is displayed. The home screen is the beginning point to access all the device's features. The home screen can have multiple panels.

The home screen includes,

- Time indicator
- Data Signal strength indicator
- Service indicator
- Battery charge indicator
- Display icons and Home screen
- Favourites tray



The **Favourites tray** is located in the home screen. The app icons you keep in the tray remain visible on every home screen.

The **Status bar** on the top of the display screen provides notification about various notifications such as missed call, new messages, alarms, events and software updates.

- To view the notifications, swipe your finger down from the top of the screen.

The **System icons** on the right displays the current device status such as wireless and network connection strength, battery level. Time & connectivity status shows on the left side of status bar.

The **Google Search** bar lets you search the items in your phone or the Internet. Touch Google Search bar to type your search terms, or to speak and give a voice input.

You can save folders, application and add widgets on your home screen panel.

Adding an Application Icon to Home Screen

1. Go to home screen and drag it up to view the Applications screen.
2. Swipe up or down to locate the application for which you require a shortcut on the home screen.
3. Touch and hold the application icon and drag it to the home screen.
4. To open an app, folder, or widget, touch its icon.
5. To view other Home screens, swipe the current home screen to left or right.

Creating a Folder on the Home Screen

Folders helps you to keep the icons in an organized fashion. To create folders,

1. Touch and hold an icon on the home screen or Applications.
2. Drag and position it on another icon that you want to be included in the same folder.
3. Tap the folder. Both the icons are grouped together in an unnamed folder.
4. Tap the name area and give a suitable name.

Moving an Icon/Folder from the Home Screen

1. Tap and hold the application icon and drag it to the new location.
2. To move it to another panel, drag it to the side of the screen.

Removing an Icon/Folder from the Home Screen

1. Tap and hold the application icon. A Remove icon () is displayed on the top of the home screen.
2. Drag the icon and position it on the Remove icon till it turns red.
3. Drop the icon and it is deleted from the home screen.



Deleting an application icon from the home screen does not delete the application. You must go to the Applications panel and select the application to uninstall it.

Home Screen Indicators

The icons displayed at the top of the screen provides information about the status of the device. Details such as date and time, battery charge status, and data service and Wi-Fi connectivity are displayed when the phone is in standby mode. Other indicators such as airplane mode, alarm and call forward are displayed, if the feature is activated.

Icons	Description
	Battery level indicator
	Battery charging in progress
	No signal
	Signal strength
	No SIM card

	4G LTE Network connected
	Roaming
	EDGE network connected
	Wi-Fi connected
	Call in progress
	Missed call
	New SMS or MMS
	New E mail
	Alarm activated
	Silent mode activated
	Vibration mode activated

Icons	Description
	Flight mode activated
	Synced with the associated account such as Google
	Screenshot captured

Phone Operations Without SIM Card

You can perform the following operations without inserting a SIM card in your phone.

- Make emergency calls.
- View and modify all settings except Data usage and mobile network related settings.
- Activate and share files through Bluetooth.
- Activate and access the Internet, and all your synced accounts using Wi-Fi connectivity.
- Access your phonebook, files, and applications.
- View and modify your profile settings.

Changing the Wall paper

You can set an image or a photo stored in your phone as your home screen wall paper. To change the wall paper,

1. Tap and hold on the Home screen. Choose Wall papers option.

2. Select from one of the following Wall paper collections

- **Photos:** Includes photos captured using the phone camera, screen capture, downloaded and the photos synced from google account.
- **Wallpapers:** Includes images that are pre-bundled with the phone.
- **Live wallpapers:** Includes live wall paper if any downloaded from playstore or other sources

Taking a Screenshot

You can take the screenshot of the current screen and it is stored in your phone's gallery. To take a screenshot:

Ensure that the image to be captured is displayed in the current screen.

Press **Power** and **Volume** down button simultaneously. The screenshot is captured and stored in the gallery.

A screenshot captured icon () is also displayed in the home screen top bar.

Keypad Functions

The following table displays the various keys and the corresponding functions they perform:

Keypad key	Operations
	Home - moves the current working application to the recent applications list/background.
	Recents - displays the recently accessed applications.
	Press this key to go back to the previous screen. You can press till you reach the Home screen.

Language and Input Settings

You can set the phone's language to any language or english preferred language.

1. From the Home or **All Apps** screen, tap **Settings** ().
2. Scroll down and tap **Languages & input**, located under **System** settings.
3. Go to **Languages** and select any language from the list as your preferred language.
4. If the required language is not available, tap **Add a Language**, select the language from the language list. The language pack is downloaded and added.
5. Tap and hold on the language and drag it to the top of the list to select as **preferred language**.
6. To delete a language from the list, tap **Options** () and tap **Remove**.
7. Click on the checkbox to select the languages need to be remove and tap **Delete**.

All the menu items and user feedback messages are displayed in the set language.

Spell Checker Settings

Enable Spell checker, to verify and change the spellings when you type your text message or mail.

Personal Dictionary Settings

The default keyboard input language is English(US)-Phone keypad.

Text -to-speech Output Settings

- The Speech engine is set to Text-to-speech.To change the Google Text-to-speech engine settings and install new language packs. Tap **Settings** () provided in the Text-to-speech output menu next to the engine (Google Text-to-Speech).
- Tap **Language**, to view the language set for speech output.
- Tap **Speech rate**, to set speed at which text is to be spoken.
- Tap **Pitch** to set the voice pitch.
- Tap **Play** to verify the set speech rate.
- Select **Google > Search Assistant & Voice > Search Language** to change the voice search language. You can search anything on Google, send message or can use for navigation using voice command in your own set language.

Display Settings

1. From the Home or **All Apps** screen, tap **Settings** ().
2. Scroll down and tap **Display**.
3. Set one of the following options to configure your phone's display:
 - **Brightness level:** Set the brightness of the phone display. It is recommended to set to Adaptive brightness so that the display brightness is adjusted automatically based on the brightness of the

surroundings. This also optimizes the battery power consumed.

- **Wallpaper:** Set the wallpaper for your home screen. You can select from one of the following wallpaper collections:
 - **Live wallpapers:** Includes live wall paper if any downloaded from playstore or other sources
 - **Photos:** Includes photos captured using the phone camera, screen capture, downloaded and the photos synced from Google account.
 - **Wallpapers:** Includes images that are pre-bundled with the phone.
- **Sleep:** Set the sleep time so that the backlight turns off after specified time of phone inactivity. This setting will also help you to optimize battery power.
- **Font size:** Set the font size of the text displayed in the screen.
- **Ambient display:** Activates the screen from sleep mode, when there is a new notification.

Power Saving Settings

Viewing Battery Life

To view the battery life when all the apps are running,

1. From the Home or **All Apps** screen, tap **Settings** ().
2. Scroll down and tap **Battery**.
3. The battery life and list of running applications is displayed.

4. You can also view and modify the following power management options:
 - **Battery saver** - Turn ON/OFF battery saver automatically
 - **Battery percentage** - Display battery percentage in the status bar

Quick Settings

Quick settings helps to access the most frequently used settings from the status bar.

Drag down the status bar to access the Quick Settings. Tap  to view the complete list of settings present in the quick settings.

To add or remove a setting to/from the quick settings, tap Edit ().

Force Stopping an Application

1. From the Home or **All Apps** screen, tap **Settings** ().
2. Scroll down and tap **Apps & notifications**. The recently used application list is displayed
3. Tap **See all apps** to view all the applications.
4. Tap the application to be force stopped.
5. Tap **Force stop** to stop an application.



If you force stop an app, it may misbehave.

Connecting a PC Using USB Connection

When the phone is connected to the computer via an ECOM certified USB cable, Charging this device via USB message is displayed in the Notification bar. Drag down the notification bar and tap the option Charging this device via USB, then the following options are displayed:

- USB Controlled by:
 - Connected device
 - This device
- Use USB for:
 - File transfer
 - USB tethering
 - MIDI
 - PTP
 - No data transfer



When the phone is connected to the computer using ECOM certified USB cable, you can charge the phone without selecting any USB option.



When the phone is connected to the computer via ECOM certified USB cable in Transfer Files mode phone memory is displayed in the computer.

Viewing Device Details

To view the device details such as system update status, model number, Android version, Kernel and baseband versions,

From the Home or **All Apps** screen, tap **Settings** (). Scroll down and tap About Phone.

Managing Memory Utilized by Applications

The Apps screen allows you to optimize memory usage for all the applications. To view these settings,

1. From the Home or **All Apps** screen tap **Settings** ().
2. Scroll down and tap Apps and notifications. The following tabs are displayed:
 - **Recently opened apps** - displays the list of recently opened applications.
 - **Notifications** - view and edit the notification display settings and also enable/disable notifications for various applications.
 - **Default apps** - displays the default apps to be started when the phone is powered ON.
 - **App permissions** - displays the list of apps with specific permissions granted for accessing camera, contacts, calendar, call logs, locations, messaging and other system applications.
 - **Emergency alerts** - enable/disable notifications about emergency broadcast messages categorized as AMBER alerts, extreme alerts, severe alerts, area update broadcasts. You can also set the vibrate mode and alert reminder sound for emergency alerts.
 - **Special app access** - enable/disable restricted access to system features such as battery

optimization, device admin apps and do not disturb access to applications.

Optimizing Memory Usage

You can optimize your phone's memory by performing the following tasks:

Uninstall apps that are not required.

- Delete unwanted files that are downloaded or created.
- Transfer files that would be required later to your computer.
- Delete offline content on Google Play and stream it via a Wi-Fi or mobile network.

Using Flashlight

1. From the Home or **All Apps** screen tap **Settings** ().
2. Tap **Custom Features** present under **System** and **Enable Flash**.
3. Drag down the notification bar and tap the **Flashlight icon** () to turn On torch.
4. Drag down the notification bar and tap the **Flashlight icon** () again to turn it OFF.

Connecting to Wi-Fi Network

Wi-Fi is a wireless network technology that can provide Internet access at distance upto 100 Feet, depending on the Wi-Fi router and surroundings, when you connect your mobile device to the wireless router.

You can access Internet when you connect your ECOM Smart-Ex® 02 to a Wi-Fi network. To connect your phone to a Wi-Fi network,

1. From the Home or **All Apps** screen, tap **Settings** (⚙️).
2. Enable **Wi-Fi**, located under **Network & Internet** settings.
3. Tap **Wi-Fi**. A list of Wi-Fi routers present within your phone's accessible range are displayed.
4. Tap your preferred network. Enter the password (if it is a secured network) and tap **Connect**.



It is always recommended to make your Wi-Fi router secure and also to connect your phone to a secure network.

Adding a New Network

To add a new Wi-Fi network

1. In the Wi-Fi settings screen, scroll down and tap **Add Network** button (+).
2. Enter the following details:
 - Network name: The wireless network SSID.
 - Security: Set the security type to None, WEP, WPA/WPA2 PSK, 802.1x EAP.

3. Enable Advanced Settings to set the Proxy details and IP settings.

Editing a Network

1. Tap and hold your preferred network.
2. Select **Modify Network**. The network setting details such as Password, Show Password and Advanced options are displayed.
3. Tap **Save** to save the settings or **Cancel** to exit to the previous screen.

Forgetting a Network

1. Tap on your preferred network (previously connected network).
2. Select **Forget Network**. The selected network is removed from the list.

Connecting to Bluetooth Devices

Bluetooth is short-range wireless communication technology used to communicate between the devices over a distance of about 8 meters.

You can perform the following tasks using Bluetooth paired devices.

- Transfer media files and contacts between mobile devices connected using Bluetooth.
- Access Internet through a Bluetooth device.
- Use Bluetooth headphones for playing media file

Pairing a Bluetooth Device

To activate Bluetooth and pair your ECOM Smart-Ex® 02 phone with other Bluetooth devices:

1. From the Home or **All Apps** screen, tap **Settings** ().
2. Enable **Bluetooth**, located under **Connected devices** settings. A list of accessible Bluetooth devices are displayed. Ensure that Bluetooth is activated in the other device too.
3. Tap **Pair new device** to search and add other Bluetooth enabled devices. A list of accessible Bluetooth devices are displayed. Ensure that Bluetooth is activated in the other device too.
4. Tap **Settings** next to the specific paired device to connect the Bluetooth device to access your phone's contacts, call history and also provide Internet access.
5. Enable **Media Audio** to connect the Bluetooth device for listening to media files.



This option is displayed only when a Bluetooth headset/Carkit is connected.

6. Confirm the pass key in the other device and tap **Pair** in your phone.
7. The device is displayed in the Paired device list.

Editing Bluetooth Device Settings

1. Tap **Settings** icon () located next to the preferred paired Bluetooth device.
2. Enter a new name to change the display name of the device and tap OK.
3. Enable **Media Audio** to connect the Bluetooth device for listening to media files.
4. Enable **Internet access** to use the paired Bluetooth device to access the Internet.
5. Tap **Forget** to remove the device from your paired list.

Optimizing Data Usage

Data usage refers to the amount of data used by your phone during internet access. The data usage charges are dependent on the plan provided by your service provider.

To monitor your data usage, adjust your data usage settings.

1. From the Home or **All Apps** screen, tap **Settings** ().
2. Tap **Data Usage**, located under **Network & Internet** settings.
3. Tap **App data Usage** and set data usage warning limit.
4. Enable **Data saver** to allow unrestricted Internet access only to those applications to which Unrestricted data usage permission are enabled.

5. Enable Mobile Data to access Internet using your mobile network.
6. Tap **Data usage** to set the mobile data usage limits.
7. Tap **Data warning & limit**.
8. Enable **Set data warning** to preset your data usage limit and to set an alert before reaching the preset limit.
9. Enter the **Data warning limit**.
10. Enable **Set data limit**. Mobile data access is disconnected automatically as soon as you reach this limit. You cannot access the Internet and related phone features do not work. You receive a notification once you reach the set data usage limit.
11. Enter the data limit.

Activating Aeroplane Mode

When your phone is set in airplane mode, network Connectivity or mobile data connectivity gets disabled. But you can access your media files and other features that do not require mobile data connectivity.

You can activate aeroplane mode from Quick settings. You can also activate using the following steps, if it is not available in the quick settings. To activate airplane mode,

- From the Home or **All Apps** screen, tap **Settings** ().
- Enable **Airplane mode** located under **Network & Internet** settings.

Setting Up Tethering & portable hotspot

Using tethering and portable hotspot, you can share your device's Internet connection with a computer or with other devices.

To activate USB tethering, Tap Hotspot and tethering located under Network & Internet settings. Enable USB tethering.



The USB Tethering option can be enabled only on connecting the USB cable to the PC.

Setting Up Wi-Fi Hotspot

When you setup your phone as a Wi-Fi hotspot you can connect other devices to this phone through Wi-Fi and access Internet.

- Tap **Hotspot and tethering** located under Network & Internet settings.
- Tap **Wi-Fi Hotspot and enable it**.
- Enter **Hotspot name**, **Security** and **Password** and tap **OK**.

Activating Bluetooth Tethering

When you activate Bluetooth tethering, you can share your phone's Internet connection with other Bluetooth

paired devices.

1. Tap **Hotspot and tethering** located under **Network & Internet** settings.
2. Enable **Bluetooth tethering**.

Setting Up VPN Connection

Using a Virtual private network (VPN) connection, you can access websites and other resources within a secured local network, even when you are outside that network. To setup a VPN connection,

1. From the Home or All Applications screen, tap **Settings** ().
2. Tap VPN located under **Network & Internet** settings.
3. Tap **Add network** icon (). **Edit VPN profile** screen is displayed.
4. Enter the following details:
 - **VPN profile:** VPN connection name.
 - **Type:** Select the connection type.
 - **Server address:** Address of the secure server for connection.
 - **PPP encryption (MPPE):** Enable to perform a secure point-to-point encryption between your device and the VPN server.
 - Select **Show advanced options** to enter DNS server details.

- Tap **Save** to save the changes

Connecting to a VPN Network

1. Tap the required VPN name from the list of VPN networks configured.
2. Enter the required credentials.
3. Tap **Connect**.
4. When the phone is connected to the VPN network , the icon is displayed in notification bar.

Editing VPN Network Details

1. Touch and hold the required VPN profile to be edited, from the list of VPN networks configured.
2. Tap **Edit profile**.
3. Modify the required information.
4. Tap **Save** to save the changes.

Deleting a VPN Network

To delete a VPN profile from the VPN screen,

- Tap **Settings** () of the VPN profile to be deleted.
- Tap **Forget** to delete profile.

Managing Mobile Network

You can view and modify your mobile service provider settings. To view and modify your mobile network settings,

1. From the Home or **All Apps** screen, tap **Settings** ().
2. Tap **Mobile network** located under **Networks & Internet** settings.
3. Enable **Mobile data** to access the Internet using your mobile network.
4. Enable **Roaming** to have network connectivity when you are in a roaming network.
5. Set **Data usage** limit.
6. Select the preferred **Network type**. You can set it to either 2G only, 3G only, 4G only, 2G/3G only, 3G/4G only, 2G/3G/4G.
7. Tap **Network** to choose network operator.
8. Tap **Access Point Names** to view, add and edit the network access points. Tap **Add network** icon () to add a new access point.

About Android Security

Android provides a multi-layered approach to the security.

- **Prevent:** Apps on Google Play are scanned continuously to block harmful apps and policy violators. You can also choose to have apps installed from other sources verified.
- **Control:** App sandboxes prevent apps from accessing other parts of your device's operating system, or each other, unless you give permission during installation. Screen lock and encryption prevent unauthorized access to the entire device.
- **Defend:** Once identified, dangerous apps can be removed remotely.

For more information about protecting your phone, refer to the topics below.

Managing Security Settings

You can activate and protect your phone from unauthorized by configuring the security settings.

- From the Home or **All Apps** screen, tap **Settings** ().
- Tap **Security and location** located under **Settings** menu. Enable and modify required security settings.

Locking your Screen

1. From the Home or **All Apps** screen tap **Settings** (.

2. Tap **Security & location**.
3. Enable and modify required security settings.
4. Tap **Screen lock** and select one of the following options to configure phone:
 - **None:** Disables the phone lock.
 - **Swipe:** When the phone is locked slide to your right or left or long press * key to unlock the phone.
 - **Pattern:** When enables, enter a pattern connecting atleast 4 dots. When the phone is locked, unlock it with the pattern.
 - **PIN:** When enabled, enter you own PIN value. When the phone is locked, unlock it using the PIN.
 - **Password:** When enabled, enter a password having atleast 4 characters. When the phone is locked, unlock it with the password.

Locking Your SIM Card

You can set SIM lock for your SIM.

1. From the Home or **All Apps** screen, tap **Settings** (.
2. Tap **Security and location**. Enable and modify required security settings.
3. Tap **SIM card lock**.
4. Enable **Lock SIM card**.
5. Enter SIM PIN and tap **OK**.
6. Tap **Change SIM PIN**. Enter the old SIM pin and tap **OK**.

7. Enter the new PIN and re-enter the same value when asked. Tap **OK**.

Managing Credential Certificates

You can view, install, verify and manage the certificates installed in your phone.

- Tap **Trusted Credentials** under **Encryption & Credentials**, to view and verify the system and user certificates.
- Tap **Install from SD card** to install certificates from SD card if any.

Location Access

If you enable Google Location Service™, you can let your device access GPS, Wi-Fi networks, and mobile networks to estimate your location.

1. From the Home or **All Apps** screen, tap **Settings** (⚙️).
2. Tap **Location** located under **Security & location** settings. Enable and modify required security settings.
3. Enable **Location**.



When the location switch from the notification screen is OFF, your device location is not shared with any applications.

Backup and Restore Data

You can backup your phone data to one or more of your Google Accounts using Android backup services. If you need to replace your device or erase its data, you can restore your data for any accounts that were previously backed up.

Backup your data

1. From the Home or **All Apps** screen, tap **Settings** (⚙️).
2. Tap **Backup** located under **Google** settings.
3. Tap **Back up to Google drive**.

If you do not have a backup account on your device, you can touch Backup account to add an account.

Managing Accounts

You can link an existing Google Account to your phone to organize and access your personal information from any computer or mobile device.

Adding an Account

1. From the Home or **All Apps** screen, tap **Settings** (⚙️).
2. Tap **Add Account** under **Accounts**.
3. Select the type of account. You can create a **Corporate account** or an **IMAP account**.
4. Complete the on-screen instructions.
5. The account is displayed under one of the following list:
 - Google Accounts shown under **Settings > Google**.
 - Other accounts shown under **Settings > Accounts**.

Deleting an Account

You can remove any account and all the information associated with it from your device, including e-mail, contacts, settings, and other data backed up in that account.

1. To remove a Google Account, **Settings** on home page > **Accounts - Google** > Select the account to be deleted.
2. Tap **Remove account**.

To remove any other type of account, tap **Settings** - **Accounts** > **account-name** and tap the suitable **Remove** option.

Syncing Your Account

To view and modify the sync settings for Google Accounts,

1. From the Home or All Apps screen, tap **Settings** ().
4. Tap **Accounts**.
5. Tap **Google Account**.

Configure Auto-Sync for all Apps

To enable auto-sync for all apps that are linked with your account,

1. To control auto-sync for all apps that use it, open **Settings** () > **Accounts** > Check or uncheck **Auto-sync data**.

If this option is not checked, you can only sync the data manually. You can also sync manually to collect messages, e-mail, and other recent information.

If auto-sync is disabled, it extends your phone's battery life. But it prevents your from receiving notifications when updates occur.

Configure Google Account Sync Settings

To modify a single Google Account's sync settings:

1. Go to **Settings** () > **Accounts** > **Google**.
2. Tap the account whose sync settings has to be changed.
3. If your account is set to auto-sync, you can check or uncheck items as needed. If auto-sync is off which is located under **Settings** > **Accounts** > **Automatically sync data**, tap to disable. Tap **Google account** > **Account sync** > touch an item to manually sync its data.

Sync a Google Account Manually

Go to **Settings** () - **Accounts** > **Google** > **Account Sync** > **Options** > **Sync**.

You can use the phonebook to maintain your contacts. It enable you to perform call, SMS, mms etc.

To access the contacts,

From Home or **All Apps** screen, tap **Contacts** (). The contacts saved in the phonebook are displayed.



Touch and drag the scroll bar on the screen to scroll through the contacts.

Add a New Contact

- To add a new contact, From Home or **All Apps** screen, tap **Contacts > Add new contact** (). Enter the contact details and **Save**, to save the contact.
- You can also enter a number using the dial pad and tap **Create a new contact** to add a new contact, or **Add to a contact** to update existing contact details.

View the Contact Details

1. From Home or **All Apps** screen, tap **Contacts** ().
2. Scroll to the required contact and tap the contact, to view the contact details.

Sending a Message from Contacts

You can send SMS and MMS messages to the contacts.

Sending SMS/MMS

1. From Home or **All Apps** screen, tap **Contacts** ().
2. Scroll to the required contact and tap the **Message icon** (), to open the message screen.
3. (Optional). Tap **Attachment** (), to attach a multimedia file.
4. Type the message and tap **Send** ().



If you attach a media file or a contact to your SMS message it is converted to an MMS message automatically.

Dialing a Number from Contacts

1. From Home or **All Apps** screen, tap **Contacts** ().
2. Scroll to the required contact and tap the contact to view the contact details.
3. Tap the required phone number to dial the contact or press the **Call** key to dial the default number.

Editing the Contact Details

1. From Home or **All Apps** screen, tap **Contacts** ().
2. Scroll to the required contact and tap the contact, tap the contact to view the contact details.
3. Press **Edit** ().
4. Edit the required details and tap **Save**.

Copy to Phone

1. From Home or **All Apps** screen, tap **Contacts** (👤).
2. Tap **Options** (⋮) and **Settings** > scroll down to **Manage Contact** and select Import, to import the contact to phone.

The selected contact is copied to the phone storage. This option present only when Google account is not configured.

Managing Contact Settings

You can edit and modify ringtone and call receiving settings for individual contacts.

1. From Home or **All Apps** screen, tap **Contacts** (👤).
2. Scroll to the required contact and tap the contact, tap the contact to view the contact details.
3. Tap **Options** (⋮) and select one of the following options:

- **Delete:** Delete the selected contact
- **Share:** Share the contact details via Email, Messages or Google drive
- **Add to home screen:** Select a point on the Home screen to copy the contact widget, for easy access
- **Set ringtone:** Set a specific ringtone for the contact
- **Route to voice mail:** Can route the contact to voice mail
- **Help & feedback:** It will help the user with guide articles about contacts

Managing Phonebook Settings

You can set the default Google account to save the contacts, select the list of contacts to be displayed or sort list to view the contacts and also the first or last name of the contact to be displayed first.

1. From Home or **All Apps** screen, tap **Contacts** (👤).
2. Tap **Options** (⋮) and **Settings** select one of the following options:
 - **Your info:** View and modify your Google account and phone number.
 - **Accounts:** View and modify user account settings.
 - **Default account for new contacts:** Set the default contact storage to Google account or SIM card.
 - **Contacts to display:** View all the contacts stored in the SIM card and Google account or customize to view only Google contacts.
 - **Sort by:** Sort the contacts by first name or Surname.
 - **Name format:** View the contact name beginning with first name or last name.
 - **Phonetic name:** View the phonetic name always or the name is hidden if empty
 - **Import:** Import contacts list from .VCF file or SIM card.
 - **Export:** Export contact to .VCF file or SIM card. You can also share all the contacts using Messages, E-mail, Google Drive or Bluetooth.
 - **Blocked Numbers:** View blocked phone numbers.

Searching Contacts

1. From Home or **All Apps** screen, tap **Contacts** (👤).
2. Tap **Search Contacts** ( Search contacts ) and enter the first few letters/numbers of the contact name/phone number to be searched. All the contacts containing the search text are displayed.

Deleting a Contact

1. From Home or **All Apps** screen, tap **Contacts** (👤).
2. Scroll to the required contact and tap the contact, tap the contact to view the contact details.
3. Tap **Options** (⋮) and select **Delete**.

Making a Call

From Home or All Apps screen, tap Phone (). The Phone screen with Recents (), Favourites (), Call history , Contacts () is displayed.

To dial a number use one of the following options:

- **Recents:** Tap the Recents icon () to view the call history. Tap the contact/number and tap the phone icon ().
- **Favorites:** Tap the specific contact/number from the frequently called numbers to make a call.
- **Contacts:** Tap a specific contact and tap the phone number to dial a call.

Dialing a Number via Contacts

1. From Home or **All Apps** screen, tap **Contacts** ().
2. Scroll to the contact and tap the contact. The contact details are displayed.
3. Tap the required phone number or Call icon to call the contact.

Answering an Incoming Call

To answer/reject an incoming call, press the answer key.

To answer/reject an incoming call in phone locked state, touch the white phone icon and slide over one of these icons:

Icons	Description
	Answer the call.
	Disconnect the call.
	Disconnect the call and respond with a quick response from a list of response text messages.

These options are available when the phone is in locked state. You can also press the answer key for accepting the call.

Adding a Contact From Phone Screen

1. From Home or **All Apps** screen, tap **Phone** ().
2. Enter the phone number using the numeric keypad in the phone.
3. Tap **Create new contact** to add a new contact or **Add to a contact** to add to an existing contact in the phonebook. Enter the contact details and tap **Save**.

Viewing All Contacts from Phone Screen

1. From Home or **All Apps** screen, tap **Phone** ().
2. Tap **Contacts** ().

Viewing Call History

- From Home or **All Apps** screen, tap **Phone** (📞).
- Tap the **Recents** icon (📞).

Deleting Call History

1. From Home or **All Apps** screen, tap **Phone** (📞).
2. Tap the **Call history** icon (📞).
3. Tap **Options** (⋮) > **All calls** > **Select call type to be cleared**.
4. Tap **Options** > **clear call history** to delete the call history.

Managing Call Settings

You can change the incoming call ring tone, enable vibrate during call and also activate voicemail using call settings.

To view and modify call settings,

- From Home or **All Apps** screen, tap **Phone** (📞).
- Tap **Options** (⋮).
- Tap **Settings**.

Changing Ringtones

- In the **Call settings** screen, tap **Sounds and vibration**.
- Tap **Phone ringtone**
- Select the ringtone from the ringtones list and tap **Ok**.

Activating Vibrate Mode

In the **Call settings** screen, go to **Sounds and vibration** > **Enable also vibrate for calls**.

Setting Up Your Voicemail

1. From Home or **All Apps** screen, tap **Phone** (📞).
2. Tap **Options** (⋮).
3. Tap **Settings**.
4. Tap **Voicemail**.
5. View or enter the following details under Advanced Settings:
 - **Service:** Your service provider name. Tap **Notifications** > **Advanced** > **Sound:** Set alert tone for voicemail message,
 - **Vibrate:** Enable this option to receive a vibrating alert.
 - Tap your service provider name got to **Advanced settings** > **Service** > **Setup** > **Enter your voicemail number**.
 - **Sound and Vibrate:** Go to **Notifications** > **Advanced** > **Sound**. Set alert tone for voicemail message and enable Vibrate to receive vibrating alert.

Editing Quick Responses

When you are not able to answer an incoming call, you can send quick response to the caller.

To view and edit quick responses, in the **Call settings** screen, tap **Quick responses**, tap the specific response message to edit. Edit the message and tap **OK**.

Managing Fixed Dial Numbers

FDN (fixed dialing numbers) is a SIM card-enabled feature. It restricts outgoing calls to phone numbers which are not listed in the FDN list. This feature can be activated only if PIN2 is entered. Contact your network operator if you do not have a PIN2. Set up your phone to place outgoing calls only to the fixed dialing numbers (FDN) that you save on the phone's SIM card.

1. From Home or **All Apps** screen, tap **Phone** (📞).
2. Tap **Options** (⋮).
3. Tap **Settings**.
4. Tap **Calling accounts** > select required service provider name.
5. Tap **Fixed Dialing Numbers** under **Call settings**.
6. Tap **Enable FDN**, and then enter the PIN2 supplied with the SIM card.
7. Tap **Change PIN2** to change the PIN2 number supplied with the SIM card.
8. Tap **FDN list** and add phone numbers.

Blocking Incoming Calls

The Call blocking options helps you to block incoming calls and SMS messages from blocked numbers.

To block incoming calls from certain numbers, tap **Call blocking** > **Add a number**.

Enter the phone number to be blocked and tap **Block**.

Call Barring

You can set the Call barring feature for all incoming and outgoing calls, international calls, local and home only calls.

To access call barring settings in the call settings screen, tap **Calling accounts** > select required service provider name and tap **Call barring**. Select one of the following call barring options:

Options	Function
All outgoing calls	All voice calls or International voice calls or International voice calls except home country.
All incoming calls	All voice calls or voice calls when roaming.
Change password	You can change the barring password by entering a new password.
Deactivate all	Revoke all the call barring settings.

Call Forwarding

You can forward your incoming calls to a number in the contacts or a new number, provided your network operator supports this service.

To access call forward settings in the call settings screen, tap **Calling accounts** > select required service provider name and tap **Call forwarding**. Select one of the following call forward options:

Options	Function
Always forward	Forward all incoming calls to a pre-designated number.
When busy	Forward calls when your phone is busy.
When unanswered	Forward calls when you do not answer incoming calls.
When unreachable	Forward calls when your phone is switched off or is in out of coverage area.

Call Waiting

When call waiting is enabled and the phone is in conversation, the incoming number is displayed when you receive a call.

To activate call waiting in the call settings screen, tap **Additional settings**. Enable **Call waiting**.

Caller ID Display

When you make a call, you can select whether or not to display your id to the receiver.

To activate call waiting in the call settings screen, tap **Additional settings**. Enable **Caller ID**.

SMS and MMS are convenient and inexpensive means of communication. You can send a text message to other people via SMS service. MMS allows you to send messages by including multimedia content such as pictures, audio files, video files.

You can use the **Messages** () in your phone to send an SMS and MMS message to other smartphones or any other equipment that can receive SMS and MMS.



The MMS feature is available only if you subscribe it from your network operator.

To access the messages function, from the home screen or **All Apps** screen, tap **Messages** ().

Sending SMS/MMS Message

1. To create a SMS message, from the home screen or All applications screen, tap **Messages** ().
2. Tap **Start chat** ().
3. Enter the contact name or the phone number in the **To** field. If you enter an alphabet, all the contact names starting with that alphabet is displayed as a list. Scroll down to select the contact.
4. Enter the message and tap **Send** (). When you add a multimedia attachment, the message is automatically converted to a multimedia message. MMS charges are applied based on the operator.

5. You can add a multimedia attachment, share a contact or attach a file as an attachment. To add an attachment, tap **Attach** (). Select the attachment type from the following options:
6. Browse the operation type from the below list and select the multimedia file to be attached.

Attachment Type	Description
Gallery/Camera	Select an image from the gallery or shoot a new image using the camera
Smileys	Attach a smiley image.
GIF	Attach an animated GIF image.
Favorites	Attach a sticker.
Location	Share your current location.
Record audio	Record a new audio file using the voice recorder and attach.

Managing Message Settings

You can customize the way you want to view and filter the messages. You can also set the default messaging application.

To view and modify the message settings,

1. To edit message settings, from the home screen or **All Apps** screen, tap **Messages** ().
2. Tap **Options** ().

Tap Settings.

View and edit the following settings:

Settings	Description
Default SMS app	Set the default messaging application.
Notifications	Set message notification for different profile settings, message display options for phone lock screen and enable notification dot
Hear outgoing message sounds	Enable audible alert for outgoing messages
Your Current country	Set your current country. If you select Automatically detected to set the country based on your location
Smart Reply and suggestions	View message text suggestions based on the recent messages you had sent.
Automatic previews	You can show all message previews or only Web link previews or download data when connected to Wi-Fi
Advanced Settings	Go to Settings and tap service provider name to edit the following options.
Group messaging	You can send SMS/MMS to all recipients and receive individual response.

Auto-download MMS	Enable to download all MMS messages in home network
Auto-download MMS when roaming	Enable to download all MMS messaged in roaming network
Use simple characters	Convert special characters to simple characters in SMS
Get SMS delivery reports	Activate read report for multimedia messages.
Wireless emergency alerts	Activate wireless emergency broadcast messages.
SIM card messages	View messages stored in the SIM card.
Phone number	Set the sender's phone number to be displayed in the messages

Deleting Messages

To delete all the message threads,

1. From the home screen or **All Apps** screen, tap **Messages** ().
2. Select a conversation and tap on options () or long press on a conversation.
3. Tap **Delete**. All the message thread are deleted after confirmation.

You can view and modify the keyboard, language and dictionary setting using the Phone Settings.

Keyboard Dictionaries

To manage keyboard dictionaries,

- From the Home or **All Apps** screen, tap **Settings** (⚙️).
- Tap **Languages & Input** located under System settings.

Personal Dictionary

You can add your own words to your personal dictionary so that your device remembers them. To add a word or phrase, including an optional shortcut,

1. Tap **Settings > Language & Input** located under **System** settings.
2. Tap **Advanced > Personal dictionary** and then **Add** (+) icon.
3. Add a required word and respective shortcut which is optional and press **Back key**.
4. The word will be saved.

Add-on Dictionary

1. From the Home or **All Apps** screen, tap **Settings** (⚙️).
2. Tap **Languages & Input** located under **System** settings.

3. Tap **Virtual keyboard**.
4. Tap **Gboard**.
5. Tap **Add-on dictionaries**. under **Dictionary**.
The dictionaries for other languages that you can download to your device are displayed.

Google Play™

Google Play™ provides access to different Android applications that you can download on the go and use in your ECOM Smart-Ex® 02 phone.

Downloading Media Files and Documents

You can download media files and documents when your phone is connected to internet through Wi-Fi or mobile data connection.

To manage application downloads, tap **All apps** screen. Use the Files app () to view, reopen, or delete the downloaded files.

From the Files app,

1. Tap an item to open it.
2. Long tap the items you want to share. Then touch the Share icon and choose a sharing method from the list.
3. Long tap the items you want to delete. Then touch the **Trash** icon.
4. Tap the **modified option**, to sort your downloads by name, by date modified, or by type or by size.
5. The downloaded applications can be viewed in two different ways:

Grid view

1. Tap the **Files** icon () located on the **All apps** screen.

2. Tap Grid view () to view the downloads. The downloads are displayed with the details such as the size, downloaded date etc.

List view

3. Tap List view () to view the files.
4. The files are listed with the downloaded date details.

Accessing Gmail™

Gmail application comes pre-installed on your Smart-Ex® 02. It is a versatile email solution from Google. You can access Gmail services through your Google account. While most of the basic functions are intuitive, the help and support section gives details about all the features and its usage.

Google Calendar™

The Google Calendar helps you to set appointments, schedule reminders and alerts and repeat them if required. You can also view your saved tasks on a daily, weekly, monthly and agenda basis.

When you first set up your phone and configure it to use a Google Account (such as Gmail), you can link your Google Calendar also. All the appointments and tasks stored in the Google Calendar will also be synced to your phone.

To access Google Calendar,

1. Tap **Calendar** icon () on **All Apps** screen.

2. To change the calendar view, choose Schedule, Day, 3 Day, Week, Month from the top of the screen in a drop-down list.
3. Select **Refresh** to update the calendar.

Alarm

You can set an alarm for a particular time.

1. Tap the **Clock** icon () located in the **All Apps** screen.
2. Tap the Alarm activation icon () on the top of the screen.
 - To set a simple alarm, tap **Add Alarm** () icon. Enter the time and tap Done.
 - To set a recurring alarm, enable the checkbox **Repeat**.
 - Its selects every day of the week.
 - Unselect the day in a week by tapping that particular day for which you don't want a reoccurring alarm.
 - Select the days for repeating the alarm.
 - To set the alarm tone, select the type of alarm from the Ringtone list. Tap the selected ringtone.



The alarm will work even when the phone is set in silent mode.

Clock

You can view the time of major cities in different time zones using Clock (). You also have the option to use Daylight Saving Time (DST).

The local time in the home city is displayed in the upper half of the screen.

Tap World clock icon () located at the bottom of the screen, to search for a city and view the local time there

Calculator

To access calculator, tap **Calculator** () located in **All Apps** screen.

- To enter the numbers, tap the numeric keys.
- To use mathematical operators, touch the respective operation keys on the keypad.
- Tap = for the final results.

The default calculator in this phone is designed to perform simple mathematical calculations.

Press **Options** () to

- **History:** Clear the previously inputted numbers
- **Send feedback:** Sends feedback about the calculator application to Google.

Voice Search

You can speak to your phone to search, get directions, send messages and perform other tasks.

To initiate the voice search, tap the **microphone** () icon in the Google search bar.

After you touch the **Microphone** icon () or say OK **Google**, Google listens as you speak and initiates the search or action you describe. If voice search does not understand you, it lists some suggestions. Select the one you want from the list.



Spoken answers are supported for English language only.

How to Enable VoLTE on my phone?

VoLTE services will work only if your service provider activates it. Please contact your service provider for VoLTE services activation. After activation of VoLTE services, enable Enhanced 4G LTE mode (**Settings > Mobile Network > Advanced > Enhanced 4G LTE Mode**). The 4G service selected by default, is enabled.

What is PTT call priority. How to enable and use PTT call priority?

PTT call priority allows you to prioritize the PTT call over normal voice/GSM call. Once enabled, an ongoing PTT call will not be interrupted by an incoming voice call. Please note that Application settings take precedence over device settings. To activate PTT call priority. Tap **Call Settings > Additional Settings**.

What is Pocket mode?

Pocket mode allows the you to avoid accidental screen touches or any operation when the phone is in your pocket. If activated, all screen touches are disabled, so the phone won't try to unlock itself or dial a number or call any number from your Contacts.

How can I activate Wi-Fi Calling (VoWiFi)?

With Wi-Fi Calling, you can dial or receive a phone call if you have a Wi-Fi connection in an area with little or no cellular coverage. Please ensure that this service is provided by your service provider.

To activate Wi-Fi calling (VoWiFi), tap Phone > Settings > Calling accounts > Operator name > Wifi calling.

How can I activate Video Calling (ViLTE)?

With Video Calling option, you can dial or receive a video calls over carrier network if device is connected to VoLTE cellular coverage. Please ensure that this service is provided by your service provider. To activate Video calling (ViLTE), tap **Calls Settings > Calling accounts > select SIM card > Turn on video calling and Settings > Network & Internet > Mobile Network > Advanced > Carrier video calling > Enable.**

How can I configure and use Speed dial?

Speed dialling helps you to associate each numeric key with one of the frequently used contacts or phone number. If the user long presses the numeric key, the associated contact/number will be dialled. However, numeric key '1' is associated with voice mail and speed dial cannot be associated. To activate speed dial, tap **Call Settings > Speed dial settings**.

How can I perform a system update ?

You can upgrade your device OS by checking updates in System update under Settings.

If there is any System update to be performed, your phone will communicate the server via Wi-Fi/Mobile data and upgrade the device OS. Wi-Fi is the preferred mode for download of update as mobile data incurs additional charges including roaming.

How can I use the flash light settings?

This setting helps you to restrict the accidental usage of flash light. To turn ON/OFF Flash, tap **Settings > System > Custom Feature**. Once turned OFF, the flash bulb will not be available for Camera flash and Torch.

License

This wireless device, (the “Device”) contains software owned by PEPPERL+FUCHS GmbH. (“PEPPERL+FUCHS”) and its third party suppliers and licensors (collectively, the “Software”). As user of this Device, PEPPERL+FUCHS grants you a non-exclusive, non-transferable, non-assignable license to use the software solely in conjunction with the Device on which it is installed and/or delivered with. Nothing herein shall be construed as a sale of the Software to a user of this Device.

You shall not reproduce, modify, distribute, reverse engineer, decompile, otherwise alter or use any other means to discover the source code of the Software or any component of the Software. For avoidance of doubt, you are at all times entitled to transfer all rights and obligations to the Software to a third party, solely together with the Device with which you received the Software, provided always that such third party agrees in writing to be bound by these rules.

You are granted this license for a term of the useful life of this Device. You can terminate this license by transferring all your rights to the Device on which you have received the Software to a third party in writing. If you fail to comply with any of the terms and conditions set out in this license, it will terminate with immediate effect PEPPERL+FUCHS and its third party suppliers and licensors are the sole and exclusive owner of and retain all rights, title and interest in and to the Software.

PEPPERL+FUCHS, and, to the extent that the Software contains material or code of a third party, such third party, shall be entitled third party beneficiaries of these terms. The laws of Delaware, United States shall govern the validity, construction and performance of this license.

Phone Care

Each ECOM Phone has a designated IP class for dust and water protection, according to the IEC Ingress Protection (IP) Standard 60529. This means that the phone is dust protected and can be submerged into 6.5 feet/2 m deep water for up to 30 minutes. Immersion in deeper water can damage it and must be avoided.

ECOM phones are built for heavy duty use. Its design protects against disassembly or mechanical damage when subjected to forces equal to free fall from the height of 6.5 feet/2 meters. Subjecting the phone to stronger impact and forces can damage it and must be avoided.

Warranty

Please observe the Quickstart guide provided in the Sales kit of this device for details about the warranty.

WARNING:

Changes or modifications made to this equipment not expressly approved by PEPPERL+FUCHS GmbH for compliance could void the user's authority to operate the equipment.

FCC Statement

- This Smart-Ex® 02 variant targeted for the North American region complies with part 15 of the FCC rules (**FCC ID: XAM500079GR01**). Operation is subject to the following two conditions:
 - This device may not cause harmful interference.
 - This device must accept any interference received, including interference that may cause undesired operation.
- This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



The country code selection is for non-US model only and is not available to all US model. Per FCC regulation, all Wi-Fi product marketed in US must fixed to US operation channels only.

IC Notice

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- this device may not cause interference, and
- this device must accept any interference, including interference that may cause undesired operation of the device.

This Class B digital apparatus complies with Canadian ICES-003 (IC: 8311A-500079GR01).

IC Radiation Exposure Statement

This EUT is in compliance with SAR for general population/uncontrolled exposure limits in IC RSS-102 and had been tested in accordance with the measurement methods and procedures specified in IEEE 1528 and IEC 62209. This equipment should be installed and operated with minimum distance of 10 cm between the radiator and your body. This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

The use of WLAN band is restricted to indoor use only.

Déclaration de la FCC

- Cette variante Smart-Ex 02 ciblée pour la région Amérique du Nord est conforme à la partie 15 des règles de la FCC (FCC ID: XAM500079GR01). Le fonctionnement est soumis aux deux conditions suivantes: L'appareil ne doit causer aucune interférence nuisible.
 - Cet appareil doit accepter toutes les interférences reçues, y compris les interférences pouvant causer un fonctionnement non désiré.
- L'appareil a été testé et déclaré conforme aux limites pour les appareils numériques de classe B, selon la section 15 des règlements de la FCC. Ces normes visent à fournir aux installations résidentielles une protection raisonnable contre les interférences nuisibles. Cet équipement génère, utilise et peut émettre de l'énergie radio électrique et, s'il n'est pas installé et utilisé conformément aux présentes instructions, peut causer des interférences nuisibles aux communications radiophoniques. Il n'existe toutefois aucune garantie que de telles interférences ne se produiront pas dans une installation particulière. Si cet appareil cause des interférences nuisibles à la réception des signaux de la radio ou de la télévision, ce qui peut être déterminé en éteignant et en allumant l'appareil, l'utilisateur est encouragé à essayer de corriger les interférences par une ou plusieurs des mesures suivantes: Réorienter ou repositionner l'antenne de réception.
 - Augmenter la distance entre l'équipement et le récepteur.
 - Branchez l'équipement à une prise sur un circuit différent de celui auquel le récepteur est branché.
 - Consulter le fournisseur ou un technicien radio/TV qualifié pour obtenir une assistance.



La sélection du code de pays est uniquement pour le modèle non US et n'est pas disponible pour tous les modèles US. Selon la réglementation de la FCC, tous les produits Wi-Fi commercialisés aux États-Unis doivent uniquement être connectés aux canaux d'exploitation américains seulement.

Remarque IC

Cet appareil est conforme aux Normes RSS d'Industry Canada. Son utilisation est soumise à deux conditions:

- Ce dispositif ne peut pas provoquer d'interférences, et
- Ce dispositif doit accepter toutes les interférences reçues, y compris les interférences susceptibles de provoquer un fonctionnement non souhaité.

Cet appareil de classe B est conforme à la norme canadienne ICES-003 (IC: 8311A-500079GR01).

Déclaration d'exposition IC

Cet EUT est conforme aux valeurs SAR à la norme SAR pour le grand public ainsi qu'aux limites d'exposition non réglementée IC RSS-102 et a été testé selon les méthodes et procédures spécifiées par les Normes IEEE 1528 et IEC 62209. Cet appareil devrait être installé et utilisé en respectant une distance minimale de 10 cm avec votre corps. Cet appareil et son (ses) antenne (s) ne doivent pas être situés à proximité l'un de l'autre et ne doivent pas fonctionner en même temps qu'une autre antenne ou qu'un autre émetteur.

L'utilisation de la bande WLAN est limitée à une utilisation en intérieur.

Radio Frequency (RF) Energy

This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the United States and Industry Canada.

During SAR testing, this device is set to transmit at its highest certified power level in all tested frequency bands, and placed in positions that simulate RF exposure in usage against the head with no separation, and near the body with the separation of 10 mm. Although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The exposure standard for wireless devices employing a unit of measurement is known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg and 1.6 W/kg by Industry Canada.

This device is in compliance with SAR for general population /uncontrolled exposure limits in ANSI/IEEE C95.1-1992 and Canada RSS 102 and had been tested in accordance with the measurement methods and procedures specified in IEEE1528 and Canada RSS 102. This device has been tested and meets the FCC and

IC RF exposure guidelines when tested with the device directly contacted to the body.

For this device, the highest reported SAR value for usage,

- By the head is 0.58 W/Kg (1 g)
- Worn on the body is 1.18 W/Kg (1 g)
- Used as hotspot is 1.18 W/Kg (1g).

While there may be differences between the SAR levels of various devices and at various positions, they all meet the government requirement.

SAR compliance for body-worn operation is based on a separation distance of 10 mm between the unit and the human body. Carry this device at least 10 mm away from your body to ensure RF exposure level compliant or lower to the reported level. To support body-worn operation, choose the belt clips or holsters that do not contain metallic components to maintain a separation of 10 mm between this device and your body.

RF exposure compliance with any body-worn accessory, which contains metal, was not tested and certified, and using such body-worn accessory should be avoided.

Énergie Radioélectrique

Cet appareil est conçu et fabriqué de façon à ne pas dépasser les limites d'émission pour l'exposition à l'énergie de radiofréquence (RF) fixées par la Federal Communications Commission des États-Unis et Industrie Canada.

Au cours des essais SAR, cet appareil est configuré pour transmettre des données à son niveau de puissance le plus élevé à toutes les bandes de fréquences testées et placées dans l'ensemble des positions simulant l'exposition aux radiofréquences contre la tête et près du corps, avec une séparation de 10 mm. Bien que le DAS soit déterminé par le niveau de puissance le plus élevé, le niveau SAR réel de l'appareil en fonctionnement peut être bien inférieur à la valeur maximale indiquée. Cela est dû au fait que l'appareil est conçu pour fonctionner à plusieurs niveaux d'alimentation, pour s'adapter aux capacités des différents réseaux électriques. De manière général, plus vous vous trouverez près d'une station sans fil, plus la fréquence de transmission sera basse.

La norme d'exposition pour les dispositifs sans fil employant une unité de mesure est connue sous le nom de taux d'absorption spécifique (SAR). La limite SAR fixée par la FCC est de 1.6 W / kg et de 1.6 W / kg par Industry Canada.

Cet appareil est conforme à la norme SAR pour le grand public ainsi qu'aux limites d'exposition non réglementées ANSI / IEEE C95.1-1992 et Canada RSS 102, et a été

testé conformément aux méthodes et procédures spécifiées par les Normes IEEE1528 et Canada RSS 102. Ce dispositif a été testé et respecte les directives FCC et IC sur l'exposition aux radiofréquences lorsqu'il est testé en contact direct avec le corps.

Pour cet appareil, la valeur SAR la plus élevée signalée pour l'utilisation,

- Par la tête est de 0.58 W / kg (1 g)
- Porté sur le corps: 1.18 W / kg (1 g)
- Utilisé comme point chaud: 1.18 W / kg (1 g).

Bien qu'il puisse exister des différences entre les niveaux de SAR selon les dispositifs et les emplacements où ils sont utilisés, tous répondent aux exigences Gouvernementales.

La valeur SAR déclarée conforme est une distance de 10 mm entre l'unité et le corps humain. Éloignez cet appareil à une distance d'au moins 10 mm de votre corps pour vous assurer que le niveau d'exposition aux RF est conforme ou inférieur au niveau indiqué. Vous pouvez également opter pour un étui ne contenant aucun composant métallique, pour maintenir une séparation de 10 mm entre cet appareil et votre corps.

Pour tout appareil contenant du métal, la conformité de l'exposition aux radiofréquences n'a pas encore été testée / certifiée de manière précise.

EU - Declaration of Conformity

Hereby, Pepperl+Fuchs GmbH declares that the radio equipment type Smart-Ex® 02 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following URL: www.ecom-ex.com.

The use of WLAN band is restricted to indoor use only.

This restriction will be applied in all EU member states.

AT	BE	BG	CH	CY	CZ	DE	DK	EE	ES	EL
FI	FR	HR	HU	IE	IS	IT	LI	LT	LU	LV
MT	NL	NO	PL	PT	RO	SE	SI	SK	TR	UK

A		Editing a Wi-Fi network	27
Adding a contact from phone screen	39	Forgetting a Wi-Fi network	27
Add new contact	36	WPS for router	27
Aeroplane mode	29	Contacts	
Alarm	47	Add	36
Android security	32	Send message	36
Answering a call	39	Credential certificates	33
B		D	
Backup data	34	Data backup and restore	34
Battery usage	11	Data syncing	35
Charging	11	Configuring an account	35
Improving battery life	12	Manual	35
Optimize power	12	Deleting a contact	38
Bluetooth devices	27	Deleting call history	40
Editing Bluetooth device settings	28	Deleting messages	44
Bluetooth tethering	29	Device details	25
C		Dialing a call	39
Calculator	47	From People	39
Call barring	41	Display caller ID	42
Calling from Contacts	36	Display icons	17
Call settings	40	Display settings	23
Call waiting	42	Wallpaper	20
Changing wallpaper	20	E	
Clock	47	ECOM Smart-Ex® 02	
Connecting to a Wi-Fi network		Box contents	13
Adding a new network	27	Switching On	16
		Editing contact details	36

F

Favorites tray	17
Fixed dial numbers (FDN)	41
Force stopping an application	24
Frequently called list	40

G

Gmail	46
Google account	16
Adding an account	34
Deleting an account	34
Syncing data	35
Google Search bar	18

H

Home screen	17
Indicators	19
Home screen icons/folders	
Adding to home screen	18
Creating Folder in home screen	18
Moving an icon/folder	18
Removing from home screen	18

K

Keypad	22
Back	22
Keypad functions	22

L

Language settings	
Personal dictionary	23
Spell checker	23
Location access	34

M

Managing memory utilized	
by applications	25
Media files and document download	46
MMS	43
Sending MMS message	43
Mobile network	30
Music player	47

O

Optimizing data usage	28
Optimizing memory usage	26
Optimizing power	24

P

People	36
Phone data encryption	32
Play store	46
Power Optimization	12
Power saving settings	24
Force stopping an application	24
Viewing battery life	24

Q		Viewing call history	39
Quick responses	40	Viewing contact details	36
R		Viewing contacts from phone screen	39
Restore data	34	Viewing device details	25
Ringtones	40	Voice Actions	48
S		Voice Search	47
Safety Guidelines for mobile usage	7	VPN connection	30
Screen lock	32	Connecting to a VPN network	30
Search bar	18	Deleting VPN network	30
Searching Contacts	38	Editing VPN network details	30
Security settings	32	W	
Sending SMS	43	Warranty	50
Sending SMS/MMS		Wi-Fi hotspot	29
From Contacts	36	WPS for router	27
Setting up your phone	16		
Sharing contact details	37		
SIM card	13		
Inserting SIM card	13		
SIM card lock	32		
SMS	43		
SMS settings	43		
System icons	18		
T			
Time and date settings	23		
V			

Copyright® 2019 Pepperl+Fuchs GmbH.

The contents of this document, either in part or in their entirety, may not be reproduced, forwarded, distributed or saved in any way without Pepperl+Fuchs GmbH prior written consent.

The contents of this document are presented as they currently exist. Pepperl+Fuchs GmbH does not provide any express or tacit guarantee for the correctness or completeness of the contents of this document, including, but not restricted to, the tacit guarantee of market suitability or fitness for a specific purpose unless applicable laws or court decisions make liability mandatory. Pepperl+Fuchs GmbH reserves the right to make changes to this document or to withdraw it any time without prior notice.