



gioteck
COME GET SOME

EX-03 BLUETOOTH® HEADSET FOR PS3™

EXCLUSIVELY DESIGNED FOR GAMING ON PS3™

thank you

Thank you for purchasing the EX-03 Bluetooth® Headset for PS3™ from Gioteck. We hope that this product will go beyond your expectations for a quality made accessory. Please read this booklet thoroughly before using the product and review the PS3™ manual for additional details regarding PS3™ operation. Thank you & enjoy!

CONTENTS

- 02 | Contents & Precautions
- 03 | Features & Details
- 04 | Pairing
- 06 | Setup
- 08 | Charging
- 09 | Operation
- 10 | Troubleshooting
- 11 | Legals

precautions

This product has been designed with the highest concern for safety. However, any electrical device, if used improperly, has the potential to cause harm. To help ensure risk-free operation please pay attention to the following guidelines.

- Use only as intended. This is a precision product, handle with care.
- Contains small parts. Not suitable for children under 3 years of age.
- Store in a dry & dust free area. Do not store in areas of extreme heat or cold, and avoid direct sunlight or heat sources eg. heaters.
- Do not allow the product to get wet or dirty; doing so may cause damage.
- Do not clean with benzene, paint thinner, acetone, alcohol, or other such solvents.
- Do not take the product apart; doing so will void your warranty and may cause electrical shock.

warnings



This symbol indicates important installation, operational or maintenance instructions. Always follow these instructions closely.

environment



Please help to conserve the environment by recycling the inner cardboard packaging of this product.

 


This headset should NOT be disposed of in normal household waste. It should be disposed of separately. Please take it to an electrical waste collection point.

features & details

When it comes to online game & chat, the EX-03 is a natural gaming partner. Comfortable, lightweight & ergonomic, the EX-03 features the latest Next Gen Chipset with built-in noise cancelling technology and superior enhanced voice clarity.

- 01 | Flexible Wired Earhook
- 02 | LED Feedback
- 03 | Volume Up
- 04 | Power Button
- 05 | Volume Down
- 06 | Microphone
- 07 | Earbud

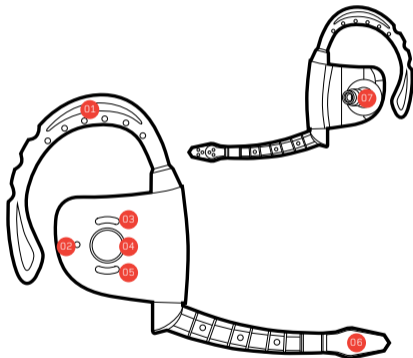

pairing your headset



1. Within the Settings' menu, press X on Accessory Settings.



2. Press X on the icon labelled: Manage Bluetooth® Device.



3. Press X on Yes to register your Bluetooth® Device.



4. At the next screen, prepare your headset (from off) to be paired by holding down the power button continuously until the LEDs flash alternate Blue & Red. When it is connected the LEDs will flash Blue every 2 seconds. If not connected, it will flash blue every 4 seconds.



5. Press X to Start Scanning. Once the scan is complete, the PS3™ will recognise all Bluetooth® wireless technology devices within range.



6. Locate PS3 EX-03 from the list of available devices and press X.



7. Press X, enter 0000 (four zeros) as the Pass Key & press X on OK.



8. You will be taken to a new screen stating: Register completed.



9. Press O twice on your controller to go back to Accessory Settings.



10. Scroll down and press X on Audio Device Settings.



 
11. Choose PS3 EX-03 as your input and output device from the lists. Press X to confirm your choices.



12. Scroll down and press X on OK. Your EX-03 Bluetooth® Headset is now ready to use.. Enjoy :)



set up

The EX-03 Bluetooth® headset is designed for maximum flexibility and comfort. You can mold the earhook to size and choose from 3 different earbuds for the perfect fit. Simply follow the instructions below for details.

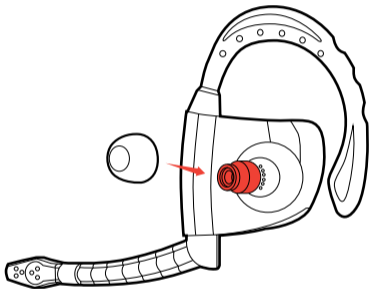

ear bud fitting

 
 
Take the size of ear bud that you want to use and place the ear bud on the back edge of the stalk (01). Apply pressure then roll the ear bud onto the stalk of the earpiece (02).

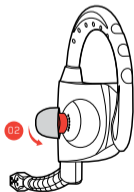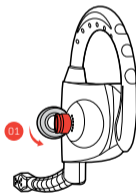

headset positioning

For a comfortable fit, hold the EX-03 body (01) and flex the earhook upwards (02) looping it around your ear (03). Once the earhook is in position, carefully place the speaker into your ear (04) and make any final adjustments so that the headset is firmly in position.

  Finally, maneuver the microphone arm into place where you feel it offers maximum voice clarity.

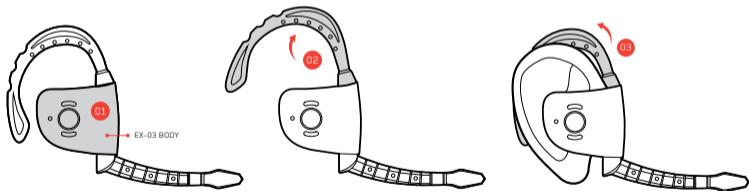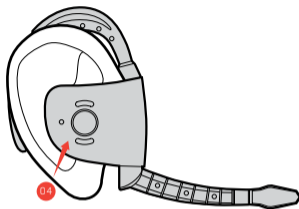

charging your headset

The headset contains a rechargeable Lithium-ion battery. Prior to using the headset for the first time, it is strongly recommended to fully charge the battery for 3 hours.

Connect the USB cable to your PS3™ (01) and insert the DC connector (02) into the headset (03). **The LED will illuminate red during the charging process and will be blue when fully charged.** NOTE: Charging indication will be delayed for a few minutes if the headset has not been used for a long time.

charging time

 
Normally the battery will be fully recharged within 3 hours. As soon as the battery is fully charged, the LED will be Blue.

game time

The fully charged battery offers up to 6 hours continuous use. It is advisable to always recharge after lengthy gameplay so the headset is fully charged for the next round.



Do not try to pair the headset to the console, when the headset is charging. If it is charging, it will not pair to the PS3™.

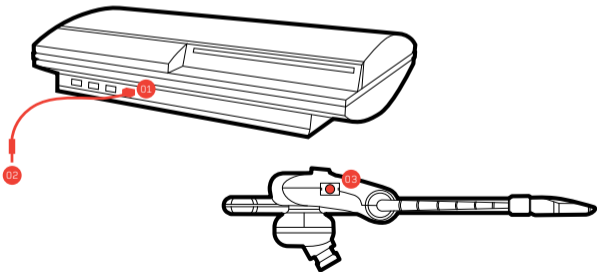

operating your headset

1. To power on your headset, press and hold the power button until the LED flashes Blue.

NOTE: If the LED flashes Red only, the battery will need to be charged. A low battery is also denoted by a low tone repeated every 20 seconds.

2. To power off your headset, press and hold the power button until the LED flashes Red.

adjusting volume

Tap the + button to increase the volume in increments until the headset reaches your desired volume level.

 
Tap the - button to decrease the volume in increments until the headset reaches your desired volume level.

muting

Press the power button briefly (less than 1 second) to mute the headset; repeat the process to un-mute. When in mute mode the LED will flash Red & Blue every 5 seconds.



If at any point the headset disconnects from the PS3™ press lightly on the power button to reconnect.

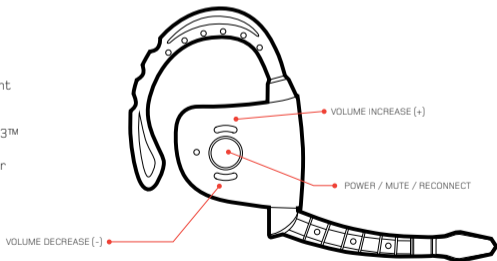

troubleshooting

Having trouble with your EX-03 Next Gen Bluetooth® Headset? These troubleshooting steps will show you the smoothest path to resolving your issue. Be sure to perform troubleshooting before returning your headset.

The PS3™ is unable find the headset.

- Make sure that your headset is in pairing mode (see page 4).
- If the headset has been paired with another Bluetooth® device before, the PS3™ will have trouble finding the headset. Either remove the headset from the paired device or turn off the Bluetooth® functionality on the paired device.
- Turn off / remove any other active wireless devices in the vicinity (eg. router, mouse, keyboard, DECT phones) to prevent signal interference.

The headset will not activate after being charged.

- To activate the headset, the battery needs to charge for at least 40 minutes. It is highly recommended to fully charge the battery for the full 3 hours before use.
- The headset will only charge when the PS3™ is switched on.

No indication of charging is shown.

- Charging indication may be delayed for a few minutes if the headset has not been used for a long time (more than a month) or if the battery is drained.

No sound can be heard from the headset.

- Make sure that your headset has been activated in Audio Device Settings and that your volume is set correctly (page 5).
- Make sure that the paired devices are within 33 Ft (10 metres) of each other.
- Make sure that the headset is turned on and fully charged.
- Check In-game settings.

I'd like to put the EX-03 on my left ear.

- Unfortunately this is not possible.

For further assistance please contact our customer support team on our website: www.gioteck.com

legals

This product complies with the following legal regulations. For further information go to www.gioteck.com

FC This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. The device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter. Gioteck are not responsible for any interference caused by unauthorized changes to this equipment.

CE Gioteck hereby declares that this headset is in compliance with the essential requirements and other provisions of Directive 1999/E/EC. To view the full version of the Declaration of Conformity please go online to doc.gioteck.com.

 N28707

FCC WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: The manufacturer is not responsible for any changes or modifications not expressly approved by the manufacturer for compliance, such modifications could void the user's authority to operate the equipment.