


GC2PS3-11 GC-2
GC-2 Wireless Controller
 operational Manual

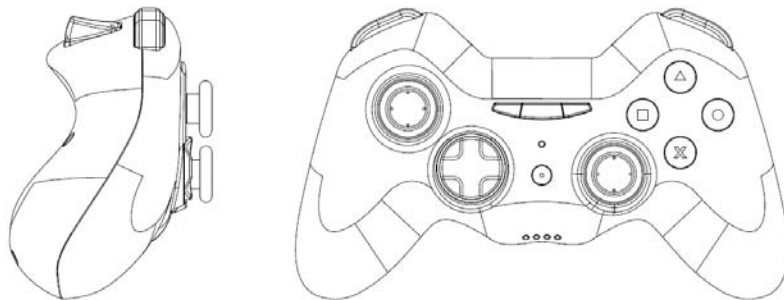

Feature :

- 8 functional buttons: O, X, △, □, L1, R1
- x Triggers L2, R2
- Select / Start Button
- Home Button
- Directional Pad
- 2 x Rumble Motors
- mini joystick buttons, L3, R3
- Mini USB Jack for USB mode and battery charging
- Powered by built-in Li-ion Battery
- Channel LED, Turbo LED
- Turbo feature
- Thumb stick sensitivity
- USB mode and BT(Bluetooth) mode
- In BT mode, it supports tablets with Android 3.2+ and complaint to the SIXAXIS Controller APK.
- In USB mode, it supports tablets with Android 3.2+ and complaint to the SIXAXIS Controller APK
- Connects to PC via USB cable and functions as a USB game controller

A) Connecting the GC2PS3 game pad

To connect the GC2PS3 game pad

1. Plug in the USB cable to GC2PS3 game pad mini USB port, then connect the USB Port #1 on the PS3 Console. This can be done with PS3 already be turned on.
2. Press the “Home” Button on the GC2PS3 game pad. The GC2PS3 will select the port automatically, and the corresponding LEDs light.

LED	PORT
1	1
2	2
3	3
4	4
1+4	5
2+4	6
3+4	7

3. Now, you can enjoy the game play with Gioteck wireless game pad in USB mode.
4. Unplug the USB cable, the GC2PS3 will automatically connect to PS3 console by BT mode, and the corresponding LEDs light.
5. The GC2PS3 game pad is properly set up for PS3 connection. Simply press the “Home” button once to link up to PS3 for all subsequent connection.

B) Turbo function

Buttons support turbo feature are O, △, □, X, L1, L2, R1, R2

All turbo buttons are synchronized

All turbo buttons are with the same speed of 8Hz.

To program a button with Turbo function, press [TURBO] and the [button] at the same time. LED flashes in 8Hz

Press again the [TURBO] and the [button] at the same time to cancel the turbo function. LED remains OFF.

Once power off, all buttons returns to default without Turbo function.

C) Thumb stick sensitivity

4 levels settings are available.

Level 1 is normal in 100%

Level 2 is with 75%, moves the thumb stick 1.5 times faster in speed

Level 3 is with 50%, moves the thumb stick 2 times faster in speed

Level 4 is with 25%, moves the thumb stick 4 times faster in speed

To set up the sensitivity, press and hold the [Turbo] button, flick the thumb stick left and right to toggle and advance to

the next faster speed settings. During the set up process, LED 1 lights up to indicate for level 1, LED 2 lights up to indicate for level 2, LED 3 to indicate for level 3, LED 4 lights up to indicate level 4

Flicks the left thumb stick to set up the left thumb stick sensitivity

Flicks the right thumb stick to set up the right thumb stick sensitivity

Once power off, all thumb sticks returns to default with 100% setting

D) Power Management System

The GC2PS3 game pad turns off if it is connected to the PS3 console and is not used for 10 minutes.

The GC2PS3 game pad automatically turns off if it is not connected to the PS3 console for 10 seconds.

To turn off the GC2PS3 game pad, press and hold Home button for 15 seconds to force it to turn off.

To turn on the GC2PS3 game pad, press Home button once. The GC2PS3 game pad turns on and the LED lights.

E) Low battery indication

When the built-in Li-ion battery in low power, the corresponding port LED flashes in 4Hz, and shuts down the motors, to remind user to recharge the battery.

F) Battery charging indication

When the GC2PS3 game pad is connected to PS3, the corresponding port LED flashes in 1Hz.

When charging is finished, the LED lights on.

When the GC2PS3 game pad is not connected to PS3, the 4 LEDs flash in 1Hz during charging.

The 4 LEDs will be turned off when the charging is finished.

When the GC2PS3 game pad is not connected to PS3 and is connected to a USB port with power only, the 4 LEDs remains turned off during charging and when charging is completed.

G) Troubleshooting

i) The game pad does not response when another Bluetooth headset is connected to PS3

Please make sure only the GC2PS3 Bluetooth game pad is linked to PS3.

ii) The game pad does not wake up when USB cable is connected

The USB port is for battery charging only. It does not wake up the game pad.

iii) In the BT mode, the USB cable does not improve the wireless interference problem

The USB cable is for battery charging. The wireless data communication with PS3 remains through the Bluetooth.

iv) The thumb stick sensitivity resets to normal during power up

The thumb stick sensitivity reset to default every time the controller is power up

v) The programmed button with turbo feature functions without turbo feature

All buttons programmed with turbo feature are reset to default without turbo during power up

vi) Cannot set up thumb stick sensitivity

To continue the thumb stick sensitivity set up, the [Turbo] button must be pressed and hold during the set up.

The set up process is terminated whenever the [Turbo] button is released.

vii) The Player ID LED indication is incorrect

The LED indicates the Player ID at all times except during the thumb stick sensitivity programming.

During the thumb stick sensitivity set up process, the LED indicates the different sensitivity level.

LED 1 represents normal in 100%. LED 2 represents 1.5 times faster, LED 3 represents 2 times faster, LED 4 represents 4 times faster.

Left and right thumb sticks sensitivity setting will be indicated through the 4 LEDs separately during the sensitivity set up process.

viii) The motors do not vibrate during game play.

Please check the LED indication. If it is flashing in 4Hz, then it is in low battery level and motor will not vibrate when battery is in low level

Warning:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device

et appareil est conforme aux norms CNR exemptes de licence d'Industrie Canada. Le fonctionnement est soumis aux deux conditions suivantes: (1) cet appareil ne doit pas provoquer d'interférences et (2) cet appareil doit accepter toute interférence, y compris celles susceptibles de provoquer un fonctionnement non souhaité de l'appareil.

Complies with the Canadian ICES-003 Class B specifications.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

This device complies with RSS 210 of Industry Canada. This Class B device meets all the requirements of the Canadian interference-causing equipment regulations.

Cet appareil numérique de la Classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.



Please help to conserve the environment by recycling the cardboard packaging of this product.



This product should NOT be disposed of in normal household waste. It should be disposed of separately. Please take it to an electrical waste collection point.